

OPERATOR MANUAL



**INTERNATIONAL TRACTORS LIMITED
HOSHIARPUR**

PART NO :—10027964AA

Publication No. : ITL/Nov./2007/5000

OWNERSHIP AND TRACTOR DETAILS

OWNER'S NAME & ADDRESS	----- ----- -----TEL.NO. -----
-----------------------------------	--------------------------------------

Model :	Delivery Date :
Chassis No. :	Bill No. / Date :
Engine No. :	Alternator Make / Sr. No. :
Battery Make / Sr. No. :	Starter Motor Make / Sr. No. :
FIP Sr. No. :	Hydraulic Pump Make / Sr. No. :

Tire	Make	Size	Sr. No.
Front (Left)			
Front (Right)			
Rear (Left)			
Rear (Right)			

I have under stood all the terms & conditions of the maintenance of the tractor, terms of warranty, systems, Scheduled services & understood operation of tractor in the field and other operations
 Received a new defect free tractor Chassis No. Engine No.
 & fully satisfied with the transaction.

OWNER SIGNATURE	DEALER STAMP & SIGNATURE
	PH. NO. DATE:

*** IMPORTANT INFORMATION TO CUSTOMER:** For any assistance with regard to our product, please contact our authorized dealer or authorized service center.

Note : Tractor Warranty Policy is on Page No. 59



PREFACE

Dear Customer, we welcome you with great pleasure in your joining the **SONALIKA** family and thank you for the faith and trust you have placed in the careful selection of your tractor.

Before using this tractor it is highly recommended to read this manual thoroughly. Any person who regularly or occasionally uses your tractor should be encouraged to read these instructions.

Daily and routine maintenance operations can be easily performed with the use of this manual. Our dealers would be pleased to assist you in the maintenance of your tractor and help economical operation.

Use only genuine Sonalika spare parts from dealers/stockist. The would fetch you a reliable and durable performance.

Information provided in this operator manual is accurate at the time of printing. Improvement and modifications is a continuous process at **International Tractor Limited (ITL)**, be reserve the right to modify at any time without prior notice.

You are the proud owner of the best product for your prosperity. In case of any help/support required please feel free to call our dealership or to the state service center with the tractor details like Engine number and Chassis number. We wish your prosperity and our growth.

Service Department

INTERNATIONAL TRACTORS LIMITED

Vill Chak Gujran, P.O. Piplanwala 146022

Jalandhar Road, Hoshiarpur, Punjab.

Phone: 01882-302-288 / 289 / 299, Fax: 01882 -302-547 / 555.

E-mail: services@sonalika.com

YOUR RIGHTS

While taking delivery of new “**Sonalika**” **Tractor**, kindly ask the dealer to give following items free of cost:

1. **Tool kit which includes**

- Grease gun 1pc
- Cutter plier 8” 1pc
- Screw driver 5” 1pc
- D-spanner 10 X 11 1pc
- D-spanner 12 X 13 1pc
- D-spanner 14 X 17 1pc
- D-spanner 18 X 19 1pc
- D-spanner 20 X 22 1pc
- D-spanner 30 X 32 1pc
- Ring spanner 16 X 17 1pc
- Ring spanner 24 X 27 1pc
- Battery Guarantee card 1pc
- Hydraulic Jack (Optional) 1 pc
- Rear Wheel Spanner Kit (Optional) 1 pc

2. **Farmer Kit**

- Diesel Filter(Primary) 3 pc
- Diesel Filter(Secondary) 3 pc
- Lub. Oil Filter 2 pc
- Fan Belt 1 pc
- Hose pipe 1 pc
- Cap Radiator 1 pc
- Cap Fuel Tank 1pc
- Linch Pin 3 pc
- Fuse Box 1 pc
- Tyre pressure gauge 1 pc

3. **To avail the services.**




4. **To call dealers any time for any breakdown.**



GUIDELINES ABOUT SAFETY SIGN



































Recognize Safety Information:

This is the safety alert symbol. Any of symbol on your machine or in this manual, alert you to the potential for personal injury. Follow recommended precautions and safe operating practices.

 <p>DANGER</p> <p>The symbol and the word DANGER indicates an immediate hazardous situation, which if not avoided, will result in DEATH OR VERY SERIOUS INJURY.</p>	<ol style="list-style-type: none"> 1. Protect your face from radiator under pressure when engine is hot. Remove cap which caution only when engine is cold. 2. Never allow children or unqualified persons to operate your tractor. Keep others away from your area of work.
 <p>WARNING</p> <p>The symbol and the word WARNING indicate a potentially hazardous situation. If the instructions or procedures are not correctly followed it could result in DEATH OR VERY SERIOUS INJURY.</p>	<ol style="list-style-type: none"> 1. Do not remove Danger, Warning, and Caution or instruction labels. 2. An operator should not use alcohol or drugs, which can change his alertness or co-ordination. 3. Never stand or allow anyone else to stand between the tractors and implement unless the engine is turned off and the parking brake is engaged, the transmission is in neutral, and all attachments or implements are lowered to the ground. 4. Never disengage the clutch or attempt to shift gear after you have started downhill. 5. An overload is always dangerous. Check the loading capacity of your tractor and never overload. 6. Never attempt to unplug the hydraulic connections, or adjust an implement with the engine running or the PTO drive in operation. To do so may result in serious injury or death.
 <p>CAUTION</p> <p>The symbol and the word CAUTION indicates a potentially hazardous situation, which if not avoided, may result in MINOR INJURY.</p>	<ol style="list-style-type: none"> 1. Do not get on or off a moving tractor. Keep a firm grip on the steering wheel at all the times. 2. Before getting off the tractor, always disengage the PTO, lower all attachments and implements to the ground, place the tractor in neutral, engage parking brake, shut off the engine and remove the key. 3. Do not smoke while refueling the tractor. Keep any type of open flame away.



ROAD SAFETY SIGN

 Right Hand Curve	 Left Hand Curve	 Right Hair Pin Bend	 Left Hand Pin Bend	 Narrow Bridge	 Pedestrian Crossing
 School Ahead	 Men at Work	 Cross Road	 Gap in Median	 Side Road Right	 Side Road Left
 Staggered Intersection	 No Parking		 No Stopping or Standing		 Staggered Intersection
 Major Road Ahead	 Major Road Ahead	 Right Reverse Bend	 Left Reverse Bend	 Narrow Road Ahead	 Road Widens Ahead
 Cattle	 Ferry	 One Way Signs Vehicles Prohibited in One Direction	 One Way Signs Vehicles Prohibited in One Direction	 Y-Intersection	 Y-Intersection
 Y-Intersection	 T-Intersection	 Straight Prohibited or No Entry	 Right Turn Prohibited	 Left Turn Prohibited	 U-turn Prohibited



CONTENTS

Sr. No.	DESCRIPTION	PAGE NO.
	IDENTIFICATION OF TRACTORS	13
1	INSTRUMENT PANEL AND ELECTRICAL CONTROLS AND SHEET METAL	14
	1.1. INSTRUMENT PANEL	14
	1.2. ELECTRICAL CONTROLS	20
	1.3. SHEET METAL	22
2	ELECTRICAL EQUIPMENTS	24
	2.1. BATTERY	24
	2.2. ALTERNATOR	24
	2.3. STARTER MOTOR	24
	2.4. GENERAL MAINTENANCE OF ELECTRICAL SYSTEM	24
3	ENGINE	25
	3.1. STARTING THE ENGINE	25
	3.2. STOPPING THE ENGINE	25
	3.3. GUIDELINES FOR TURBO CHARGED ENGINES	25
	3.4. RUNNING IN ENGINE	25
	3.5. FUEL SYSTEM	26
	3.6. ENGINE LUBRICATION SYSTEM	26
	3.7. GENERAL MAINTENANCE	26
	3.8. AIR CLEANER	28
	3.9. RADIATOR	30
4	CONTROLS	32
	4.1. HAND CONTROLS	32
	4.2. FOOT CONTROLS	36
	4.3. SEVEN PIN SOCKET	37
	4.4. SAFETY REFLECTOR	37
5	HYDRAULIC	38
	5.1. HYDRAULIC SYSTEM	38
	5.2. H Y D R A U L I C C O N T R O L O P E R A T I O N S	
38	5.3. THREE POINT LINKAGE	39
	5.4. GENERAL MAINTENANCE	40
6	WHEELS AND TYRES	42
	6.1. IN FIELD OPERATIONS	42
	6.2. IN ROAD OPERATIONS	43
	6.3. BALLASTING OF TRACTOR	43
	6.4. RECOMMENDED LOAD CARRYING CAPACITY PER TYRE W.R.T. ITS SIZE	45
	6.5. TRACK WIDTH ADJUSTMENT	45
	6.6. TYRE FILLING	48
	6.7. TYRE DRAINING	48
	6.8. TIPS FOR PROPER HANDLING AND DURABILITY OF TYRES	48
	6.9. GENERAL SUGGESTIONS	49
	6.10. CHECK WHEEL NUT BOLT	49



CONTENTS

7	FRONT AXLE 4 WD	50
	7.1 FRONT TYRE SIZE	50
	7.2 REDUCER OIL CAPACITY	50
	7.3 DIFFERENTIAL HOUSING OIL CAPACITY	50
	7.4 OIL TYPE	50
	7.5 WHEEL ALIGNMENT	50
	7.6 4X4 ENGAGING LEVER	50
	7.7 INDEPENDENT PTO CLUTCH OPERATING LEVER.	50
	7.8 ROTATING TRAILER HOOK	51
	7.9 SWINGINING DRAW BAR	51
	7.10 PNEUMATIC TRAILER BRAKE COUPLER (OPTIONAL)	
52		
	7.11 AIR COMPRESSOR (OPTIONAL)	52
	7.12 ROLL OVER PROTECTION (OPTIONAL)	52
8	OTHERS	53
	8.1 REGISTRATION PLATE	53
	8.2 RECOMMENDED SCHEDULE FOR MAINTENANCE SERVICE	54
	8.3 ELECTRICAL WIRING CIRCUIT DIAGRAM	56
	8.4 RECOMMENDED GRADE OF LUBRICANTS & GREASES	57
	8.5 GREASING POINTS ON TRACTOR	58
	8.6 WARRANTY	59
9	DO'S & DON'T'S	60
10	PRE DELIVERY INSPECTION (PDI) REPORT	63
11	TRACTOR INSTALLATION CERTIFICATE	75
12	FREE SERVICE COUPON	87
13	TROUBLE SHOOTING	95
14	USAGES OF TRACTOR WITH TRAILER & MATCHING IMPLEMENT DESIGN	98
	14.1 TRAILER MATCHING	98
	14.2 IMPLEMENT MATCHING	99
15	SERVICE RECORDS	100
16	NOTES	101
17	FEEDBACK CARD	103



IDENTIFICATION OF TRACTOR

1. In this manual many times written **front portion, rear portion, left side, right side**, understand these terms as per reference Fig-1.
2. While ordering spare parts always mention the chassis number of the tractor and engine. These numbers are punched on the data plate which is riveted on right hand side of the bell housing .By giving these numbers correctly you will get delivery of the right parts at right time. Refer Fig-2. for data plate.

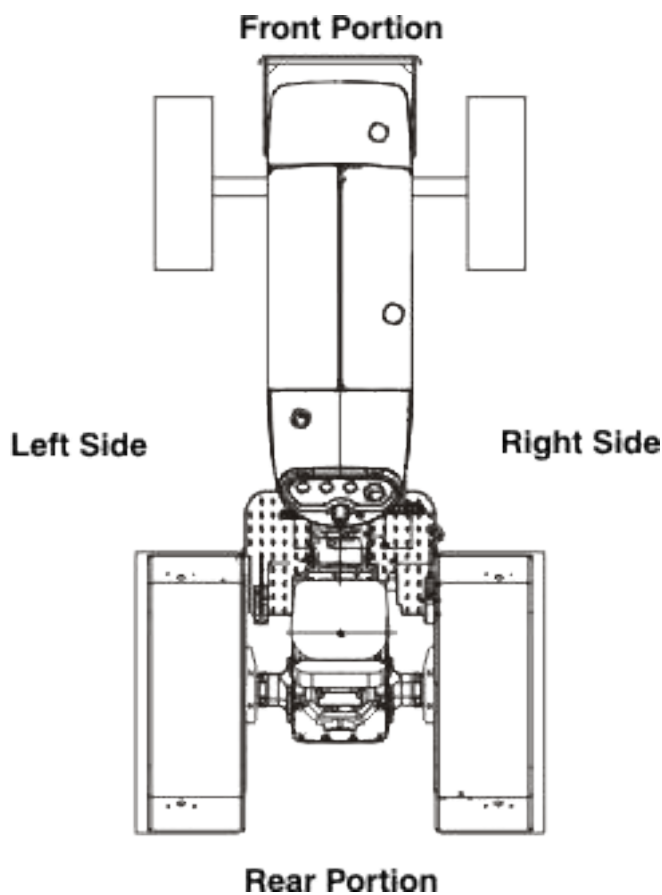


Fig-1



<i>Sonalika</i> INTERNATIONAL
MODEL..... YEAR.....
ENGINE NO.....
CHASIS NO.....
MAX. P.T.O POWER kW(hp).....(.....)
S.F.C g/kWh(g/hph).....(.....)
INTERNATIONAL TRACTORS LTD.
HOSHIARPUR, PUNJAB (INDIA)

Fig-2



1. INSTRUMENT PANEL, ELECTRICAL CONTROLS AND SHEET METAL

1.1 INSTRUMENT PANEL

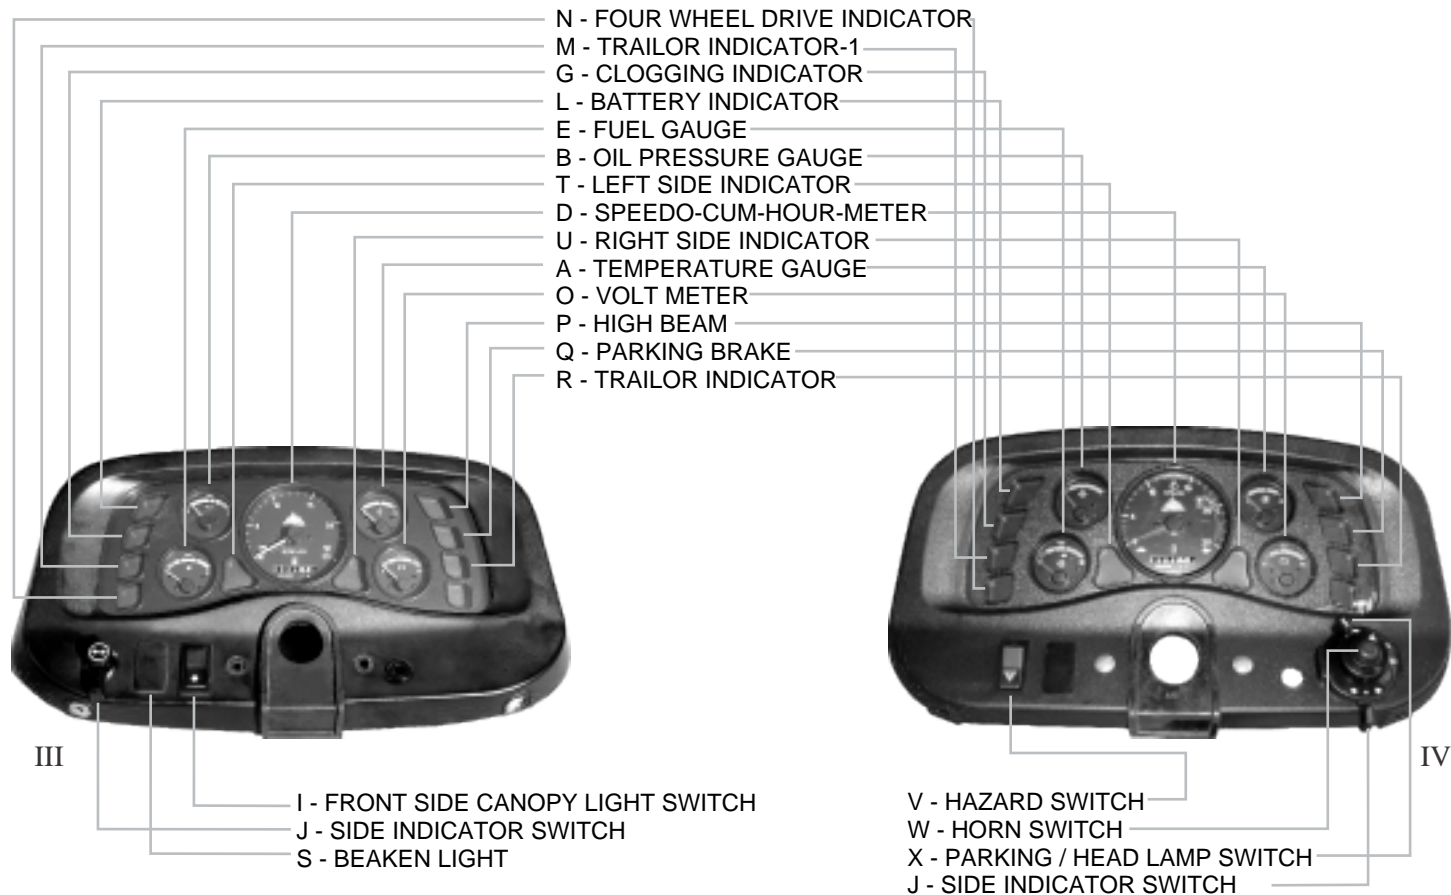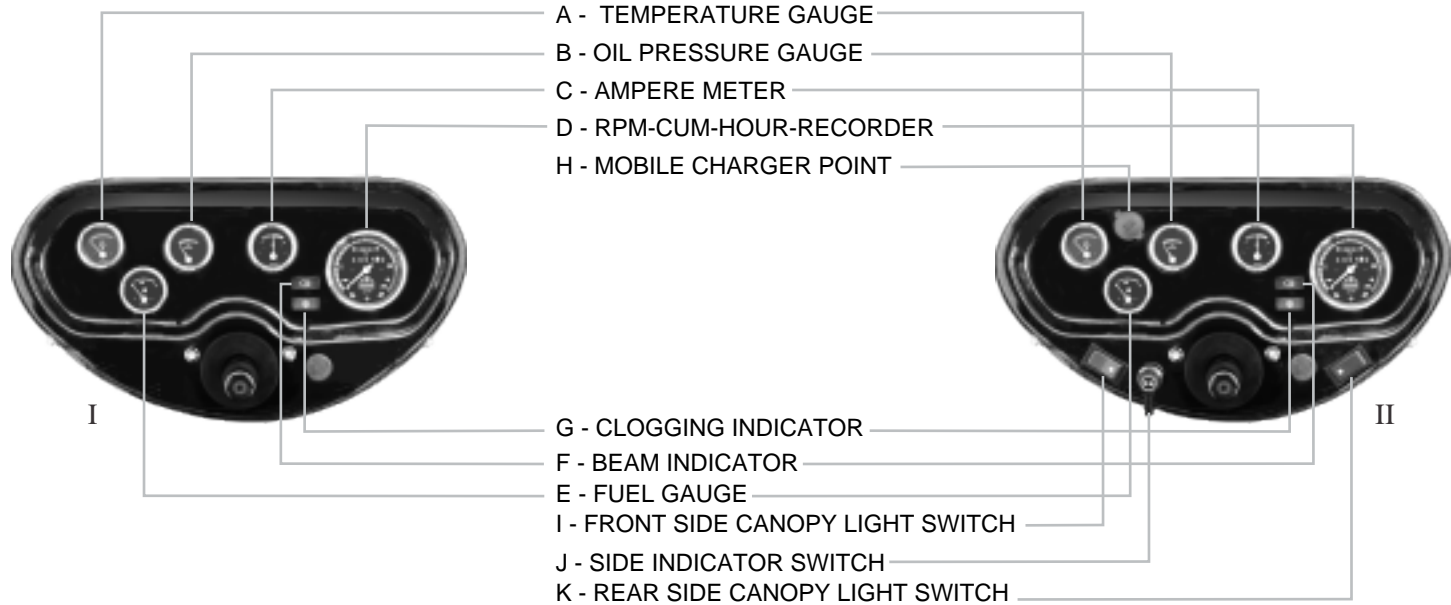



Operator Manual

A. TEMPERATURE GAUGE:

This gauge indicates temperature of engine coolant. GREEN zone indicates normal temperature and RED Zone indicates engine overheating. If the needle moves beyond normal range, towards RED zone, follow the procedure:

- I Drive safely to the side of road and stop your tractor.
- II Allow the engine to run idle.
- III If the temperature does not go down, shut it off and allow sufficient time for it to cool.
- IV Visually inspect the fan belt for looseness, breakage and all water hose connections for leak.
- V If the fan belt is OK and no coolant leak is noticed, check the coolant level.
- VI Add coolant if required.




Do not remove the radiator cap when the engine and radiator are hot. Boiling hot coolant and steam may blow out under pressure, which could cause serious injury. The cap should only be taken off when the coolant temperature has lowered. Necessary precaution to be taken while opening the radiator cap.

B. OIL PRESSURE GAUGE

This gauge indicates pressure of lubricating oil in the engine. If the needle enters in RED zone, stop the engine and follow the procedure

- I Stop your tractor to the side of road on leveled surface
- II Wait for sufficient time after stopping the engine.
- III Pull out the dipstick, wipe oil off with a clean cloth, insert & tighten the dipstick all the way into engine, and then remove it again. The oil on dipstick could be between the UPPER and LOWER limits.
- IV If the oil level is below the lower limit the top up then oil.
- V Start the engine, allow it to run idle and don't race it immediately.

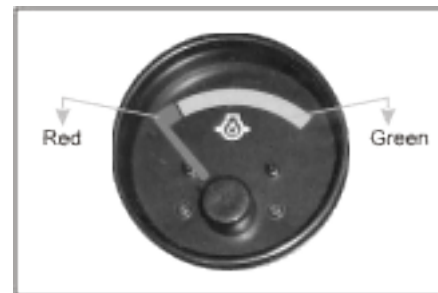

Do not operate the engine if there is no oil pressure indication.

C. AMPERE METER

Ampere meter indicates whether battery is charging or discharging. If the needle enters in RED zone, stop the engine and check the alternator drive belt. If the belt is not loose or broken, then charging system needs repair.

