

Replacing Fuses

The fuse box (1) is located behind the seat.



Remove cover.

IMPORTANT: Install fuse with correct amperage rating to prevent electrical system damage from overload.

Fuse (Blade-Type) Color Codes

Amperage Rating	Color
1	Black
3	Violet
4	Pink
5	Tan
7-1/2	Brown
10	Red
15	Light Blue
20	Yellow
25	Natural (white)
30	Light Green

- | | |
|---|---|
| 1— 5 Amp—Radio And Monitor Controller Backup | 11— 20 Amp—Work And Drive Lights (marked Lamp) |
| 2— 5 Amp—Pump And Valve Controller | 12— 10 Amp—Windshield Wiper And Washer |
| 3— Not Used | 13— 20 Amp—Air Con And Heater (marked Heater) |
| 4— 10 Amp—Solenoid | 14— 10 Amp—Horn |
| 5— 5 Amp—Switch Panel | 15— 5 Amp—Radio |
| 6— 5 Amp—Engine Control Unit (marked Pow. On) | 16— 10 Amp—Lighter |
| 7— 5 Amp—Air Conditioner And Heater (marked Aircon) | 17— 5 Amp—Dome Light (marked Room Lamp) |
| 8— 5 Amp—Optional | 18— 10 Amp—Aux |
| 9— 10 Amp—Optional | 19— 5 Amp—Propel Alarm |
| 10— 5 Amp—Optional | 20— 20 Amp—Start Aid (optional) (marked Glow Relay) |

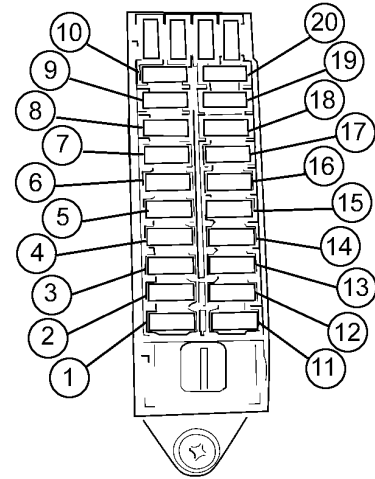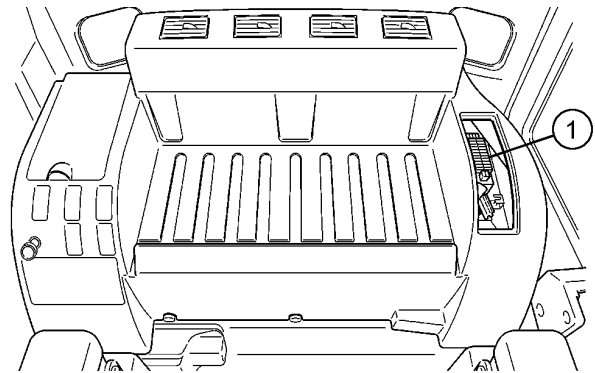

T140322 —UN—22MAR01

T140484 —UN—28MAR01

JH91824.00001F0 -19-02JUL08-1/1

Replacing Bucket Teeth

CAUTION: Guard against injury from flying pieces of metal; wear goggles or safety glasses.

IMPORTANT: Angle the drift toward the bucket to avoid damaging the rubber pin lock.

1. Use a hammer and drift to drive out locking pin.

NOTE: Alternate buckets may use different tooth assemblies.

2. Remove tooth.



Bucket Teeth

Continued on next page

04T.90.M16 -19-28MAR11-1/3

T95784 —UN—10NOV88