
VALTRA – VALMET MEGA MEZZO HI-TEC

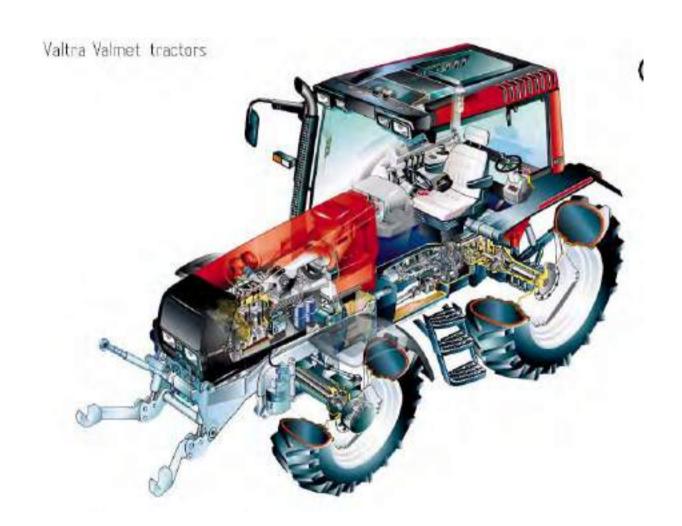

WORKSHOP MANUAL



6000, 6100, 6200 6250, 6300, 6350 6400, 6550, 6600 6650, 6800, 6850 6900, 8000, 8100 8200, 8400, 8050 8150, 8450, 8550 8750, 8950 6600E-8750E

Service Manual


Tractors

Groups 10-100

Valtra Inc. 44200 Suolahti, Finland



General

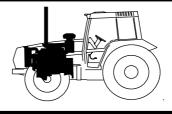


20 Engine




30 Electrical system




40 Power transmission

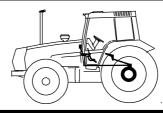


50 Brake system

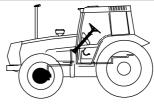


Steering system and Front axle

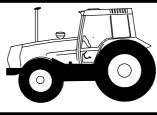

70 Frame and Wheels

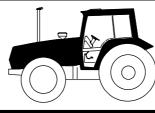

80 Cab and Shields

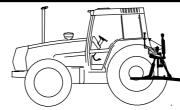

90 Hydraulics

https://tractormanualz.com/

1 Tools

10. General

11. Layout

12. Repairs

13. Maintenance



To the reader

The Service Manual for the Valmet tractors is intended to be a practical reference source to be used in workshop. The repair instructions in the manual are based on methods which have been worked out in practice during normal workshop conditions and which are based on the use of special tools from the manufacturer when stated in the instructions. The manual also contains descriptions of the design and function of the components.

Detailed maintenance instructions can be found in Operator's Manual.

The Service Manual will be continually updated with new revised pages which should be inserted in the manual. Alterations and additions will first appear as service bulletins.

Only genuine Valmet spare parts should be used to ensure the best possible function of the machine. Certain operations should be carried out with the aid of special tools designed by Valmet.

Valmet Tractors Inc. Tractor Service





	1.8-2900	Model	Code	Page
11. General	1. 9. 2002	6000-8950	110	0

The following supplements have been published for the Valmet 6000 - 8950 Service Manual:

Ordering number	Date	Notes
39 256 211	15. 6. 1992	
39 256 212	1. 9. 1992	
39 256 213	15. 5. 1993	
39 256 214	1. 1. 1994	
39 256 215	1. 1. 1995	
39 256 216	15. 4. 1995	
39 256 217	15. 5. 1996	
39 256 218	1. 4. 1997	
39 256 219	1. 8. 1998	
39 260 211	1. 11. 1998	
39 260 212	1. 6. 1999	
39 260 213	1. 10. 1999	
39 260 214	1. 8. 2000	
39 260 215	1. 9. 2002	

Supplement no. 39 256 211 (15. 6. 1992)

Includes:

- Autocontrol III
- air conditioning
- tractor 8000
- amendments

Supplement no. 39 256 212 (1. 9. 1992)

Includes:

- 20-series engines
- amendments

Supplement no. 39 256 213 (15. 5. 1993)

Includes:

- Delta Powershift
- tractor 8400
- amendments
- the latest fitting instructions of optional equipment

Supplement no. 39 256 214 (1. 1. 1994)

Includes:

- tractors 6000 and 8200
- Autocontrol II
- Autocontrol IV
- Sige-axle differential lock
- industrial front axle
- latest air conditioning
- amendments

Supplement no. 39 256 215 (1. 1. 1995)

Includes:

- amendments
- the latest fitting instructions of optional equipment

Supplement no. 39 256 216 (15. 4. 1995)

Includes:

- engine intake air system and cooling system, modifications
- Autocontrol 2.1
- Agrodata-instrument
- hydraulic type clutch release mechanism
- DPS, modifications

Supplement no. 39 256 217 (15. 5. 1996)

Includes:

- tractor 6800
- tractors 8050-8750
- amendments

Supplement no. 39 256 218 (1. 4. 1997)

Includes:

- tractors 6200 and 8000R
- front PTO
- CareTel

- Hi Shift
- amendments
- the latest fitting instructions of optional equipment

Supplement no. 39 256 219 (1. 8. 1998)

Includes:

- FieldMaster
- pressure air brakes for trailer (optional)
- latest fitting instructions for optional equipment
- amendments
- new folder, new index leaves (10 30 and 40 100) and new spine labels.

Supplement no. 39 260 211 (1. 11. 1998)

Includes:

- HiTech reverse shuttle
- Autocontrol V
- New 50-series models
- Front axle air suspension
- E-engines
- Amendments

Supplement no. 39 260 212 (1. 6. 1999)

Includes:

- Autocontrol 2.2
- amendments (e.g. for AC V)
- fitting instructions for optional equipment

Supplement no. 39 260 213 (1. 10. 1999)

Includes:

- Carraro 20.29 front axle
- amendments (e.g. version 42 of AC V)

Supplement no. 39 260 214 (1. 8. 2000)

Includes:

- HiTech gen. 2, AC-5.2
- front PTO on 6250H-6850Hi tractors
- modified lubricating oil pump for 6-cyl. engines
- new rear axle housing for transmissions 650/550
- amendments
- updated fitting instructions for optional equipment

Supplement no. 39 260 215 (1. 9. 2002)

Includes:

- transmission and final drives 700
- Agroline-instrument
- technical modifications





		Model	Code	Page
11. Layout	8. 11. 1990	6000-8750	110	1

Layout of Service Manual

1. Division into groups

The manual is divided into groups (10 – 100) which are based on the make – up of the tractor. The groups are listed on the first index leaf.


Example. 10. General

20. Engine, fuel and cooling systems

30. Electrical system40. Power transmission

a.s.o.

The number designation for each group is given in the top left box of the respective pages (and the first figure in the code designation)

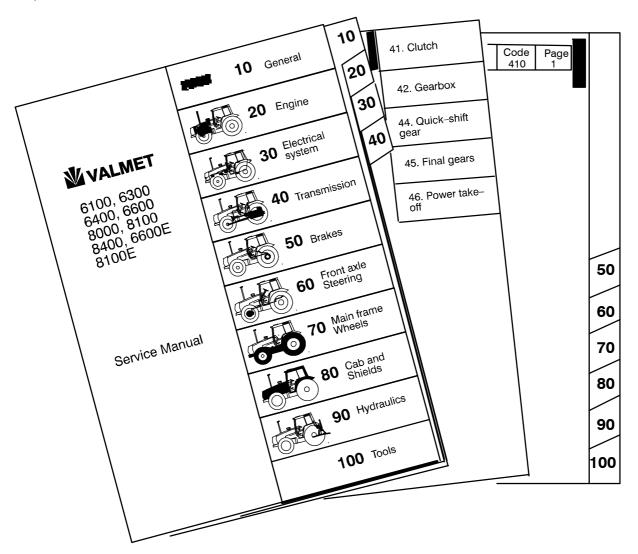

2. Division into components or sub-groups

Each group is further divided into components or sub-groups. The number and the name of each component is given in the top left box on each page (and comprise the two first figures in the code designation).

Example. 41. Clutch

- 42. Gearbox
- 44. Quick-shift gear
- 45. Final drives etc.

		Model	Code	Page
11. Layout	8. 11. 1990	6000-8750	110	2

3. Code designation

Three – digit code designations are used to distinguish the different document groups for the respective components. The same code is also used in the Time List as a reference to the text in this Manual. The code designation numbers appear both in the box at the top of the page and also in the headings.

Example: Code 410:


- Group: Power transmission (4)

- Component: Clutch (41)

- Document group: General (410)

4. Page numbers

The instructions for all components are numbered in consecutive order in the right-hand box at the top of the page. The page numbers begin with page 1 for each component.

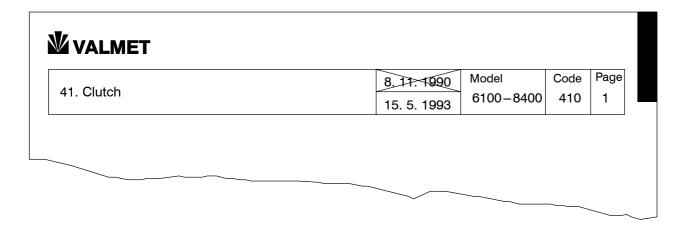

5. Date

At the top of each page there are two boxes for dates. In the case of a revised issue, the date of the earlier issue is printed in the crossed – over box and the date of the current issue is printed in the "real" date box.

6. Model

At the top of each page the tractor model for which the page is valid is indicated.

7. Additions and amendments of the service manual

New and up – dated pages will be continually added to the service manual. The new pages should be inserted as indicated by the code: the first digit (also the first digit on the index leaf) indicated the group:

- the two first digits indicate the component or sub-group
- the third digit indicates the document group for the respective components
- the page number indicates the definite position of the page within the service manual

If there are two pages with the same code and page number the page with the later date in the date box (and the old date in the crossed – over box) is valid (or the current page).

N.B. Fitting instructions for extra equipment are inserted into the service manual at the end of group concerned (E.g. code 39 is inserted at the end of group 30).

Code designation in the Service Manual

10. General

110 Layout

120 Repairs

130 Maintenance

20 Engine

21. Engine

210 Technical data, tools, description

211 Cylinder block and flywheel housing

212 Cylinder head and valve mechanism

213 Crank mechanism

214 Timing gears

215 Lubrication system and oil sump

216 Induction and exhaust system, turbocharger

219 Removing and fitting engine

22. Fuel system

220 Technical data, tools, description

222 Fuel feed pump and fuel filters

223 Injection pump and injectors

23. Cooling system

230 Technical data, tools, description

231 Thermostat and coolant pump

30. Electrical system

310 Specifications, wiring diagrams

311 Autocontrol II

312 Autocontrol 2.1

313 Sigma-power

320 AC power lift

321 ACD power lift

330 Agrodata

331 AD-instrument

340 Autocontrol-III

350 Autocontrol IV

360 CareTel

40. Power transmission

41. Clutch

410 Technical data, tools, description

411 Clutch assembly and pedal rods

412 Hydraulic coupling

42. Gearbox

420 Technical data, tools, description

421 Selector forks

422 Gear shift levers

423 Shafts and gear wheels

424 Differential

44. Quick-shift gear, DPS, reverse shuttle, 4WD clutch

440A Quick-shift gear, technical data, tools, description

440B Reverse shuttle, technical data, tools, description

440C 4WD clutch, technical data, tools, description

441 Quick-shift gear, repair instructions

442 Reverse shuttle, repair instructions

443 4WD clutch, repair instructions

444 DPS, repair instructions

45. Final drives

450 Technical data, tools, description

451 Final drives, repair instructions

46 Power take-off

460 Technical data, tools, description

461 Power take-off, repair instructions

463 Front PTO, repair instructions

	8. 17: 1990	Model Code		Page
11. Layout	1. 4. 1997	6000-8750	110	4

50. Brakes

510 Technical data, description 511. Service brakes

520 Parking brake

60. Steering system and front axle

61. Steering system

610 Technical data, tools, description

611 Steering valve

612 Priority valve

613 Steering cylinder

614 Adjustment

64. Powered front axle

640 Technical data, tools, description

641 Front axle housing and front axle suspension

643 Hubs

644 Differential

645 Industrial front axle

70 Frame and wheels

710 Tractor frame

720 Tyres and wheel discs

80 Cab and shields

810 Cab

820 Shields

830 Air conditioner

90 Hydraulics

910 Technical data, tools, description

911 Pump and pipes

912 Working hydraulics

913 Three-point linkage, towing hook

920 AC power lift

100. Special tools

101 Special tools (ETV)

102 Locally manufactured tools

Note! Separate fitting instructions for the optional equipments are inserted into the Service Manual. These instructions are positioned to the end of each main group. E.g. code 39 are placed to the end of group 30.



	Mod	del Code	Page
12. Repairs	8. 11. 1990	6000-8750 120	1

General instructions for repairs

Outer oil seals

The Service Manual contains instructions for changing all outer oil seals, (e.g. oil seals on the PTO shaft end, on the output shaft to the front wheel drive and on the pinion shaft on the powered front axle, and so on).

Sealing compound and glue

If sealing compounds or glue are required for the repair work, the instructions will specify a sealing compound or glue which is readily available through specialist dealers. Some seals should be greased before fitting and the space between the lips of the seal should be filled with universal grease. If the seal is to be pushed over splines or sharp edges the seal should be protected with for example a thin plastic foil.

Tightening torques and setting values

All necessary tightening torques and setting values for each repair operation are given at the beginning of each repair section under the heading Technical Data. The most important values can also be found in the repair instructions.

Table 1 later gives the tightening torques in order of dimension, quality and surface treatment. The values given in the table should be used if the tightening torque is not given in the repair instructions.

Safety

Always bear safety in mind when repairing or servicing the tractor. Use tools and lifting devices in the correct way. When you are removing tractor components or splitting the tractor, every tractor part must be supported in such a way, that no risk of accident exists. Avoid working under the supported tractor part if it is not absolutely necessary. When supporting the tractor the centre of gravity of the frame part must always be checked. For instance the wedges must always be fitted between front axle and engine to prevent axle oscillation when splitting the front frame of the tractor.

Trouble-shooting


The following procedure, combined with the information contained in the workshop manual will be helpful in tracing faults accurately. It consists of following a number of logical steps to locate and correct the problem:


- a) Determine the problem
- b) List possible causes
- c) Differentiate the causes
- d) Conduct checks in logical order to determine the exact cause
- e) Consider approximate remaining service life against cost of parts and labour...
- f) Make any necessary repairs.
- g) Recheck the parts and functions for correct operation

		Model	Code	Page
12. Repairs	8. 11. 1990	6000-8750	120	2


Handling of heavy components

Unless otherwise specified, all removals should be accomplished using adjustable lifting equipment. All supporting slings must be parallel to each other and as near vertical as possible in relation to the object being lifted. However, where slings are of a far greater capacity than the weight of the load to be fitted, a triangular lifting arrangement may be used.

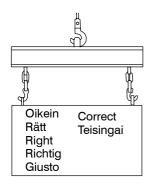

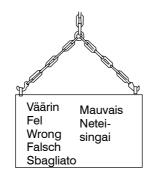

When removing a component at an angle, remember that the capacity of an eyebolt is reduced when the angle between the supporting members and the object becomes less than 90°.

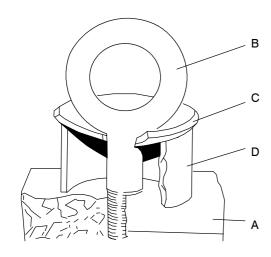

Forged eyebolt support

- A. Load
- B. Lifting shackle
- C. Shackle retaining plate (3 mm thick)
- D. Sleeve

When necessary the forged eyebolt can be supported in the way shown in figure above. Sleeve D may or may not be welded to plate.

Warning! If a part resists removal, check that all nuts and bolts have been removed and that there is no interference from adjacent parts.

Cleanliness

To ensure long life of a machine, it is important to keep dirt and foreign material out of its vital working components. Precautions must be taken to safeguard against this. Enclosed compartments, seals and filters have been provided to keep the supply of air, fuel and lubricant clean. These protective devices must not be removed.

Whenever hydraulic, fuel, lubricating oil or lines are disconnected, clean the point of disconnection and the surrounding area. As soon as a line has been disconnected, cap, plug or tape the line or opening to prevent the ingress of foreign material.

The same cleaning and covering precautions should be taken when access covers or inspection plates are removed.

Clean and inspect all parts. Make sure that all passages and holes are clear. Cover all parts to keep them clean. Make sure parts are clean when they are reassembled. Leave new parts in their wrapping until they are actually needed for reassembly

Assembly

When reassembling a machine, complete each step in sequence. never partially assemble one part then start to assemble another. Make all recommended adjustments. Always check the job on completion to ensure that nothing has been overlooked. Recheck the various adjustments before putting the machine back into service.

Note! Before fitting new parts, remove rust preventative compound from all machined surfaces (usually "peel-off substances).

Lubrication

Where applicable, fill the compartments of repaired or renewed components with the quantity, type and grade of clean lubricant recommended in the routine maintenance section of the Operator's Manual.

Shims

When shims are removed, tie them together and identify their location. Keep shims clean and take care not to bend them before refitting them.


Gaskets


Make sure that the holes in gaskets line up with lubricating oil passages in the mating parts. If gaskets have to be made, use material of the correct type and thickness. Make sure that holes are punched in the right places.

Incorrectly punched gaskets can cause serious damage.

Lip type rubber seals

Lubricate the lips of lip-type rubber seals with oil before fitment. Do not use grease on seals, except for grease seals.

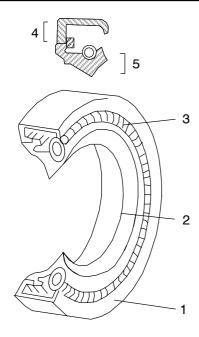

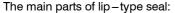


- 1. Case
- 2. Sealing element
- 3. Ring spring

The figure above shows the construction of a simple lip – type seal. The cross section shows the heel (4) and the toe (5), used to identify the sides of a single element seal. With a few exceptions, the toe of a single – lip is located on the lubricant side. Some seals have a second auxiliary lip which has no spring.


Cables and wires


When removing or disconnecting a group of cables or wires, label each one to ensure correct refitment.

Locking devices

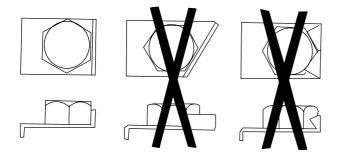

Correct and incorrect use of retainers

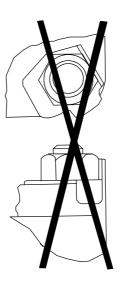

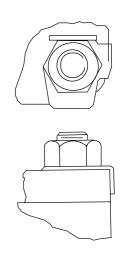

Correct and incorrect method of fitting and bending locking tabs.

Slackening of nuts and bolts is prevented by mechanical means such as lockwashers, tab washers and cotter pins, or by Loctite-type locking agents.

Flat retainers must be installed properly to be effective. Bend one end of the retainer against the edge of the part. Bend the other end against one of the nut or bolt head. Always fit new retainers in compartments which house moving parts. When fitting lockwashers on aluminium housings, place a flat washer between the lockwasher and the housing.

Note!

- 1) Never fit a lockwasher (Grower, fan, spring, etc.) under a nut or bolt to which a specified torque has to be applied.
- 2) Always thoroughly degrease components before applying Loctite type locking agents.

Bushes and press fits

Do not fit bushes with a hammer alone. Use a suitable fitting tool and a hammer or, better still, a press if possible..

When using a press, ensure that pressure is applied directly in line with the bore. If the ring has an oil hole, take care to align it with the oil hole in the mating part. When press fitting a part into another part, lubricate the mating surfaces. Tapered parts should be assembled dry. Before assembly, check that the tapers are dry and free from burrs.

Fitting bolts in blind holes

Use bolts of the correct length. A bolt which is too long may "bottom" before the head comes into contact with the part it is to hold: this will cause damage to the threads. If a bolt is too short, there may not be enough threads engaged to hold the part securely.

		Model	Code	Page
12. Repairs	8. 11. 1990	6000-8750	120	4

Table

Table 1. Tightening torques, metric standard thread (ISO)

	Tightening torques Nm ¹)									
Dim.	Quality,	surface trea	atment, mat	erial and s	o on					
	8.8 lubr.	tol.±	8.8 Zne ²)	tol±	8.8 Znk ³)	tol. ±	10.9 lubr.	tol. ±	12.9 lubr	tol. ±
M4	-		-		_		_		-	
M5	6,4	0,6	5,7	0,5	-		9	1	11	1
M6	11	1	10	1	12	1,2	15	1,5	18	2
M8	25	2	23	2	30	3	35	4	45	5
M10	50	5	45	5	60	5	70	7	90	10
M12	90	10	80	8	100	10	125	10	151	15
M14	140	15	125	10	160	15	200	20	240	20
M16	220	20	195	20	250	25	300	30	370	40
M18	300	30	270	30	350	35	430	40	510	50
M20	430	40	380	40	480	50	600	60	720	70
M22	570	60	500	50	650	65	800	80	970	100
M24	740	70	660	70	830	80	1030	100	1250	120
M27	1100	100	950	100	1200	120	1500	150	1800	180
M30	1500	150	1300	130	1600	160	2040	200	2500	250

If the bolts differs from the standard range the values in the table must not be used.

^{1) 1} Nm=0,102 kpm
2) Zne=zinc electroplating
3) Znk=hot galvanized

5

Conversion table for common units

Quantities and units	Conversion factors
Overall and detail dimensions millimetres (mm)	100 mm=3,94 inches 1 inch=25,4 mm
Short distances e.g. turning circles metres (m)	1 m=3,28 ft 1 ft=0,305 m
Travel distances kilometres	1 km=0,62 mile 1 mile=1,61 km
Tractor weights, axle loadings kilograms (kg)	1 kg=2,2 lbs 1 lb=0,454 kg
Travel speed kilometres per h (km/h)	1 km/h=0,62 mph 1 mph=1,61 km/h
Drawbar pull kilonewtons (kN)	1 kN=224,8 lbs 1 lb=4,448 N
Power (identified by such terms as crankshaft power, pto power, belt power, drawbar power, indicating the point at which the measurement was taken) kilowatts (kW)	1 kW=1,34 hp 1 hp=0,746 kW
Engine torque newton metres (Nm)	1 Nm=0,74 ft lb 1 ft lb=1,356 Nm
Fuel consumption by weight (kilograms per hr, kg/h) (by volume) litres per hr (l/h)	1 kg/h=2,2 lb/hr 1 lb=0,454 kg 1 l/h=0,22 gal/hr 1 gal=4,54 l
Fuel economy (specific fuel consumption) grams per kilowatt hr (g/kWh)	304 g/kWh=0,5 lb/hp hr
Engine displacement litres (I)	1 I=61,02 m cu in 100 cu in=1,639 I
Hydraulic pump pressure – mecapascal (MPa) delivery – millimetres per sec (ml/s)	1 MPa=145 psi 1000 psi=6,9 MPa 100 ml/s=1,32 gpm 1 gpm=75,77 ml/s
Tyre pressure-kilopascal (kPa)	100 kPa=14,5 psi 1 psi=6,9 kPa
Area acres – hectare	To convert multiply by 0,404686
Volume bushel-litre	To convert multiply by 39,3687
Quantity pound per acre-kilogram per hectare	Multiply by 1,12085
Volume superficial foot-cubic metre	Multiply by 0,002360





	1, 1, 1994	Model	Code	Page
13. Maintenance	15. 5. 1996	6000-8750	130	1

Maintenance Valmet 6000-8750

N.B. Detailed maintenance instructions, see Operator's Manual.

General

Correct maintenance at the right time is a basic condition for reliable operation of the tractor. Maintenance costs are small compared with any repair costs resulting from lack of maintenance. The most important measures are those which you carry out yourself and which include lubrication and various checks and adjustments.

The service intervals shown apply for normal operating conditions but in more severe conditions servicing should be carried out more frequently.

General instructions concerning oil checks and oil filling

- Always stop the engine before starting work
- Apply the parking brake to ensure the tractor cannot move. If the ground is uneven the wheels should be scotched
- Wash down the tractor first so that the work can be done more easily and quickly.
- Always observe the utmost cleanliness in all maintenance work. Thoroughly wipe off filler caps and plugs as well as surrounding parts of the tractor before filling up with fuel or oil.
- Inspect the oil and filters when changing. Large amounts of dirt (e.g. heavily clogged filters) can point to a fault which could cause extensive and costly repairs if not corrected in time.
- -When carrying out checks the tractor should stand on level ground
- Levels should be checked in the morning when the oil is cold and has had time to run down to the bottom of the unit concerned
- When changing the oil, bear in mind that the oil can be very hot when it drains from the tractor. Waste oil and oil filters should be handled carefully and disposed of properly
- After completion of the service work always replace all safety covers etc.

Greasing lubricating points fitted with grease nipples

- Always clean the grease nipples before applying the grease gun.
- Apply grease through the nipples until clean grease oozes out (unless otherwise instructed).
- Wipe away superfluous grease which has been pressed out at the lubricating point.
- Preferably carry out lubrication with bearing points and joints unloaded and with the bearings in different positions.


Lubrication and maintenance schedule

All intervals are counted from zero hours on the hour recorder. For example, 1000 hours service is carried out every 1000 (yearly), 2000 hours (every other year) etc. even if the guarantee service has been carried out.

Example: The 1000 hour service contains all items mentioned under 10 h/Daily, 50 h/once a week, 250 h, 500 h and 1000 h.

	15. 5. 19 96	Model	odel Code	
13. Maintenance	1. 4. 1997	6000-8750	130	2

Maintenance schedule

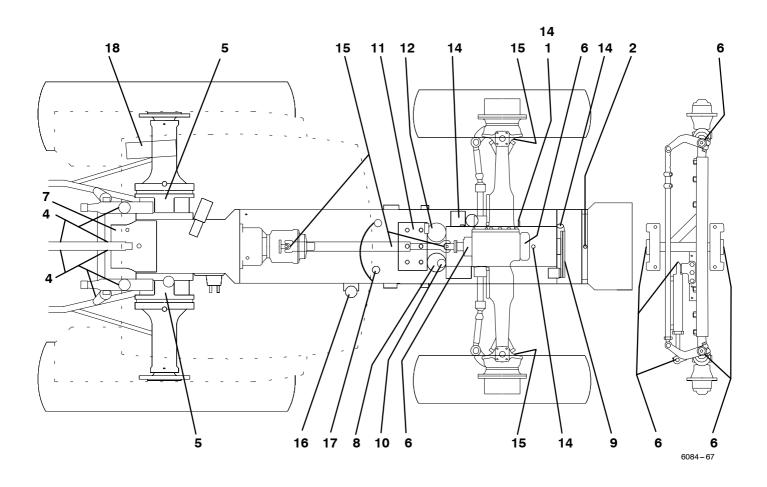

Daily/every 10 hours

- 1. Check engine oil level
- 2. Check coolant level and radiator fins
- 3. Check for leakage


Weekly/every 50 hours

- 4. Grease three-point linkage and towing hook
- 5. Grease brake mechanism (EP grease)
- 6. Grease front axle brackets (also nipples on steering system and on non-powered front axle)
- 7. Check oil level in transmission and hydraulics
- 8. Clean air filter cyclone (tractors with a horizontally fitted air filter and an ejector pipe; clean suction housing hole plate)
- 9. Check fan belt tightness
- 10.Check water trap (on 6-cylinder engines. On other models on the other side. On models 8200, 8400 and 8050-8750 also under both fuel filters)
- 11. Check electrolyte level in battery

Every 250 hours

- 12. Clean engine air filter
- 13. Grease door and window hinges and locks
- 14. Change engine oil and filter
- 15. Grease front axle joints (powered axle)
- 16. Change pressure filters. First change at 100 hours warranty service, then at 250 hours and after that at 500 hours and then at intervals of 500 running hours.
 - 17. Check brake fluid level (and clutch fluid level, 668103-)
 - 18. Clean cab ventilation air filter
 - 19. Check wheel nuts and bolts and tyre pressures

Page 3

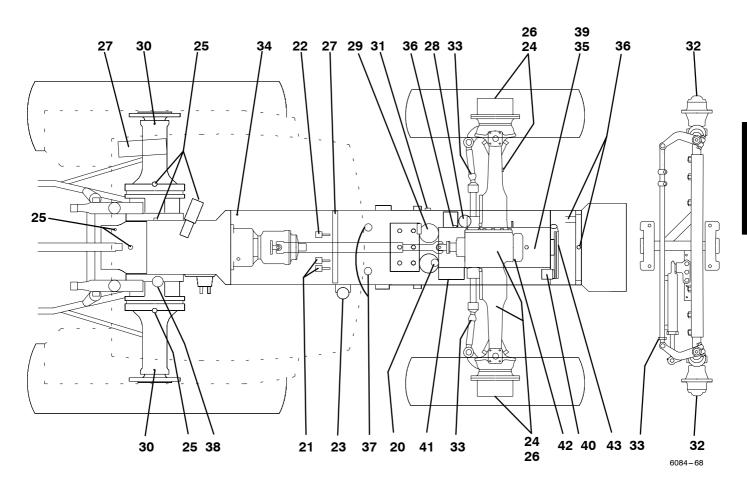

Every 500 hours

- Clean water trap (fuel system) (on 6-cylinder engines.
 On the other models on the other side. On models 8200, 8400 and 8050-8750 also under the fuel filters).
 Does not concern 6200 and 8000R tractors.
- 21. Check brake pedal free travel
- 22. Check clutch pedal free travel, -668102.
- 23. Change pressure filters (transmission and hydraulics)
- 24. Check oil level in front axle differential and hubs
- 24a. Calibrate first time gaspedal on HiTech models. Later at intervals of 1000 running hours.

Every 1000 hours/yearly

- Change oil in transmission/hydraulics and clean suction strainer
- 26. Change oil in front axle differential and hubs
- Change cab ventilation air filter and wash cab recirculation filter, if fitted.
- Change fuel filters. 6200, 8000R: change also the water trap filter
- 29. Change safety filter (in engine air filter)
- 30. Grease rear drive axle bearings
- 31. Grease flywheel ring gear
- 32. Check, grease and adjust front wheel bearings on non-powered front axle
- 33. Check/adjust front wheel toe-in
- 34. Clean fuel tank
- 35. Adjust valves
- 35a Calibrate gas pedal on HiTech models

Every 2000 hours/every other year

- 36. Change engine coolant
- 37. Change brake fluid (and clutch fluid, 668103-)
- 38. Change transmission housing breather
- 39. Check and clean injectors
- 40. Check alternator
- 41. Check starter motor

Every 4000 hours

- 42. Check function of turbocharger at authorized workshop (if fitted)
- 43. Change engine rubber vibration damber on 6-cyl. engines (not 8200 and 8450-8750)

	1 8: 2000	Model Code I				
13. Maintenance	1. 9. 2002	6000-8950	130	4		

Recommended fuel and lubricants (all capacities are incl. of filters)

Part of machine	SAE-grade	API-grade	Capacity (litres)
Engine: - 6100 (3-cyl.) - 6000, 6200-6650Hi, 6800-6850Hi (4-cyl.) - 6900, 8000, 8100, 8200, 8400, 8050-8950Hi (6-cyl.)	15W40 +40°C10°C 10W/30 +30°C20°C	CG-4 CH-4	10 13 19
Hydraulics/transmission	HT 60: -30°C+30°C HT 100: -10°C+40°C	GL-4 (G2-98)	34 (43 max/HiTech, 8050 –, J02316 –: 45 max) (extra max 50/HiTech, 8050 –, J02316 –: extra max 53). 6200 – 8950 *): min 45, max 55, extra max 65. 8950Hi **): min 45, max 55, extra max. 65.
Powered front axle: - differential, Dana / ind. Carraro			8/6
- hubs, Dana	80W/90	GL-5 (LS)	2x1
- hubs, ind. front axle Dana+Carraro			2x1,5
Fuel tank: - 6000 - 8000 Hi Trol, 6250Hi - 6650Hi HiTrol			158
- other models	diesel fuel		165
– extra fuel reservoir, metallic / plastic			+82 / +121
Cooling system: - 6100 (with larger radiator)			13,5 (17,5)
-6000, 6200-6600 (with openable front grille)			15,5 (17)
- 6250 Hi - 6650 Hi			17
-6800 / 6850 Hi	 water+anti-freeze agent ((standardi ASTM	22 / 22
-8000-8400 (with openable front grille)	D3306-86a tai BS 6580:1	•	24 (25)
- 8200, 8400, 8050, 8150 with expansion tank			28 (8400, model 2001: 30)
- 8050 Hi and 8150 Hi			28
– 8450, 8550 / 8450 Hi, 8550 Hi			25 / 27
- 8750 / 8950Hi			31 / 31
Brake fluid reservoir/Clutch fluid resesvoir	brake fluid SAE J1703		0,3 / 0,2
Window washer reservoir	washer fluid		3
Oils in front PTO units	see page 463/9.		

^{*)} Tractor frame numbers, see page 450/6.

Oil quality and capacity in fluid couplings (Hi-Trol)

Voith TD-VA coupling used up to serial no **658205** and **Voith TD-FVA1** from serial no **666066**. Engine oil SAE 10W/30 year around or automatic transmission fluid ATF which meets standards: GM type A Suffix A, GM Dexron II (e.g. Neste ATF-X):

	-658205	666066—
– 6000, 6100	_	7,20 litres
– 6200, 6300	7,4 litres	6200: 7,35 litres. 6300: 7,45 litres. 6250Hi: 7,40 litres. 6350Hi: 7,80 litres.
- 6400	7,6 litres	7,85 litres. 6550Hi: 7,90 litres.
- 6600	7,8 litres	7,90 litres. 6650Hi: 8,00 liter
- 6800, 8000R, 800	00	6800: 8,40 litres. 6900, 8000: 8,00 litres. 6850Hi: 8,00 litres.

Transfluid – coupling with effect from tractor serial no **658206** up to tractor serial no **666065**. Engine oil SAE 10W/30 year around or automatic transmission fluid ATF which meets standards: GM type A Suffix A, GM Dexron II (e.g. Neste ATF – X):

	658206 - 659408 *)	659409 – 666065
- 6100	5,2 l ´	6,4 l
- 6300	5,4 l	6,6 l
- 6400	5,6 l	6,8 I
– 6600, 8000	5,8 I	7,0 l

^{*)} Check the manufacturing date of the coupling. If it is 1292 or later, use larger filling quantities.

 
^{**)} Tractor frame numbers, see page 450/8.

20. Engine

21. Engine

22. Fuel system

23. Cooling system





	15 6: 19 92	Model	Code	Page
21. Engine	1. 9. 1992	6000-8750	210	1

Contents

Contonto
General (Op. no. 210):
Specifications3Special tools10Engine, description12
Repair instructions
Cylinder block and flywheel housing (Op. no. 211):
1. Cylinder block and cylinder liners:A. Measuring cylinder liner wear1B. Removing cylinder liners1C. Checking cylinder block1D. Changing camshaft bushing1E. Oversize bushings for camshaft2F. Fitting plug at rear end of camshaft3G. Fitting pipe for oil dipstick4H. Fitting cylinder liners4
2. Flywheel housing:A. Fitting flywheel housing6B. Changing crankshaft rear oil seal6C. Changing flywheel starter gear7D. Fitting flywheel7
Cylinder head and valve mechanism (Op. no. 212):
1. Cylinder head: A. Removing cylinder head 1 B. Removing valves 1 C. Checking cylinder head 1 D. Changing valve guides 2 E. Machining valve seat 2 F. Changing valve seat inserts 3 G. Grinding valves 3 H. Fitting valves 3 I. Fitting cylinder head 4
2.Valve mechanism:A. Reconditioning rocker arm mechanism5B. Changing camshaft/camshaft gear5C. Adjusting valve clearance6
Crank mechanism (Op. no. 213):
1. Crankshaft:A. Removing crankshaft1B. Checking crankshaft1C. Changing crankshaft gears1D. Changing crankshaft ring gear (420-engines)2E. Fitting crankshaft2
2. Connecting rods and pistons:A. Removing piston together with connecting rod3B. Changing connecting rod bearings3C. Checking connecting rod3

	15 6: 1992	Model	Code	Page
21. Engine	1. 9. 1992	6000-8750	210	2

D. Connecting rods, weight classes4E. Changing piston rings5F. Checking piston6G. Fitting piston pin6H. Fitting piston together with connecting rod6
3. Balancer unit, 420 – engines:A. Removing and dismantling balancer unit7B. Reconditioning balancer unit7C. Fitting balancer unit8
Engine timing gears (Op. no. 214) A. Removing timing gear casing 1 B. Reconditioning idler gear 1 C. Fitting timing gear casing 2
Lubrication system and oil sump (Op. no. 215):
A. Reconditioning oil relief valve for lubrication oil pressure 1 B. Removing and dismantling lubricating oil pump 1 C. Assembling and fitting lubricating oil pump 2 D. Fitting oil sump gasket 2 E. Lubricating oil quality requirements 3
Inlet and exhaust system, turbocharger (Op. no. 216):
A. Checking air filter1B. Checking inlet and exhaust system1C. Checking turbocharger1D. Reconditioning turbocharger3E. Fitting turbocharger5
Working orders (Op. no. 219)

1.8.2900	Model	Code	Page
1. 9. 2002	60006800	210	3

Specifications

Engine designations

Trootor

21. Engine

1. Basic markings: **320**, **420**, **620** and **634**. The first digit indicates the number of cylinders and the two last digits the stroke (-20=120 mm, -34=134 mm).

6200

SOEN LI

2. Letters after the basic markings:

− D=diesel engine− R=distributor pump (Stanadyne)

− S=turbocharger (Schwitzer)− I=intercooler

6100

- **W**=by-pass turbocharger, <u>Delta turbo</u> (Schwitzer S1BG or S2BG) - **E**=low emission engines (E−engines)

- **B**=Bosch P in−line pump - **C**=emission tested engines (certificated).

6200

Note! R24, E77 and EPA-homologations has been made for E-engines.

6000

Tractor	6000	6100	6200 (-K41123)	6200 (K41124-)	6250 Hi	6300	6300 (K41309 – – L23437)
Designation Turbocharger No of cylinders Displacement (litres) Cyl. bore (mm) Stroke (mm)	420D	320 DS	420DSRE	420DSRE	420DSRE	420 DS	420DS
	no	yes	yes	yes	yes	yes	yes
	4	3	4	4	4	4	4
	4,4	3,3	4,4	4,4	4,4	4,4	4,4
	108	108	108	108	108	108	108
	120	120	120	120	120	120	120
Compr. ratio Output (kW/r/min DIN) Torque (Nm/r/min DIN) Moment rise % Low idling (r/min)	16,5:1	16,5:1	16,5:1	16,5:1	16,5:1	16,5:1	16,5:1
	55/2300	58/2300	59/2225	59/2200	59/2200	62,5/2225	66/2200
	290/1450	310/1550	320/1400	360/1400	360/1400	330/1550	360/1400
	27	28,5	27	41	41	23	25
	750	800	750	750	850	750	750
Compr. press ¹) (bar)	24	24	24	24	24	24	24
Max. no-load revs (r/min)	2500	2500	2425	2400	2400	2425	2400
Tractor	6300 (L23438-)	6350 Hi	6400	6400 (J17109-)	6400 (K41106-) (Delta)	6400 (L23506-) (Delta)	
Designation Turbocharger No of cylinders	420DSRE yes 4	420DSRE yes 4	420 DS yes 4	420 DW yes 4	420DW yes 4	420DWRE yes 4	
Displacement (litres) Cyl. bore (mm) Stroke (mm) Compr. ratio	4,4 108 120 16,5:1	4,4 108 120 16,5:1	4,4 108 120 16,5:1	4,4 108 120 16,5:1	4,4 108 120 16,5:1	4,4 108 120 16,5:1	
Output (kW/r/min DIN) Torque (Nm/r/min DIN) Moment rise % Low idling (r/min)	66/2200 400/1400 39 750	66/2200 400/1400 39 850	70/2225 365/1550 22 750	70/2225 390/1550 31 750	73,5/2200 415/1400 30 750	73,5/2200 430/1400 35 750	
Compr. press ¹) (bar)	24	24	24	24	24	24	
Max. no-load revs (r/min)	2400	2400	2425	2425	2400	2400	
Tractor	6550 Hi	6600	6600E	6650 Hi	6750Hi*)	6800	6800E
Designation Turbocharger No of cylinders Displacement (litres) Cyl. bore (mm) Stroke (mm) Compr. ratio Output (kW/r/min DIN) Torque (Nm/r/min DIN) Moment rise % Low idling (r/min) Compr. press 1) (bar)	420DWRE	420 DS	420 DS	420DWRE	420DWRIE	420 DWI	420DWI
	yes	yes	yes	yes	yes (+interc)	yes (+interc)	yes (+interc)
	4	4	4	4	4	4	4
	4,4	4,4	4,4	4,4	4.4	4,4	4,4
	108	108	108	108	108	108	108
	120	120	120	120	120	120	120
	16,5:1	16,5:1	16,5:1	16,5:1	16,5:1	16,5:1	16,5:1
	73,5/2200	77/2225	77/2225	81/2200	77/1800	85/2225	85/2225
	430/1400	405/1550	405/1550	460/1400	530/1150	440/1550	440/1550
	35	22	22	31	29	21	21
	850	850	850	850	800	850	850
	24	24	24	24	24	24	24
Torque (Nm/r/min DIN)	430/1400	405/1550	405/1550	460/1400	530/1150	440/1550	44
Moment rise %	35	22	22	31	29	21	21
Low idling (r/min)	850	850	850	850	800	850	85

¹⁾ Minimum value at operating temperature and starting revs. Max permitted difference between cylinders 3,0 bar.

^{*)} Low revs engine.

 $[\]mathbf{E} = \mathsf{AC} - \mathsf{4}$, Control system for tractor.

Hi = HiTech.

21 Engino	1.8.2000	Model	Code	Page
21. Engine	1. 9. 2002	6800-8400	210	3A

Specifications

Tractor	6800	6850 Hi	6900	8000	8050	8050	
	(L23517-)				(-L23317)	(L23318-)	
Designation	420 DWRIE	420 DWRIE	620 DRE	620 D	620 DSR	620DSRE	
Turbocharger	yes (+interc)	yes (+interc)	no	no	yes	yes	
No of cylinders	4	4	6	6	6	6	
Displacement (litres)	4,4	4,4	6,6	6,6	6,6	6,6	
Cyl. bore (mm)	108	108	108	108	108	108	
Stroke (mm)	120	120	120	120	120	120	
Compr. ratio	16,5:1	16,5:1	16,5:1	16,5:1	16,5:1	16,5:1	
Output (kW/r/min DIN)	88/2200	88/2200	75/2225	73,5/2225	81/2200	81/2200	
Torque (Nm/r/min DIN)	490/1400	490/1400	390/1400	380/1550	490/1300	490/1400	
Moment rise %	28	28	21	20	39	21	
Low idling (r/min)	850	850	750	750	750	850	
Compr. press 1) (bar)	24	24	24	24	24	24	
Max. no-load revs (r/min)	2400	2400	2425	2425	2400	2425	
Tractor	8050 Hi	8100	8100E	8150	8150E	8150	8150 Hi
				(-L24138)		(L24139-)	
Designation	620DSRE	620 D	620 D	620 DSR [´]	620 DSR	620DSRÉ	620DSRE
Turbocharger	yes	no	no	yes	yes	yes	yes
No of cylinders	6	6	6	6	6	6	6
Displacement (litres)	6,6	6,6	6,6	6,6	6,6	6,6	6,6
Cyl. bore (mm)	108	108	108	108	108	108	108
Stroke (mm)	120	120	120	120	120	120	120
Compr. ratio	16,5:1	16,5:1	16,5:1	16,5:1	16,5:1	16,5:1	16,5:1
Output (kW/r/min DIN)	81/2200	88/2225	88/2225	92/2200	92/2200	92/2200	92/2200
Torque (Nm/r/min DIN)	490/1400	455/1550	455/1550	540/1300	540/1300	540/1400	540/1400
Moment rise %	39	21	21	35	35	35	35
Low idling (r/min)	750	750	750	750	750	750	750
Compr. press 1) (bar)	24	24	24	24	24	24	24
Max. no-load revs (r/min)	2400	2425	2425	2400	2400	2400	2400
Tractor	8200	8200E	8350Hi*)	8400	8400E	8400	8400
Паскої	0200	0200L	0000111)	(-K34331)	0400L	(K32135 – – L33320)	(L23130-)
Designation	634 D	634 D	620DSRIE	620 DS	620 DS	620 DS	620 DSIE
Turbocharger	no	no	yes (+interc)	yes	yes	yes	yes (+interc)
No of cylinders	6	6	6	6	6	6	6
Displacement (litres)	7,4	7,4	6,6	6,6	6,6	6,6	6,6
Cyl. bore (mm)	108	108	108	108	108	108	108
Stroke (mm)	134	134	120	120	120	120	120
Compr. ratio	16,5:1	16,5:1	16,5:1	16,5:1	16,5:1	16,5:1	16,5:1
Output (kW/r/min DIN)	95,5/2225	95,5/2225	99/1800	103/2200	103/2200	110/2200	118/2200
Torque (Nm/r/min DIN)	490/1550	490/1550	650/1100	520/1550	520/1550	625/1400	650/1400
Moment rise %	20	20	23	16	16	30	27
Low idling (r/min)	750	750	800	750	750	750	750
Camana maraa 1\ (ban)	0.4	0.4	0.4	0.4	0.4	0.4	0.4

 ¹⁾ Minimum value at operating temperature and starting revs. Max permitted difference between cylinders 3,0 bar.
 *) Low revs engine.
 E = AC-4, Control system for tractor.

Compr. press 1) (bar)

Max. no-load revs (r/min)

Hi = HiTech.

21 Engine	1.8.2000	Model	Code	Page
21. Engine	1. 9. 2002	8450-8950	210	3B

Specifications

Tractor	8450 (-L24134)	8450E	8450 (L24135-)	8450 Hi	8550 (-L24115)	8550E	8550 (L24116-)
Designation	620 DWŔ	620 DWR	620 DWŔE	620DWRE	634 DSR	634 DSR	634DSRÉ
Turbocharger	yes	yes	yes	yes	yes	yes	yes
No of cylinders	6	6	6	6	6	6	6
Displacement (litres)	6,6	6,6	6,6	6,6	7,4	7,4	7,4
Cyl. bore (mm)	108	108	108	108	108	108	108
Stroke (mm)	120	120	120	120	134	134	134
Compr. ratio	16,5:1	16,5:1	16,5:1	16,5:1	16,5:1	16,5:1	16,5:1
Output (kW/r/min DIN)	103/2200	103/2200	103/2200	103/2200	118/2200	118/2200	118/2200
Torque (Nm/r/min DIN)	580/1450	580/1450	615/1400	615/1400	650/1450	650/1450	650/1400
Moment rise %	30	30	38	38	27	27	27
Low idling (r/min)	750	750	750	750	750	750	750
Compr. press 1) (bar)	24	24	24	24	24	24	24
Max. no-load revs (r/min)	2400	2400	2400	2400	2400	2400	2400

Tractor	8550 Hi	8750 (–J32215)	8750E	8950 Hi
Designation	634DSRE	634 DS	634 DS	634 DSBIE
Turbocharger	yes	yes	yes	yes (+interc)
No of cylinders	6	6	6	6
Displacement (litres)	7,4	7,4	7,4	7,4
Cyl. bore (mm)	108	108	108	108
Stroke (mm)	134	134	134	134
Compr. ratio	16,5:1	16,5:1	16,5:1	16,5:1
Output (kW/r/min DIN)	118/2200	118/140/2200	118/140/2200	118/147/2200
Torque (Nm/r/min DIN)	650/1400	650/1450	650/1450	650/820/1400
Moment rise %	27	27	27	27/28
Low idling (r/min)	750	750	750	750
Compr. press 1) (bar)	24	24	24	24
Max. no-load revs (r/min)	2400	2400	2400	2400

¹⁾ Minimum value at operating temperature and starting revs. Max permitted difference between cylinders 3,0 bar. E = AC-4, Control system for tractor.

Hi = HiTech.

Valves, rockers and tappets With a valve clearance of 1.0 mm

With a valve clearance of 1,0 mm:	
- inlet valve opens	0°±2° B.T.D.C
- inlet valve closes	
- exhaust valve opens	39° ±2° B.B.D.C
- exhaust valve closes	
Valve clearance cold and hot:	
- inlet valve	0,35 mm
- exhaust valve	
Angle of valve seat in cylinder head:	
- inlet valve	35°+20'
exhaust valve	45°+20'
Width of valve seat in cylinder head:	
- inlet valve	
- exhaust valve	1,32,3 mm
Angle of valve face:	•
- inlet valve	_
- exhaust valve	45° – 20'
Outside diameter of valve head:	
- inlet valve	
- exhaust valve	41 mm
Max valve movement:	
- inlet valve	
- exhaust valve	
Inlet valve stem diameter	, ,
Exhaust valve stem diameter	
Inlet valve stem clearance	, ,
- Reject limit	
Exhaust valve stem clearance	, ,
- Reject limit	U,35 MM

	1. 1. 1994 Model Cod		Code	Page
21. Engine	1. 8. 1998	6000-8750	210	4

Inside diameter of valve guide before fitting Outside diameter of valve guide	16,02816,039 mm 16,00016,018 mm
Protrusion of valve guide top above cylinder head surface	0,7±0,05 mm 0,6±0,05 mm
Spring pressure when spring compressed to a length of: – 48,6 mm – 37,4 mm Rocker arm shaft diameter	327±17 N 500±23 N
Inside diameter of rocker arm bearing bush: – (when fitted in position)	19,99020,010 mm 23,03523,075 mm 23,00023,021 mm
Max. permissible push rod deflection (when free) Free length of rocker arm spring Spring pressure when spring compressed to a length 58 mm Outside diameter of tappet Diameter of tappet bore in cylinder block	80 mm 80100 N 29,93929,960 mm
Engines from week 34 1996: Rocker arm shaft diameter Diameter of rocker arm bore	22,97022,990 mm
Camshaft	
Diameter of camshaft bearing journal no 1 Diameter of camshaft bearing journals (others that no 1) Diameter of camshaft bearing journals nos 2, 3 and 4 (620/634—engines) Inside diameter of camshaft bearing bushes (when fitted in position) Diameter of camshaft bearing bores (others than no 1) Camshaft clearance in bearing bush no 1 Camshaft clearance in bearing bushes (others than no 1) Camshaft clearance in bearing bushes (others than no 1) Camshaft clearance in bearing bushes nos 2, 3 and 4 (620/634—engines) Bearing bush tolerance in block (press fit) Diameter of bearing bush bore in block 55,62055,650 mm Camshaft end play with 0,5 mm gasket between cylinder block and timing gear housing and between timing gear housing and front cover	49,88549,910 mm 49,86549,890 mm 50,01050,070 mm 50,00050,025 mm 0,0600,145 mm 0,0900,140 mm 0,1100,160 mm 0,0250,080 mm
Cam height (distance between back of cam and tip of cam): - inlet valve 41,18041,430 mm - exhaust valve 40,08040,330 mm Cam lift: 7,38 mm - exhaust valve 8,28 mm	
Camshaft max permissible deflection (total indicator reading)	0,03 mm
Cylinder liners	
Protrusion of cylinder liner above cylinder block top face	
Height of cylinder liner flange, 1st oversize, part no 8366 47933	9,139,15 mm
Piston, rings and gudgeon pin	
Minimum distance between piston and cylinder head (measured with a piece of lead wire thought the injector location hole)	0,9001,150 mm
- 17 mm from lower edge (320, 420, 620 – engines)	

64 F	15. 5. 19 96	Model	Code	Page
21. Engine	1. 4. 1997	6000-8750	210	5

Pin bore in piston Piston pin diameter Width of ring grooves: - 1st groove (right-angled ring; 6000, 6200, 6300, 8000R, 8000, 8100, 8050, 8150) - 2nd groove - 3rd groove Side clearance of piston rings in their grooves: - 1st ring (right-angled ring; 6000, 6200, 6300, 8000R, 8000, 8100, 8050, 8150) - 2nd ring - 3rd ring - reject limit	39,99140,000 mm 2,5602,580 mm 2,5202,540 mm 4,0404,060 mm 0,070,102 mm 0,030,062 mm 0,050,082 mm
Piston ring height (in direction of cylinder): - 1st ring (right-angled ring; 6000, 6200, 6300, 8000R, 8000, 8100, 8050, 8150)	2,4782,490 mm
Piston ring gap (with piston fitted in cylinder) - 1st ring (wedge shaped ring; 6100, 6400, 6600, 6800, 8200, 8400, 8450, 8550, 8750) - 1st ring (right-angled ring; 6000, 6200, 6300, 8000R, 8000, 8100, 8050, 8150) - 2nd ring	0,300,45 mm 0,600,80 mm 0,300,60
Max. permissible weight difference between pistons in same engine	25 g

Connecting rod

Inside diameter of piston pin bush (with bush pressed into connecting rod) Outside diameter of piston pin bush Interference fit: connecting rod small end bushing – connecting rod Connecting rod small end bore Connecting rod big end bore	44,08244,120 mm 0,0570,120 mm 44,00044,025
Big end bearing shell thickness:	
 standard 1st undersize 0,25 mm 2nd undersize 0,50 mm 3rd undersize 1,00 mm 4th undersize 1,50 mm Big – end bearing clearance End float (side clearance) at big – end on crankshaft Piston pin bushing location perpendicular to longitudinal axis of connecting 	1,9601,967 mm 2,0852,092 mm 2,3352,342 mm 2,5852,592 mm 0,0460,098 mm
rod to be within	0,05:100

Crankshaft

Crankpin diameter:	
- standard	67,98168,000 mm
– 1. undersize 0,25 mm	67,73167,750 mm
- 2. undersize 0.50 mm	67.48167.500 mm

Od Farity	8.11.1990	Model	Code	Page
21. Engine	1. 9. 1992	6000-8750	210	6

3. undersize 1,00 mm4. undersize 1,50 mm	
Crankpin length	40,00040,160 mm
Main bearing journal diameter:	
- standard	
- 1st undersize 0,25 mm	
2nd undersize 0,50mm	
– 4th undersize 1,50 mm	83,48583,520 mm
Main bearing location diameter (in cylinder block)	91,00091,025 mm
Main bearing shell thickness:	
- standard	
1st undersize 0,25 mm2nd undersize 0,50 mm	
- 3rd undersize 0,30 mm	
– 4th undersize 1,50 mm	
Main bearing clearance	0.050 0.127 mm
Length of thrust bearing journal (journal nearest to flywheel):	0,0300,127 111111
standard (2 standard thrust plates)	
1st oversize (one std and one 0,1 mm overthick thrust plate)2nd oversize (one std and one 0,2 mm overthick thrust plate)	
- 3rd oversize (one 0,1 mm and one 0,2 mm overthick thrust plate)	
- 4th oversize (two 0,2 mm overthick thrust plates)	
Other crankshaft journals may not be ground longer.	
Crankshaft end float	0.1000.380 mm
Max. permissible ovality and other deformity of crankpins or journals	0,03 mm
Crankshaft unbalance	
Balancing unit ring gear location, diameter (420 engines)	
	,
Ehrubeel	
Flywheel	
Flywheel ring gear no. of teeth	122 nos
Interference fit between ring gear-flywheel	
Before fitting the ring gear, heat up to a temperature of	150200°C
Flywheel unbalance	1,0 Ncm Max
of clutch face on diameter 200	0,06:ø200
Timing gears	
inning gears	
Tooth backlash:	
Crankshaft-idler gear	0,050,25 mm
Idler gear – camshaft gear	0,050,25 mm
Idler gear – fuel injection pump gear Max. permissible side wobble of gears	
Idler gear shaft, diameter	
Inner diameter of idler gear bushing (fitted)	
Inner diameter of Idler gear hole Camshaft gear hole diameter	
Camshaft end diameter	

21. Engine

1. 1. 1994 1. 8. 1998

Model **6000-8750**

210

104 800 105 000 mm

Page 7

Timing marks:

Timing marks on gears are in alignment when the 1st cylinder piston is at its top dead centre between compression and power strokes.

against crankshaft gear mark
against camshaft gear mark
against fuel injection pump gear mark
1 dot on tooth
against fuel injection pump gear mark
1 dot on notch
On camshaft gear
1 dot on notch
On injection pump gear
1 dot on tooth

Cylinder block

Holes for guide pins	 13,25013,320 mm
Main bearing location diameter	 91,00091,025 mm
Main bearing location (with bearings 8361 40950)	 92,00092,025 mm
Cylinder liner location, diameter:	
– upper end	 124,514124,554 mm
– lower end	 123,000123,040 mm
Inner diameter of camshaft bushing (fitted)	 50,01050,070 mm
Cylinder block height	 428.170428.430 mm

Distance between piston and top dead centre at different crank shaft angles

Grad	320, 420, 620 mm	634 mm	Grad	320, 420, 620 mm	634 mm
	111111	111111		111111	111111
6°	0,423	0,485	21°	5,100	5,841
10°	1,173	1,344	22°	5,587	6,399
11°	1,418	1,624	23°	6,095	6,980
12°	1,686	1,931	24°	6,624	7,585
13°	1,976	2,264	25°	7,173	8,214
14°	2,289	2,623	26°	7,742	8,865
15°	2,625	3,007	27°	8,331	9,539
16°	2,983	3,417	28°	8,939	10,235
17°	3,363	3,852	29°	9,567	10,952
18°	3,765	4,312	30°	10,213	11,692
19°	4,188	4,797			
20°	4,633	5,307			

Cylinder head

Height of cylinder head

Height of cylinder head	
Height (min.) of cylinder head after repair grinding	104,000 mm
Cylinder head straigthness:	
- in lateral direction	0,05 mm
- in longitudinal direction	0,10 mm
Valve guide inner diameter (not fitted)	9,000-9,015 mm
Valve guide outer diameter	
Valve guide bore diameter in cylinder head	16,00016,018 mm
Height of valve guide upper end from cylinder head surface	
Valve head depth from cylinder head surface:	
- inlet valve	0,7±0,05 mm (max. 1,70 mm)
- exhaust valve	
Valve sealing surface angles:	,
- inlet valve	35°+20'
- exhaust valve	45°+20'
Valve sealing surface width:	
- inlet valve	2,93,7 mm
- exhaust valve	1,32,3 mm
Diameter of exhaust valve seat insert	44,07044,132 mm
Diameter of exhaust valve seat insert location	
Diameter of exhaust valve seat insert (repair part 8366 52269)	44,27044,332 mm
Diameter of exhaust valve seat insert location (repair part 8366 52269)	
Diameter of inlet valve seat insert (8366 47936)	48,57048,632 mm
Diameter of inlet valve seat insert location	
Diameter of inlet valve seat insert (repair part 8368 55347)	
Diameter of inlet valve seat insert location (repair part 8368 55347) Diameter of inlet valve seat insert location (repair part 8368 55347) Diameter of inlet valve seat insert location (repair part 8368 55347) Diameter of inlet valve seat insert location (repair part 8368 55347) Diameter of inlet valve seat insert location (repair part 8368 55347) Diameter of inlet valve seat insert location (repair part 8368 55347) Diameter of inlet valve seat insert location (repair part 8368 55347) Diameter of inlet valve seat insert location (repair part 8368 55347) Diameter of inlet valve seat insert location (repair part 8368 55347) Diameter of inlet valve seat insert location (repair part 8368 55347) Diameter of inlet valve seat insert location (repair part 8368 55347) Diameter of inlet valve seat insert location (repair part 8368 55347) Diameter of inlet valve seat insert location (repair part 8368 55347) Diameter of inlet valve seat location (repair part 8368 55347) Diameter of inlet valve seat location (repair part 8368 55347) Diameter of inlet valve seat location (repair part 8368 55347) Diameter of inlet valve seat location (repair part 8368 55347) Diameter of inlet valve seat location (repair part 8368 55347) Diameter of inlet valve seat location (repair part 8368 55347) Diameter of inlet valve seat location (repair part 8368 55347) Diameter of inlet valve seat location (repair part 8368 55347) Diameter of inlet valve seat location (repair part 8368 55347) Diameter of inlet valve seat location (repair part 8368 55347) Diameter of inlet valve seat location (repair part 8368 55347) Diameter of inlet valve seat location (repair part 8368 55347) Diameter of inlet valve seat location (repair part 8368 55347) Diameter of inlet valve seat location (repair part 8368 55347) Diameter of inlet valve seat location (repair part 8368 55347) Diameter of inlet valve seat location (repair part 8368 55347) Diameter of inlet valve seat location (repair part 8368 55347) Diame	•
29	

	1,9,1992	Model	Code	Page
21. Engine	1. 1. 1994	6000-8750	210	8

Lubricating system

Oil pressure at normal running temperature:	
- at idling speed (min.)	
- at running speed	250-400 kPa (2,5-4,0 kp/cm ²)
Free length of oil pressure valve spring	80 mm
Spring pressure when valve spring is compressed to a length of 52 mm	54+5 N (5,4+0,5 kp)
Diameter of oil pressure valve plunger	19,60219,635 mm
Diameter of oil pressure valve cylinder	19,70019,752 mm
Oil filter by – pass valve opens at a pressure difference of	2±0,5 kp/cm ²

Oil pump (320, 420 engines)

Backlash between gears when crankshaft lies firmly against the lower side of main bearings: - crankshaft gear-lubricating oil pump gear - between the pump gears Diameter of drive shafts:	
- at bearings for body and cover - at gear wheel pressed on shaft Diameter of shaft holes on body and cover Diameter of gear wheel holes Drive shaft gear (press fit), distance between side gear (thread side) and first shoulder Fixed shaft, diameter Protrusion of fixed shaft end below pump body face Thickness of cover gasket	18,09918,109 mm 18,00018,018 mm 18,06018,078 mm 14,8015,20 mm 18,02818,039 mm 0,51,0 mm
Outside diameter of gear Housing diameter Thickness of gears End play of gears Depth of housing Number of teeth on drive gear (320 engines) Number of teeth on drive gear (420 engines)	43,48643,525 mm 43,65043,750 mm 24,00024,027 mm 0,030,11 mm 24,00024,043 mm 51 pcs

Oil pump (620, 634 engines)

Backlash between gears when crankshaft lies firmly against the lower side of main bearings:	
- crankshaft gear-lubricating oil pump gear	0,050,25 mm
– between the pump gears	0,160,26 mm
Diameter of drive shafts	
- at bearings for body and cover	17,96617,984 mm
- at gear wheel pressed on shaft	18,09918,109 mm
Diameter of drive shaft bearing hole on body and cover	18,00018,018 mm
Hole diameter of gear pressed on drive shaft	
Drive shaft gear (press fit), distance between side gear (thread side) and first shoulder	
Diameter of fixed shaft at gear wheel	17,96617,984 mm
Inner diameter of bearing for gear wheel which rotates on fixed shaft	18,00018,018 mm
Fixed shaft in pump body, diameter	20,03520,048 mm
' ' '	
Thickness of cover gasket	
Outer diameter of gear wheels (620 engines)	43,48643,525 mm
Outer diameter of gear wheels (634 engines)	
Housing diameter (620 engines)	
Housing diameter (634 engines)	
Thickness of gears	
End play of gears	
Depth of housing	32,00032,043 mm
Number of teeth on drive gears	46 pcs

21. Engine 1. 6. 1999 Model 6000 - 8950 210

Page

9

Balancing unit (420 engines)

Tooth backlash:	
- crankshaft ring gear - balancer weight gear wheel	0,10,3 mm
- between the balancer weights gear wheels	0,050,250 mm
Balancing weights end float	0,10,5 mm
Shaft diameter at bearing surfaces	
Bearing bushing inner diameter (fitted)	
Diameter of holes in body for shafts, rear end	36,05836,083 mm
Diameter of holes in body for shafts, front end	35,95835,983 mm
Shim thickness, cylinder block – balancer unit	0.2 mm

Turbocharger

Shaft end float	
Shaft radial clearance 1)	max 0,61 mm
Turbine housing attaching bolts	22 Nm
Nut at end of shaft	6,8 Nm

Schwitzer S1B (420 DS engines) and S1BG by-pass turbo (420DW engines)

Shaft end float	max 0,14 mm
Shaft radial clearance ¹)	max 0,51 mm
Turbine housing attaching bolts	
Nut at end of shaft	8,1 Nm
By – pass passage opening pressure (S1BG)	1.035 bar

Schwitzer S2B (620DS, 634 DS engines) and S2BG by-pass turbo (620/634DW)

Shaft end float	
Shaft radial clearance ¹)	max 0,95 mm
Turbine housing attaching bolts	17 Nm
Nut on end of shaft	15,6 Nm
By – pass passage opening pressure (S2BG)	0,9 bar

¹⁾ Measured at nut on end of shaft.


Tightening torques


Tightening torques	
Main bearing bolts	200 Nm
Cylinder head bolts	80 Nm+90°+90°+60°
Cylinder head studs to cylinder block	
Main bearing bolts	
Connecting rod bolts	
Crankshaft nut:	
– 320/420	600 Nm
– 620	1000 Nm
Flywheel bolts:	
_ 10.9	140 Nm
- 12.9	160 Nm
Flywheel housing bolts:	
– outer ring M12	110 Nm (8.8), 150 Nm (12.9)
– inner ring M10	, , ,
Idler gear bolts:	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,
– M10	60 Nm
– M14	200 Nm
Compressor V – belt pulley, nut	
Balancing weights, 420	
Crankshaft counterbalance weight bolts (320)	
Exhaust manifold bolts	
Inlet manifold bolts	30 Nm
Injector attaching nuts (on studs)	15 Nm
Delivery valve retainer	40 Nm
Injector nozzle sleeve	60 Nm
Engine-oil sump:	
- 320/420 engines M12 bolts	110 Nm (8.8), 140 (12.9)
– 620/634 engines M8 bolts	30 Nm
- 620/634 engines M10 bolts	90 Nm
– 620/634 engines M20 bolts	600 Nm
Nut for lubricating oil pump gear	60 Nm
Lubricating oil pump fixing bolts	
Valve of piston cooling nozzles, 620/634 https://tractormanualz.com/	30 Nm
1111p3.//tradicitinaridal2.com/	

	1. 1. 1994	Model	Code	Page
21. Engine	1. 11. 1998	6000-8750	210	10

Special tools

Order no	Description
1 9051 73100	Puller for cylinder liner
2 9101 65600 *)	Milling cutter for cylinder liner seat
3 9052 46400	Centring tool for flywheel housing
4 9052 46300	Drift for fitting rear crankshaft seal
5 9030 15200	Drift for fitting front crankshaft seal
6 9052 46620	Drift for 40 mm cap plug
7 9052 46650	Drift for 16 mm cap plug
8 9025 87400	Drift for fitting camshaft cup plug
9 9101 66300 *)	Press tool for cylinder liner
10 9025 79200	Holder for dial gauge
11 9101 66100 *)	T-handle for valve seat milling cutter
12 9101 71100 *)	Milling cutter for facing exhaust valve seat
13 9101 65502 *)	Milling cutter for exhaust valve seat
14 9101 65503 *)	Inner milling cutter for exhaust valve seat
15. 9101 75800 *)	Milling cutter for facing inlet valve seat
10 0101 05505 *\	APPLY IN COLUMN TO THE PARTY OF
16 9101 65505 *)	Milling cutter for inlet valve seat
17 9101 65506 *) 18 9101 66200 *)	Inner milling cutter for inlet valve seat Lever for compressing valve spring
19 9052 47200	Counter nut for lever above
20 9101 66000 *)	Milling tool for injector seat
21 9052 46660	Drift for 36 mm cup plug
22 9101 65800 *)	Drift for removing valve guide
23 9101 65900 *)	Drift for fitting valve guide
24 9024 55800	Spanner for crankshaft nut, 634-engines
25 9101 65700 *)	Spanner for crankshaft nut
26 9052 48800	Puller for crankshaft gears
27 9020 01100	Conical sleeve for fitting pistons
28 9025 98900	Drift for fitting dust cover, crankshaft front seal
29 9025 98800	Drift for fitting tension pin in timing gear casing
30 9025 98700	Drift for fitting tension pins in timing gear casing and flywheel housing
31 8366 62022	Electronical device for checking injection timing on E-engines
*\ Nlavy table for 00	carios anginas. Other tools are the same as for anginas an EOE OOE tractors

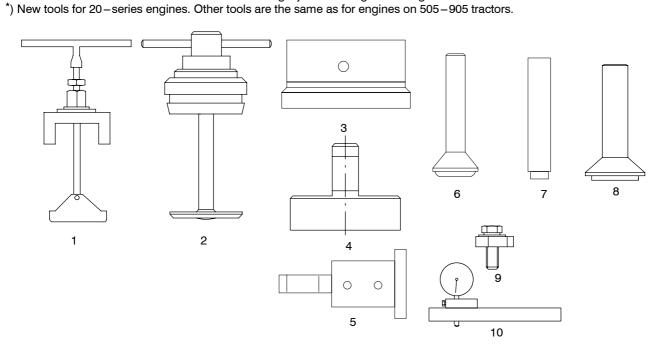

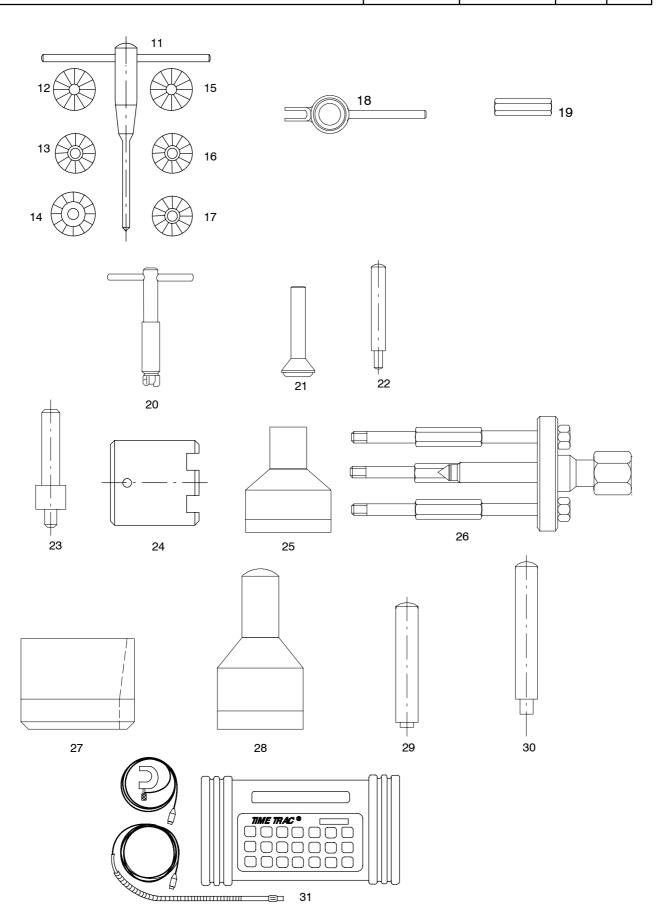

		Model	Code	Page
21. Engine	1. 9. 1992	6000-8750	210	12

Engine, description

General

The Valmet 20-series engines (3-, 4-, or 6-cylinders) are water-cooled, four stroke, turbocharged (not 8000 and 8100), direct-injection in-line diesel engines. Technical values, see page 210/3.

The engines have a rigid and ribbed cylinder block. The crank mechanism is designed for supercharging. The cylinder liners are wet and supported at the middle, the cylinder head bolts are high tensile bolts.

Cylinder block

The cylinder block is the main body of the engine, to which other engine parts are attached. Wet and replaceable cylinder liners are supported at the middle which reduces vibrations and directs coolant circulation mainly to the upper part of the liners


The seal between the cylinder liner lower part and the cylinder block is achieved by three o-rings, which are fitted in grooves in the liner. The upper part is sealed by the cylinder head gasket.

The camshaft is located in the cylinder block. The camshaft front bearing location is fitted with a separate bearing sleeve. The remaining bearing locations are machined directly in the cylinder block. The latest 620—engines have separate bearing sleeves in all camshaft bearing locations. The drilling for the camshaft rear end is covered with a plug.


There are spaces on both sides of the rear main bearing for guide bearing shims (the crankshaft thrust bearings).

Flywheel housing

The flywheel housing is fitted at the rear end of the cylinder block. The seal for the crankshaft rear end is placed in a bore in the housing. The starter motor fixing point is fitted in the flywheel housing. The lower face of the flywheel housing functions as a sealing surface for the oil sump gasket. This means that the lower face of the cylinder block must be level with the flywheel housing. When fitting the flywheel housing, its position is determined by tension pins.

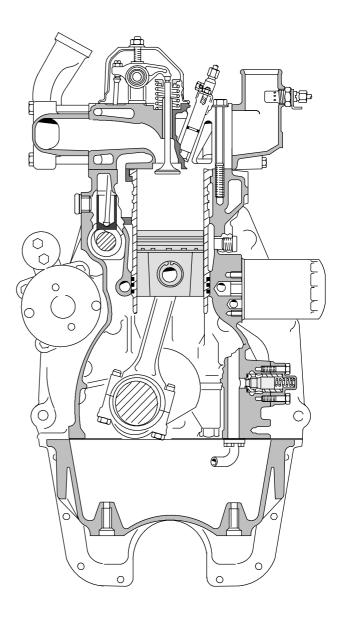

	Model	Code	Page	l
1. 9. 1992	6000-8750	210	13	
	1. 9. 1992	1. 9. 1992 Model 6000-8750	6000_8750	6000-8750 210 12

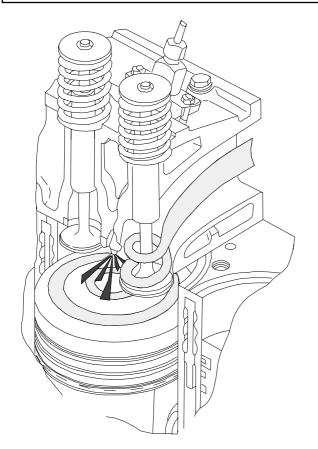

Cylinder head

320 – and 420 – engines have one cylinder head. 620 – engines have two cylinder heads which are exchangeable with each other and also with the cylinder head on the 320 – engine. Each cylinder has its own inlet and exhaust ports located on either side of the head. Between hot exhaust valves a cool inlet valve is fitted to balance the thermal load.

Cylinder head bolts are high tensile bolts which are tightened up to yield limit using angle tightening principle. Due to the large stretch the tightening forces are kept constant during the whole lifetime and retightening is unnecessary.

The injector locations are machined directly into the cylinder head. The inlet and exhaust valve guides are identical and can be interchanged. In addition, the exhaust valves are equipped with replaceable valve seat inserts.

Valve mechanism

The valve mechanism is operated by the camshaft which is located in the cylinder block. The drive is transferred with the help of tappets and pushrods. The camshaft gear wheel is fitted with a press fit and fixed with a key. Each bearing is lubricated by the force feed lubrication system through drilled oilways in the motor block.

Crank mechanism

The crankshaft is forged from chrome alloy special steel and is induction hardened at the bearing and sealing surfaces. This makes it possible to grind bearings four times without a new heat treatment. Gear wheels are located at the front end of the crankshaft. They are a press fit, and drive the idler wheel and oil pump. In addition, the front end of the crankshaft has splines for the hub of the V-belt pulley. An oil deflector ring is fitted between the hub and gear wheel, and a dust shield is fitted on the hub in order to protect the seal.


The crankshaft is supported on the cylinder block by main bearings which are placed on both sides of each cylinder. Thus there is one main bearing more than cylinders. The crankshaft thrust washers are placed in both sides of the rearmost main bearing.

At the rear end of the crankshaft there is fitted a flywheel on which is a press—fit a starter ring gear. The forged crankshaft has an I—section cross—section. The bearing location at the bottom end of the connecting rod is split, and the bearing cup is secured by two special bolts and nuts. The upper part has a wedge—shaped bearing location, in which the piston pin bearing bushing is fitted with a press fit.

The piston is made of an eutectic aluminium alloy. In the upper face of the piston there is a combustion chamber. The shape of the chamber is intended to maximise the mixture of air and fuel. The piston has three rings. The upper molybdenum—coated ring has a wedge—shaped cross—section. On natural aspirated engines and on slight supercharged engines the upper ring is right—angled. The middle ring is tapered and it fits into its groove. The taper taking up the clearance. The oil control ring is spring loaded and it has a two—stage, chromed scraping edge.

On the turbocharged engines the upper ring location is formed in a cast iron ring which is cast in the piston. In addition, the piston on supercharged engines is graphite coated to ensure correct running—in.

Four—cylinder engines (420) are equipped with a balancer unit. The eccentric weights, which rotate at twice the engine speed, even out the vibration forces exerted by the movement of the pistons and the crank mechanism.

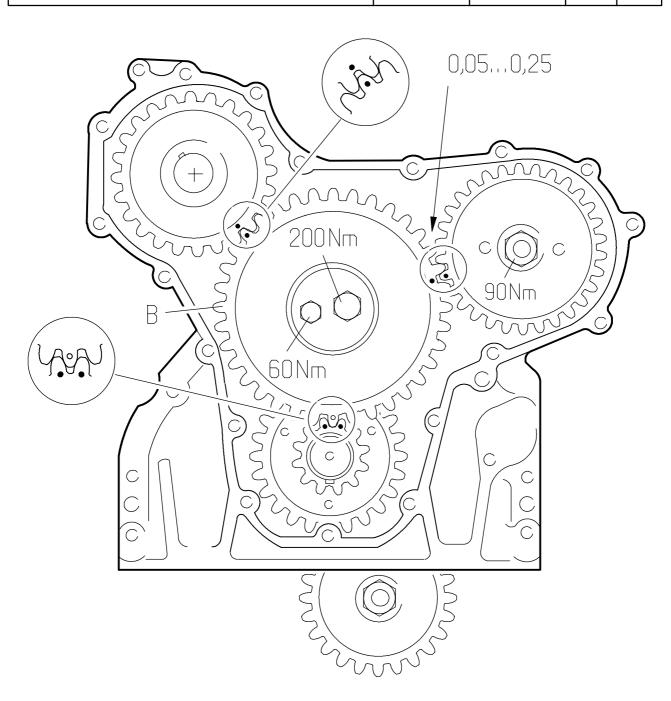


Timing gears

The timing gear train consists of hardened, helically cut gear wheels. The gears are encased by the timing gear casing which is fitted to the front of the engine. The timing gear drives

the camshaft, fuel injection pump and oil pump.

The idler gear is supported with a bearing sleeve on the shaft on the front face of the cylinder block.

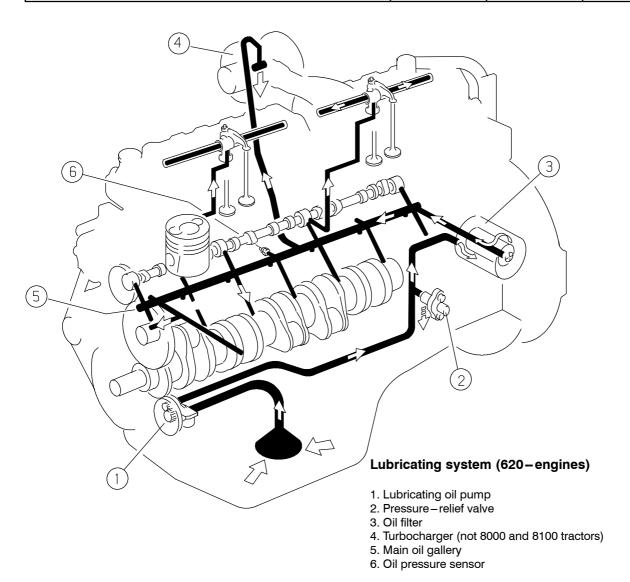

Lubricating system


The engine has a pressure lubricating system in which the oil pump (gear pump) is attached to the cylinder block lower face. The oil is sucked up by the pump through a suction strainer. After the pump the oil is led through an oilway to the relief valve and to the oil filter. After the filter, the oil is led through the main oil gallery from which oilways branch out. The oil is led through the oilways in the main bearings and through the crankshaft to the big—end bearings.

The oil is further directed from the main gallery to the injection pump, turbocharger, balancing unit (420) and to a possible compressor. In addition, the idler gear bushing, the camshaft bearing points and the valve mechanism get their lubrication oil via the main oil gallery.

The oil pressure relief valve is located under the oil filter on the left hand side of the engine. The valve regulates the lubricating oil pressure so that it is kept constant, regardless of the engine speed. Oil pressure is about 2,5–4 bar depending on revs, oil quality and temperature, and at engine idling speed the pressure is min 1,0 bar.

The oil filter is full—flow disposable type and is fitted on the left—hand side of the engine. A by—pass valve is located at the base of the filter to ensure safe cold—starting or to ensure adequate lubrication in case the filter becomes blocked. In addition, there is a non—return valve which stops the filter from being emptied of oil.

21. Engine Model Code Page 6000-8750 210 16

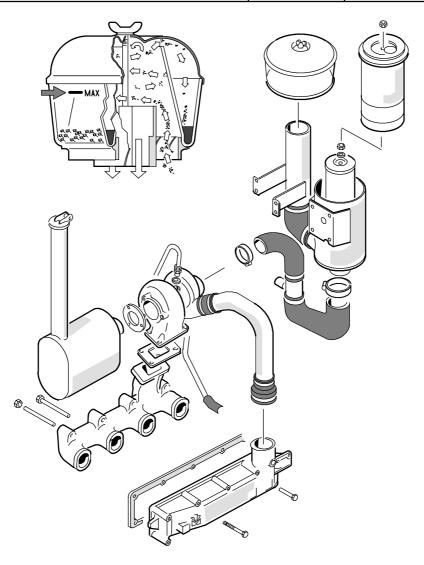

Induction and exhaust system


The filter system for the engine inlet air comprises a cyclone type precleaner, and a paper filter which acts as the main filter. The incoming air is made to rotate in the cyclone precleaner. This causes most of the impurities to settle out and collect in the cyclone precleaner dust collector. The paper filter comprises two replaceable filter elements. The paper is corrugated and surrounded by a metal support.

The impurities in the air collect at the larger filter element which can be cleaned when necessary. The inner safety filter prevents impurities form entering the engine should the main filter element break, or be fitted incorrectly.


An electric service indicator is located in the filter body. This sender lights a control lamp on the instrument panel when the air filter is blocked. The inlet system also includes the hoses between the air cleaner and the turbocharger and the induction manifold.

The exhaust manifold is attached to the cylinder head with high tensile bolts without a separate gasket. Retightening of the manifold bolts is unnecessary.

The turbocharger is small and thus it reacts sensitively at low engine revs. The turbocharger gets lubricating oil and cooling from the engine lubricating and cooling system.

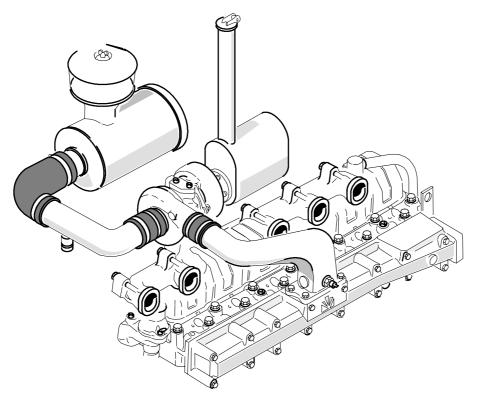

The picture above shows the air intake system of the 8400 tractor. 8400 has a turbocharged, 6-cylinder engine with an output of 140 hp (103 kW). The turbocharger type is Schwitzer S28

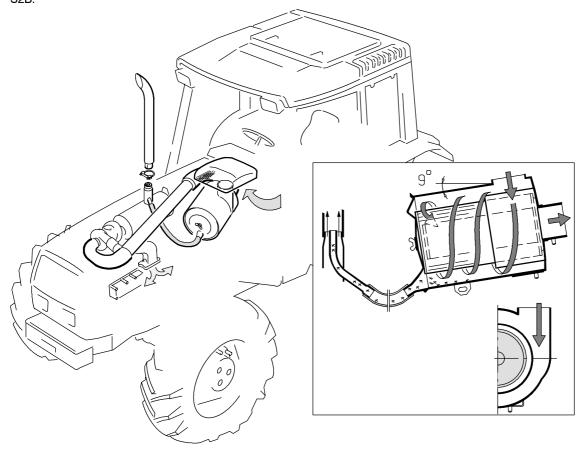

Air filter on later 8200 and 8400. In this filter the filter elements are a little bigger than on other models. Also a pipe, which removes impurities with the aid of the suction created by exhaust gas flow, is standard equipment. The air intake covering above the filter has a net, which filters larger impurities.

The filter elements are accessible after removing the LH side engine hood plate. There is a wing nut at the end of the filter housing.

Note! 6200, 6800, 8000R and 8050-8750 tractors also have this filter and later all Mezzo/Mega-series tractors.

21 Engine	1.8.2000	Model	Code	Page
21. Engine	1. 9. 2002	6250-8950	210	18

21. Engine	1.8.2000	Model	Code	Page
	1. 9. 2002	6200-8400	210	19





		Model	Code	Page
21. Engine	1. 9. 1992	6000-8750	211	1

Repair instructions


Cylinder block and flywheel housing (Op no 211)

1. Cylinder block and cylinder liners

A. Measuring cylinder liner wear

Note! Cylinder liner wear can be measured when the engine is attached to the tractor. Remove only the cylinder head and crank the engine so that the piston is in the lower position.

- 1. Using a micrometer set the dial gauge to zero using a new cylinder liner indicating the initial dimension of the bore: 108,00 mm.
- 2. Clean the inner surface of the cylinder liner thoroughly before measurement.

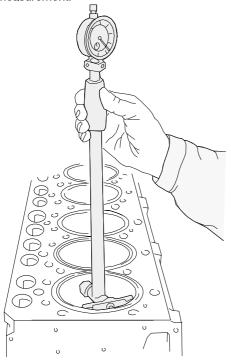


- 3. Perform the measurement crosswise at the liner top end, lower end and middle.
- 4. Check the gauge reading for maximum wear and ovalness (compare with rating on page 210/4).

B. Removing cylinder liner

Note! See also page 219/1 for working order.

- 1. If the cylinder liners are to be used again they should be marked so that they can be fitted in the same position.
- 2. Remove the cylinder liners using cylinder liner puller 9051 73100.

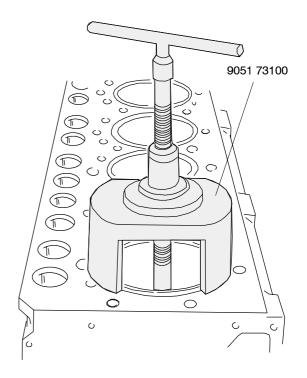

C. Checking cylinder block


- 1. Clean the cylinder block and all oilways.
- 2. Check the cooling channels and remove the scale and sediment to ensure engine cooling.
- 3. Check the tightness of the cup plugs and threaded plugs in the cylinder block as well as the condition of the cylinder block and sealing faces.
- 4. Measure the wear of the camshaft bearing points (compare with rating on page 210/4).

Note! If it is necessary to machine the upper face of the cylinder block, the pistons must be shortened by the same dimension. Observe the valve disc spaces on the piston upper face.

D. Changing camshaft bushing


- 1. Extract the bushing with an internal puller, for example Sykes 854. If the camshaft rear end plug is removed the bushing can be forced out with a long drift.
- 2. Clean the bushing location.

	1,9,1992	Model	Code	Page
21. Engine	1. 1. 1994	6000-8750	211	2

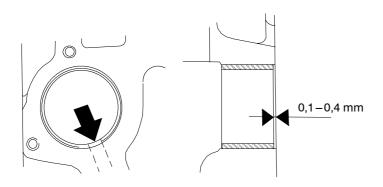

3. Press in a new bushing. Note the position of the oil hole. It is unnecessary to ream the bushing because it has a correct inner diameter when it is fitted in place.

Note! On the 620 and 634 engines from the engine ser. number C2751, all camshaft bearing points are provided with a separate bearing bushing. Observe the different outer diameters when removing and fitting.

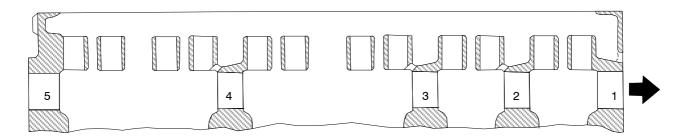

Order numbers of the camshaft bushings and hole diameters for the bushings on the 620/634 engines.


Note! Numbering begins from the front end of the engine.

Order no	Hole diameter
1. 8363 22610	55,6255,65
2. 8368 52460	55,4055,43
3. 8368 52459	55,2055,23
4. 8368 52460	55,4055,43
5. 8368 52461	55,6255,65

E. Oversize bushings for camshaft

If the location of the camshaft bushing (front bearing) is damaged, a bushing with a **0,4 mm** oversize outer diameter can be fitted. Bushings are available even for other camshaft bearings which do not normally have bushings. Part numbers and machining dimensions for the bushing locations are shown in the figure.

Observe the position of the bushing oil holes. It is unnecessary to ream the bushings after fitting.

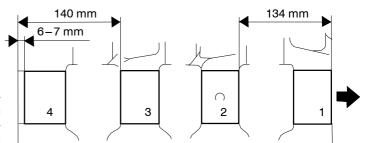

Oversize camshaft bushings for 320-engines. Numbering begins from the front end of the engine.

Order no	Hole diamete
1. 8363 24661	56,0256,05
2. 8368 52460	55,4255,45
3. 8368 52460	55,4255,45
4. 8368 52461	55.6455.67


21. Engine



Model **6000 – 8750**


Code **211**

Page 3

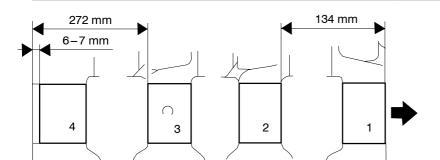


Camshaft oversize bearing bushings for 420-engines. Numbering begins from the front end of the engine.

Order no	Hole diameter
1. 8363 24661	56,0256,05
2. 8368 52460	55,4255,45
3. 8368 52460	55,4255,45
4. 8368 52461	55,6455,67

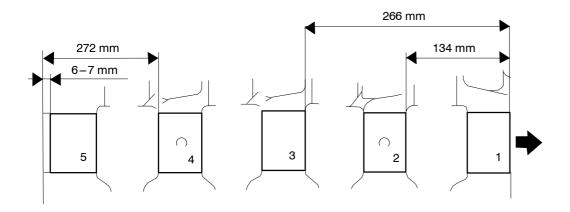

Camshaft oversize bearing bushings for 620/634 engines. Numbering begins from the front end of the engine.

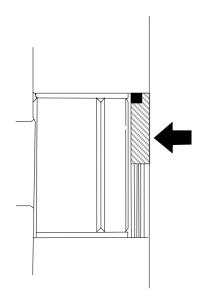


The camshaft rear end plug is replaced with plug 8363 24391 and o-ring 6146 05125 after machining.

Order no	Hole diameter
1. 8363 24661	56,0256,05
2. 8368 52466	55,6255,65
3. 8368 52460	55,4255,45
4. 8368 52466	55,6255,65
5. 8368 52467	55,8455,87

F. Fitting plug at camshaft rear end

- 1. Clean the seat for the plug.
- 2. Apply sealing compound to the contact surface of the plug

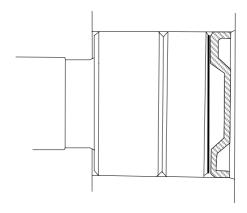


3. Drive in the plug with fitting drift 9025 87400.


Note! Do not drive in the plug too far because it will affect the camshaft end float.

		Model	Code	Page
21. Engine	1. 9. 1992	6000-8750	211	4

G. Fitting pipe for oil dipstick

- 1. Clean the seat for the pipe.
- 2. Apply locking fluid Loctite 601 to the lower end of the pipe.

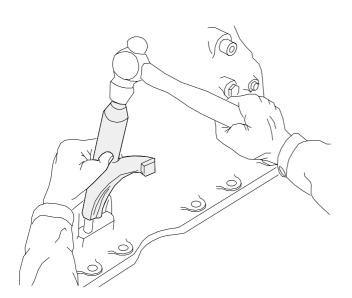

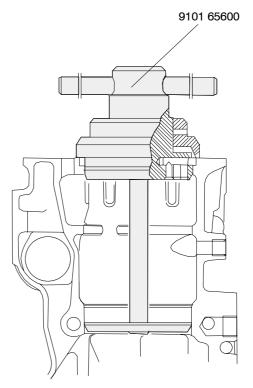


3. Tap the pipe in to the correct fitting height with tool 9025 95900.

Note! The position of the pipe affects an oil level in the engine.


H. Fitting cylinder liner

- 1. Clean the cylinder liner and its recess in the cylinder block. Without o-rings the liner should rotate easily in its recess.
- 2. Apply a thin layer of marking paint on the underside of the cylinder liner flange. Fit the cylinder liner without o rings and turn it forwards and backwards. Lift out the liner and check that paint has been deposited on the whole contact surface.
- 3. If the recess is damaged, or the cylinder liner height (see point 5) needs to be adjusted, use milling cutter 9101 65600. If necessary, a light lapping can be executed after milling with the help of the cylinder liner. Apply lapping paste to the underside of the cylinder liner flange, and twist the liner with twisting tool. Lapping is not suitable for adjusting the cylinder liner height.
- 4. Clean the contact surfaces.

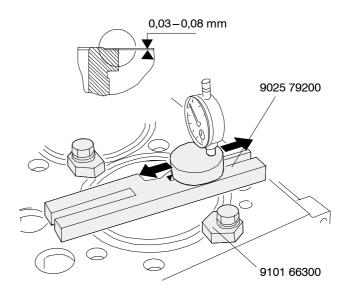

5. Fit the cylinder liners and fix each liner with two press tools 910166300. Measure the cylinder liner height with a dial gauge and holder 9025 79200. Zero the dial gauge against a flat surface, for example, the cylinder block face. Measure each liner in four places. The height of the liner above the cylinder block face should be **0,03-0,08 mm**. The height difference between cylinder liners under the same cylinder head must not exceed **0,02 mm**, nor must an intermediate cylinder liner lie lower than an outer one.

6. If the cylinder liner height is too low, a liner with a higher flange is fitted.

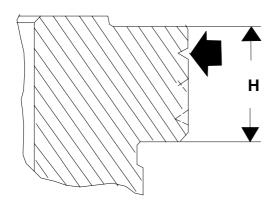


Order no	Н	Marking grooves pcs
8266 47420	9,03 ^{+0,02}	- (norm)
8366 47933	9,08 ^{+0,02}	1
8366 47934	9,13 ^{+0,02}	2
8366 47935	9,23 ^{+0,02}	3

Cylinder liners with oversize flanges (higher flanges) are marked with grooves on the outer circumference as follows:

1st oversize, 0,05 mm = 1 marking groove 2nd oversize, 0,10 mm = 2 marking grooves 3rd oversize, 0,20 mm = 3 marking grooves

Note! Recess depth is adjusted with a cylinder liner recess cutter 9101 65600.

7. If the liner height of a cylinder liner is not the same all the way round, the cylinder liner flange and the cylinder block recess depth should be checked. Cylinder liners with warped flanges should be discarded.

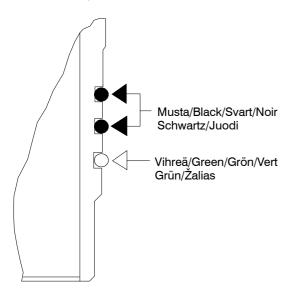

8. Fit the o-rings into the grooves in the cylinder lower part and lubricate them with a liquid soap (not with engine oil).

Note! Stretch the o-rings as little as possible when fitting them. Max allowable stretching is 6 %.




9. Press the cylinder liners into the cylinder block. It should be easy to press them fully home. Make sure that the liners do not rise up after fitting.

2. Flywheel housing


A. Fitting flywheel housing

The flywheel housing is centred on the cylinder block by two tension pins. Even the flywheel housings which are delivered as spare parts have ready—made holes for the pins.


1. Clean the sealing surfaces between the cylinder block and the flywheel housing.

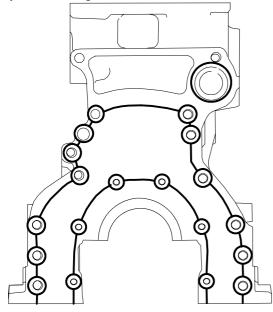

- 2. Apply silicone sealant as shown in figure above.
- 3. Lift the flywheel housing into place and fit all the bolts.
- Centre the housing and fit the tension pins with drift 9025 98700.
- 5. Tighten the fixing bolts, the inner ring socket head bolts to **60 Nm** (8.8) or **90 Nm** (12.9) and outer ring hexagonal bolts to **110 Nm** (8.8) or **150 Nm** (12.9).

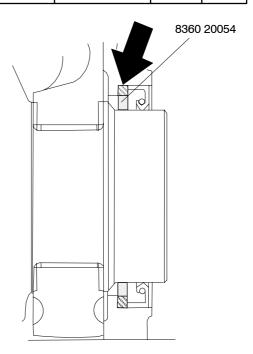

Note! If the crankshaft is worn at the sealing location, a 2 mm spacer ring, part no 8360 20054, can be fitted in front of the crankshaft rear oil seal.

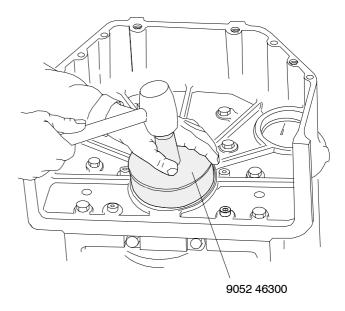

B. Changing crankshaft rear oil seal

- 1. Split the tractor at clutch. Remove the clutch assembly (and possible turbine clutch).
- 2. Remove the flywheel.
- 3. Remove the oil seal. Do not damage the crankshaft.
- 4. Clean the seal location and grind off any burrs.

5. Lubricate the sealing surfaces on the crankshaft and on the seal. Place the seal on the crankshaft and drive it in until it bottoms using drift 9052 46300. Other tools may cause the seal to be damaged or mounted askew, resulting in leakage.


Note! The cranckshaft rear oil seal has been changed to a Teflon type. The spare part seals have a mounting sleeve, which must not be removed before fitting. The spare part numbers do not change. When fitting the seal, place the plastic sleeve on the crankshaft and push the seal on the sleeve into place. Remove the sleeve and fit the seal with the special tool. The seal must be fitted dry.

	1. 8. 1998	Model	Code	Page
21. Engine	1. 11. 1998	6000-8750	211	7

C. Changing starter ring gear on flywheel

If the ring gear is worn, change it with a new one. The ring gear cannot be turned around because its teeth are chamfered and hardened on the starter motor side.

- 1. Split the tractor at clutch (see Op 411 1A). Detach the clutch assembly (and possible turbine clutch) and the flywheel.
- 1. Detach the earlier ring gear by tapping it with a drift. Clean the ring gear seat on the flywheel with a steel—wire brush.

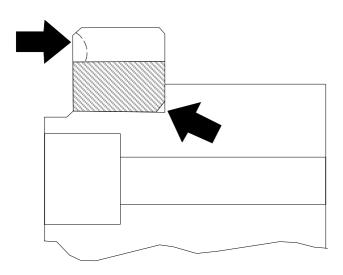

- 2. Warm the ring gear to the temperature of 150-200°C. Fit the ring gear with the inner diameter chamfering turned against the flywheel and the teeth chamfering against the starter motor.
- 3. Allow the ring gear to cool freely without using any coolant.

D. Fitting the flywheel

- 1. Clean the contact surfaces on the crankshaft rear flange and on the flywheel.
- 2. Fasten the flywheel to the crankshaft rear end. As a guide pins can be used studs (M12, 2 pcs) which are screwed in to the flywheel fixing bolt holes.


Note! On the flywheel there is a fuel injection timing mark. Fit the flywheel in the right position according to the guide pins.

Note! In the E-engines there is an injection timing register mark on the flywheel and the flywheel has been positioned with a guide sleeve to the crankshaft.

3. Tighten the flywheel fixing bolts evenly to a torque of **140** Nm (10.9) or **160** Nm (12.9).

Note! If a flywheel must be changed on the E-engines, an injection timing mark must be made on a new flywheel as follows:

- Rotate the crankshaft so that the piston in the first cylinder is in the top dead centre. Drop a valve down against the piston top. Place a dial gauge stylus against the valve upper end and zero the gauge to the top dead centre. Rotate the crankshaft in the running direction until the dial gauge shows value 4,633 mm after the top dead centre (420, 620) or 5,307 mm after the top dead centre (634).
- Drill the injection timing mark in the flywheel with the aid of a drill shown below.

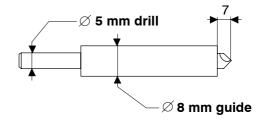





	8_11.1990	Model	Code	Page
21. Engine	1. 9. 1992	6000-8750	212	1

Cylinder head and valve mechanism (Op no 212)

2. Compress the valve springs using lever 9101 66200. Remove the valve cotters, spring guide and spring. Remove the valves.

1. Cylinder head

A. Removing cylinder head


- 1. Remove the engine hood plates. Clean the engine externally and drain the coolant. Disconnect the coolant hoses from the cylinder head and the thermostat housing.
- 2. Remove the suction hoses between the turbocharger and the air filter and between the turbocharger and the inlet manifold (turbocharger only on 6100 6600 tractors).
- 3. Disconnect the turbocharger pressure and return oil pipes.
- 4. Remove the pipes to the thermostart fuel reservoir.
- 5. Remove the injector leak-off fuel pipes and the delivery pipes. Remove the injectors. Fit blanking-off caps on all open connections.
- 6. Remove the inlet and exhaust manifolds and the thermostat housing.

Note! It is possible to remove the cylinder head even thought these parts are attached to the head.

- 7. Remove the valve cover and the breather hose.
- 8. Remove the rocker arm mechanism and the push rods.
- 9. Loosen all the cylinder head bolts first by a $1/4\,$ turn and then remove them. Remove the cylinder head.

B. Removing valves

Ensure that valves which are to be re-used are marked, so that they are fitted in their original locations.

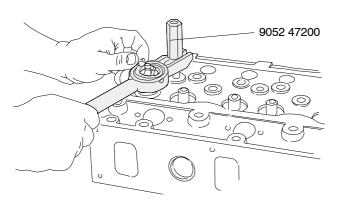


1. Thread the counterhold nuts 9052 47200 onto a screw stud for the rocker arm mechanism. On the 320-, and 620-engines there is not a screw stud at the valves for the centre cylinder. A bolt of suitable length should be used instead.


C. Checking cylinder head

- 1. Remove carbon deposits from the exhaust ports, clean the sealing surfaces and wash the cylinder head.
- Check for cracks and other damage.




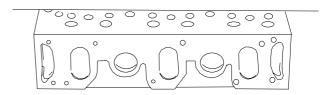


3. Check the flatness of the cylinder head by using a straight edge. An uneven or warped surface should be surface ground. The height of the cylinder head, after grinding, should not be less than 104,00 mm. The valve disc depth from the cylinder head surface should be 0,60 mm for the exhaust valves and 0,70 mm for the inlet valves.

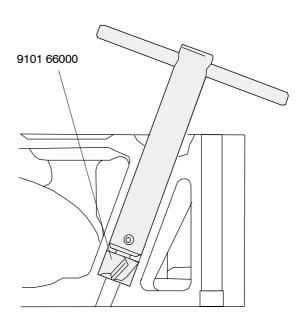


4. Straighten and clean the injector location seat in the cylinder head with cutter 9101 66000.

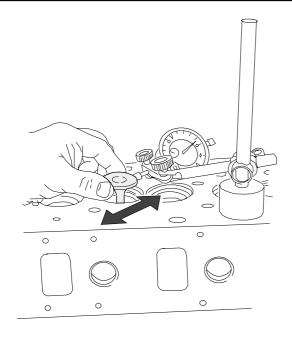


5. Measure the clearance between the valve stem and the valve guide with a dial gauge. Lift the valve so that the valve head is 15 mm from the face of the cylinder head, and measure the clearance. It must not be greater than **0,30 mm** for the inlet valves and **0,35 mm** for the exhaust valves. In order to establish the valve guide wear, a new valve should be used when measuring.

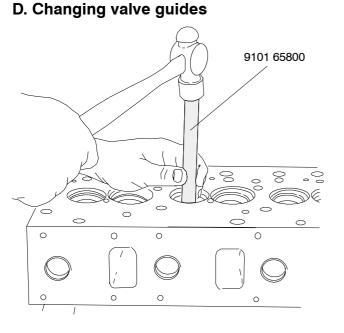


- 1. Press or knock out the old guides using drift 9101 65800. Clean the valve guide locations.
- Lubricate the outside of the new guides and fit them using drift 9101 65900, which ensures the correct fitting height (21 mm over the spring face)

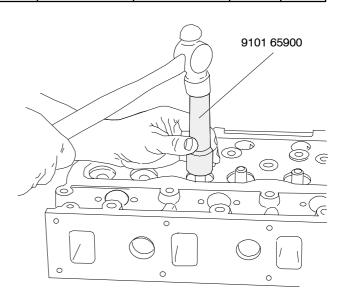

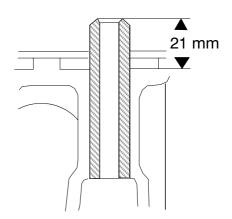

3. The guides are the same for the inlet and exhaust valves. Ensure that the steepest chamfer on the guide, faces the valve head. Check that the valves do not bind in the guides.

E. Machining valve seat

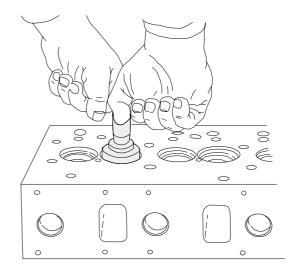


Machine the damaged valve seat with milling cutter (see page 210/10). If the width of the seat exceeds **2,3 mm** in exhaust and **3,7 mm** in intake, it should be reduced primarily at the outer edge.

	1,9,1992	Model	Code	Page
21. Engine	1. 4. 1997	6000-8750	212	3

F. Changing valve seat inserts

Exhaust valves are fitted with separate valve seat inserts. If the sealing surface is damaged so badly that it cannot be repaired with machining, the seat inserts should be changed.

- 1. Grind the valve head on a discarded valve so that it sits down in the valve seat. Fit the valve and weld it in place in the seat. Cool with water.
- 2. Turn the cylinder head over and knock out the valve and seat
- 3. Clean the valve seat location. Cool the new seat in liquid nitrogen until it stops bubbling, or alternatively place it in dry ice.
- 4. Fit the seat with a suitable drift. Machine the seat.
- **N.B.** Where necessary, standard size seats can be replaced by inserts with a larger outer diameter. See Specifications.

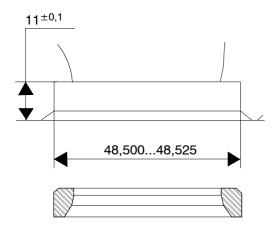


The inlet valve seat machined direct on the cylinder head, can be provided with a separate valve seat insert, order no 8366 47936. Machine the seat insert location on the cylinder head (see figure above). Fit the insert like a seat of the exhaust valve.

Note! Engines on tractors 8550 and 8750 have the valve seat inserts also on the inlet valves. From March 96 these cylinder heads have been marked with letter V, which is stamped on the cylinder head front upper surface on the exhaust side. As a spare part these heads can be fitted on all engines. The V—marked cylinder heads are also available for the 4—cylinder engines.

G. Grinding valves

In order to ensure that there is a proper seal around the valves, there is a difference in the sealing surface angles. Thus there is a very narrow sealing surface which seals effectively even after prolonged running.

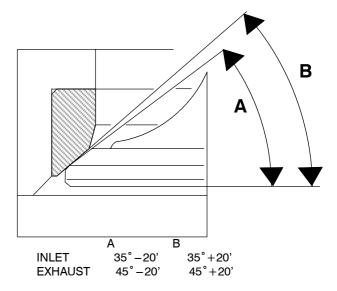

- 1. Grind the damaged valve disc with a valve refacer. Adjust angles to 45° -20' for exhaust valves and 35° -20' for inlet valves.
- 2. If the edge of the valve head is less than **1,5 mm** after it has been ground, or if the valve stem is bent, the valve should be discarded.
- 3. If necessary, grind the end of the valve stem.
- 4. Lap the valves with lapping paste and check the contact surface with marking paint.
- 5. Clean the cylinder head and valves of any remaining lapping paste.


H. Fitting valves


- 1. Check the valve springs for straightness, length and tension using a spring tester. Compare with specifications.
- 2. Lubricate the valve stems and fit the valves in the correct order in the cylinder.
- 3. Fit the springs, spring guides and valve keepers with the aid of a lever for compressing valve springs, 9101 66200.
- 4. Tap the end of the valve stems lightly after fitting the valve in order to ensure that they are secure.

	1, 8, 1998	Model	Code	Page
21. Engine	1. 6. 1999	6000-8750	212	4

I. Fitting cylinder head


1. Measure the length of the cylinder head bolts. Compare with dimensions shown in figure below. Change too long bolts.

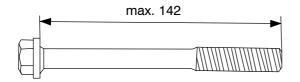

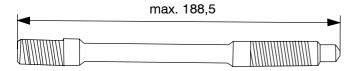


- 2. Screw the cylinder head stud bolts in to the cylinder block to a torque of **30 Nm**. Fit the valve tappets if removed.
- 3. Check that the sealing surfaces are clean and fit the cylinder head gasket(s) and the cylinder head(s). Ensure that on the six cylinder engines both cylinder heads are parallel by fastening lighty the exhaust manifold before tightening the cylinder head bolts (the exhaust manifold can damage, if the heads are not parallel). Clean and lubricate and fit the bolts.

Note! The cylinder head gasket order numbers are 8366 46351 (320/620/634) and 8367 46354 (420).

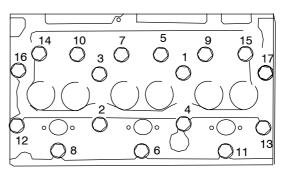


320, 620, 634

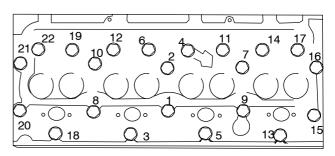

420

- 4. Pictures above show the correct tightening order of the cylinder head bolts. The order has also been marked on the cylinder heads.
- 5. Tighten the cylinder head bolts progressively as follows:
- 1. First tightening to 80 Nm
- 2. Tightening of 90°
- 3. Tightening of 90°
- 4. Adjust valve clearances
- 5. Warm engine up to normal operating temperature with light loading (approx. $+75^{\circ}$ C)
- 6. Tightening of 60°. Adjust valves.

Tighten the exhaust manifold bolts/nuts to 50 Nm. DO NOT OVERTIGHTEN.

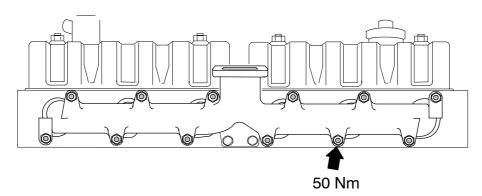


Note! On the six-cylinder engines the exhaust manifolds must always be fastened with new, thinner stud bolts and self-locking nuts (in the tractor production: F12761-). In the tractor production and in the spare parts the material of the exhaust manifolds (six-cylinder engines) has been changed into new type (6900, 8000-8200: **H01722-**. 8400, 8050-8750: **H01169-**).


2. Valve mechanism

A. Reconditioning rocker arm mechanism


 Check the valve tappets, especially the contact surface against the camshaft. Worn or damaged tappets should be discarded.

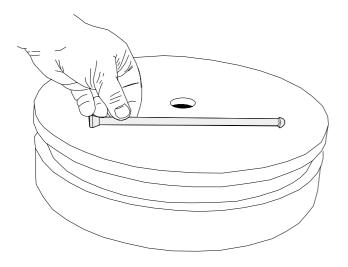


- 2. Check the straightness of the pushrods by rolling them on a surface table. Check also the spherical surfaces at the ends.
- 3. Dismantle and clean the rocker arm mechanism. Check the shaft for wear and that the oilways are clean.

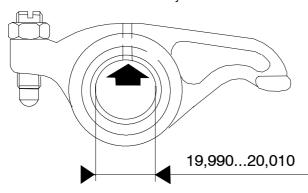

4. Check that the rocker arm bushings are not worn. Ensure that the oil hole is positioned correctly when pressing in new bushings. After pressing in the bushings they should be reamed to 19,990–20,010 mm. Where necessary grind the rocker arm valve contact surface to the correct shape. Do not grind more than necessary as the hardened layer is thin.

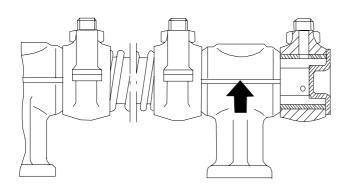


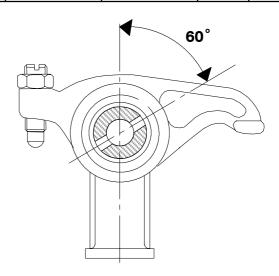

5. Fit the plug to the other end of the rocker arm shaft. Lubricate the shaft and fit various parts in a correct order. Note the correct position of the shaft and the bearing brackets. The split side of the bracket and the shaft oil holes must be turned to the valve side (see figure above). Fit the other end plug.

B. Changing camshaft/camshaft gear

- 1. Remove the inlet pipe between the turbocharger and the induction manifold. Remove the valve cover and the breather pipe. Remove the rocker arm mechanism.
- 2. Remove the radiator, cooling fan, alternator and the v-belt.
- 3. Remove the crankshaft nut. Remove the V-belt pulley including the hub (on 620-engines the belt pulley must be removed first).
- 4. Remove the timing gear casing cover (engine front cover).
- 5. Connect the pushrods in pairs, using o-rings or elastic bands to prevent them from falling through.

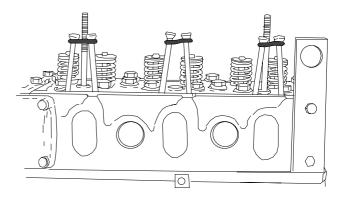


Note! Do not connect the pushrods too tightly as this might cause them to bend or snap.

21. Engine | 1.1.1995 | Model | Code | Page | 6000-8750 | 212 | 6

- 6. Crank the engine until the aligning marks on the idler gear and camshaft gear are facing each other. Extract the camshaft.
- Separate the camshaft from the gear wheel using a press or suitable drift.
- 8. Clean the parts which are to be refitted.
- Fit the key in its groove. Heat the camshaft gear to 200°C in an oven and fit it on the shaft.
- 10. Lubricate bearing surfaces and lobes and insert the shaft in the cylinder block. Ensure that the aligning marks on the gears agree.
- 11. Fit the timing gear casing cover and the crankshaft V- belt pulley and hub.
- 12. Free the pushrods and fit the rocker arm mechanism. Adjust the valves. Fit the valve cover and the breather pipe and the inlet pipe between the turbocharger and the induction manifold.
- 13. Fit the alternator. Fit the fan and the fan belt. Fit the radiator.

C. Adjusting valves

Note! Valmet 6400 DW, 6800 DWI and 8450 DW tractors have a by—pass turbo. The adjusting rod of this turbo should be released before removing the valve cover. Detach the front end joint of the rod. Do not detach the rod rear end from the membrane box since then the by—pass passage opening pressure changes. Before adjustment, also remove the silencer, fan space protective frame (if fitted), radiator support iron in the upper part and the boost pipe (if fitted), after which the valve covers can be removed.

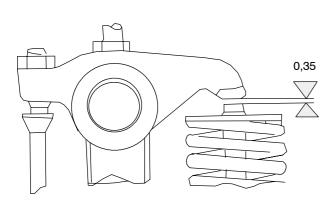

The valve clearance, which can be adjusted on a hot or cold engine, is **0,35 mm** for both inlet and exhaust valves. The clearance is adjusted when the respective piston is at T.D.C. in the compression stroke. The valves for the different cylinders are adjusted in the same sequence as the order of injection.

- slacken the lock nut of the adjusting screw
- measure clearance with a feeler gauge. The clearance is correct when a 0,35 mm feeler gauge is slightly tight—fitted between the rocker arm and the valve stem end. Adjust clearance by rotating the adjusting screw.
- tighten the locking nut and check the clearance

320-engines

Check the valve clearances in the injection order of the engine. Injection order is 1-2-3.

- check valves in the 1st cylinder, when the exhaust valve of no. 3 cylinder is completely open (valve no. 6)
- check valves in the 2nd cylinder, when the exhaust valve of no. 1 cylinder is completely open (valve no. 2).
- check valves in the 3rd cylinder, when the exhaust valve of no. 2 cylinder is completely open (valve no. 4).

420-engines


- rotate the crankshaft in the running direction until the valves in the 4th cylinder are rocking (exhaust closes, inlet opens).
 Check the valve clearance of the 1st cylinder
- Rotate the crankshaft by 1/2 of a turn in the running direction so that valves in the 3rd cylinder are rocking. Check valves in the 2nd cylinder
- continue according to the order of injection:


Injection order	1 2 4 3
Valves rock in cyl. no	4 3 1 2


620-engines

- rotate the crankshaft in the running direction until the valves in the 6th cylinder are rocking (exhaust closes, inlet opens).
 Check the valve clearance of the 1st cylinder
- rotate the crankshaft by 1/3 of a turn in the running direction so that valves in the 2nd cylinder are rocking. Check valves in the 5th cylinder
- -continue according to the order of injection:

Injection order	1 5 3 6 2 4
Valves rock in cyl. no	6 2 4 1 5 3

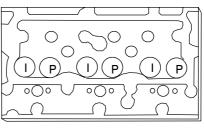

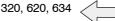

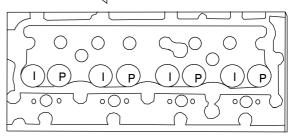

420

I=inlet P=exhaust

Note! With effect from engine serial no. **C6828**, the support strips have been added onto the valve covers. These strips prevent the gasket from moving inwards. At the same time the cover manufacturing accurancy has been improved. Spare part numbers of the covers do not change.



	1, 9, 1992	Model	Code	Page	ĺ
21. Engine	1. 4. 1997	6000-8750	213	1	ĺ

Crank mechanism (Op. no 213)


1. Crankshaft

A. Removing crankshaft

- 1. Split the tractor at the clutch, remove the clutch assembly (and possible turbine clutch) and the flywheel. Remove the engine (see also page 219/1).
- 2. Disconnect the balancing unit lubricating oil pipe from the cylinder block and unscrew the balancing unit fixing bolts. Remove the balancing unit and the lubricating oil pipe (only 420 engines).
- 3. Unscrew the lubricating oil pump pressure pipe fixing screws from the cylinder block. Remove the oil pump and the suction and pressure pipes.
- 4. Remove the flywheel housing.
- 5. Detach the belt pulley/hub from the crankshaft front end (see instr. timing gears).
- 6. Remove the connecting rod bearing caps and push the connecting rods out of the way of the crankshaft.
- 7. Remove the main bearing caps and lift out the crankshaft.


B. Checking crankshaft

1. Clean the crankshaft. Do not forget the oilways.

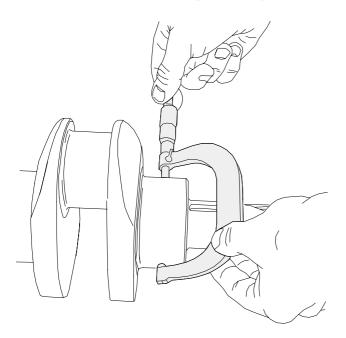

2. Measure the journal wear in several points. Out—of—round, taper or other wear must not exceed **0,03 mm**.


3. Refit the bearing caps with new bearing shells and tighten them to the correct torque. Measure the I.D. with a dial gauge which has been zeroed to the dimensions obtained in point 2. With this method the indicator shows the actual bearing clearance. Measure in several points in case the worn bearing housing is not round.

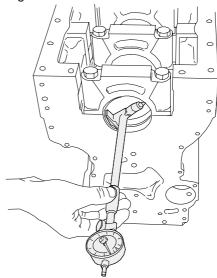

4. If the bearing clearance exceeds **0,18 mm** for main bearings or **0,14 mm** for connecting rod big—end bearings with new bearing shells, the bearing journals on the crankshaft should be ground. Refer to the specifications for the relevant correct undersize and the corresponding bearings. Ensure that the radii are not changed when grinding.

Note! Main bearings are available, which are 1,0 mm oversize (outer diameter) and 0,5 mm undersize (inner diameter). The cylinder block must then be machined to a dimension of 92,000–92,025 mm. The crankshaft must be machined to a dimension of 84,485–84,520 mm. The bearing shell with a hole and an oil groove must be fitted to the cylinder block and the other shell to the bearing cap.

C. Changing crankshaft gears

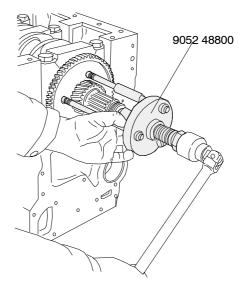


1. Apply puller for the crankshaft gears and pull off both gears.

		Model	Code	Page
21. Engine	1. 9. 1992	6000-8750	213	2

- 2. Clean the seat on the crankshaft with, for example, a wire brush.
- 3. Heat the new gears to 200° C. Tap them onto the shaft with a suitable sleeve or soft drift. Note the position of the key and ensure that the aligning marks on the front gear are visible. Leave it to cool.

D. Changing camshaft ring gear (420-engines only)

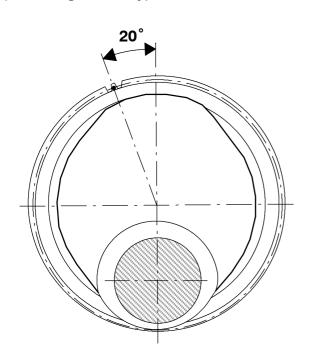


- 1. Mark the position of the ring gear on the shaft.
- 2. Heat the ring gear with a welding torch and drive it off using a suitable drift.
- 3. Heat the new ring gear to max. 250° C. Fit the ring gear with the chamfer facing the crankshaft flange, and with the teeth according to markings or according to figure above. Tap the ring gear down and leave it to cool.

Note! The figure above shows a rear view of the crankshaft and no 2 cylinder big end bearing journal.


E. Fitting crankshaft

1. Clean the oilways, bearing shells and bearing locations. Check that the crankshaft is clean.

- 2. Fit the bearing shells into the cylinder block and the bearing caps. Ensure that the bearing shell clamping claws fit into their notches and that the shells to be fitted in the cylinder block have a hole coinciding with the oil port.
- 3. Lubricate the bearing surfaces and fit the crankshaft. Fit the crankshaft thrust bearings with the lubricating grooves facing the crankshaft.

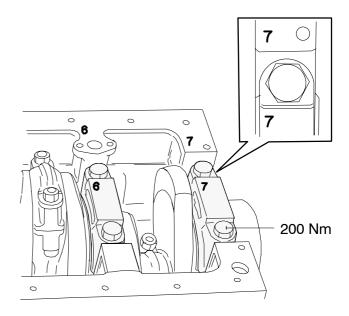

4. Fit the main bearing caps according to their numbering, the rear with thrust bearings provided with guide lugs. Lubricate the bolts and tighten them to $\bf 200~Nm$.

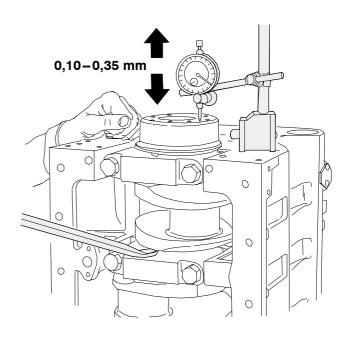

5. Check that the crankshaft can rotate without binding. Check the end float using a dial gauge. The correct end float is **0,10–0,35 mm**. If the end float is too large, oversize thrust bearings should be fitted.

Note! Bearing shells should never be reamed or machined in any other way, nor should the sides of the bearing caps be filed

		Model	Code	Page
21. Engine	1. 9. 1992	6000-8750	213	3

2. Connecting rods and pistons

A. Removing pistons together with connecting rods


Note! Pistons and connecting rods can be removed from the engine when the engine is attached to the tractor by removing the front axle and the oil sump (see page **219/1**).

- 1. Detach the engine and the lubricating oil pressure and suction pipes.
- 2. Detach the cylinder head.
- Scrape off the carbon edge in the cylinder liner. If the turning edge is clearly marked, smooth it down carefully with a scraper.
- 4. Remove the big-end bearing caps and bearing shells. Place the shells in order if they are to be re-used.
- 5. Push up the piston and connecting rod with the shaft of a hammer or similar wooden tool.
- 6. Remove the piston pin snap rings. Push out the pin.

Note! If the piston pin does not move under thumb pressure the piston should be heated to **100°C**.


B. Changing connecting rod bearings

1. Clean the connecting rod and bearing shells. Fit them together and tighten the bolts to 40 Nm+90°.

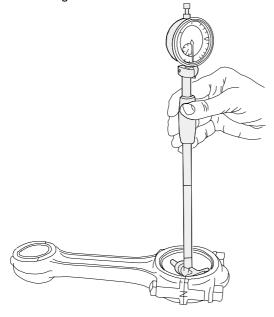

2. Measure the I.D. using a cylinder gauge which has been zeroed to the diameter of the respective bearing journal. If the clearance exceeds **0,14 mm** with new bearing shells, the big – end journals require grinding. Refer to the specifications for the correct undersize and the corresponding bearing. Ensure that the radii at the end of the bearing journals is not altered when grinding.


3. If the piston pin bushing is worn, it should be driven out using a suitable drift.

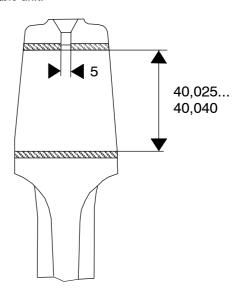

 Drive in the new bushing and ensure that the oil hole is in the correct position. Ream the bushing to 40.025-40.040 mm after it is fitted.

C. Checking connecting rod

The connecting rod is checked in a special fixture, intended for the purpose (e.g. Carl Larsson).

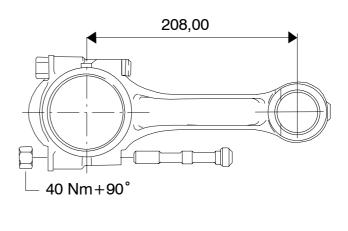


- 1. Fit the big-end bearing caps and tighten the bolts to 40 Nm+90°.
- 2. Fit the connecting rod in the fixture and fit the piston pin which corresponds to that connecting rod.


Model **6000 – 8750**

Code

213


Page 4

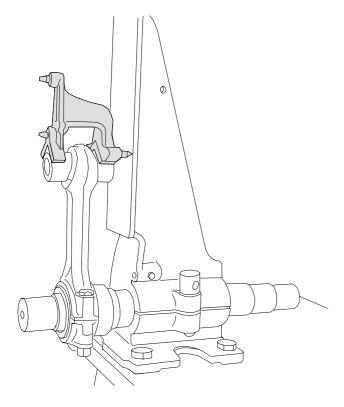

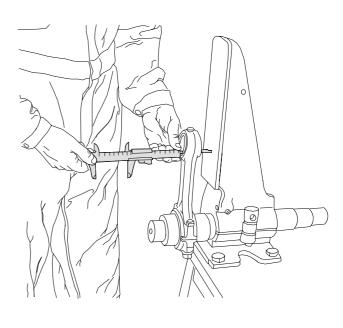

3. Check that the connecting rod is not twisted by positioning the measuring tool with the horizontally placed measuring points against the face of the fixture. 5. Also check the S-bending of the connecting rod by using sliding calipers to measure the distance between the edge of the small-end bearing bushing and the face of the fixture. turn the connecting rod round so that the other side of the connecting rod faces the fixture. Then measure the same distance. The accepted deviation is **0,6 mm**.


max 86,50

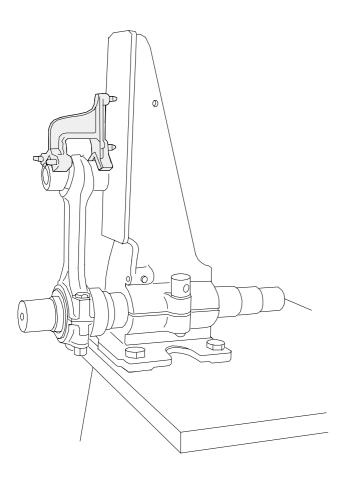

6. Measure the length of the connecting rod bolts. The length should be max 86,50 mm. If the bolt is longer, change it with a new one. It is recommended that the bolts are always changed when they are unscrewed.

D. Connecting rod weight classes

The connecting rods are divided into weight classes with intervals of ${\bf 20}$ g. The weight class (a letter) is stamped on the side face of the connecting rod. All the connecting rods in one engine should be of the same weight class, that is to say the greatest permissible weight difference is ${\bf 20}$ g.

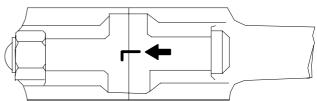

4. Turn the measuring tool round with the vertically placed measuring points against the face, and check the straightness of the connecting rod

·	15. 5. 19 96	Model	Code	Page
21. Engine	1. 4. 1997	6000-8750	213	5

The letters show the weight classes as follows:


A B C D E	Weight 2170–2189 g 2190–2209 g 2210–2229 g 2230–2249 g 2250–2269 g	Part no 8366 52104 8366 52105 8366 52106 8366 52107 8366 52108
H	2270 – 2289 g	8366 52109
I	2290 – 2309 g	8366 52110
J	2310 – 2329 g	8366 52111
K	2330 – 2349 g	8366 52112
L	2350 – 2369 g	8366 52113
M	2370 – 2389 g	8366 52114
N	2390 – 2409 g	8366 52115
O	2410 – 2429 g	8366 52116
P	2430 – 2449 g	8366 52117
R	2450 – 2469 g	8366 52118
S	2470 – 2489 g	8366 52119
T	2490 – 2509 g	8366 52120
U	2510 – 2529 g	8366 52121

E. Changing piston rings


1. Remove the piston rings with piston ring pliers. Do not open the rings more than necessary. If the rings are to be used again ensure that they are fitted in the same groove.




2. Clean the piston ring groove and measure the piston ring clearance, which must not exceed **0,15 mm**. Determine whether too large a clearance is due to worn rings or a worn groove. Change worn parts.

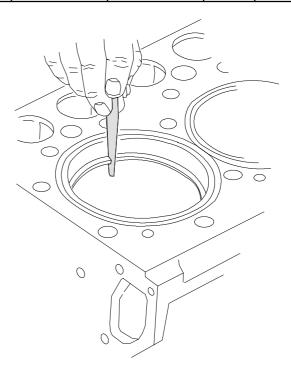

- 3. Measure the piston ring gap by pushing one piston ring at a time into the cylinder bore. The piston ring gap must not exceed 1 mm on 1. and 3. piston rings and 1,5 mm on 2. piston ring.
- 4. Fit the piston rings on the piston using the piston ring pliers. Ensure that the rings are fitted in the correct groove and that "TOP", or the manufacturer's designation, faces upwards.

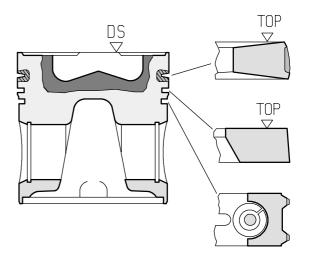

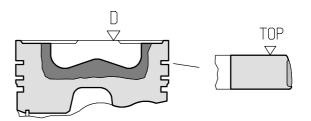


Note! The uppermost ring is square on tractors 6000, 6200, 6300, 8000R, 8000, 8100, 8050 and 8150. The uppermost ring is wedge—shaped on tractors 6100, 6400, 6600, 6800, 8200, 8400, 8450, 8550, 8750.

21. Engine	1.9.1992	Model	Code	Page
	1. 1. 1994	6000-8750	213	6


F. Checking pistons

Check the condition of the pistons and piston pins. Pay special attention to possible cracks on the edge of the combustion chamber and on the upper edge of the piston pin hole. Measure the diameter of the piston at the point shown in the figure below. Renew a piston if needed.

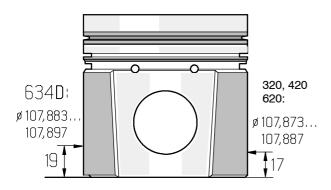

G. Fitting piston pin

1. Place the connecting rod inside the piston and push the piston pin into place.

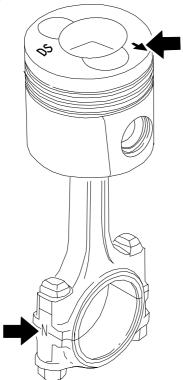


Note! The combustion chamber and the weight class letter should be on opposite sides!

2. Fit the piston pin circlips. Ensure the the circlips are pressed correctly into the grooves. The circlip ends must point upwards.

H. Fitting piston together with connecting rod.

- 1. Check that the bearing locations are clean and place the bearing shells in the connecting rod and bearing cap. Note the position of the bearing shells.
- 2. Lubricate piston, rings and cylinder bore. Ensure that the piston ring gaps are spread around the piston.

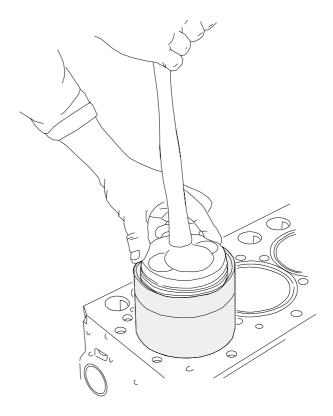

- 3. Fit the piston with the marking on the connecting rod (weight class) facing the camshaft (an arrow on the piston must point forward).
- 4. Lubricate the big end bearing journal and bearing shells, and push the piston down. Fit the bearing cap so that the notches for the guide lugs are in the same side. Tighten the connecting rod bolts to 40 Nm+90°.
- 5. Check that the connecting rod has sufficient end float on the big end bearing journal.

		Model	Code	Page	l
21. Engine	1. 9. 1992	6000-8750	213	7	

3. Balancer unit, 420-engines


A. Removing and dismantling balancer unit

- 1. Remove the engine (**Note!** The balancer unit can also be detached when the engine is attached to the tractor. In this case, remove the front axle and the oil sump, see also page **219/1**).
- 2. Disconnect the lubricating oil pipe of the balancer unit.
- 3. Remove the balancer unit. Take care of any shims.
- 4. Loosen the locking screws and press out the shafts in the direction of the locking screws. Remove the counterweights and thrust washers.
- 5. Clean all parts.

B. Reconditioning balancer unit


Check the shafts, gear wheels and bushings for wear and damage.

- 1. If one of the gear wheels is damaged, change both counter weights as a complete unit. The gear wheels are not available separately as a spare part.
- 2. Remove, if necessary, the old bearing bushings with a suitable drift. Before removing them, mark the position of the bushing oil groove on the counter weigh. Press in new bushings in the correct position. After fitting the bushings should be reamed to a correct dimension, see Specifications.

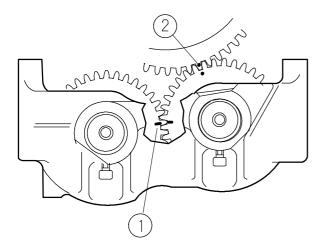

- 1. Synchronization marking (notch)
- 2. Marking against crankshaft (punch mark)

4. Place the weights in the body, observing the notch markings. The gear wheel with the punch mark runs against the crankshaft and should therefore be placed highest. Insert the shafts, remembering the thrust bearings. Apply thread lock fluid Loctite 270 to the locking screws, and lock the shafts.

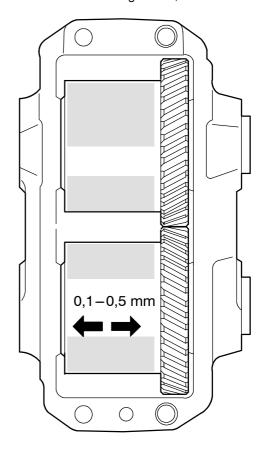


4. Check that the tooth backlash is 0,05-0,25~mm and that the end float is 0,1-0,5~mm

	15. 5. 19 96	Model	Code	Page
21. Engine	1. 4. 1997	6000-8750	213	8

C. Fitting balancer unit

1. Fit the tension pins in the balancer unit body.

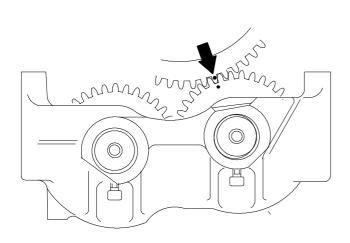

- 2. Turn the crankshaft and weights so that the markings agree, and lift the unit into place.
- 3. Tighten the bolts to **60 Nm**. Check that the tooth backlash between the crankshaft and counterweight is **0,1 0,3 mm**. The backlash can be increased by placing shims 0,2 mm thick (order no 8361 19920) between the cylinder block and balancer unit body. One shims (0,2 mm) changes tooth backlash about 0,07 mm.
- 4. Fit the lubricating oil pipe, using new seals.
- 5. Fit the engine.


4. Rubber vibrations damper on 8000R, 8000, 8100, 8400 and 8050-8150

The outer circumference of the vibration damper (belt pulley) no 8368 46440 can twist in relation to the hub. For this reason alignment marks have been added to the damper front face, which indicate the possible twisting.


If the twisting has occured and the difference of the alignment marks is more than 1,5 mm, the vibration damper should be changed.

Note! On engines, that do not have the alignment marks, the condition of the vibration damper is checked according to instruction A. The damper should be changed at intervals of 4000 running hours.

A. Checking element of the rubber damper

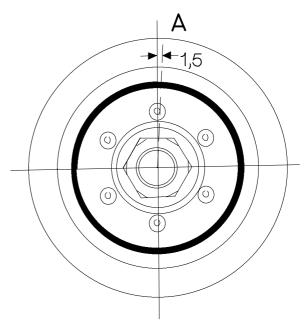

1. Check the alignment marks (A) on both sides of the rubber element. If the difference is more than 1,5 mm, change the damper for a new one.

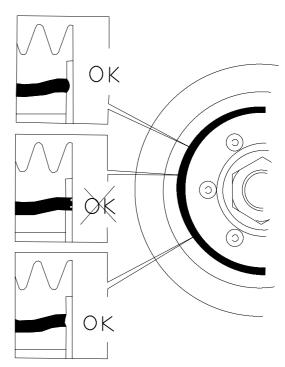

- 2. Check also the condition of the rubber element:
- If rubber pieces have been loosened from the element or
- if rubber has been pressed to the depth of more than 3,5 mm or
- if the outer circumference is slack or it moves in the direction of the shaft, change the damper

Note! On 8200 tractor there is a viscous vibration damper, which does not require maintenance. However, check that the damper does not have flaws caused by external shocks. Tractors 8450, 8550 and 8750 have also the viscous damper.




	1.1.1994	Model	Code	Page
21. Engine	1. 8. 2000	6000-8950	214	1

Timing gears (Op no 214)

A. Removing timing gear casing

As the timing gear casing forms a seal against the oil sump, the casing cannot be removed without first removing the front axle and the oil sump (see page 219/1 for working order).

- 1. Detach the engine (or the oil sump).
- 2. Remove the cooling radiator, alternator and the fan belt (if not removed earlier).

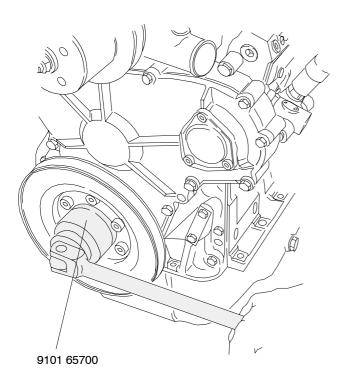

3. Loosen the crankshaft nut (special tool 9101 65700 for 320, 420, 620 engines and tool 9024 55800 for 634 engines) and remove the belt pulley/hub.

Note! Warm the nut with a hot—air blower before unscrewing (locking fluid. Do not damage the seal). The thread is normal RH thread. Support the key so that it cannot slip (600 Nm/1000 Nm). Rotation of the crank shaft can be prevented by fastening a support on the hub (remove the belt pulley and fasten the support to the hub) or you can use an air powered nut opener, and the crankshaft does not rotate. When needed, the hub is removed with an extractor.

Note! On 620 – engines the belt pulley must be removed before unscrewing the nut.

- 4. Remove the timing gear casing cover and the oil deflector ring at the front end of the crankshaft.
- 5. Remove the injection pump.

Note! If the timing gear casing is not to be changed, the injection pump can remain in place. In which case disconnect all leads and pipes from the pump.


- 6. Unscrew the idler gear bolts (17 and 22 mm). Remove the flange, gear wheel and bearing journal.
- 7. Extract the camshaft.

Note! If the cylinder head and valve mechanism have not been removed, the tappets must be prevented from falling down, see **Op. 212 2B**.

- 8. Remove the timing gear casing (13 mm). Ensure that all sealing surfaces are not damaged.
- 9. Remove the crankshaft front sealing ring from the front casing and clean all the parts that have been removed.

B. Reconditioning idler gear


If the idler gear bushing is changed, press in a new bushing so that its rear edge is **0,1–0,25 mm** inside the gear wheel rear edge (see picture on next page).

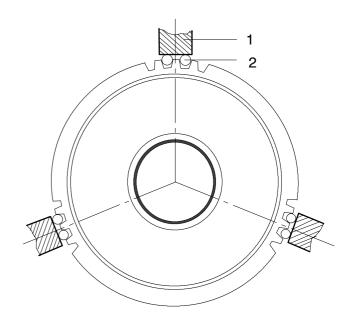


- 1. Chuck of lathe
- 2. Roller ø=5 mm

Machine the idler gear bushing inner diameter to a correct dimension after fitting. Centre the idler gear according to figure above so that tooth backlash is kept the same.

	Model	Code	Page
1. 9. 1992	6000-8750	214	2
	1. 9. 1992	1. 9. 1992 Model 6000 – 8750	6000-8750

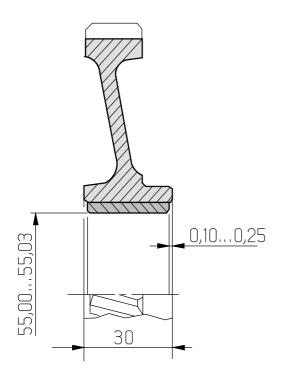

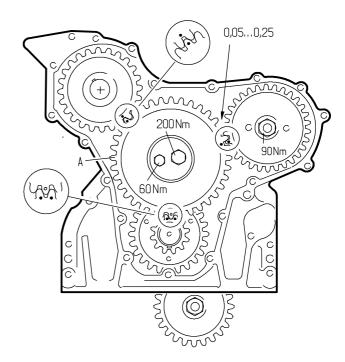


C. Fitting timing gear casing


The position of the timing gear casing and cover is determined by two tension pins. Therefore centring should not be undertaken in connection with fitting. However, the tooth backlash between the different gears should be checked. Casing and covers that are delivered as spare parts also have holes for the tension pins already machined.

- 1. Fit the casing with a new gasket against the cylinder block. Drive in the tension pins with drift 9025 98700. Tighten bolts and nuts.
- 2. Fit the injection pump together with gear wheel (if removed).
- 3. Lubricate the camshaft bearings and insert the shaft in the cylinder block. Release the pushrods and tappets if they have been suspended.


4. Fit the idler gear with shaft stud and ensure that the markings are in the correct position. Fit the washer and tighten the bolts to the correct torque.

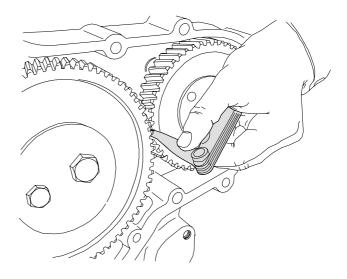


5. Check the tooth backlash which should be 0,05-0,25 mm.

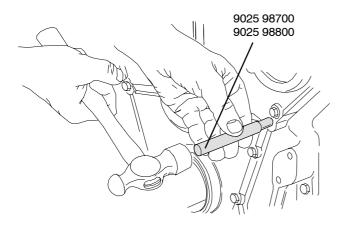

6. Fit the oil deflector ring on the crankshaft and fit the timing gear casing cover using a new gasket. Drive in the tension pins with drifts 9025 98700 and 9025 98800 respectively (the tubular pin round the screw stud). Tighten bolts and nuts.

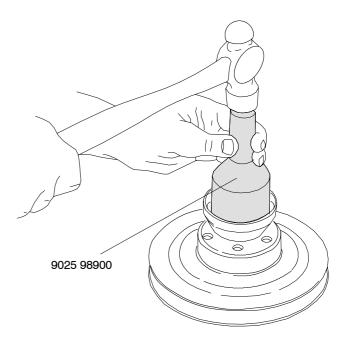


8. Fit the dust shield on the crankshaft V – belt pulley hub, if it has been removed. Use drift 9025 98900.

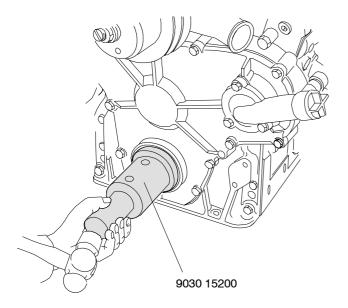


7. Fit the protective plate into the seal location and fit the crankshaft front seal with special tool 9030 15200.

Note! The crankshaft front oil seal can be changed while the engine is attached to the tractor. In this case, remove the cooling radiator and belt pulley/hub at the front end of the crankshaft.

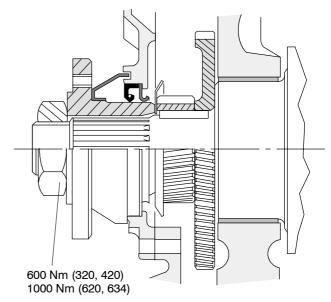

 - 9. Lubricate both the seal and sealing surfaces and fit the crankshaft V-belt pulley with hub.
- 10. Lubricate the crankshaft nut threads. Tighten the nut to **600 Nm** on 320 and 420 engines and **1000 Nm** on 620 and 634 engines.
- 11. Fit the other detached parts.






	1, 10, 1999	Model	Code	Page
21. Engine	1. 8. 2000	6000-8950	215	1

Lubricating system (Op no 215)


A. Reconditioning of oil relief valve for lubricating oil pressure

Note! The latest relief valve, see page 215/4.

If the engine lubricating oil pressure is insufficient or if it varies, the relief valve should be checked after first checking the oil level.

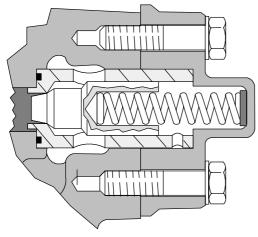

- 1. Remove the cover over the valve (13 mm) and spring. Take care of the washer between the cover and spring. Remove the valve insert together with the valve cone and ensure that the o-ring is also removed.
- 2. Clean the parts and check that the valve cone slides freely in the insert and that the sealing surface are undamaged. Minor damage can be adjusted, but in general, damaged parts should be changed. Scrape off any remains of the gasket.
- 3. Assemble the valve with a new o-ring and insert it in the cylinder block. Place the washer and spring in the cover and fit it with a new gasket.

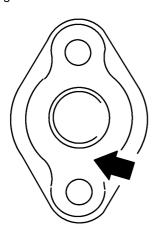


4. Note that the relief valve cover is not symmetrical. The greater distance between the spring housing and bolt should be turned downwards.

NOTE! The relief valve spring is shorter on tractors, which have the cooling nozzles for the pistons (8400, 8450, 8550, 8750). The valve cone has been changed for a new one in the tractor production.

B. Removing and dismantling lubricating oil pump

Note! Concerning the latest type oil pump in 6-cyl. engines from engine no. **J7034** incl., see page **215/5**.

- 1. Remove the engine (or detach the oil sump, see page 219/1).
- 2. Remove the oil pump suction and pressure pipe.
- 3. Remove the oil pump together with any shims between the pump and the cylinder block.
- 4. Remove the pump cover and the gasket. Remove the gear on the dead axle.
- 5. Clamp the pump gear across the teeth in a vice fitted with soft jaws, and loosen the drive gear nut. Knock the gear wheel off by hitting the end of the shaft with a soft hammer. Pull out the drive shaft—gear wheel
- 6. Clean the parts and check for wear and other damage. Compare with the specifications. Change damaged parts and all seals.

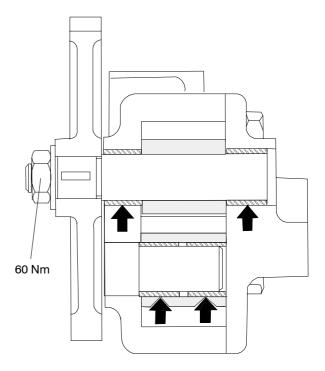

7. On 620—engines the bearing points are provided with separate bearing bushings. If You change the bushings, machine them to dimension of **18,000—18,018** after fitting.

Note! With effect from engine ser. no. C1474 (320), C1328 (420) and C1133 (620) the engine lubricating oil pump has been changed.

The fitting between gear and shaft has been changed from cylindrical type with key to a taper without key.


As a spare part the complete new pump is exchangeable with the earlier pump. The new drive gear and the shaft can be fitted in pairs on the earlier pump.

https://tractormanualz.com/


	1, 6, 1999	Model	Code	Page
21. Engine	1. 8. 2000	6000-8950	215	2

C. Assembling and fitting lubricating oil pump

- 1. Fit the gear wheels in the pump body. Fit the cover using a new gasket. Partly tighten the bolts. Rotate the pump shaft and tap the side of the cover lightly until the position is reached where the shaft rotates most freely. Tighten the bolts and check that the shaft still rotates freely.
- 2. Fit the key and drive gear onto the shaft (tapered joint without key on the later pumps). Apply Loctite 242 onto the nut threads and tighten the nut to **60 Nm**. Remember the washer under the nut.

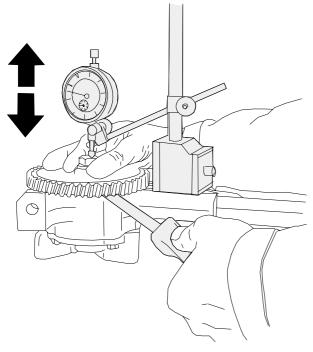

3. Fasten the oil pump in a vice and check the end float between gear and pump housing. The clearance which should be **0,03-0,11 mm**, is adjusted by the number of gaskets between the cover and body.

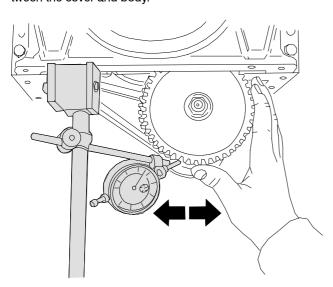


4. Fit the pump and check the tooth backlash against the crankshaft gear. The clearance, which should be **0,05–0,25 mm**, is adjusted with shims between the pump body and the cylinder block (shims 0,2 mm, order no 8360 07871). One shims increases/decreases the backlash about 0,07 mm.

Note! When measuring the tooth backlash, the engine should be the correct way up as the crankshaft bearing clearance affects the tooth backlash.

- 5. Connect suction and pressure pipes together with new seals.
- 6. Fit the engine (or the oil sump).

D. Fitting oil sump gasket

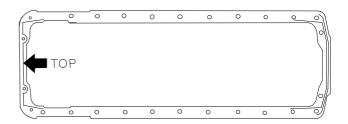


Fit the oil sump gasket with silicone stripes against the cylinder block.

E. Lubricating oil cooler on 6800, 6850, 8400 and 8350-8950

The lubricating oil cooler is placed in the oil filter housing.

1. The engine coolant should be drained before removing the lubricating oil cooler.

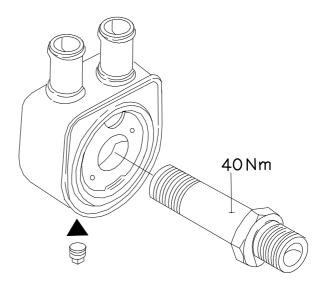

- 2. Fit new sealing rings. Fit the cooler with draining plug turned downwards. Connect coolant pipes in the correct way.
- 3. Apply locking fluid to the nipple (the thread which attaches to the filter head) and tighten it to a torque of **40 Nm**.


	1, 9, 1992	Model	Code	Page
21. Engine	1. 6. 1999	6000-8750	215	3

E. Lubricating oil quality requirements

1. QUALITY (API-CLASS)

naturally aspirated engines
 CCMC D2
 API CC ¹) ACEA E2-96
 API CD ACEA E2-96/E3-96

NOTE! "Valtra Engine" oil 10W30 or 15W40 is recommended for engines (see page 130/4).

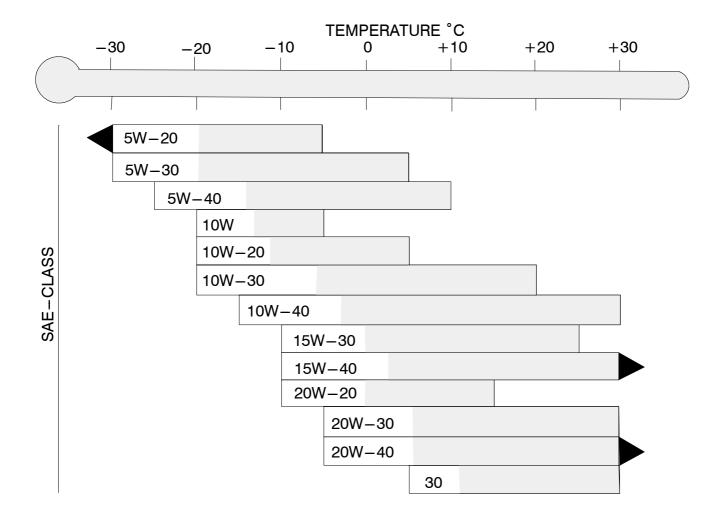


¹⁾ API-CD can also be used in conventionally aspirated engines.


	1,6,1999	Modell	Kod	Sida
21. Engine	1. 10. 1999	6000-8950	215	4

F. Cooling nozzles for pistons, 8400, 8450, 8550, 8750 and 8950

The cooling nozzles can be removed after removing the oil sump. The nozzles have a ball valve with an opening pressure of 3 ± 0.25 bar.

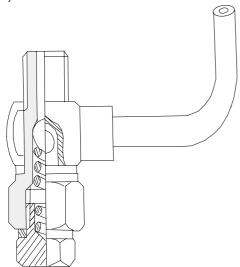


1. Change the valve if necessary. Detach the valve from the engine and remove the nozzle pipe. Fit a new valve.

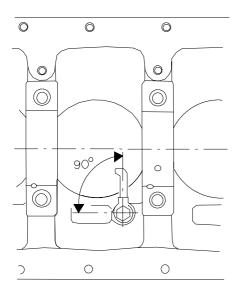

2. Fit the nozzle pipe at the angle of 90° to the centre line of the crankshaft according to the above picture. Tighten the valve to **30 Nm**. Ensure that the pipe does not touch the pistons or connecting rods when the engine is running.

G. Latest lubricating oil pressure relief val-

J7595 – (6000–8150), without piston cooling nozzles. **J14016** – (8400–8950), with piston cooling nozzles

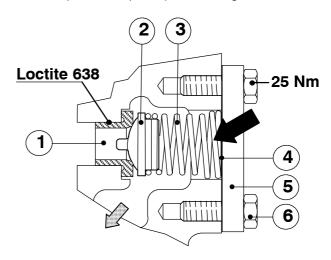


- 1. Valve seat insert
- 2. Valve head
- 3. Spring (engines without the piston cooling nozzles, dark colour, if cooling nozzles, colour shiny)

Note! The spring expanded end towards the valve head. In autumn 99, the spring end shape will be changed to prevent wrong mounting of the valve.

- 4. Gasket
- 5. Cover
- 6. Bolt, 2 pcs

Note! As a spare part the earlier complete valve can be replaced with the new valve fitting kit.

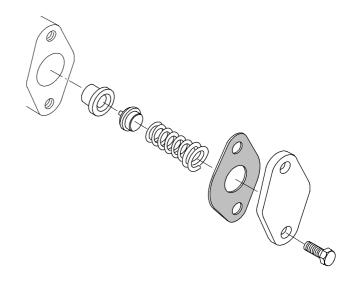

		Model	Code	Page
21. Engine	1. 8. 2000	6900-8950	215	5

F. Lubricating oil pump from engine no. J7034 incl. in 6-cyl. engines


From engine no. **J7034** incl. the lubricating oil pump in 620— and 634— engines has been replaced with 645—engine's pump. Simultaneously pressure and suction pipes have been changed.


The pump of 645 – engines can be fitted on earlier manufactured 620 – and 634 – engines, when the new suction and pressure pipes with seals are fitted. The original pump is also delivered for the earlier manufactured engines.

The pump of 645 – engine has the same adjusting and machining values as the pump of 620 – engine:


- gearwheel end float, 0,03-0,11 mm
- tooth backlash, 0,05-0,25
- the bearing bushings are machined after fitting to 18,000-18,018

Note! Repair instructions for the pump of engines 620 and 634 are the same as 645-pump, see instr. **B** and **C**. Pump fixing bolt tightening torque is **60 Nm**.

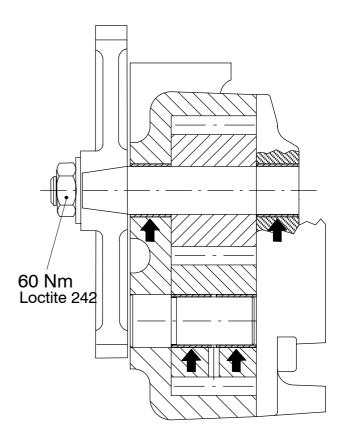


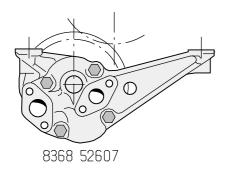

Earlier pump in 620-engines: 6900, 8000, 8050-8200 8450 (normal wheel base) 8050Hi-8350Hi

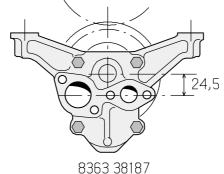

Earlier pump in 634-engines: 8450 (long wheel base) 8450Hi (long wheel base) 8550, 8750, 8550Hi

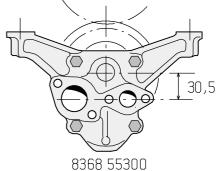

Present pump in 6-cyl. engines from J7034 incl.





		Model	Code	Page
21. Engine	1. 9. 1992	6000-8750	216	1

Inlet and exhaust system, turbocharger (Op no 216)

An engine that is equipped with a turbocharger is a great deal more sensitive to disturbances and impurities in the inlet and exhaust systems than a conventionally aspirated engine. Therefore special attention should be given to the whole inlet and exhaust system.

A. Checking air cleaner

The engine performance and length of service life depend to a great extent on the state of the air cleaner. A defective air cleaner allows impurities to pass through, which in time damage the turbocharger and the engine. A blocked air cleaner lowers the engine output and also causes oil leakage through the sealing ring on the turbocharger shaft.

Note! The safety filter inside the main filter should not be removed unnecessarily, for checking or cleaning. The safety filter must not be cleaned, but should be changed once a year or when necessary (see Operator's Manual)

B. Checking inlet and exhaust system

Important! Leaks in the inlet or exhaust system markedly lower the effect of the turbocharger. Because of the pressure, even small leaks in the manifold or in the turbine inlet contact flange quickly increase in size. For this reason all leaks must be dealt with immediately.

- 1. Inspect the pipes and sealing surfaces between the air cleaner and the turbocharger, as well as between the turbocharger and the induction manifold. If the induction manifold is dusty on the inside, there is a leak in either the air cleaner or the induction pipes. Remedy the leak.
- 2. Clean the induction manifold sealing surface. Check that the sealing surface is flat using a straight ruler. If the surface is not flat or it has scratches, machine or renew the induction manifold. On 620 engines ensure that the cylinder heads are parallel.
- 3. Fit a new gasket and fasten the induction manifold. Tighten the manifold fixing screws to a torque of **30 Nm**. Fasten the air pipes carefully..


- 4. Check that the exhaust manifold is air tight. Tighten the bolts to **50 Nm** and inspect for any damage (cracks, deformation, corrosion etc.). Check also the connection between the turbocharger and the exhaust manifold.
- 5. Remove the manifold if necessary. Clean the sealing surfaces and remove any carbon deposits. Check that the sealing surfaces are flat. If the fastening flanges are twisted or there are scratches on the sealing surfaces, machine the flanges or renew the exhaust manifold.
- 6. Ensure that no loose objects or impurities have entered the exhaust pipe or the silencer. Any such loose objects or impurities can increase the back pressure for the exhaust gases from the turbine wheel.

C. Checking turbocharger

If a fault is suspected in the turbocharger it can be located in the following way:


- 1. Visually inspect the turbine and compressor wheels. The vanes must not show any signs of damage, deformation or wear caused by foreign objects.
- 2. Investigate any oil leaks through the sealing rings on the shaft in the turbine and compressor housing.

N.B! At low idling there is always a certain amount of oil leakage on the compressor side. However, this should not cause too much concern unless the oil consumption is too great.

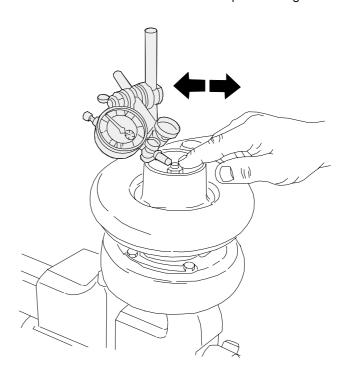

3. Check the turbine shaft running clearance. Place the stylus of a dial gauge against the shaft and move the shaft sideways. refer to the clearance given in the specifications on page 210/9.

		Model	Code	Page
21. Engine	1. 9. 1992	6000-8750	216	2

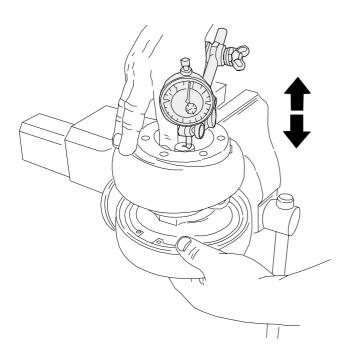

4. Check the shaft end float. Place the stylus of the dial gauge against the end of the shaft and move the shaft axially. Refer to the clearance given in the specifications on page 210/9.

If any defects or wear are confirmed, the turbocharger should be reconditioned.

If the engine does not work correctly and the turbocharger is not defective or too worn, the fault could be traced to one of the following items:


- Blocked air filter
- Leakage in the inlet or exhaust systems. Leaking flange seal
- Defective or wrongly adjusted injection pump.
- Wrongly adjusted throttle linkage
- Defective or wrongly adjusted injectors
- Low fuel pressure (e.g. blocked fuel filter)
- Low compression, wrong valve clearance

	1_9-1992	Model	Code	Page
21. Engine	15. 5. 1993	6000-8750	216	3

D. Reconditioning turbocharger

(Schwitzer S1A, S1B, S2B)

N.B! The same degree of cleanliness should be observed when removing the turbocharger as with repairing the fuel system. Only remove the compressor and turbine covers if the requisite special tools, e.g. for adjusting the balance, are not available. **In general, when the turbocharger is damaged it is more economical to fit a factory reconditioned turbocharger.**

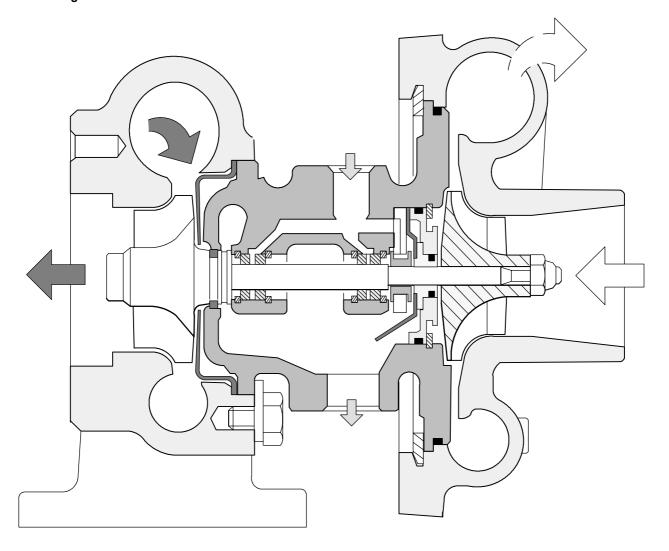

Dismantling turbocharger

- 1. Mark the compressor housing, turbine housing and the bearing housing in relation to each other.
- 3. Remove the compressor housing circlip and remove the housing.
- 4. Unscrew the turbine housing fixing screws and remove the fixing plate. Detach the bearing housing from the turbine housing.

- 5. Hold the turbine wheel at hub and unscrew the compressor wheel nut (left hand thread). Remove the compressor wheel.
- 6. Remove the turbine wheel/shaft carefully by tapping at the shaft end with a soft hammer. Do not bend the shaft.
- 7. Place the bearing housing on a table so that the turbine side is against the table. Remove the support flange circlip.
- 8. Remove the support flange and the oil deflector ring by prying with two screwdriver behind the support flange grooves. Press the deflector ring out of the support ring.
- 9. Remove the oil deflector plate, thrust bearing and thrust sleeve from the bearing housing. Remove the bearing outer circlips and remove the bearings and the inner circlips.

	1.9-1992	Model	Code	Page
21. Engine	15. 5. 1993	6000-8750	216	4

Cleaning parts of the turbocharger

N.B. Use conventional cleaning agents. Do not clean with corrosive substances as parts of the turbocharger may be damaged.

- 1. Wash off all dirt with a detergent solution. Use plastic tools or brush when cleaning aluminium parts.
- 2. Clean all oilways with compressed air. Check that all contact surfaces are clean and in good condition.

Checking parts of the turbocharger

1. Bearing housing

- Inspect the bearing surfaces for damages and wear.
- make sure that the turbine side sealing surface is undamaged.

2. Compressor wheel

 check for bends, cracking or corrosion and possible wear on the wheel rear face. Small faults can be accepted. Change the wheel if damages affect balancing accuracy. Never bend the vanes. Check the balancing accuracy (S1A, S1B: 0,21 gm mm. S2B: 0,36 gm mm).

3. Shaft and turbine wheel unit

- check the bearing point wear, min diameter is S1A, S1B:7,615 mm. S2B: 10,15.
- check the width of the sealing groove, S1A, S1B: max 1,630 mm. S2B: 1,58 mm.
- measure the shaft ovality, S1A, S1B: \max 0,005 mm. S2B: 0,007.
- check balancing accuracy (S1A, S1B: 0,21 gm mm. S2B: 0,36 gm mm), change the part if given values are exceeded.

4. Compressor and turbine housing

 check if there are damages, cracks or overheating faults caused by wheel contact in the housings. Small damage can be accepted, otherwise change the housing.

5. Turbine side rear plate

- change the rear plate if it is bent or cracked.

6. Oil deflector ring

check the groove width on the sealing ring, S1A, S1B: max
 1,226 mm. S2B: 1,58 Check also for other possible damage and wear. Reject worn part.

7. Support flange

Check wear and cracking of the seal ring counter surface.
 Only small wear can be accepted. In general, even a small wear causes sealing problems.

Assembling the turbocharger

It is recommended to use a repair kit when assembling the turbocharger. This kit includes necessary seals and parts which are exposed to wear.

- Fit the inner circlips into the bearing housing. Lubricate the bearing points. Push the bearings into place and fit the outer circlips.
- 2. Fit a new sealing ring into the groove and push the rear plate onto the shaft against the turbine wheel.
- 3. Lubricate the shaft bearing points and the sealing ring. Push the shaft into the bearing housing. Do not damage the sealing ring.
- 4. Place the bearing housing vertically resting on the turbine housing.
- 5. Fit the thrust sleeve into the thrust bearing and place the parts into the bearing housing according to the position of the guide pins. Place the oil deflector plate onto the thrust bearing.
- 6. Fit a new o-ring into the groove of the support flange. Fit a new o-ring onto the deflector ring. Press the deflector ring into the middle of the support flange. Do not damage the sealing ring and its counter surface.
- 7. Lubricate the o-ring and push the support flange into the bearing housing. Fit the circlip the chamfered side outwards.
- 8. Push the compressor wheel onto the shaft. Tighten the shaft nut to a torque correct torque. Secure the nut with locking fluid Loctite 601.
- 9. Pass the compressor housing circlip over the bearing housing the circlip chamfered side towards the turbine housing. Fit the o-ring into the groove on the bearing housing. Fit the compressor housing according to the markings. Fit the circlip into groove.
- 10. Fit the bearing housing and the turbine housing according to the markings. Fit the fixing plate and tighten the screws to **22 Nm** (S1A/S1B) or **17 Nm** (S2B).

	1, 11:1998	Model	Code	Page
21. Engine	1. 9. 2002	6000-8750	216	5

E. Fitting turbocharger

Locate the cause of the defects on the turbocharger. Remedy the fault before fitting the new turbocharger.

In order for the turbocharger to work satisfactorily, it is important that the engine oil is in good condition. Likewise the oil should be to the correct quality specification. The air filter and oil filter should be serviced according to the handbook specification.

The setting of the injection pump critically affects the function of the turbocharger. The injection pump should be adjusted according to the manufacturers instructions.

- 1. Check the tightness of the induction and exhaust manifolds, and that they are securely fastened. Ensure that there are no loose carbon or rust particles, or other foreign objects in the manifolds.
- 2. Connect the turbocharger to the exhaust manifold and tighten down using a new gasket.
- 3. Connect the induction pipe and the silencer.
- 4. Pour clean engine oil into the bearing housing through the inlet oilway. This is very important in order to ensure that the turbocharger is lubricated at the time of starting.
- 5. Connect the pressure and return oil pipes. Use a new seal. Check that there are no tensions in the pipes when tightening.
- 6. Before starting, pull out the stop control and crank the engine over with the starter motor so that the oil pressure rises. Start the engine and check that there are no leaks.

F. Adjusting by-pass turbo (S1BG)


The by-pass turbo is fitted on 6400DW, 6400 DWRE, 6800DWI, 8450 DWR and 8450 DWRE tractors and also on HiTech tractors 6550 DWRE, 6650 DWRE, 6750 DWRIE and 6850 DWRIE.

N.B.: Normally the adjustment is unnecessary.

The following equipment are needed:

- surface table and fixing device for the turbo
- dial gauge equipped with magnetic base
- compressed air and pressure controller
- pressure gauge, reading accuracy 0,015 bar
- 1. Fasten the turbocharger on the surface table. Fasten the regulator rod to the by-pass hole lever but do not fit the circlip.
- 2. Place the dial gauge stylus against the regulator rod end and zero the gauge reading (ensure that the by pass hole is closed).
- 3. Connect compressed air to the pressure controller. Increase pressure progressively (avoid sudden pressure rise) until the dial gauge records **0,4 mm** movement in the rod.

Note! This movement removes clearances and should be happened at a pressure of max. 1,035 bar (8450: 0,9 bar). When pressure further increases, starts the actual opening movement which opens the by—pass passage.

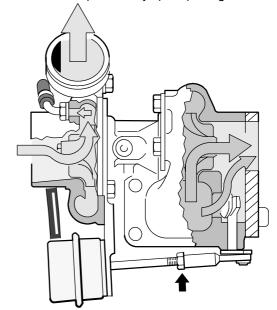

- 4. Adjust, if necessary, the rod length until the correct pressure value has been reached.
- 5. When the adjustment is correct, tighten the rod locking nut.
- 6. Fit the rod circlip and the boost pressure pipe.


	1_171.1998	Model	Code	Page
21. Engine	1. 9. 2002	6800	216	6

G. Intercooler on 6800 tractor

Valmet 6800 tractor has an intercooler, which cools the engine intake air. Air density is greater in lower temperatures and more air can be charged into the engine combustion cambers at which time fuel combustion happens more effectively.

Engine coolant circulates in the cooling element of the intercooler and engine intake air is blown thought the element at which time the air, which is in working temperature, cools even from $+150\,^{\circ}\text{C}$ down to $+95\,^{\circ}\text{C}$.

Note! On tractor 8400 (model 2001) and on HiTech-tractors 6750 and 6850 (420 DWRIE) and on 8350 and 8950 (634 DSBIE or ESBIE) there is fitted an intercooler.

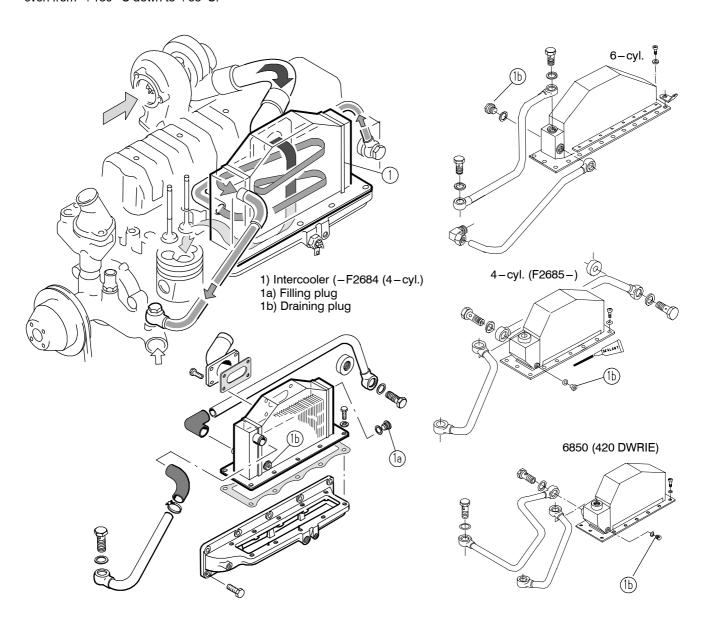

The intercooler increases engine coolant volume (compared with the normal model) by about one litre (4-cyl. engines) or about 2,5 litres (6-cyl. engines).


-F2684 (4-cyl.): When filling the cooling system, the intercooler should be filled separately via plug **1a**. Draining is made via draining plug **1b**.

F2685 – (4–cyl. and 6–cyl.): When filling the cooling system, slacken the intercooler upper pipe union, so that air can flow out of the cooler (draining plug 1b. These do not have the filling plug).

Note! The intercooler has been modified from engine number F2685 incl. The new intercooler is interchangeable with the earlier one, if all modified parts are changed (e.g. intake manifold and pipes). As a spare part the earlier type intercooler is still delivered.

		Model	Code	Page
21. Engine	15. 5. 1996	6800	216	7

H. Exhaust pipe on 6800 tractor

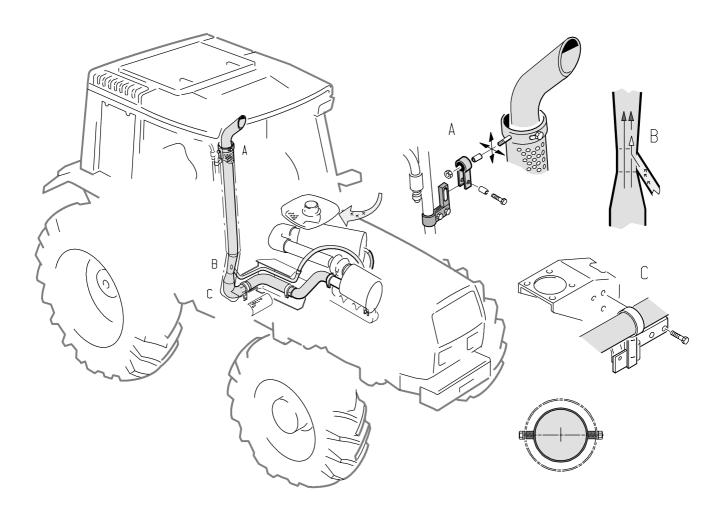

On 6800 tractor there is as standard an exhaust pipe which has been drawn up along the cab LH side front pillar. Near the cab there is a protective outer jacket round the exhaust pipe. The jacket has been centralised with aid of screws.

This type exhaust pipe can also be fitted on 6300 – 6600 and 8050 – 8750 tractors. The pipe is different on tractors which have the by – pass turbocharger (6400 DW, 6800 DWI and 8450 DW) compared with tractors with a conventional turbocharger (CD – engines).

IMPORTANT!

Concerning tractors with the ejector pipe:

When a suction apparatur for exhaust gases is used in work shop, check that its suction effect is high enough and it does not restrict the upper end of the exhaust pipe. Otherwise at high revs exhaust gases can flow through the ejector pipe into the air filter housing and damage the filter and the filter housing will become sooty.





		Model	Code	Page
21. Engine	1. 9. 1992	6000-8750	219	1

Working orders

A. Crankshaft seals

(Rear seal, see page 211/6). (Front seal, see page 214/3).

- Before changing the crankshaft rear oil seal, split the tractor at the clutch (see Op 411 1A) and detach the clutch assembly (also possible turbine clutch) and the flywheel.
- When changing the crankshaft front seal, drain the coolant from the cooling system. Remove the cooling radiator and the belt pulley/hub at the front end of the crankshaft.

Note! The cooling radiator can also be detached so that the entire front weight bracket is detached together with parts which are fitted on it.

B. Cylinder head and valve mechanism

(Cylinder head and valves, see page 212/1) (Rocker arm mechanism, see page 212/5)

- Before removing the cylinder head, remove the engine hood plates, engine coolant and detach all parts which are attached to the cylinder head. After that the cylinder head can be removed.
- Rocker arm mechanism is accessible after removing the valve cover.
- Pushrods can be removed after removing the valve cover and the rocker arm mechanism.

C. Pistons and connecting rods

(Pistons and connecting rods, see page 213/3)

If only pistons/connecting rods are to be changed, the simplest working order is as follows:

- Drain the engine coolant and the engine oil. Detach the front weight bracket together with parts which are fitted on it (e.g. radiator).
- Remove the front axle. Support the engine and tractor frame and unscrew the oil sump fixing bolts and remove the oil sump (unbolt only lower bolts at the frame joint at the clutch).
- Remove the cylinder head or heads on 620-engines.
- Loosen the connecting rod big-end bearing caps and push the pistons together with connecting rods upwards and remove them through the cylinder bore.

D. Lubricating oil pump

(Lubricating oil pump, see page 215/1)

- Drain the engine coolant and the engine oil. Detach the front weight bracket together with the parts which are fitted on it (e.g. radiator).
- Remove the front axle. Support the engine and tractor frame and unscrew the oil sump fixing bolts and remove the oil sump (unbolt only lower bolts at the frame joint at the clutch).
- The oil pump can now be removed from the lower face of the cylinder block.

E. Balancer unit (only 420-engines)

(Balancer unit, see page 213/7)

- Drain the engine coolant and the engine oil. Detach the front weight bracket together with parts which are fitted on it (e.g. radiator).
- Remove the front axle. Support the engine and tractor frame and unscrew the oil sump fixing bolts and remove the oil sump (unbolt only lower bolts at the frame joint at the clutch)
- c) The balancer unit is now accessible and can be detached from the cylinder block lower face.

F. Crankshaft

(Crankshaft, see page 213/1)

- Split the tractor at the clutch. Remove the clutch assembly and possible turbine clutch and the flywheel.
- Remove the engine coolant and the radiator. Detach the engine.

G. Cylinder liners

(Cylinder liners, see page 211/1)

- Drain the engine coolant and the engine oil. Detach the front weight bracket together with parts which are fitted on it (e.g. radiator).
- Remove the front axle. Support the engine and tractor frame and unscrew the oil sump fixing bolts and remove the oil sump (unbolt only lower bolts at the frame joint at the clutch).
- Remove the cylinder head or heads on 620-engines.
- Loosen the connecting rod big-end bearing caps and push the pistons together with connecting rods upwards and remove them through the cylinder bore.
- Remove the cylinder liners upwards.

		Model	Code	Page
21. Engine	1. 9. 1992	6000-8750	219	2

H. Timing gears

(Timing gears, see page 214/1)

As the timing gear casing forms a seal against the oil sump, the casing cannot be removed without first removing the oil sump. The timing gear casing cover, however, can be removed without removing the oil sump.

- Remove the oil sump if the timing gear casing is to be removed. Otherwise remove the cooling radiator only.
- Remove the fan, alternator and the v-belt.
- Unscrew the crankshaft nut and remove the belt pulley/ hub. On 620-engines, the belt pulley should be removed before unscrewing the nut.
- Remove the timing gear casing front cover and remove the oil deflector ring at the front end of the crankshaft.
- Remove the fuel injection pump if the timing gear casing is to be removed. Otherwise disconnect all the pipes from the fuel injection pump.
- The timing gears are now accessible.

In addition, the following steps should be taken if the entire timing gear casing has to be changed:

- Unscrew the idler gear fixing bolts and remove the idler gear.
- Pull out the camshaft from the cylinder block.

Note! If the cylinder head and valve mechanism have not been removed, the tappets must be prevented from falling down when the camshaft is removed, see page **212/5**.

- The timing gear casing can now be removed.

I. Camshaft

(Camshaft, see page 212/5)

Before removing the camshaft the following steps should be taken:

- Remove the timing gear casing cover (see under previous heading H Timing gears).
- Remove the idler gear
- Remove the valve cover and the rocker arm mechanism.
- Support the pushrods (at the same time tappets which are against the camshaft) to the upper position in pairs by using for instance o-rings (see picture on page 212/5).
- Rotate the crankshaft so that the timing markings on the crankshaft gear and the camshaft gear become opposite each other (see picture on page 214/2).
- Pull out the camshaft from the cylinder block.

Note! Take care when fitting the camshaft that the timing marks align.



	1 71.1998	Model	Code	Page
22. Fuel system	1. 6. 1999	6000-8950	220	1

Contents

General	(On	nο	220)
General	UD	110	2201

Specifications	2
Special tools	3
Fuel system, description with Bosch in-line injection pump	4
Fuel system, description with Stanadyne distributor pump	10

Repair instructions

Fuel feed pump and fuel filters, Bosch in-line pump (Op no 222)

A. Bleeding fuel system	1
B. Bleeding Thermostart system	1
C. Measuring fuel feed pressure	1
D. Checking overflow valve	2
F. Changing fuel feed pump valves	2

Fuel injection pump and injectors, Bosch in-line pump (Op no 223)

1
2
2
3
4
5
5
6
7
7
8
9

2. Stanadyne distributor pump

A. Removing distributor pump	10
D. Fuel feed pump E. Injectors F. Adjusting low idling speed	11 11
G. Bleeding Themostart – system H. Delivery pipes I. Dynamic injection timing checking, E–engines	12 12

Specifications, Bosch in-line injection pump

Note! Stanadyne rotary distributuon pump, see page 220/10.

Bosch fuel injection pump

Type (pump/governor), 6000 – 8750	Bosch PESA/RSV
Type (pump/governor), 8950	Bosch P-pump
Injection order:	
_ 320	1-2-3
– 420	
– 620, 634	
Direction of rotation	
Diameter of pump piston	
Stroke	
Injection advance:	,
– 6100 – 6600	19°
– 6800	18°
– 8000, 8100	
– 6000, 8400	
– 8200	
– 8750	
– 8950	
Oil fillings ¹):	
– 320	0,3
– 420	
– 620/634	

Fuel feed pump

Type:	
– 320	Bosch FP/KSG 24 AD 207
– 420, 620, 634	Bosch FP/KEG 24 AD 504
Construction: piston pump, separate hand pump	
Fuel feed pressure (overflow valve opening pressure)	0,7-1,2 bar (70-120 kPa)
Pressure from fuel feed pump (without overflow valve)	2,7 bar (270 kPa)

Injectors (see also page 220/15)

Type	five hole nozzle
6000-8750:	
- Opening pressure	230+10 bar (23 MPa)
– Setting pressure ²)	240 bar (24 MPa)
8950 6300 (model year 2000) 6400 (model year 2000) 8400 (model year 2000)	, ,
- Opening pressure	270+8 bar (27 MPa)
- Setting pressure ²)	278 bar (27,8 MPa)
Sealing ring	

Tightening torques

Injection pump gear nut	90 Nm
Delivery valve retainer	40 Nm
Injector nozzle sleeve	60 Nm
Injector attaching nuts (on studs)	15 Nm


¹⁾ When fitting fuel injection pump.2) Value to be used when adjusting the opening pressure of a new or used injector.


	1.4.1997	Model	Code	Page
22. Fuel system	1. 11. 1998	6000-8950	220	3

Special tools

9052 47800 *)	Pressure gauge for checking delivery valve
9052 48900 *)	Puller for injection pump drive gear
9025 99100 *)	Locator for timing mark on the flywheel
9052 47600 *)	Control pipe for injection timing
9052 99000 *)	Sleeve for limiting control rod travel
9051 71300 *)	Extractor for injectors
8366 62022	Electronic device for checking injection timing (E-engines

*) Same tool as for fuel system on 505-905 tractors.

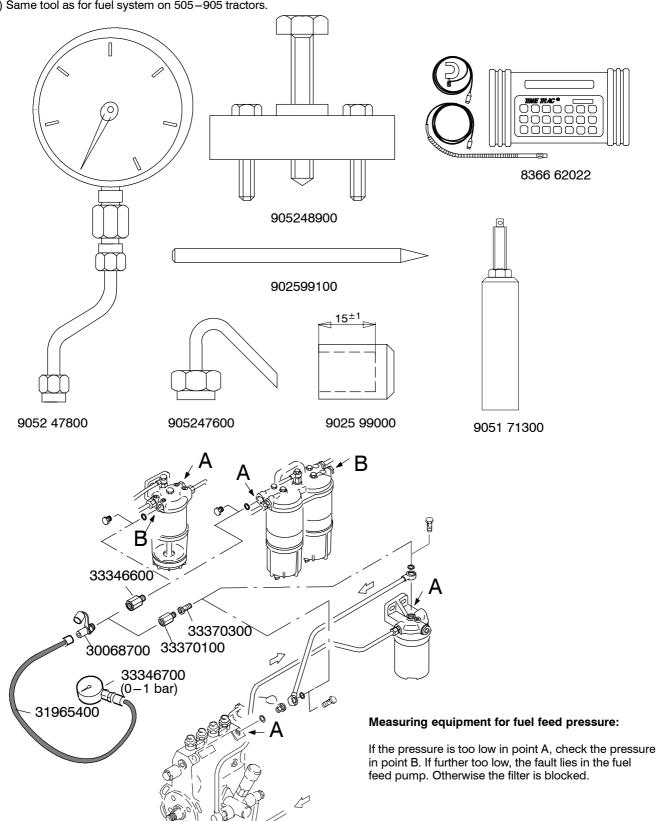

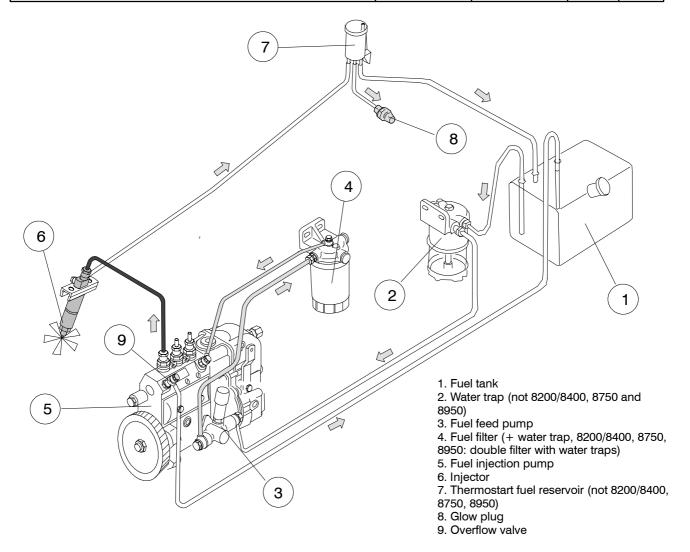

Fuel system, description

Fuel feed pump (3) draws fuel from tank (1) through water trap (2) (not 8200, 8400, 8750, 8950) and forces it through filter (4) to fuel injection pump (5). The fuel injection pump pumps fuel at high pressure through the delivery pipes to injectors (6) which inject the fuel in the form of a fine mist into the combustion chamber.

Excess fuel lubricates the nozzle valve (needle) and flows in return through the thermostart device reservoir (7) (not 8200/8400, 8750, 8950) and then on to the fuel tank. When the thermostart is on (glowing) fuel runs from reservoir (7) through glow plug (8) and is ignited in the induction manifold. Excess fuel returns from the fuel injection pump through overflow valve (9) to the fuel tank.

Important! 8200/8400, 8750, 8950 has not the Thermostart fuel reservoir but fuel flows from the injectors to the injection pump overflow valve from where a pipe goes to the glow plug. 8200/8400, 8750 and 8950 tractors have a combined fuel filter and water trap.

Maintenance

Fuel filter:

 Change the fuel filter at intervals of 100 running hours or yearly.

Water trap:

- Empty/clean the water trap at every 500 running hours.

Fuel tank:

 Empty/clean the fuel tank at every 1000 running hours or yearly.

Injectors

 Reconditioning of the injector should be carried out by an authorised workshop.

Symptoms of dirty or faulty injectors are:

- Knocking is an indication that one of the injectors is faulty. When a cold engine ticks over a certain amount of knocking is unavoidable. If the engine knocks after it has reached normal operating temperature, it is very likely that one of the injectors is faulty. Air in the fuel system can also cause knocking (which should disappear after the system has been bled of air).
- Smoky exhaust gases may indicate impaired performance of the injectors. However, this can also be caused by other faults such as a blocked air cleaner.


The fuel system should always be bled when the fuel system has been emptied (e.g. the fuel tank has been emptied during driving, in connection with maintenance or repair work or after a long idle period).

Fuel injection pump 8 Valmet 6000 - 8400, 8750 and 8950 tractors have a Bosch-make injection pump which is an in-line pump and its basic construction is similar on engines with the different number of cylinders. 2 Fuel injection pump 1. Oil filling plug 2. Governor control lever 3. Hand pump on fuel feed pump 4. Lubricating oil into injection pump 5. O-ring 6. Return of lubricating oil to engine 7. Drive gear 8. Type plate 3 9. Boost control (6800, 8750, 8950) 10. Forced - feed solenoid for starting To intake manifold (6800, 8750, 8950) 11. Indicator plug for adjusting injection timing (6800, 8750, 8950 + all latest tractors, which have a new governor) 10 The fuel injection pump is flange mounted and sealed by one o-ring (5) in the timing gear casing. The injection pump is driven from the crankshaft through an idler gear. The injection pump is connected to the engine force-feed lubrication system through an external pipe (4). Lubricating oil returns to the engine via the hole (6) at the front end of the injection pump.

The fuel feed pressure which fills the high pressure pump elements with fuel is created by a piston pump which is attached to the side of the fuel injection pump. The piston pump is driven from an eccentric on the camshaft of the injection pump. The fuel feed pump supplies more fuel than the injection pump needs. The excess fuel flows through the overflow valve back to the fuel tank. The fuel cools the injection pump and also takes any air bubbles with it back to the tank.


Note! 6800, 8750 (SigmaPower) and 8950 (SigmaPower) tractors have a boost control (9), which is connected via a hose to the engine intake manifold. The boost control adjusts injected fuel amount to the cylinders according to the supercharging pressure in the engine intake manifold. In addition, these tractors have a forced—feed solenoid for starting (10) on the fuel injection pump, see page **223/9**. Adjusting injection timing on 6800, 8750 and 8950, see page **223/8**.

		Model	Code	Page
22. Fuel system	1. 9. 1992	6000-8750	220	6

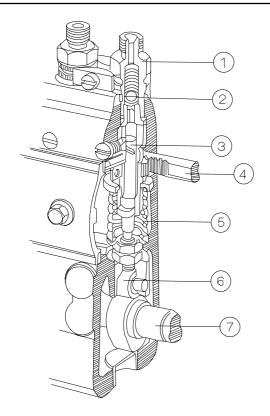

- 1. Retainer for delivery valve
- 2. Delivery valve
- 3. Pump element
- 4. Control rod
- 5. Return spring for pump plunger
- 6. Roller tappet
- 7. Camshaft

The purpose of the fuel injection pump is to meter out fuel to the combustion chamber at the correct time. Plunger (3) which is driven by the pump camshaft (7) via roller tappet (6) forces the fuel through delivery valve (2) and further through the delivery pipe to the injector.

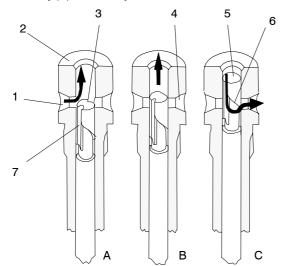

Two-hole pump element (maximum feed)

- A. Bottom dead centre
- B. Fuel injection begins
- C. Fuel injection ends
- 1. Inlet passage
- 2. Cylinder
- 3. Starting groove
- 4. Release passage
- 5. Plunger
- 6. Metering edge


the whole element should be changed as a complete unit.

The cylinder has two passages: inlet passage and release passage. Both passages allow fuel to enter the pressure.

The pump element consists of one plunger and one cylinder which are a matched pair and because of the fine tolerances

The cylinder has two passages: inlet passage and release passage. Both passages allow fuel to enter the pressure space. The side of the plunger has one vertical groove and one metering edge which are used for adjusting the amount of fuel injected into the combustion chamber of the engine.

The top of the plunger is provided with a starting groove (delay groove) which delays the injection timing by approx. 8°. (This should be borne in mind when checking the fuel injection timing). This groove improves the cold starting properties of the engine. It works fully automatically. When the engine has stopped the control rod in the injection pump turns the plungers so that the starting groove faces towards the release passage. When the engine has started and when the injection pump has reached a certain speed, the governor pulls the control rod back into running position.

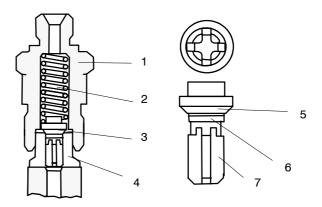

Delivery valve

- 1. Holder for delivery valve
- 2. Valve spring
- 3. Valve cone
- 4. Valve guide
- 5. Valve head
- 6. Pressure-reducing piston
- 7. Vertical grooves


The delivery valve is fitted on top of the pump element and its purpose is to close the connection between the pump element and the delivery pipe. This happens when the metering edge of the plunger passes the lower edge of the release passage, thus reducing the pressure in the space above the plunger. Its second purpose is to reduce the pressure in the delivery pipe. This is important as it enable the nozzle valve (needle) to close more quickly.

Delivery valve cone contains a pressure—reducing piston which, when the valve closes, is first lowered into the guide and then closes the connection between the delivery pipe and the pump element. The valve head is then pressed against its seat and the fuel in the delivery pipe is given the same space as the displacement of the pressure—reducing piston.

Model 8950 Code 220

Page

6A

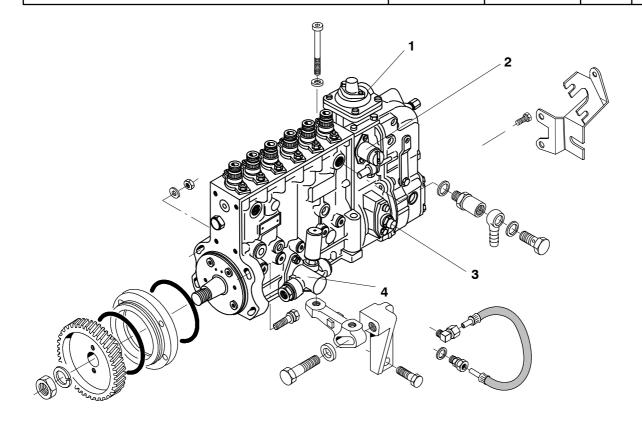

Fuel injection pump (Bosch P-pump) on 8950 tractor.

- 1. Boost control (for SigmaPower system) Function is similar to the boost control on 6800 and 8750 tractors, see page 223/9.
- 2. Forced feed solenoid for starting Function is similar to 6800 and 8750 tractors' solenoid, see page 223/9.
- 3. Plug for injection timing behind the cover Injection advance is adjusted according to instr. on page 223/8
- 4. Fuel feed pump

Note! Adjusting values are shown on page 220/8B.

IMPORTANT! The type of 8950 - tractor's fuel injection pump has been changed with effect from engine no. J18597. Simultaneously the gas lever position sensor bracket and the lever (17 mm outer) have been changed.


Checking electric stop solenoid (Elettrostart)

- A. Running position
- B. Stop position

It is important for function of the double coil solenoid (pulling and holding coil), that the piston reaches the extreme position in every stroke. The piston presses the internal switch, which connects continuous current to the holding coil which eliminates the overheating danger of the solenoid.

1. Energize the solenoid and adjust the loose lever system so that the fuel injection pump lever reaches the extreme positions in its course, see picture. The solenoid is energized during engine running.

Note! Energize the solenoid with a battery of a correct voltage and keep the solenoid energized while adjusting.

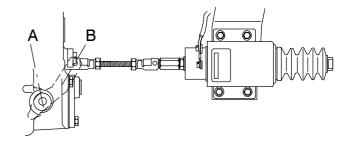


Tech	nica	l val	יפםווו

Voltage	12 V
Pulling coil	41 A
Holding coil	0,5 A
Max. stroke	40 mm




	1.9.1992	Model	Code	Page
22. Fuel system	1. 8. 2000	6000-8950	220	7

Governor

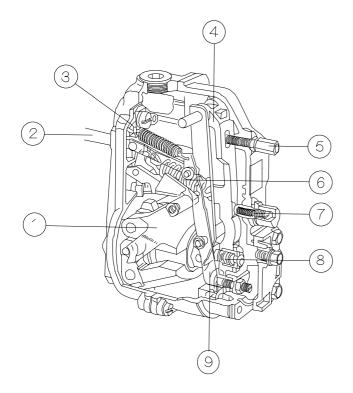

Fuel injection pump type plate (Bosch in-line pumps)

The injection pump type plate shows one particular letter indicating the user application, see figure below. This letter should always be quoted when ordering a replacement pump or when looking for setting values.

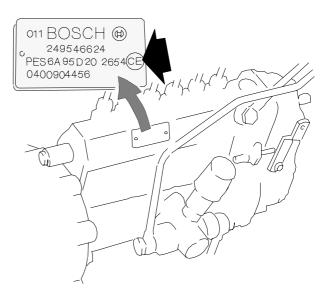

The letters for different pumps on 6000 – 8950 tractors can be found in the tables on pages 220/8, 8B.

- 1. Governor weight
- 2. Control rod
- 3. Starting spring
- 4. Main lever
- 5. Idler screw
- 6. Governor spring
- 7. Additional spring, idling
- 8. Spring for equalizer
- 9. Governor control arm

The governor is of the centrifugal type and is fitted at the rear end of the injection pump. The governor controls the rotational speed of the engine throughout the whole speed range, and identifies the rotational speed by means of the governor weights. The position of the governor control and of the governor weights is transferred through the governor lever linkage to the control rod. The governor has one governor spring. Starter spring, which is attached to the upper end of the control lever, it pulls the control rod to the starting position when the engine stops. This means that the amount of fuel injected when the engine is started automatically becomes greater.

	1.8:2000	Model	Code	Page	
22. Fuel system	1. 9. 2002	60006800	220	8	

Table of the fuel metering 6000-6800 (3 and 4 cyl.)

Test equipment ISO 4008, Fluid ISO 4113 Nozzle ISO 7440 207 bar/0,60 orifice plate Pipe diam. ø6x2x600 ISO 4093


Engine type	Tractor	Injection pump	Governor	Pump timing ° Max. output r/min Low idling r/min	Inject amou mm ³ rpm		RW mm	Boost control pres- sure bar	Control rod at least 1 mm rpm	Cont- rol rod pos. 4 mm rpm
420 D	6000	PES 4A 95 D 320 RS 2806 / BE	RSV 375-1175 A2C 2178-7R	21° 2350 750	1150 1000 900 600 375	77-78 11-15	10,0±0,2 +0,40,5 +0,80,9 +0,80,9 4,2±0,3	-	1195- 1205	1270- 1285
320 DS	6100	PES 3A 95 D 320 RS 2810 /C	RSV 375-1150 A2C 2178-10R	19° 2300 750	1150 1000 800 500 375	101-103	12,3±0,2 +0,1-0,2 +0,3-0,4 +0,3-0,4 4,4±0,3	-	1170- 1190	1240- 1260
420 DS 62,5 kW	6300	PES 4A 95 D 320 RS 2807 / B	RSV 375-1125 A2C 2178-7R	19° 2225 750	1100 1000 900 500 375	81 – 83 11 – 151	10,7±0,2 +0,20,4 +0,40,6 +0,40,6 4,2-4,5	-	1130- 1150	1190- 1220
420 DS 66 kW	6300 K41309 – L23437	PES 4A 95 D 320 RS 2807 / DM	RSV 375-1175 A2C 2178-7R	19°° 2270 850	1100 1040 700 500 425	97-99 99-101 12-14	12,3±0,2 12,4±0,2 13,0±0,2 13,0±0,2 5,1±0,3	-	1130	1210- 1215
420 DS	6400	PES 4A 95 D 320 RS 2807	RSV 375-1125 A2C 2178-7R	19° 2225 750	1100 1000 900 500 375	91-93 11-15	11.4±0,2 +0,3-0,4 +0,5-0,6 +0,5-0,6 4,2-4,5	-	1135- 1145	1210- 1230
420 DW 70 kW	6400 Delta J17109-	PES 4A 95D 320 RS 2807 /CH	RSV 375-1125 A2C 2178-7R	°19° 2225 750	1100 1000 900 500 375	102-104 11-15	13,0±0,2 13,2±0,2 13,7±0,2 13,7±0,2 4,2-4,5	-	1135- 1145	1210- 1230
420 DW 73,5 kW	6400 Delta (2000) K41106- L14332	PES 4A 95D 320 RS 2807 /DL	RSV 375-1125 A2C 2178-7R	°19° 2200 850	1100 1040 900 700 425	101-103 104-106 109-111 109-111 11-13	12,8±0,2 13,2±0,2 13,3±0,2 13,3±0,2 4,3	-	1120- 1130	1210- 1220
420 DS	6600	PES 4A 95 D 320 RS 2807 /A	RSV 375-1125 A2C 2178-7R	19° 2225 750	1100 1000 900 800 500 375	101-103	12,5±0,2 ±0,2 +0,4 +0,5 ±0,5 4,2-4,5	-	1140- 1150	1200 – 1220
420 DWI	6800	PES 4A 95D 320 RS 2847 /E	RSV 375-1200 A5C 2268 R	°18° 2225 850	1100 1000 800 600 Ahtop 500 375	113–115 .säät. toim. 94–96 11–15	13,4±0,2 13,7±0,2 14,0±0,2 14,0±0,2 12,7±0,2 3,8±0,2	1,0 1,0 1,0 1,0 0,30 0	1130	1180- 1210

	1.8.2900	Model	Code	Seite
22. Fuel system	1. 9. 2002	8000-8950	220	8B

Table of the fuel metering, 8000-8950 (6 cyl.)

Test equipment ISO 4008. Fluid ISO 4113. Nozzle ISO 7440 207 bar/0,60 orifice plate. Pipe diam. ø6x2x600 ISO 4093.

Engine type	Tractor	Injection pump	Governor	Pump timing ° Max. output r/min Low idling r/min	Injecte amour mm ³ / rpm		RW mm	Boost control pres- sure bar	Control rod at least 1 mm rpm	Cont- rol rod pos. 4 mm rpm
620 D	8000	PES 6A 95 D 320 RS 2806 / F	RSV 325-1125 A0C 2178-8R	23° 2220 750	1100 950 700 325	64-66 13-16	7,8±0,2 8,5±0,2 9,0±0,2 4,2±0,2		1150- 1160	1190- 1210
620 D	8100	PES 6A 95 D 320 RS 2806	RSV 375-1150 A2C 2178 8R	23° 2225 750	1100 980 800 500 375	77-79 12-15	9,0±0,1 +0,30,4 +0,80,9 +0,80,9 4,0±0,2	_	1130- 1150	1180- 1200
634D	8200	PES 6A 95 D 320 RS 2806 /EG	RSV 500 – 1125 A0C 2178 – 8R	22° 2225 750	1100 1000 900 800 750 600 375	86-88 11-13	10,0±0,2 10,1+0,2 10,3+0,2 10,4+0,2 10,5+0,2 10,5+0,2 4,0±0,2	-	1130	1190- 1210
620 DS 103 kW	8400 -K34331	PES 6A 95 D 320 RS 2806 /G	RSV 325-1125 A0C 2178-8R	21° 2200 750	1100 1000 900 700 375	84-86 13-16	9,8±0,2 10,0±0,2 10,2±0,2 10,5±0,2 4,2±0,2	_	1120- 1130	1180- 1200
620 DS 110 kW	8400 K32135 – L33320	PES 6A 95 D 320 RS 2806 /AF	RSV 325-1125 A0C 2178-8R	21°° 2200 850	1100 1040 900 700 425	103-105 104-106 102-104 8-10	12,3±0,2 12,3±0,2 12,3±0,2 12,3±0,2 3,6±0,2	-	1120- 1130	1205- 1225
620 DSIE 118 kW	8400 L23130-	PES 6A 95D 320 RS 2832 / AH	RSV 500 – 1100 A 5 C 2269 – R	19° 2200 850	1040 750 9 500 LDA 500 500	93 – 95 94 – 96 99 – 101 – – 82	10,510,9 10,510,9 11,311,7 11,311,7 11,411,5 10,510,9	1,0 1,0 1,0 1,0 0,35 0,0	1130	1210- 1220
634 DS	8750	PES 6A 95D 320 RS 2848 /C	RSV 500-1100 A5C 2269 R	°20° 2200 750	1100 1000 800 700 LDA 500 500 1100 500	10-15 128-130 108-110 12-15	$4,14,7$ $13,7\pm0,2$ $13,9\pm0,2$ $14,1\pm0,2$ $14,1\pm0,2$ $14,1\pm0,2$ $13,9\pm0,2$ $3,6\pm0,2$ $11,8\pm0,2$ $4,0\pm0,5$	1,0 1,0 1,0 1,0 0,60 0,40 0,0 0,0	1115	1180- 1200
634 DSBIE	8950	PES 6P 120 320 RS 3382 /E (Tractor.no: -J49321) PES 6P 120 320 RS 3414 (Tractor.no: J49322-)	RSV 425 –1100 POA 669	°13° 2200 900	1100 1000 700 600 LDA 500 500 450	133 – 134 142 – 144 146 111 107 10 – 12	$10,0\pm0,2 \\ 10,2\pm0,2 \\ 10,2\pm0,2 \\ 10,2\pm0,2 \\ 10,5\pm0,2 \\ 9,3\pm0,2 \\ 9,2\pm0,2 \\ 4,0\pm0,5$	1,0 1,0 1,0 1,0 0,75 0,50 0,0	1120	1180- 1190

 

	1.8-2000	Model	Code	Page
22. Fuel system	1. 9. 2002	6000-8950	220	9


Table of fuel equipment parts 6000-8950

Engine/Tractor	Injection pump	Element	Delivery valve	Governor spring	Injector compl.	Nozzle	Nozzie hol- der	
420 D	8367	8353	8353	8353			8366	
Valmet 6000	40392	31161	39126	31163			39971	
320 DS	8366	8353	8353	8353	8366	8366	8366	
Valmet 6100	40199	31161	39126	31163	39956 / —	39957	39971	
420 DS (62,5 kW)	8367	8353	8353	8353	8366	8366	8366	
Valmet 6300	40174	31161	39126	31163	39956 / —	39957	39971	
420 DS (66 kW) Valmet 6300 K41309-L23437	8367 54903	8353 31161	8353 39126	8353 31163	8366 59808 / 358	8366 59902	8366 39971	
420 DS	8367	8353	8353	8353	8366	8366	8366	
Valmet 6400	40157	31161	39126	31163	39956 / —	39957	39971	
420 DW (70 kW) Valmet 6400 DW J17109 –	8367 54552	8353 31161	8353 39126	8353 31163	8366 39956 / —	8366 39957	8366 39971	
420 DW (73,5 kW) Valmet 6400 DW K41106-L23505	8367 54902	8353 31161	8353 39126	8353 31163	8366 59808 / 358	8366 59902	8366 39971	
420 DS	8367	8353	8353	8353	8366	8366	8366	
Valmet 6600	40173	31161	39126	31163	39956 / —	39957	39971	
420 DWI	8367	8353	8353	8367	8366	8366	8366	
Valmet 6800	54640	31161	39126	54532	39956 / —	39957	39971	
620 D	8368	8353	8353	8353	8366	8366	8366	
Valmet 8000	40210	31161	39126	31780	39956 / —	39957	39971	
620 D	8368	8353	8353	8353	8366	8366	8366	
Valmet 8100	40158	31161	39126	31780	39956 / —	39957	39971	
634 D	8368	8353	8353	8353	8366	8366	8366	
Valmet 8200	54570	31161	39126	31780	39956 / —	39957	39971	
620 DS (103 kW) Valmet 8400 -K34331	8368 40395	8353 31161	8353 39126	8353 31780	8366 39956 / —	8366 39957	8366 39971	
620 DS (110 kW) Valmet 8400 K32135-L33320	8368 54884	8353 31161	8353 39126	8353 31780	8368 54831 / 446	8368 54832	8366 39971	
620 DSIE (118 kW) Valtra 8400 L23130 –	8368 54939	8353 31161	8353 39126	8367 54532	8368 54940 / 301	8368 54941	8368 54756	
634 DS	8368	8353	8353	8367	8366	8366	8366	
Valmet 8750 .	54670	31161	39126	54532	39956 / —	39957	39971	
634 DSBIE Valmet 8950	8368 54767 (Tractor.no: –J49321)	8353 54638	8353 30239	8368 64618	8368 54791 / —	8368 54792	8368 54756	
	8368 54840 (Tractor.no: J49322-)							

22. Fuel system	1.8.2000	Model	Code	Page
	1. 9. 2002	6200-8550	220	10

Specifications with Stanadyne distributor pump

Note! 6200, 8000R, 8050, 8150, 8450 and 8550 (also latest 6300 and 6400 from week 24/01 incl.) tractors have Stanadyne distributor pump. Also 6250Hi - 8550 Hi tractors have this pump. The pump is equipped with an electric running solenoid (ignition switch stop) and with an automatic bleeding system. Stanadyne pump internal lubrication happens with aid of fuel. A separate fuel feed pump is of a membrane type and it is driven by the engine camshaft. The system includes also the Thermostart glow

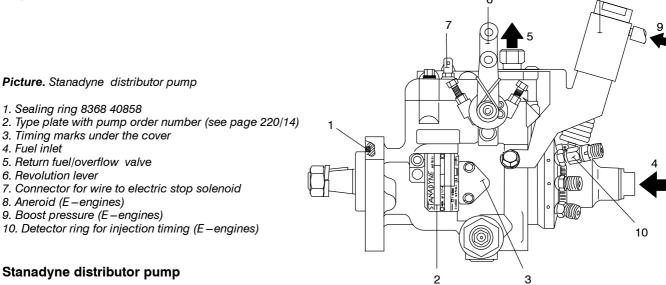


type.	
- 6200, 6300 and 6400 (24/01-), 6250Hi-6850Hi	
– 8000R	DB4 (four pressure plungers)
– 8050	DB 2 (two pressure plungers)
- 8150-8550 · · · · · · · · · · · · · · · · · ·	
Injection order:	,
– 420 – engines	1-2-4-3
– 620/634 – engines	
Direction of rotation	
Injection advance, see page 220/14:	
Tightening torque of pump gear wheel nut	90 Nm
Fuel feed pump	
Construction	membrane pump, separate
	hand pump
Fuel food proceure (statio)	0.49 har (49 kPa)

Injectors (see also page 220/15).

Type	
Opening pressure	see page 220/15
Setting pressure 1)	see page 220/15
Sealing ring	nro 8999 01495
Injector nozzle sleeve, tightening torque	60 Nm
Injector attaching nuts (on studs)	15 Nm

¹⁾ Value to be used when adjusting the opening pressure of a new or used injector.

Fuel system with distributor pump

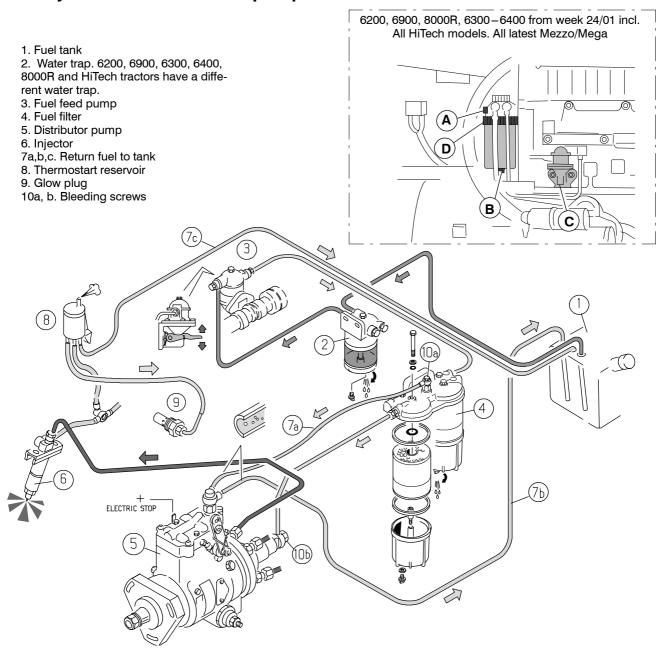

In this fuel system, there is a separate fuel feed pump (3) on the RH side of the engine.

The system includes a separate water trap (2) and two fuel filters (4). The lower parts of the fuel filter housings have a space for possible impurities and there is a draining tap under both filter housings.

The fuel feed pump has a washable metal gauze filter. There is also a tapered metal net filter inside the distributor pump in the inlet line before the pump transfer pump.

Important! 6200, 6900, 8000R and all HiTech tractors have a Stanadyne water trap, which also includes a filter. There is a draining tap (B) in the bottom of the housing. Before emptying this water trap, slacken the bleeding screw (A). After emptying, close the screws and pump fuel with the feed pump (C) lever, until the water trap is full of fuel. The Stanadyne water trap filter loosens, when securing band (D) is rotated for hand and the filter is pulled downwards. When fitting a new filter, rotate the securing band until it locks the filter (click).


Maintenance

- Check/empty the water trap weekly/at every 50 running hours.
- $\,-\,$ Open and clean the water trap at every 500 running hours (does not concern 6200 and 8000R tractors). At the same time open the taps under both fuel filter housings and allow possible impurities to run out .
- Clean the fuel tank at every 1000 running hours/yearly and change the fuel filters (6200, 8000R: also change the water trap filter).
- Check/clean injectors at every 2000 running hours/every other year. Faulty injectors cause knocking, smoky exhaust gases and loss of engine power.

Note! When the water trap has been emptied, refill it with fuel by pumping with the fuel feed pump (3) lever. After changing the fuel filters, bleed the fuel system, see page **223/11**.

https://tractormanualz.com/

Stanadyne distributor pump

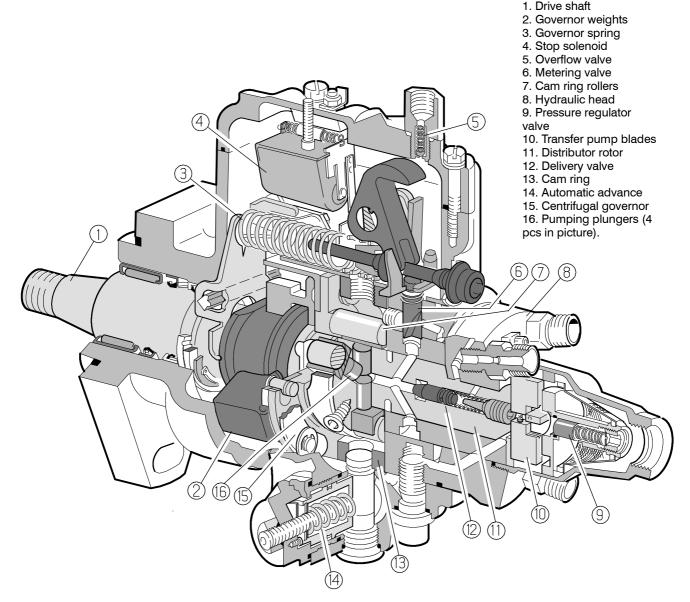

Construction

The main rotating components are the drive shaft, transfer pump blades, distributor rotor and governor.

The drive shaft engages the distributor rotor in the hydraulic head. The drive end of the DB2 rotor incorporates two pumping plungers and DB4 four.

The plungers are actuated toward each other simultaneously by an internal cam ring through rollers and shoes which are carried in slots at the drive end of the rotor. The numbers of cam lobes normally equals the number of cylinders (not 3-cyl. engines).

The transfer pump at the rear of the rotor is of the positive displacement vane type and is enclosed in the end cap. The end cap also houses the fuel inlet strainer and transfer pump pressure regulator. The face of the regulator assembly is compressed against the distributor rotor and forms an end seal for the transfer pump.

The pump axial force acts against the pressure regulator valve front face.

The distributor rotor incorporates two charging ports and a single axial port (pressure chamber), in which is placed the delivery valve. After the delivery valve, there is one discharge port to serve all head outlets to the fuel injection pipes.

The hydraulic head contains the bore in which the rotor revolves, the metering valve bore, the charging ports and the connections to the fuel injection pipes.

The pump contains a mechanical governor. The centrifugal force of the weights is transferred to the metering valve via a linkage. The metering valve can be closed electrically with aid of the solenoid in the pump housing.

The automatic advance is a hydraulic mechanism which turns the cam ring and advances or retards the beginning of the fuel delivery from the pump.

22. Fuel system


1. 10. 1999

Model **6200-8550**

Code **220**

Page 12A

Stanadyne distributor pump

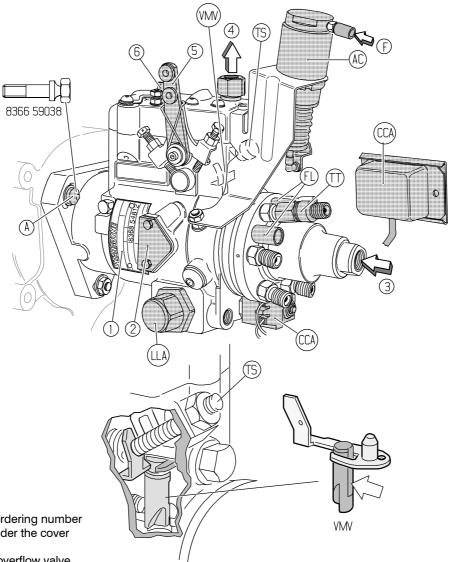

- 1. Type plate with ordering number
- 2. Timing marks under the cover
- 3. Fuel inlet
- 4. Fuel return flow/overflow valve
- 5. Revolution lever
- 6. Connector for wire to electric stop solenoid

Possible equipment on Stanadyne distributor pump (e.g. E-engines)

A. Interrupted screw (ordering no. 8366 59038)

TT. Detector for injection timing

FL. Fuel limiter

The fuel limiter limits the injected fuel amount nearest at low engine revs, when the air coefficient is too small.

LLA. Light load advance

Adjustment of the injection advance according to the engine revs and loading. This is controlled by the fuel feed pressure after the quantity governing valve.

AC. Aneroid control

Aneroid control (limitation of acceleration smoke) allows a full fuel injection during acceleration just when the boost pressure has risen enough.

F. Boost pressure

CCA. Compact cold advance

Electric advancing of the injection during starting and at low engine revs (below 1100 rpm) in order to decrease the cold smoking. In addition to the injection pump solenoid, the pump has a separate control unit, which follows up the engine revs

TS. Torque screw (inside the housing).


With this screw the engine specific curves for output and torque can be canged into desired form.

VMV. Vented metering valve (inside the pump housing).

The valve makes the inner bleeding of the pump better.

22. Fuel system		Model	Code	Page
	1. 8. 2000	8350	220	12B

Electric advancing of the injection (CCA), wiring diagram

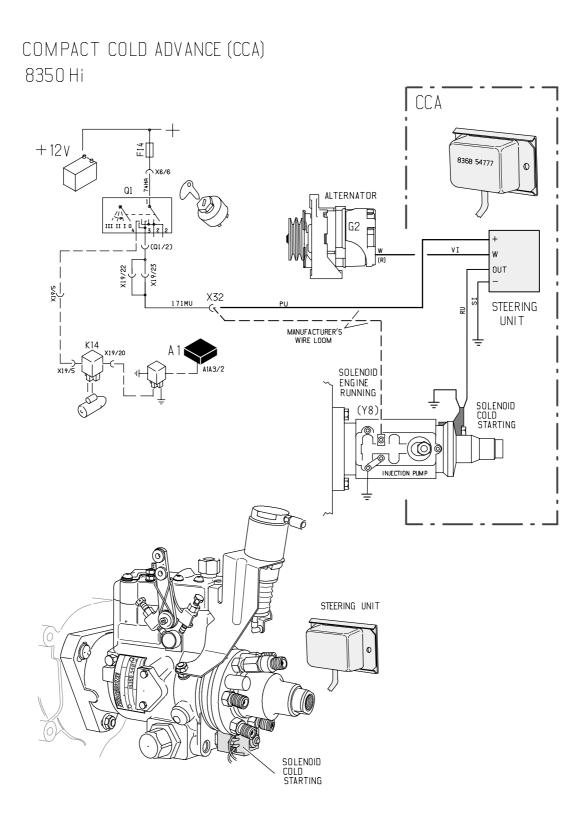


Model

Code 8050-8550

Page 220

13

Stanadyne distributor pump

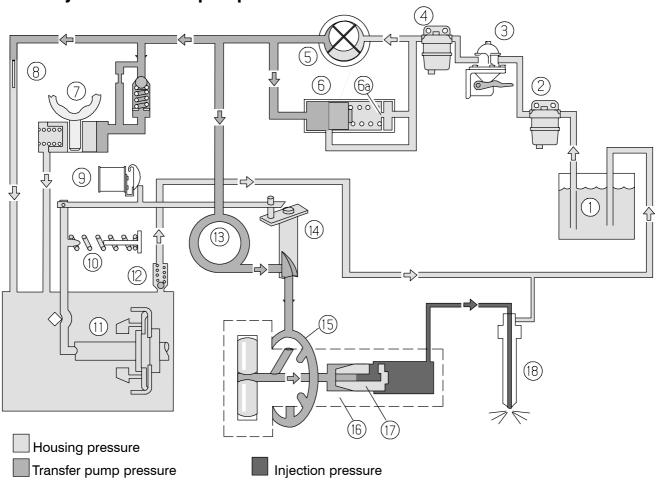

- 1. Fuel tank
- 2. Water trap
- 3. Fuel feed pump
- 4. Fuel filter
- 5. Transfer pump
- 6. Pressure regulator valve
- 7. Automatic advance
- 8. Air vent passage
- 9. Stop solenoid

- 10. Regulator spring
- 11. Centrifugal weights
- 12. Overflow valve
- 13. Hydraulic head connecting passage
- 14. Metering valve
- 15. Hydraulic head charging pasage
- 16. Distributor rotor
- 17. Delivery valve
- 18. Injector

Function

The fuel feed pump draws fuel from the tank via the water trap and the filter into the fuel injection pump.

In the pump fuel flows through the inlet filter screen into the vane type fuel transfer pump. Some fuel is bypassed through the pressure regulator assembly to the suction side.

Fuel under transfer pump pressure (1-6 bar) flows through the center of the transfer pump into the circular groove on the rotor. It then flows through a connecting passage in the head to the automatic advance and up through a radial passage and then through a connecting passage to the metering valve. The metering valve adjusts amount of injected fuel and position of the metering valve is controlled by the governor (revolution lever) and the stop solenoid. From the metering valve fuel flows to the radial charging passage and further to the head charging ports.

As the rotor revolves, the two rotor inlet passages register with the charging ports in the hydraulic head, allowing fuel to flow into the pumping chamber. With further rotation, the inlet passages close and the port to the injectors opens.

While the discharge post is opened, the rollers contact the cam lobes forcing the plungers together. Fuel trapped between the plungers is then pressurised and delivered by the nozzle to the combustion chamber.

The injection pump is self-lubricating, and it has not been connected to the engine lubrication system.

As fuel at transfer pump pressure reaches the charging ports, slots on the rotor shank allow fuel and any entrapped air to flow into the pump housing cavity. In addition, an air vent passage in the hydraulic head connects the outlet side of the transfer pump with the pump housing. This allows air and some fuel to be bled back to the fuel tank via the overflow

The fuel thus bypassed fills the housing, lubricates the internal components, cools and carries off any small air bubbles. The pump operates with the housing completely full of fuel; there are no dead air spaces anywhere within the pump.

OO Final contains	1.8.2000	Model	Code	Page
22. Fuel system	1. 9. 2002	6200-8550	220	14

Tractor	Engine	Distributor pump		Static in-	Dynamic inje	Dynamic injection advance (°/rpm)	("/rpm)		Extra equipment **)	Delelivery pipe inner
	Туре	Туре	Ordering no	vance	Low idling	Max revs ±1,0°	1400 rpm (full loa- ding) ±1,0°	2200 rpm (full loa- ding) ±1,0°		diameter***)
6200 (–K41123)	420 DSRE	DB4427-5218/B	8367 54743 (836754665)*)	9	1	ı	ı	ı	TS	ø 1,75 mm
6250Hi 6200 (K41124–)	420 DSRE	DB4429-5569/A	8367 54825 (836754824)*)	15°	8,	11°	15°	16,5°	TS	ø 1,75 mm
6350Hi 6300 (L23438-)	420 DSRE	DB4427 – 5524	8367 54828	16°	>9°	10,5°	16°	17,5°	TS	ø 1,75 mm
6550Hi 6400 (L23506–)	420 DWRE	DB4427 - 5254/E	8367 54866 (836754737)*)	16°	>3,5°	10°	14,5°	16°	TS, AC	ø 1,75 mm
6650Hi	420 DWRE	DB4427 - 5525	8367 54829	16°	4°	6,	15°	17°	TS, AC	ø 1,75 mm
6750Hi	420 DWRIE	DB4427 – 5764	8367 54917	12°	>10°	13°	14,5° 1200 rpm	14° 1800 rpm	TS, LLA, VMV, AC	ø 1,75 mm
6800 (L23517–) 6850Hi	420 DWRIE	DB4427 - 5526	8367 54822	16°	>10°	15°	15,5°	17°	TS, LLA, VMV, AC	ø 1,75 mm
0069	620 DRE	DB4629-5345/A	8368 54749 (836854738)*)	18°	>17°	22°	17°	22°	TS, FL, LLA, VMV	ø 1,5 mm
8050 (-L22533) 8050 (L22534-) 8050Hi	620 DSR 620 DSRE 620 DSRE	DB2635-5243 DB4629-5636 DB4629-5636	8368 54679 8368 54860 8368 54860	20° 14° 14°	, 6° 6°	- 12° 12°	- 12,5° 12,5°	_ 15,5° 15,5°	TS, VMV TS, VMV	ø 1,5 mm ø 1,75 mm ø 1,75 mm
8150 (-L24138) 8150 (L24139-) 8150Hi	620 DSR 620 DSRE 620 DSRE	DB4629-5244 DB4629-5364 DB4629-5364	8368 54678 8368 54739 8368 54739	18° 17° 17°	- >12° >12°	18° 18°	- 14,5° 14,5°	- 18° 18°	TS TS, FL, LLA, VMV TS, FL, LLA, VMV	ø 1,5 mm ø 1,5 mm ø 1,5 mm
8350Hi 8350Hi	620 DSRIE 620 DSRIE	DB4629-5346/A DB4629-5763	8368 54826 (836854744)*) 8368 54923	15° 15°	°6	16,5° 16,5°	14,5° 1100 rpm 14,5°	14,517° 1800 rpm 14,517°	TS, FL, LLA, AC, CCA TS, FL, LLA, AC, CCA	ø 1,75 mm ø 1,75 mm
8450 (-L24208) 8450 (L24209-) 8450Hi	620 DWR 620 DWRE 620 DWRE	DB4629-5207 DB4629-5637 DB4629-5637	8368 54674 8368 54859 8368 54859	14°° 14°	1 × 14°°	1 18° 18°	1 4 5 6 6 9 6 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9	- 16° 16°	TS TS, LLA, AC, VMV TS, LLA, AC, VMV	ø 2,0 mm ø 1,75 mm ø 1,75 mm
8550 (-L24115) 8550 (L24116-) 8550Hi	634 DSR 634 DSRE 634 DSRE	DB4629-5208 DB4629-5527 DB4629-5527	8368 54675 8368 54827 8368 54827	16° 15° 15°	- >10° >10°	_ 16,5° 16,5°	- 13,2° 13,2°	_ 15,4° 15,4°	TS TS, LLA, AC, VMV TS, LLA, AC, VMV	ø 2,0 mm ø 2,0 mm ø 2,0 mm
Note! Adjusting valu	i dosch i	Note! Adjusting values of Bosch in—line nums see pages 220/2	œ	8B and 9	Č	***	i edia yaevilo	***) Delivery pipe ipper diameter	2	

Valtra Valmet-tractors' Stanadyne-rotary pumps and delivery pipes

Note! Adjusting values of Bosch in-line pumps, see pages 220/2, 8, 8B and 9. *) Number of basic pump, marked on type plate of pump.

**) See page 220/12A.


***) Delivery pipe inner diameter

without notch, Ø 1,5 mm _1 notch, Ø 1,75 mm 2 notches, Ø 2,0 mm

The latest pipes have numbers on nut. without numbers, Ø 1,5 mm 1.8, Ø 1,75 mm 2.0, Ø 2,0 mm

24

	1.8.2900	Model	Code	Page
22. Fuel system	1. 9. 2002	6000-8950	220	15

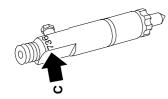

ValtraValmet-tractors, Stanadyne injectors

Tractor	Type of injector	Ordering no of compl. in- jector	Ordering no of nozzle	Nozzle opening pressure, bar	Adjusting pressure, bar (value to be used both with new and used nozzles).	Shims no 1,002,00 mm	O epoo
6000, 6100 6200 (-K41123) 6300 (-K42118) 6400 (-K42107) 6600, 6800 (-L23516) 8000, 8100, 8200 8400 103 kW (-K34331) 8050 (-L22533) 8150 (-L24138) 8450(-L24208)	S/736	8366 39956	8366 39957	230+10	240	8366 401048366 40122	736
6900, 8000R USA, 6200 USA, 6300 USA, 8150Hi 8150 (L24139-)	M/423	8368 54755	8368 54757	270+8	278	8368 620008368 62020	423
8550 (–L24115)	S/655	8363 40034	8363 39985	230+10	240	8366 401048366 40122	655
6250Hi, 6350Hi, 6750Hi, 6850Hi, 8350Hi, 8550Hi 6200 (K41124–) 6300 (K42119–) 6400 (K42108–) 6800 (L23517–) 8550 (L24116–)	M/358	8366 59808	8366 59902	270+8	278	8368 620008368 62020	358
6550Hi, 6650Hi, 8050Hi, 8450Hi 6400 (L23506-) 8050 (L22534-) 8400 110 kW (K32135-L33320) 8450 (L24209-)	M/446	8368 54831	8368 54832	270+8	278	8368 620008368 62020	446
8950Hi	9/8/W	8368 54791	8368 54792	270+8	278	8368 620008368 62020	928
8400 118 kW (L23130-)	M/301	8368 54940	8368 54941	270+8	278	8368 620008368 62020	301

25



	1.4-1997	Model	Code	Page	
22. Fuel system	1. 6. 1999	6000-8750	222	1	

Repair instructions


Fuel feed pump and fuel filter (Op no 222)

Bosch in-line pump

A. Bleeding fuel system



1. Slacken the bleeder screw on the filter head (8200, 8400, 8750 and 8950 have a double filter). Pump with the hand pump until the fuel flowing out at the bleeder screw is free from air bubbles. Then tighten the bleeder screw.

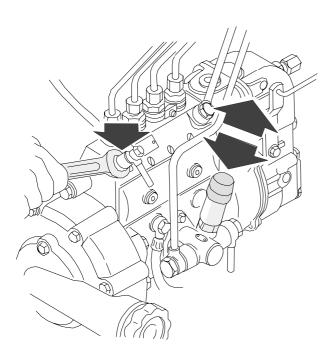

- 3. Slacken the injection pump overflow valve. Pump with the hand pump until the fuel flowing out is free from air bubbles. Tighten the overflow.
- 4. Wipe off any fuel from the engine.

B. Bleeding thermostart system


Always remove air from the glow plug fuel pipe when the pipe or reservoir has been emptied during repair work etc. This prevents damages to the glow plug caused by lack of fuel during starting.

- 1. If the reservoir is empty, fill it e.g. with a drip pot through the breather hole on the reservoir.
- 2. Open the glow plug pipe connector and drain fuel from the pipe. Connect the pipe.

C. Measuring fuel feed pressure

Note! Measuring equipment, see page 220/3.

1. Clean the fuel injection pump and the filter and the pipes between them.

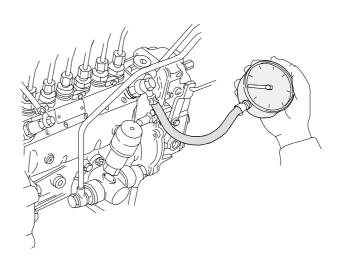

- 2. Fit the gauge at the banjo connection on the pump, as shown above (between filter and injection pump).
- 3. Run the engine at low idling for a while and compare the gauge reading with the prescribed value (0,6-1,0 bar).

N.B. If the measured pressure is below the prescribed value, this may be caused by:

- faulty overflow valve
- blocked fuel filter
- faulty fuel feed pump
- blocked or leaking fuel pipes or unions

		Model	Code	Page	l
22. Fuel system	1. 9. 1992	6000-8750	222	2	


D. Checking overflow valve

If the fuel feed pressure deviates from the prescribed value, check the opening pressure of the overflow valve.

- 1. Connect a pressure gauge to the banjo union in the same way as in previous **instruction C**.
- 2. Pump with the hand pump until the overflow valve opens. Compare the reading on the gauge at the moment the valve opens with the prescribed value (0,6-1,0 bar).
- 3. If the recorded opening pressure deviates from the prescribed value, the overflow valve should be changed.
- **N.B.** If the recorded pressure is considerably lower than the prescribed value, there may be a fault in the hand pump or the fuel feed pump valves.

E. Changing fuel feed pump valves

1. Clean the feed pump. Disconnect fuel pipes to the feed pump. Remove the feed pump.

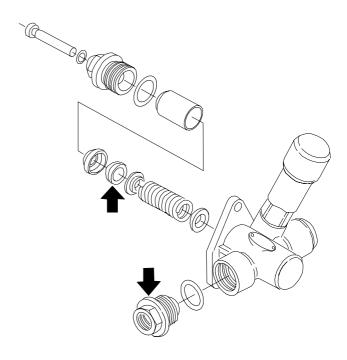

- 2. Secure the pump in a vice provided with soft jaws. Loosen the tappet body from the pump and remove the piston, seal rings, suction valve and the spring.
- 3. Detach from the pump body the outlet side threaded connector, in which is placed the pressure valve.
- 4. Rinse the valves with clean fuel and check the function and possible wear.
- 5. Change the valve if needed and assemble the pump using new o-rings and gasket



	1.8.1998	Model	Code	Page	
22. Fuel system	1. 6. 1999	6000-8750	223	1	

Fuel injection pump and injectors (Op no 223) (Bosch in–line pump)


Note! Concerning fuel injection pumps with a new type governor, see page **223/8**.


A. Checking injection timing

Note! The exact time at which the fuel should be injected into no. 1 cylinder is marked with a punch mark on the flywheel. There is an inspection hole in the flywheel housing and a hole for the locating tool. Due to the excess fuel flowing into the injection pump the control rod must be moved to the drive position when checking the injection timing. Otherwise the timing will be incorrect!


Checking method:

- 1. Clean the injection pump and its surroundings carefully.
- 2. Remove the inspection hole rubber plug from the flywheel housing.

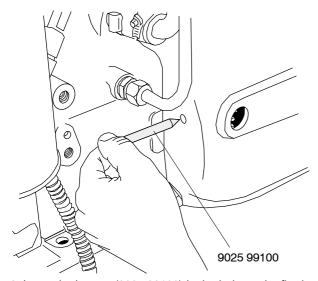

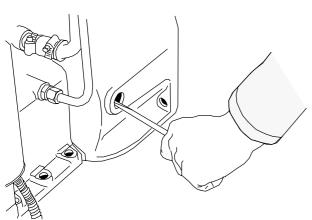

4. Turn the crankshaft to a position where the 1st cylinder piston reaches its compression stroke top dead centre. Then turn the crankshaft backwards until the timing mark on the flywheel passes the inspection hole.

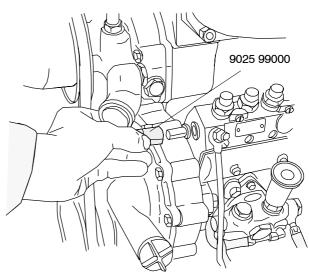

- 5. Remove the protecting cap for the control rod on the injection pump front face. Fit adjusting tool (sleeve for limiting control rod travel) 9025 99000. The tool moves the control rod to the "running position".
- 6. Disconnect the delivery pipe for the number one cylinder injector at the pump.
- 7. Clean the delivery valve of fuel. Slowly turn the crankshaft in the correct direction of rotation until the fuel level in the delivery valve just begins to rise.
- 8. Check if the mark on the flywheel is at the point of the locator which has been inserted into the flywheel housing. Repeat the check procedure. If the injection pump needs to be adjusted, follow the instructions under **heading B**.
- 9. Fit the delivery pipe and the rubber plug in the flywheel housing. Remove the locator and the sleeve which was used to limit the control rod travel. Start the engine.

B. Adjusting fuel injection timing

Important! Adjusting fuel injection timing on 6800, 8750 and 8950 tractors, see page **223/8**. Later on all tractors which have Bosch in–line pump (**G4720**– (320), **G2358**– (420) and **G5294**– (620, 634), the injection timing is adjusted according to instruction on page **223/8**.

If the timing is incorrect, adjust as follows:

1. Loosen the retaining nuts (17 mm) of the injection pump and remove the delivery pipes (17 mm).


22. Fuel system




Model **6000-8750**

Code **223**

Page **2**

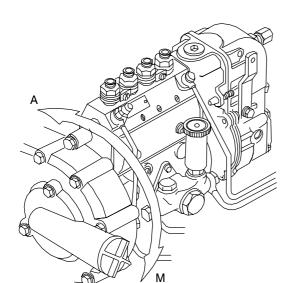

- 2. If the injection timing is retarded, turn the pump anti-clockwise (viewed from the front end of the pump). If the timing is advanced, turn the pump clockwise.
- Check once again the injection timing and set again if needed.
- 4. When the timing is correct tighten the retaining nuts of the pump and fix the delivery pipes.

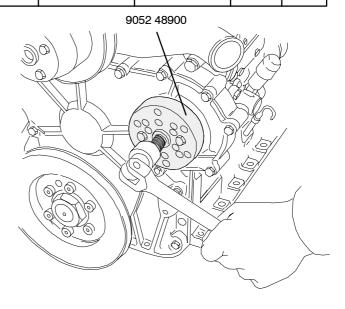


- 5. Use puller 9052 48900 and loosen the gear from the injection pump camshaft front end.
- 6. Remove the injection pump attaching nuts (17 mm). Remove the injection pump.
- **N.B.** If the engine is not to be disturbed while the pump is removed, there is no need to secure the pump gear. The gear rests against the idler gear.

D. Fitting fuel injection pump

1. Check the condition of the o-ring between the pump and the timing gear casing. Change the o-ring if necessary.

C. Removing fuel injection pump


- 1. Clean the injection pump and surrounding engine parts and the pipes and connectors on the injection pump.
- 2. Disconnect the delivery pipes and the banjo bolts at the supply and return fuel connections. Disconnect the lubricating oil line. Plug all connections.
- 3. Detach the oil filler pipe/cover from the front cover. Unscrew the pump drive gear nut.

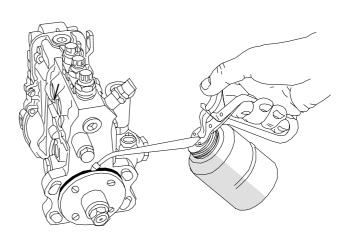

- 2. Lubricate the o-ring and place the injection pump so that the key on the pump shaft aligns with the key slot inside the gear. Tighten the pump attaching nuts.
- 3. Tighten the gear nut to 90 Nm . Fix the oil filler pipe/cover.
- 4. Connect the supply and return fuel lines. Connect the lubricating oil line. Use new sealing washers.

		Model	Code	Page
22. Fuel system	1. 9. 1992	6000-8750	223	3

- 5. Bleed the fuel system (Op no 222 A).
- 6. Adjust the injection timing (Op B).
- 7. Fit the delivery pipes.

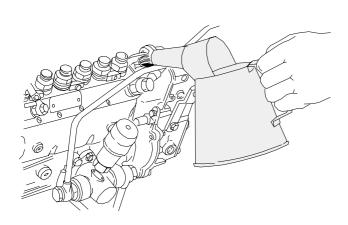

8. If the injection pump is changed or if the lubricating oil has been drained from the pump, fill the pump with lubricating oil before starting the engine. Open the hexagonal socket plug on the governor housing and pour in oil.

Filling quantity: 320-engines 0,3 I


420 – engines **0,4 I**

620 - engines 0,6 I

Same oil specification as in the engine.

E. Checking/changing delivery valve

1. Clean the injection pump, injectors and surrounding parts. Disconnect the delivery pipes.

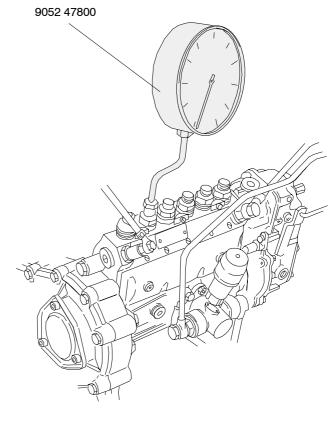


- 2. Connect the pressure gauge 9052 47800 to the delivery valve holder which is to be checked.
- 3. Rotate the engine with the starter motor, until the gauge reading is about **330 bar**.

Note! Pressure rises fast, do not damage the gauge. Get ready to pull the stop control out as soon as the gauge reading reaches an adequate pressure value.

4. Let the gauge reading lower at first about **30 bar**. When the gauge shows 300 bar, observe the reading during one minute. During this time the gauge reading must not lower too much (max 30–50 bar). If the pressure lowers faster than specified, the delivery valve must be cleaned or replaced.

Note! The delivery valve plunger and guide should always be replaced in pairs.

- 5. Open the delivery valve holder locking and holder. Remove the valve spring, plunger and the guide.
- 6. Rinse the plunger and guide in clean fuel or test liquid and at the same time rotate the plunger in its guide and press the sealing surfaces against each other.

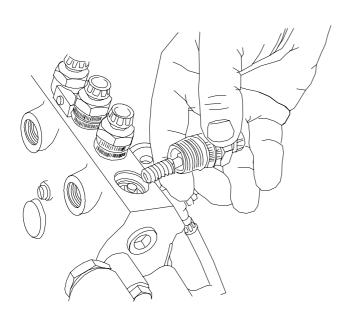


7. Fit the delivery valve into the fuel injection pump. Place the spring in place and tighten the holder.

Note! Renew the sealing ring and o-ring.

- 8. Tighten the holder as follows:
- Tighten first to 30 Nm.
- Open the holder about 1/2 a turn and tighten to 40 Nm.
- Open the holder about 1/2 a turn and tighten to 45 Nm.


F. Adjusting low idling speed

If the idling speed of the engine deviates from the value given in the specifications or if the engine revs vary at the idling speed, adjust the idling speed as follows:

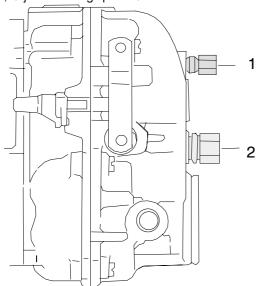

1. Unscrew the idling speed adjusting nut cap (1) and the cap (2) on the idling speed additional spring adjusting screw.

- 2. Ensure that the throttle lever is in the idling position and that the engine is at normal operating temperature.
- 3. Start the engine and loosen the adjusting screw of the additional spring so that it does not affect the idling speed.

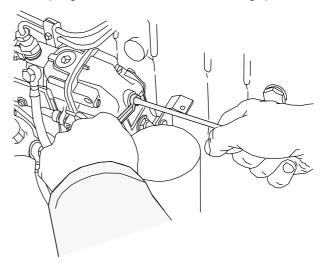


- 4. Adjust the idling speed using the adjusting screw to about 20 RPM below rated speed and lock the adjusting screw (10 mm).
- 5. Run the engine a few times and ensure that the idling speed remains as set.
- 6. Tighten the adjusting screw of the additional spring until the idling speed rises to the rated value. Lock the adjusting screw (17 mm) in this position.
- 7. Fix the safety caps of the adjusting screws.

Note! Other adjustments (output and max. speed) of the injection pump can only be performed by a specially trained person who has the necessary special tools and gauges available.

		Model	Code	Page
22. Fuel system	1. 9. 1992	6000-8750	223	5

G. Removing injectors


1. Clean the injectors and the area around them. Disconnect the delivery pipes and the leak – off pipes.

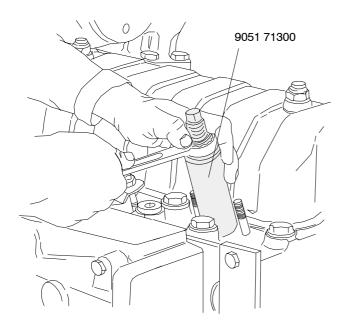

- 3. Remove the injector attaching nuts (13 mm) and remove the injector from the cylinder head. Fit protective plugs to all connections. If the injector does not rise by hand, use puller 9051 71300.
- 4. Remove the sealing washers from the bottom of the injector location in the cylinder head if they do no come out with the injector



- **N.B.** When pressure testing the injectors, it is important to avoid the nozzle end as the fuel jetting out easily penetrates the skin. Also bear in mind that the fuel "mist" is dangerous to inhale.
- 1. Clean the injector with cleaning fluid and a soft brush. The carbon deposits must not be knocked off or removed in any other way which may damage the nozzle.

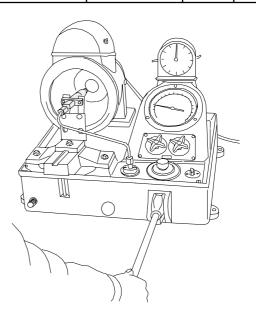

- 2. Secure the injector in a test bench and check the following:
- injector opening pressure
- the properties of the chattering (creaking) sound and the form of the spray pattern
- sealing of nozzle valve against its seat

Opening pressure

Pump a few times to fill the injector. Increase the pressure in the injector until the chattering (creaking) sound becomes audible. Read off the opening pressure of the injector. If the opening pressure deviates from the given value (230 \pm 5 bar), the injector should be taken apart and checked.

Adjustment is achieved by changing the shims. The thickness of the shims varies from 1.00-1.90 mm and they are available in increments of 0.05 mm. A thicker shim will raise the opening pressure while a thinner one lowers it. A difference in shim thickness of 0.05 mm changes the opening pressure by approx. 5.0 bar. As the opening pressure of the injector drops slightly after adjustment, the opening pressure should be set to approximately 10 bar above the value given in the specifications. This value applies both to new and used injector.

Chattering sound properties

Testing with a hand powered pump does not create the same circumstances as when the injector is fitted in the engine. Only with new nozzles are the test results reliable. With used nozzles, there is no chattering (creaking) sound when the tester is pumped at a certain rate. This has to do with the design of the nozzles.

However, with a rapid pumping on the tester handle, it should be possible to hear the chattering (creaking) sound or/and see a mist of the fuel jetting out.


		Model	Code	Page
22. Fuel system	1. 9. 1992	6000-8750	223	6

Tightness of nozzle


Press down the tester pump lever until the pressure rises to approx. 20 bar below the adjusting value. Maintain this pressure for approximately 10 seconds and check whether drops of fuel are formed on the point of the nozzle. If the injector leaks, it should be cleaned or the nozzle should be changed.

I. Reconditioning injectors

- 1. Secure the injector in a suitable way.
- 2. Unscrew the nozzle cap nut. Remove the nozzle and the parts inside the holder.
- 3. Clean the nozzle in cleaning fluid both inside and outside.
- 4. Clean the nozzle holes with a needle (including in cleaning set 8360 83288).
- 5. Test the movement of the nozzle valve as follows:

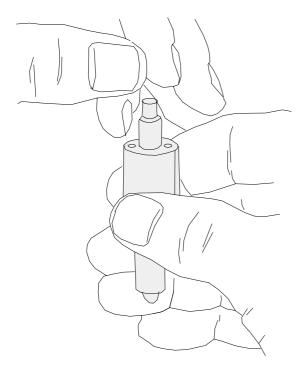

Rinse the parts thoroughly in fuel or testing fluid. Pull the valve out of the nozzle body to 1/3rd of its length. If the fit is correct, the valve should be able to slide down in the nozzle body under its own weight. Turn the valve slightly and repeat the test. Should the nozzle valve bind slightly, it should be changed.

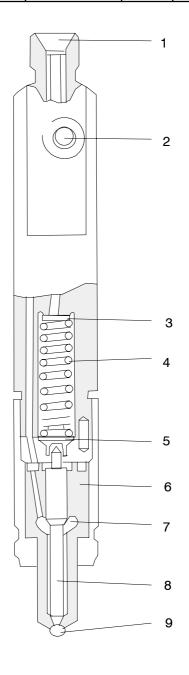


Injector

- 1. Fuel inlet
- 2. Leak-off fuel
- 3. Shims
- 4. Pressure spring
- 5. Valve stop spacer
- 6. Nozzle body
- 7. Pressure chamber
- 8. Nozzle valve
- 9. Nozzle hole
- 6. Before assembling, all parts should be carefully cleaned in clean fuel or testing fluid.
- 7. Put the same number of shims back as were fitted earlier. Note possible adjustment of the opening pressure. Assemble the rest of the injector. Note the position of the spring guide and the valve stop spacer.
- 8. Tighten the nozzle cap nut by hand and then to 60 Nm.

		Model	Code	Page
22. Fuel system	1. 9. 1992	6000-8750	223	7

J. Fitting injector in engine

1. Clean the injector sealing surface in the cylinder head. If necessary use a reamer 9101 66000.

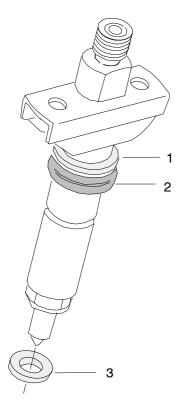

- 1. Washer
- 2. Rubber ring
- 3. Sealing washer
- 2. Fit the injector in the cylinder head using a new sealing washer.
- **N.B.** The spray pattern from the injector is not symmetrical on purpose. It is therefore important that the injector is fitted correctly in the cylinder head. The connection for the leak-off line should be facing the valve mechanism.
- 3. Fit the attaching clamp and tighten the nuts (13 mm) evenly to ${\bf 15~Nm}$.
- 4. Connect the leak off line (10 mm) together with new sealing washers and connect the delivery pipes (17 mm).
- **N.B.** The screw studs in the cylinder head for the injectors should only be finger tight. If tools have to be used the studs should be tightened only lightly.

Note! Make sure, that the injector is of a correct type. Wrong injectors cause malfunctions and can damage the engine.


K. Fitting delivery pipes


- 1. Check the state of the pipes. If there are kinks, damage by chafing, or if the tapered sealing end is damaged, the pipes should be changed.
- 2. Fit the pipes without tension and check that they are at right angles to the union.
- 3. Fit the clamps for the pipes.

L. Adjusting injection timing on 6800, 8750 and 8950 tractors


Important! Adjusting fuel injection timing on 6800, 8750 and 8950 tractors and later on all tractors which have Bosch in—line pump (**G4720**— (320), **G2358**— (420) and **G5294**— (620, 634), the injection timing is adjusted according to this instruction

Note! On these tractors the injection starting point in the 1st cylinder has been positioned with aid of an indicator pin in the pump governor housing.

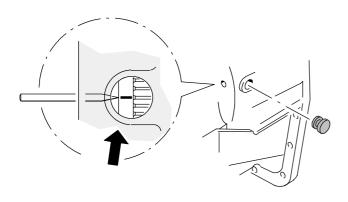

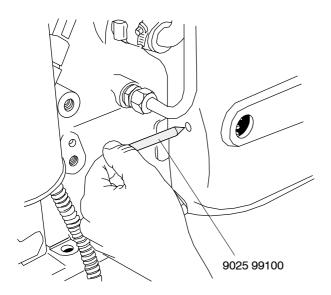

1. Turn the crankshaft to a position where the 1st cylinder piston reaches its compression stroke top dead centre. Then turn the crankshaft backwards until the timing mark on the flywheel is at the point of locator 9025 99100.

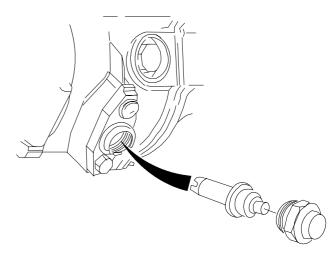

Page

8

- Unscrew the plug on the side of the injection pump. Take out the indicator pin.
- 3. Turn the indicator pin and push it into the hole so that the groove at the end of the pin points towards the pump.
- 4. If the pin groove fits on the boss on the governor weight assembly, the injection timing is correct. Otherwise, turn the pump to a position where the boss and the pin groove align.

Warning! Do not rotate the crankshaft when the groove end of the pin is inside the pump, since the pin end damages easily and metal pieces remain in the governor housing.

5. When the adjustment is correct, turn the indicator pin so that the groove points outwards (running position) and push the pin into the hole. Refit the plug.

Note! When checking the injection timing, an electric testing device can also be used, e.g. Bosch KDEP 1601 according to the instruction manual of the device.

Manifold pressure compensator on 6800 tractor (Bosch LDA)

Note! Boost control is fitted also on 8750 and 8950 tractors which have SigmaPower system.


The boost control unit on the governor housing has been connected via a hose to the engine inlet manifold. At low revs the boost pressure is low and engine tends to smoke. The boost control limits amount of injected fuel at low revs so that exhaust gas emissions are below standard R24. This adjustment starts at a certain, adjusted, boost pressure.

The boost control unit membrane is pre-tightened and air tight. A spring in the unit affects the lower surface of the membrane; the other end of the spring rests against the threaded guide sleeve (2). The spring tension can thus be changed in certain limits (adjusted in factory).

With thread equipped pin (1) is attached to the membrane. The lower end of the pin transmits movement of the membrane via an angle piece to the injection pump control rod (3).

When increased boost pressure presses the membrane downwards, also the pin moves downwards against the spring force and allows the control rod to move towards the greater fuel amount, which is injected into the combustion chambers. When the boost pressure decreases, the control rod moves towards the smaller amount of injected fuel.

Important! The boost control unit has been adjusted in the factory, and adjustments afterwards are not necessary.

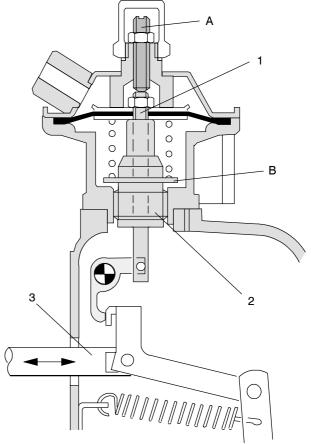

Picture 1. Boost control

A. Adjustment screw with which is adjusted fuel amount, which the injection pump injects at low boost pressure


B. The operating pressure is adjusted by removing the plug and by adjusting wheel B with a screwdriver.

Cold start solenoid

Note! This solenoid is also fitted on 8750 and 8950 tractors.

When the engine is started, the control rod must move to the starting position. This can be done by moving the boost control lever in the direction of the axle, so that the lever cannot affect any more the injection pump control rod. The mechanism functions with aid of solenoid and a cross shaft.

The solenoid is energised, when the ignition switch is turned in a starting position. The solenoid is energised as long as the starter motor is on. In the starting position, the solenoid is magnetic. When the solenoid moves to the starting position, a click sound can be heard from the injection pump.

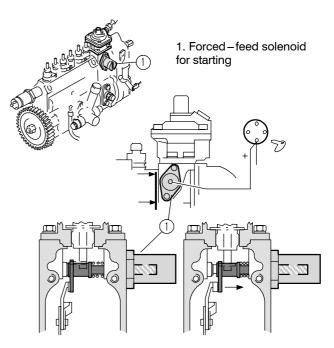

Running position

Starting position

2. Stanadyne distributor pump.

A. Removing pump

- 1. Clean the pump and the surrounding parts carefully. Remove the delivery pipes, the throttle cable wire from the revolution lever and the stop solenoid wire from the pump. Fit protective caps on the delivery pipe unions.
- 2. Remove the cover (+oil filler tube) of the front plastic covering so that the pump gear wheel becomes accessible.

Note! On some models the safety frame of the fan space must be removed.


3. Unscrew the gear wheel attaching nut. Detach the gear wheel by using puller 9052 48900.

Note! If the timing gear casing has not been removed, the injection pump gear wheel remains in contact with the idler gear and it is unnecessary to mark the positions of the gears.

Detach the injection pump from the timing gear casing. Clean the sealing surfaces.


Note! In the E-engines one injection pump fixing bolt is so called interrupted screw (i.e, it cuts off when it is tightened). Open this bolt by striking to the bolt outer edge with a chisel (strike to the opening direction).

B. Fitting injection pump and adjusting injection timing

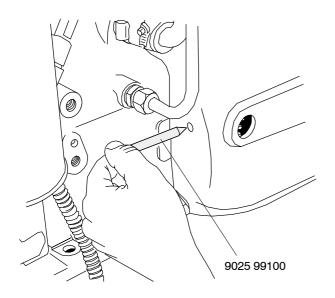

1. Turn the crankshaft to a position where the 1st cylinder piston reaches its compression stroke top dead centre. Then turn the crankshaft backwards until the timing mark on the flywheel is at the point of locator 9025 99100. (injection in no. 1 cylinder begins).

Note! Distance between the piston top face and the top dead center with different crankshaft angles, see page **210/7**.

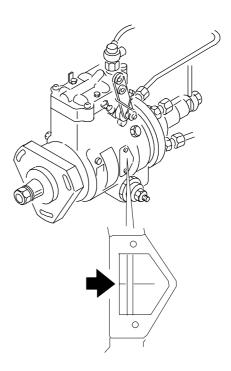

- 2. Remove the small cover plate on the side of the injection pump. Rotate the pump shaft until the timing marks align (see arrow in picture above).
- 3. Place a new sealing ring on the pump flange. Push the pump into place so that the key on the shaft engages with the key slot on the gear wheel.
- 4. Tighten the pump into position, where the timing marks align.
- 5. Tighten the gear wheel nut to a torque of **90 Nm**. Fit the small cover onto the side of the pump. Fasten the pump gear wheel covering (+oil filler tube).
- 6. Remove the protective caps from the delivery pipe unions and fit the delivery pipes. Fit the overflow pipe, throttle cable wire and the stop solenoid wire. Bleed the fuel system (see instruction C).


Note! Lubrication oil is not needed because fuel in the pump lubricates the internal parts.

Note! Concerning dynamic adjustment of injection timing on the E-engines, see page **223/13**.


	1.4>1997	Model	Code	Page
22. Fuel system	1. 8. 1998	8050-8550	223	11

C. Bleeding fuel system

Note! This fuel system removes automatically small amounts of air bubbles from the filter and the pump when the engine is running. However, bleed the system always, when the system has been opened or fuel has been exhausted during driving or a new spare pump has been fitted (to avoid long starting time).

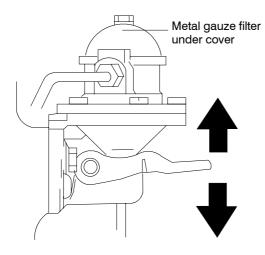

1. Pump by hand the fuel feed pump lever. If the pumping seems to be ineffective, turn the engine a little so that the camshaft cam is not at the feed pump lifter.

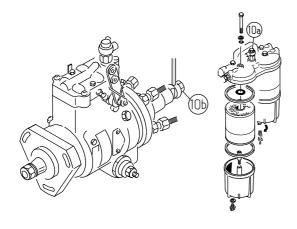

- 2. Loosen the bleeding screw (10a) on the filter. Pump with the hand pump until no air bubbles flows out of the bleeding screw hole. Tighten the bleeding screw.
- 3. Pump further with the hand pump and loosen the fuel inlet connection (10b) on the pump, until the fuel coming out is free from air bubbles. Tighten the connection.
- 4. Start the engine and assure, that no leaks exist.

Note! When the bleeding is done in this way, fuel flows immediately into the internal transfer pump when the starter motor is rotating and the distributor pump housing is filled quickly with fuel. In the pump housing there is a stop solenoid, which must not be switched on for longer periods when the pump housing is empty of fuel.

D. Fuel feed pump

For the membrane type fuel feed pump no spare parts are supplied. The feed pump must be changed for a new one, if the feed pressure has dropped noticeably (rated feed pressure is **0,2–0,5 bar** at low idling speed and max 0,2 bar less when engine is accelerating) or if the fuel feed pump has been damaged.

Measuring fuel feed pressure

Measuring equipment, see page 220/3.

Note! If the feed pressure value is below the rated value, possible reason can be:

- blocked fuel filter/fuel feed pump metal gauze filter
- faulty fuel feed pump
- blocked or leaked fuel pipes or pipe connections

Important! Under the fuel feed pump cover there is a washable metal gauze filter. If much impurities have gathered on this filter, fuel cannot flow to the feed pump and further to the injection pump and this causes malfunctions in the fuel system. Always when malfunctions appear, the feed pump cover should be removed and the metal gauze filter must be checked and cleaned.

Note! From manufacturing week G42 incl. the fuel feed pump gasket no. 8366 40335 has been removed and the sealing has been done with sealing glue T61050 (Weicon Lock AN 305–10 or 75), which must also be used in connection with possible leakages. Run the engine, until the cylinder block temperature is at least +60°C. Clean the sealing surfaces well by using suitable solvent. Apply the sealing glue onto the pump sealing face and fasten the pump. Let the sealing glue dry about one hour before the engine is started (if a fuel feed pump, which has been tightened with the sealing glue, should be changed, the pump fastening flange must be warmed up to about +200°C before removing the pump).


New fuel feed pump

In the tractor production has been started to fit a new fuel feed pump (420: **H7663**–. 620, 634: **H7728**–), which has an o-ring seal and four fixing bolts. This pump can be fitted also on earlier manufactured tractors, although they should have the earlier, with two bolts attached pump (mounting kit no. 8366 62052). In the cylinder block there are four fixing holes from the beginning of the year 98. The Spare Part Centre dispatches only the new pump.

On the next page there is an instruction on, how to fit the new pump.

50 223

Fitting new fuel feed pump

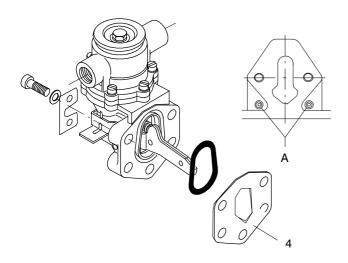

- Remove the old feed pump and fuel pipes
- Clean the sealing surface on the cylinder block
- Place an o-ring into the groove on the pump
- Engines with two fixing bolts: apply sealing compound T61050 (Weicon Lock AN – 305 – 74) on the cylinder block side of the flange 4 (if four fixing holes the flange is not fitted.
- Apply sealing compound also on the threads of the bolts (2 pcs or 4 pcs) and fasten the pump. Tightening torque is 30 Nm.
- Bend the pipe between the filter and pump or use a flexible pipe which incl. in the kit.

Note! If the cylinder block has already four threaded bolt holes, remove plugs from points A, and fasten the pump with four bolts (sealing compound on the threads of all bolts) without the intermediate flange (4).

Sealing compound (50 ml).....6909 30030 Sealing compound (250 ml).....6909 30016


E. Injectors

Injectors are checked and serviced according to instructions **G**-**J** on pages **223**/**5**-**7**.

The opening pressure of the injectors, see tables on pages 220/14-15.

Adjustment is achieved by changing the shims. The thickness of the shims varies from 1.00 – 1,90 mm and they are available in increments of 0,05 mm. A thicker shim will raise the opening pressure while a thinner one lowers it. A difference in shim thickness of 0,05 mm changes the opening pressure by approx. 5,0 bar. As the opening pressure of the injector drops slightly after adjustment, the opening pressure should be set to approximately 10 bar above the value given in the specifications. This value applies both to new and used injector.

F. Adjusting low idling speed

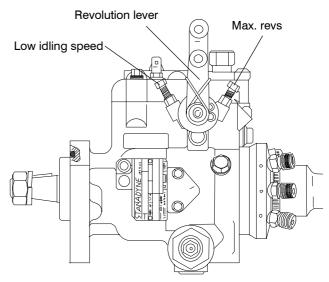

The low idling speed can be adjusted with a limiting screw in front of the revolution lever. The adjusting screw for max. revs has been sealed. This adjustment has been done in the factory, and adjustment of max. revs afterwards is prohibited.

Note! The throttle cable is attached to the revolution lever lower hole. To the upper hole is fastened a return spring.

Other information

The injection pump housing upper cover has been sealed to prevent adjustment of engine output afterwards. Also the stop solenoid is fitted under this cover. If the injection pump is damaged during the warranty period, a replacement pump must be fitted. After the warranty period it is recommended, that all pump repairs are made by an authorised Stanadyne workshop.

G. Bleeding Thermostart system

Always remove air from the glow plug fuel pipe when the pipe or reservoir has been emptied during repair work etc. This prevents damages to the glow plug caused by lack of fuel during starting.


- 1. If the reservoir is empty, fill it e.g. with a drip pot through the breather hole on the reservoir.
- 2. Open the glow plug pipe connector and drain fuel from the pipe. Connect the pipe.

H. Delivery pipes

On tractors 8050, 8150, 8450 and 8550 the delivery pipe appearance is the same, but on tractors 8050 and 8150 the inner diameter of the pipes is smaller than on tractors 8450 and 8550.

For this reason the pipes have different spare part numbers. Delivery pipes for 8450 and 8550 tractor (greater I.D.) have been labelled with tape.

I. Dynamic adjustment of injection timing

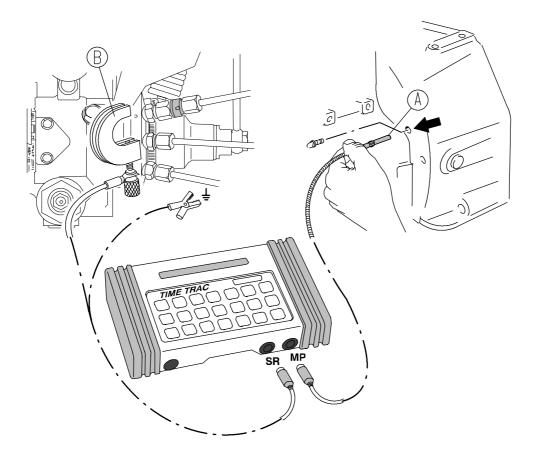

1. Let the engine run to a normal working temperature before adjustment.

Note! Stop the engine before connecting and disconnecting the adjusting device.

- 2. Remove the protective plug on the fly wheel housing on the LH side of the engine and fit the magnetic sensor **A** into the 8 mm hole. Press the sensor against the fly wheel. The sensor must not touch the fly wheel so pull it a little out (0,5...1,0 mm). Connect the sensor connector to the test device plug MP.
- 3. Fit fastener **B** on the brass ring between the pump and pipe and tighten the screw. Ensure, that the screw end touches the brass ring. Connect the injection sensor connector to the test device plug SR. Connect th earth wire to the clean metal surface on the engine or fuel system.
- 4. Switch on the test device by pushing ON/CLEAR button. In the display is visible "Time Trac" and "Model TT 1000" and then i "R=0". Now the device can be used as a rpm counter without other procedures.
- 5. Press button MAG PROBE. In the display appears "Trig Level 30%". Confirm by pushing ENTER.
- 6. In the display is visible "Offset 20.0° ". Confirm by pushing ENTER.
- 7. In the display is visible "Calibrate?". Start the engine and let it run at low idling. Press ENTER so that in the display is visible "R=Set RPM". Compare the revs on the dashboard rev counter reading and specified values with TimeTrac, see pages 210/3, 210/18 and 210/19.

Note! Ensure before engine start that the wires do not touch the exhaust manifold or movable parts.

8. If the revolution reading is correct, press ENTER after which text "Calibrating...". is visible in the display

Note! If the revs signal disapperas or engine stops , in the display flashes text "Eng. Not running" and the device returns to the revs mode. Start again by pressing button MAG PROBE (return to point 5).

9. If the engine is running at 850 r/min and the pump advance is 6° btdc, in the display there is visible "R=850 MP + 6.0". Now the device is ready for adjustment.

Note! If the magnetic sensor signal is cut or the sensor is lacking, in the display there is text "R=850 No Probe". When the signal returns, the device shows again the injection advance.

10. The injection time is checked at high idling revs [TT (HI)]. If the injection timing deviates much from the specified value, adjust the base timing of the pump or check possible disturbances.

If the values of the dynamic timing cannot be adjusted to specified value, then the pump must be repaired in the authorised Stanadyne workshop. The function of the pump injection advance governor is assured by checking the injection timing at a low idling speed [TT (LI)].

Adjusting values, see tables on pages 220/14.


See also instructions of the device manufacturer.

		Model	Code	Page
22. Fuel system	1. 11. 1998	6200, 6900	223	14

Possible disturbances

If the injection timing deviates much from the specified value, check the following points:

- 1. Vibrating delivery pipe, hold to the pipe with one hand.
- 2. The distance between the magnetic sensor and the flywheel is incorrect, reposition the sensor.
- 3. Offset or Trig Level value incorrect, reset the values.
- 4. Disturbing grooves on the flywheel.
- 5. The mutual position of the flywheel and the crankshaft incorrect, remove the flywheel and fit it to the correct position in relation to the crankshaft.

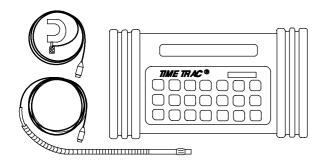

8366 62022 Electronic device for injection timing



	15. 5. 1996	Model	Code	Page
23. Cooling system	1. 8. 2000	6000-8950	230	1

Contents

eneral (Op no 230):	
ecifications	:
ecial tools	;
oling system, description and maintenance	
epair instructions (Op no 231):	
Thermostat	
Reconditioning coolant pump (320-, and 420-engines), -K6490	
Reconditioning coolant pump (620 – engines)	:
Quality requirements of engine coolant	
Coolant pump and thermostats on 8050 and 8150 tractors	'
Coolant nump and thermostats on 8450 – 8750 tractors	

23. Cooling system	1.8.1998	Model	Code	Page
23. Cooling system	1. 8. 2000	6000-8950	230	2

Specifications

Coolant pump (320, 420 engines), -K6490.

Outside diameter of bearing Inside diameter of bearing housing in pump body Shaft diameter Impeller hole diameter Diameter of the seal recess in the pump body The impeller is pressed onto the shaft until the distance between the rear face of impeller	38,05838,083 mm 15,91015,920 mm 15,88115,899 mm
and the rear face of the pump body is	1,8-2,2 mm
Distance of belt pulley from rear face of body:	
- 320DS; -E7535, 420D/DS; -E7054	178,3178,7 mm
- 320DS; E7536-, 420D/DS; E7055	174,4-174,6 mm
Fan guide diameter	25,0025,20 mm
Balancing precision of fan	0,3 Ncm max
Max. permissible eccentricity of fan	±0,3 mm
Belt deflection	1520 mm

Coolant pump (620/634 engines)

Outside diameter of bearing	52 mm
Inside diameter of bearing housing in pump body	51,97952,009 mm
Shaft diameter at bearing	19,98019,993 mm
Shaft diameter at impeller	15,90715,920 m
Impeller hole diameter	15,88115,899 mm
Diameter of the seal recess in the pump body	
Distance between impeller and rear face of pump body	0,8-1,2 mm
Balancing precision of fan	0,3 Ncm max (30 pcm)
Belt deflection	1520 mm

Fan diameter

– 6000 – 6600	483 mm
– 6800, 6900	508 mm
- 8000-8100 (later models)	508 mm (533 mm)
- 8200/8400 (later models)	533 mm (585 mm)
– 8050	533 mm
– 8150	585 mm
 On 8450 – 8750 the cooling fan is fitted on the viscous coupling. 	
8200, 8050 and 8150 has 8 cooling fan blades, other models 6 blades.	

Thermostat

Spare part number	Туре	Opening	Fully	Max stroke
		begins at	open at	mm
8361 15646 (6000-8400)	ø67/79°C	79°±2°C	94°C	8
8361 15718 (6000 – 8400)	ø67/83°C	83°±2°C	97°C	8
8360 15156 (8050 – 8750)	ø54/79°C	79°±2°C	94°C	7,5
8363 31590 (8050 – 8750)	ø67/83°C	83° ± 2°C	95°C	8

Tightening torque


Coolant pump belt pulley nut	120 Nm
Fan attaching bolts	30 Nm

23 Coolant numn	1.1.1994	Model	Code	Page
23. Coolant pump	1. 8. 2000	6000-8950	230	3

Special tools

Order no	Description
9101 93200 *)	Puller for coolant pump impeller, 620 – engines
9022 03500 *)	Puller for coolant pump impeller, 320 - and 420 - engines (earlier no 8360 85499)
9104 27700	Puller for coolant pump impeller, new coolant pump (420, K6491 –), see page 230/8.
9051 40200 *)	Drift for fitting coolant pump seal (seal no 8353 31202)
9051 79300 *)	Drift for fitting coolant pump seal (seal no 8353 39425)
9051 64900 *)	Drift for fitting coolant pump shaft, 320 – and 420 – engines
9052 48900*)	Puller for fan hub (see Fuel system)


^{*)} Same tool as for engines on 505-905 tractors.

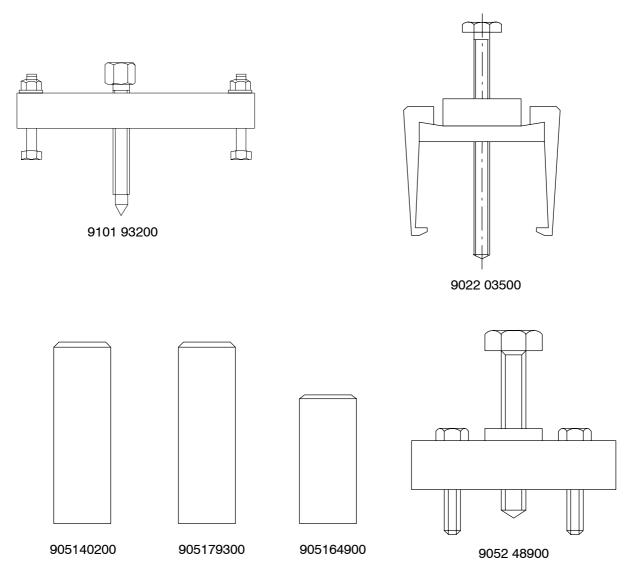

Model 6000-8750 Code 230

Page

4

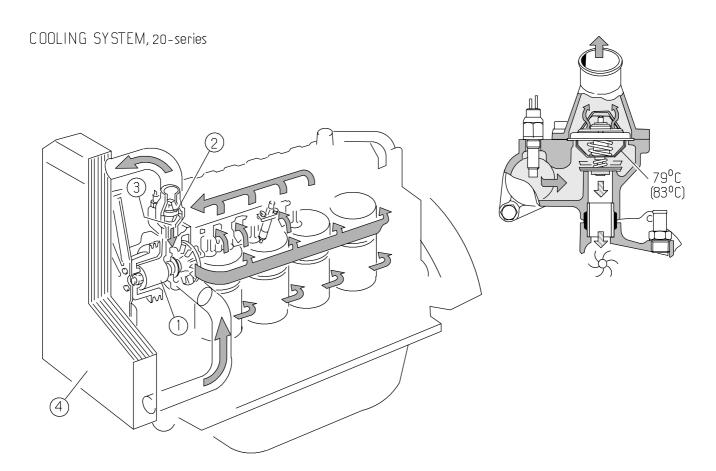

Cooling system

- 1. Coolant pump
- 2. Thermostat
- 3. By-pass passage
- 4. Radiator

Description

The belt driven, centrifugal type coolant pump is attached at the front end of the cylinder block and the thermostat housing is fitted above the pump. The system has an internal coolant circulation via the by-pass passage and the circulation is controlled by a two-way thermostat. With this is achieved an even warming in all conditions.

The coolant pump has separate ball bearings and the pump shaft and the bearings are built together to form one unit (320 - and 420 engines).

The thermostat opens at 79°C. During a cold season, a thermostat with the opening temperature of 83°C can be use.

Maintenance

Check the coolant level daily.

The level of the coolant should be slightly above the radiator core. If the tractor has an expanison tank, see the next page. Check the condition of the fan belt since it drives the coolant pump. Stop the engine immediately if the coolant temperature rises too much.

Caution! Open the radiator cap carefully, if the coolant is hot as there will be pressure in the system. Carefully turn the radiator cap to the first stop. This will allow the pressure to be released from system.

N.B! The coolant pump is provided with a drainage hole on its underside. This hole must not be blocked. If coolant drips out of the hole, the pump seal is faulty. There may be slight leakage on a new engine before the pump has been run in.

Freezing point of coolant


Check the freezing point of the coolant at the beginning of the cold season. If the freezing point is too low, drain off some of the coolant and top up with anti-freeze. Run the engine for a while until the anti-freeze has been mixed in, then recheck the freezing point of the coolant. Drain the cooling system completely every second year and refill with new coolant. Never use just water as a coolant.

Clean regularly the radiator externally from insects and other impurities.

https://tractormanualz.com/

Page **5**

Expansion tank

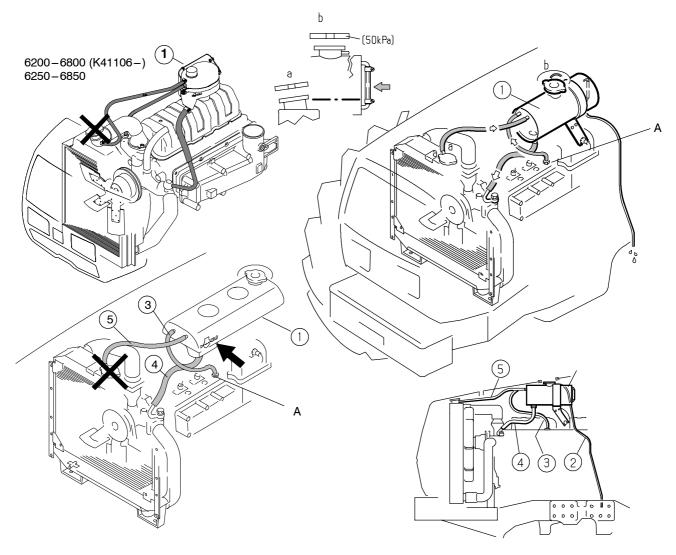

Picture 2. Cooling system on 8200–8400 tractors from ser. no. 668118 and on 8050–8750 tractors and on HiTech tractors 6550–8950. On the latest 4–cyl. tractors 6200–6800 and 6250Hi–6850Hi the expansion tank has a different shape (same as on 100–series tractors)

- 1. Expansion tank (volume 4 I). Earlier tractors had metallic and later plastic expansion tank.
- 2. Breather hose (metallic tank)
- 3. Filling hose
- 4. Outlet hose
- 5. Connection hose to radiator

Emptying the system in connection with repairs:

- carefully open the expansion tank cap
- empty the radiator through the emptying tap (if not the tap, disconnect the lower water hose)
- unscrew the cylinder block emptying plug
- open the oil cooler emptying plug (if fitted)
- open the cab heater adjusting knob
- empty the intercooler via the plug (if fitted)

Filling the system in connection with repairs: First fill the radiator and after that the expansion tank. The coolant level should be to the height of 1/3 of the level indication hose length (metallic tank) or in the latest tractors (plastic tank) the coolant level must stand at the expansion tank level marking (black arrow in the picture above), when coolant is cold.

The level of hot coolant is upper. Before filling the expansion tank, unscrew the bleeding plug on the RH side of the thermostat housing, until no air flows out.

Checking the coolant level: The system has enough coolant, if the coolant can be seen in the level indicator hose (metallic expansion tank) or in the plastic tank the coolant level surface stands at the mark line on the tank.

Note! The front cover has perforations to improve air flow through the radiator.

Warning! Do not open the radiator filling cap, if the coolant is hot. All maintenance works of the coolant system should be made through the expansion tank filler cap.


Important! If the cooling system has been emptied, check the restriction holes in the thermostat housing and in hose union A (see picture above) so that they are not blocked. Clean if needed.

From engine number F5239 (8450–8750) and F6150 (8200, 8400) incl, the restriction hole in the hose union A has been changed from ø 3^{+1} mm to ø $2^{\pm0.2}$ mm. If the expansion tank foams over, the new restriction must be fitted onto the earlier manufactured tractors.

Page **6**

Viscous fan

(Ø 600, 8 pcs blades)

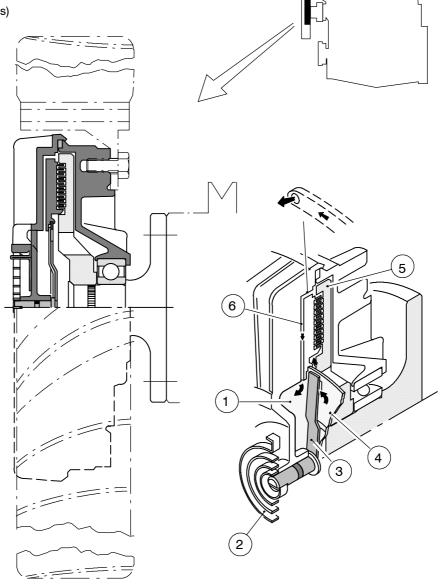

Picture 3. Viscous fan on 8350, 8400 (model 2001), 8450, 8550, 8750 and 8950.

- 1. Reservoir (filled with silicone fluid).
- 2. Heat spring
- 3. Arm
- 4. Valve plate (fixed)
- 5. Coupling
- 6. Return passage

On the above mentioned tractors the engine cooling fan has been attached on the thermostatic viscous coupling.

In the fan hub there is a small reservoir for viscous oil. On the hub there is also a thermostatic valve, which senses temperature of air which flows through the radiator.

The fan and the hub are attached on the shaft which is rotated by the engine with the aid of the fan belt. In cold conditions the fan is free on the hub and does not rotate.

When air which flows through the radiator has a certain temperature, the thermostatic coupling allows a little oil to flow into the fan hub and a this creates a "fluid drive" which drives the fan and the amount of cooling air increases.


The fan hub includes a small pump, which continuously returns viscous oil into the reservoir. When the temperature lowers, the thermostatic coupling closes, fluid flow and the fan speed decreases.

Note! The viscous fan cannot be repaired, but a damaged fan must be changed for a new one. The fan function can be verified by warming the engine and by watching when the fan starts to rotate. On tractors with the viscous fan the tractor frame front piece is longer.

	1.6.1999	Model	Code	Page
23. Cooling system	1. 9. 2002	6000-8950	230	7

Temperature sensor, engine coolant temperature:

The sensor is placed on the engine beside the thermostat housing:

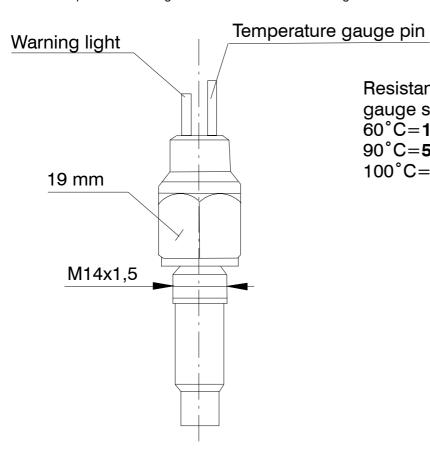

Resistance value, temperature


gauge side: $60^{\circ}\text{C} = 134 \pm 13,5 \Omega$ $90^{\circ}\text{C} = 51,2 \pm 4,3 \Omega$ 100°C=**38,5**± **3,0** Ω

Order no	Alarm temperature
6542 71208	98 ± 3°C
8366 40772	106 ± 3°C

	1. 8. 2000	Model	Code	Page
23. Cooling system	1. 9. 2002	6250-6850	230	8

Coolant pump

Valtra 6250Hi-6850Hi (K16108-). From engine number K6491 incl. Valtra 6200-6400 (K41106-).

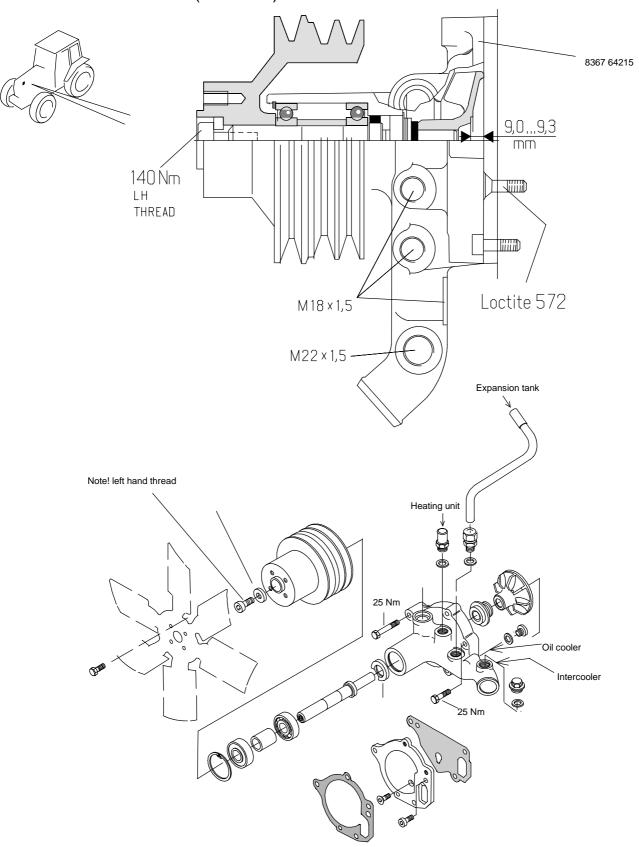




_	15. 3 .1996	Model	Code	Page
23. Coolant system	1. 8. 2000	6000-8950	231	1

Repair instructions (Op no 231)

A. Thermostat

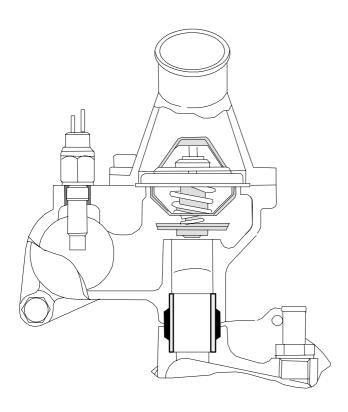

The thermostat is of a two—way type. Its opening temperature is 79°C. In winter a thermostat can be used with an opening temperature of 83°C.


Check the function of the thermostat as follows:

- lower the thermostat into a vessel of boiling water so that the thermostat does not touch the sides or bottom.
- opening must begin under 20 seconds.
- The thermostat must be fully open under 50 seconds.
 Stroke, see specifications.


Note! On 8050-8750 tractors there are two thermostats. The opening pressure of the smaller thermostat is 79° C and the larger thermostat 83° C. Check the thermostat in the same way as described above.

B. Reconditioning coolant pump (320-, and 420-engines), -K6490.

- 1. Drain the engine coolant. Disconnect the water hoses from the thermostat housing and from the coolant pump. Remove the thermostat housing and the by – pass hose.
- 2. Slacken the alternator fixing bolts. Remove the fan and the pump belt pulley. Remove the v-belt.
- 3. Detach the coolant pump. Remove the pump rear plate and clean the sealing surfaces.

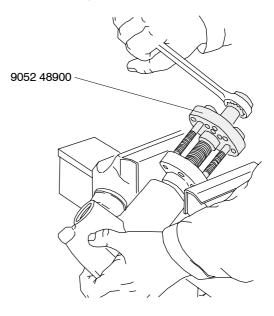

4. Remove the fan hub using puller 9052 48900. Remove the circlip from the pump body.

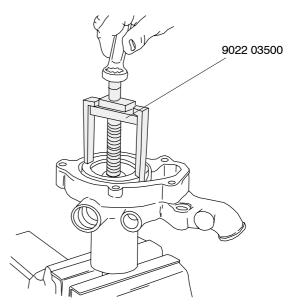

5. Remove the impeller using puller 9022 03500. Press the shaft out of the pump body in the direction of the fan. Use a hydraulic press. Support the body so that the shaft bearing unit has enough space for releasing.

23. Cooling system

1. 1. 1995 15. 5. 1996

Model **6000-8750**


Code **231**

Page 2

6. Tap out the shaft seal in the body using a suitable drift. Clean all parts and inspect their condition. Replace damaged parts with new ones.

N.B. If the pump shaft has to be changed, use a reconditioning kit. This kit also contains all seals (see Parts Catalogue).

7. Press the shaft into its location in the body using special tool 9051 64900 and fit the circlip.

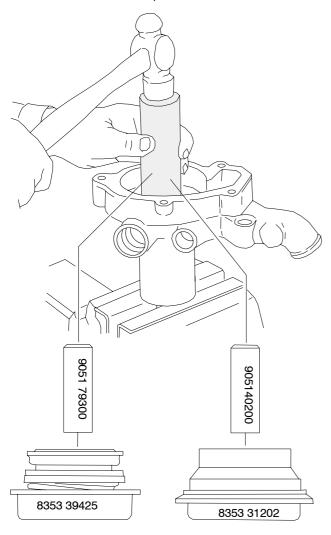


- 8. Fit the shaft seal. Use as a "lubricating liquid" coolant between the shaft and the seal. Two different seal types are used. Both these seals are fitted with their own drift (see figure above).
- 9. Press the impeller and the hub to the correct depth (see figure) and support the shaft at the other end. Ensure that the shaft can rotate freely. Fit the rear plate using a new gasket.

Note! Coolant pumps (and crankshaft belt pulleys) have been changed with effect from engine numbers mentioned below:


- 320DS-engines: E7536-
- 420D/DS-engines: E7055-.

This modification should be observed when ordering spare parts. The adjusting values, see picture above.

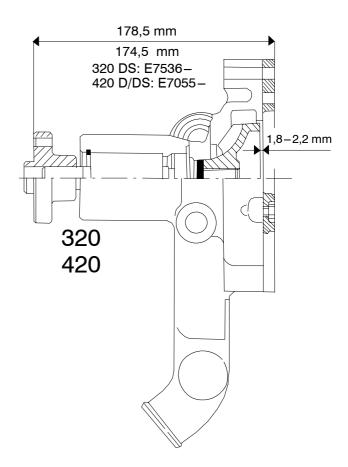

C. Coolant pump on 8000, 8100, 8200 and 8400

- 1. Drain the coolant. Remove the thermostat housing, fan and the $\nu-$ belt.
- 2. Remove the coolant pump. Detach the pump rear plate and clean the sealing surfaces.
- 3. Unscrew the belt pulley fixing nut and remove the belt pulley. Use puller 9052 48900 if needed.

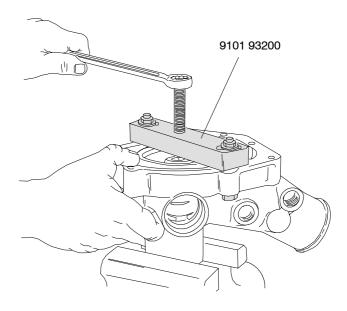

4. Remove the impeller on the shaft with puller 9101 93200.

23. Cooling system


1. 9. 1992 1. 1. 1995

Model **6000-8750**


Code **231**

Page 3

- 5. Remove the circlip in the pump body. Press the shaft together with bearings in the direction of the fan. Use e.g. a hydraulic press. Support the pump body so that the bearings have enough space for releasing.
- 6. Tap out axial and shaft seals using a drift. Clean the parts and inspect their condition. Replace faulty or worn parts with new ones.
- **N.B.** If the pump bearings have to be changed, use a reconditioning kit. This kit also contains all seals (see Parts Catalogue).
- 7. Drive in the new shaft seal in the housing using a suitable drift. Put the bearings and the intermediate sleeve onto the shaft. Grease bearings with heat—resistant ball bearing grease. Fit the shaft and the bearings in such a way that the pressing force is not transmitted by the bearing balls. Fit the circlip for the bearing.
- 8. Fit the shaft seal, see heading B paragraph 8.

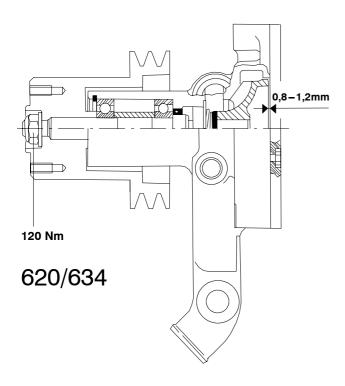

- 9. Press the impeller into position while, at the same time, supporting the shaft at the other end. The mounting depth of the impeller is **0,8–1,2 mm** (see figure above). Make sure that the shaft can rotate freely.
- 10. Fit the belt pulley and tighten its attaching bolt to a torque of $120\ Nm$.

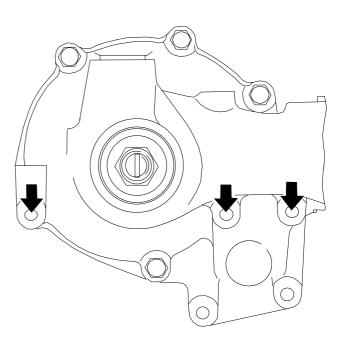

11. Fit the rear plate using new seals. Use guide pins (Ø8,5 mm) in the holes shown with arrows in the picture above.


D. Quality requirements of coolant

The coolant used must meet the standards ASTM D3306-86a or BS 6580:1985.

- Mixing proportion should be 40-60 % of ethyls-glycol based coolant and the rest water. The best ratio is 50/50 %.
- In warm climates the 30 % mixture ratio gives enough good protection against corrosion.
- Water used should be clean and soft water i.e. that it does not include metals and their salts.
- Check the coolant frost resistance every now and then.
 Change the coolant every other year. Never use just water as a coolant.

	15. 5. 1996	Model	Code	Page
23. Cooling system	1. 9. 2002	8050, 8150	231	4

E. Coolant pump and thermostat housing on 8050 and 8150

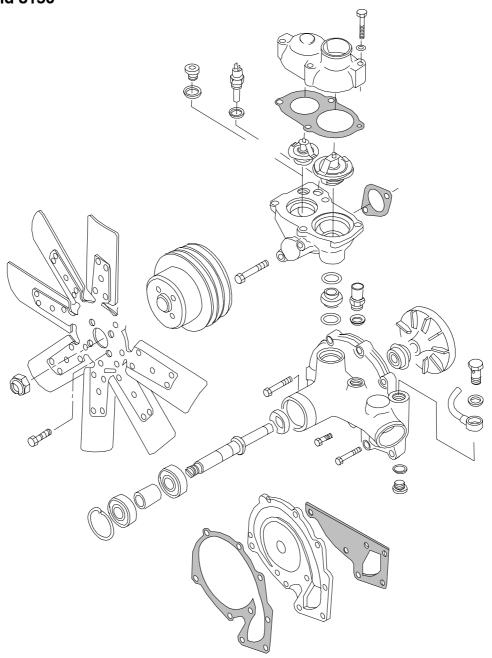


The coolant pump is the same as on 8000–8400 tractors, see instr. **C** on page **231/2**.

8050 and 8150 tractors have two thermostats. Opening pressure of the smaller thermostat is $+79^{\circ}\text{C}$ and larger $+83^{\circ}\text{C}$. The circulation of the coolant has been designed so that the smaller thermostat opens first and allow a part of coolant to flow into the radiator. When temperature further rises the larger thermostat opens and allows coolant to flow into the radiator.

The coolant pump has been modified from engine ser. no. **K11636** incl. One fixing bolt has been added and the pump back plate and the gasket has been modified. The earlier pump can be fitted in place of the modified pump by leaving out the extra fixing bolt. The pumps' internal parts are the same.

F. Coolant pump on 8450-8750 tractors

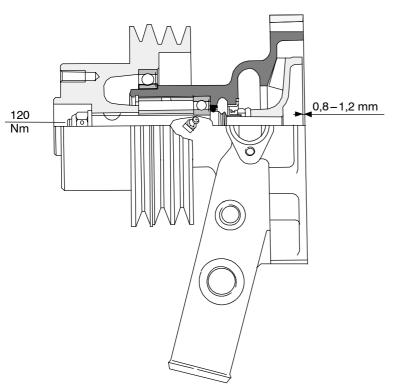


On 8450, 8550 and 8750 tractors the coolant pump pulley bearing is different compared with other 6—cylinder engines. The belt pulley is different on 8750 tractor compared with 8450 and 8550 tractors.

The impeller can be removed with puller 9101 93200. Pump seal no 8353 39425 can be fitted with sleeve 9051 79300. When removing the pulley, tool 9052 48900 can be used (see instr. C on page 231/2).

Picture 4. Coolant pump, viscous fan and thermostat housing on 8450 – 8750 tractors.

The thermostats are the same as on 8050 and 8150 tractors.

The coolant pump has been modified from engine ser. no. **K11636** incl. One fixing bolt has been added and the pump back plate and the gasket has been modified. The earlier pump can be fitted in place of the modified pump by leaving out the extra fixing bolt. The pumps' internal parts are the same.

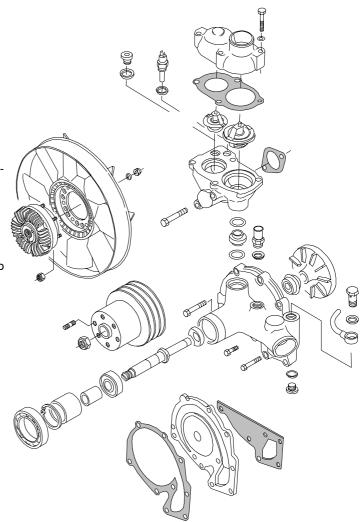

PRE-CLEANER, FITTING INSTRUCTION	17.05.1994	Model	No	Page
	08.04.1998	8100, 8400	29.1	1(2)

Pre-cleaner (8400, vertical air filter) 32938500 Pre-cleaner (8100, vertical air filter) 33267100


 The self-cleaning precleaner of a cyclone type is intended to be used in very dusty conditions.
 Impurities are removed from the precleaner with aid of suction created by exhaust gas flow.

FITTING:


- Remove the engine side plates and the exhaust pipe, precleaner and the engine upper plate.
- Remove the vertical pipe from the air cleaner (except if the tractor has precleaner Turbo II)
 Remove the silencer.
- Make an extra hole through the engine upper cover plate (see picture). Paint hole edges to prevent corrosion.
- Fit a new silencer 1A in position. Fasten parts 9,14,13 and hose 12 onto the silencer.
 Place the vertical pipe 8 in position.
 Fit the engine upper plate and pass hose 12 through the hole which was made earlier.
 Make, if necessary, a notch on the filter plastic cover for the hose.
- Fasten the exhaust pipe 2B and precleaner 6 with necessary parts. Turn the precleaner so that the hose 12 does not prevent visibility from the driver's place.

	1	32938500	Esisuodin	Cyklon	Cyclone	Vorfilter D	6800,8400 Assy OONASPIN
	1	33267100	Esisuodin	Cyklon	Cyclone	Vorfilter	8100 Assy DONASPIN
6	1	32938600	.Esisuodin	Cyklon	Cyclone	Vorfilter	
7	1	32941900	.Holkki	Hylsa	Sleeve	Hülse	
8	1	32803200	.Putki	Rör	Pipe	Rohr	
9	6	GP3923	.Letkunkiristin	Slangklämma	Hose clip	Schlauchbinde	er
10	1	GP3935	.Kiristin	Klämma	Clip	Klammer	
11	1	32945300	.Putki	Rör	Pipe	Rohr	
12	1	32938700	.Letku	Slang	Hose	Schlauch	
13	1	32945400	.Putki	Rör	Pipe	Rohr	
14	2	32945100	.Letku	Slang	Hose	Schlauch	
	1	32941200	.Äänenvaimennin	Ljuddämpare	Muffler	Schalldämpfer	8400
	1	32945800	.Äänenvaimennin	Ljuddämpare	Muffler	Schalldämpfer	8100
	1	32941600	.Putki	Rör	Pipe	Rohr	
	1	32949300	.Kiristin	Klämma	Clip	Klammer	
(1	32946800	.Konepeitto	Motorhuv	Engine hood	Motorhaube)
Ì	1	33267200	.Konepeitto	Motorhuv	Engine hood	Motorhaube	8100)

PRE-CLEANER, FITTING INSTRUCTION	17.05.4994	Model	No	Page
	08.04.1998	8100, 8400	29.1	2(2)

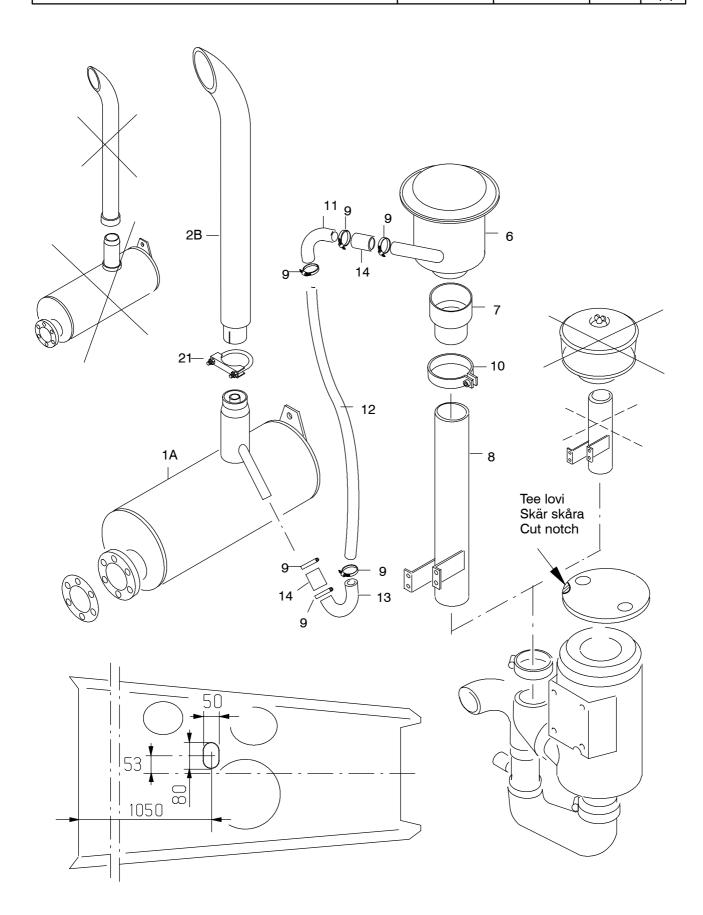

30. Electrical system

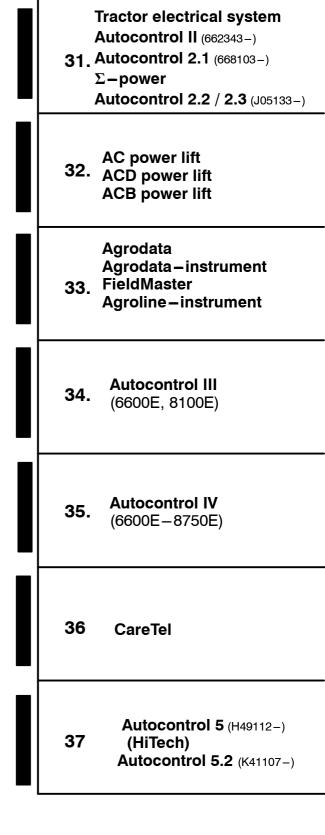





	1, 11:1998	Model	Code	Page
31. Tractor electrical system	1. 6. 1999	6000-8950	310	1

General

The tractor electrical system, ACII, AC 2.1, AC 2.2 and SigmaPower are described in section 31. The tractor is also equipped with an electro—hydraulically controlled power lift, see section 32. Agrodata performance monitor, AD—instrument and Field-Master are available as an optional equipment, see section 33. 6600E—8750E models have an electric control system ECS: Autocontrol—III, see section 34, Autocontrol IV, see section 35. CareTel is described in section 36 and AC V in section 37.

Valmet 6000 – 8750 tractors have 12 V electrical system (negative earthing). Battery (12 V, 160 Ah) is fitted in the engine compartment in front of the cab.

Voltage	160 Ah
Alternator: - Magneti Marelli	870 W 1,28 kW
- Magneti Marelli	3 kW 3,1/3,6 kW operated by the clutch pedal
Bulbs: - headlights - rear lights/brake lights - direction indicators - working lights - instrument panel and warning lights - cabin light - parking light	5/21 W 21 W 55 W-H3 2 W-1,2 W 2X10W-4 W

Safety precautions for the electrical system:

- always connect the battery with the correct polarity
- disconnect the negative lead of the battery first and connect it last
- -disconnect the battery leads before removing the alternator
- remove the battery caps during charging to prevent the build up of explosive gases in the battery

Important!

The alternator wiring must be disconnected before arc welding is carried out on the tractor or an implement which is attached to it.

Never run the engine with the alternator disconnected. Do not attempt to connect any additional electrical equipment, as this may damage components of the existing electrical system.

Alternator

The tractor has a negative—earthed alternator which can easily be damaged if incorrect connections are made in the electrical system. For example, connection of the battery with wrong polarity can burn the alternator or rectifier. The charging current circuit must not be broken when the engine is running.

Battery checks and maintenance

- Check the charge in the battery using a hydrometer (acid tester). The density of the electrolyte should be at least 1,23.
- Make sure that the fan belt (belts) are always correctly tensioned.
- Keep the battery clean. It can be washed with lukewarm water after removal from the tractor..
- Also clean the pole studs, the cable terminals and the battery retainer thoroughly. Wash off oxidized spots with water.
 Wipe the outside of the battery when it is clean, and coat the pole studs and the cable terminals with petroleum jelly.
- Refit the battery.



Caution!

It is forbidden to smoke or have a naked flame near the battery. The battery gives off explosive hydrogen gas!

Battery electrolyte is corrosive.

IMPORTANT WARNING! Always when the electric welding is done to the tractor, disconnect both battery cables (+ and –) and alternator wires. Otherwise the tractor electric system (e.g. Σ –Power, CareTel, Agrodata, AC/ACD power lifts, ACIII, ACIV, ACV etc.) can be damaged.

Note! Auxiliary equipment must be fitted according to the instructions. Fuse nominal current rating must be checked before fitting. On HiTech models any auxiliary components must not be fitted to the AC V electric circuit (e.g. F24) (safety risk).

6> 1999 1.9.2002

Model 6000-8950 Code

310

Page

2

Fuses and relays

The fuse box is placed under the instrument panel. The fuse box should always be kept clean. It contains 30 fuses. The nominal current rating of the fuses is 5-20 A. If any of the fuses blow, the fault must be traced and remedied. Fuses must not be replaced with ones of higher a rating, since this may cause damage to the electrical equipment. There are space for reserve fuses between the fuses.

Important! Fuses on E-models, see section 34 (Autocontrol III) or section 35 (Autocontrol IV)

Fuses

- Hazard warning flashers, (water pump) F1
- F2 Clock, radio, tachograph, CareTel 5 A
- F3 15 A Main beams, -indicator light
- F4 Dipped beams 15 A
- F5 10 A Parking light, left
- F6 10 A Parking light, right
- F7 25 A Front working lights
- 25 A Light switch F8
- F9 15 A Trailer socket/rear fog light
- F10 25 A Ignition switch, thermostart (3 pole socket) (not HiTech and AC 2.2)
- F11 5 A Hydraulic power lift (+bat), buzzer (AC2) Not HiTech.
- F12 10 A Rotating warning light, cab light, AC 2.2, HiTech 2.0: radio
- Brake light. 662343-, reserve (AC II, 2.1, 2.2) F13 10 A
- F14 Reserve (water pump). HiTech and AC 2.2: 15 A Ignition switch, thermostart
- 25 A Fan III-speed F15
- 10 A Rear working lights, inner F16
- 10 A Direction indicators, (Agrodata), FieldMaster Not HiTech.
- F18 5 A Instruments, warning lights, Autocontrol
- 10 A Combination control, wiper return AC 2.2: Windscreen wiper/washer, horn
- F20 10 A Rear window wiper/washer, Radio.
- F21 15 A Fan I, II, air conditioning, floor fan
- 10 A Solenoid valves. 662343-, 4WD, PTO, Delta F22 Power Shift (AC II), front PTO, 4WD (HiTech). Sensors (HiTech).
- 10 A F23 Rear working lights, outer
- F24 10 A Reserve. 662343-, speedometer (AC-4 unit) AC5, hand brake (HiTech). Seat direction.
- 15 A Air suspension seat, seat heating, reverse drive F25 control lock
- F26 10 A Reserve (electronic air filter)/reverse buzzer, Sigma, Hi Shift.
- F27 Reserve. 662343 - , brake lights, diff. lock (AC II)
- Reserve (telephone). 2 A if handsfree. F28
- F29 Cigarette lighter, 2-pole power socket 10 A
- Rear fog light (reserv) (AC-4 sensors), CareTel F30 10 A 1 A, if handsfree.
- (F31) 15 A . Electric air filter
- F50 Stop solenoid, 8950.
- Main current switch, control, in engine (F51) compartment.

Relays

- K 1 relay, front working lights
- K 2 relay, rear working lights
- K 3 control relay, diff. lock/4WD. 662343-, fog lights
- K 4 relay, starter switch
- K 5 relay, starter switch
- K 6 relay, fan III-speed
- K 7 reserve. 662343-, relay for four wheel braking (AC II)
- K9 interval wiper relay (in front of the fuse box)
- K10 Relay direction indicators (in front of the fuse box)

K14 relay, starter motor (in engine compartment)

Relays K11, K12, K13, K15 and K16, see Autocontrol II under code 311 or Autocontrol 2.2 under code 314.

K18 Control Stop, see under code 312 (AC 2.1)


K19 Relay for Σ -power system (ETB), see code 313.

K24 Relay for Hi Shift, see code 412.


K27 Relay for 4WD in AC 2.2, see code 314

K28 Relay for hand brake, see section 50 (in lever console)

Note! X1 - X7, see wiring diagrams. Fuses and relays are also listed in all wiring diagrams in this manual.

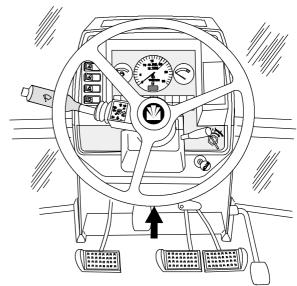

Position of fuse box

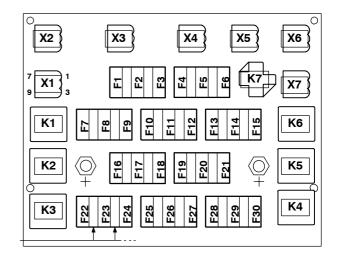

Circuit card, fuse box

(The fuse diagram is placed under the fuse box) With effect from ser. no 662343, frames of relays K3 and K7 change places.

Note! From ser. no. F50112 incl. the circuit card in the fuse box has been changed. At the same time wire looms have been modified. The new circuit card is interchangeable with the earlier one, except on older AC IV tractors, on which wire 353 yellow (between pins X6/2-X6/3) must be removed when the new circuit card is fitted.

Spare part numbers:

https://tractormanua/zir6@ra/d 31542330 - earlier circuit card 31542320

31.	Tractor	electrical	SI	vstem
•			_	,


8.11.	1990
1. 8. 1	998

Model	
6000-875	0

Code **310**

Page 3

Headlight adjustment

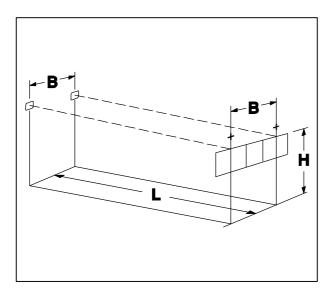

Correct adjustment of the headlights is very important when running on the public highway.

Headlight adjustment can be carried out quickly and accurately by using an optical headlight adjusting unit. If no optical instrument is available, adjustment can be done as follows:

Check before adjusting the headlight that the tractor loading is normal and tyre pressures are correct. With dipped – beam switched on, the cutoff edge of the light pattern should come at height H when the tractor is at distance L. With full – beam switched on, the distance between the light points should be B. Any necessary adjustment is done with the headlamp adjusting screws.


Measurements:

 $L = 5 \, \text{m}$

B = Distance between headlight centres

H = Height of headlights above ground minus 50 mm

Standard trailer socket

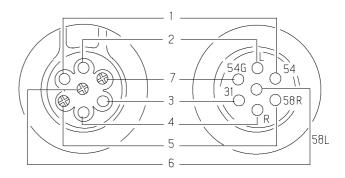

- 1. Brake light (red)
- 2. LH side direction indicator (yellow)
- 3. Earthing (white)
- 4. RH side direction indicator (violet)
- 5. RH side parking light (brown)
- 6. Permanent current, max. 15 A. This current can only be cut with the main current switch (if fitted).
- 7. LH side parking light (black)

	15-8.1992	Model	Code	Page
31. Tractor electrical system	15. 5. 1996	6000-8750	310	4

Electrical equipment for engine

Starter motor Magneti Marelli (Lucas) M 127/2,8 12 V

Spare part no 8353 31592

Test values, unloaded:	
- speed	5500-8000 r/min max
- current consumption	115 A
- voltage	
Test values, loaded:	
- speed	1000 r/min
- current consumption	670 A
- torque	
- voltage	8,0 V
Locked rotor:	
- speed	0 r/min
- current consumption	1160 A
- torque	45,4 Nm
– voltage	
Brush spring pressure (new brush)	
Min. brush length	
Commutator, min. diameter	

Note! Tractors 8050–8750 have starter motor **ISKRA 12 V 3,6 kW** (F2858–). Mezzo-tractors which have Bosch in-line fuel injection pump, have a new starter motor **ISKRA 12 V 3,1 kW** (6000–6800: F3792–), (8000–8400: F3818–).

Alternator Magneti Marelli (Lucas) A127-65

Spare part no 8366 40128 (6100-6600) Spare part no 8353 39304 (8000, 8100)

Nominal voltage	12 V
Max. current 6000 r/min	65 A
Earth	minus (-)
Max permissible speed	
Brush length, new brush	
Min. brush length	
Brush spring pressure	
Stator, no of poles	12
Stator, no of phases	3
Stator resistance	18 ohm
Rotor resistance	2,9 ohm
Control voltage	13,4 V
Nut for belt pulley, tightening torque	50 Nm

Note! Tractors 8050-8750 have alternator ISKRA 95 A 12 V, 1,28 kW.

1. 8. 1998 1. 9. 2002

Model **6000-8950**

310

Page **4A**

Alternator Iskra AAK 5118 14 V 95 A


(Sisu Diesel no. 8366 40927)

Nominal voltage	12 V
Max. current (test voltage 13 V)	
2000 r/min	≥50 A
4000 r/min	≥84 A
6000 r/min	≥94 A
Charging starts at	1100 r/min
Max. permissible rotation speed	
Slide ring min. diameter	
Min. brush length	5 mm
Rotor resistance	2,72,97 ohm
Stator resistance	0,33036 ohm
Tightening torques:	
1. Shaft nut	5070 Nm
2. Connector B+ (M6)	4,26,0 Nm
3. Connector D+ (M5)	
4. Connector W (M 5)	2,73,8 Nm

Alternator Bosch NC 14 V 70-120 A

(Sisu Diesel no 8368 40939)

Nominal voltage	12 V
Max. current	(13,5 V)
- 2000 r/min	79 A
– 4000 r/min	111 A
- 6000 r/min	120 A
Charging starts at	1200 r/min
Max. permissible rotation speed	12 000 r/min
Tightening torques:	
1. Shaft nut	7585 Nm
2. Connector B+ (M8)	Max. 18 Nm
3 Connector D+ (M5)	Max 5 Nm

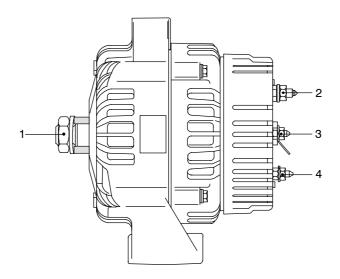

1. 8. 1998

Model 6000-8750

Code 310 Page 4B

Starter motor Iskra AZJ3234 12 V 3,1 kW (Sisu Diesel no. 8366 40949)

Test values, unloaded:	
Rotation speed	≤1000 r/min
Current	
Voltage	11 V
Test values, locked rotor	
Rotation speed	0 r/min (max.)
Current	≤1660 A
Voltage	5,6 V
Torque	≥45 Nm
Brush length, new brush	23 mm
Min. brush length	13 mm
Brush spring pressure	4048 N
Commutator, min diameter	43,5 mm
Tightening torque:	
Studs (M6)	5,8 Nm
Solenoid bolts (M5)	
Solenoid bolts (M6)	6,0 Nm
Field coil fixing bolts (M10)	
Brush holder	
Shift lever pin	
Solenoid connection screw (M8)	8,5 Nm
Solenoid connectio screw (M10)	13 Nm

Starter motor Iskra AZJ3247 12 V 3,6 kW


(Sisu Diesel no. 8366 40940)

Test values, unloaded	
Rotation speed	≤1000 r/min
Current	≤140 A
Voltage	11 V
Test values, locked rotor	
Rotation speed	0 r/min (max.)
Current	, ,
Voltage	5,3 V
Torque	
Brush length, new brush	
Min. brush length	13 mm
Brush spring pressure	4048 N
Commutator, min diameter	43,5 mm
Tightening torques:	
Studs (M6)	5,8 Nm
Solenoid bolts (M5)	3,2 Nm
Solenoid bolts (M6)	6,0 Nm
Field coil fixing bolts (M10)	37 Nm
Brush holder	3,2 Nm
Shift lever pin	12 Nm
Solenoid connection screw (M8)	8,5 Nm
Solenoid connection screw (M10)	13 Nm

21 Tractor electrical evetem		Model	Code	Page
31. Tractor electrical system	1. 6. 1999	6000-8950	310	4C

Speed radar

The radar is used in AC III, ACIV systems and in ACD-power lift, which has a slip control. The radar is the same in these systems.

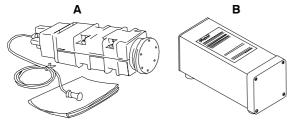


A= Dickey-john radar B= Vansco-radar.

Supply voltage=9-16 V DC (battery voltage)
Signal= 130 impulses/meter
(Impulses/driving speed=constant). The function principal is so called Doppler-effect.

WARNING! When the radar is functioning, do not stay in the radar radiation area – ranger for eyes.

NOTE! After the radar fitting it must be calibrated according to instructions:

- AC III, see page 341/1.
- AC IV, see page 351/2.
- ACD-power lift, see page 321/6.

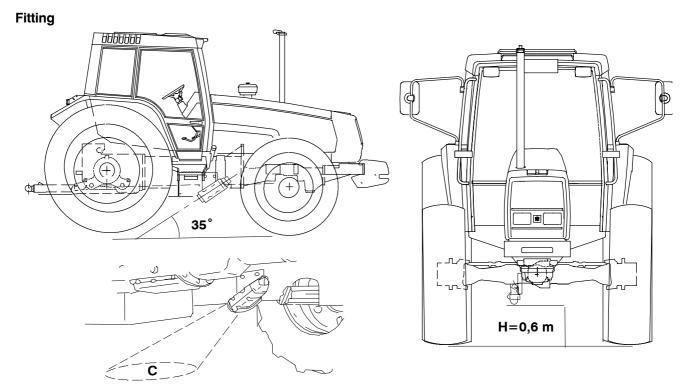

The radar is fitted so that it points rearwards at an angle of 35° (see picture above).

The ground figure C must be situated so that in this area there are no moveable points e.g. moveable soil, rotating wheel etc. E.g. movement of corn stems can cause malfunctions and also surface of water pool. The size of the elliptic ground figure is 614 mm x 437 mm, when the height of the radar from the ground is about 61 cm. In the radar radiation area there must not be hoses, tractor frame parts etc)

The metallic parts of the radar bracket must not be in the side of the radar sensor surface but a little rearwards.

The height of the radar from the ground can be from 60 cm to 4,8 meter (Dickey-john) or from 60 cm to 1,2 meter (Vansco). The recommended height of the radar in Valtra tractors is about **60 cm**.

When fitting the radar the tractor must stand on the level ground:

- radar sensor surface must be clean (no oil or other dirt)
- The radar must not be fitted near a heat source.
- The radar bracket must be sturdy enough to prevent vibrations (min. s=8 mm). If the radar shows other digits as zero, when the tractor is stationary, the possible rearson can be vibrations
- The tractor frame or metal bracket must not touch the radar metallic rear part.

1. 6. 1999

Model **6000-8950**

310

Page 4D

Radar fastening parts (e.g. ACD-power lift) (these parts can be ordered from the Spare Part Center):

62=radar=31702100

63=bracket=32912800

64=plate=32891600

65=bolt=HA8351 (2 pcs)

66=washer=JD0412 (2 pcs)

67=nut=JB8906 (2 pcs)


68=wire=33187500

69=bolt=HC8514 (4 pcs)

70=washer=JD0406 (4 pcs)


71=nut=JB8903 (4 pcs)

The radar bracket is fastened on the RH side door step attachment on the intermediate frame. If the tractor is equipped with pressure air systems, the radar bracket is fastened on the LH side.

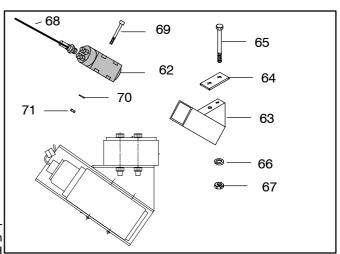

Electric connections:

The radar is connecetd with cable 33187500 to the tractor electric system. Figures below show connections in AC IV and ACD power lift.

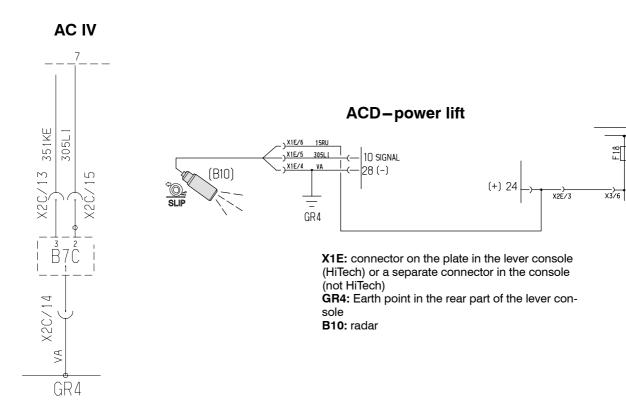

X2C: Sensor connector in the lever console


B7C: Radar


GR 4: Earth point in the lever console rear part

31 Tractor electrical system	15 5. 1993	Model	Code	Page
31. Tractor electrical system	1. 1. 1994	6000-8750	310	5


Position of electric components on frame

Note! Symbols, see component lists on pages 310/7-8, 310/11-12 and 310/16-17.

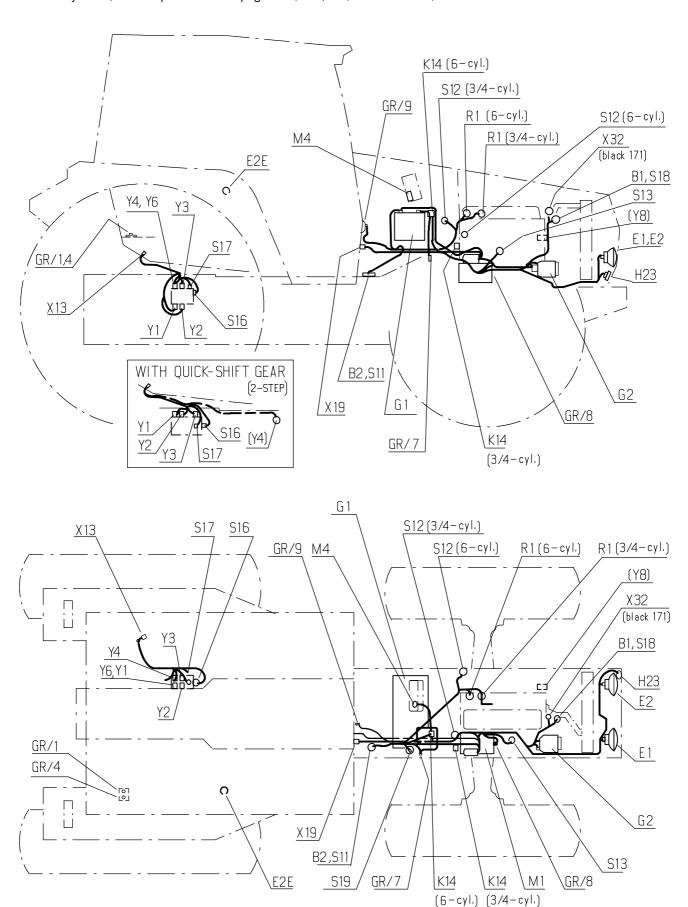

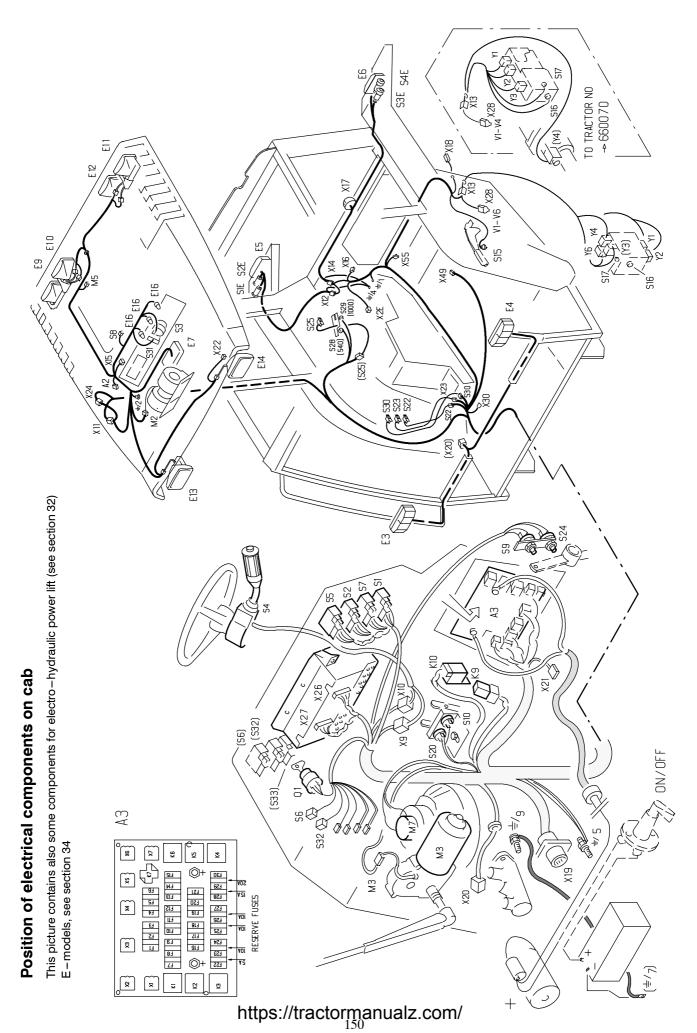

04 T	1.4.1997	Model	Code	Page
31. Tractor electrical system	1. 10. 1999	6000-8750	310	6B

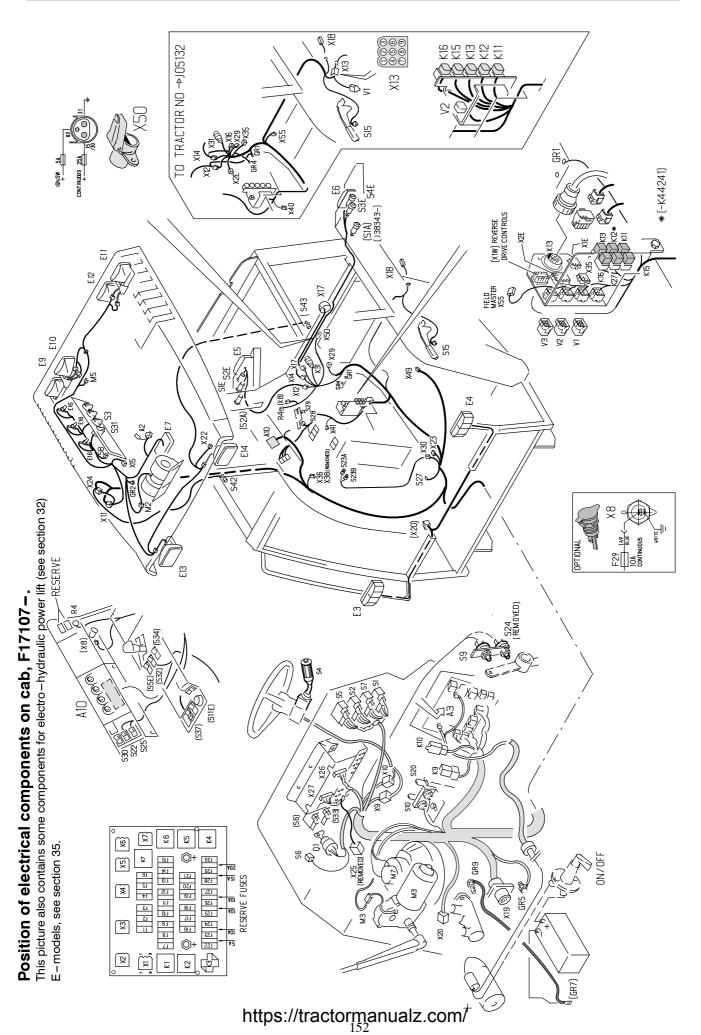



1. 10. 1999 1. 9. 2002

Model **6200-8550**

Code **310**

Page 6C

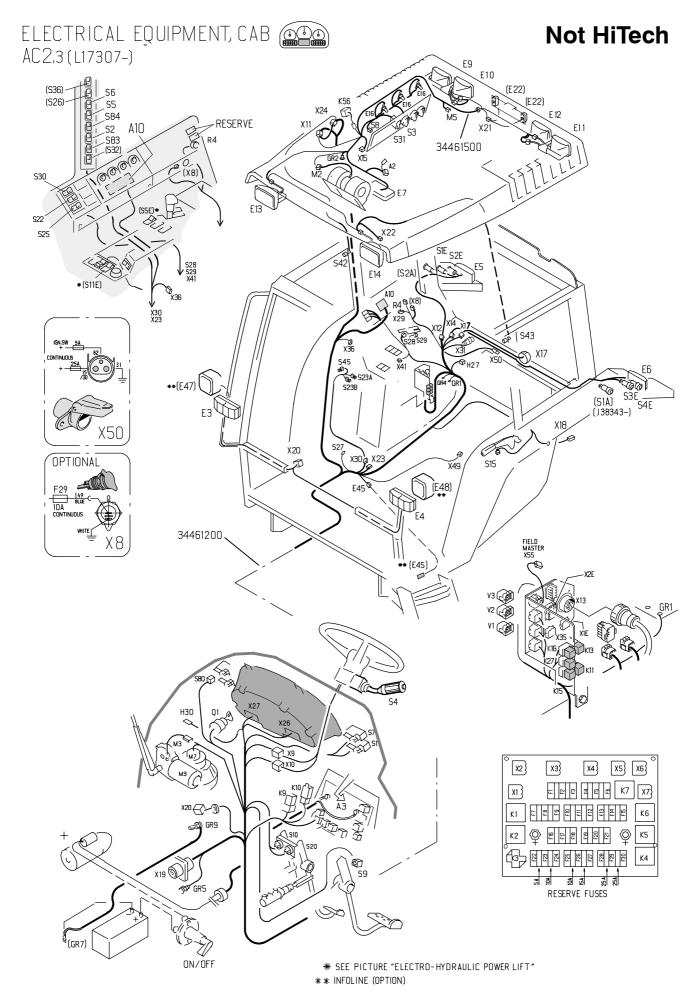

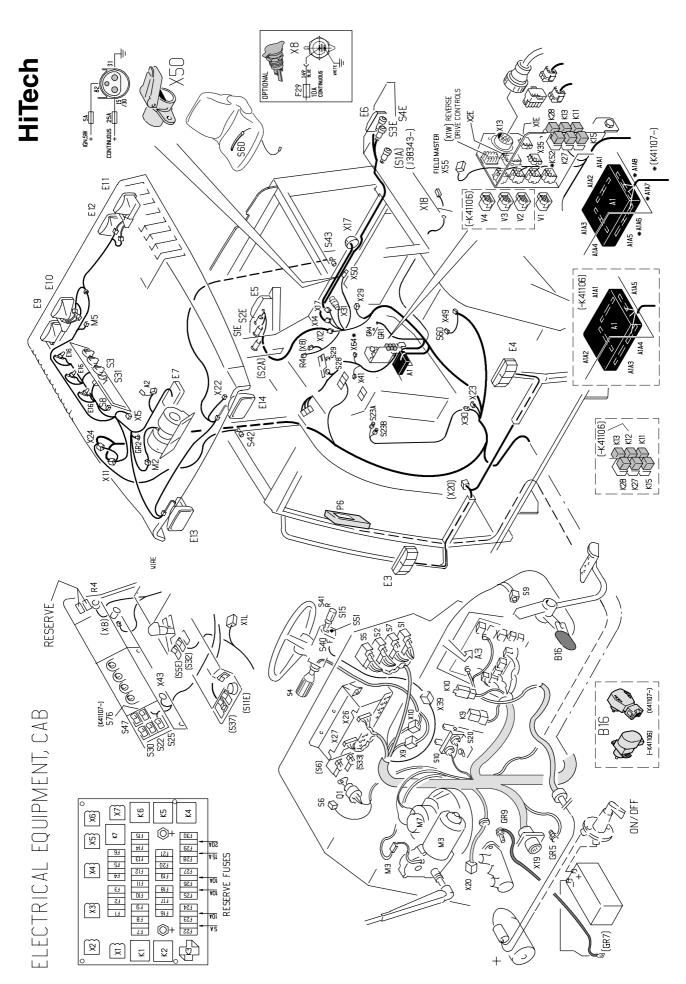

1. 10. 4999 1. 9. 2002

Model **6250-8950**

Code **310**

Page **6E**

ELECTRICAL EQUIPMENT, CAB **HiTech** E10 AC5.2 L18105 - (1919) (E22) E12 ف ف ف ف ف ف ف ف (S26) .56 <u> </u> S5 √S84 (H28)** 34461500 S2 S83 (S32) (O(O(O) (X8) (S5E)* (S2A) E14 *(S11E) S43 E6 ***(E47) (00° (S1A) S23B S3E — S4E E3 X30 X50 (E48) OPTIONAL F29 10 A CONTINUOUS FIELD MASTER X55 (X1 (X1W) REVERSE DRIVE CONTROLS ** (E45) 34461300 H30 B15_ X20 (~~) X2} | X4} X5} X6} aaa GR9 X1 } Κ6 K1 K5 ^{હ્યે}(GR7) RESERVE FUSES ON/OFF

* SEE PICTURE "ELECTRO-HYDRAULIC POWER LIFT"


** SEE PICTURE "REVERSE DRIVE CONTROLS"

1. 10. 1999 1. 9. 2002


Model **6200-8750**

Code **310**

Page **6F**

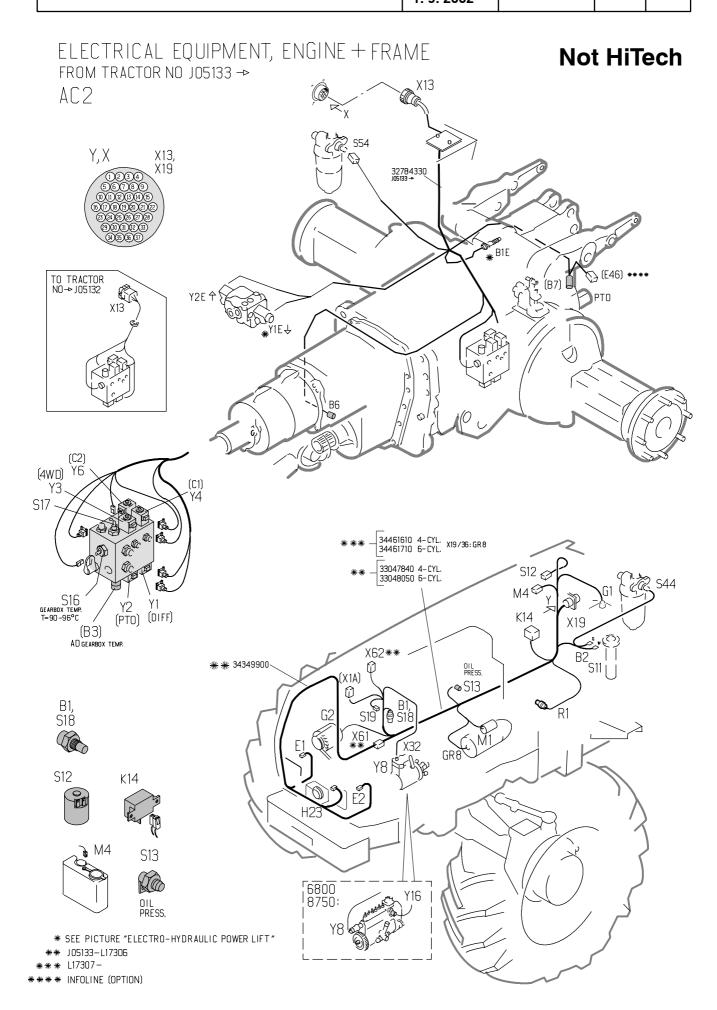

21 Treater electrical eveters	1. 10. 1999	Model	Code	Page
31. Tractor electrical system	1. 9. 2002	6250-8950	310	6G

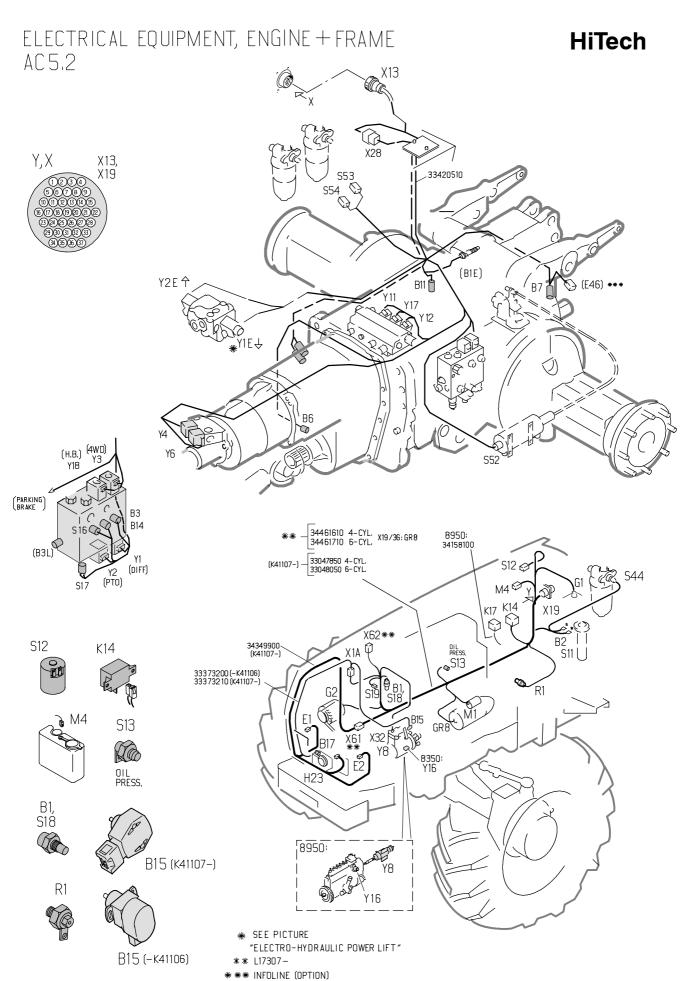

1. 9. 1992 15. 5. 1993 Model C 6100-8400 3

Code Page

	_	diagram up to serial no 60 els, see section 34). Diagram no. 31		Sym- bol	Component	Code
See d	iagran	ns on pages 310/9–10		G 1 G 2	Battery Alternator	1 4
Sym- bol		ponent	Code	H 1 H 2 H 3	Ind. light, direction indicator III Ind. light, direction indicator II Ind. light, direction indicator I	34 33 32
(A 2) A3	Radi Fuse		2	H 4 H 5	Warning light, air filter Warning light, engine oil pressure	7 8
A4 (A 5)		city meter pring seat	68 66	H 6 H 7	Warning light, stop, engine temp. Warning light, gearbox oil pressure	13 9
(A6) (A7)	Agro		36- 54	(H8) H 9	Gearbox oil filter Ind. light, 4WD	58
A8		er control	-	H10 H11	Ind. light, PTO 540 Ind. light, parking brake	61 11
B 1		der unit, engine temperature	13	H12	Ind. light, Thermostart	6
B 2 B 8		der unit, fuel gauge sor, wheel speed	16 67	H14 H15	Ind. light, main beams Ind. light, low fuel level	22 12
E 1			04	H16	Ind light, charging	6
E 1 E 2		dlights, right dlights, left	24 23	H18 H20	Warning light, gearbox oil temp. Ind. light, diff. lock	12 57
E 3		t direction indicator, right	28	H21	Ind. light, PTO 1000	61
E 4 E 5		t direction indicator, left light, right	26 31	H23 (H24)	Horn Rotating warning light	18 44
E 6	Rear	light, left	30			
E 7 E 9	Cabi	n light working light, right outer	43 38	K 1 K 2	Relay, front working lights Relay, rear working lights	40 38
E10	Rear	working light, right inner	37	K3	Control relay, diff. lock/4WD	55
E11 E12		working light, left outer working lights, left inner	39 38	K 4 K 5	Starter switch relay	7 9
E13		t working light, right	41	K 6	Starter switch relay Relay, fan III – speed	9 49
E14		t working light, left	41	K 7	Reserve	66
E15 E16		ument light console light	14,16 51	K 9 K10	Relay, interval wiper Direction indicator relay	20 31-32
(E17)	Seat	heating	66	K14	Starter motor relay	4
(E18) (E20)		step light ing light, right, Norway	42 27	M 1	Starter motor	3
(E21)		ing light, left, Norway	27	M 2	Fan	48
				M 3 M 4	Windscreen wiper Windscreen washer	21 19
F1		hazard warning flashers, reserve	29 2	(M 5)	Rear window wiper	46
F2 F3		clock, radio main beams, –indicator light	23	(M 6) (M 7)	Rear window washer Floor fan	45 50
F4		dipped beams	23	,		
F5 F6		parking light, left parking light, right	26 28	P 1 P 2	Engine coolant thermometer Fuel gauge	14 16
F7	10 A	front working lights	40	P 3	Revolution counter	16
F8 F9	20 A 15 Δ	light switch trailer socket	26 31	P 4	Hour recorder, working height	17
F10	15 A	ignition switch, thermostart	4	Q 1	Starter switch	4
F11 F12		hydraulic power lift Rot. warning light, cab light, door light	69 44	(Q 2)	Main circuit breaker	2
F13	10 A	brake light	55	R 1	Thermostart	5
F14 F15	10 A	reserve	66 49	(R 4)	Cigarette lighter	35
F16		fan III – speed rear working lights, inner	38	S 1	Switch, headlights	25-26
F17		direction indicators, (Agrodata)	29	S 2	Switch, rear working lights	37
F18 F19		instruments, warning lights, Autocntr. combination control, wiper return	14, 25 20	S 3 S 4	Switch, fan Combination control	48 19-3
F20		rear window wiper/washer	45	S 5	Switch, front working lights	40
F21 F22	15 A	fan I, II, air conditioning, floor fan solenoid valves,	48 57	(S 6) S 7	Switch, rot. warning light Switch, hazard warning flashers	44 30
F23		rear working lights, outer	38	(S 8)	Switch, air conditioner	47
F24	10 A	Reserve/velocitymeter	68 66			
F25 F26		air spring seat, seat heating reserve (electronic air filter)	66 54			
F27	10 A	reserve	68			
F28 F29		reserve (telephone) cigarette lighter, power socket	67 35			
F30		reserve	68			

8. 11. 1990 1. 9. 1992

Model 6100-8400

Code Page

310 8

Sym- bol	Component	Code
S 9	Safety circuit breaker	4
S10	Brake light contact, right	55
S11	Fuel gauge sender unit	16
S12	Pressure drop indicator, air filter	7
S13	Engine oil pressure sender unit	8
S15	Sender unit to hand brake ind. light	11
S16	Gearbox temperature sender unit	12
S17	Gearbox oil pressure sender unit	9
S18	Engine temp. sender unit (STOP)	13
(S19)	Air cond. compressor pressure switch	47
S20	Brake light contact, left	55
S22	Switch, diff. lock	56
S23	Switch, quick-shift gear (engaging)	65
S24	Switch, quick-shift gear (disengaging)	65
S25	Switch, PTO	63
S28	Switch, PTO 540	63
S29	Switch, PTO 1000	61
S30	Switch, 4WD	59-60
S31	Switch, floor fan	50
(S32)	Switch, rear window washer and wiper	45
(S49)	Switch, rpm/flow meter (Agrodata)	
(S50)	Switch, km/h, wheel sensor (Agrodata)	
(S52)	Switch, door	42
1/4 4	Diada	


/1	Earth lead, rear lights
/2	Earth lead, roof
/4	Earth lead, Autocontrol
/5	Earth lead, cable harness instr. panel
/7	Earth lead, battery
/8	Earth lead, headlights
/9	Earth lead, cab


Symbols in brackets=optional

Wire colours

Ru = brown
Pu = red
Ke = yellow
Si = blue
Mu = black
Vi = green
Va = white
Ha = grey
Li = lilac

V 14	Diode	
X 1	Connector, 9 pins, fuse box	
X 2	Connector, 9 pins, fuse box	
Х3	Connector, 9 pins, fuse box	
X 4	Connector, 9 pins, fuse box	
X 5	Connector, 9 pins, fuse box	
X 6	Connector, 9 pins, fuse box	
X 7	Connector, 9 pins, fuse box	
(X 8)	Connector, 2 pins, power socket	36
X 9	Connector, 9 pins, combination control	
X10	Connector, 9 pins, combination control	
X11	Connector, 9 pins, upwards	
X12	Connector, 9 pins, rearwards, right	
X13	Connector, 4 pins, solenoid valves	
X14	Connector, 9 pins, rearwards, left	
X15	Connector, 3 pins. air cond. diodes	
X16	Connector, 3 pins, cigarette lighter, current so	
X17	Trailer socket, 17 pins	30
X18	Connector, 2 pins, rear window washer	
X19	Connector, 24 pins, front wall	
X20	Connector, 9 pins, front direction indicators	
X21	Connector, 3 pins, buzzer	
X22	Connector, 1 pin, rot. warning light	
X24	Connector, 9 pins, upwards	
X26	Connector, 26 pins, instr. left white	
X27	Connector, 26 pins, instr. right blue	
X28	Connector, 6 pins, diodes	
X49	Connector, 2 pins, seat	
(X53)	Agrodata, socket for implement, 7 pins	
(X54)	Connector, 9 pins, Agrodata sensors	36-
(X55)	Agrodata supply, 1 pin.	30-
Y 1	Solenoid valve, diff. lock	56
Y 2	Solenoid valve, PTO	63
Υ3	Solenoid valve, 4WD	60
(Y 4)	Solenoid valve, quick-shift gear	65
(Y 5)	Solenoid valve, compressor	47

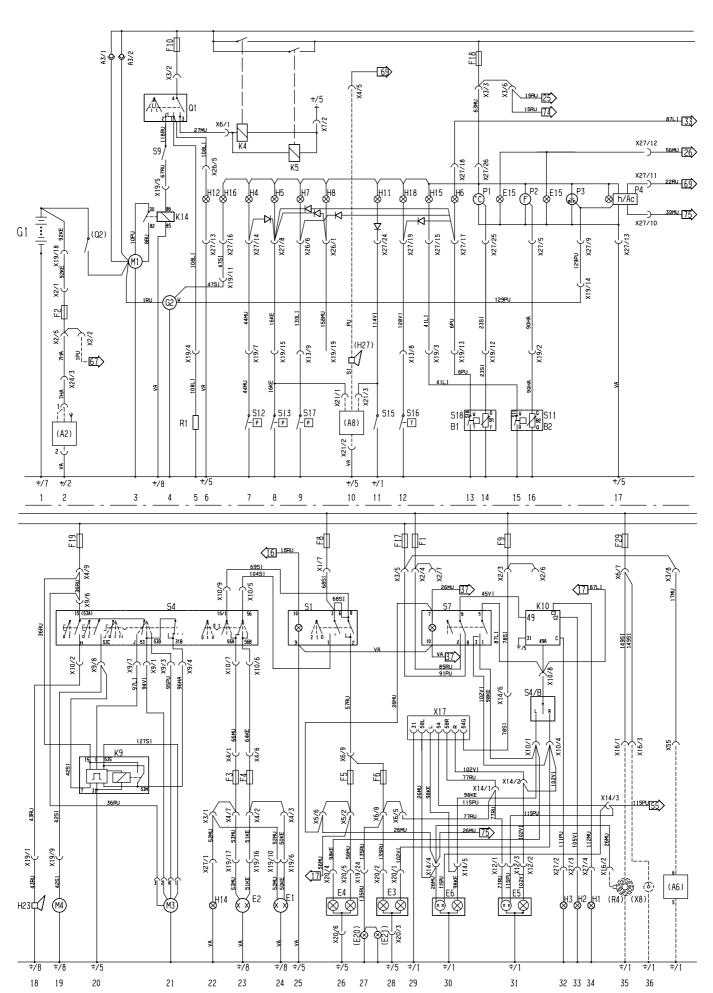

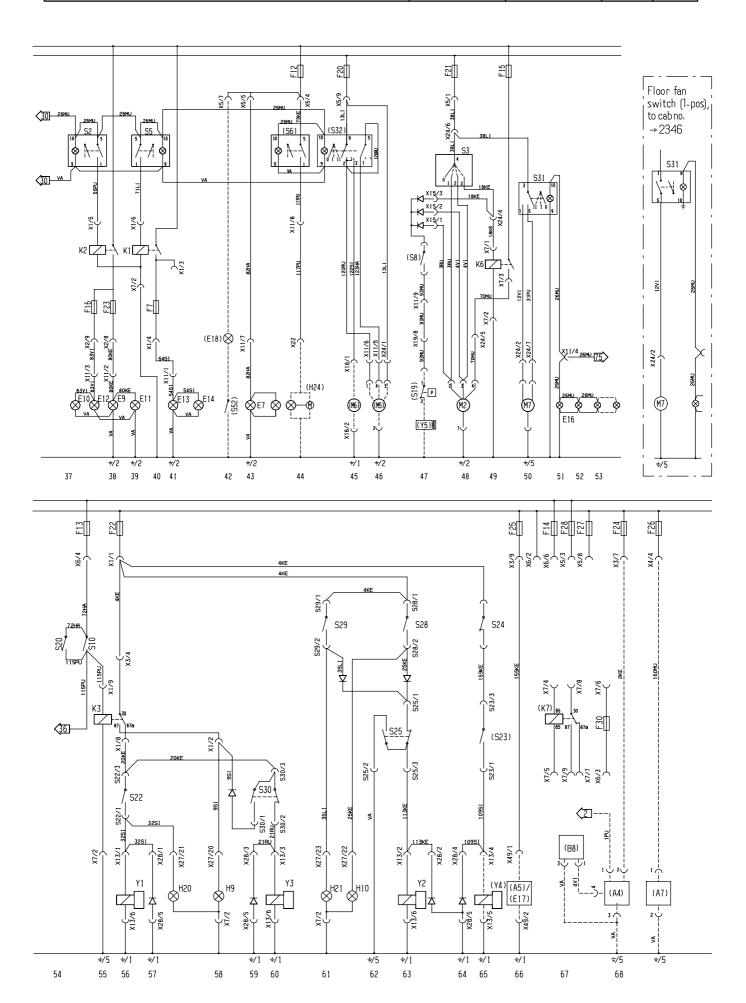

21 Treater electrical eveters	15. 5. 19 93	Model	Code	Page
31. Tractor electrical system	1. 1. 1994	6000-8400	310	11

Wiring diagram from tractor serial no 660071 up to ser. no 662342

section

34).

see


(E-models,


G 2 Alternator 4 31871620-32. See diagrams on pages 310/13-15. H 1 Pilot light, direction indicator III 34 Code H 2 Pilot light, direction indicator II Component bol no H 3 Pilot light, direction indicator I 34 Warning light, air filter (A 2) Radio 2 H 4 H 5 Warning light, engine oil pressure 8 A 3 Electric centre H 6 Warning light, stop, engine temp. 15 (A4)Speedometer + clock 93 H 7 Warning light, gearbox oil press. (A 5) Air suspension seat 94 9 (H 8)Pilot light, oil filter, gearbox 10 (A 6) Agrodata 95 H 9 Pilot light, 4WD 63 (A7)Electric air filter 96 H10 Pilot light PTO switch 540 (A 8) Buzzer control unit 11 65 H11 Pilot light, parking brake 12 Sensor, engine temperature H12 Pilot light, Thermostart 16 Pilot light, main beams 27 H14 B 2 Sensor, fuel gauge 17 (B 8) Sensor, wheel speed 93 H15 Warning light, low fuel level 14 H16 Warning light, charging 6 H18 Warning light, gearb. oil temp. Pilot light, diff. lock 13 E 1 Headlights, right 26 H20 E 2 Headlights, left 25 63 Front direction indicator, right Pilot light, PTO switch 1000 H21 65 E 3 31 H22 Reserve E 4 Front direction indicator, left 28 H23 50 E 5 Rear light, right 33 Horn (H24) Rotating roof light 47 32 E 6 Rear light, left E 7 Cabin light 46 (H27) Buzzer, parking brake 11 E 9 Rear working light, right outer 42 Rear working right, right inner 42 Relay, front working lights 43 E10 Relay, rear working lights Control relay, diff. lock/4WD K 2 41 E11 Rear working light, left outer 41 К3 E12 Rear working light, left inner 41 61 Front working light, right Starter switch relay E13 44 K 4 7 K 5 Starter switch relay g Front working light, left E14 E15 Instrument lights 17 K 6 Relay, fan III 56 K 7 Reserve 101 E16 Roof console lights 21 K 9 Relay, interval wiper Seat heater (F17) 94 K10 (E18) Footstep light 45 Direction indicator relay 34 (E20) K14 Starter motor relay Parking light, right, Norway 29 4 (E21) Parking light, left, Norway 30 (E22) Register plate light M 1 Starter motor 3 M 2 55 24 Fan (E23) Upper head light, right (E24) Upper head light, left 23 М3 Windscreen wiper 53 M 4 Windscreen washer 51 (E25)Parking light, upper, right 22 (M5)Rear window wiper 49 (E26) Parking light, upper, left 22 (M 6) Rear window washer 48 15 A Hazard blinkers, reserve 31 (M 7) Floor fan 57 F 1 F 2 5 A Radio, (clock) 2 P 1 10 A High beam, indicator light 25 Engine coolant thermometer 16 F 4 25 P 2 Fuel gauge 17 10 A Low beam P 3 F 5 5 A Parking lights, left 28 Revolution counter 18 P 4 Hour recorder/work. height 19 F 6 30 5 A Parking lights, right F 7 10 A Front working lights 44 Q 1 Starter switch 4 F 8 28 20 A Light switch 3 f 9 15 A Trailer socket 31 (Q 2) Main switch 15 A Starter switch, thermostart F10 4 R 1 Thermostart 5 F11 5 A Autocontrol (+30) 83 F12 10 A Rot. warning light, cabin and footstep light (R 4) Cigarette lighter 91 S 1 Switch, head lights 28 10 A Brake lights S 2 Switch, rear working lights 41 F14 10 A Reserve 97 S 3 Switch, fan 55 F15 20 A Fan III - speed 56 S 4 Combination control 25,34,52 F16 10 A Rear working lights, inner 42 F17 10 A Direction indicators, agrodata 32 S 5 Switch, front working lights 43 F18 (S6)Switch, rot. warning light 47 5 A Instruments, warning lights, autocontrol 17 S 7 F19 10 A Combination switch, wiper return 51 Switch, hazard warning flashers 32 (S 8) F20 Switch, air conditioner 10 A Rear w. wiper /washer 48 54 F21 15 A Fan I, II, air conditioner., floor fan 55 S 9 Safety circuit breaker F22 62 S10 Brake light contact, right 61 10 A Solenoid valves S11 F23 10 A Rear working lights, outer 41 Fuel gauge sender unit 17 S12 Pressure drop indicator, air filter F24 10 A Reserve / (speedometer) 93 F25 10 A Air suspension seat S13 Engine oil press. sender unit 8 94 S15 Sender unit to hand brake ind. light 12 F26 10 A Reserve / (el. air filter) 96 F27 98 S16 Gearbox temperature sender unit 13 10 A Reserve 10 A Reserve (telephone) Gearbox oil pressure sender unit S17 F28 99 9 10 A Cigarette lighter, power socket 91 S18 Engine temperature sender unit (stop) 16 F30 10 A Reserve

https://tractormanualz.com/


		Model	Code	Page
31. Tractor electrical system	15. 5. 1993	6100-8400	310	12

Sym-		Code	Y 1	Solenoid valve, diff lock	62
ból	Component	no	Y 2	Solenoid valve pto	66
	•		Y 3	Solenoid valve 4WD	64
(S19)	Air cond. compressor press. switch	54	(Y 4)	Solenoid valve, quick—shift gear, lower range,	
`S20	Brake light contact, left	61	(1 1)		
S22	Switch, differential lock	62		2-step	67
S23	Switch, quick-shift gear (engaging), 2-step	67		3-step	69
020	3-step	68	a	.	
CO4	•		(Y 5)	Solenoid valve compr., air con.	54
S24	Switch, quick-shift gear, (disengaging)	67 66	(Y 6)	Solenoid valve, quick-shift gear, higher range	68
S25	Switch, PTO release	66			
S28	Switch, PTO 540	66	/1	Earth lead, rear lights	
S29	Switch, PTO 1000	65	/2	Earth lead, roof	
S30	Switch, 4WD	64	/4	Earth lead, Autocontrol	
(S31)	Switch, floor fan	57	/5	Earth lead, cable harness, instr. panel	
(S32)	Switch, rear window washer and wiper	48	/7	Earth lead, battery	
(S33)	Change over sw., head lights up	23	/8	Earth lead, headlights	
(S49)	Change over switch, rpm/flow meter (agrodate	ta)	/9	Earth lead, cab	
(S50)	Change over switch, km/h, wheel sensor,	•	70	Editi Ioda, odo	
` ,	tractor /implement (agrodata)				
(S52)	Switch, door	45	Wiro	colours	
,	,		WILE	Colours	
V 1	4 Diode		_		
				brown	
X 1	Connector, 9 pin., distribution box		Pu =		
X 2	Connector, 9 pin., distribution box			yellow	
Х3	Connector, 9 pin., distribution box		Si = k	olue	
X 4	Connector, 9 pin., distribution box		Mu =	black	
X 5	Connector, 9 pin., distribution box		Vi = g	green	
X 6	Connector, 9 pin., distribution box		Va =		
X 7	Connector, 9 pin., distribution box		Ha =	arev	
(X 8)	Connector, 2 pin., power socket	92	Li = li		
X 9	Connector, 9 pin, combination control	02			
X10	Connector, 9 pin., combination control				
X11	Connector, 9 pin., upwards				
X12	Connector, 9 pin., rearwards, right				
X12	Connector, 9 pin., solenoid valves.				
X14	Connector, 9 pin., rearwards, left				
X15	Connector, 3 pin., rearwards, left Connector, 3 pin., air cond., diodes				
X16	Connector, 3 pin., cigarette lighter, current soc	skot			
X10	Rear socket, 7 pin	32			
X17 X18	Connector, 2 pin., rear window washer	02			
X10	Connector, 24 pin, front wall				
X20					
	Connector, 9—pole, front direction indicator	10			
X21	Connector, 3 – pin., buzzer (H27)	10			
X22	Connector, 1 pin., rot. roof light				
X24	Connector, 9 pin., upwards				
X26	Connector, 26 pin., instr. left, white.				
X27	Connector, 26 pin., instr. right, blue				
X28	Connector, 6 pin., diodes, (Y1,Y2,Y3,Y4,Y6)				
X30	Connector, 1 pin, 4WD control				
(X31)	Socket, 2 pin, PTO – emerg. stop				
X49	Connector, 2 pin., seat				
(X53)	Agrodata socket, 7 pin, implement				
(X54)	Connector, 9 pin Agrodata sensors	00			
(X55)	Connector,1 pin., Agrodata supply	28			

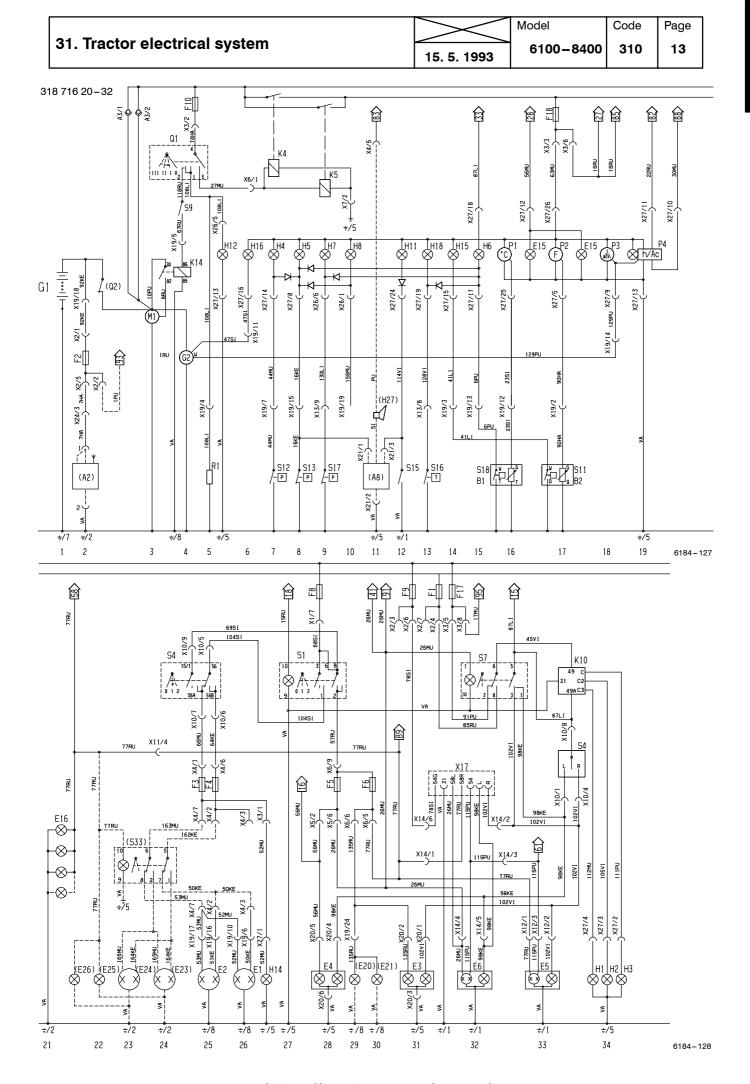

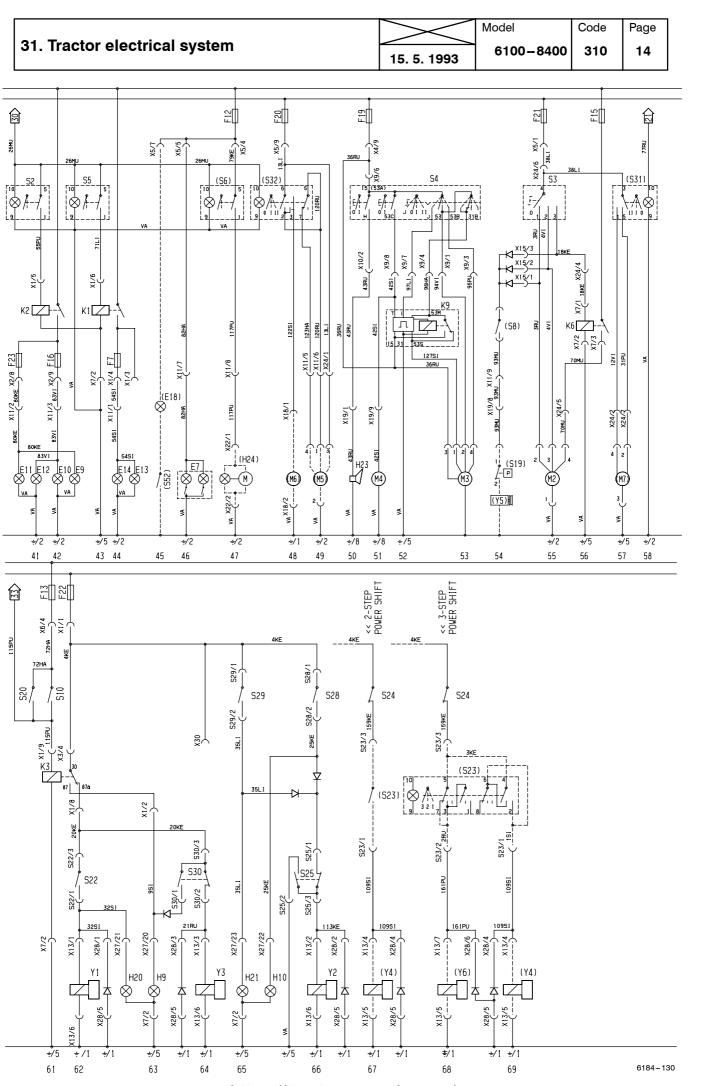

		Model	Code	Page
31. Tractor electrical system	15. 5. 1993	6100-8400	310	15

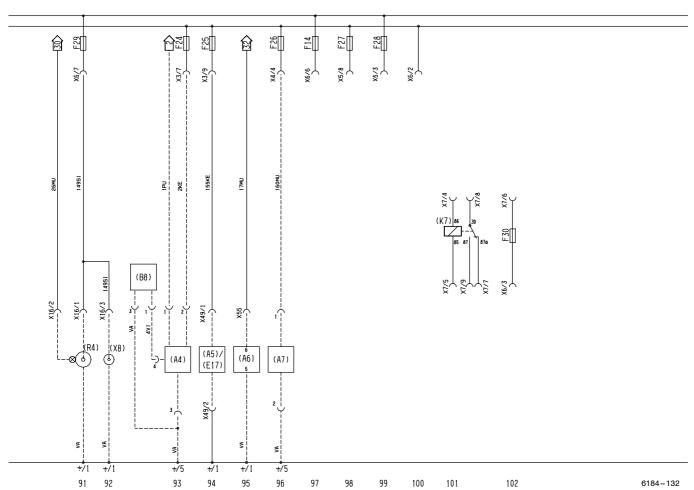

1. 1. 1994 15. 4. 1995

6000-8400

Model

Code **310**

Page **16**

Wiring diagram from tractor serial number 662343 up to no 668102.

(**E-models, see section 35**). Diagram no 318 716 30B. See diagrams on pages 310/18-20. This diagram incl. also Autocontrol II system.

Autoc	ontrol II system.	
Sym- bol	Component	Code no
(A 6) (A 7) (A 9) (A 10)		2 93 94 95 96 71 70 99
B 1 B 2 (B 8)	Sensor, engine temperature Sensor, fuel gauge Sensor, wheel speed	16 17 93
(E21) (E22) (E23) (E24)		26 25 31 28 33 32 46 42 42 41 41 44 44 17 21 94 45 35 29 30 32 24 23 22 22
F 1 F 2 F 3 F 4 F 5 F 6 F 7 F 8 F 9 F 10 F 11 F 12 F 13 F 14 F 15 F 16 F 17 F 18 F 19 F 20 F 21 F 22 F 23 F 24 F 25 F 25 F 25 F 26 F 27 F 27 F 28 F 29 F 20 F 20 F 20 F 20 F 20 F 20 F 20 F 20	15 A Hazard blinkers, reserve 5 A Radio, clock 10 A High beam, indicator light 10 A Low beam 5 A Parking lights, left 5 A Parking lights, right 10 A Front working lights 20 A Light switch 15 A Trailer socket, rear fog light 15 A Starter switch, thermostart 5 A Autocontrol (+Bat), buzzer 10 A Rot. warning light, cabin and footstep light 10 A Reserve 15 A Water pump 20 A Fan III – speed 10 A Rear working lights, inner 10 A Direction indicators, agrodata 5 A Instruments, warning lights, Autocontrol 10 A Combination switch, wiper return 10 A Rear w. wiper/washer 15 A Fan I, II, air conditioner., floor fan 10 A 4WD, PTO, Delta Power Shift 10 A Rear working lights, outer 10 A Speedometer 10 A Air suspension seat/seat heating reverse drive control lock	31 2 25 25 28 30 44 28 35 4 83 47 100 97 56 42 32 17 51 48 55 65 41 93

Sym- bol	Component	Code no
F27 F28 F29 F30	10 A Brake lights, differential lock10 A Telephone10 A Cigarette lighter, power socket10 A Rear fog lights	62 99 91 102
G 1	Battery	1
G 2	Alternator	4
H 1 H 2 H 3 H 4 H 5 H 6 H 7 (H 8) H 10 H 11 H 12 H 14 H 15 H 16 H 18 H 20 H 22	Pilot light, direction indicator III Pilot light, direction indicator II Pilot light, direction indicator I Warning light, air filter Warning light, engine oil pressure Warning light, stop, engine temp. Warning light, gearbox oil press. Pilot light, oil filter, gearbox Pilot light, 4WD Pilot light, PTO Pilot light, parking brake Pilot light, Thermostart Pilot light, main beams Warning light, low fuel level Warning light, charging Warning light, gearb. oil temp. Pilot light, diff. lock Reserve	34 34 7 8 15 9 10 65 67 12 6 27 14 6 13 62
H23	Horn	50
(H24)	Rotating roof light	47
K 1 K 2 K 3 K 4 K 5 K 6 K 7 K 9 K 10 K 11 K 12 K 13 K 14 K 15 K 16	Relay, front working lights Relay, rear working lights Rear fog lights Starter switch relay Starter switch relay Relay, fan III Relay, four wheel braking Relay, interval wiper Direction indicator relay Relay, brake lights, diff. lock Relay, differential lock Relay, differential lock Starter motor relay Relay, 4WD Relay, PTO emergency stop	43 41 35 7 9 56 65 53 34 63 61 63 4 65 68
(M 6)	Starter motor Fan Windscreen wiper Windscreen washer Rear window wiper Rear window washer Floor fan Water pump	3 55 53 51 49 48 57
P 1	Engine coolant thermometer	16
P 2	Fuel gauge	17
P 3	Revolution counter	18
P 4	Hour recorder/work. height	19
Q 1	Starter switch	4
(Q 2)	Main switch	3
R 1	Thermostart	5
(R 4)	Cigarette lighter	91
S 1	Switch, head lights	28
S 2	Switch, rear working lights	41
S 3	Switch, fan	55

1.1.1994

Model 6000-8400 Code 310

Page 17


Sym- bol	Component	Code no
S4 S 5	Combination control Switch, front working lights	25, 34, 52 43
(S 6)	Switch, rot. warning light	43 47
`S 7	Switch, hazard warning flashers	32
(S 8) S 9	Switch, air conditioner	54
S 9 S10	Safety circuit breaker Brake light contact, right	4 65
S11	Fuel gauge sender unit	17
S12	Pressure drop indicator, air filter	7
S13 S15	Engine oil press. sender unit Sender unit to hand brake ind. light	8 12
S16	Gearbox temperature sender unit	13
S17	Gearbox oil pressure sender unit	9
S18 (S19)	Engine temperature sender unit (stop) Air cond. compressor press. switch	16 54
S20	Brake light contact, left	65
S22	Switch, differential lock	61
(S23) (S23)	Push buttons, Delta Powershift Optional push buttons, Delta Powershift	70 71
(323) S24	Switch, Delta Power shift disengagement	69
S25	Switch, PTO release	68
(S26)		35
S28 S29	Switch, PTO 540 Switch, PTO 1000/540E	68 67
S30	Switch, 4WD	66
(S31)		57
(S32) (S33)	Switch, rear window washer and wiper Change over sw., head lights up	48 23
(S34)	Switch, water pump	97
(S35)		94
(S49) (S50)	Change over switch, rpm/flow meter (agrodat Change over switch, km/h, wheel sensor,	a)
(000)	tractor /implement (agrodata)	
(S52)	Switch, door	45
V 1 V 2	Diodes (Y1, Y2, Y3, Y4, Y6) Diodes (AC II)	
X 1	Connector, 9 pin., distribution box	
X 2	Connector, 9 pin., distribution box	
X 3 X 4	Connector, 9 pin., distribution box Connector, 9 pin., distribution box	
X 5	Connector, 9 pin., distribution box	
X 6	Connector, 9 pin., distribution box	
X 7 (X 8)	Connector, 9 pin., distribution box Connector, 2 pin., power socket	92
X 9	Connector, 9 pin, combination control	
X10	Connector, 9 pin., combination control	
X11 X12	Connector, 9 pin., upwards Connector, 9 pin., rearwards, right	
X13	Connector, 9 pin., solenoid valves.	
X14 (X15)	Connector, 9 pin., rearwards, left	
(X15) (X16)	Connector, 3 pin., air cond., diodes Connector, 3 pin., cigarette lighter, current soc	ket
`X17 [′]	Rear socket, 7 pin	32
(X18)	Connector, 2 pin., rear window washer	
X19 X20	Connector, 24 pin, front wall Connector, 9—pole, front direction indicator	
X22	Connector, 2 pin., rot. roof light	
X23	Connector, 2 pin., Delta Powershift optional bu	ittons
X24 X26	Connector, 9 pin., upwards Connector, 26 pin., instr. left, white.	
X27	Connector, 26 pin., instr. right, blue	
(X29)	Connector, 2 pin., STOP—alarm	
X31 (X32)	Socket, 2 pin, PTO – emerg. stop Connector, 1 pin, electric stop	
(X33)	Connector, 3 pin, rear fog light	
(X49)	Connector, 2 pin., seat	
(X53) (X54)	Agrodata socket, 7 pin, implement Connector, 9 pin Agrodata sensors	
(X55)	Connector,1 pin., Agrodata supply	28

Sym- bol	Component	Code no
Y 1 Y 2 Y 3 (Y 4) (Y 5) (Y 6) (Y 7) (Y 8)	Solenoid valve, diff lock Solenoid valve pto Solenoid valve 4WD Solenoid valve, Delta PS reduction Solenoid valve compr., air con. Solenoid valve, Delta PS overdrive Solenoid valve, reverse drive control lock Solenoid, electric stop	63 68 66 69 54 70 94 4
GR/2 GR/4 GR/5 GR/7 GR/8 GR/9	Earth lead, rear lights Earth lead, roof Earth lead, Autocontrol Earth lead, cable harness, instr. panel Earth lead, battery Earth lead, headlights Earth lead, cab DEarth lead, electric stop	

Note! Component list of Autocontrol power lift, see page 320/3B.

Wire colours

Ru = brownPu = redKe = yellow Si = blue Mu = blackVi = greenVa = whiteHa = grey Li = lilac

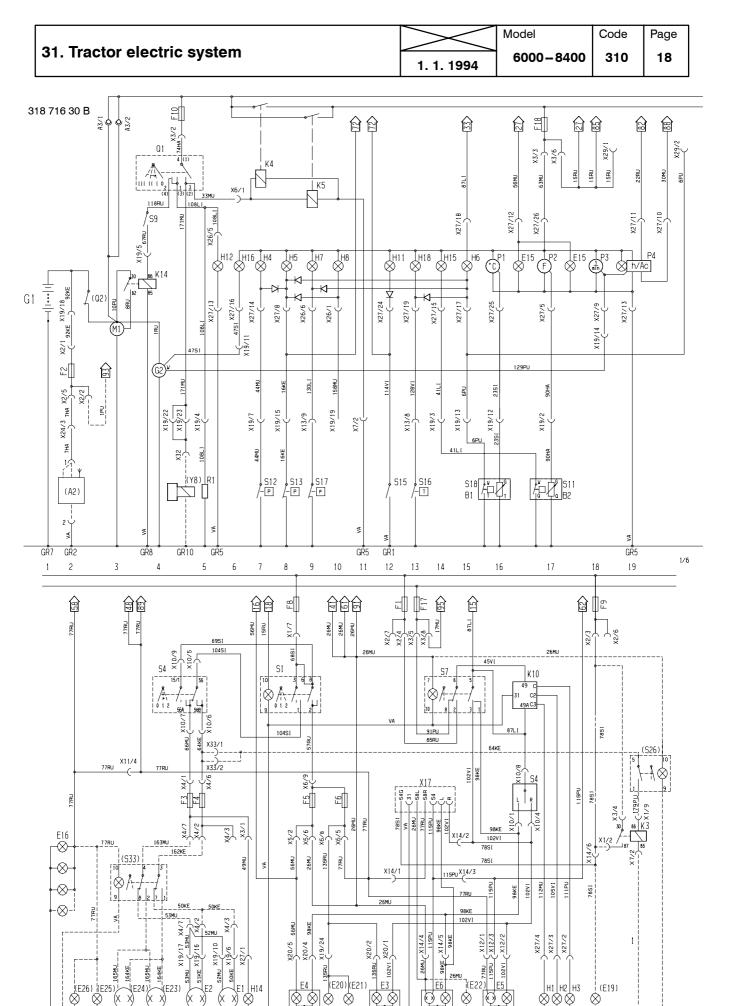

GR5 GR8

29

GR5

GR1

GR1

GR1

33

GR5

34

GR1

GR5 GR5 2/6

35

GR2GR5

21

GR2

23

22

GR2

24

GR8

25


GR8 GR5 GR5


1. 1. 1994


Model **6000 -- 8400**

Code **310**

Page **19**

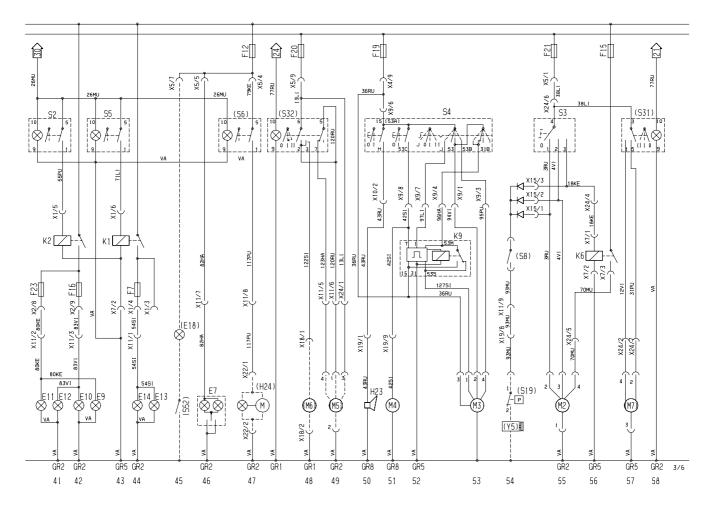

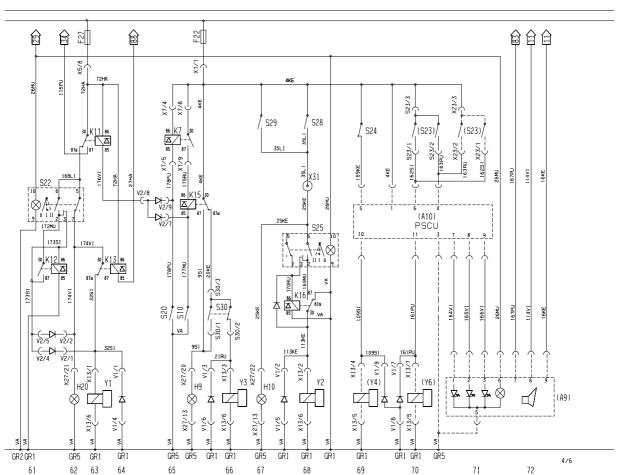

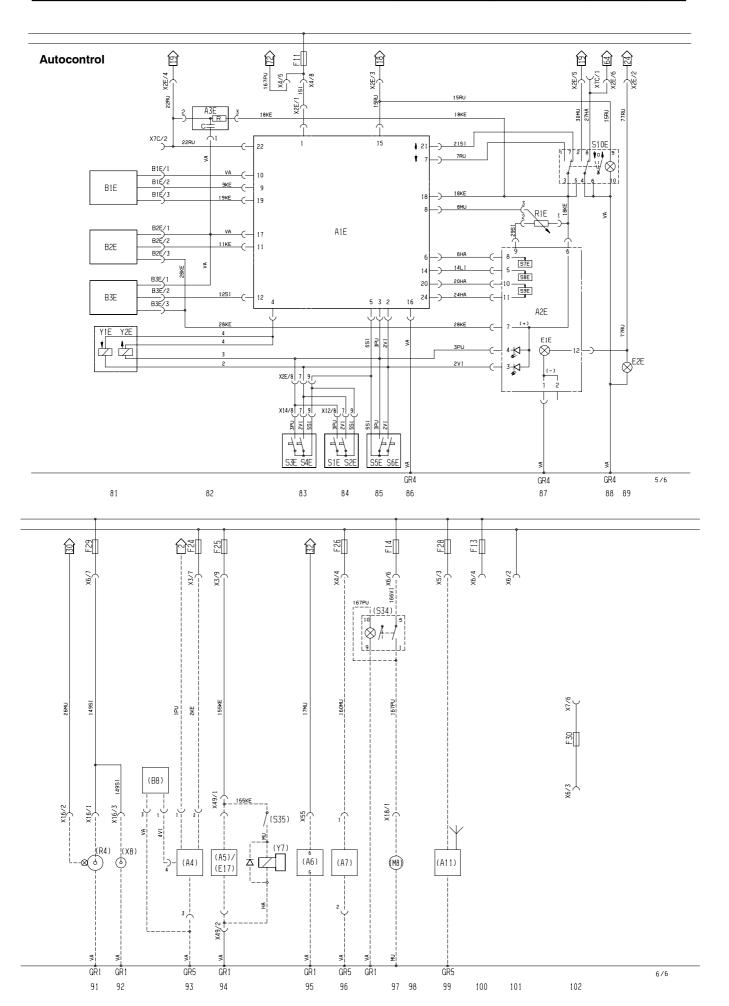

Model Code Page 31. Tractor electrical system 6000-8400 310 21 15. 4. 1995

Sym-bol

Component

Code

no

Wiring diagram from ser. no 668103. Diagram
no 318 716 40A . See diagrams on pages 310/23-25 .

no 318 716 40A. See diagrams on pages 310/23-25	ō.		•	
This diagram includes also Autocontrol 2.1 system, data-Instrument and Control stop system.	Agro-	F27 F28 F29 F30	10 A Brake lights, diff. lock., trailer brakes 10 A Telephone 10 A Cigarette lighter, power socket 10 A Rear fog light	62 99 91 102
Sym- bol Component	Code no	(F31)	15 A Electric air filter	101
(A 2) Radio	2	G 1 G 2	Battery Alternator	1 4
A 3 Electric centre	2	u z	Alternator	7
(A 4) Speedometer + clock	93	H 1	Pilot light, direction indicator III	34
(A 5) Air suspension seat	94	H 2	Pilot light, direction indicator II	34
(A 6) Agrodata (A 7) Electric air filter	95 101	H 3 H 4	Pilot light, direction indicator I Warning light, air filter	34 7
(A 10) Delta Powershift control unit	70	H 5	Warning light, all filter Warning light, engine oil pressure	8
(A 11) Telephone	99	H 6	Warning light, stop, engine temp.	15
(A 14) Tachograph	92	H 7	Warning light, gerabox oil pressure	9
B 1 Sensor, engine temperature	16	(H8) H 9	Pilot light, gearbox oil filter Pilot light, 4WD	10 65
B 2 Sensor, fuel gauge	17	H10	Pilot light, PTO	67
(B3) Sensor, gearbox oil temperature	103	H11	Pilot light, parking brake	12
(B6) Sensor, gearbox speed	101	H12	Pilot light, Thermostart	6
(B7) Sensor, PTO shaft speed (B8) Sensor, rear wheel speed	102 93	H14 H15	Pilot light, main beam Warning light, low fuel level	27 14
(B9) Sensor, tachograph	92	H16	Warning light, charging	6
		H18	Warning light, gearbox oil temp	13
E 1 Headlights, right	26	H19	Pilot light Delta Powershift I	71
E 2 Headlights, left E 3 Front direction indicator, right	25 31	H20 H21	Pilot light, diff. lock Pilot light Delta Powershift II	62 71
E 4 Front direction indicator, left	28	H22	Pilot light Delta Powershift III	71
E 5 Rear light, right	33	H23	Horn	50
E 6 Rear light, left	32	(H24)		47
E 7 Cabin light E 9 Rear working light, right outer	46 42	(H27)	Reverse buzzer	96
E10 Rear working light, right inner	42	K 1	Relay, front working lights	43
E11 Rear working light, left outer	41	K2	Relay, rear working lights	41
E12 Rear working light, left inner	41	(K 3)	Rear fog light	35
E13 Front working light, right E14 Front working light, left	44 44	K 4 K 5	Starter switch relay Starter switch relay	7 9
E14 Front working light, left E15 Instrument lights	17	K 6	Relay, fan III	56
E16 Roof console lights	21	K7	Relay, four wheel braking	65
(E17) Seat heater	94	K 9	Relay, interval wiper	53
(E19) Rear fog light (E20) Parking light, right, Norway	35 29	K10 K11	Direction indicator relay	34 63
(E20) Parking light, right, Norway (E21) Parking light, left, Norway	30	K11	Relay, brake lights, diff. lock Relay, differential lock	61
(E22) Register plate light	32	K13	Relay, differential lock	63
(E23) Upper head lights, right	24	K14	Starter motor relay	4
(E24) Upper head lights, left (E25) Parking light, upper, right	23 22	K15 K16	Relay, 4WD Relay, PTO emergency stop	65 68
(E26) Parking light, upper, left	22	(K18)	Relay, Control stop	8
		, ,	7,	
F 1 15 A Hazard blinkers, reserve F 2 5 A Radio, clock, tachograph	31 2	M 1 M 2	Starter motor Fan	3 55
F 2 5 A Radio, clock, tachograph F 3 10 A High beam, indicator light	2 25	M 3	Windscreen wiper	53
F 4 10 A Dipped beams	25	M 4	Windscreen washer	51
F 5 5 A Parking lights, left	28	(M5)	Rear window wiper	49
F 6 5 A Parking lights, right F 7 10 A Front working lights	30 44	(M6) (M7)	Rear window washer Floor fan	48 57
F 7 10 A Front working lights F 8 20 A Light switch	28	(M8)	Water pump	97
F 9 15 A Trailer socket, rear fog light	35	` ,	Partie	
F10 15 A Starter switch, thermostart	4	P1	Engine coolant thermometer	16
F11 5 A Autocontrol (+Bat.), buzzer	83	P2 P3	Fuel gauge Revolution counter	17 18
F12 10 A Rot. warning light, cabin light F13 10 A Reserve	47 100	P4	Hour recorder/work. height	19
F14 15 A Water pump	97	(P4)	Running hours/driving speed	
F15 20 A Fan III – speed	56	(DC)	(Agrodata – instrument)	19
F16 10 A Rear working lights, inner F17 10 A Direction indicators, Agrodata	42 32	(P5)	Clock/PTO – speed/AC/distance/Gearbox temperature (Agrodata – instrument)	102
F17 10 A Direction indicators, Agrodata F18 5 A Instruments, warning lights, Autocontrol	32 17		tomporataro (ngrodata-motidinent)	102
F19 10 A Combination switch, wiper return	51	Q 1	Starter switch	4
F20 10 A Rear window wiper/washer	48	(Q 2)	Main switch	3
F21 15 A Fan I and II, Air cond. floor fan F22 10 A 4WD, PTO, Delta Power Shift	55 65	R 1	Thermostart	5
F23 10 A Rear working lights, outer	41	R 4	Cigarette lighter	91
F24 10 A Speedometer	93		<u> </u>	
F25 10 A Air suspension seat/seat heating	0.4			
reverse drive control lock	94			

https://tractormanualz.com/

10 A Back buzzer, ETB, F/R

		Model	Code	Page
31. Tractor electrical system	15. 4. 1995	6000-8400	310	22

				15. 4. 1995			
Sym-	Commonwell	Code	Sym-	Component			Code
ool	Component	nro	bol	Componenet			nro
S 1	Switch, head lights	28	(X29)		in., STOP-alarm (00
S 2	Switch, rear working lights	41	X31		PTO – emerg. stop		68 5
3	Switch, fan	55	(X32) (X33)		in, electric stop in, rear fog light		5
4	Combination control	25,34, 52	(X34)		pin. Agrodata – ins	trumrnt ser	nsors
5 6)	Switch, front working lights Switch, rot. warning light	43 47	(X35)	Connector, 9-			
7	Switch, hazard warning flashers	32	(X49)	Connector, 2 p			94
8 8)	Switch, air conditioning	5 <u>4</u>	(X53)	Agrodata sock	et, 7 pin, implemer		
9	Safety circuit breaker	4	(X54)		in Agrodata senso		
10	Brake light contact, right	65	(X55)	Connector,1 pi	n., Agrodata suppl	ly	95
311	Fuel gauge sender unit	17	Y 1	Solenoid valve	diff lock		63
12	Pressure drop indicator, air filter	7	Ϋ́2	Solenoid valve			68
13 15	Engine oil press. sender unit	8	Y 3	Solenoid valve			66
316	Sender unit to hand brake ind. light Gearbox temperature sender unit	12 13	(Y 4)		, Delta PS reductio	n	69
17	Gearbox oil pressure sender unit	9	(Y 5)		compr., air con.		54
18	Engine temperature sender unit (stop)	16	(Y 6)		, Delta PS overdriv		70
	Air cond. compressor press. switch	54	(Y7)		, reverse drive con	trol lock	94
320	Brake light contact, left	65	(Y8)	Solenoid, elect	ric stop		4
322	Switch, differential lock	61	GD /1	Earth load roa	r lighte/colonoid va	alvoc	
	Push buttons, Delta Powershift	70	GR /2	Earth lead, roo	r lights/solenoid va f	aives	
23)	Push buttons, Delta Powershift	71		Earth lead, Aut			
24	Switch, Delta Power shift disengagement	69			ole harness, instr. p	anel	
25	Switch, PTO release	68 25		Earth lead, bat			
26) 27)		35 96	GR /8	Earth lead, hea	adlights		
327) 328	Switch, PTO 540	68		Earth lead, cab			
S29	Switch, PTO 1000/540E	67	GR /10	0Earth lead, ele	ctric stop		
30	Switch, 4WD	66	Mata				1:6
331)		57			list of Autoco	ntroi poi	wer iii
32)	Switch, rear window washer and wiper	48	see p	page 320/3B.			
333)		23					
	Switch, water pump	97	Wire	colours			
335)	Switch, reverse drive control lock	94	WIIC	Colouis			
337)	Switch, Control stop Switch, Agrodata – instrument.	4 102	Ru –	brown			
	Door switch, right, cabin light	46	Pu = 1				
343)		46	Ke = \				
	Change over switch, rpm/flow meter (agro		Si = b				
S50)		,	Mu =	black			
	tractor /implement (agrodata)		Vi = g				
/ 1	Diodes (Y1, Y2, Y3, Y4, Y6)		۷a = ۱				
/ 2	Diodes (41, 12, 13, 14, 16)		Ha = ! Li = lil				
V3)	Diodies, Control stop	15		iac			
,	Broards, Corra or etop	.0					
(1	Connector, 9 pin., distribution box						
(2	Connector, 9 pin., distribution box						
3	Connector, 9 pin., distribution box						
(4	Connector, 9 pin., distribution box						
5	Connector, 9 pin., distribution box						
(6 (7	Connector, 9 pin., distribution box						
(Connector, 9 pin., distribution box Connector, 2 pin., power socket	92					
(9	Connector, 9 pin, combination control	32					
(10	Connector, 9 pin, combination control						
11	Connector, 9 pin., upwards						
(12	Connector, 9 pin., rearwards, right						
13	Connector, 9 pin., solenoid valves.						
(14	Connector, 9 pin., rearwards, left						
(15)	Connector, 3 pin., air cond., diodes	54					
(16)							
	socket	32					
(17	Rear socket 7 nin						
	Rear socket, 7 pin Connector 2 pin rear window washer						
(18)	Connector, 2 pin., rear window washer	48					
(18) (19	Connector, 2 pin., rear window washer Connector, 24 pin, front wall	48					
(18) (19 (20	Connector, 2 pin., rear window washer	48					
(18) (19 (20 (22	Connector, 2 pin., rear window washer Connector, 24 pin, front wall Connector, 9—pole, front direction indicate	48 or 47					
(18) (19 (20 (22 (23	Connector, 2 pin., rear window washer Connector, 24 pin, front wall Connector, 9 – pole, front direction indicate Connector, 2 pin., rot. roof light Connector, 2 pin., Delta Powershift optiona buttons	48 or 47					
(18) (19) (20) (22) (23)	Connector, 2 pin., rear window washer Connector, 24 pin, front wall Connector, 9 – pole, front direction indicate Connector, 2 pin., rot. roof light Connector, 2 pin., Delta Powershift optiona buttons Connector, 9 pin., upwards	48 or 47 al					
X18) X19 X20 X22 X23 X24 X25)	Connector, 2 pin., rear window washer Connector, 24 pin, front wall Connector, 9 – pole, front direction indicate Connector, 2 pin., rot. roof light Connector, 2 pin., Delta Powershift optiona buttons Connector, 9 pin., upwards Connector, 9 – pin. Agrodata – instrument	48 or 47 al					
X17 X18) X19 X20 X22 X23 X24 X25) X26 X27	Connector, 2 pin., rear window washer Connector, 24 pin, front wall Connector, 9 – pole, front direction indicate Connector, 2 pin., rot. roof light Connector, 2 pin., Delta Powershift optiona buttons Connector, 9 pin., upwards	48 or 47 al					

GR2GR5

GR2

22

GR2


24

GR8

25

GR8 GR5 GR5

27

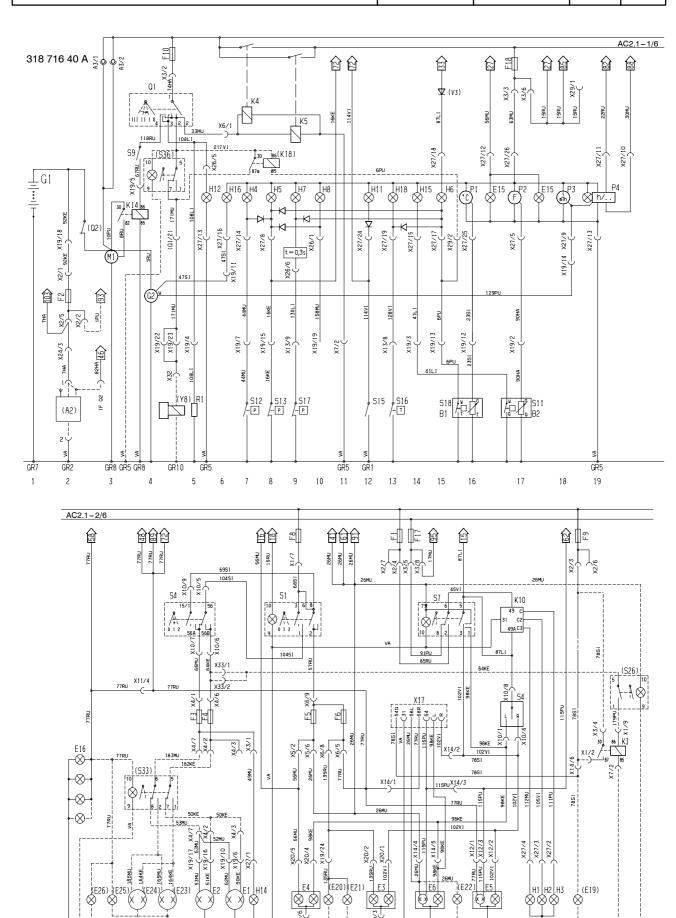

GR8 GR8

29 30

GR5 GR1

GR1

GŘ1

GR5


GR5 GR5


31. Tractor electrical system


15. 4. 1995


Model **6000-8400**

Code **310**

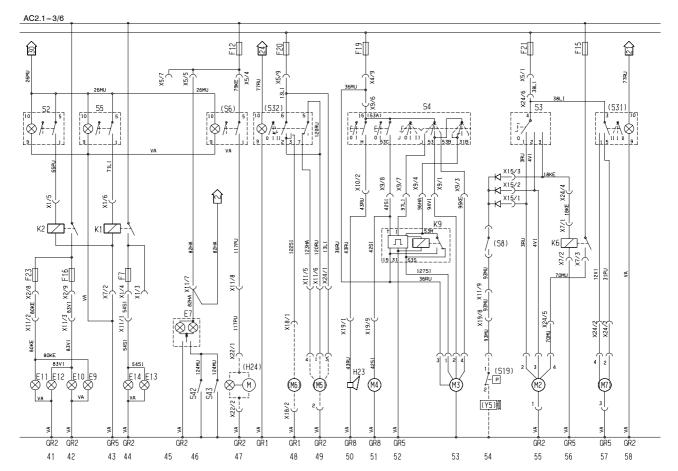

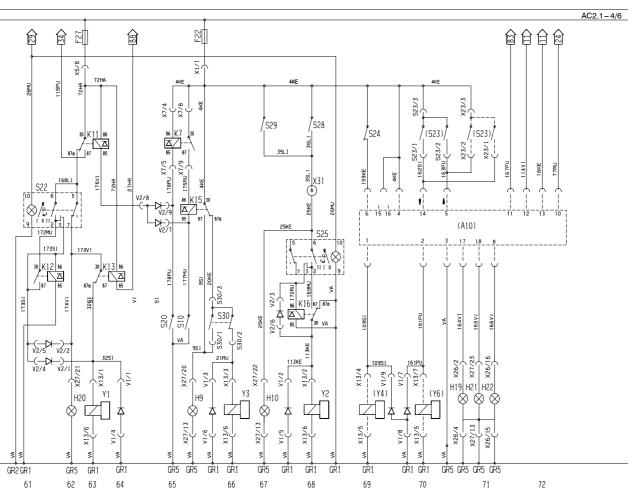

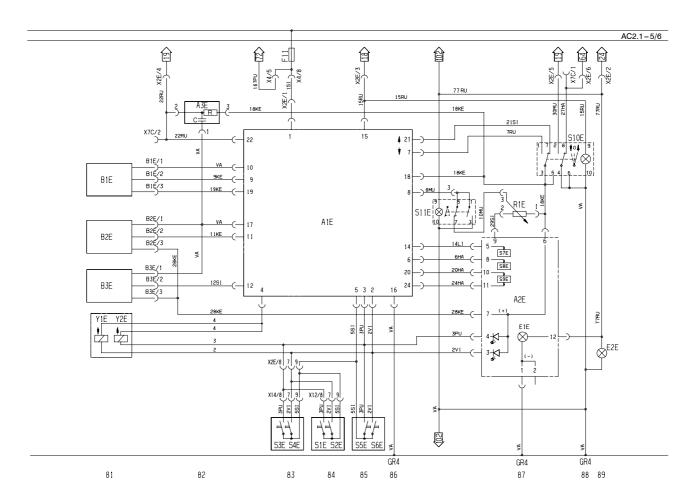

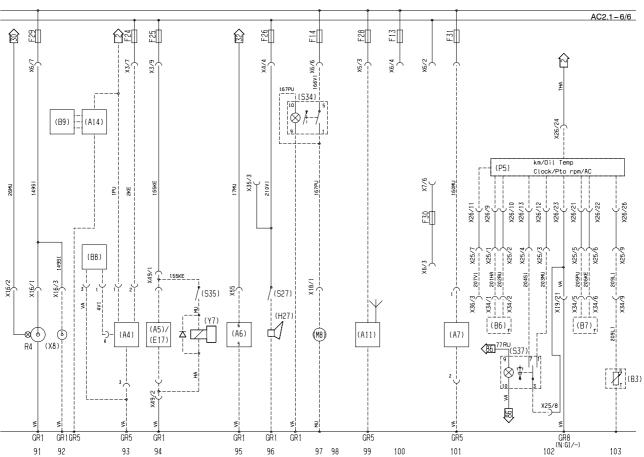

	15. 5. 1996	Model	Code	Page
31. Tractor electrical system	1. 4. 1997	6000-8750	310	27

Wir	ing diagram, F17107–.		Sym- bol	Component	Code no
Diagra	m no 318 716 40D . Diagrams on pages 310 / 29) –31 .	F27 F28	10 A Brake lights, diff. lock., trailer brakes 10 A Telephone	62 99
Cum		Code	F29	10 A Cigarette lighter, power socket	91
Sym- bol	Component	no	F30	10 A Reserve 15 A Electric air filter	101 101
(4.0)	•		(F31)	15 A Electric all filter	101
(A 2) A 3	Radio Electric centre	2	G 1	Battery	1
(A 5)	Air suspension seat	94	G 2	Alternator	4
(A 6)	Agrodata	95	H 1	Pilot light, direction indicator III	34
(A 7) (A 10)	Electric air filter Delta Powershift control unit	101 70	H 2	Pilot light, direction indicator II	34
(A 11)	Telephone	99	H 3 H 4	Pilot light, direction indicator I Warning light, air filter	34 7
(A13)	Control unit, Sigma	113	H 5	Warning light, all filler Warning light, engine oil pressure	8
(A 14)	Tachograph	93	H 6	Warning light, stop, engine temp.	15
B 1	Sensor, engine temperature	16	H 7 (H8)	Warning light, gearbox oil pressure Pilot light, gearbox oil filter	9 10
B 2	Sensor, fuel gauge	17	H 9	Pilot light, 4WD	65
(B3) B4	Sensor, gearbox oil temperature Sensor, Sigma, crank shaft	102 114	H10	Pilot light, PTO	67
B5	Sensor, Sigma, PTO	114	H11 H12	Pilot light, parking brake Pilot light, Thermostart	12 6
(B6)	Sensor, gearbox speed	81D 102	H14	Pilot light, main beam	27
(B7) (B8)	Sensor, PTO shaft speed Sensor, wheel speed	102	H15	Warning light, low fuel level	14
(B9)	Sensor, tachograph	93	H16 H17	Warning light, charging Pilot light, Sigma-power	6 111
(B10)	Radar	81D	H18	Warning light, gearbox oil temp	13
E 1	Headlights, right	26	H19	Pilot light Delta Powershift I	71
E 2	Headlights, left	25	H20 H21	Pilot light, diff. lock Pilot light Delta Powershift II	62 71
E 3	Front direction indicator, right	31	H22	Pilot light Delta Powershift III	71
E 4 E 5	Front direction indicator, left Rear light, right	28 33	H23	Horn	50
E 6	Rear light, left	32	(H24) (H27)	Rotating roof light Reverse buzzer	47 96
E 7	Cabin light	46 40	(1127)	Tieverse buzzer	30
E 9 E10	Rear working light, right outer Rear working light, right inner	42 42	K 1	Relay, front working lights	43
E11	Rear working light, left outer	41	K 2 (K 3)	Relay, rear working lights Rear fog light	41 35
E12	Rear working light, left inner	41	K 4	Starter switch relay	7
E13 E14	Front working light, right Front working light, left	44 44	K 5	Starter switch relay	9
E15	Instrument lights	17	K 6 K 7	Relay, fan III Relay, four wheel braking	56 65
E16	Roof console lights	21 94	K9	Relay, interval wiper	53
(E17) (E19)	Seat heater Rear fog light	35	K10	Direction indicator relay	34
(E20)	Parking light, right, Norway	29	K11 K12	Relay, brake lights, diff. lock Relay, differential lock	63 61
(E21) (E22)	Parking light, left, Norway	30 32	K13	Relay, differential lock	63
(E22)	Register plate light Upper head lights, right	32 24	K14	Starter motor relay	4
(E24)	Upper head lights, left	23	K15 K16	Relay, 4WD Relay, PTO emergency stop	65 68
(E25) (E26)	Parking light, upper, right Parking light, upper, left	22 22	(K18)	Relay, Control stop	8
(L20)	raiking light, upper, left	22	(K19)	Relay, display control, Sigma	112
F 1	15 A Hazard blinkers, reserve	31	M 1	Starter motor	3
F 2 F 3	5 A Radio, clock, tachograph 15 A High beam, indicator light	2 25	M 2	Fan	55
F 4	15 A Dipped beams	25	M 3 M 4	Windscreen wiper Windscreen washer	53 51
F5	5 A Parking lights, left	28	(M5)	Rear window wiper	49
F 6 F 7	5 A Parking lights, right 10 A Front working lights	30 44	(M6)	Rear window washer	48
F 8	20 A Light switch	28	(M7) (M8)	Floor fan Water pump	57 97
F 9	15 A Trailer socket, rear fog light	35	(IVIO)	water pump	91
F10 F11	15 A Starter switch, thermostart 5 A Autocontrol (+Bat.), buzzer	4 71, 82, 82D	P1	Engine coolant thermometer	16
F12	10 A Rot. warning light, cabin light	47	P2 P3	Fuel gauge Revolution counter	17 18
F13	10 A Reserve	100	P4	Hour recorder/AC	19
F14 F15	15 A Water pump 20 A Fan III – speed	97 56	(P4)	Running hours/driving speed	
F16	10 A Rear working lights, inner	42	(P5)	(Agrodata – instrument) Clock/PTO – speed/AC/distance/Gearbox	19
F17	10 A Direction indicators, Agrodata	32	(1 3)	temperature (Agrodata – instrument)	101
F18 F19	5 A Instruments, warning lights, Autocontrol 10 A Combination switch, wiper return	17 51			
F20	10 A Rear window wiper/washer	48	Q 1 (Q 2)	Starter switch Main switch	4 3
F21	15 A Fan I and II, Air cond. floor fan	55 65	(& 2)	man ownor	J
F22 F23	10 A 4WD, PTO, Delta Power Shift 10 A Rear working lights, outer	65 41	R 1	Thermostart	5
F24	10 A reserve	98	R 4	Cigarette lighter	91
F25	15 A Air suspension seat/seat heating	24			
F26	reverse drive control lock 10 A Back buzzer, trailer brakes, Sigma	94 94			
1-20	TO A Dack Duzzel, Italiel Diakes, Signia	54			

	1551996	Model
31. Tractor electrical system	1, 4, 1997	6000-8750

Page

28


Code


310

Sym- bol	Component	Code no	Sym- bol	Componenet	Code no
S 1	Switch, head lights	28	X24	Connector, 9 pin., upwards	
S 2	Switch, rear working lights	41	(X25)		
S3	Switch, fan	55	X26	Connector, 26 pin., instr. left, white.	
S 4	Combination control	25,34, 52	X27	Connector, 26 pin., instr. right, blue	
S 5	Switch, front working lights	43	(X29)	Connector, 2 pin., STOP-alarm (max. 2 W)	
(S 6)	Switch, rot. warning light	47	X31	Socket, 2 pin, PTO – emerg. stop	68
S 7	Switch, hazard warning flashers	32	(X32)	Connector, 1 pin, electric stop	5
(S 8)	Switch, air conditioning	54	(X33)	Connector, 3 pin, rear fog light	
S 9	Safety circuit breaker	4	(X34)	Connector, 9-pin. Agrodata-instrument sen	isors
S10	Brake light contact, right	65	(X35)	Connector, 9-pin. ETB	
S11	Fuel gauge sender unit	17	(X36)	Reserve	
S12	Pressure drop indicator, air filter	7	X38	Connector, 3-pin. reserve	
S13	Engine oil press. sender unit	8	X39	Connector, 3 – pin. reserve	
S15	Sender unit to hand brake ind. light	12	X40	Connector, 3-pin. reserve	
S16	Gearbox temperature sender unit	13	(X49)	Connector, 2 pin., seat	94
S17	Gearbox oil pressure sender unit	9	(X53)		
S17		16	(X54)		
	Engine temperature sender unit (stop)	54	(X55)	Connector,1 pin., Agrodata supply	95
	Air cond. compressor press. switch		()		
S20	Brake light contact, left	65 61	Y 1	Solenoid valve, diff lock	63
S22	Switch, differential lock	61	Y 2	Solenoid valve pto	68
(S23)		70	Y 3	Solenoid valve 4WD	66
(S23)	Push buttons, Delta Powershift	71	(Y 4)	Solenoid valve, Delta PS reduction	69
S24	Switch, Delta Power shift disengagement	69	` ,		54
S25	Switch, PTO release	68	(Y 5)	Solenoid valve Compr., air con.	70
(S26)	Switch, rear fog lights	35	(Y 6)	Solenoid valve, Delta PS overdrive	
(S27)	Switch, reverse buzzer	96	(Y7)	Solenoid valve, reverse drive control lock	94
`S28 [′]	Switch, PTO 540	68	(Y8)	Solenoid, electric stop	4
S29	Switch, PTO 1000/540E	67	(Y9)	Solenoid valve, front PTO	
S30	Switch, 4WD	66	(Y13)		113
(S31)	Switch, floor fan	57	(Y16)	Solenoid, cold start	3
(S32)	Switch, rear window washer and wiper	48	05 //		
(S33)	Change over sw., head lights up	23	GR /1	Earth lead, rear lights/solenoid valves	
(S34)		97		Earth lead, roof	
(S35)		97 94		Earth lead, Autocontrol	
	Switch, reverse drive control lock	94 4		Earth lead, cable harness, instr. panel	
(S36)	Switch, Control stop		GR /7	Earth lead, battery	
(S37)	Switch, Agrodata – instrument.	103	GR /8	Earth lead, headlights	
(S38)	Switch, front PTO	40	GR /9	Earth lead, cab	
(S42)	Door switch, right, cabin light	46	GR /10	0Earth lead, electric stop	
(S43)	Door switch, left, cabin light	46			
(S44)		10	Note	! Concerning AC power lift, see page 3	20/3C
(S49)	Change over switch, rpm/flow meter (Agro	odata)		power lift, see page 321/10.	
(S50)	Change over switch, km/h, wheel sensor,			, , ,	
	tractor /implement (Agrodata)		Wire	colours	
V 1	Diodes (Y1, Y2, Y3, Y4, Y6)		_		
V 2	Diodes (AC II)			brown	
(V3)	Diodes, Control stop	15	Pu = 1	red	
			Ke = y	yellow	
X 1	Connector, 9 pin., distribution box		Si = b	blue	
X 2	Connector, 9 pin., distribution box		Mu =	black	
Х3	Connector, 9 pin., distribution box		Vi = g	reen	
X 4	Connector, 9 pin., distribution box		Va = v		
X 4C	Connector, 9 pin., tractor front part		Ha =		
X 5	Connector, 9 pin., distribution box		Li = lil		
X 6	Connector, 9 pin., distribution box				
X 7	Connector, 9 pin., distribution box				
(X 8)	Connector, 2 pin., power socket	92			
(X 6) X 9	Connector, 9 pin, combination control	32			
X10	Connector, 9 pin, combination control				
X10 X11					
X11 X12	Connector, 9 pin., upwards				
	Connector, 9 pin., rearwards, right				
X13	Connector, 9 pin., solenoid valves.				
X14	Connector, 9 pin., rearwards, left	E A			
(X15)	Connector, 3 pin., air cond., diodes	54			
(X16)	Connector, 3 pin., cigarette lighter, current				
	socket				
X17	Rear socket, 7 pin	32			
(X18)	Connector, 2 pin., rear window washer	48			
X19	Connector, 32 pin, front wall				
X20	Connector, 9-pole, front direction indicato	r			
X22	Connector, 2 pin., rot. roof light	47			
X23	Connector, 2 pin., Delta Powershift optiona	I			
	buttons	71			

71

buttons

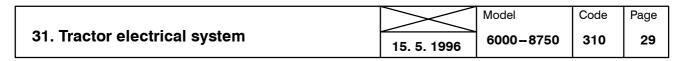

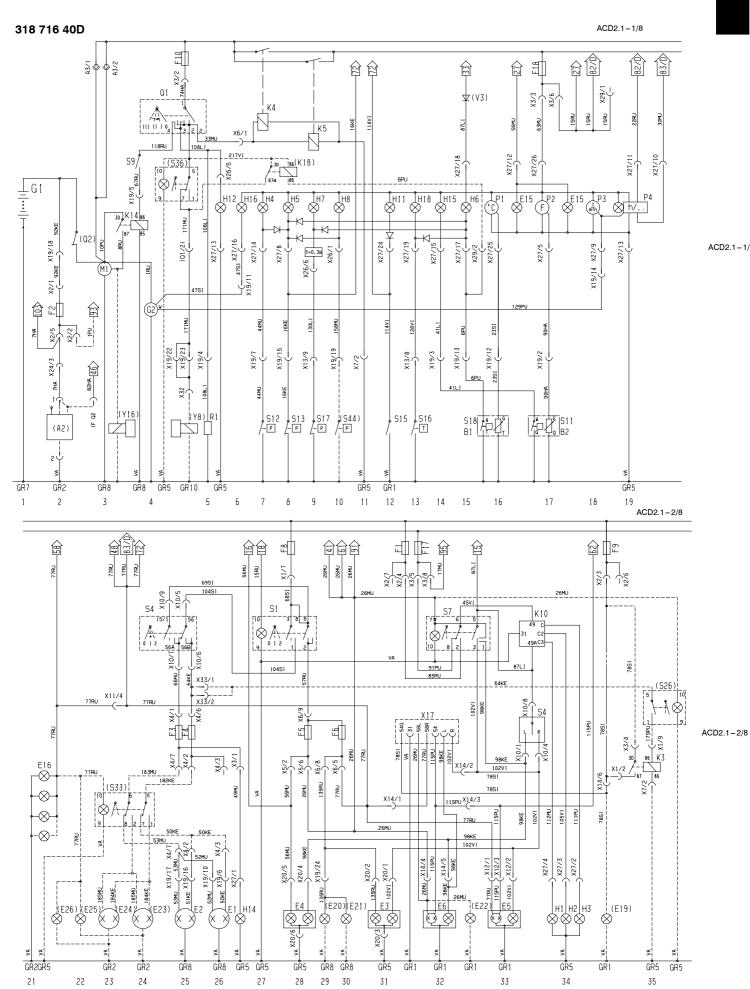



https://tractormanualz.com/

Model 15, 5, 1996 6000

6000-8750

Code **310**

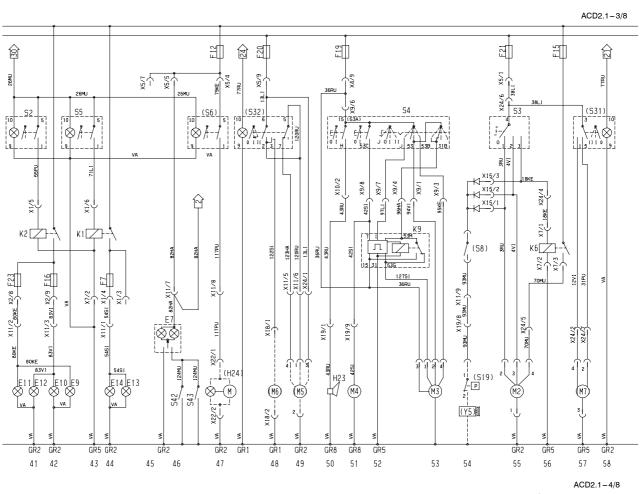

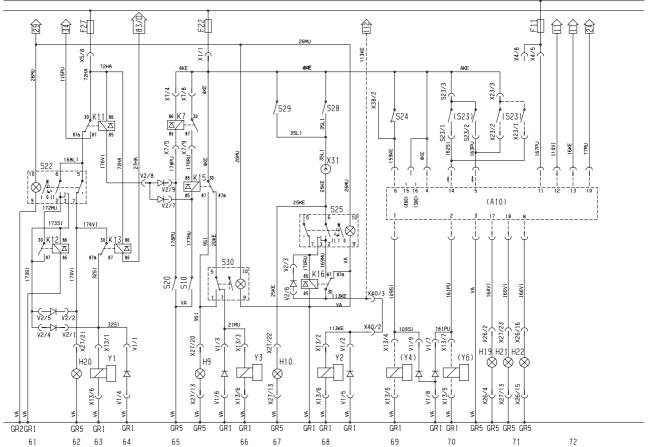

15.-8.-1996 1. 4. 1997


Model **6000-8750**

Code **310**

Page **31**

ACD2.1-7/8 21 27 F14 F24 2 23 \$3/D 210VI X4/4 (B9) (A14) km/0il Temp (P5) Clock/Pto rpm/AC X38/1 ×, / 210VI 14951 17MC X26/26 2 ×6/3 (S35) 袋介 (527)) (H27) 6 (A6) (MB) (A11) (A7) (X8) R4 (B6) (B7) (B7) GR8/ (N:G1/-) GR1 GR 1 GR5 GR1 GR1 GR5 103 94 91 93 95 96 100 101 102 92 97 98 99

ACD2.1-8/8

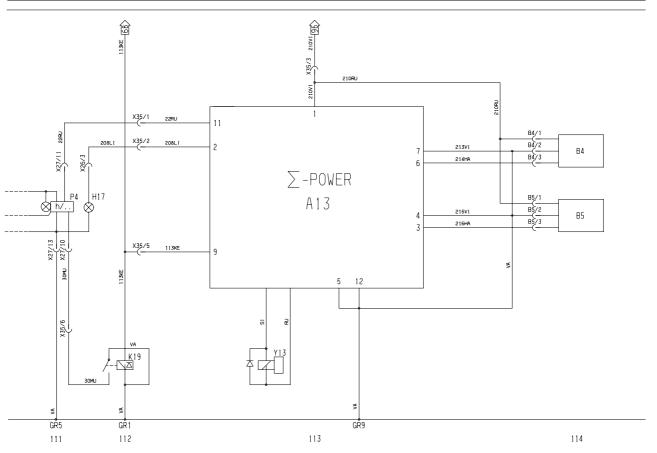





	$\overline{}$	Model	Code	Page
31. Electrical system	1. 4. 1997	6000-8750	310	33


	ing diagram, F 50112— am no 318 716 40F. Diagrams on pages 310/	′35 – 38.	Sym- bol	Component	Code no
			F27	10 A Brake lights, diff. lock.	62
Sym-		Code	F28	10 A Telephone	99
bol	Component	no	F29 F30	10 A CaraTal	91
(A 2)	Radio	2	(F31)	10 A CareTel 15 A Electric air filter	101 101
A 3	Electric centre	2	(101)	13 A Liectific dil filter	101
(A 5)	Air suspension seat	94	G 1	Battery	1
(A 6)	Agrodata	95	G 2	Alternator	4
(A 7)	Electric air filter	101		50 - 10 - 10 - 10 - 10 - 10	
٠	Delta Powershift control unit	70	H 1 H 2	Pilot light, direction indicator III Pilot light, direction indicator II	34 34
	Telephone Control unit, Sigma	99 113	п 2 Н 3	Pilot light, direction indicator I	34 34
	Tachograph	93	H 4	Warning light, air filter	7
	Control unit, front PTO	69	H 5	Warning light, engine oil pressure	8
` ,			H 6	Warning light, stop, engine temp.	15
B 1	Sensor, engine temperature	16	H 7	Warning light, gearbox oil pressure	9
B 2	Sensor, fuel gauge	17	(H8) H 9	Pilot light, gearbox oil filter	10 65
(B3) (B4)	Sensor, gearbox oil temperature Sensor, Sigma, crank shaft	102 114	H10	Pilot light, 4WD Pilot light, PTO	67
(B5)	Sensor, Sigma, PTO	114	H11	Pilot light, parking brake	12
(B6)	Sensor, gearbox speed	81D 102	H12	Pilot light, Thermostart	6
(B7)	Sensor, PTO shaft speed	102	H14	Pilot light, main beam	27
(B8)	Sensor, wheel speed		H15	Warning light, low fuel level	14
(B9)	Sensor, tachograph	93	H16	Warning light, charging	6
(B10)	Radar	81D	H17 H18	Pilot light, Sigma Warning light, gearbox oil temp	111 13
E 1	Headlights, right	26	H19	Pilot light Delta Powershift I	71
Ē2	Headlights, left	25	H20	Pilot light, diff. lock	62
E 3	Front direction indicator, right	31	H21	Pilot light Delta Powershift II	71
E 4	Front direction indicator, left	28	H22	Pilot light Delta Powershift III	71
E 5	Rear light, right	33	H23	Horn	50
E 6 E 7	Rear light, left	32 46	(H24) (H27)	Rotating roof light Reverse buzzer	47 96
E 9	Cabin light Rear working light, right outer	40 42	(H28)	Pilot light, CareTel	120
E10	Rear working light, right inner	42	(1.20)	The light, earers	120
E11	Rear working light, left outer	41	K 1	Relay, front working lights	43
E12	Rear working light, left inner	41	K 2	Relay, rear working lights	41
E13	Front working light, right	44	(K 3)	Rear fog light	35
E14	Front working light, left	44	K 4 K 5	Starter switch relay Starter switch relay	7 9
E15 E16	Instrument lights Roof console lights	17 21	K 6	Relay, fan III	56
(E17)	Seat heater	94	K7	Relay, four wheel braking	65
(E19)	Rear fog light	35	K 9	Relay, interval wiper	53
E20)	Parking light, right, Norway	29	K10	Direction indicator relay	34
(E21)	Parking light, left, Norway	30	K11	Relay, brake lights, diff. lock	63
(E22)	Register plate light	32	K12	Relay, differential lock	61 63
(E23) (E24)	Upper head lights, right Upper head lights, left	24 23	K13 K14	Relay, differential lock Starter motor relay	4
(E24) (E25)	Parking light, upper, right	23 22	K15	Relay, 4WD	65
E26)	Parking light, upper, left	22	K16	Relay, PTO emergency stop	68
(===)	. a.i.i.g iig.ii, appel, ieil		(K18)	Relay, Control stop	8
F 1	15 A Hazard blinkers, reserve	31	(K19)	Relay, display control, Sigma	112
F 2	5 A Radio, clock, tachograph, CareTel	2	(K 24)	Control relay, Hi Shift	115
F 3	15 A High beam, indicator light	25	M 1	Starter motor	3
F 4 F 5	15 A Dipped beams 5 A Parking lights, left	25 28	M 2	Fan	55
F6	5 A Parking lights, right	20 30	M 3	Windscreen wiper	53
F 7	10 A Front working lights	44	M 4	Windscreen washer	51
F8	20 A Light switch	28	(M5)	Rear window wiper	49
F 9	15 A Trailer socket, rear fog light	35	(M6)	Rear window washer	48
F10	15 A Starter switch, thermostart	4	(M7)	Floor fan	57 07
F11		, 82, 82D	(M8)	Water pump	97
F12	10 A Rot. warning light, cabin light	47	P1	Engine coolant thermometer	16
F13 F14	10 A Reserve 15 A Water pump	100 97	P2	Fuel gauge	17
F15	20 A Fan III-speed	56	P3	Revolution counter	18
F16	10 A Rear working lights, inner	42	P4	Hour recorder/AC	19
F17	10 A Direction indicators, Agrodata	32	(P4)	Running hours/driving speed	
F18	5 A Instruments, warning lights, Autocontrol	17	(DC)	(Agrodata – instrument)	19
F19	10 A Combination switch, wiper return	51	(P5)	Clock/PTO-speed/AC/distance/Gearbox	101
F20	10 A Rear window wiper/washer	48 55		temperature (Agrodata-instrument)	101
		55	Q 1	Starter switch	4
F21	15 A Fan I and II, Air cond. floor fan	65			
F21 F22	10 A 4WD, PTO, Delta Power Shift	65 41			3
F21 F22 F23	10 A 4WD, PTO, Delta Power Shift 10 A Rear working lights, outer	41	(Q 2)	Main switch	
F21 F22	10 A 4WD, PTO, Delta Power Shift		(Q 2) R 1		3 5
F21 F22 F23 F24	10 A 4WD, PTO, Delta Power Shift 10 A Rear working lights, outer 10 A reserve	41 98 94	(Q 2)	Main switch	3


	$\overline{}$	Model	Code	Page
31. Electrical system	1. 4. 1997	6000-8750	310	34


Cum		Code	Sym- bol	Componenet	Code no
Sym- bol	Component	no		•	
	·		X24 (X25)	Connector, 9 pin., upwards	
S 1	Switch, head lights	28	X26	Connector, 9-pin. Agrodata-instrument Connector, 26 pin., instr. left, white.	
S 2 S3	Switch, rear working lights Switch, fan	41 55	X27	Connector, 26 pin., instr. right, blue	
S 4	Combination control	25,34, 52	(X29)	Connector, 2 pin., STOP-alarm (max. 2 W)	
S 5	Switch, front working lights	43	X31	Socket, 2 pin, PTO – emerg. stop	68
(S 6)	Switch, rot. warning light	47	(X32) (X33)		5
S 7	Switch, hazard warning flashers	32	(X34)		nsors
(S 8) S 9	Switch, air conditioning Safety circuit breaker	54 4	(X35)		
S10	Brake light contact, right	65	(X36)	Connector, 3 pins, Hi Shift, speed limit	116
S11	Fuel gauge sender unit	17	(X38)		116
S12	Pressure drop indicator, air filter	7	X39 X40	Connector, 3 – pin. reserve Connector, 3 – pin. reserve	
S13	Engine oil press. sender unit	8	X40 X41	Connector, 2 pins, front PTO	
S15 S16	Sender unit to hand brake ind. light Gearbox temperature sender unit	12 13	X42	Connector, 4 pins, front PTO	
S17	Gearbox oil pressure sender unit	9	(X43)	Socket, 8 pins, CareTel	119
S18	Engine temperature sender unit (stop)	16	(X49)		94
	Air cond. compressor press. switch	54	(X53) (X54)	Agrodata socket, 7 pin, implement Connector, 9 pin Agrodata sensors	
S20	Brake light contact, left	65	(X54) (X55)	, i O	95
S22	Switch, differential lock	61	(7100)	Commoder, Fpm., Agrodata cappry	00
(S23) (S23)	Push buttons, Delta Powershift	70 71	Y 1	Solenoid valve, diff lock	63
(323) S24	Push buttons, Delta Powershift Switch, Delta Power shift disengagement	69	Y 2	Solenoid valve pto	68
S25	Switch, PTO release	68	Y 3 (Y 4)	Solenoid valve Delta PS reduction	66 69
	Switch, rear fog lights	35	(Y 5)	Solenoid valve, Delta PS reduction Solenoid valve compr., air con.	54
(S27)	Switch, reverse buzzer	96	(Y 6)	Solenoid valve, Delta PS overdrive	70
S28	Switch, PTO 540	68	(Y7)	Solenoid valve, reverse drive control lock	94
S29 S30	Switch, PTO 1000/540E	67 66	(Y8)	Solenoid, electric stop	4
(S31)	Switch, 4WD Switch, floor fan	57	(Y9)	Solenoid valve, front PTO	69
(S32)	Switch, rear window washer and wiper	48	(Y13) (Y14)		113 115
(S33)	Change over sw., head lights up	23	(Y15)		115
(S34)	Switch, water pump	97	(Y16)	Solenoid, cold start	3
(535)	Switch, reverse drive control lock Switch, Control stop	94 4	GD /1	Earth load, roor lights/solonoid valves	
(S37)		103		Earth lead, rear lights/solenoid valves Earth lead, roof	
	Switch, front PTO	69	'.	Earth lead, Autocontrol	
(S42)	Door switch, right, cabin light	46		Earth lead, cable harness, instr. panel	
(S43)	Door switch, left, cabin light	46		Earth lead, battery	
(S44)		10		Earth lead, headlights	
	Switch, Hi – Shift I)Extra switch, Hi Shift	115 115		Earth lead, cab 0Earth lead, electric stop	
(S49)	Change over switch, rpm/flow meter (Agro		GIT / I	o Earth Toda, Glootho Glop	
	Change over switch, km/h, wheel sensor,	,	Note	! Concerning AC power lift, see page :	320/3C.
	tractor /implement (Agrodata)			power lift, see page 321/10.	
V 1 V 2	Diodes (Y1, Y2, Y3, Y4, Y6) Diodes (AC II)		CareT	Tel .	
(V3)	Diodes, Control stop	15	A1L	CareTel datalogger	118
(V5)	Diodes, Hi Shift	115	B1L	Pressure sensor, CareTel, 18 bar	117
X 1	Connector, 9 pin., distribution box		(B2L)	Pressure sensor, CareTel, 190 bar	117
X 2	Connector, 9 pin., distribution box		X1L	Connector, 8 pins, RS-232	17-120
Х3	Connector, 9 pin., distribution box		X2L		7-120
X 4	Connector, 9 pin., distribution box		X3L		7-120
X 5	Connector, 9 pin., distribution box		X4L		17-120
X 6 X 7	Connector, 9 pin., distribution box Connector, 9 pin., distribution box				
(X 8)	Connector, 2 pin., power socket	92	Wire	colours	
X 9	Connector, 9 pin, combination control				
X10	Connector, 9 pin, combination control		Ru =	brown	
X11	Connector, 9 pin., upwards		Pu =		
X12 X13	Connector, 9 pin., rearwards, right Connector, 9 pin., solenoid valves.		Ke =	yellow	
X13	Connector, 9 pin., rearwards, left		Si = b		
(X15)	Connector, 3 pin., air cond., diodes	54		black	
(X16)	Connector, 3 pin., cigarette lighter, current		Vi = g	•	
V47	socket	00	Va = v		
X17 (X18)	Rear socket, 7 pin Connector, 2 pin., rear window washer	32 48	Ha =	- ·	
(A16) X19	Connector, 32 pin, front wall	40	Li = li	iac	
X20	Connector, 9 – pole, front direction indicate	r			
X22	Connector, 2 pin., rot. roof light	47			
X23	Connector, 2 pin., Delta Powershift optiona				
	buttons	71			

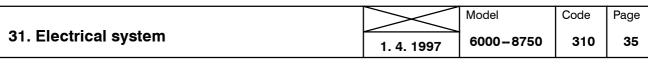


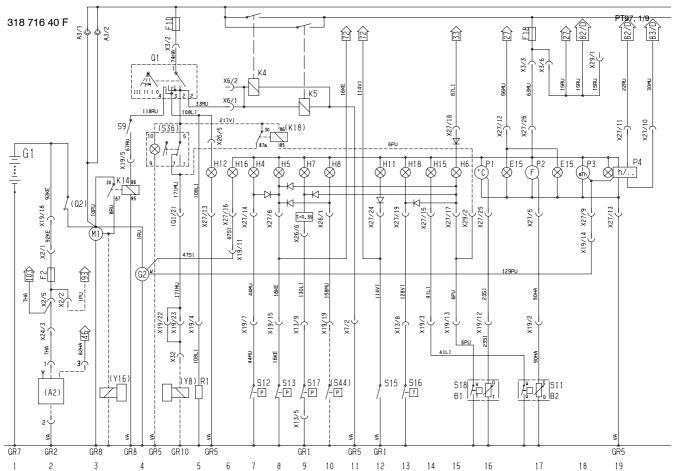


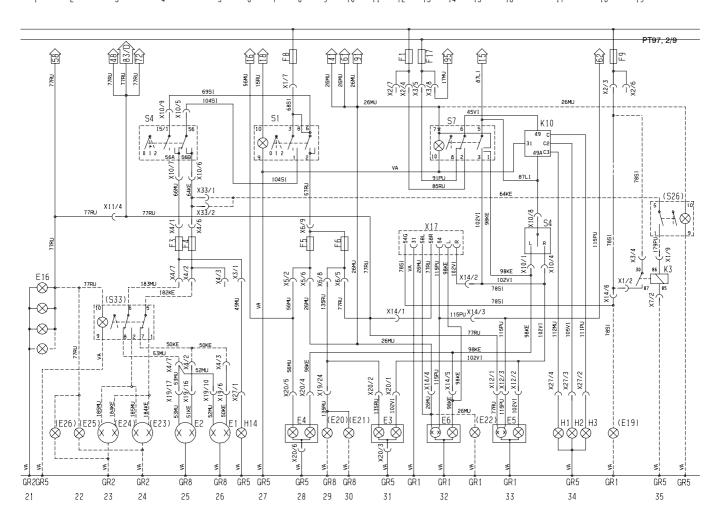

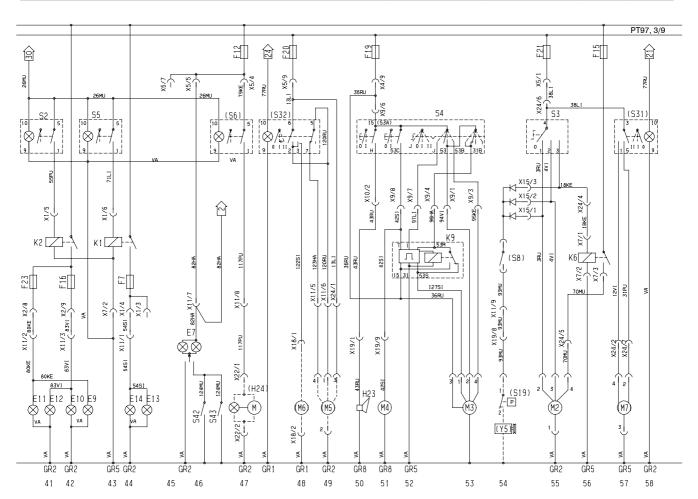


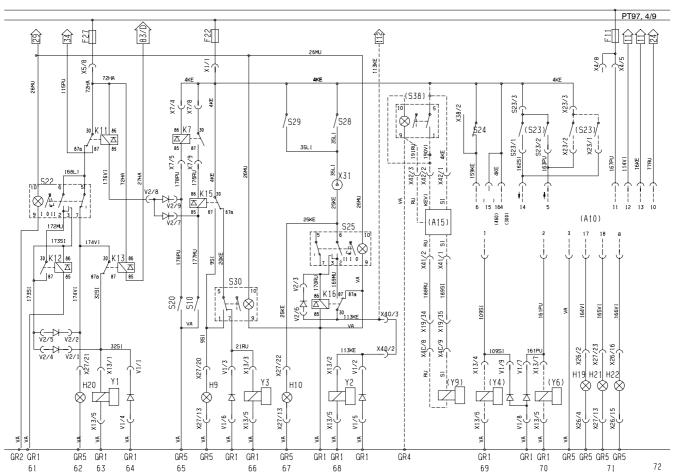

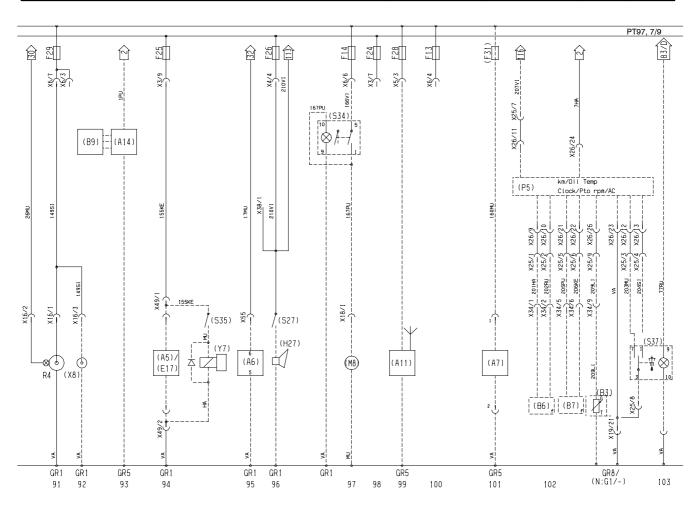

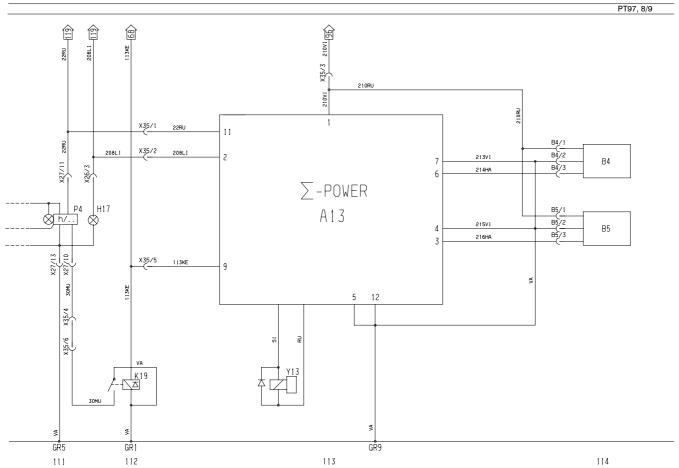

	\searrow	Model	Code	Page
31. Electrical system	1. 4. 1997	6000-8750	310	38

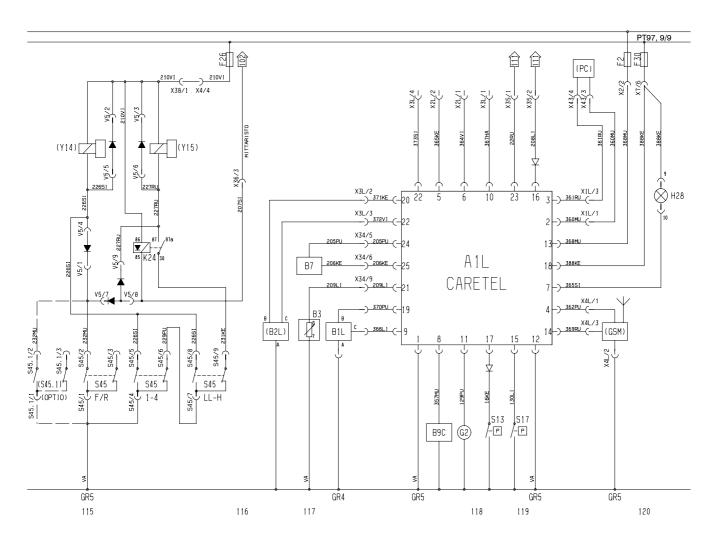

Model Code Page 1.6.1999

64 7			1.00.			1
31. Tractor electric system			1. 10. 1999	62508950	310	39
Wiring diagram, HiTech H49112-J38342.	models	Sym bole	– Component			Code no
The diagrams on pages 310/43-47. Diagram no	33563500. Incl.		Fuses			
also FieldMaster, CareTel and AC V-system.		F 1	15/20∆ Hazard v	varning flashers, w	ater numi	p 31, 97
(A1A)Control unit, reverse shuttle	122-152			ock, tachograph, C		2,120
(A2) Radio	2		15A Main beams			25
A3 Distribution box (fuse box)	_		15A Dipped bea			25
(A5) Pneumatic seat `	94		5A Parking light			28
(A6) Agrodata	95		5A Parking light 10A Front workir			30 44
(A7) Electric air filter	101		25A Light switch			28
(A10) Control unit, DPS (A11) Telepfone	70 99		15A Trailer socke			35
(A13) Control unit Sigma	113		25A 3-pin. pow			96
(A14) Tachograpf	93		5A Autocontrol			83B, 83D
(A16) FieldMaster	155			g light, cabin light		47
(A17) Adapter, FieldMaster signals	154		10A Reserve	ah tharmastart		100
			15A Ignition swit 20A Fan III-spe			4 56
B1 Sender unit, engine temo. gauge	16		10A Rear workin			42
B2 Sender unit, fuel gauge (B3) Temperature sensor, gearbox AD	17 102			grodata/Fieldmaste	er	32, 154
(B4) Sensor Sigma crankshaft	114			nd. lights, Autocor		17
(B5) Sensor Sigma, PTO		F19	10A Windscreen	wiper/washer, sig	nal horn	51
(B6) Gearbox speed sesnor	81D, 102		10A Rear window			48
(B7) PTO speed sensor	117, 102	F21		-speed, air condi	tioning,	
(B8) Sensor, wheel sensor		F22	floor fan 10A 4WD			55 70
(B9) Sensor, tachograph	93		10A Rear workin	a liahts, outer		41
(B10) Radar B11 Engine speed sensor	81D 125		10A AC5, hand l			67, 126
B12 Sensor, HiTech shuttle	126		15A Pneumatic	seat/seat heater,		
B13 Sensor, HiTech shuttle	127		reverse drive cor			94
B14 Sensor, gearbox oil temperature	139		10A Back buzze			113
B15 Position sensor, gas pedal	140		10A Brake lights 10A Telefone	, differential lock		64
B16 Position sensor, clutch pedal	137			hter, 2-pin. power	r socket	99 91
B17 Sensor, outdoor temperature	141		10A CareTel	riter, z—piri. power	SOCKEL	120
E1 Headlights, right	26	G1	Battery			1
E2 Haedlights, left	25		Alternator			4, 118
E3 Front direction indicator, right E4 Front direction indicator, left	31 28	U.	, morriator			.,
E5 Rear light, right	33	H1	Pilot light, directi	on indicator III		34
E6 Rear light, left	32		Pilot light, directi			34
E7 Cabin light	46		Pilot light, directi			34
E9 Rear working light, right, outer	42		Warning light, bl			7 8
E10 Rear working light, right, inner	42			ngine oil pressure op, engine tempe	rature	0
E11 Rear working light, left, outer	41	110	Hand brake wire		ididio,	15
E12 Rear working light, left, inner E13 Front working light, right	41 44	H7		earbox oil pressure)	9
E14 Front working light, left	44	H8	Warning light, ge			10
E15 Instrument light	17		Pilot light, 4WD			65
E16 Roof console light	21		Pilot light, PTO	broko		67
E17 Seat heater	94		Pilot light, hand Pilot light, Therm			12 6
(E19) Rear fog light	35		Pilot light, main l			27
(E20) Parking light, right, Norway	29 30		Warning light, lo			14
(E21) Parking light, left, Norway (E22) Register plate light	30		Pilot light, charg			6
(E23) Upper head lights, right	24	H17	Pilot light, Sigma	1		111
(E24) Upper head lights, left	23			earbox oil tempera	ture	13
(E25) Parking light, upper, right	22	H20	Pilot light, differe	ntial lock		62

K4

22

22

(E25) Parking light, upper, right

(E26) Parking light, upper, left

(E27) Side working light (E28) Side working light

(H24) Rotating warning light

(H28) Warning light, Stop, rear

K2 Relay, rear working lights

Starter switch relay K5 Starter switch relay

(K3) Relay, rear fog light

Relay, front working lights

H23 Signal horn

(H27) Back buzzer

50

47

96

120

43

41

		Model	Code	Page
31. Tractor electrical system	1. 11. 1998	6250-8950	310	40

			Sum	Code
Sym-	-	Code	Sym- bole Component	no
bole	Component	no	(COO) Cuitab reconsided as successor for full and	40
K6	Relay, fan III – speed	56	(S32) Switch, rear window washer/wiper (S33) Toggle switch, headlights up	48 23
	Relay, four wheel braking	65	(S34) Switch, water pump	97
	Relay, interval wiper	53	(S35) Switch, reverse drive control lock	94
	Relay, flashers	34	(S36) Switch, control stop	4
	Relay, brake lights/differential lock	63	S37 Switch, Agrodata – instrument	103
	Relay, differential lock	61	(S38) Switch, front PTO	69
	Relay, differential lock	63	S40 Reed relay, forwards (F)	146
	Relay, starter motor	4	S41 Reed relay, rearwards (R)	147
	Relay, 4WD	65	S42 Door switch, cabin light, right	46
	Relay, control stop	8 115	S43 Door switch, cabin light, left S44 Sensor, pressure filter 180 bar	46 11
	Relay, upper headlights to working lights Relay, 4WD on/off	68		15, 142
	Relay, hand brake	67	S45.1 Extra push buttons, HiShift	115
	Relay, back buzzer	147	S47 Switch, DPS, man./autom.	144
,	•		(S49) Switch, rpm / flow meter (Agrodata)	
M 1	Starter motor	3	(S50) Switch, speed sensor, tractor/implement	
M 2		55	S51 Push button DPS preselecting	149
	Windscreen wiper	53	S52 Ind. light switch, hand brake wire	14
	Windscreen washer	51	S53 Ind. light sensor, return filter, low pressure hydr.	
	Rear window wiper	49	S54 Ind. light sensor, pressure filter, 18bar	11
` '	Rear window washer	48 57	(S59) Switch, glass roof washer S60 Safety switch, seat	142
	Floor fan Water pump	97	Sou Salety Switch, Seat	142
	Glass roof wiper	91	V1 Diode Y1, Y2, Y3, Y4, Y6	
(1110)	alab roof wipor		V2 Diode, AC2	
P1	Engine coolant thermometer	16	V3 Diode, 4-veto	
	Fuel gauge	17	V4 Diode, Y11, Y12, Y17	
P3	Rev counter	18		
P4	Hour recorder – /velocity meter		Earth points:	
	(Agrodata – instrument)	19	0D4 D	
	Upper display, AD – instrument	101	GR1 Rear working lights, solenoid valves	
P6	Display, AC5	131	GR2 Roof GR4 Autocontrol	
Q1	Starter switch	4	GR5 Dashboard wire loom	
	Main switch	3	GR7 Battery	
()			GR8 Headlights	
R1	Thermostart	5	GR9 Cab	
R4	Cigarette lighter	91	GR10 Electric engine stop	
S1	Switch, headlights	28	Connectors:	
	Switch, rear working lights	41	Connectors.	
	Switch, fan	55	X1 9 pins, distribution box	
	Kombination lever	25, 34, 52	X2 9 pins, distribution box	
	Switch, front working lights	[′] 43	X3 9 pins, distribution box	
(S6)	Switch, rot. warning light	47	X4 9 pins, distribution box	
	Switch, hazard warning flashers	32	X5 9 pins, distribution box	
	Switch, air conditioning	54	X6 9 pins, distribution box	
	Safety circuit breaker	66	X7 9 pins, distribution box	00
	Switch, right brake lights	65	(X8) 2 pins, power socket	92
	Fuel gauge sender unit	17 7	X9 9 pins, combination lever X10 9 pins, combination lever	
	Pressure drop indicator Engine oil pressure sender unit	8, 118	X10 9 pins, combination level X11 9 pins, up	
	Reed relay, hand brake lever	67	X12 9 pins, rearwards, right	
	Gearbox temperature sender unit	13	X13 37 pins, transmission	
	Gearbox oil pressure sender unit	9, 119	X14 9 pins, rearwards, left	
	Engine temperature sender unit (stop)	16	(X15) 3 pins, air conditioning, diodes	54
(S19)	Pressure switch, AC compressor pressure	54	X17 7 pins, trailer socket	32
	Contact, left brake light	65	(X18) 2 pins, rear window washer	48
	Switch, differential lock	61	X19 37 pins, engine	
	Switch, Delta Power Shift	139, 140	X20 9 pins, front flashers	17
	Switch, PTO Switch, rear foo light	75 35	(X22) 2 pins, rot. warning light X23 3 pin, Delta Power Shift, option	47 71
	Switch, rear fog light Switch, back buzzer	96	X24 9 pins, upwards	/ 1
	Switch, PTO 540	96 143	X26 26 pins, instrument, left, white	
	Switch, PTO 1000/540E	144	X27 26 pins, instrument, right, blue	
	Switch, 4WD	66	X28 9 pins, shuttle speed sensors	
	Switch, floor fan	57	(X29) 2 pins, STOP-alarm (max. 2 W)	
			X30 9 pins, gear lever switches	
			X31 2 pins, power socket, PTO emergency switch	68
			(X32) 1 pin, electric stop of engine	5

Sym-	Code	CareTel	
bole Component	no		
		Sym-	Code
(X33) 3 pins, rear fog light		bole Component	no
(X35) 9 pins, SIGMA supply X39 9 pins, shuttle lever		•	
(X41) 2 pins, front PTO		A1L CareTel, data gathering unit	118
(X41) 2 pins, front PTO, supply			
X43 8 pins, RS-232		B1L Pressure sensor, CareTel, 18 Bar	117
(X45) 9 pins, Fieldmaster, option		(B2L) Pressure sensor, CareTel, 190 Bar	116
(X46) Socket, 7 pins, Fieldmaster		B3L Sensor, gearbox oil temperature	117 118
(X47) 2 pins, GPS supply, Fieldmaster		B4L Engine temperature sensor	110
(X48) 3 pins, radar, Fieldmaster		H1L Indication light, CareTel	120
(X49) 2 pins, seat	94	TTE maiodioningm, odionoi	120
X50 3 pins, power socket	96	X1L Connector, 9 pins, CareTel, RS-232	117-120
(X53) Agrodata socket, 7 pins, implement		X2L Connector, 3 pins, CareTel, CAN	117-120
V4 Coloraid valve differential lands	00	X3L Connector, 9 pins, CareTel, option	117-120
Y1 Solenoid valve, differential lock Y2 Solenoid valve, PTO	63 68	X4L Connector, 3 pins, CareTel, supply+	
Y3 Solenoid valve, 4WD	66	NBUS	117-120
(Y4) Solenoid valve, Delta Power Shift	69, 133		
(Y5) Magnetic clutch, AC compressor	54	Wire colours	
(Y6) Solenoid valve, Delta Power Shift	70, 134		
(Y7) Magnetic valve, reverse drive control lock	94	RU = braun	
(Y8) Solenoid, engine run	4	PU= red	
(Y9) Magnetic clutch, front PTO	69	KE = yellow	
Y11 Solenoid, forwards (F)	128	SI = blue	
Y12 Solenoid, rearwards (R)	130	MU = black	
(Y13) Solenoid valve, Sigma	113	VI = green	
(Y16) Solenoid, cold start	3	VA = white	
Y17 Solenoid valve, Delta Power Shift Y18 Solenoid valve, hand brake	130 67	HA = grey	
110 Solelloid valve, Italia brake	07	LI = lilac	
AC5 Control System, HiTech			
A1A Control unit, AC5	122-152		
S1A Switch, PTO rear control, left			
S2A Switch, PTO rear control, right			
X1A Connector, 9 pins, engine sensors	140-141		

ACD power lift, see page 321/10.


ACB power lift, see page 321/11A.


.

Od Turku da dia antara		Model	Code	Page
31. Tractor electric system	1. 11. 1998	6250-8950	310	42

6250-8950

Code **310**

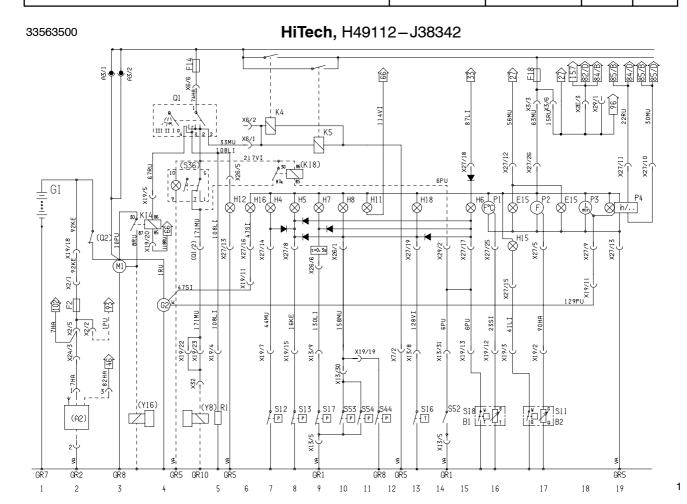

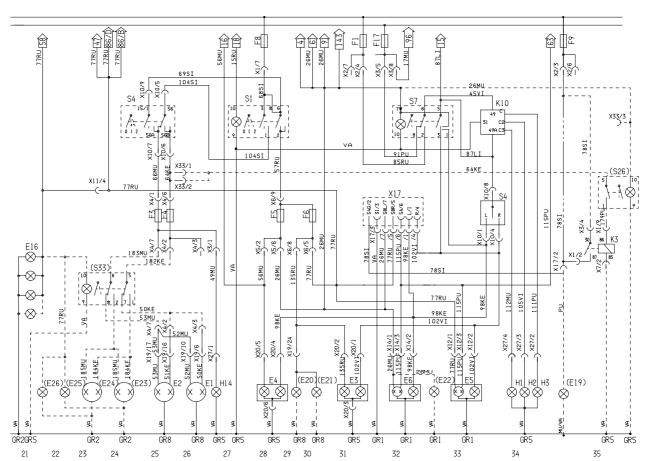


Model **6250-8950**

Code **310**

Page 44

HiTech, H49112-J38342

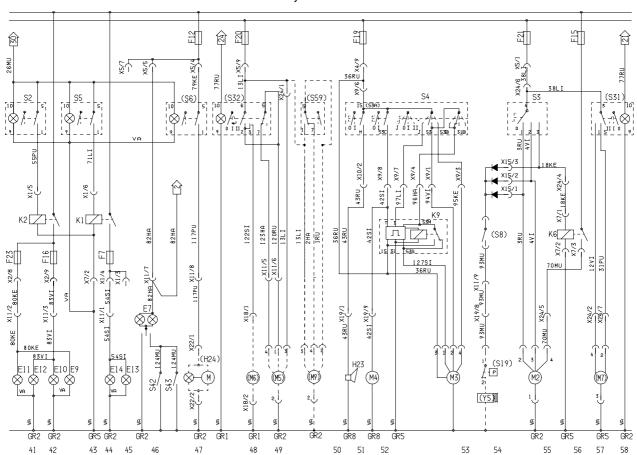



144 (146) (146) 15PU 34 X27/24 159MU 170RU X12/6 X14/6 222PU V2.7 💠 V2.9 💠 X31 V2.2 V2.1 - 17 (A15) (19/8 X19/34 188RU X41/2 RU XIA/9 X19/35 189SI X41/1 SI 86 K28 85 \$510 GR 1 68 63 65 69 76 62 64 66 72 74 75 77 78 73

31. Tractor electric system

1. 13. 4998 Model Code 1. 9. 2002 6250 8950 310

Page

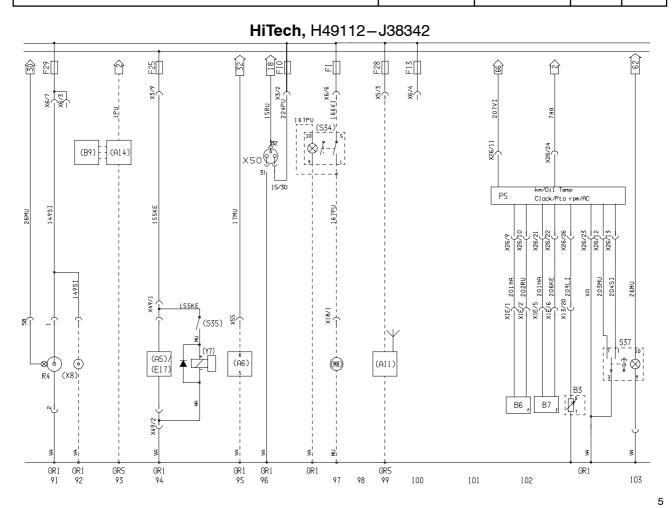

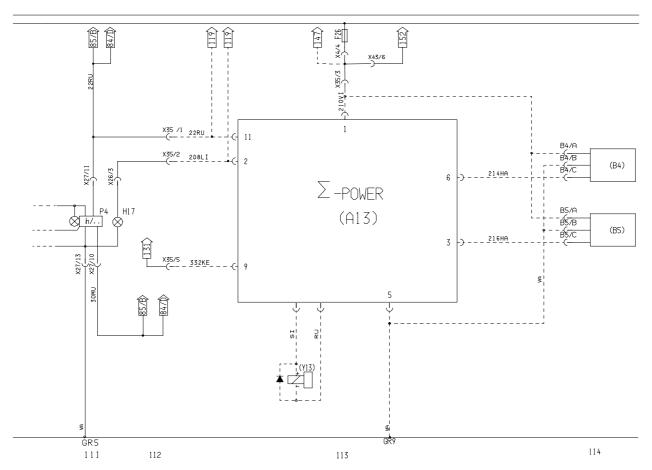

31. Tractor electric system


1. 11.4998


Model **6250-8950**

Code **310**

Page **46**

HiTech, H49112-J38342

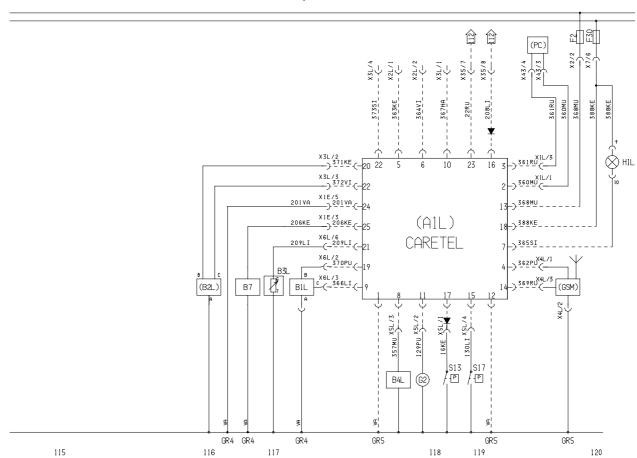

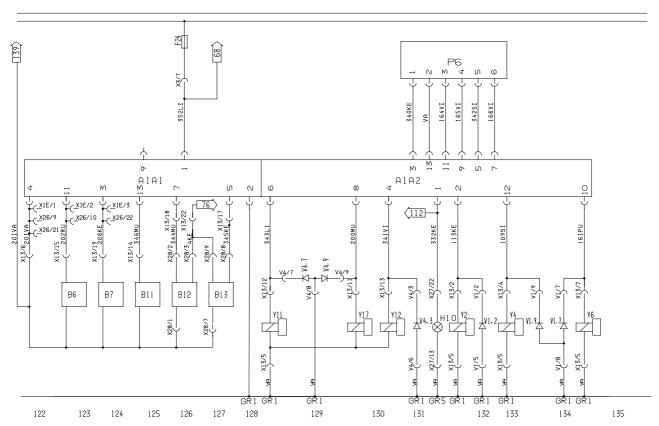


31. Tractor electric system

1. 1. 4998

Model **6250-8950**

Code **310** Page **47**

HiTech, H49112-J38342

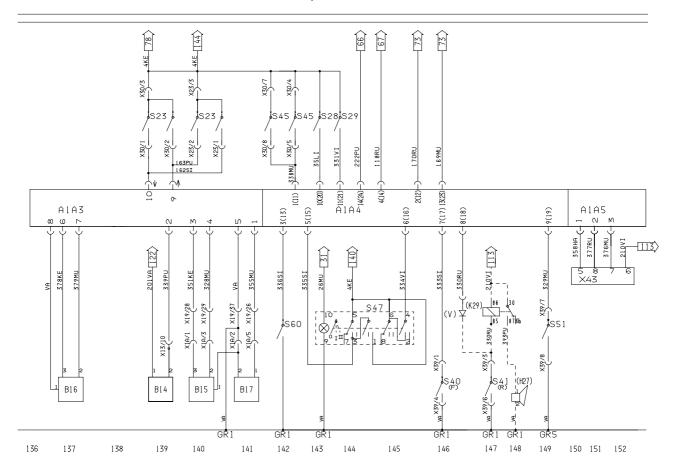

FieldMaster 27HA **(86/B**) XIL/4 374MU (24Tx RS-232 25 Rx (A16) X46/3 X46/7 _386SI_C_ X46/4 X46/1 X46/2 18 ___38711 (-19 _3<u>85</u>VI (A17) 3 5 6 8 ->-(B10) GR4 153 155 156 157 154



		Model	Code	Page
31. Tractor electrical system	1. 6. 1999	6200-8750	310	49

Wiring diagram 6200-8750 (J05133 Diagram no. 31871650A (no	• •	Sym- bol Component	Code no
3	,	F20 10A Rear window wiper/washer	ΛQ
Svm_	Code	F20 10A hear window wiper/washer F21 15A Fan (I, II), air conditioner, floor fan	48 55
Sym-		F22 10A 4WD, PTO, DPS	65
bol Component	no		41
(AO) Dodio	0	F23 10A Rear working lights, outer F24 10A Reserve	98
(A2) Radio	2		
A3 Electric centre	0.4	F25 15A Air suspension seat/seat heating, rear st	_
(A5) Arradata	94	prevention	94
(A6) Agrodata	95	F26 10A Back buzzer, Sigma, HiShift	96, 116
(A10) Control unit, DPS	70	F27 10A Braking lights, differential lock	62
(A11) Telephone	99	F28 10A Telephone	99
(A13) Control unit, Sigma	113	F29 10A Cigarette lighter, 2—pin current socket	91
(A14) Tachograph	93	F30 10A CareTel	120
(A16) Fieldmaster	155	04 B II	
		G1 Battery	1
B1 Sensor, engine temperature	16	G2 Alternator	4, 118
B2 Sensor, fuel gauge	17		
(B3) Sensor, gearbox temperature	102	H1 Indicator light, direction indicator III	34
(B4) Sensor, Sigma, crankshaft	114	H2 Indicator light, direction indicator II	34
(B5) Sensor, Sigma, PTO	114	H3 Indicator light, direction indicator I	34
	81D, 102, 123, 153	H4 Indicator light, air filter	7
(B7) Velocity sensor, PTO	102, 117, 124, 153	H5 Indicator light, engine oil pressure	8
(B8) Sender, wheel speed		H6 Warning light, stop, engine temp.	15
(B9) Sensor, tachograph	93	H7 Indicator light, gearbox oil press.	9
(B10) Speed radar	81D	(H8) Indicator light, oil filter, gearbox	10
(=) -		H9 Indicator light, 4WD	65
E1 Headlights, right	26	H10 Indicator light PTO	67
E2 Headlights, left	25	H11 Indicator light, parking brake	12
E3 Front direction indicator, right	31	H12 Indicator light, Thermostart	6
E4 Front direction indicator, left	28	H14 Indicator light, main beams	27
E5 Rear light, right	33	H15 Indicator light, fuel reserve	14
E6 Rear light, left	32	H16 Indicator light, charging	6
	46	H17 Indicator light, Sigma	111
<u> </u>			13
E9 Rear working light, right outer	42	H18 Indicator light, gearb. oil temp.	71
E10 Rear working right, right inner	42	H19 Indicator light DPS I	
E11 Rear working light, left outer	41	H20 Indicator light, diff. lock	62
E12 Rear working light, left inner	41	H21 Indicator light DPS II	71
E13 Front working light, right	44	H22 Indicator light DPS III	71
E14 Front working light, left	44	H23 Horn	50
E15 Instrument lights	17	(H24) Rotating roof light	47, 148
E16 Roof console lights	21	(H27) Reverse Buzzer	96
(E17) Seat heater	94	(H28)Indicator light, STOP, rear	
(E19) Fog light, rear	35		
(E20) Parking light, right, Norway	29	K1 Relay, front working lights	43
(E21) Parking light, left, Norway	30	K2 Relay, rear working lights	41
(E22) Register plate light	32	(K3) Relay, fog light, rear	35
(E23) Upper head light, right	24	K4 Auxiliary relay, starter switch	7
(E24) Upper head light, left	23	K5 Auxiliary relay, starter switch	9
(E25) Parking light, upper, right	22	K6 Relay, fan III	56
(E26) Parking light, upper, left	22	K7 Control relay, 4-wheel brake	65
(E27) Working light, side		K9 Relay, interval wiper	53
(E28) Working light, side		K10 Direction indicator relay	34
Fuses		K11 Relay, brake lights/differential lock	63
ruses		K12 Control relay, differential lock	61
F1 15A Hazard blinkers, water pump	21, 97	K13 Control relay, differential lock	64
F2 5A Radio, clock, tachograph, Care1		K14 Starter motor relay	4
F3 15A High beam	25	K15 Control relay, 4—wheel drive	65
F4 15A Low beam	25	K16 Relay, PTO – emergency stop	68
F5 5A Parking lights, left	28	(K18) Relay, control stop	8
F6 5A Parking lights, right	30	(K24) Control relay, HiShift	115
F7 10A Front working lights	44	K25 Control relay, upper head lights to working	110
F8 25A Light switch	28	lights	
F9 15A Trailer socket/fog light, rear	35	K26 Control relay, speed limit, HiShift	
F10 25A 3—pin current socket	100		66 60
F11 5A Autocontrol (+Bat), buzzer	71, 82B, 82D	K27 Control relay, 4WD on/off	66, 68
F12 10A Rot. warning light, cabin light	71, 02D, 02D 47		
F12 TOA Rot. warning light, cabin light	100		
F14 15A Starter switch, thermostart	97 56		
F15 20A Fan III – speed	56 42		
F16 10A Rear working lights, inner	42		
F17 10A Direction indicators, Fieldmaste			
F18 5A Instruments, warning lights, Aut			
F19 10A Windscreen wiper/washer, horn	51		
	I. 11		

		Model	Code	Page
31. Tractor electrical system	1. 6. 1999	6200-8750	310	50

Sym		Code	Sym-	Code
bol	Component	no	bol Component	no
M1	Starter motor	3	V1 Diodes Y1, Y2, Y3, Y4, Y6	
	Fan	55	V2 Diodes, AC-2	
	Windscreen wiper	53	V3 Diodes, 4WD	15
	Windscreen washer	51 40	V4 Diodes, Y11, Y12, (Y17)	115
` '	Rear window wiper Rear window washer	49 48	(V5) Diodes, HiShift	113
	Floor fan	57	Overwed leads	
(M8)	Water pump	97	Ground leads	
(M9)	Roof window wiper		GR1 Rear lights, solenoid valves	
D4	Engine temperature meter	16	GR2 Roof GR4 Autocontrol	
P1 P2	Engine temperature meter Fuel gauge	16 17	GR5 Cable harness, instr. panel	
P3	Tachometer	18	GR7 Battery	
P4	Running hour meter/AC (Sigma)	19	GR8 Headlights	
(P4	Running hour /speed meter (AD instrumen		GR9 Cabin	
(P5)	Clock, PTO – speed, AC, trip, oil temperatu		GR10 Electrical stop	
	ta-instrumentation)	101	X1 9 pin, distribution box	
Q1	Heat/starter switch	4	X2 9 pin, distribution box	
(Q2)	Main switch	3	X3 9 pin, distribution box	
` ,			X4 9 pin, distribution box	
R1	Thermostart	5	X5 9 pin, distribution box	
R4	Cigarette lighter	91	X6 9 pin, distribution box X7 9 pin, distribution box	
S1	Switch, head lights	28	X7 9 pin, distribution box (X8) 2 pin, power socket	92
S2	Switch, rear working lights	41	X9 9 pin, combination control	52
S3	Switch, fan	55	X10 9 pin, combination control	
S4	Combined switch	25, 34, 52	X11 9 pin, upwards	
S5	Switch, front working lights	43	X12 9 pin, rearwards, right	
(S6) S7	Switch, rot. warning light	47 32	X13 37 pin, transmission X14 9 pin, rearwards, left	
	Switch, hazard warning flashers Switch, air conditioner	52 54	(X15) 3 pin, air cond., diodes	54
S9		4, 66	X17 7 pin, trailer socket	32
	Switch, braking lights, right	65	(X18) 2 pin, rear window washer	48
	Fuel gauge sender unit	17	X19 37 pin, front wall	
	Pressure drop indicator, air filter	7	X20 9 pin, front direction indicator	47
	Engine oil press. sender unit Sender unit to parking brake ind. light	8, 118 12	(X22) 2 pin, rot. roof light X23 3 pin, DPS, extra switches	71
	Gearbox temperature sender unit	13	X24 9 pin, upwards	
	Gearbox oil pressure sender unit	9, 119	X26 26 pin, instrument left, white	
	Engine temperature sender unit (stop)	16	X27 26 pin, instr. right, blue	
	Switch, compressor pressure	54	(X29) 2 pin, STOP-alarm (max. 2 W)	
	Switch braking lights, left Switch, differential lock	65 61	X30 9 pin, switches gear levers X31 2 pin, PTO – emerg. stop	68
	Switch, DPS, selector	139, 140	(X32) 1 – pin, electric stop	5
	Extra switch, DPS, selector	71	(X33) 3 pin, fog light, rear	
S25	Switch, PTO	68, 75	(X35) 9-pin, Sigma supply	
	Switch, fog light rear	35	(X36) 3 pin, HiShift, speed-limit+ supply	
٠,	Switch, reverse buzzer	96	(X41) 2 pin, front PTO (X42) 4 pin, front PTO, supply	
	Switch, PTO 540 Switch, PTO 1000/540E	68 67	(X42) 4 pm, front FTO, supply (X45) 9 pin, Fieldmaster, extra equipment	
	Switch, 4WD	66	(X49) 2 pin, seat	94
	Switch, floor fan	57	(X50) 3 pin current socket	96
	Switch, rear window wiper and washer	48	(X55) 1 pin, Fieldmaster	95
٠,	Change over switch, head lights up	23		
٠,	Switch, water pump	97 94	Y1 Solenoid valve, diff lock	63
	Switch, rear steering prevention Switch, control stop	4	Y2 Solenoid valve, PTO	68
	Switch, Agrodata instrumentation, cursor+		Y3 Solenoid valve, 4WD	66
	Switch, front-PTO	69	(Y4) Solenoid valve, DPS	69, 133
	Door switch, cab light, RH	46	(Y5) Magnetic switch, compressor, air condition	
	Door switch, cab light, LH	46	(Y6) Solenoid valve, DPS	70, 134
	Indicator light switch, filter 180 bar Switch, HiShift	11 115 142	(Y7) Solenoid valve, rear steering prevention (Y8) Solenoid, engine running	94 4
	1) Extra switch, HiShift	115, 142 115	(Y9) Magnetic clutch, front-PTO	69
	Change over switch, rpm/flow sensor	. 10	(Y13) Solenoid valve, Sigma	113
(S50)	Change over switch, speed sensor, tractor,	/implement	(Y14) Solenoid valve, HiShift	115
	Indicator light switch, filter, return	10	(Y15) Solenoid valve, HiShift, slowing	115
	Indicator light switch, filter, 18 bar	11	(Y16) Solenoid, cold cranking	3
(559)	Switch, roof window washer			

		Model	Code	Page
31. Tractor electrical system	1. 6. 1999	6200-8750	310	51

Sym bol	_ Component	Code no
Care	eTel, information collecting system	
A1L	CareTel, data logger	118
(B2L) B3L B4L	Pressure sensor, CareTel, 18 Bar Pressure sensor, CareTel, 190 Bar Sensor, gearbox temperature Temperature sensor, engine Indicator light, CareTel	117 116 117 118
X2L X3L	Connector housing, 9 pin, CareTel, RS-232 Connector housing, 3-pin, CareTel, CAN Connector housing, 9 pin, CareTel, extra equipment Connector housing, 3 pin,CareTel, supply+ NBUS	117-120 117-120 117-120 117-120

ACB-power lift, see page 321/11 ACD-power lift, see page 321/10

Wire colours

RU = braun

PU= red

KE = yellow

SI = blue

MU = black

VI = green VA = white HA = grey LI = lilac





1. 6. 1999

6200-8750

Model

Code **310**

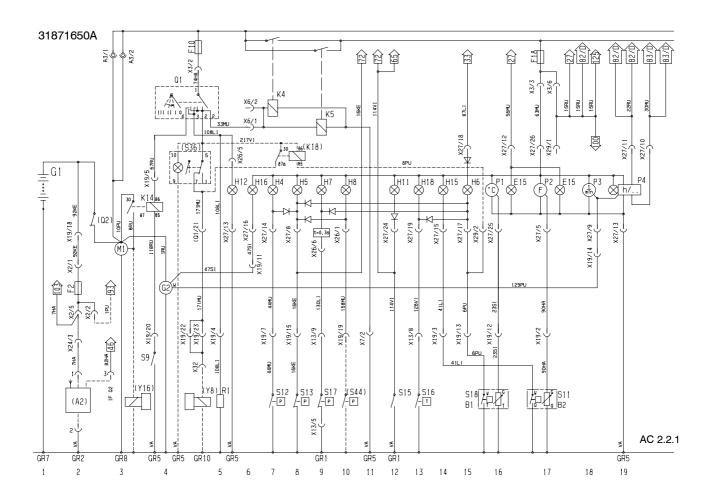


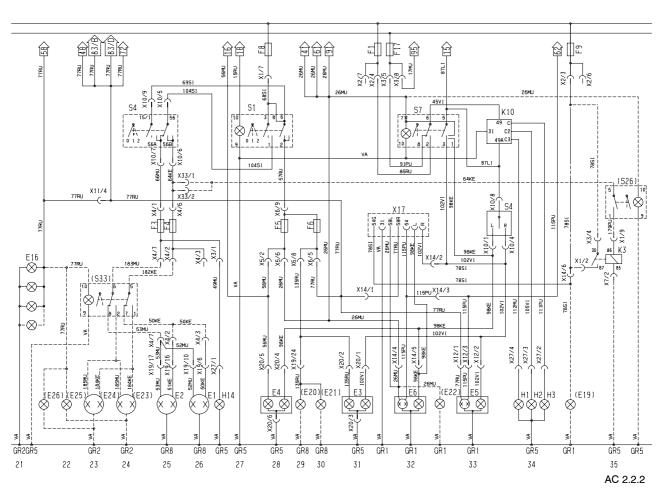



6200-8750


Model

Code **310**

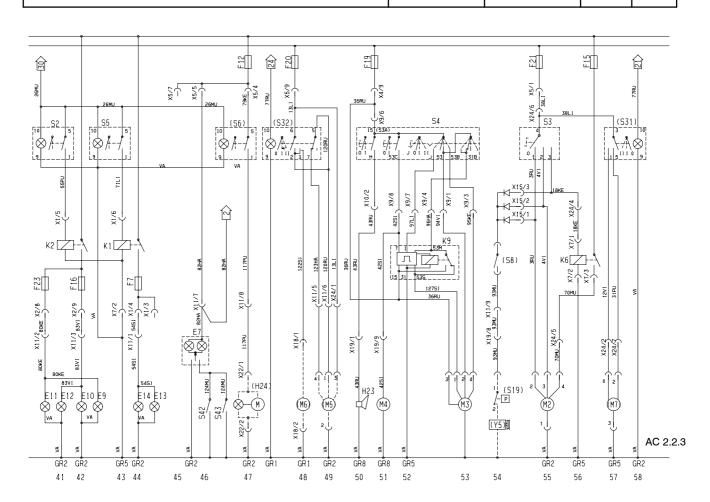


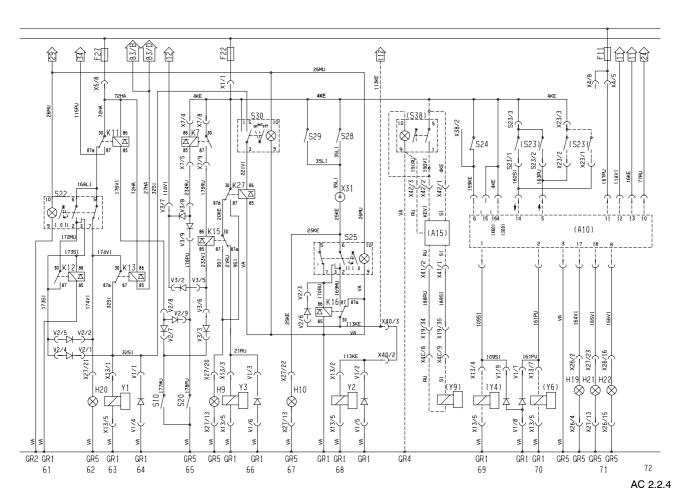


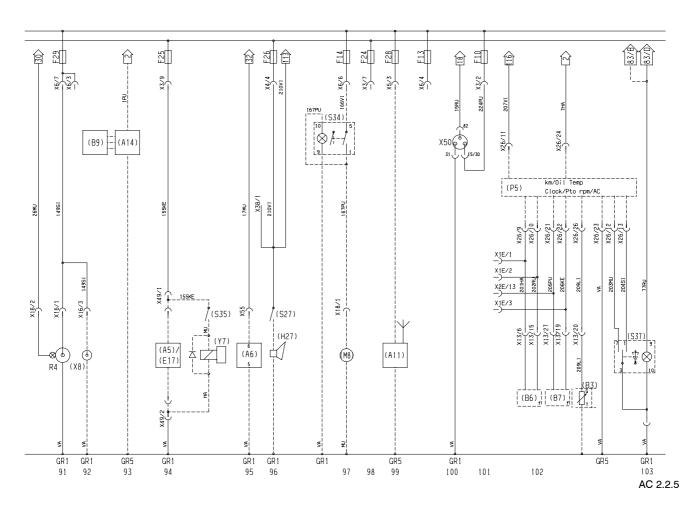

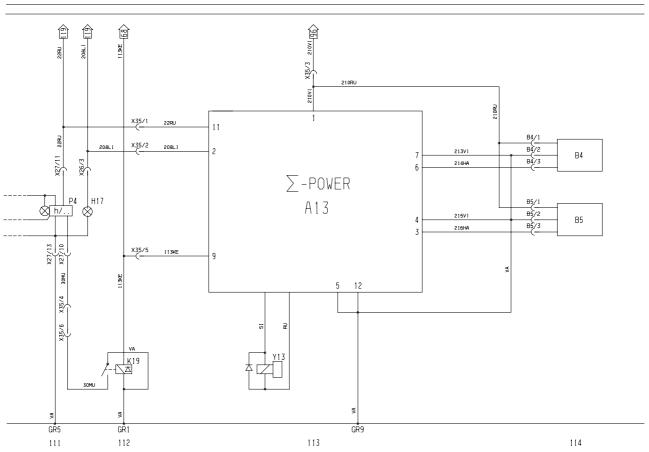

Model

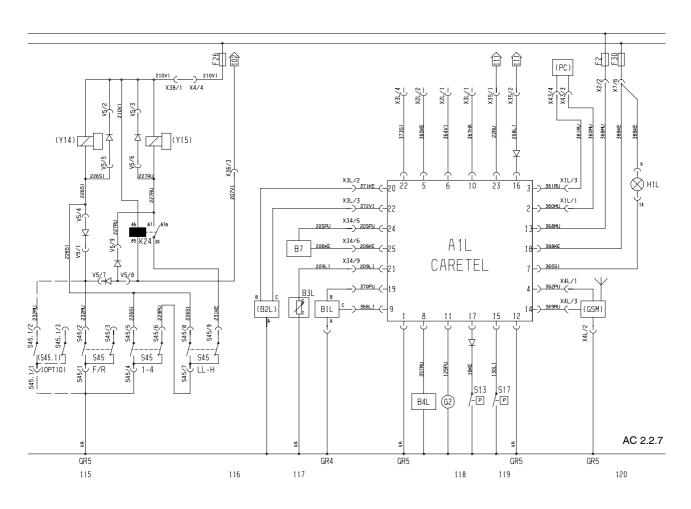

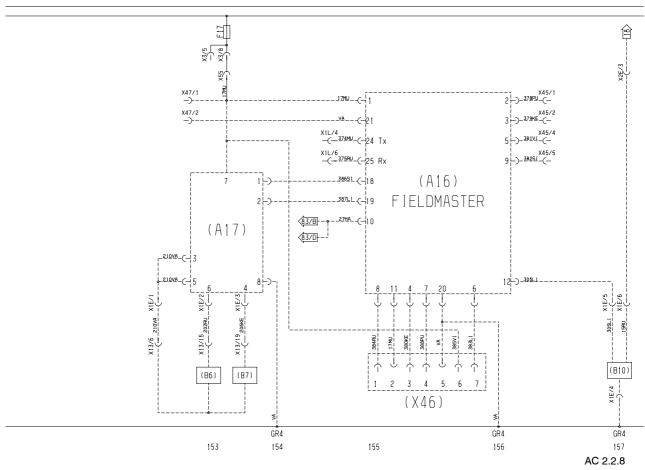

31. Tractor eletrical system 1. 10: 1999 Model Code Page 1. 8. 2000 6250 - 8950 310 57

Diagram no. 33663500A on pages 310/61 – 66. New wire loom 33412510 and Twin Trac. Sym	Wiring diagram, HiTech, J38343-K41106.		Sym- bol Component	Haku nro
Diagram no. 30st250U and Twin Trac. Sym			Fuses	
Symbol Component Component	• • • • • • • • • • • • • • • • • • • •	. New wire		31, 97
Accordance Acc			, , , , , , , , , , , , , , , , , , , ,	2, 120
(A2) Radio 2 F6 5A Parking lights, left F6 5A Parking lights, left F6 5A Parking lights, right F7 10A Front working lights F7 10A Front working light, rear F7 10A F7 F7 10A F7				25
(A2) Radio A3 Electric centre (A5) Air suspension seat (A5) Air suspension seat (A6) Agrodata, drive computer (A6) Agrodata, drive computer (A10) Control unit, Delta Power Shift (A10) Control unit, Delta Power Shift (A11) Telephone (A13) Control unit, Sigma (A14) Tachograph (A15) Control unit, Interpretative gauge (A16) Fieldmaster (A17) Adapter, Fieldmaster sensor signals (A17) Sensor, Liud gauge (A18) Sensor, Liud gauge (A19) Sensor, Sigma, Canshehat (A19) Sensor, Sigma, Canshehat (A19) Sensor, Sigma, Canshehat (A19) Sensor, Sigma, Canshehat (A10) Sensor, Sigma, Canshehat (A10	boi Component	no.		25
A3 Electric centre (A5) Air suspension seats (A6) Agrodata, drive compute (A6) Agrodata, drive compute (A7) Qordort unit, Delta Power Shift (A7) Control unit, Delta Power Shift (A7) Control unit, Delta Power Shift (A7) Gordort unit, front PTO (A11) Telephrone (A13) Control unit, front PTO (A15) Control unit, front PTO (A16) Fieldmaster (A15) Control unit, front PTO (A17) Adapter, Fieldmaster sensor signals (A17) Adapter, Fieldmaster sensor signals (A18) Control unit, front PTO (A19) Fieldmaster (A19) Control unit, front PTO (A19) Control un	(A2) Radio	2	5 5 7	28
(A5) Air suspension seat (A6) Agrodata, drive computer (A5) Gontrol unit, Delta Power Shift (A1) Gontrol unit, Delta Power Shift (A1) Telephone (A1) Control unit, Sigma (A1) Sigma (A2) Sigma, Carakishan (A2) Sensor, fuel gauge (A2) Sensor, fuel gauge (A2) Sensor, Sigma, Carakishan (A3) Sensor, Sigma, Carakishan (A4) Sensor, Sigma (A5) Sensor, Sigma, Carakishan (A6) Velocity sensor, engine (A7) Sensor, Sigma, Carakishan (A7) Sensor, Sigma		2		30
(A6) Agrodata, drive computer (A7) Control unit, Detta Power Shift (A7) Control unit, Detta Power Shift (A7) Control unit, Sigma (A3) Control unit, Sigma (A3) Control unit, Sigma (A3) Control unit, front PTO (A7) File 25A 3—pin current socket (A3) Control unit, front PTO (A7) Alapter, Fieldmaster (A15) Control unit, front PTO (A7) Alapter, Fieldmaster (A7) Adapter, Fieldmaster sensor signals (A7) Adapter, Fieldmaster sensor signals (A7) Adapter, Fieldmaster sensor signals (A8) Sensor, rengine temperature gauge (A8) Sensor, fuel gauge (A8) Sensor, Fieldmaster sensor, gearbox, AD (A9) Sensor, Sigma, Crankshaft (A8) Sensor, Sigma, Alaphan (A8) Sensor, Sigma, Alaphan (A8) Sensor, Sigma, Alaphan (A8) Sensor, Sigma, Alaphan (A8) Sender, wheel speed (A9) Sensor, Inchograph (A9) Sensor, Inchograph (A9) Sensor, Inchograph (A9) Sensor, Sigma, Alaphan (A7) Adapter sensor, Gearbox (A9) Sensor, Sigma, Alaphan (A7) Adapter sensor, Gearbox (A8) Sensor, Fift power shuttle (A9) Sensor, Sigma, Alaphan (A9) S		94		44 28
(A19) Control unit, Delta Power Shift (A1) Telephone				26 35
(A11) Telephone 99 F.11 SA Autocontrol (+ Bat) 83B, (A13 Control unit, Sigma 113 F12 10A Rote warning light, cabin light (A13 Control unit, front PTO 77 F14 1 5A Starter switch, thermostant F15 F16 IdA Rotewarning light, cabin light (A15) Control unit, front PTO 77 F14 1 5A Starter switch, thermostant F15 F16 IdA Rotewarning light, cabin light (A15) Control unit, front PTO 77 F14 1 5A Starter switch, thermostant F16 IdA Rotewarning light, cabin light (A15) Control unit, front PTO 77 F14 1 5A Starter switch, thermostant F16 IdA Rotewarning light, cabin light (A15) Control unit, front PTO 77 F14 1 5A Starter switch, thermostant F16 IdA Rotewarning light, submore F17 IdA Rotewarning lights, Autocontrol F18 Sensor, fuel gauge 71 F18 SA Instruments, warning lights, Autocontrol F18 Sensor, Sigma, PTO 71 F18 SA Instruments, warning lights, Autocontrol F18 Sensor, Sigma, PTO 71 F18 SA Instruments, warning lights, Autocontrol F18 Sensor, Sigma, PTO 71 F18 SA Instruments, warning lights, Autocontrol F18 Sensor, Sigma, PTO 71 F18 SA Instruments, warning lights, Autocontrol F18 Sensor, Sigma, PTO 71 F18 SA Instruments, warning lights, Autocontrol F18 SA Instruments, warning lights, Autocontrol F18 SA Instruments, warning lights, Autocontrol F18 Sanders with P19 IdA Wirdscream piper/washer P19 IdA Wird				96
(A19) Control unit, Sigma (A15) Control unit, front PTO (A15) Control unit, front PTO (A15) Control unit, front PTO (A15) Fieldmaster (A15) Fieldmaster sensor signals (A17) Adapter, Fieldmaster sensor signals (A17) Adapter, Fieldmaster sensor, gearbox (A17) Adapter, Fieldmaster sensor, gearbox, AD (A19) Sensor, fuel gauge (A17) Control unit, front gauge (A17) Control unit, front gauge (A17) Control (A17)		99		83B, 83D
(A14 Jachograph (A15) Control unit, front PTO (A16) Fieldmaster (A17) Adapte, Fieldmaster sensor signals B1 Sensor, engine temperature gauge B1 Sensor, fuel gauge B2 Sensor, fuel gauge B3 Sensor, fuel gauge B4 Sensor, Sigma, Crankshaft B5 Sensor, Sigma, Crankshaft B6 Sensor, Sigma, Crankshaft B6 Sensor, Sigma, Crankshaft B7 Sensor, Sigma, Crankshaft B1 Sensor, Sigma, Crankshaft B1 Sensor, Sigma, Crankshaft B1 Sensor, Sigma, Crankshaft B2 Sensor, Sigma, Crankshaft B3 Sender, wheel speed B4 Sensor, searbox B5 Sensor, tachograph B5 Sensor, tachograph B1 Velocity sensor, gearbox B1D, 102 B1 Sensor, FiP power shuttle B12 Sensor, FiP power shuttle B13 Sensor, FiP power shuttle B14 Sensor, FiP power shuttle B15 Sensor, cacelerator pedal B16 Angle sensor, cutchors B17 Sensor, FiP power shuttle B18 Angle sensor, cutchors B19 Sensor, cutch pedal B10 Angle sensor, cutchors B11 Sensor, FiP power shuttle B11 Remperature sensor, outdoors B12 Sensor, Chapte pedal B13 Angle sensor, dutch pedal B14 Fend indicator, right B15 Angle sensor, dutchors B16 Angle sensor, dutchors B17 Sensor, FiP power shuttle B18 Angle sensor, dutchors B19 Sensor, sensor, outdoors B19 Sensor, se	(A13) Control unit, Sigma	113		47
(A15) Control unit, front PTO (A15) Fieldmaster = 155 (A17) Adapter, Fieldmaster sensor signals 154 155 (A17) Adapter, Fieldmaster sensor signals 155 158 158 159 159 150 150 150 150 150 150	(A14 Tachograph			100
(A16) -ieldmaster (A17) Adapter, Fieldmaster sensor signals A17) Adapter, Fieldmaster sensor signals A18 Sensor, engine temperature gauge B1 Sensor, fuel gauge B2 Sensor, fuel gauge B3 Temperature sensor, gearbox, AD B4) Sensor, Sigma, Crankshaft B5 Sensor, Sigma, PTO B6) Velocity sensor, gearbox B1D, 102 B7) 104 Mindsoreen wiper/washer B1D 102 B1D 102 B1D 103 Person of the sensor signals B1D 103 Person of the sensor signals B1D 104 Person of the sensor signals B1D 105 B1D Velocity sensor, gearbox B1D 107 B1D Velocity sensor, prior B1D Velocity sensor, engine B1D Sensor, tachograph B1D Velocity sensor, engine B1D Sensor, FiR power shuttle B1S Sensor, cuchopraph B1D Velocity sensor, organic B1D Velocity sensor, organic B1D Velocity sensor, organic B1D Velocity sensor, organic B1D Velocity sensor, engine B1D Vel				4
B1 Sensor, engline temperature gauge B2 Sensor, fuel gauge B3 Sensor, fuel gauge B4 Sensor, fuel gauge B5 Sensor, fuel gauge B6 Sensor, Sigma, crankshaft B6 Sensor, Sigma, crankshaft B7 Sensor, Sigma, PTO B7	• •			56
Bar Sensor, engine temperature gauge 16	(A17) Adapter, Fieldmaster sensor signals	154		42
22 Sensor, fuel gauge (33) Temperature sensor, gearbox, AD (34) Sensor, Sigma, crankshaft (34) Sensor, Sigma, crankshaft (35) Sensor, Sigma, PTO (37) Velocity sensor, gearbox (38) Velocity sensor, gearbox (38) Sensor, Sigma, PTO (37) Velocity sensor, gearbox (38) Sensor, Sigma, PTO (37) Velocity sensor, gearbox (38) Sensor, Refuel Sensor, PTO (38) Sensor, sensor, gearbox (39) Sensor, tachograph (30) Speed radar (31) Velocity sensor, engine (31) Speed radar (31) Velocity sensor, gengine (31) Velocity sensor, gengine (31) Speed radar (32) Sensor, F/R power shuttle (33) Sensor, F/R power shuttle (34) Sensor, Sigma, HiShift (35) Sensor, Sigma, HiShift (36) Sensor, F/R power shuttle (37) Sensor, F/R power shuttle (38) Sensor, F/R power shuttle (39) Sensor, Sigma, HiShift (30) Speed radar (30) Speed radar (31) Speed radar (32) Sensor, F/R power shuttle (34) Sensor, F/R power shuttle (35) Sensor, F/R power shuttle (36) Sensor, F/R power shuttle (37) Sensor, F/R power shuttle (38) Sensor, F/R power shuttle (39) Sensor, Sigma, HiShift (30) Sensor, F/R power shuttle (31) Sensor, F/R power shuttle (32) Sensor, F/R power shuttle (33) Sensor, F/R power shuttle (34) Sensor, F/R power shuttle (35) Sensor, F/R power shuttle (36) Sensor, F/R power shuttle (37) Tola Back buzzer, Sigma, HiShift (38) Tola Back buzzer, Sigma, HiShift (39) Tola Gazertel lighte, 2-pin current socket (39) Tola Cigarette lighte, 2-pin current socket (39) Tola Cigarette light, 2-pin current socket (39) Tola Cigarette light, 4-pin shuttle shading light, socket (39) Tola Cigarette light (30) Tola Cigarette light (31) Tola Cigarette light (32) Hishift light, Girction indicator II (33) High shading light, left (34) High shading light, left (35) Sensor, Sigma, HiShift (36) Alternator (37) Alternator (38) Alternator (39) Tola Rear working light, left (30) High shading light, left (31) Indicator light, Girction indicator II (32) Indicator light, Stop, engine temperature, parking brake (34) Hig	D4 Canada anaina tanananatana anaina	10	F17 10A Direction indicators, Agrodata drive comp	
(B3) Temperature sensor, gearbox, AD (B4) Sensor, Sigma, cankshaft (B5) Sensor, Sigma, and Sigma, PTO (B6) Sensor, Sigma, PTO (B7) Velocity sensor, gearbox (B7) Velocity sensor, gearbox (B8) Sender, wheel speed (B9) Sensor, tachograph (B10) Speed radar (B10) Speed radar (B10) Speed radar (B10) Speed radar (B11) Velocity sensor, engine (B12) Sensor, F/R power shuttle (B13) Sensor, F/R power shuttle (B14) Sensor, F/R power shuttle (B15) Sensor, F/R power shuttle (B16) Sensor, F/R power shuttle (B17) Velocity sensor, engine (B18) Sensor, F/R power shuttle (B19) Sensor, F/R power shuttle (B19) Sensor, F/R power shuttle (B19) Sensor, F/R power shuttle (B10) Sensor, F/R power shuttle (B11) Velocity sensor, engine (B12) Sensor, F/R (B13) Sensor, F/R (B14) Temperature sensor, gearbox (B15) Angle sensor, accelerator pedal (B16) Angle sensor, accelerator pedal (B17) Angle sensor, cutdoors (B18) Angle sensor, cutdoors (B19) Angle sensor, cut				32, 154
(B4) Sensor, Sigma, crankshaft (B5) Sensor, Sigma, PTO (B6) Velocity sensor, gearbox (B7) Velocity sensor, pearbox (B8) Sender, wheel speed (B9) Sensor, tachograph (B1) Velocity sensor, engine (B1) Spear and an				17
(B5) Sensor, Sigma, PTO				51
(B6) Velocity sensor, gearbox (B7) Velocity sensor, PTO (B7) Velocity sensor, PTO (B8) Sender, wheel speed (B9) Sensor, tachograph (B1) Velocity sensor, engine (B1) Speed radar (B1) Sensor, F/R power shuttle (B12) Sensor, F/R power shuttle (B13) Sensor, F/R power shuttle (B14) Sensor, F/R power shuttle (B15) Sensor, F/R power shuttle (B16) Sensor, F/R power shuttle (B17) Sensor, F/R power shuttle (B18) Sensor, F/R power shuttle (B19) Sensor, Sensor, searbox (B19) Sensor, Se			•	48
(B7) Velocity sensor, PTO (B8) Sender, wheel speed (B9) Sensor, tachograph (B10) Speed radar (B11) Velocity sensor, engine (B12) Sensor, F/R power shuttle (B12) Sensor, F/R power shuttle (B13) Sensor, F/R power shuttle (B14) Temperature sensor, gearbox (B15) Angle sensor, accelerator pedal (B16) Angle sensor, caccelerator pedal (B16) Angle sensor, cutch pedal (B17) Temperature sensor, outdoors (B17) Temperature sensor, outdoors (B18) Sensor, clutch pedal (B16) Angle sensor, cutch pedal (B16) Angle sensor, cutch pedal (B17) Temperature sensor, outdoors (B17) Temperature sensor, outdoors (B18) Angle sensor, clutch pedal (B16) Angle sensor, clutch pedal (B17) Temperature sensor, outdoors (B19) Temperature sensor, outdoors (B19) Temperature sensor, gearbox (B19) Angle sensor, clutch pedal (B10) Angle sensor, clutch pedal (B10) Angle sensor, clutch pedal (B10) Angle sensor, clutch pedal (B17) Temperature sensor, outdoors (B17) Temperature sensor, outdoors (B18) Angle sensor, clutch pedal (B18) Angle sensor, clutch pedal (B19) Angle sensor, clutch pedal (B17) Temperature sensor, outdoors (B17) Temperature sensor, outdoors (B17) Temperature sensor, outdoors (B18) Angle sensor, clutch pedal (B19) Fog light, right (B18) Angle sensor, clutch pedal (B19) Fog light, right (B18) Angle sensor, clutch pedal (B19) Fog light, right (B18) Angle sensor, clutch pedal (B19) Angle sensor, clutch pedal (B18) Angle sensor, clutch pedal (B19) Angle sensor, clutch pedal (B19) Angle sensor, clutch pedal (B19) Angle sensor, clutch peda				55 70
(B8) Sender, wheel speed (B8) Sensor, tachograph (B10) Speed radar (B10) Speed radar (B10) Speed radar (B11) Velocity sensor, engine (B12) Sensor, F/R (B13) Sensor, F/R (B14) Sensor, F/R (B15) Sensor, F/R (B16) Sensor, F/R (B17) Sensor, F/R (B17) Sensor, F/R (B18) Sensor, F/R (B17) Temperature sensor, gearbox (B16) Angle sensor, accelerator pedal (B16) Angle sensor, clutch pedal (B17) Temperature sensor, outdoors (B16) Angle sensor, clutch pedal (B17) Temperature sensor, outdoors (B18) Sensor, F/R (B17) Temperature sensor, outdoors (B19) Temperature sensor, outdoors (B19) Temperature sensor, outdoors (B10) Temperature sensor, outdoors (B11) Temperature sensor, outdoors (B11) Temperature sensor, outdoors (B11) Temperature sensor, outdoors (B14) Temperature sensor, outdoors (B16) Temperature sensor, outdoors (B17) Temperature sensor, outdoors (B17) Temperature sensor, outdoors (B18) Temperature sensor, outdoors (B19) Temperature sensor, outdoors (B10) Temperature sensor, outdoors (B17) Temperature sensor, outdoors (B17) Temperature sensor, outdoors (B17) Temperature sensor, outdoors (B18) Temperature sensor, outdoors (B18) Temperature sensor, outdoors (B19) Temperature sensor, outdoors (B10) Temperature sensor, outdoors (B18) Temperature sensor, outdoors (B19) Temperature sensor, outdoors (B19) Temperature sensor, outdoors (B19) Temperature sensor, outdoors (B1				41
(B9) Sensor, tachograph (B1) Speed radar (B1) Speed radar (B1) Velocity sensor, engine (B2) Sensor, F/R power shuttle (B12) Sensor, F/R power shuttle (B13) Sensor, F/R power shuttle (B14) Sensor, F/R power shuttle (B15) Sensor, F/R power shuttle (B16) Sensor, F/R power shuttle (B17) Sensor, F/R power shuttle (B18) Sensor, F/R power shuttle (B19) Sensor, F/R power shuttle (B19) Sensor, F/R power shuttle (B10) Sensor, F/R power shuttle (B10) Sensor, F/R power shuttle (B11) Sensor, F/R power shuttle (B12) Sensor, F/R power shuttle (B16) Angle sensor, gearbox (B17) Sensor, F/R power shuttle (B16) Angle sensor, clutch pedal (B17) Temperature sensor, outdoors (B17) Temperature sensor, outdoors (B17) Temperature sensor, outdoors (B17) Temperature sensor, outdoors (B18) Angle sensor, clutch pedal (B18) Angle sensor, clutch pedal (B18) Angle sensor, clutch pedal (B19) Temperature sensor, outdoors (B17) Temperature sensor, outdoors (B18) Temperature sensor, outdoors (B18) Temperature sensor, outdoors (B19) Temperature sensor, outdoors (B19) Temperature sensor, outdoors (B17) Temperature sensor, outdoors (B18) Temperature sensor, outdo		,		67, 126
(B10) Speed radar B11 Velocity sensor, engine B12 Sensor, F/R power shuttle B13 Sensor, F/R B14 Temperature sensor, gearbox B15 Angle sensor, accelerator pedal B16 Angle sensor, clutch pedal B17 Temperature sensor, outdoors B18 Headlights, right B19 Headlights, right B19 Headlights, right B19 Headlights, left B19 Fornt direction indicator, right B19 Fornt direction indicator, right B19 Fornt direction indicator, left B19 Fornt working light, right outer B19 Fornt working light, left outer B19 Fornt working light, left inner B19 Fornt working light, left outer B19 Fornt working light, left inner B19 Fornt working light, left inner B10 Fornt working light, left inner B11 Fornt working light, left inner B12 Fornt working light, left inner B11 Fornt working light, left inner B12 Fornt working light, left inner B11 Fornt working light, left inner B12 Fornt working light, left inner B11 Fornt working light, left inner B12 Fornt working light, left inner B11 Fornt working light, left inner B12 Fornt working light, left inner B11 Fornt working light, left inner B12 Fornt working light, left inner B11 Fornt working light, left inner B12 Fornt working light, left inner B11 Fornt working light, left inner B12 Fornt working light, left inner B11 Indicator light, left inner B12 Fornt working light, left inner B11 Indicator light, left inner B12 Fornt working light, left inner B11 Indicator light, left inner B12 Fornt working light, left inner B12 Fornt working light, left inner B11 Fornt working light, left inner B12 Fornt working light, left inner B11 Fornt working light, left inner B12 Fornt working light, left inner B11 Fornt working light, left inner B12 Fornt direction indicator light, left light, left light ligh		93		
B11 Velocity sensor, engine B12 Sensor, F/R power shuttle B13 Sensor, F/R per shuttle B14 Temperature sensor, gearbox B15 Angle sensor, accelerator pedal B16 Angle sensor, accelerator pedal B17 Temperature sensor, outdoors B18 Temperature sensor, outdoors B19 Temperature sensor, outdoors B19 Temperature sensor, outdoors B10 Temperature sensor, outdoors B11 Temperature sensor, outdoors B12 Temperature sensor, outdoors B13 Temperature sensor, outdoors B14 Temperature sensor, outdoors B15 Angle sensor, accelerator pedal B16 Angle sensor, accelerator pedal B17 Temperature sensor, outdoors B18 Temperature sensor, outdoors B19 Temperature sensor, gearbox B19 Temperature sensor, outdoors B19 Temperature sen		81D		94
B12 Sensor, F/R power shuttle B13 Sensor, F/R B14 Temperature sensor, gearbox B15 Angle sensor, accelerator pedal B16 Angle sensor, cuttch pedal B17 Temperature sensor, outdoors B18 Headlights, right B19 Headlights, right B19 Headlights, left B19 Front direction indicator, right B19 Front direction indicator, right B10 Rear light, left B11 Rear working light, right outer B12 Rear working light, right outer B13 Rear working light, left outer B14 Rear working light, left outer B15 Rear working light, left outer B16 Rear working light, left outer B17 Front working light, left B18 Front working light, left B19 Foot sheater B19 Front working lights B19 Front working lights B19 Front working light, left B19 Fog light, rear B19 Fog light, rear B19 Fog light, rear B19 Fog light, left B19 Fog light, right B19 Fog light, left B19 Fog light, rear B19 Fog light, left B19 Fog light B19 Fog light B19 Fog light B19 Fog light B1		125		113
B13 Sensor, F/R 14 Temperature sensor, gearbox B15 Angle sensor, accelerator pedal B16 Angle sensor, clutch pedal B17 Temperature sensor, outdoors B18 Arghe sensor, clutch pedal B19 Angle sensor, clutch pedal light, ight indicator light, direction indicator light, angle light, engine oil pressure B19 Angle sensor, clutch light, indicator light, direction indicator light, singler light, stop, engine temperature, parking brake cable B19 Angle sensor light light light, stop, engine temperature light lindicator light, stop, engine				64
B15 Angle sensor, accelerator pedal B16 Angle sensor, clutch pedal B17 Temperature sensor, outdoors E1 Headlights, right E2 Headlights, left E3 Front direction indicator, right E4 Front direction indicator, right E5 Rear light, right E6 Rear light, left E7 Cab light E8 Rear working light, right linner E10 Rear working light, right linner E11 Rear working light, right E12 Rear working light, right E13 Front working light, right E44 H5 Indicator light, direction indicator III E5 Rear working light, right E6 Rear light, right E7 Cab light E8 Rear working light, right uter E9 Rear working light, left outer E10 Rear working light, left inner E11 Rear working light, left inner E11 Rear working light, right E12 Rear working light, right E13 Front working light, left E14 Front working light, left E7 Roof console lights E7 Seat heater E8 Roof console lights E17 Seat heater E18 Roof console lights E19 Pog light, rear E19 Parking light, right, Norway E20) Parking light, left, Norway E20) Parking light, left, Norway E21) Parking light, left, Norway E22) Parking light, left, Norway E23) Upper head light, right E24 H26 Indicator light, gearbo. oil temp. E24) Upper head light, right E25 Parking light, upper, right E26 Parking light, upper, right E27) Working light, side E28) Working light, side E29 Working light, side E21 Rear, or working lights E22 Relay, rear working lights E3 Rear light, side E44 Relay, front working lights E45 Rear light, right E56 Rear light, left E67 Rear light, left E68 Parking light, upper, right E68 Rear light, right E68 Rear light, right E69 Parking light, side E70 Parking light, side E70 Parking light, side E70 Parking light, side E70 Parking light, right E70 Parking light, side E71 Parking light, side E72 Parking light, side E73 Parking light, side E74 Parking light E75 Parki				99
B16 Angle sensor, clutch pedal B17 Temperature sensor, outdoors E1 Headlights, right E2 Headlights, left E3 Front direction indicator, right B18 Front direction indicator, left E4 Front direction indicator, left E5 Rear light, right B6 Rear light, left B7 Rear light, right B1 Indicator light, direction indicator III B1 Indicator light, direction indicator III B2 Rear working light, right outer B3 Rear working light, right outer B4 Rear working light, left outer B1 Rear working light, left outer B1 Rear working light, left inner B1 Rear working light, left inner B1 Front working light, right B1 Front working light, left B1 Indicator light, parking brake B1 Front working light, right B1 Indicator light, parking brake B1 Front working light, left B1 Indicator light, right B1 Indicator light, fuel reserve B1 Indicator light, fuel f			F29 10A Cigarette lighter, 2-pin current socket	91
E1 Headlights, right E2 Headlights, left E3 Front direction indicator, right E4 Front direction indicator, right E5 Rear light, right E6 Rear light, right E7 Rear light, left E8 Rear light, right E9 Rear working light, right outer E9 Rear working right, right inner E10 Rear working light, right inner E11 Rear working light, left outer E12 Rear working light, left inner E13 Front working light, right E14 Front working light, right E15 Instrument lights E16 Roof console lights E17 Seat heater E19 Parking light, rear E19 Parking light, right E17 Seat heater E19 Parking light, right E18 Rear working light, right E19 Rear working lights E17 Seat heater E18 Roof console lights E19 Rear working light, right E19 Roof console lights E17 Seat heater E19 Parking light, right E18 Roof console light E19 Parking light, right E19 Parking light, right E19 Parking light, right E17 Seat heater E18 Roof console light E19 Parking light, right E19 Parking light, right E20 Parking light, left E21 Parking light, left E22 Register plate light E23 Parking light, right E24 Upper head light, right E25 Parking light, upper, right E26 Parking light, upper, left E27 Working light, upper, left E28 Working light, upper, left E29 Working light, upper, left E29 Working light, upper, left E27 Rear working light, side E28 Relay, front working lights E84 Relay, front working lights E84 Relay, front working light E95 Parking light, upper, left E95 Parking light, upper, left E96 Parking light, upper, left E97 Rear working light, side E84 Relay, front working lights E98 Relay, front working lights E98 Relay, front working lights E98 Relay, fog light, rear	, ,		F30 10A CareTel	120
E2 Headlights, left E3 Front direction indicator, right E4 Front direction indicator, left E5 Rear light, right E6 Rear light, left E7 Cab light E8 Rear working light, right outer E9 Rear working light, right inner E10 Rear working light, left outer E11 Rear working light, left outer E12 Rear working light, left outer E13 Front working light, left outer E14 Renor working light, left outer E15 Instrument lights E16 Roof console lights E17 Seat heater E19 Pog light, rear E20 Parking light, left, Norway E21 Parking light, left, Norway E22 Register plate light E22 Register plate light E23 Working light, upper, right E24 Working light, upper, left E25 Working light, side E27 Working light, upper, left E28 Working light, side E44 Rear working light, left E55 Rear working light, left E66 Roof console lights E77 Seat heater E80 Parking light, rear E80 Parking light, left E80 Parking light, upper, left E80 Parking light, upper, left E80 Parking light, side E80 Parking light, side E80 Parking light, left E80 Parking light, upper, left E80 Parking light, side E80 Parking light, side E80 Parking light, left E80 Parking light, upper, left E80 Parking light, side E80 Parking li				
E2 Headlights, left Front direction indicator, right E3 Front direction indicator, left E4 Front direction indicator, left E5 Rear light, right E6 Rear light, left E7 Cab light E8 Rear working light, right outer E10 Rear working light, left touter E11 Rear working light, left inner E12 Rear working light, left inner E13 Front working light, left E14 Front working light, left E7 Rear working light, left E8 Rear working light, left outer E9 Rear working light, left inner E10 Rear working light, left inner E11 Rear working light, left inner E12 Rear working light, left E13 Front working light, left E14 Front direction indicator II Indicator light, air filter Indicator light, engine oil pressure Warning light, stop, engine temperature, parking brake cable Indicator light, gearbox oil press. Indicator light, gearbox oil press. Indicator light, direction indicator I Indicator light, air filter Indicator light, engine oil pressure Warning light, stop, engine temperature, parking brake cable Indicator light, gearbox oil press. Indicator light, gearbox oil press. Indicator light, promostant Indicator light, promostant Indicator light, promostant Indicator light, promostant Indicator light, further Indicator light, promostant Indicator light, indicator light, indicator light, indicator light, indicator light, further locator light, indicator light, indicator light, indicator light, indicator light, charging Indicator light, promostant Indicator	0 ' 0		G1 Battery	1
E4 Front direction indicator, left E5 Rear light, right E6 Rear light, left E7 Cab light E8 Rear working light, right outer E9 Rear working light, right inner E10 Rear working light, left outer E11 Rear working light, left outer E12 Rear working light, left inner E13 Front working light, left inner E14 Front working light, left E15 Instrument lights E16 Roof console lights E17 Seat heater E19 Pog light, rear E20 Parking light, left, Norway E21 Parking light, left, Norway E22 Register plate light E23 Upper head light, left E24 Upper head light, left E25 Parking light, left E26 Parking light, left E27 Working light, left E28 Working light, left E28 Working light, left E29 Working light, left E29 Working light, left E27 Working light, left E28 Working light, side E48 Front working light, left E59 Rear working light, left E69 Parking light, right E77 Seath leader E78 Seath leader E79 Parking light, right E79 Parking light, right E79 Parking light, left E79 Parking light, side E79 Parking light, side E79 Parking light, left E79 Parking light E70 Parking lig	<i>O</i> ,			4, 118
E5 Rear light, right 33 H2 Indicator light, direction indicator II E6 Rear light, left 32 H3 Indicator light, direction indicator II E7 Cab light 46 H4 Indicator light, direction indicator I E8 Rear working light, right outer 42 H5 Indicator light, air fifter E9 Rear working light, left outer 41 H6 Warning light, stop, engine temperature, parking brake cable E12 Rear working light, left inner 41 H7 Indicator light, gearbox oil press. E13 Front working light, left 44 H8 Indicator light, dwD E14 Front working light, left 44 H9 Indicator light, dwD E15 Instrument lights 17 H10 Indicator light, parking brake E17 Seat heater 94 H12 Indicator light, parking brake E18 Pog light, rear 35 H14 Indicator light, fuel reserve (E29) Parking light, right, Norway 29 H15 Indicator light, fuel reserve (E21) Parking light, left, Norway 30 H16 Indicator light, fuel reserve (E21) Parking light, right 32 H17 Indicator light, parking light, eharging (E22) Register plate light 32 H17 Indicator light, charging (E23) Upper head light, right 24 H18 Indicator light, gearb. oil temp. (E24) Upper head light, right 24 H18 Indicator light, gearb. oil temp. (E24) Upper head light, upper, right 22 H28 H07 H29 Reverse Buzzer (E26) Parking light, side (E27) Working light, side (E28) Working light, side (E28) Working light, side (E28) Working light, side (E28) Relay, rear working lights (E28) Relay, rear working lights (E29) Relay, rear working lights				
E6 Rear light, left Cab light F7 Cab light F8 Rear working light, right outer F9 Rear working right, right inner F10 Rear working light, left outer F11 Rear working light, left outer F12 Rear working light, left inner F13 Front working light, left inner F14 Front working light, left F7 Seat heater F15 Instrument lights F16 Roof console lights F17 Seat heater F19 Fog light, rear F19 Fog light, rear F19 Parking light, left, Norway F10 Rear working light, left F11 Rear working light, left F12 Rear working light, left F13 Front working light, left F14 Front working light, left F15 Instrument lights F17 H10 Indicator light, gearbox oil filter F18 Fog light, rear F19 Fog light, rear F19 Fog light, rear F19 Fog light, rear F10 Rear working light, left, Norway F11 Indicator light, main beams F11 Indicator light, fuel reserve F11 Indicator light, charging F11 Indicator light, charging F11 Indicator light, left light F10 Indicator light, left light F11 Indicator light, left light F12 Indicator light, left light F13 Indicator light, left light F14 Front working light, left light F15 Indicator light, left light F16 Indicator light, left light F17 Indicator light, left light F18 Indicator light, left light F19 Fog light, left light F19 Fog light, left, Norway F10 Indicator light, fuel reserve F11 Indicator light, left light F17 Indicator light, left light F18 Indicator light, left light F19 Indicator light, left light F19 Fog light, upper, right F19 Fog light, upper, right F19 Fog light, upper, right F10 Indicator light, light F11 Indicator light, light F12 Indicator light, light F13 Indicator light, light F15 Indicator light, light F18 Indicator light, light F19 Indicator light, light F19 Fog li	- ,			34
E7 Cab light Rear working light, right outer E10 Rear working right, right inner E11 Rear working light, left outer E12 Rear working light, left inner E13 Front working light, left inner E14 Front working light, left E15 Instrument lights E16 Roof console lights E17 Seat heater E19 Fog light, rear E20 Parking light, left, Norway E21 Parking light, left, Norway E22 Register plate light E22 Register plate light E23 Upper head light, right E24 Light E25 Parking light, upper, right E26 Parking light, upper, left E27 Working light, side E46 H4 Indicator light, eper oil pressure Warning light, stop, engine temperature, parking brake cable Indicator light, gearbox oil press. Indicator light, gearbox oil filter Indicator light, 4WD H48 Indicator light, 4WD H49 Indicator light, PTO H10 Indicator light, parking brake H12 Indicator light, parking brake H14 Indicator light, main beams H15 Indicator light, fuel reserve H16 Indicator light, fuel reserve H17 Indicator light, fuel reserve H18 Indicator light, sigma H16 Indicator light, gearbox oil temp. H18 Indicator light, gearbox oil press. H18 Indicator light, sigma H19 Indicator light, fuel reserve H21 Parking light, left, Norway H16 Indicator light, gearbox oil press. H17 Indicator light, fuel reserve H28 Indicator light, fuel reserve H29 Parking light, upper, right H20 Indicator light, gearbox oil temp. H29 Indicator light, fuel reserve H29 H29 Indicator light, sigma H20 Indicator light, lock H27 Reverse Buzzer H28 Indicator light, Stop, rear			5 ,	34
E9 Rear working light, right outer E10 Rear working right, right inner E11 Rear working light, left outer E12 Rear working light, left outer E13 Front working light, left inner E14 Front working light, left inner E15 Instrument lights E16 Roof console lights E17 Seat heater E19 Fog light, rear E20 Parking light, right, Norway E21 Parking light, right, Norway E22 Register plate light E23 Upper head light, right E23 Upper head light, left E25 Parking light, upper, right E26 Parking light, upper, right E27 Working light, side E40 Rear working light, rear E41 H7 Indicator light, gearbox oil press. E41 H7 Indicator light, parking brake E42 H9 Indicator light, parking brake E44 H9 Indicator light, parking brake E45 H12 Indicator light, parking brake E46 H12 Indicator light, main beams E47 Seat heater E48 H15 Indicator light, the reserve E49 H15 Indicator light, charging E49 H16 Indicator light, full reserve E41 Parking light, right, Norway E49 H16 Indicator light, charging E40 Indicator light, charging E41 H18 Indicator light, gearb. oil temp. E42 H28 H07 H29 Indicator light, diff. lock E41 Parking light, upper, right E42 H29 Indicator light, diff. lock E45 Parking light, upper, right E46 Warning light, separbox oil press. E47 H18 Indicator light, parking light, charging E47 H18 Indicator light, charging E48 H18 Indicator light, separb. oil temp. E49 H29 Indicator light, diff. lock E49 Parking light, upper, right E49 Indicator light, diff. lock E49 Parking light, side E40 Indicator light, diff. lock E41 H29 Indicator light, diff. lock E42 H29 Indicator light, Stop, rear E41 H79 Indicator light, Stop, rear E42 H29 Indicator light, Stop, rear				34
E10 Rear working right, right inner E11 Rear working light, left outer E12 Rear working light, left inner E13 Front working light, right E14 Front working light, left E15 Instrument lights E16 Roof console lights E17 Seat heater E19 Fog light, rear E19 Parking light, right, Norway E20 Parking light, left, Norway E21 Parking light, right E22 Register plate light E22 Register plate light E23 Upper head light, right E24 Upper head light, right E25 Parking light, upper, right E26 Parking light, side E27 Working light, side E18 Rear working light, right E29 Working light, side E20 Relay, rear E20 Relay, rear E21 Rear working light, left E22 Relay, rear working light, left E23 Relay, rear light E24 Relay, rear working light E25 Relay, rear working light, side E27 Working light, side E28 Working light, side E29 Relay, rear working lights E20 Relay, rear working lights E20 Relay, rear working lights E21 Rear working lights E22 Relay, rear working lights E23 Relay, rear working lights E26 Relay, rear working lights E27 Relay, rear working lights E28 Relay, rear working lights E29 Relay, rear working lights E29 Relay, rear working lights E20 Relay, rear working lights E20 Relay, rear working lights E21 Rear working lights E22 Relay, rear working lights E23 Relay, rear working lights E26 Relay, rear working lights				7
E11 Rear working light, left outer E12 Rear working light, left inner E13 Front working light, right E14 Front working light, left E15 Instrument lights E16 Roof console lights E17 Seat heater E19 Fog light, rear E20 Parking light, left, Norway E21 Parking light, left, Norway E22 Register plate light E23 Upper head light, right E24 Upper head light, left E25 Parking light, upper, right E26 Parking light, side E27 Working light, side E28 Working light, side E31 Rear working lights E44 H8 Indicator light, gearbox oil press. Indicator light, pear light per light provided light per light per light per light per light per light. H10 Indicator light, parking brake H11 Indicator light, main beams H12 Indicator light, fuel reserve H13 Indicator light, fuel reserve H14 Indicator light, fuel reserve H15 Indicator light, sigma H17 Indicator light, Sigma H17 Indicator light, charging H18 Indicator light, sigma H19 Indicator light, sigma H19 Indicator light, sigma H19 Indicator light, Sigma H19 Indicator light, Sigma H20 Indicator light, diff. lock H21 Reverse Buzzer H22 H23 Horn H24 Rotating roof light H27 Reverse Buzzer H28 Indicator light, Stop, rear				8
E12 Rear working light, left inner E13 Front working light, right E14 Front working light, left E15 Instrument lights E16 Roof console lights E17 Seat heater E19 Fog light, rear (E19) Fog light, left, Norway (E21) Parking light, left, Norway (E22) Register plate light E23 Upper head light, right (E23) Upper head light, left E24) Upper head light, upper, right (E25) Parking light, upper, right (E26) Parking light, upper, left (E27) Working light, side (E28) Working light, side (E28) Working light, side E19 Rear working light, left E44 H8 Indicator light, gearbox oil press. Indicator light, gearbox oil press. Indicator light, gearbox oil filter H8 Indicator light, person oil filter H9 Indicator light, person oil filter H10 Indicator light, parking brake H11 Indicator light, Thermostart H12 Indicator light, Thermostart H14 Indicator light, fuel reserve H15 Indicator light, fuel reserve H16 Indicator light, charging H17 Indicator light, Sigma H17 Indicator light, Sigma H18 Indicator light, charging H19 Indicator light, fuel reserve H18 Indicator light, fuel reserve H19 Indicator l				.irig 15
E13 Front working light, right E14 Front working light, left E15 Instrument lights E16 Roof console lights E17 Seat heater E19 Fog light, rear (E19) Fog light, right, Norway (E21) Parking light, left, Norway (E22) Register plate light (E23) Upper head light, right (E24) Upper head light, upper, right (E26) Parking light, upper, right (E27) Working light, side (E28) Working light, side E18 Front working light, right E19 H10 Indicator light, parking brake E17 H11 Indicator light, parking brake H12 Indicator light, main beams H14 Indicator light, fuel reserve H15 Indicator light, fuel reserve H16 Indicator light, charging H17 Indicator light, Sigma H18 Indicator light, Sigma H19 Indicator light, gearb. oil temp. H18 Indicator light, gearb. oil temp. H19 Indicator light, gearb. oil temp. H20 Indicator light, diff. lock H23 Horn H20 Indicator light, diff. lock H23 Horn H20 Indicator light, diff. lock H23 Horn H20 Indicator light, diff. lock H24) Rotating roof light H27) Reverse Buzzer H28 Indicator light, Stop, rear K1 Relay, front working lights K2 Relay, rear working lights K2 Relay, rear working lights K2 Relay, rear working lights				9
E14 Front working light, left E15 Instrument lights E16 Roof console lights E17 Seat heater E19 Fog light, rear (E19) Fog light, right, Norway (E20) Parking light, left, Norway (E21) Parking light, left, Norway (E22) Register plate light (E23) Upper head light, right (E24) Upper head light, left (E25) Parking light, upper, right (E26) Parking light, upper, right (E27) Working light, side (E28) Working light, side E17 Seat heater 94 H12 Indicator light, Thermostart H14 Indicator light, fuel reserve H15 Indicator light, fuel reserve H16 Indicator light, charging H17 Indicator light, Sigma H18 Indicator light, Sigma H19 Indicator light, fuel reserve H19 Parking light, parking light, charging H19 Indicator light, fuel reserve H19 Indicator light, Garchian light, Sigma H19 Indicator light, fuel reserve H19 Indicator light, fuel reserve H19 Indicator light, Garchian light, Sigma H19 Indicator light, Farchian light, Sigma H19 Indicator light, Farchian light, Sigma H19 Indicator light, Farchian li	E13 Front working light, right	44		10
E15 Instrument lights E16 Roof console lights E17 Seat heater E19 Fog light, rear (E19) Fog light, right, Norway (E20) Parking light, left, Norway (E21) Register plate light (E23) Upper head light, left (E24) Upper head light, upper, right (E25) Parking light, upper, right (E26) Parking light, upper, left (E27) Working light, side (E28) Working light, side (E28) Working light, side E17 H10 Indicator light, parking brake H12 Indicator light, Thermostart H14 Indicator light, main beams H15 Indicator light, fuel reserve H16 Indicator light, charging H17 Indicator light, Sigma H18 Indicator light, Sigma H18 Indicator light, gearb. oil temp. H20 Indicator light, diff. lock H23 Horn (H24) Rotating roof light (H27) Reverse Buzzer (H28) Indicator light, Stop, rear K1 Relay, front working lights K2 Relay, rear working lights K3 Relay, fog light, rear	E14 Front working light, left	44	H9 Indicator light, 4WD	69
E16 Roof console lights E17 Seat heater E19) Fog light, rear (E19) Fog light, rear (E20) Parking light, right, Norway (E21) Parking light, left, Norway (E22) Register plate light (E23) Upper head light, right (E24) Upper head light, left (E25) Parking light, upper, right (E26) Parking light, upper, right (E27) Working light, side (E28) Working light, side E10 H11 Indicator light, parking brake H12 Indicator light, main beams H14 Indicator light, main beams H15 Indicator light, charging H16 Indicator light, Sigma H17 Indicator light, Sigma H18 Indicator light, gearb. oil temp. H20 Indicator light, diff. lock H23 Horn (H24) Rotating roof light (H27) Reverse Buzzer (H28) Indicator light, Stop, rear K1 Relay, front working lights K2 Relay, rear working lights K3 Relay, rear working lights R64, rear				67
E17 Seat heater (E19) Fog light, rear (E20) Parking light, right, Norway (E21) Parking light, left, Norway (E22) Register plate light (E23) Upper head light, right (E24) Upper head light, left (E25) Parking light, upper, right (E26) Parking light, upper, right (E27) Working light, side (E28) Working light, side (E28) Working light, side K1 Relay, front working lights (K3) Relay, fog light, rear				12
(E20) Parking light, right, Norway (E21) Parking light, left, Norway (E22) Register plate light (E23) Upper head light, right (E24) Upper head light, left (E25) Parking light, upper, right (E26) Parking light, upper, right (E27) Working light, side (E28) Working light, side (E29) Working light, side (E29) Parking light, upper, right (E29) Indicator light, fuel reserve (E29) H15 Indicator light, charging (E29) H16 Indicator light, Sigma (E29) H18 Indicator				6
(E21) Parking light, left, Norway (E22) Register plate light (E23) Upper head light, right (E24) Upper head light, left (E25) Parking light, upper, right (E26) Parking light, upper, left (E27) Working light, side (E28) Working light, side (E28) Working light, side K1 Relay, front working lights (K3) Relay, fog light, rear			H14 Indicator light, main beams	27
(E22) Register plate light (E23) Upper head light, right (E24) Upper head light, left (E25) Parking light, upper, right (E26) Parking light, upper, left (E27) Working light, side (E28) Working light, side (E29) Register plate light (E27) Indicator light, light, lock (E28) H18 Indicator light, gearb. oil temp. (E28) H20 Indicator light, diff. lock (E28) H23 Horn (H24) Rotating roof light (H27) Reverse Buzzer (H28) Indicator light, Stop, rear (H28) Indicator light, Stop, rear (H28) Indicator light, Stop, rear			H15 Indicator light, fuel reserve	16
(E23) Upper head light, right (E24) Upper head light, left (E25) Parking light, upper, right (E26) Parking light, upper, left (E27) Working light, side (E28) Working light, side				6
(E24) Upper head light, left (E25) Parking light, upper, right (E26) Parking light, upper, left (E27) Working light, side (E28) Working light, side (E28) Working light, side (E28) Working light, side (E29) Relay, front working lights (E29) Relay, fog light, rear				111
(E25) Parking light, upper, right (E26) Parking light, upper, left (E27) Working light, side (E28) Working light, side (E28) Working light, side (E28) Working light, side K1 Relay, front working lights K2 Relay, rear working lights (K3) Relay, fog light, rear				13
(E26) Parking light, upper, left (E27) Working light, side (E28) Working light, side (E28) Working light, side (E28) Working light, side (H24) Rotating roof light (H27) Reverse Buzzer (H28) Indicator light, Stop, rear K1 Relay, front working lights K2 Relay, rear working lights (K3) Relay, fog light, rear				63
(E27) Working light, side (H27) Reverse Buzzer (E28) Working light, side (H27) Reverse Buzzer (H28) Indicator light, Stop, rear K1 Relay, front working lights K2 Relay, rear working lights (K3) Relay, fog light, rear				50
(E28) Working light, side (H28) Indicator light, Stop, rear K1 Relay, front working lights K2 Relay, rear working lights (K3) Relay, fog light, rear				47
K2 Relay, rear working lights (K3) Relay, fog light, rear				148
(K3) Relay, fog light, rear			,, U U	43
				41
K/I ALIVIDARY FOLON CHARTON				35
Advillary relay, starter switch			K4 Auxiliary relay, starter switch	7

31. Tractor eletrical system

1. 10. 1999

Model Code 6250-8950

Page 310


		Sym-	Code
Sym-	Code	bol Component	no.
bol Component	no.	·	
		S31 Switch, floor fan	57
K5 Auxiliary relay, starter switch	9	(S32) Switch, rear window wiper and washer	48
K6 Relay, fan III	56 70	(S33) Change over switch, head lights up	23 97
K7 Control relay, 4-wheel brake K9 Relay, interval wiper	70 53	(S34) Switch, water pump (S35) Switch, rear steering prevention	97 94
K10 Direction indicator relay	34	(S36) Switch, control stop	4
K11 Relay, brake lights/differential lock	64	S37 Switch, Agrodata instrumentation, cursor+p	
K12 Control relay, differential lock	63	(S38) Switch, front-PTO	76
K13 Control relay, differential lock	65	S40 Reed relay, direction forward (F)	146
K14 Starter motor relay	4	S41 Reed relay, direction reverse (R)	147
K15 Control relay, 4—wheel drive	69	S42 Door switch, cab light, RH	46 46
K17 Relay, solenoid for engine running (8950Hi) (K18) Relay, control stop	8	S43 Door switch, cab light, LH S44 Indicator light switch, filter 180 bar	11
K25 Control relay, upper head lights to working	Ū	S45 Switches, HiShift	115, 142
lights	115	S45.1 Extra switch, HiShift	¹ 115
K27 Control relay, 4WD on/off	68	S47 Switch, DPS, man./auto	144
K28 Control relay, parking brake	67	(S49) Change over switch, rpm/flow sensor	
(K29) Relay, back buzzer	147	(S50) Change over switch, km/h, speed sensor, tra	ictor/im-
M1 Starter meter	9	plement S51 Switch, DPS – preselection	149
M1 Starter motor M2 Fan	3 55	S52 Indicator light switch, parking brake cable	149
M3 Windscreen wiper	53	S53 Indicator light switch, filter, return	10
M4 Windscreen washer	51	S54 Indicator light switch, filter, 18 bar	11
(M5) Rear window wiper	49	(S59) Switch, roof window washer	49
(M6) Rear window washer	48	S60 Safety switch, seat	142
(M7) Floor fan	57	V4 - D' 1V4 - V0 - V4 - V0	
(M8) Water pump	97	V1 DiodedY1, Y2, Y3, Y4, Y6 V2 Diodes, AC2	
(M9) Roof window wiper		V3 Diodes, 4–veto	
P1 Engine temperature meter	16	V4 Diodes, Y11, Y12, Y17	
P2 Fuel gauge	17		
P3 Tachometer	18	Ground leads	
P4 Running hour /speed meter (Agrodata instru		GR1 Rear lights, solenoid valves	
tion) (P5) Clock PTO append AC trip oil temperature	19	GR2 Roof GR4 Autocontrol	
(P5) Clock, PTO – speed, AC, trip, oil temperature ta instrumentation)	101	GR5 Cable harness, instr. panel	
P6 Display, AC5	130	GR7 Battery	
		GR8 Headlights	
Q1 Heat/starter switch	4	GR9 Cabin	
(Q2) Main switch	3	GR10 Electric stop	
R1 Thermostart	5	X1 9 pin, distribution box	
R1 Thermostart R4 Cigarette lighter	5 91	X2 9 pin, distribution box	
TTT Olgarotto lightor	01	X3 9 pin, distribution box	
S1 Switch, head lights	28	X4 9 pin, distribution box	
S2 Switch, rear working lights	41	X5 9 pin, distribution box	
S3 Switch, fan	55	X6 9 pin, distribution box	
S4 Combined switch	25,34, 52	X7 9 pin, distribution box (X8) 2 pin, current socket	92
S5 Switch, front working lights (S6) Switch, rot. warning light	43 47	X9 9 pin, combination control	92
S7 Switch, hazard warning flashers	32	X10 9 pin, combination control	
(S8) Switch, air conditioner	54	X11 9 pin, upwards	
S9 Starter safety switch	66	X12 9 pin, rearwards, right	
\$10 Switch, braking lights, right	72	X13 37 pin, transmission	
S11 Fuel gauge sender unit	17	X14 9 pin, rearwards, left	E.4
S12 Pressure drop indicator, air filter	7	(X15) 3 pin, air cond., diodes	54 32
S13 Engine oil press. sender unit S15 Reed relay, parking brake	8, 118 149	X17 7 pin, trailer socket (X18) 2 pin, rear window washer	48
S16 Gearbox temperature sender unit	13, 119	X19 37 pin, engine	.0
S17 Gearbox oil pressure sender unit	[′] 9	X20 9 pin, front direction indicator	
S18 Engine temperature sender unit (stop)	16	X21 2 pin, number plate light	
(S19) Switch, compressor pressure	54	(X22) 2 pin, rot. roof light	47
S20 Switch braking lights, left	72 62	X23 3 pin, Delta Power Shift, extra switches	71
S22 Switch, differential lock S23 Extra switch, Delta Power Shift, selector	62 139, 140	X24 9 pin, upwards X26 26 pin, instrument left, white	
S25 Switch, PTO	75 75	X27 26 pin, instrument left, write	
(S26) Switch, fog light rear	35	X28 9 pin, sensors power shuttle	
(S27) Switch, reverse buzzer	96	(X29) 2 pin, STOP-alarm (max. 2 W)	
\$28 Switch, PTO 540	143	X30 9 pin, switches gear levers	
S29 Switch, PTO 1000/540E	144	X31 2 pin, socket, PTO – emerg. stop	74
S30 Switch, 4WD	68		


31. Tractor electrical system	1. 10. 1999	Model 6250-8950	Code 310	Page 59
			ļ	ļ

Sym-	Code	CareTel, information collecting system	
bol Component	no.	A1L CareTel, data logger	118
(X32) 1 pin, electric stop (X33) 3 pin, fog light, rear (X35) 9 pin, SIGMA supply X39 9 pin, direction lever	5	B1L Pressure sensor, CareTel, 18 Bar (B2L) Pressure sensor, 190 Bar B3L Sensor, gearbox temperature B4L Temperature sensor, engine	117 116 117 118
(X41) 2 pin, front PTO (X42) 4 pin, front PTO, supply		H1L Indicator light, CareTel	120
X43 8 pin, RS – 232 bus (X45) 9 pin, Fieldmaster, extra equipment (X46) 7 pin, Fieldmaster, current socket (X47) 2 pin, GPS – supply, Fieldmaster (X48) 3 pin, radar, Fieldmaster (X49) 2 pin, seat (X50) 3 pin current socket (X53) Agrodata socket, 7 pin, implement (X54) 9 pin, Agrodata sensors, drive computer	94 96	 X1L Connector housing, 9 pins, CareTel, RS – 232 X2L Connector housing, 3 pins, CareTel, CAN X3L Connector housing, 9 pins, CareTel, extra equipment X4L Connector housing, 3 pins, CareTel, supply+NBUS 	117-120 117-120 117-120 117-120
(X55) 1 pin, Agrodata, drive computer Y1 Solenoid valve, differential lock Y2 Solenoid valve, PTO	95 64 68	ACB Power lift, see page 321/11A ACD Power lift, see page 321/10	
 Y3 Solenoid valve, 4WD (Y4) Solenoid valve, Delta Power Shift (Y5) Magnetic clutch, compressor, air conditione (Y6) Solenoid valve, Delta Power Shift (Y7) Solenoid valve, rear steering prevention (Y8) Solenoid, engine running 	71 69, 133 er 54 70, 134 94 4	Wire colours RU = brown PU = red KE = yellow	
(Y9) Magnetic clutch, front – PTO Y11 Solenoid, forward Y12 Solenoid, reverse (Y13) Solenoid valve, Sigma (Y16) Solenoid, cold cranking	78 128 130 113 3	SI = blue MU = black VI = green VA = white HA = grey	
Y17 Solenoid valve, Delta Power Shift Y18 Solenoid, parking brake	130 67	LI = lilac	
AC5 - Control system, HiTech			
A1A Control unit, AC5	122-152		
(S1A)Switch, PTO rear start, left (S2A)Switch, PTO rear start, right	74 74		
X1A Connector housing, 9 pin, engine sensors	140-141		
TwinTrac reverse drive controls			
B1W Angle sensor, clutch pedal K1W Control relay, front/rear control K2W Control relay, front/rear sensor S1W Switch, DPS – extra S2W Limit switch, clutch pedal S3W Limit switch, seat direction S4W Programming switch S5W Reed relay, direction front (f), rear S6W Reed relay, direction reverse (r), rear S7W Reed – relay, parking brake, rear	166 161 161 171 66 161 162 163 164		
X1W Connector housing 12-pin, TwinTrac X2W Connector housing 1-pin., supply (P1W) X3W Connector housing 9-pin., direction lever, r	rear		
P1W Rear display, AC5	128		





Code **310**

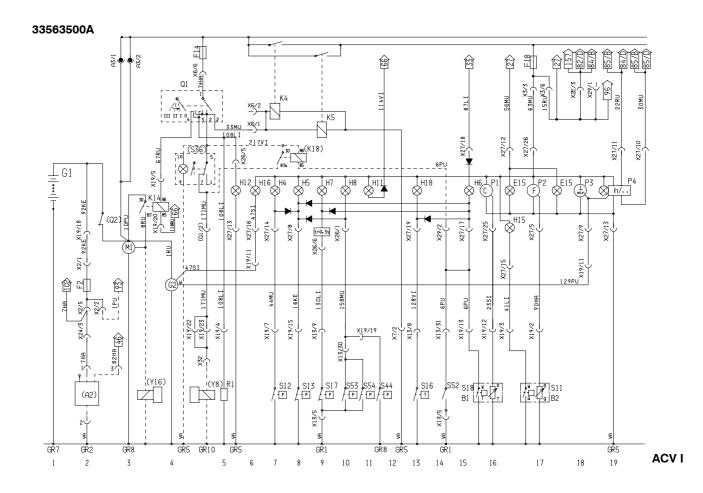

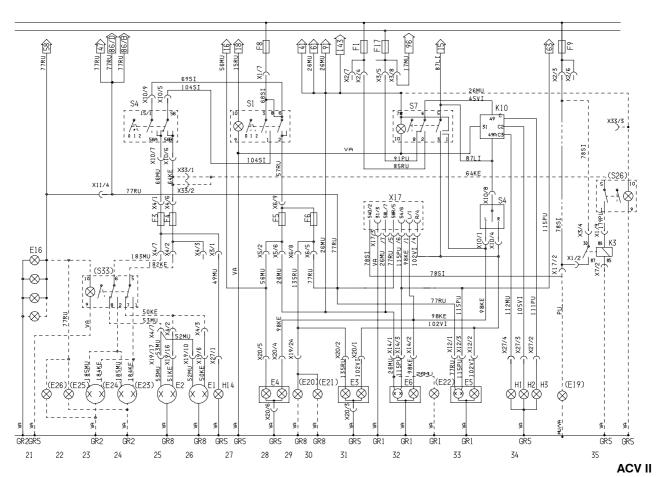



Modell **6250--8950** Code **310**

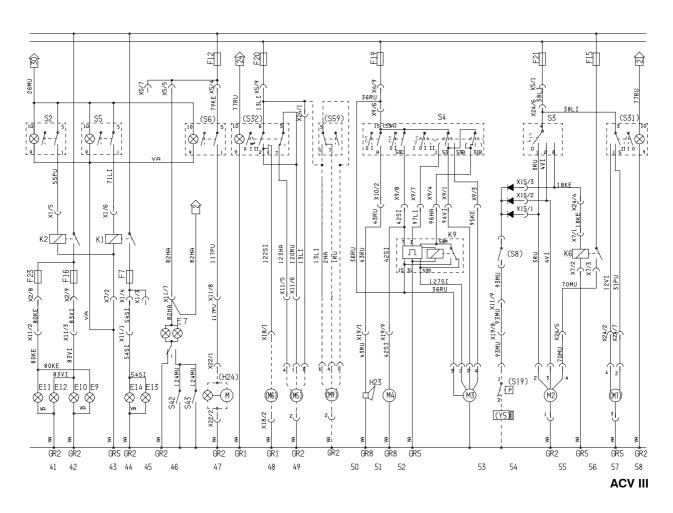


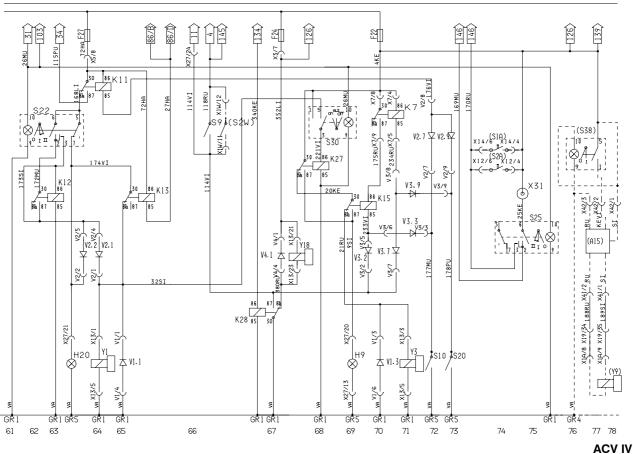


Code **310**

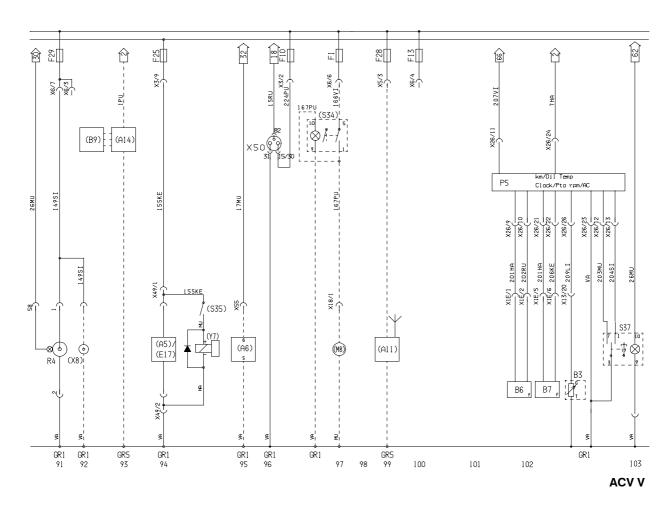


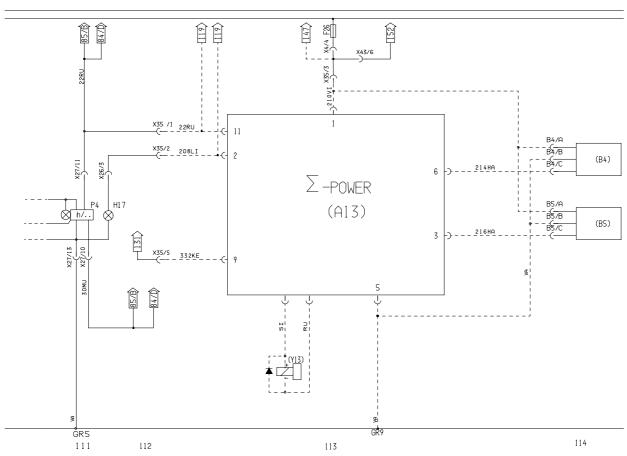


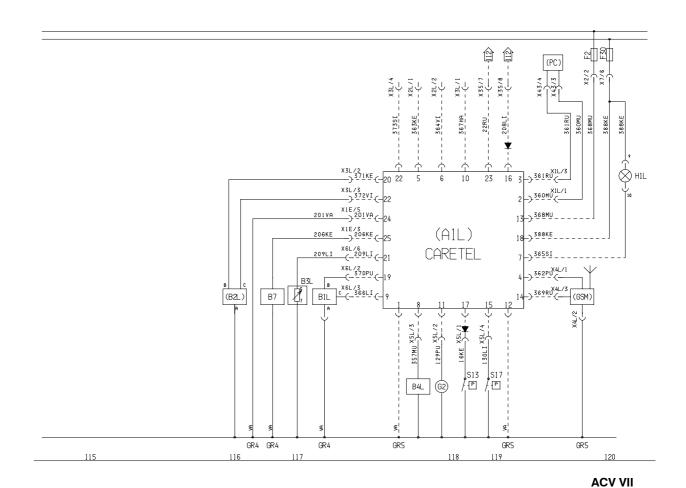

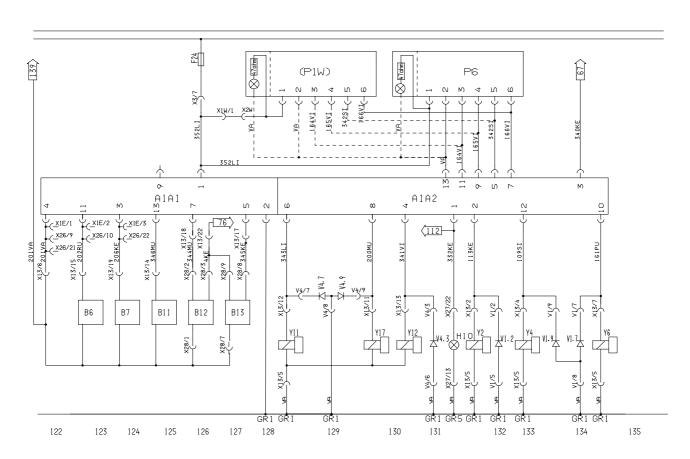


Code **310**

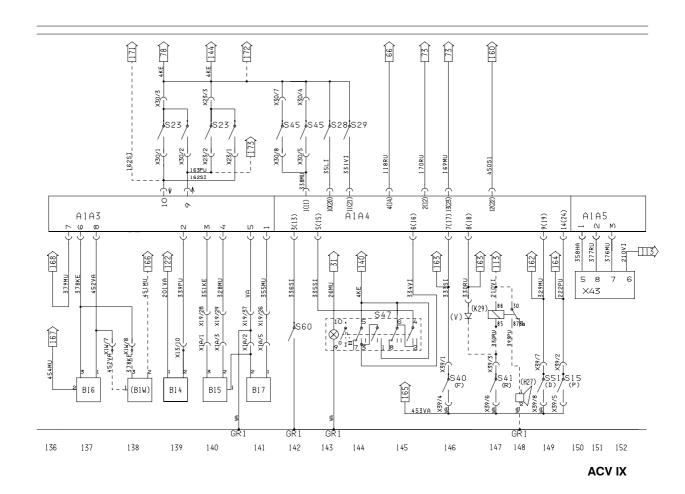

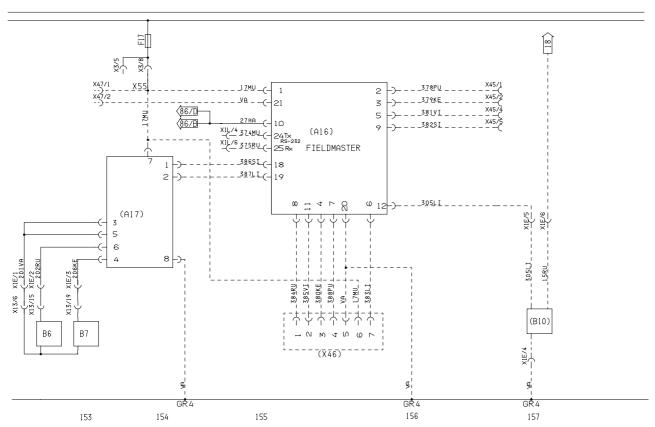

		Model	Code	Page
31. Tractor electrical system	1. 10. 1999	6250-8950	310	66

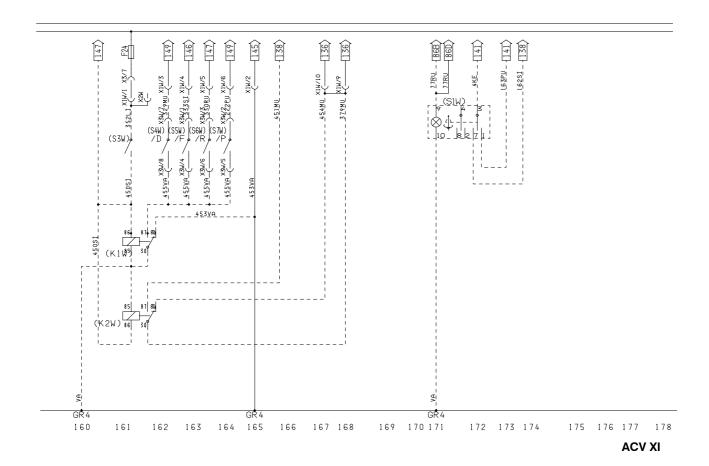

		Model	Code	Page
31. Tractor electrical system	1. 8. 2000	6250-8950	310	67

Wiring diagram HiTech, K4 ⁻¹ Diagram no. 33563510C. Incl. e.g. AC 5.2 un		Sym – bole Component	Code no
Diagrams on pages 310/71 – 77.		Europ	
		Fuses F1 15A Hazard blinkers, water pump	31, 97
Sym-	Code	F2 5A Radio, clock, tachograph, CareTel	2, 120
bole Component	no	F3 15A High beam	25
•		F4 15A Low beam	25
(A2) Radio	2	F5 10 A Parking lights, left	29
A3 Electric centre		F6 10 A Parking lights, right	30
(A5) Air suspension seat	94	F7 10A Front working lights	44
(A11) Telephone	99	F8 25A Light switch	28
(A13) Control unit, Sigma	113	F9 15A Trailer socket/fog light, rear	35, 187
(A14 Tachograph (A15) Control unit, front PTO	93 181	F10 25A 3 – pin current socket	96
(A16) Fieldmaster	155	, ,	83B, 83D
(A17) Adapter, Fieldmaster sensor signals	154	F12 10A Rot. warning light, cabin light, radio	47
(ATT) Adaptor, Floramaster sensor signals	104	F13 10A Reserve	100
B1 Sensor, engine temperature gauge	16	F14 15A Starter switch, thermostart	4 56
B2 Sensor, fuel gauge	17	F15 20A Fan III – speed F16 10A Rear working lights, inner	42
(B3) Temperature sensor, gearbox, AD	102	F17 10A hear working lights, inner F17 10A Direction indicators, Fieldmaster	32, 154
(B4) Sensor, Sigma, crankshaft	114	F18 5A Instruments, warning lights, Autocontrol	17, 190
(B5) Sensor, Sigma, PTO	114	F19 10A Windscreen wiper/washer, horn	51
	, 102, 128, 153	F20 10A Rear window wiper/washer	48
(B7) Velocity sensor, PTO	116, 102, 123	F21 15A Fan I, II, air conditioner, floor fan	55
(B9) Sensor, tachograph	93	F22 10A Sensors (HiTech), 4WD	70, 181
(B10) Speed radar	81D, 157	F23 10A Rear working lights, outer	41
B11 Velocity sensor, engine	127	F24 10A AC5, seat direction	164, 126
B12 Sensor, F/R power shuttle	124	F25 15A Air suspension seat/seat heating, rear ste	
B13 Sensor, F/R	125	prevention	94
B14 Temperature sensor, gearbox	139	F26 10A Back buzzer, Sigma, HiShift	113
B15 Angle sensor, accelerator pedal	140	F27 10A Braking lights, differential lock	64
B16 Angle sensor, clutch pedal	137	F28 10A Telephone	99
B17 Temperature sensor, outdoors	141	F29 10A Cigarette lighter, 2-pin current socket	91
B18 Sensor, front PTO speed	182	F30 10A CareTel	120
E1 Headlights, right	26	F50 25 A Stop solenoid, 8950	
E1 Headlights, right E2 Headlights, left	26 25	(F51) Main switch control, in engine compartment	197
E3 Front direction indicator, right	31	O4 Ballana	_
E4 Front direction indicator, left	28	G1 Battery	1
E5 Rear light, right	33	G2 Alternator	4, 118
E6 Rear light, left	32	H1 Indicator light, direction indicator III	34
E7 Cab light	46	H2 Indicator light, direction indicator II	34
E9 Rear working light, right outer	42	H3 Indicator light, direction indicator I	34
E10 Rear working right, right inner	42	H4 Indicator light, air filter	7
E11 Rear working light, left outer	41	H5 Indicator light, engine oil pressure	8
E12 Rear working light, left inner	41	H6 Warning light, stop, engine temperature, park	
E13 Front working light, right	44	brake cable	15
E14 Front working light, left	44	H7 Indicator light, gearbox oil press.	9
E15 Instrument lights	17	H8 Indicator light, gearbox oil filter	10
E16 Roof console lights	21	H9 Indicator light, 4WD	69
(E17) Seat heater	94	H10 Indicator light PTO	132
(E19) Fog light, rear	35	H11 Indicator light, parking brake	12
(E20) Parking light, right, Norway	29	H12 Indicator light, Thermostart	6
(E21) Parking light, left, Norway	30	H14 Indicator light, main beams	27
(E22) Register plate light	32 24	H15 Indicator light, fuel reserve	16
(E23) Upper head light, right (E24) Upper head light, left	24 23	H16 Indicator light, charging	6
(E25) Parking light, upper, right	22	H17 Indicator light, Sigma	111
(E26) Parking light, upper, left	22	H18 Indicator light, gearb. oil temp.	13
(E27) Working light, side		H20 Indicator light, diff. lock	63
(E28) Working light, side		H23 Horn	50
(LZO) Working light, oldo		(H24) Rotating roof light	47 148
		(H27) Back buzzer (H28) Indicator light, Stop, rear	140
		K1 Relay, front working lights	43
		K2 Relay, rear working lights	41
		(K3) Relay, fog light, rear	35
		K4 Auxiliary relay, starter switch	7
		K5 Auxiliary relay, starter switch	9
		K6 Relay, fan III	56

31. Tractor electrical system

1. 8. 2000

Model Code 6250-8950

Page 310

68

Symposite Component No	Sum		Code	Sym- bole Component	Code no
201	•			·	
80 Relay, interval wyper					
Note Direction indicator relay 34 (\$36) Switch, control stop 103 1					
11 Belay, brake lights/cliffeenial lock 64 537 Switch, Agrodata instrumentation, cursor+prog. 13 183 Control relay, 4 - wheel drive 70 183 184 1					
113 Control relay, differential lock 55 (\$38) Switch, front—PTO 183 143 Starter motor relay 4 146 147 146 147 14				· , , , , , , , , , , , , , , , , , , ,	
Staffer motor relay					
K15 Control relay, 4-wheel drive 70					
Ket Section				S41 Reed relay, direction reverse (R)	
Section Sect				S42 Door switch, cab light, RH	
Lights 127			· ·		
142 142 142 143 142 143 143 143 144 143 144 143 144 143 144 144 144 145					11
K28 Control relay, parking brake (K59) Relay, back buzzer (K59) Relay, back buzzer (K59) Relay, back buzzer (K61) Warning flaker, main switch (K50) Control relay, starting allowed (K50) Control relay, starting brake cable (K50) Control relay, starting brake cable (K50) Control relay, starting brake cable (K50) Control relay, starting brake (K51) Control relay, starting brake (K52) Control relay, starting brake (K52) Control relay, starting brake (K52) Control relay, starting brake (K51) Control relay, starting brake (K52) Control relay, starting brake (K51) Control relay, starting brake (K52) Contro	K27		68		142
KS2 Marning flasher, main switch 191 S5 Switch, DPS – preselection 149 KS2 Control relay, starting allowed 66 S52 Indicator light switch, parking brake cable 14 KS3 Indicator light switch, parking brake cable 14 Indicator light switch, filter, return 10 Indicator light switch, filter, return 10 Indicator light switch, parking brake cable 14 Indicator light switch, parking brake 14 Indicator light switc			66	(S45.1) Extra switch, HiShift	
KS2 Control relay, starting allowed 66 SS2 Indicator light switch, parking brake cable 14			147		
Starter motor					
M1 Starter motor 3 S54 Indicator lights witch, filter, 18 bar 14 18 18 18 18 18 18 19 18 19 19	K52	Control relay, starting allowed	66		
M2 Fan	1.1.4	Charles and the	0		
M3 Windscreen wiper					
M.W. Windscreen washer 51 (S86) Switch, PTO display, front/rear 184 M.S. Bear window washer 48 (S86) Switch, control of main switch 196 M.W. Water pump 97 (M9) Roof window wisher 50 M.W. Water pump 97 (M9) Roof window wiper 50 M.W. Water pump 97 (M9) Roof window wiper 60 P.E. Engine temperature meter 16 GR1 Rear lights, solenoid valves P.E. Fuel gauge 17 GR2 Roof P.B. Tachometer 16 GR4 Autocontrol R. Running hour /speed meter (Agrodata instrumentation) GR2 Roof GR2 Roof (P.D. Speed, A.C. trip, oil temperature (Agrodata instrumentation) 102 GR8 Cable harness, instr. panel GR8 Cable harness, instr. panel GR9 Cable (Autocontrol) GR9 Cable Gabin (P.D. Speed, A.C. Speed, A.C. trip, oil temperature (Agrodata instrumentation) 4 X1 9 pin, distribution box (Agrodata instrumentation) 3, 196 X2 9 pin, distribution box ACI Thermostart 4 X1 9 pin, distribution box X1 Thermostart 5 X4 9 pin, distribution box </td <td></td> <td></td> <td></td> <td></td> <td></td>					
MS Rear window wiper		•			
Miles					
M/Y Floor fan 57 (M8) Water pump 97 V1 Diodes Y1, Y2, Y3, Y4, Y6 (M8) Reference 50 (M9) Roof window wiper 50 P1 Engine temperature meter 16 GR2 Roof P2 Fuel gauge 17 GR2 Roof P3 Tachometer 18 GR4 Autocontrol P4 Running hour /speed meter (Agrodata instrumentation) 102 GR9 Cabin (P5) Clock, PTO –speed, AC, trip, oil temperature (Agrodata instrumentation) 102 GR9 Cabin (P6) Display, AC5 133 GR10 Electric stop Q1 Heat/starter switch 4 X1 9 pin, distribution box Q2 Main switch 3, 196 X2 9 pin, distribution box R1 Thermostart 5 X4 9 pin, distribution box R2 Cigarette lighter 91 X5 9 pin, distribution box R3 Switch, head lights 28 (X8) 2 pin, current socket 92					
M8 Water pump 97	, ,			or or right in domain, our figure in the state of the sta	
Month Roof window wiper So Figure Royal Figure Royal Figure Royal Figure Royal Figure Figure Royal Figure				V1 Diodes Y1, Y2, Y3, Y4, Y6	
Pi			50		
P2 Fuel gauge					
Pa Tachömeter 18 Repair Repai					
Running hour /speed meter (Agrodata instrumentation)					
tion					
Clock, PTO -speed, AC, trip, oil temperature (Agrodata instrumentation)	Ρ4				
(Agrodata instrumentation)	(D5)	,			
P6 Display, AC5 133 GR10 Electric stop	(F3)				
New York Combined Switch	P6				
CO2 Main switch	. 0	Display, Nec	100		
Name		•	4	• *	
Thermostart	(Q2)	Main switch	3, 196		
R4			_		
R7					
S1					
S1 Switch, head lights 28 (X8) 2 pin, current socket 92 S2 Switch, rear working lights 41 X9 9 pin, combination control S3 Switch, fron 55 X10 9 pin, combination control S4 Combined switch 25,34,52 X11 9 pin, nearwards, right S5 Switch, front working lights 43 X12 9 pin, rearwards, right (S6) Switch, rot. warning lights 47 X13 37 pin, transmission S7 Switch, air conditioner 54 (X15) 3 pin, air cond., diodes 54 S9 Starter safety switch 142 X17 7 pin, trailer socket 32 S10 Switch, braking lights, right 72 (X18) 2 pin, rear window washer 48 S11 Fuel gauge sender unit 17 X19 37 pin, engine S12 Pressure drop indicator, air filter 7 X20 9 pin, front direction indicator S12 Pressure drop indicator, air filter 7 X20 9 pin, front direction indicator	n/	Potentionieter, from PTO, starting speed	104		
Suitch, rear working lights	S1	Switch head lights	28		92
S3 Switch, fan 55 X10 9 pin, combination control S4 Combined switch 25,34,52 X11 9 pin, rearwards, right S5 Switch, front working lights 43 X12 9 pin, rearwards, right S6 Switch, hazard warning flashers 32 X14 9 pin, rearwards, left (S8) Switch, air conditioner 54 X17 7 pin, air cond., diodes 54 S9 Starter safety switch 142 X17 7 pin, trailer socket 32 S10 Switch, braking lights, right 72 (X18) 2 pin, rear window washer 48 S11 Fuel gauge sender unit 17 X19 37 pin, engine S12 Pressure drop indicator, air filter 7 X20 9 pin, front direction indicator S13 Engine oil press. sender unit 8,118 (X22) 2 pin, rot. roof light 47 S15 Reed relay, parking brake 149 X23 3 pin, Delta Power Shift, extra switches S16 Gearbox temperature sender unit 13 X24 9 pin, ustrument left, white		,			02
S4 Combined switch 25,34,52 X11 9 pin, upwards S5 Switch, front working lights 43 X12 9 pin, rearwards, right (S6) Switch, rot. warning light 47 X13 37 pin, transmission S7 Switch, hazard warning flashers 32 X14 9 pin, rearwards, left (S8) Switch, air conditioner 54 (X15) 3 pin, air cond., diodes 54 S9 Starter safety switch 142 X17 7 pin, trailer socket 32 S10 Switch, braking lights, right 72 (X18) 2 pin, rear window washer 48 S11 Fuel gauge sender unit 17 X19 37 pin, engine 48 S11 Fuel gauge sender unit 17 X19 37 pin, engine 48 S12 Pressure drop indicator, air filter 7 X20 9 pin, front direction indicator 48 S13 Engine oil press. sender unit 8, 118 (X22) 2 pin, rot. roof light 47 S15 Reed relay, parking brake 149 X23 3 pin, Delta Power Shift, extra switches S16 Gearbox temperature sender unit 13 X					
(S6) Switch, rot. warning light 47 X13 37 pin, transmission S7 Switch, hazard warning flashers 32 X14 9 pin, rearwards, left (S8) Switch, air conditioner 54 (X15) 3 pin, air cond., diodes 54 S9 Starter safety switch 142 X17 7 pin, trailer socket 32 S10 Switch, braking lights, right 72 (X18) 2 pin, rear window washer 48 S11 Fuel gauge sender unit 17 X19 37 pin, engine 32 S12 Pressure drop indicator, air filter 7 X20 9 pin, front direction indicator S13 Engine oil press. sender unit 8, 118 (X22) 2 pin, rot. roof light 47 S15 Reed relay, parking brake 149 X23 3 pin, Delta Power Shift, extra switches S16 Gearbox temperature sender unit 9, 119 X26 26 pin, instrument left, white S18 Engine temperature sender unit (stop) 16 X27 26 pin, instrument left, white S19 Switch, cif	S4	Combined switch	25,34, 52	X11 9 pin, upwards	
Sy Switch, hazard warning flashers 32	S5	Switch, front working lights		X12 9 pin, rearwards, right	
(S8) Switch, air conditioner 54 (X15) 3 pin, air cond., diodes 54 S9 Starter safety switch 142 X17 7 pin, trailer socket 32 S10 Switch, braking lights, right 72 (X18) 2 pin, rear window washer 48 S11 Fuel gauge sender unit 17 X19 37 pin, engine 48 S12 Pressure drop indicator, air filter 7 X20 9 pin, front direction indicator S13 Engine oil press. sender unit 8, 118 (X22) 2 pin, rot. roof light 47 S15 Reed relay, parking brake 149 X23 3 pin, Delta Power Shift, extra switches 47 S15 Reed relay, parking brake 149 X23 3 pin, Delta Power Shift, extra switches 47 S16 Gearbox temperature sender unit 13 X24 9 pin, upwards 48 S17 Gearbox oil pressure sender unit (stop) 16 X27 26 pin, instrument left, white 18 18 19 pin, sensors power shuttle 18 18 19 pin, sensors power shuttle 19 18 19 pin, switches gear levers 19 19 pin, switches gear levers 19<	(S6)	Switch, rot. warning light		•	
S9 Starter safety switch 142 X17 7 pin, trailer socket 32 S10 Switch, braking lights, right 72 (X18) 2 pin, rear window washer 48 S11 Fuel gauge sender unit 17 X19 37 pin, engine 7 S12 Pressure drop indicator, air filter 7 X20 9 pin, front direction indicator 7 S13 Engine oil press. sender unit 8, 118 (X22) 2 pin, rot. roof light 47 S15 Reed relay, parking brake 149 X23 3 pin, Delta Power Shift, extra switches 47 S16 Gearbox temperature sender unit 13 X24 9 pin, upwards 47 S17 Gearbox oil pressure sender unit (stop) 16 X27 26 pin, instr. right, blue 48 S18 Engine temperature sender unit (stop) 16 X27 26 pin, sensors power shuttle 48 S19 Switch, compressor pressure 54 X28 9 pin, sensors power shuttle 48 S20 Switch praking lights, left 73 (X29) 2 pin, STOP—alarm (max. 2 W) 48 S22 Switch, PTO 75 (X32) 1 pin, electric st					
S10 Switch, braking lights, right S11 Fuel gauge sender unit S12 Pressure drop indicator, air filter S13 Engine oil press. sender unit S15 Reed relay, parking brake S16 Gearbox temperature sender unit S17 Gearbox oil pressure sender unit S18 Engine temperature sender unit S19 Switch, compressor pressure S10 Switch, differential lock S11 Switch, Delta Power Shift, selector S12 Switch, PTO S25 Switch, PTO S26 Switch, reverse buzzer S27 Switch, PTO 540 S38 Switch, floor fan S48 Sypin, sensor pynon, front direction indicator S49 pin, ront roof light S40 pin, root. roof light S40 pin, penter on. front direction indicator S42 pin, root. roof light S42 pin, penter on. front direction indicator S40 pin, root. roof light S40 pin, penter on. front direction indicator S40 pin, root. roof light S42 pin, penter on. front direction indicator S40 pin, root. roof light S40 pin, penter on. front direction indicator S40 pin, root. roof light S40 pin, penter on. front direction indicator S40 pin, root. roof light S40 pin, penter on. front PTO, supply S48 pin, span pin, front direction indicator S40 pin, penter on. front penter penter on. front pe	٠,				
S11 Fuel gauge sender unit S12 Pressure drop indicator, air filter S13 Engine oil press. sender unit S15 Reed relay, parking brake S16 Gearbox temperature sender unit S17 Gearbox oil pressure sender unit S18 Engine temperature sender unit S19 Switch, compressor pressure S20 Switch braking lights, left S20 Switch, Delta Power Shift, selector S21 Switch, fog light rear S22 Switch, PTO S23 Switch, PTO S30 Switch, PTO S47 Switch, PTO S48 Switch, PTO S48 Switch, PTO S49 Switch, PTO S40 Switch, PTO S40 Switch, PTO S41 Switch, PTO S42 Switch, PTO S44 S25 Switch, PTO S45 Switch, PTO S46 Switch, PTO S40 S47 Switch, PTO S40 S47 Switch, PTO S40 S48 Switch, PTO S40 S49 Sin, sensors power shuttle S48 Sin, sensors power shuttle S49 Sin, sensors power shuttle S40 Sin, instrument left, white S47 Sin, pelta Power Shift, set S47 Sin, pin, sensors power shuttle S48 Sin, pin, sensors power shuttle S49 Sin, sensors power shuttle S48 Sin, pin, sensors power shuttle S49 Sin, sensors power shuttle S48 Sin, pin, sensors power shuttle S49 Sin, sensors power shuttle S48 Sin, pin, senso					
S12 Pressure drop indicator, air filter S13 Engine oil press. sender unit S15 Reed relay, parking brake S16 Gearbox temperature sender unit S17 Gearbox oil pressure sender unit S18 Engine temperature sender unit S19 Switch, pro S20 Switch braking lights, left S21 Switch, pro S22 Switch, pro S23 Switch, pro S24 Switch, pro S25 Switch, pro S26 Switch, pro S27 Switch, pro S28 Switch, pro S29 Switch, pro S20 Switch, pro S20 Switch, pro S21 Switch, pro S22 Switch, pro S23 Switch, pro S24 Switch, pro S25 Switch, pro S26 Switch, pro S27 Switch, pro S28 Switch, pro S29 Switch, pro S20 Switch, pro S21 Switch, pro S22 Switch, pro S23 Switch, pro S25 Switch, pro S26 Switch, pro S27 Switch, pro S28 Switch, pro S29 Switch, pro S29 Switch, pro S20 Switch, pro S20 Switch, pro S21 Switch, pro S22 Switch, pro S23 Switch, pro S25 Switch, pro S26 Switch, pro S27 Switch, pro S28 Switch, pro S29 Switch, pro S20 Switch, pro S20 Switch, pro S21 Switch, pro S22 Switch, pro S23 Switch, pro S24 Switch, pro S25 Switch, pro S26 Switch, pro S27 Switch, pro S28 Switch, pro S29 Switch, pro S20 Switch, pro S20 Switch, pro S21 Switch, pro S22 Switch, pro S23 Switch, pro S24 Switch, pro S25 Switch, pro S26 Switch, pro S27 Switch, pro S28 Switch, pro S29 Switch, pro S20 Switch, pro S20 Switch, pro S21 Switch, pro S22 Switch, pro S23 Switch, pro S24 Switch, pro S25 Switch, pro S26 Switch, pro S27 Switch, pro S28 Switch, pro S29 Switch, pro S20 Switch					40
S13 Engine oil press. sender unit S15 Reed relay, parking brake S16 Gearbox temperature sender unit S17 Gearbox oil pressure sender unit S18 Engine temperature sender unit S19 Switch, compressor pressure S20 Switch braking lights, left S20 Switch, differential lock S21 Extra switch, Delta Power Shift, selector S22 Switch, PTO S25 Switch, fog light rear S27 Switch, reverse buzzer S28 Switch, PTO 540 S30 Switch, 4WD S31 Switch, floor fan S47 S28 Switch, floor fan S47 S28 Signary, Delta Power Shift, selector S48 Signary, Delta Power Shift, Selector S49 Signary, PTO, Supply S47 S48 Signary, Delta Power Shift, Selector S49 Switch, PTO 1000/540E S40 Switch, PTO 1000/540E S41 Switch, PTO S40 Switch, PTO 1000/540E S41 Switch, PTO S40 Switch, PTO S4					
S15 Reed relay, parking brake S16 Gearbox temperature sender unit S17 Gearbox oil pressure sender unit S18 Engine temperature sender unit (stop) S20 Switch, compressor pressure S20 Switch braking lights, left S21 Switch, Delta Power Shift, extra switches S22 Switch, Delta Power Shift, selector S23 Extra switch, Delta Power Shift, selector S25 Switch, fog light rear S26 Switch, fog light rear S27 Switch, pro S28 Switch, Pro S29 Switch, pro S20 Switch, pro S20 Switch pro S21 Extra switch, Delta Power Shift, selector S22 Switch, pro S23 Extra switch, pro S25 Switch, pro S26 Switch, pro S27 Switch, fog light rear S28 Switch, pro S29 Switch, pro S29 Switch, pro S20 Switch, pro S20 Switch, pro S21 Switch, pro S22 Switch, pro S23 Extra switch, pro S25 Switch, pro S26 Switch, pro S27 Switch, pro S28 Switch, pro S29 Switch, pro S20 Switch, pro S20 Switch, pro S20 Switch, pro S21 Switch, pro S22 Switch, pro S23 Switch, pro S25 Switch, pro S26 Switch, pro S27 Switch, pro S28 Switch, pro S29 Switch, pro S20 Switch, pro					47
S16 Gearbox temperature sender unit S17 Gearbox oil pressure sender unit S18 Engine temperature sender unit (stop) S19 Switch, compressor pressure S20 Switch braking lights, left S21 Switch, differential lock S22 Switch, differential lock S23 Extra switch, Delta Power Shift, selector S25 Switch, fog light rear S26 Switch, fog light rear S27 Switch, reverse buzzer S28 Switch, PTO S30 Switch, PTO S30 Switch, 4WD S31 Switch, floor fan S32 Switch, floor fan S33 X24 9 pin, upwards X26 26 pin, instrument left, white X27 26 pin, instr. right, blue X28 9 pin, sensors power shuttle X29 9 pin, sTOP-alarm (max. 2 W) X30 9 pin, switches gear levers X30 9 pin, socket, PTO-emerg. stop X31 2 pin, socket, PTO-emerg. stop X32 2 pin, socket, PTO-emerg. stop X33 2 pin, electric stop X33 3 pin, fog light, rear X35 (X33) 3 pin, fog light, rear X35 (X35) 9 pin, SIGMA supply X39 9 pin, direction lever X41) 2 pin, front PTO X42) 4 pin, front PTO, supply X42) 4 pin, front PTO, supply				\	• • •
S17 Gearbox oil pressure sender unit S18 Engine temperature sender unit (stop) (S19) Switch, compressor pressure S20 Switch braking lights, left S22 Switch, differential lock S23 Extra switch, Delta Power Shift, selector S25 Switch, fog light rear (S27) Switch, reverse buzzer (S27) Switch, PTO 540 S28 Switch, 4WD S30 Switch, 4WD S31 Switch, floor fan S30 Switch, floor fan S31 Switch, floor fan S32 Extra switch, PTO S30 Switch, PTO 1000/540E S31 Switch, floor fan S32 Extra switch, PTO 1000/540E S43 Extra switch, PTO 1000/540E S44 S25 pin, instrument left, white S45 Sup in, instrument left, white S47 S26 pin, instrument left, white S48 Sint, properties, pin, sensors power shuttle S48 Synith, properties, pin, sensors power shuttle S48 Synith, properties, pin, sensors power shuttle S48 Synith, sensors power shuttle S49 pin, sensors power shuttle S48 Synith, sensors power shuttle S48 Synith, sensors power shuttle S49 pin, sensors power shuttle S4					
(S19) Switch, compressor pressure S20 Switch braking lights, left S22 Switch, differential lock S23 Extra switch, Delta Power Shift, selector S25 Switch, PTO S26 Switch, fog light rear S27 Switch, reverse buzzer S28 Switch, PTO 540 S29 Switch, PTO 1000/540E S30 Switch, 4WD S31 Switch, floor fan S4 X28 9 pin, sensors power shuttle (X29) 2 pin, STOP – alarm (max. 2 W) X30 9 pin, switches gear levers X31 2 pin, socket, PTO – emerg. stop 74 X31 2 pin, socket, PTO – emerg. stop 75 (X32) 1 pin, electric stop 75 (X33) 3 pin, fog light, rear (X35) 9 pin, SIGMA supply X39 9 pin, direction lever (X41) 2 pin, front PTO (X42) 4 pin, front PTO, supply			9, 119	X26 26 pin, instrument left, white	
S20 Switch braking lights, left S22 Switch, differential lock S23 Extra switch, Delta Power Shift, selector S25 Switch, PTO S26 Switch, fog light rear S27 Switch, PTO 540 S28 Switch, PTO 1000/540E S29 Switch, 4WD S30 Switch, floor fan S30 Switch, grift for the properties of the p	S18	Engine temperature sender unit (stop)	16		
S22 Switch, differential lock S23 Extra switch, Delta Power Shift, selector S25 Switch, PTO S26 Switch, fog light rear S27 Switch, PTO 540 S28 Switch, PTO 1000/540E S29 Switch, 4WD S30 Switch, floor fan S30 Switch, floor fan S30 Switch, floor fan S30 Switch, floor fan S30 Switch, general for a first switch and switches gear levers S30 Switch pto – emerg. stop S31 Switch, PTO – emerg. stop S32 Switch, PTO – emerg. stop S31 Switch, PTO – emerg. stop S32 Switch, PTO – emerg. stop S32 Switch, PTO – emerg. stop S32 Switch, PTO – emerg. stop S31 Switch, PTO – emerg. stop S32 Switch, PTO – emerg. stop S32 Switch, PTO – emerg. stop S32 Switch, PTO – emerg. stop S33 Switch, PTO – emerg. stop S34 Switch, PTO – emerg. stop S35 Switch, PTO – emerg. stop S35					
S23 Extra switch, Delta Power Shift, selector 139, 140 X31 2 pin, socket, PTO – emerg. stop 74 S25 Switch, PTO 75 (X32) 1 pin, electric stop 5 (S26) Switch, fog light rear 35 (X33) 3 pin, fog light, rear (S27) Switch, reverse buzzer (X35) 9 pin, SIGMA supply S28 Switch, PTO 540 146 X39 9 pin, direction lever S29 Switch, PTO 1000/540E 147 (X41) 2 pin, front PTO S30 Switch, 4WD 68 (X42) 4 pin, front PTO, supply S31 Switch, floor fan 57					
S25 Switch, PTO 75 (X32) 1 pin, electric stop 5 (S26) Switch, fog light rear 35 (X33) 3 pin, fog light, rear (S27) Switch, reverse buzzer (X35) 9 pin, SIGMA supply S28 Switch, PTO 540 146 X39 9 pin, direction lever S29 Switch, PTO 1000/540E 147 (X41) 2 pin, front PTO S30 Switch, 4WD 68 (X42) 4 pin, front PTO, supply S31 Switch, floor fan 57					74
(S26) Switch, fog light rear 35 (X33) 3 pin, fog light, rear (S27) Switch, reverse buzzer (X35) 9 pin, SIGMA supply S28 Switch, PTO 540 146 X39 9 pin, direction lever S29 Switch, PTO 1000/540E 147 (X41) 2 pin, front PTO S30 Switch, 4WD 68 (X42) 4 pin, front PTO, supply S31 Switch, floor fan 57			•		
(S27) Switch, reverse buzzer (X35) 9 pin, SIGMA supply S28 Switch, PTO 540 146 X39 9 pin, direction lever S29 Switch, PTO 1000/540E 147 (X41) 2 pin, front PTO S30 Switch, 4WD 68 (X42) 4 pin, front PTO, supply S31 Switch, floor fan 57		· ·		\ / 1 / 1	5
S28 Switch, PTO 540 146 X39 9 pin, direction lever S29 Switch, PTO 1000/540E 147 (X41) 2 pin, front PTO S30 Switch, 4WD 68 (X42) 4 pin, front PTO, supply S31 Switch, floor fan 57			55		
S29 Switch, PTO 1000/540E 147 (X41) 2 pin, front PTO S30 Switch, 4WD 68 (X42) 4 pin, front PTO, supply S31 Switch, floor fan 57			146		
S30 Switch, 4WD 68 (X42) 4 pin, front PTO, supply S31 Switch, floor fan 57		· ·			
S31 Switch, floor fan 57					
(S32) Switch, rear window wiper and washer 48	S31	Switch, floor fan			
	(S32)) Switch, rear window wiper and washer	48		

31 Treator electrical system							ĺ
31. Tractor electrical system			1. 8. 2000	62508950	310	69	
		Syn	1-			Code	· _
Sym-	Code	•	Component			no	
bole Component	no	070	- Christop Johnson	anaad		0ED 0E	_
X43 8 pin, RS-232 bus	151		E Switch, lowering E Switch, transpor			85B, 85E 85B, 85E	
(X45) 9 pin, Fieldmaster, extra equipment	131		E Switch, draft cor			85B, 85E	
(X46) 7 pin, Fieldmaster, current socket	155			vitch, lift/stop/lowe	r	86B, 86D	
(X47) 2 pin, GPS-supply, Fieldmaster			IE Switch, forced I			85B, 85D	
(X48) 3 pin, radar, Fieldmaster		S12	2E Switch, oscillati	on damping / slip o	control	85B, 85D)
X49 2 pin, seat	94	Var	- Cammantan Omin		(A CD)		
X50 3 pin current socket	96 95			s, speed sensors (ns, supply & rear b		implo	
(X55) 1 pin, FieldMaster, drive computer	95	۸۷۲	ment position se		Julions (1	-impie-	
Y1 Solenoid valve, differential lock	64			,			
Y2 Solenoid valve, PTO	133		E Solenoid valve, I	•		83B, 84D	
Y3 Solenoid valve, 4WD	71	Y2E	E Solenoid valve, I	ifting		83B, 84D)
Y4 Solenoid valve, Delta Power Shift	133	Car	eTel. information	on collecting sy	stem		
(Y5) Magnetic clutch, compressor, air conditionerY6 Solenoid valve, Delta Power Shift	· 54 134		_) CareTel, data log	•		118	Ω
(Y7) Solenoid valve, rear steering prevention	94	(A11	_) Care lei, data log	jgei		110	5
Y8 Solenoid, engine running	4	(B1l	_) Pressure sensor	CareTel. 18 Bar		117	7
(Y9) Magnetic clutch, front-PTO	77) Pressure sensor			110	
Y11 Solenoid, forward	131	(B3l	_) Sensor, gearbox	temperature		117	7
Y12 Solenoid, reverse	132	(B4l	_) Temperature ser	nsor, engine		118	8
(Y13) Solenoid valve, Sigma	113	0.141		- .		40	_
(Y16) Solenoid, cold cranking	3	(H11	L)Indicator light, C	are lel		120	J
Y17 Solenoid valve, Delta Power Shift Y18 Solenoid, parking brake	134 67	(X1I	_) Connector hous	na 9 nins			
110 Colenoid, parking brake	07	(// 12	CareTel, RS – 23			117-120	0
		(X2L		ng, 3 pins, CareTe	I, CAN	117-120	
AC 5.2 Control system, HiTech) Connector hous				
A1A Control unit, AC5	122-152		CareTel, extra e			117-120	0
0.4 5 570		(X4L) Connector hous			447 40	_
S1A Button, PTO rear start, left S2A Button, PTO rear start, right	74 74		CareTel, supply-	FNBUS		117-120	J
SZA Button, FTO Teat Start, right	74						
X1A Connector, 9 pins, engine sensors	140-141	\A/:					
TwinTrac, reverse drive controls			e colours = brown				
(B1W) Position sensor, clutch pedal	171		= red				
(S1W) Switch, DPS-extra	173		= yellow				
(S2W) Limit switch, clutch pedal	162		blue				
(S3W) Limit switch, seat direction	163		= black				
(S4W) Programming switch, DPS	165		green				
(S5W) Reed relay, direction forwards (F), rear (S6W) Reed relay, direction reverse (R), rear	166 167		= white				
(S7W) Reed relay, parking brake, rear	168		= grey : lilac				
(X1W) Connector housing 12-pin, TwinTrac (X2W) Connector housing 1-pin., supply (P1W)							
(X3W) Connector housing 9-pin., direction lever,	rear						
(P1W) Rear display, AC5	128						
ACB/ACD Autocontrol power lift:							
A1E Autocontrol control unit	82B, 82D						
A2E Autocontrol, circuit card	85B, 85D						
B1E Position sensor	81B, 81D						
B2E Draft sensor, right	81B, 81D						
B3E Draft sensor, left	81B, 81D						
(B4E) Position sensor, implement (ACD)	81D						
E1E Illumination, circuit card	85B, 85D						
E2E Illumination, position potentiometer	86B, 86D						
R1E Potentiometer, position control	85B, 85D						
r sterilierineten, poolilori corilior	302, 000						

Model

Code

Page

81B, 83D 81B, 83D 81B, 82D 81B, 82D 83B, 83D

S1E Button, rear mudguard, lift, right S2E Button, rear mudguard, lowering, right S3E Button, rear mudguard, lift, left S4E Button, rear mudguard, lowering, left S5E Switch, in cabin, nift/lower





31. Tractor electrical system

1. 8. 2000

Model C 6250-8950 3


Code **310**

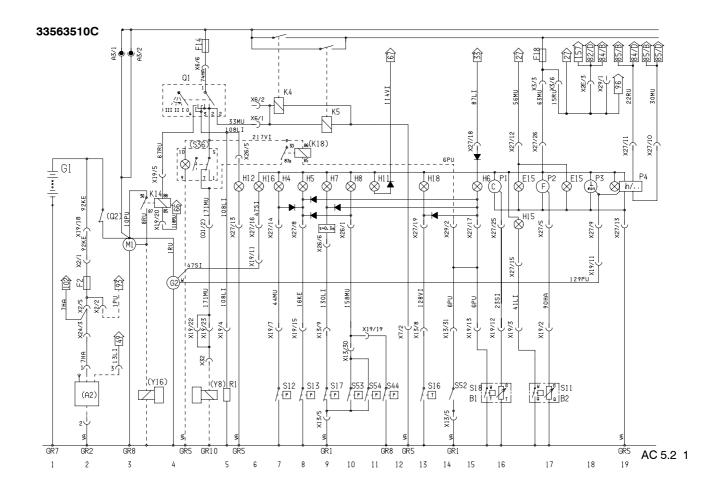


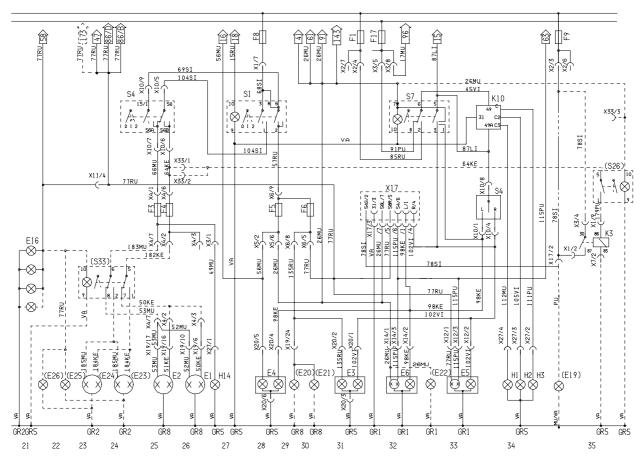

Model **6250 – 8950**

Code **310**

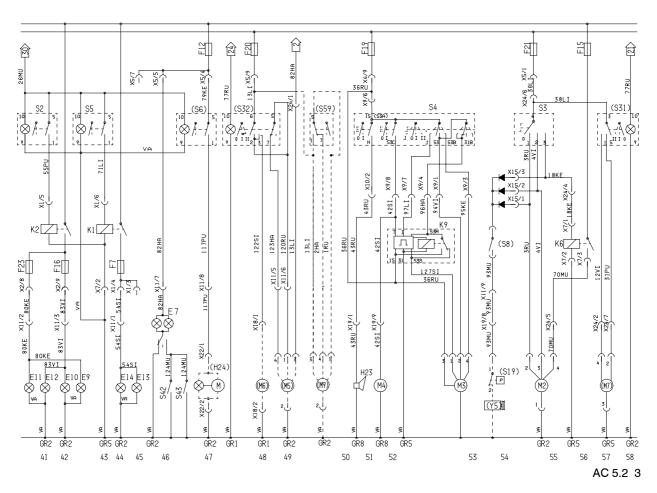

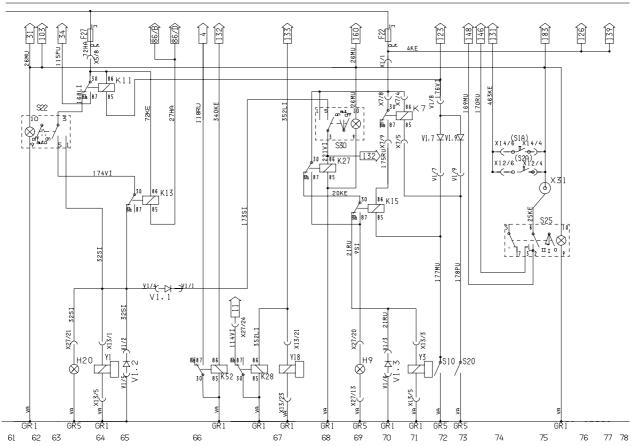



31.	Tractor	electrical	system
			- ,

1. 8. 2000


Model Co 6250-8950 3


Code **310**

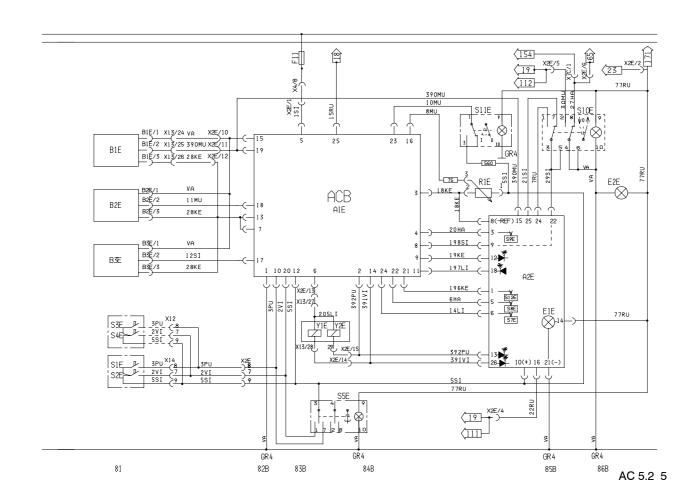

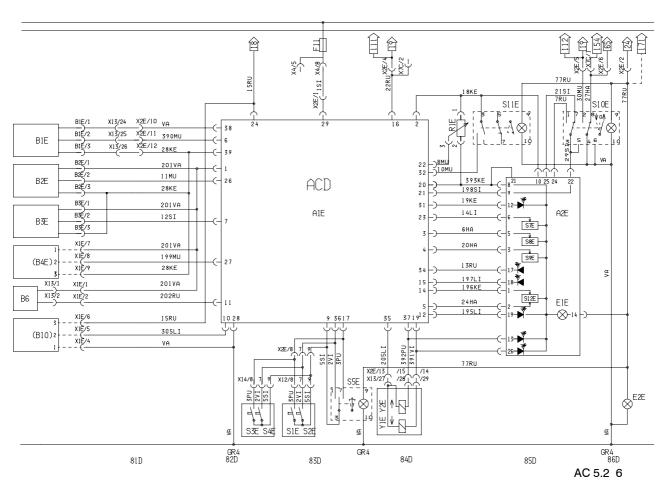

Code **310**

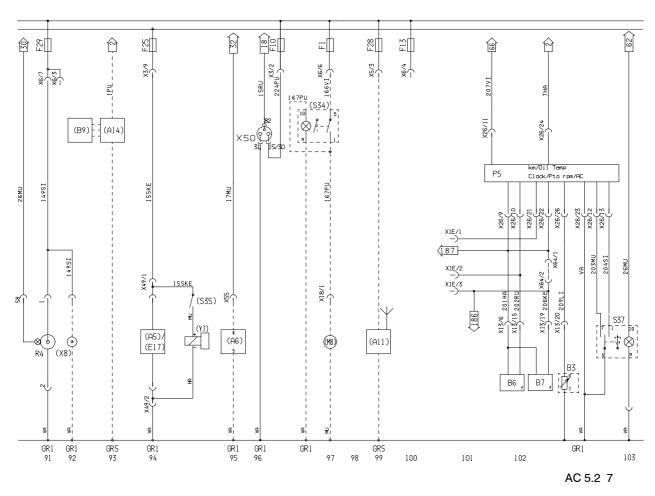


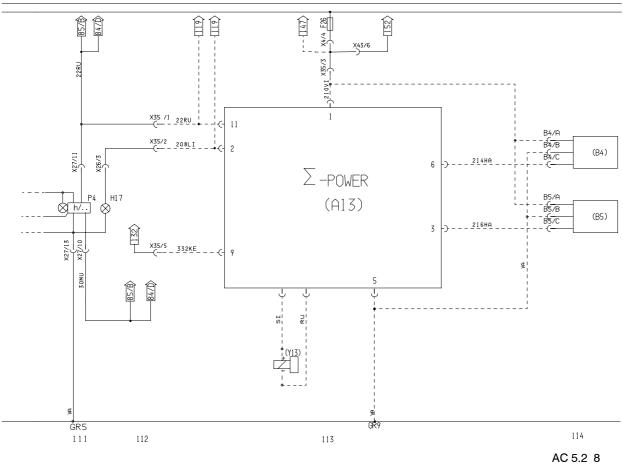


1. 8. 2000


Model **6250-8950**


310

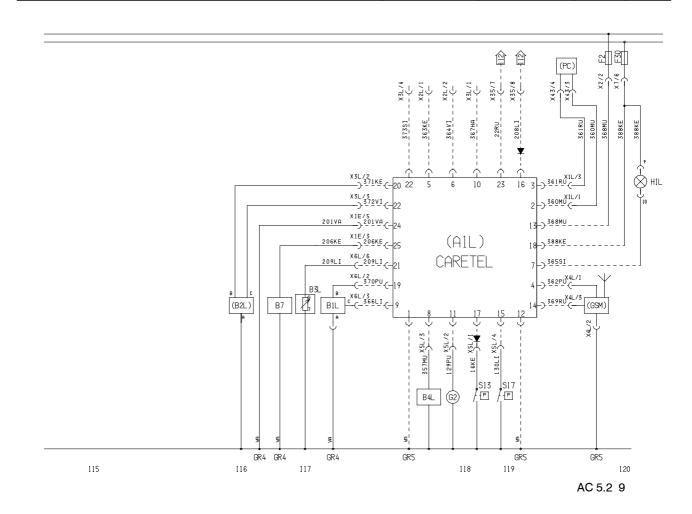

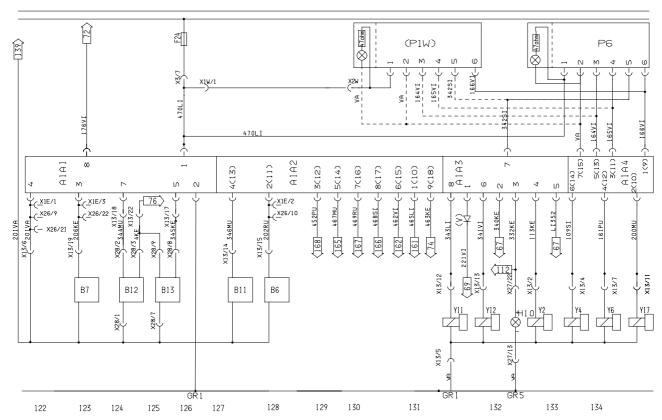


Code **310**

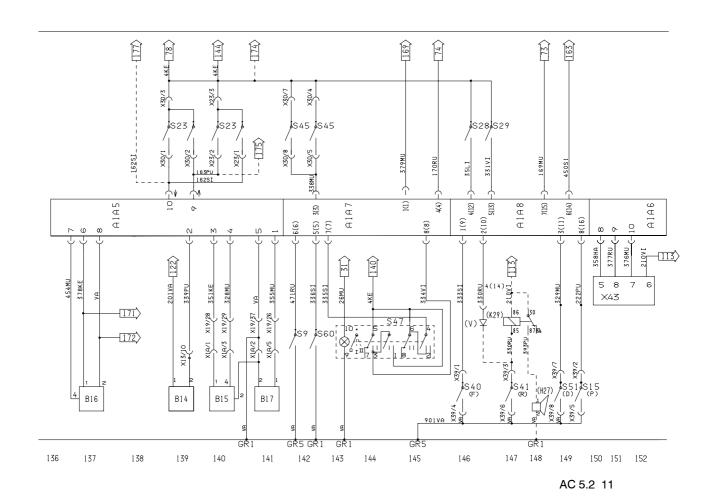

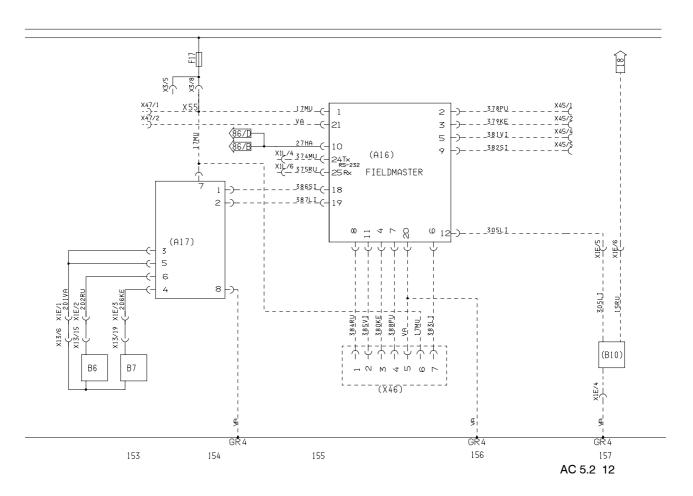

		Model	Code	Page
31. Tractor electrical system	1. 8. 2000	6250-8950	310	77

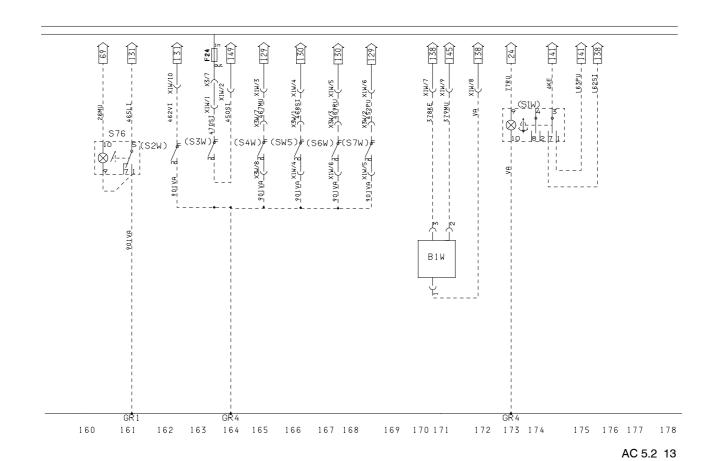

(B18) _ <u>6</u>1 <u>0</u>KE _ (02) X19/11 - 81/22X X41/3 X41/4 A15 GŔ5

31. Tractor electrical system	1. 8. 2000	Model 6200 - 8750	Code 310	Page 79

Wiring diagram 6200-8750	(AC 2.3),	Sym-	Code
K44242 —, (not HiTech). Diagram no. 318	716 60A. Diag-	bol Component	no
rams on pages 310/83-88.		F17 10A Direction indicators, Fieldmaster	32, 153
		F18 5A Instruments, warning lights, Autocontrol	17, 166
Sym-	Code	F19 10A Windscreen wiper/washer, horn	51
bol Component	no	F20 10A Rear window wiper/washer	48
(A2) Radio	2	F21 15A Fan (I, II), air conditioner, floor fan	55
A3 Electric centre	04	F22 10A 4WD, PTO, DPS	65
(A5) Air suspension seat (A6) Agrodata	94 95	F23 10A Rear working lights, outer	41 98
(A10) Control unit, DPS	70	F24 10A Reserve F25 15A Air suspension seat/seat heating, rear ste	
(A11) Telephone	99	prevention	94
(A13) Control unit, Sigma	113	F26 10A Back buzzer, Sigma, HiShift	96, 116
(A14) Tachograph	93	F27 10A Braking lights, differential lock	62
(A15) Control unit, front PTO	162	F28 10A Telephone	99
(A16) Fieldmaster	155	F29 10A Cigarette lighter, 2-pin current socket	91
(A17) Adapter, Fieldmaster sensor signals	154	F30 10A CareTel	120
B4 0	40	(F51) 15 A, Main switch, control, in engine compartr	m. 168
B1 Sensor, engine temperature B2 Sensor, fuel gauge	16 17	O4 Ballani	
B2 Sensor, fuel gauge (B3) Sensor, gearbox temperature	102	G1 Battery G2 Alternator	1 110
(B4) Sensor, Sigma, crankshaft	114	G2 Allemator	4, 118
(B5) Sensor, Sigma, PTO	114	H1 Indicator light, direction indicator III	34
(B6) Velocity sensor, gearbox	81D, 102, 153	H2 Indicator light, direction indicator II	34
(B7) Velocity sensor, PTO	102, 117, 153	H3 Indicator light, direction indicator I	34
(B8) Sender, wheel speed	, ,	H4 Indicator light, air filter	7
(B9) Sensor, tachograph	93	H5 Indicator light, engine oil pressure	8
(B10) Speed radar	81D, 157	H6 Warning light, stop, engine temp.	15
		H7 Indicator light, gearbox oil press.	9
E1 Headlights, right	26	(H8) Indicator light, oil filter, gearbox	10
E2 Headlights, left	25	H9 Indicator light, 4WD	65
E3 Front direction indicator, right	31	H10 Indicator light PTO	67
E4 Front direction indicator, left E5 Rear light, right	28 33	H11 Indicator light, parking brake	12
E6 Rear light, left	32	H12 Indicator light, Thermostart	6 27
E7 Cab light	46	H14 Indicator light, main beams H15 Indicator light, fuel reserve	16
E9 Rear working light, right outer	42	H16 Indicator light, charging	6
E10 Rear working right, right inner	42	H17 Indicator light, Sigma	111
E11 Rear working light, left outer	41	H18 Indicator light, gearb. oil temp.	13
E12 Rear working light, left inner	41	H19 Indicator light DPS I	71
E13 Front working light, right	44	H20 Indicator light, diff. lock	63
E14 Front working light, left	44	H21 Indicator light DPS II	71
E15 Instrument lights E16 Roof console lights	17 21	H22 Indicator light DPS III	71
(E17) Seat heater	21 94	H23 Horn	50 47
(E19) Fog light, rear	35	(H24) Rotating roof light (H27) Reverse Buzzer	96
(E20) Parking light, right, Norway	29	(H28)Indicator light, STOP, rear	30
(E21) Parking light, left, Norway	30	(1125) maisaist light, GTGT, TGG	
(E22) Register plate light	32	K1 Relay, front working lights	43
(E23) Upper head light, right	24	K2 Relay, rear working lights	41
(E24) Upper head light, left	23	(K3) Relay, fog light, rear	35
(E25) Parking light, upper, right	22	K4 Auxiliary relay, starter switch	7
(E26) Parking light, upper, left	22	K5 Auxiliary relay, starter switch	9
(E27) Working light, side (E28) Working light, side		K6 Relay, fan III K7 Control relay, 4-wheel brake	56 70
		K9 Relay, interval wiper	53
Fuses		K10 Direction indicator relay	34
F1 15A Hazard blinkers, water pump	31, 97	K11 Relay, brake lights/differential lock	64
F2 5A Radio, clock, tachograph, CareTel	2, 120	K13 Control relay, differential lock	65
F3 15A High beam	25	K14 Starter motor relay	4
F4 15A Low beam	25	K15 Control relay, 4-wheel drive	69
F5 10 A Parking lights, left F6 10 A Parking lights, right	28	K16 Relay, PTO – emergency stop	68
F6 10 A Parking lights, right F7 10A Front working lights	30 44	(K18) Relay, control stop	8
F8 25A Light switch	28	(K24) Control relay, HiShift	115
F9 15A Trailer socket/fog light, rear	35, 165	K25 Control relay, upper head lights to working	
F10 25A 3-pin current socket	100	lights K26 Control roley speed limit HiShift	
F11 5A Autocontrol (+Bat), buzzer	71, 82B, 82D	K26 Control relay, speed limit, HiShift K27 Control relay, 4WD on/off	68
F12 10A Rot. warning light, cabin light	47	(K51) Warning light, main current switch	166
F13 10A Reserve	100	(· · · ·) · · · · · · · · · · · · · · ·	.00
F14 15A Starter switch, thermostart	4		
F15 25A Fan III – speed	56		
F16 10A Rear working lights, inner	42		

		Model	Code	Page
31. Tractor electrical system	1. 8. 2000	6200-8750	310	80

			Sym-	Code
Sym		Code	bol Component	no
bol	Component	no	V1 Diodos V1 V2 V2 V4 V6	
М1	Starter motor	3, 167	V1 Diodes Y1, Y2, Y3, Y4, Y6 V2 Diodes, AC-2	
	Fan	55	V3 Diodes Y1, Y2, Y3, Y4, Y6	65
	Windscreen wiper	53	(V5) Diodes, HiShift	115
	Windscreen washer	51		
(M5)	Rear window wiper	49	Ground leads	
	Rear window washer	48		
	Floor fan	57	GR1 Rear lights, solenoid valves	
	Water pump	97	GR2 Roof GR4 Autocontrol	
(IVI9)	Roof window wiper		GR5 Cable harness, instr. panel	
P1	Engine temperature meter	16	GR7 Battery	
P2	Fuel gauge	17	GR8 Headlights	
P3	Tachometer	18	GR9 Cabin	
P4	Running hour meter/AC (Sigma)	19	GR10 Electrical stop	
(P4	Running hour /speed meter (AD instrumer	ntation)) 19		
(P5)	Clock, PTO-speed, AC, trip, oil temperatu		X1 9 pin, distribution box	
	ta-instrumentation)	101	X2 9 pin, distribution box	
			X3 9 pin, distribution box	
Q1	Heat/starter switch	4	X4 9 pin, distribution box	
(Q2)	Main switch	3, (167)	X5 9 pin, distribution box	
D4	Thermestert	-	X6 9 pin, distribution box X7 9 pin, distribution box	
R1	Thermostart	5	(X8) 2 pin, power socket	92
R4 R7	Cigarette lighter Potentiometer, front PTO, starting speed	91 161	X9 9 pin, combination control	34
П	Fotentionneter, from FTO, starting speed	101	X10 9 pin, combination control	
S1	Switch, head lights	28	X11 9 pin, upwards	
S2	Switch, rear working lights	41	X12 9 pin, rearwards, right	
S3	Switch, fan	55	X13 37 pin, transmission	
S4	Combined switch	25, 34, 52	X14 9 pin, rearwards, left	
S5	Switch, front working lights	43	(X15) 3 pin, air cond., diodes	54
(S6)	Switch, rot. warning light	47	X17 7 pin, trailer socket	32
S7	Switch, hazard warning flashers	32	(X18) 2 pin, rear window washer	48
	Switch, air conditioner	54	X19 37 pin, front wall	
S9	•	66	X20 9 pin, front direction indicator	4-
	Switch, braking lights, right	72	(X22) 2 pin, rot. roof light X23 3 pin, DPS, extra switches	47 7
	Fuel gauge sender unit Pressure drop indicator, air filter	17 7	X24 9 pin, upwards	,
	Engine oil press. sender unit	8, 118	X26 26 pin, instrument left, white	
	Sender unit to parking brake ind. light	12	X27 26 pin, instr. right, blue	
	Reed relay, parking brake (P)	149	(X29) 2 pin, STOP-alarm (max. 2 W)	
	Gearbox temperature sender unit	13	X30 9 pin, switches gear levers	
S17	Gearbox oil pressure sender unit	9, 119	X31 2 pin, PTO – emerg. stop	74
S18	Engine temperature sender unit (stop)	16	(X32) 1 – pin, electric stop	5
	Switch, compressor pressure	54	(X33) 3 pin, fog light, rear	
	Switch braking lights, left	73	(X35) 9 – pin, Sigma supply	
	Switch, differential lock	62	(X36) 3 pin, HiShift, speed – limit+ supply	
	Switch, DPS, selector	139, 140	(X41) 2 pin, front PTO (X42) 4 pin, front PTO, supply	
	Switch, DPS disengagement Switch, PTO	69 75	(X43) 8 pins, RS – 232 canal	
) Switch, fog light rear	75 35	(X45) 9 pin, Fieldmaster, extra equipment	
) Switch, reverse buzzer	96	(X46) 7 pins, Fieldmaster socket	
	Switch, PTO 540	68	(X47) 2 pins, GPS supply, Fieldmaster	
	Switch, PTO 1000/540E	67	(X48) 3 pins, radar, Fieldmaster	
	Switch, 4WD	68	(X49) 2 pin, seat	
	Switch, floor fan	57	(X50) 3 pin current socket	
	Switch, rear window wiper and washer	48	(X55) 1 pin, Fieldmaster	
•	Change over switch, head lights up	23		
) Switch, water pump	97	V1 Colonaid value diff leads	-
	Switch, rear steering prevention	94	Y1 Solenoid valve, diff lock Y2 Solenoid valve, PTO	60 68
) Switch, control stop	4 11	Y3 Solenoid valve, 4WD	66
) Indicator light switch, filter 180 bar) Switch, HiShift		(Y4) Solenoid valve, DPS	69
•	.1) Extra switch, HiShift	115, 142 115	(Y5) Magnetic switch, compressor, air conditioner	54
`	Change over switch, rpm/flow sensor	110	(Y6) Solenoid valve, DPS	70
	Change over switch, speed sensor, tractor	/implement	(Y7) Solenoid valve, rear steering prevention	9
) Indicator light switch, filter, return	10	(Y8) Solenoid, engine running	-
•	Indicator light switch, filter, 18 bar	11	(Y9) Magnetic clutch, front-PTO	16
) Switch, roof window washer	49	(Y13) Solenoid valve, Sigma	113
	Switch, PTO display, front/rear	163	(Y14) Solenoid valve, HiShift	115
	Switch, main currect switch control	168	(Y15) Solenoid valve, HiShift, slowing	115
			(Y16) Solenoid, cold cranking	3

		Model	Code	Page
31. Tractor electrical system	1. 8. 2000	6200-8750	310	81

		Sym-	Code
Sym-	Code	bole Component	no.
bol Component	no	C7E Switch Jowering anded	00D 00D
		S7E Switch, lowering speed S8E Switch, transport height	83B, 83D 83B, 83D
CareTel, information collecting system		S9E Switch, draft control	83B, 83D
A1L CareTel, data logger	118	S10E Autocontrol – Switch, lift/stop/lower	83B, 83D
7.1.2		S11E Switch, forced lowering	83B, 83D
B1L Pressure sensor, CareTel, 18 Bar	117	S12E Switch, oscillation damping / slip control	83B, 83D
(B2L) Pressure sensor, CareTel, 190 Bar	116	o izz o mien, ocomanon damping / onp ocimen	002, 002
B3L Sensor, gearbox temperature	117	X1E Connector, 9 pins, speed sensors (ACD)	
B4L Temperature sensor, engine	118	X2E Connector, 15 pins, supply & rear buttons (+imple-
		ment position sensors)	
H1L Indicator light, CareTel	120		
		Y1E Solenoid valve, lowering	82B, 82D
X1L Connector housing, 9 pin, CareTel,		Y2E Solenoid valve, lifting	82B, 82D
RS-232	117-120	, ,	·
X2L Connector housing, 3-pin, CareTel, CAN	117-120		
X3L Connector housing, 9 pin, CareTel,		Wine colours	
extra equipment	117-120	Wire colours	
X4L Connector housing, 3 pin, CareTel, supply+	447 400	RU = braun	
NBUS	117-120	PU= red	
		KE = yellow	
		SI = blue	
		MU = black	
ACB/ACD Autocontrol power lift:		VI = green	
•		VA = white	
A1E Autocontrol control unit	82B, 82D	HA = grey	
A2E Autocontrol, circuit card	85B, 83D	LI = lilac	
DAE Desilies and a	040 040	Li – iliac	
B1E Position sensor	81B, 81D		
B2E Draft sensor, right B3E Draft sensor, left	81B, 81D 81B, 81D		
(B4E) Position sensor, implement (ACD)	81D		
(D4E) Position Sensoi, implement (ACD)	010		
E1E Illumination, circuit card	83B. 83D		
E2E Illumination, position potentiometer	83B, 83D		
LZE marmination, position potentionneter	00D, 00D		
R1E Potentiometer, position control	83B, 83D		
1112 1 sterillorifotor, position control	335, 335		
S1E Button, rear mudguard, lift, right	81B, 81D		
S2E Button, rear mudguard, lowering, right	81B, 81D		
S3E Button, rear mudguard, lift, left	81B, 81D		
S4E Button, rear mudguard, lowering, left	81B, 81D		
S5E Switch, in cabin, nift/lower	82B, 82D		
	•		




31. Tractor electrical system

1. 9. 2002


Model **6200-8750**


Code **310**


Page 83

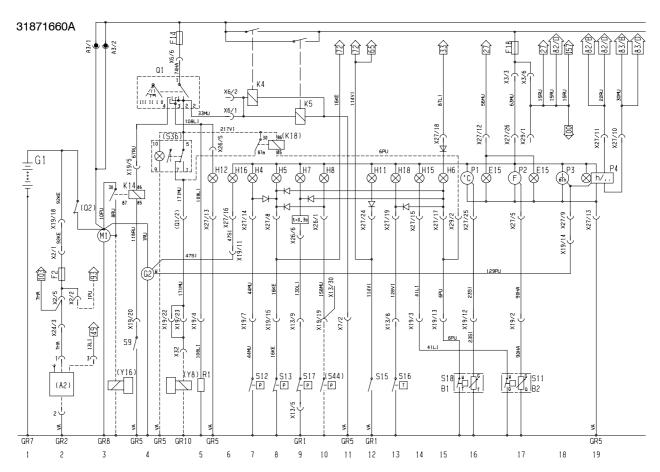

AC 2.3 1

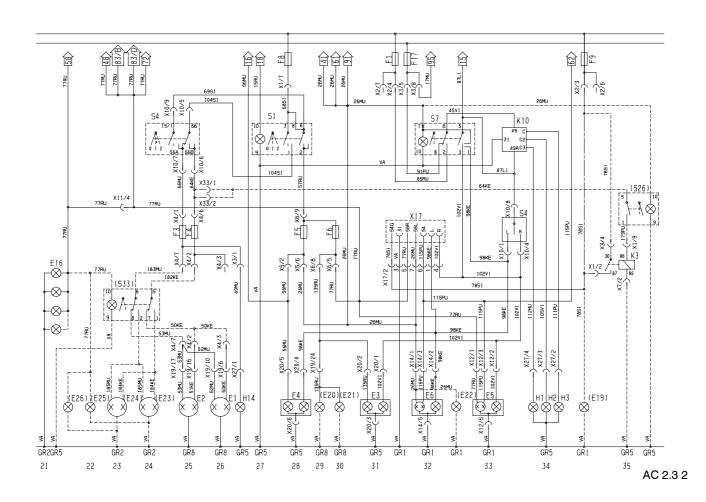


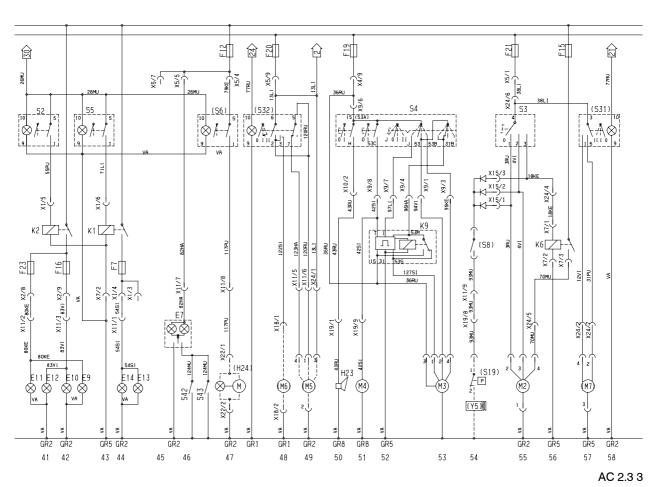


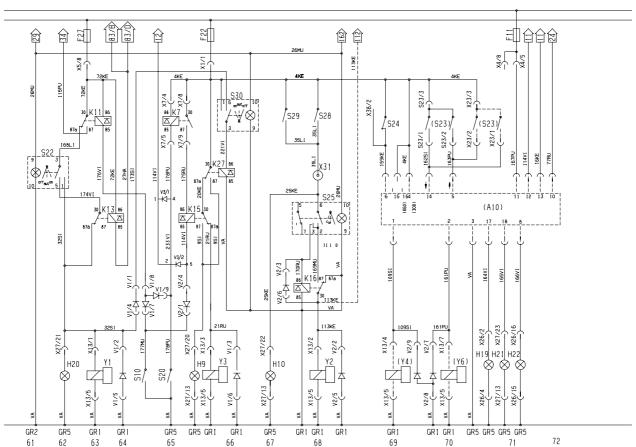



6200-8750

Code 310

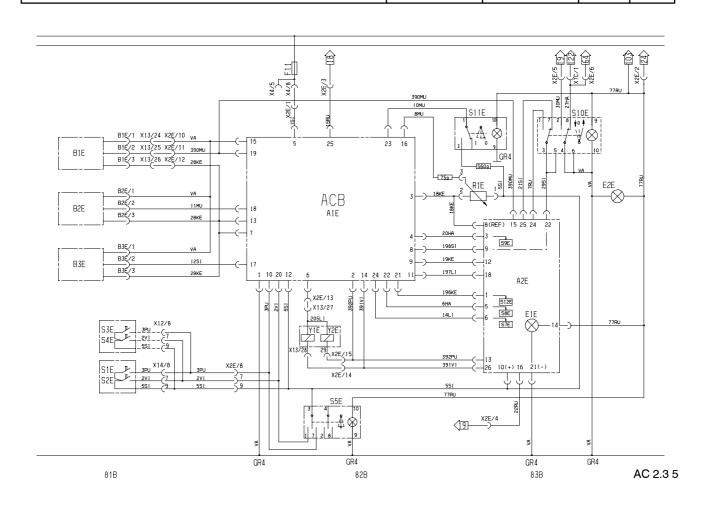

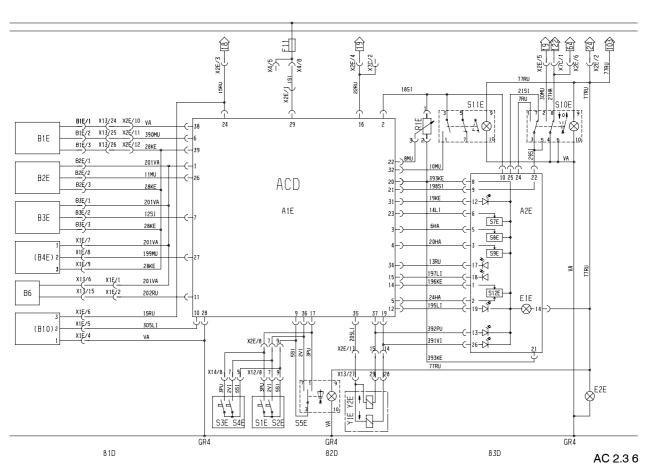


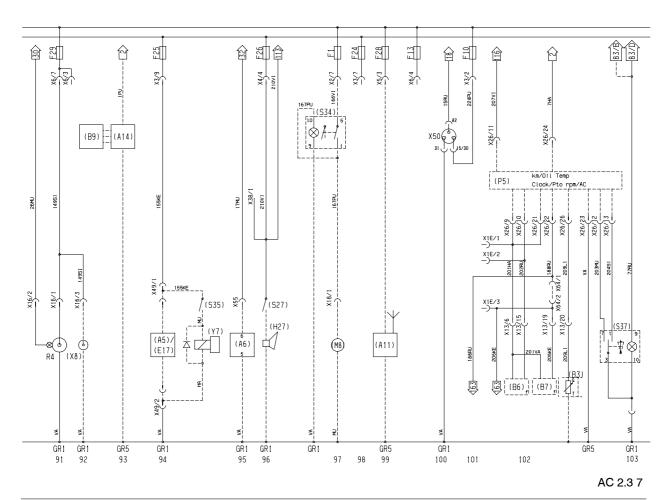

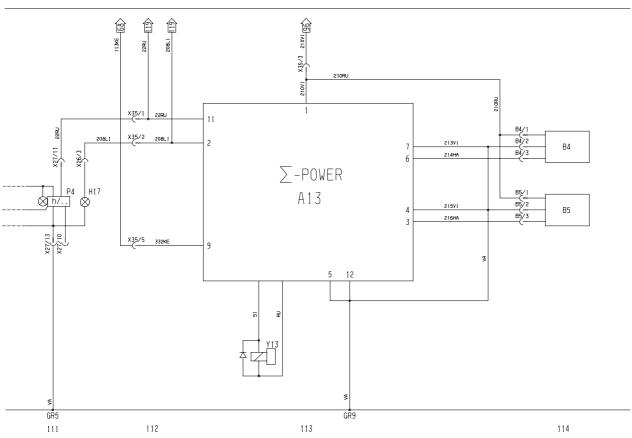


6200-8750

Code **310** Page **87**

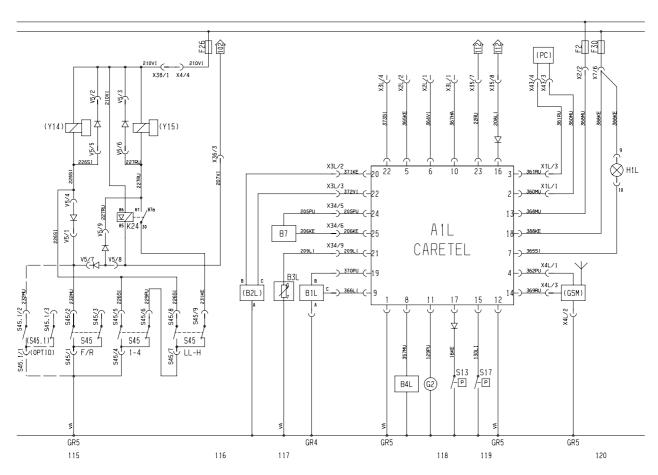


AC 2.3 9

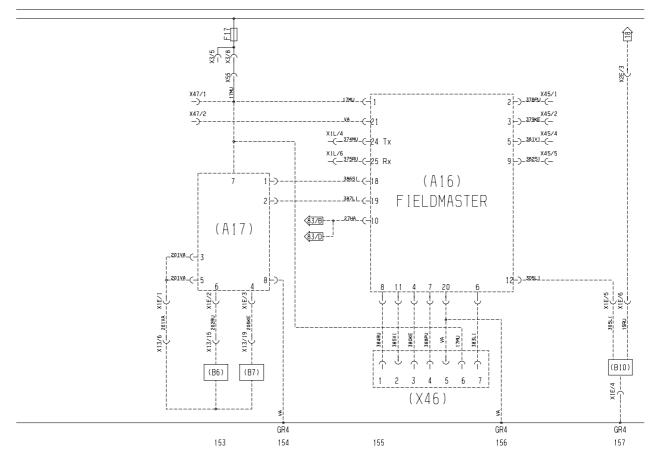

04	Tuestan	-141	
31.	iractor	electrical	system

Model 1. 8. 2000 6200-8750 Code **310**

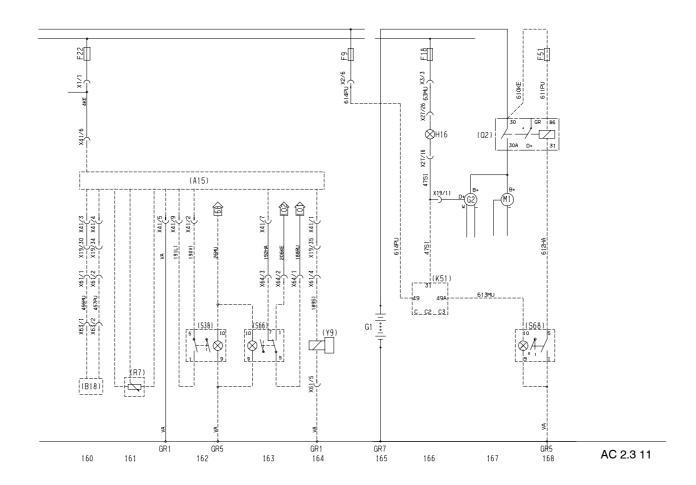

Wiring diagram, HiTech, Diagram no. 33563520A. Diagram incl. e.		Sym bol	- Component	Code no
ment. Diagrams on pages 310/93-100.		26		
Sym-	Code	Fuse		04 07
bol Component	no	F1	15A Hazard blinkers, water pump	31, 97
Boi Component		F2 F3	5A Radio, clock, tachograph, CareTel 15A High beam	2, 120 25
(A2) Radio	2		15A Low beam	25 25
A3 Electric centre			10A Parking lights, left	29
(A5) Air suspension seat	94		10A Parking lights, right	30
(A6) Agrodata	95	F7	25A Front working lights	44, 201
(A11) Telephone	99	F8	25A Light switch	28
(A13) Control unit, Sigma	113		15A Trailer socket/fog light, rear	35, 187
(A14) Tachograph (A15) Control unit, front PTO	93 181		25A 3-pin current socket	96
(A16) Fieldmaster	155		5A Autocontrol	83B, 83D
(A17) Adapter, Fieldmaster sensor signals			10A Rot. warning light, cabin light, radio	47
(xxx) xuaptoi, riciamactor concer signal	101		10A Reserve	100
B1 Sensor, engine temperature gauge	16		15A Starter switch, thermostart 25A Fan III – speed	4 56
B2 Sensor, fuel gauge	17		10A Rear working lights, inner	42
(B3) Temperature sensor, gearbox	102		10A Direction indicators, Fieldmaster	32, 154
(B4) Sensor, Sigma, crankshaft	114		5A Instruments, warning lights, Autocontrol	
(B5) Sensor, Sigma, PTO	114		10A Windscreen wiper/washer, horn	51
	81D, 102, 128, 153		10A Rear window wiper/washer, radio	48
(B7) Velocity sensor, PTO	102, 116, 123	F21	15A Fan I, II, air conditioner, floor fan	55
(B9) Sensor, tachograph	93 84D 457		10A Sensors HiTech, 4WD	70, 181
(B10) Speed radar B11 Velocity sensor, engine	81D, 157 127		10A Rear working lights, outer	41
B12 Sensor, F/R power shuttle	124		10A AC5, seat direction	126, 164
B13 Sensor, F/R	125	F25	15A Air suspension seat/seat heating, rear s	-
B14 Temperature sensor, gearbox	139	Ege	prevention 10A Back buzzer, Sigma, HiShift	94
B15 Angle sensor, accelerator pedal	140		10A Back buzzer, Signia, Hishiit 10A Braking lights, differential lock	113 64
B16 Angle sensor, clutch pedal	137		10A Telephone, 2A if HF*	99
B17 Temperature sensor, outdoors	141		10A Cigarette lighter, 2-pin current socket	91
B18 Sensor, front PTO -speed	182		10A CareTel, 1A if HF*	120
-			25A Electric stop solenoid, 8950Hi	
E1 Headlights, right	26	(F51)	15A Main switch control, in engine room	197
E2 Headlights, left E3 Front direction indicator, right	25			
E3 Front direction indicator, right E4 Front direction indicator, left	31 28		If Hands Free is fitted	
E5 Rear light, right	33	04	Dattace	
E6 Rear light, left	32	G1	Battery Alternator	1 4, 118
E7 Cab light	46	G2	Alternator	4, 110
E9 Rear working light, right outer	42	H1	Indicator light, direction indicator trailer II	34
E10 Rear working light, right inner	42		Indicator light, direction indicator trailer I	34
E11 Rear working light, left outer	41		Indicator light, air filter	7
E12 Rear working light, left inner	41		Indicator light, engine oil pressure	8
E13 Front working light, right	44	H6	Warning light, stop, engine temperature, pa	rking
E14 Front working light, left E15 Instrument lights	44 17		brake cable	15
E16 Roof console lights	21	H7	Indicator light, gearbox oil press.	9
(E17) Seat heater	94		Indicator light, gearbox oil filter	10
(E19) Fog light, rear	35		Indicator light, 4WD Indicator light PTO	69 132
(E20) Parking light, right, Norway	29		Indicator light, parking brake	132
(E21) Parking light, left, Norway	30		Indicator light, Thermostart	6
(E22) Register plate light	32		Indicator light, main beams	27
(E23) Upper head light, right	24		Indicator light, fuel reserve	16
(E24) Upper head light, left	23	H16	Indicator light, charging	6
(E25) Parking light, upper, right	22	H17	Indicator light, Sigma	111
(E26) Parking light, upper, left	22		Indicator light, gearb. oil temp.	13
(E27) Working light, side (E28) Working light, side			Indicator light, diff. lock	63
(E45) Step light	46		Horn	50
(E46) Trailer hitch light	205) Rotating roof light	47 148
(E47) Extra front working light, right	201)Reverse Buzzer)Indicator light, Stop, rear	148
(E48) Extra front working light, left	203		Indicator light, Stop, real Indicator light, direction indicator,	
		ζ	left instrumentation	34
		(H32	Indicator light, direction indicator, right	
		·	instrumentation	34
		(H33	Indicator light front PTO, instrumentation	12

			<u> </u>	
			Sym-	Code
Sym	_	Code	bol Component	no
	Component	no	•	
	·		S18 Engine temperature sender unit (stop)	16
K1	Relay, front working lights	43	(S19) Switch, compressor pressure	54
K2	Relay, rear working lights	41	S20 Switch braking lights, left	73
	Relay, fog light, rear	35	S22 Switch, differential lock	61
	Auxiliary relay, starter switch	7		139, 140
K5	Auxiliary relay, starter switch	9	S25 Switch, PTO	75
K6	Relay, fan III	56	(\$26) Switch, fog light rear	35
K7	Control relay, 4 – wheel brake	71	(S27) Switch, reverse buzzer	1.10
K9	Relay, interval wiper	52	S28 Switch, PTO 540	146
	Direction indicator relay	34	S29 Switch, PTO 1000/540E	147
	Relay, brake lights/differential lock	64	S30 Switch, 4WD	68 57
	Control relay, differential lock	65	S31 Switch, floor fan	
	Starter motor relay	4 70	(S32) Switch, rear window wiper and washer	48
	Control relay, 4—wheel drive	70	(S33) Change over switch, head lights up	23 97
	Relay, electric stop solenoid, 8950Hi	0	(S34) Switch, water pump (S35) Switch, rear steering prevention	94
	Relay, control stop	8 abto		4
	Control relay, upper head lights to working lights.	griis 68	(S36) Switch, control stop S37 Switch, Agroline instrumentation, cursor+pro	
	Control relay, 4WD on/off Relay, back buzzer		(S38) Switch, front-PTO	183
	Neidy, back buzzei Warning light, main switch	147 191	S40 Reed relay, direction forward (F)	146
	Auxiliary relay, start allowed	66	S41 Reed relay, direction reverse (R)	149
	Time – delay relay, cab light	46	S42 Door switch, cab light, RH	46
NOU	rime—delay relay, cab light	40	S43 Door switch, cab light, LH	46
М1	Starter motor	3	(S44) Indicator light switch, filter 180 bar	11
M2		55	S45 Switches, HiShift	142
	Windscreen wiper	53	(S45.1) Extra switch, HiShift	
	Windscreen washer	51	S47 Switch, DPS, man./auto	144
	Rear window wiper	49	S51 Switch, DPS – preselection	146
	Rear window washer	48	S52 Indicator light switch, parking brake cable	14
	Floor fan	57	S53 Indicator light switch, filter, return	10
	Water pump	97	(S54) Indicator light switch, filter, 18 bar	11
٠,	Roof window wiper	50	(S59) Switch, roof window washer	49
()			S60 Safety switch, seat	142
P1	Engine temperature meter	16	(S68) Switch, main switch control	196
P2	Fuel gauge	17	S76 Traction control on/off	161
P3	Tachometer	18	S80 Switch, instrumentation, display size setting	103
P4	Running hour meter	19, 111	S83 Switch, trailer hitch light	204
P5	Clock, PTO-speed, AC, trip, oil temperature	,	S84 Switch, extra front working lights	200
	speed, (Sigma) (Agroline instrumentation)	102		
P6	Display, AC5	133	V1 Diodes Y1, Y2, Y3, Y4, Y6	
			Ground leads	
Q1	Heat/starter switch	4	Ground leads	
(Q2)	Main switch	3, 196	GR1 Rear lights, solenoid valves	
			GR2 Roof	
R1	Thermostart	5	GR4 Autocontrol	
R4	Cigarette lighter	91	GR5 Cable harness, instr. panel	
R7	Potentiometer, front PTO, starting speed	184	GR7 Battery	
			GR8 Headlights	
S1	Switch, head lights	28	GR9 Cabin	
S2	Switch, rear working lights	41	GR10 Electrical stop	
S3	Switch, fan	55	V. 6	
S4		25,34, 52	X1 9 pin, distribution box	
S5	Switch, front working lights	43	X2 9 pin, distribution box	
	Switch, rot. warning light	47	X3 9 pin, distribution box	
S7	Switch, hazard warning flashers	32	X4 9 pin, distribution box	
	Switch, air conditioner	54	X5 9 pin, distribution box	
S9	Starter safety switch	142	X6 9 pin, distribution box	
010	Switch, braking lights, right Fuel gauge sender unit	72 17	X7 9 pin, distribution box	00
	Pressure drop indicator, air filter	7	(X8) 2 pin, current socket X9 9 pin, combination control	92
	Engine oil press. sender unit	8, 118	X10 9 pin, combination control	
	Reed relay, parking brake (P)	o, 116 149	X10 9 pin, combination control X11 9 pin, upwards	
	Gearbox temperature sender unit	149	X11 9 pin, upwards X12 9 pin, rearwards, right	
	Gearbox temperature sender unit	9, 119	X12 9 pm, rearwards, right X13 37 pin, transmission	
317	GOLIDON OII PIESSUIE SEIIUEI UIIIL	ع, ۱۱ ۵	X13 9 pin, rearwards, left	
			(X15) 3 pin, air cond., diodes	54
			X17 7 pin, trailer socket	32
			,	02

		Model	Code	Page
31. Tractor electrical system	1. 9. 2002	6250-8950	310	91

Sym- bol Component	Code no	Sym- bol Component	Code no
·		ACB/ACD Autocontrol power lift:	
(X18) 2 pin, rear window washer	48		000 000
X19 37 pin, engine		A1E Autocontrol electronic unit	82B, 82D
X20 9 pin, front direction indicator (X22) 2 pin, rot. roof light	47	A2E Autocontrol, switch panel	85B, 85D
X23 3 pin, Delta Power Shift, extra switches	47	B1E Position sensor	81B, 81D
X24 9 pin, upwards		B2E Draft sensor, r.h	81B, 81D
X26 26 pin, instrument left, white		B3E Draft sensor, I.h	81B, 81D
X27 26 pin, instrument right, blue		(B4E) Position sensor, implement (ACD)	81D
X28 9 pin, sensors power shuttle			
(X29) 2 pin, STOP—alarm (max. 2 W)		E1E Lightning switch panel	85B, 85D
X30 9 pin, switches gear levers X31 2 pin, socket, PTO – emerg. stop	75	E2E Lightning, position potentiometer	86B, 86D
(X32) 1 pin, electric stop	75 5	R1E Potentiometer, pos .control	85B, 85D
(X33) 3 pin, fog light, rear	J	TTE T Clothad Motor, poor loomad	002, 002
X35 9 pin, SIGMA supply		S1E Switch, rear operation, r.h., lifting	81B, 83D
X39 9 pin, direction lever		S2E Switch, rear operation, r.h., lowering	81B, 83D
(X41) 2 pin, front PTO		S3E Switch, rear operation, l.h., lifting	81B, 82D
(X42) 4 pin, front PTO, supply	454	S4E Switch, rear drive, I.h., lowering	81B, 82D
X43 8 pin, RS – 232 bus (X45) 9 pin, Fieldmaster, extra equipment	151	S5E Switch, cabin, lifting/lowering S7E Switch, lowering speed	83B, 83D 85B, 85D
(X46) 7 pin, Fieldmaster, current socket	155	S8E Switch, top limit	85B, 85D
(X47) 2 pin, GPS – supply, Fieldmaster	100	S9E Switch, mixing	85B, 85D
(X48) 3 pin, radar, Fieldmaster		S10E Switch, lifting/lowering	85B, 86D
X49 2 pin, seat	94	S11E Switch, forced lowering	85B, 85D
(X50) 3 pin current socket	96	S12E Switch, Drive Balance Control/Slip	85B, 85D
(X55) 1 pin, Fieldmaster	95	V4E 0	1.OD)
X64 2-speed., front PTO speed signal	102	X1E Connector housing, 9 pin, speed sensors (X2E Connector housing, 15 pin., supply & rear	
Y1 Solenoid valve, differential lock	64	buttons (+implement position sensor)	pusii
Y2 Solenoid valve, PTO	133	Sallerie (Timplement peetier eeneer)	
Y3 Solenoid valve, 4WD	71	Y1E Solenoid valve, lowering	83B, 84D
Y4 Solenoid valve, Delta Power Shift	133	Y2E Solenoid valve, lifting	83B, 84D
(Y5) Magnetic clutch, compressor, air conditioner	54	CareTel, information collecting system	
Y6 Solenoid valve, Delta Power Shift	134 94		118
(Y7) Solenoid valve, rear steering preventionY8 Solenoid, engine running	4	(A1L) CareTel, data logger	110
(Y9) Magnetic clutch, front – PTO	77	(B1L) Pressure sensor, CareTel, 18 Bar	117
Y11 Solenoid, forward	131	(B2L) Pressure sensor, CareTel, 190 Bar	116
Y12 Solenoid, reverse	132	(B3L) Sensor, gearbox temperature	117
(Y13) Solenoid valve, Sigma	113	(B4L) Temperature sensor, engine	118
(Y16) Solenoid, cold cranking	3	(H11) Indicator light CoroTol	100
Y17 Solenoid valve, Delta Power Shift Y18 Solenoid, parking brake	134 67	(H1L)Indicator light, CareTel	120
•	O/	(X1L) Connector housing, 9 pins, CareTel,	
AC5 - Control system, HiTech		RS-232	117-120
A1A Control unit, AC5	122–152	(X2L) Connector housing, 3 pins, CareTel, CAN (X3L) Connector housing, 9 pins, CareTel,	117–120
S1A Switch, PTO rear start, left	74	extra equipment	117-120
S2A Switch, PTO rear start, right	74	(X4L) Connector housing, 3 pins, CareTel, supply+NBUS	117-120
G/ 1 / G	140–141	Wire colours	
TwinTrac reverse drive controls		RU = brown	
(B1W) Angle sensor, clutch pedal	171	PU = red	
(S1W) Switch, DPS-extra	173	KE = yellow	
(S2W) Limit switch, clutch pedal	162	SI = blue	
(S3W) Limit switch, seat direction	163	MU = black	
(S4W) Switch, DPS-preselection, rear (S5W) Reed relay, direction front (F), rear	165 166	VI = green	
(S6W) Reed relay, direction from (F), rear	167	VA = white	
(S7W) Reed – relay, parking brake, rear	168	HA = grey	
(S9W) Switch, brake pedal, rear right	169	LI = lilac	
(X1W) Connector housing 12-pin, TwinTrac		Explanations of the abbreviation	
(X2W) Connector housing 1 – pin., supply (P1W)		F/R = forward/reverse power shuttle	
(X3W) Connector housing 9-pin., direction lever, re	ear 128	PTO = power take off	
P1W Rear display, AC5	1∠0	AC = Autocontrol linkage	
		AC5 = Autocontrol 5 control system	
		DPS = Delta Power Shift	


		Model	Code	Page
31. Tractor electrical system	1. 9. 2002	6250-8950	310	92


31. Tractor electrical system

1. 9. 2002

Model **6250-8950**

Code **310**

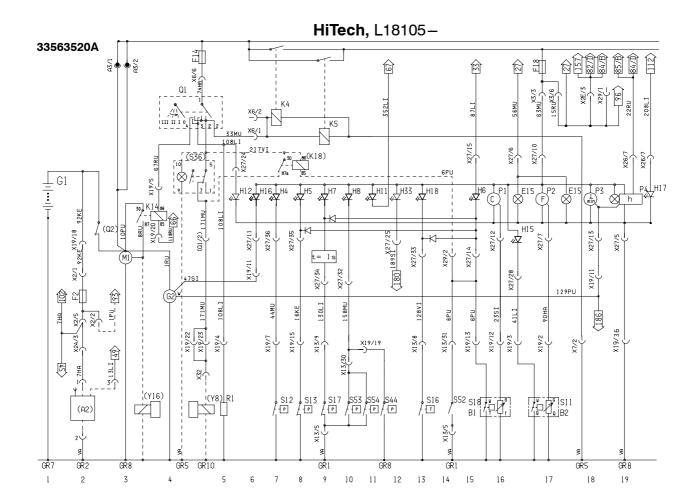

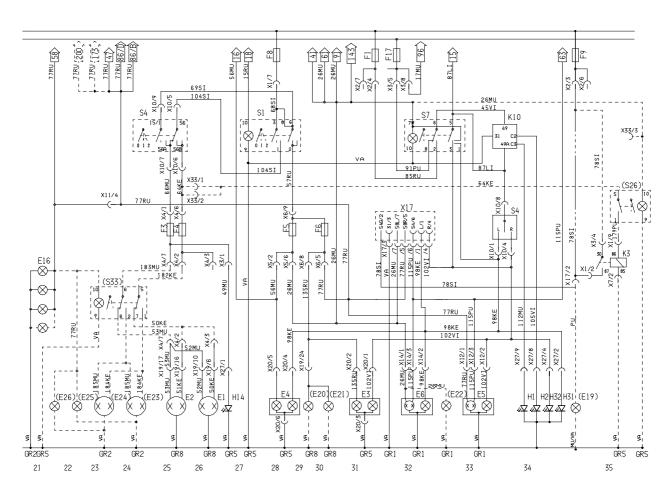


1. 9. 2002


Model **6250-8950**

Code **310**

Page **94**


HiTech, L18105-

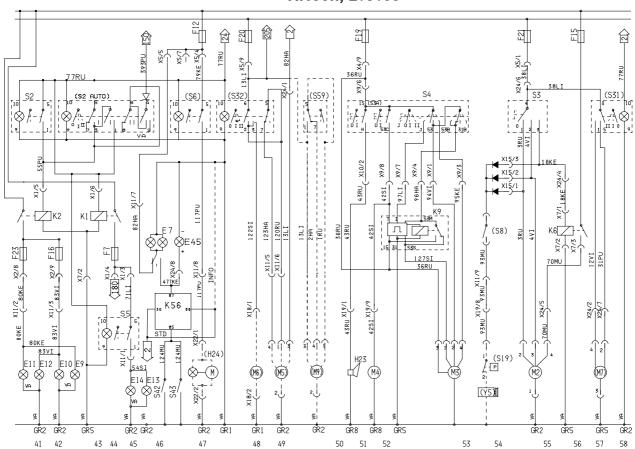


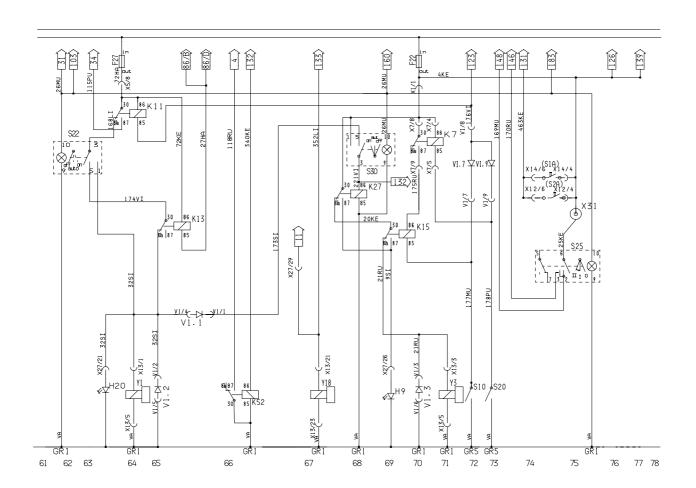

Code **310**


HiTech, L18105-

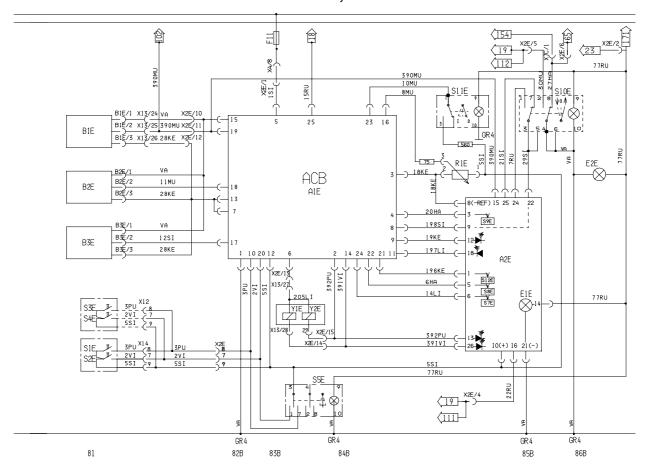


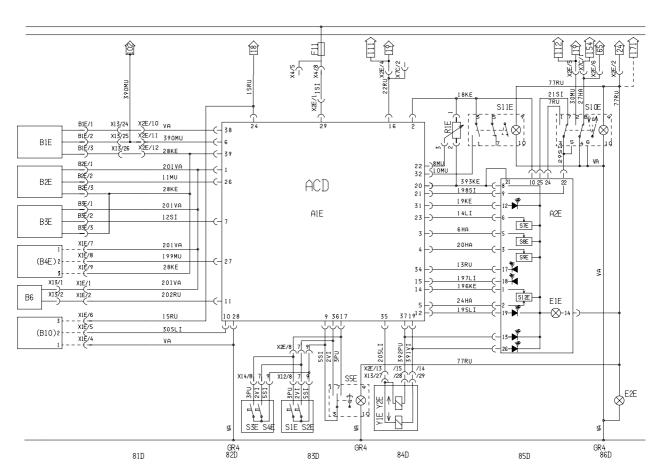

Page **96**

HiTech, L18105-

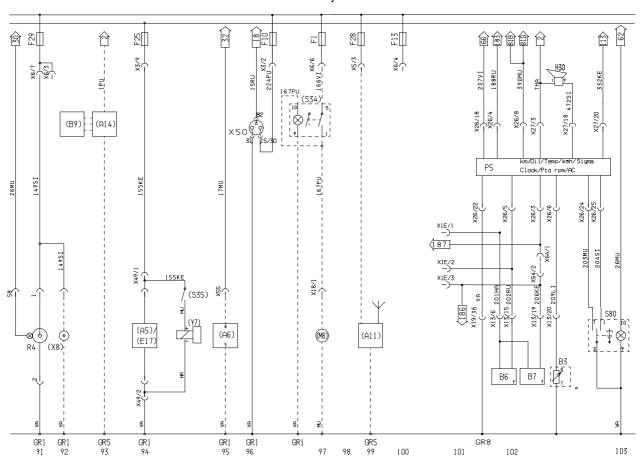


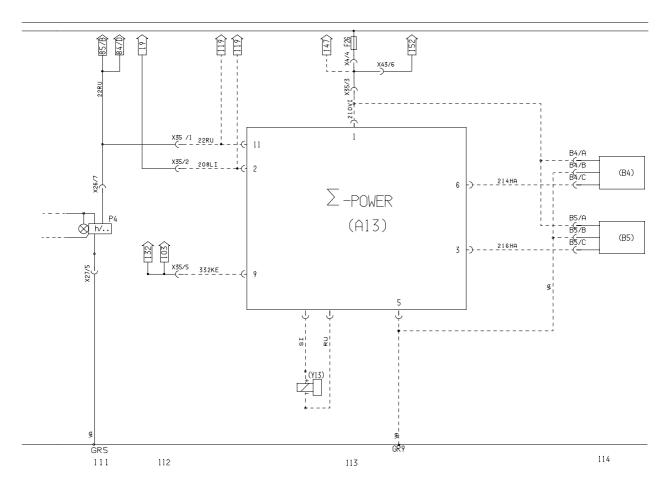


1. 9. 2002

Model **6250-8950** Code **310** Page **97**

HiTech, L18105-

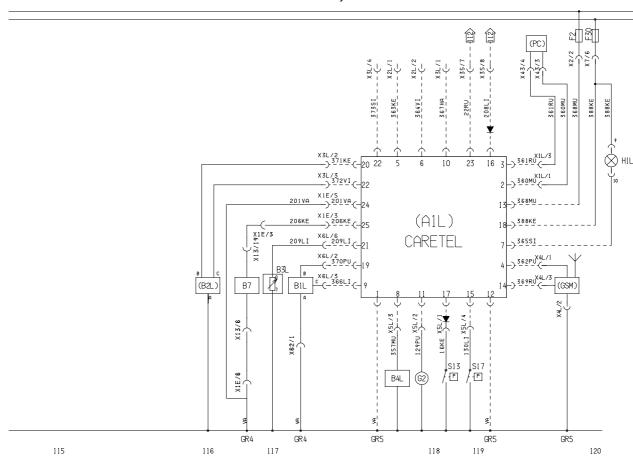

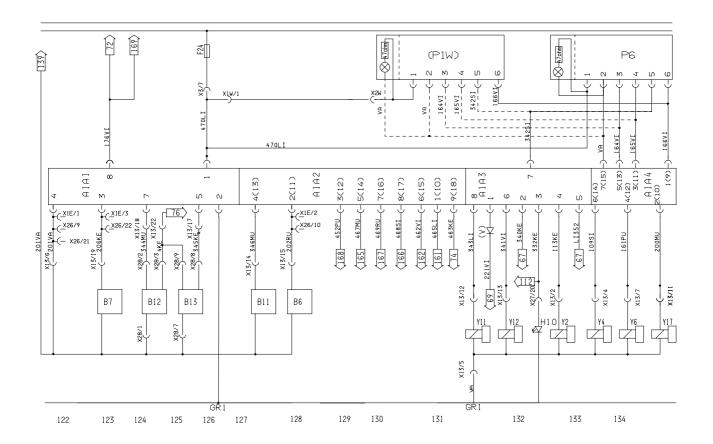



Model **6250-8950**

Code **310**

Page **98**

HiTech, L18105-

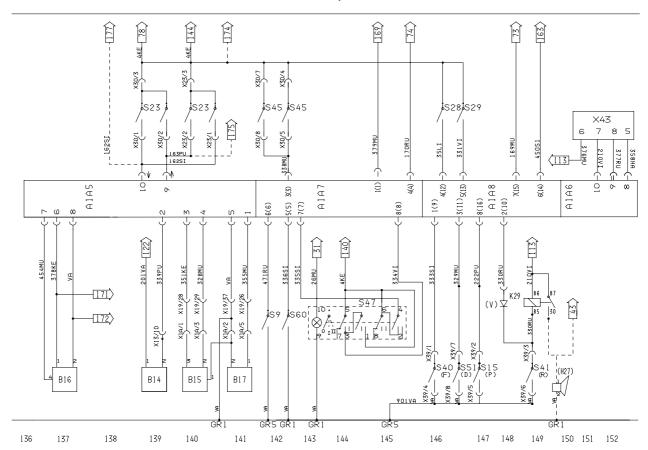

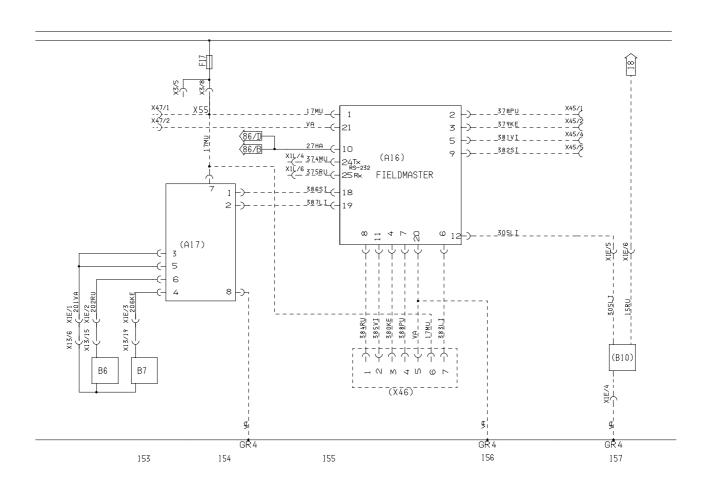



Model **6250-8950**

Code **310**

Page **99**


HiTech, L18105-

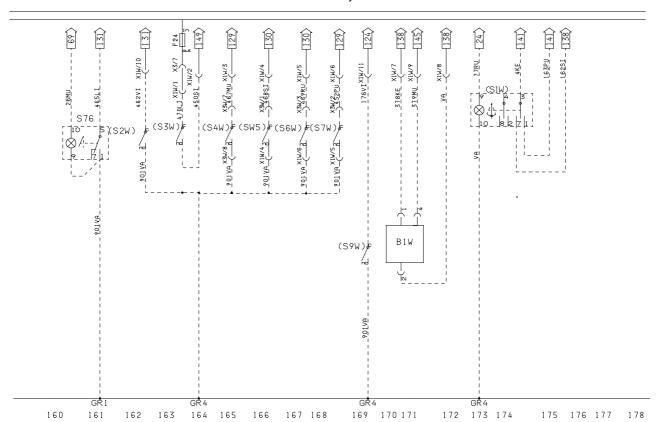

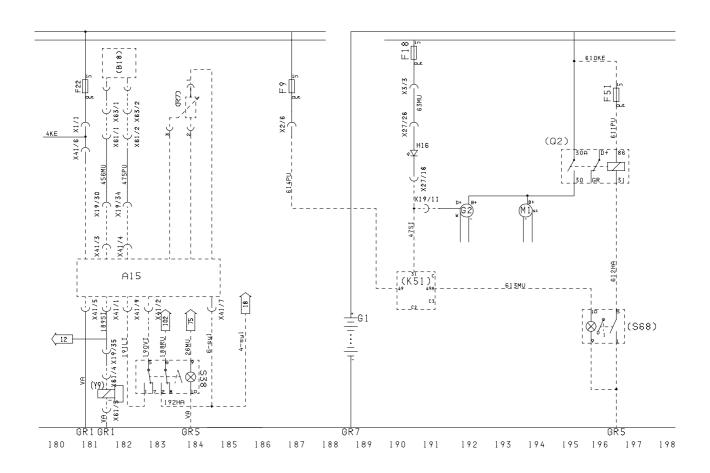

		Model	Code	Page
31. Tractor electrical system	1. 9. 2002	6250-8950	310	100

HiTech, L18105-

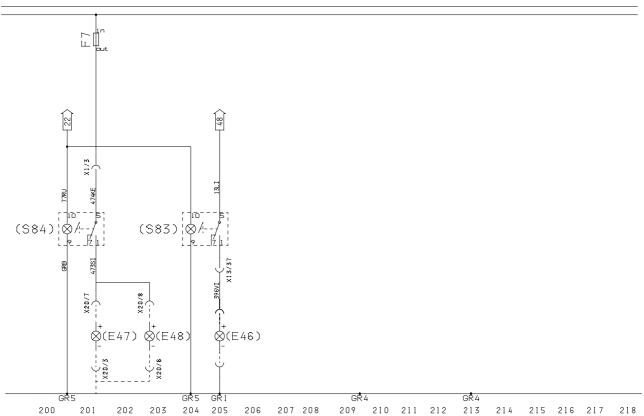

Od. Trondon algoritical acceptant		Model	Code	Page
31. Tractor electrical system	1. 9. 2002	6200-8550	310	101

Wiring diagram, 6200-8550 (AC 2.3), L17307-, Diagram no. 318 716 70A (not HiTech). Diagram incl. e.g. Agroline-instrument. Diagrams on pages 310/105-109.

		F1 15A Haza
Sym-	Code	F2 5A Radio
bol Component	no	F3 15A High
		F4 15A Low
(A2) Radio	2	F5 10A Parki
A3 Electric centre		F6 10A Parki
(A5) Air suspension seat	94	F7 25A Front
(A6) Agrodata	93	F8 25A Light
(A10) Control unit, DPS	70	F9 15A Traile
(A11) Telephone	96	F10 25A 3-pi
(A14) Tachograph	93	F11 5A Autoc
(A15) Control unit, front PTO	162	F12 10A Rot.
(A16) Fieldmaster	155	F13 10A Rese
(A17) Adapter, Fieldmaster sensor signals	154	F14 15A Start
(xxx) x taaptel, x letarrigeter content signale	101	F15 25A Fan I
B1 Sensor, engine temperature	16	F16 10A Rear
B2 Sensor, fuel gauge	17	F17 10A Dir. ir
B3 Sensor, gearbox temperature	102	F18 5A Instru
B6 Velocity sensor, gearbox	81D, 102, 153	F19 10A Wind
, ,	102, 117, 153	F20 10A Rear
,	102, 117, 133	F21 15A Fan (
(B8) Sender, wheel speed	00	· · · · · · · · · · · · · · · · · · ·
(B9) Sensor, tachograph	93	F22 10A 4WD
(B10) Speed radar	81D, 157	F23 10A Rear
B18 Sensor, front PTO -speed	160	F24 10A Rese
		F25 15A Air sı
E1 Headlights, right	26	preventio
E2 Headlights, left	25	F26 10A Back
E3 Front direction indicator, right	31	F27 10A Braki
E4 Front direction indicator, left	28	F28 10A Telep
E5 Rear light, right	33	F29 10A Ciga
E6 Rear light, left	32	F30 10A Care
E7 Cab light	97	(F51) 15A Main
E9 Rear working light, right outer	42	
E10 Rear working light, right inner	42	*If Hands Free
E11 Rear working light, left outer	41	
E12 Rear working light, left inner	41	G1 Battery
E13 Front working light, right	44	G2 Alternator
E14 Front working light, left	44	
E15 Instrument lights	17	H1 Indicator
E16 Roof console lights	21	H2 Indicator
(E17) Seat heater	94	H4 Indicator
(E19) Fog light, rear	35	H5 Indicator
(E20) Parking light, right, Norway	29	H6 Warning I
(E21) Parking light, left, Norway	30	H7 Indicator
(E22) Register plate light	32	(H8) Indicator
(E23) Upper head light, right	24	H9 Indicator
(E24) Upper head light, left	23	H10 Indicator
(E25) Parking light, upper, right	22	H11 Indicator
(E26) Parking light, upper, left	22	H12 Indicator
(E27) Working light, side	22	H14 Indicator
\		H15 Indicator
(E28) Working light, side (E45) Step light	07	H16 Indicator
` ' 0	97	H18 Indicator
(E46) Trailer hitch light	101	H19 Indicator
(E47) Extra front working light, right	46 46	
(E48) Extra front working light, left	46	H20 Indicator
		H21 Indicator
		H22 Indicator
		H23 Horn
		(H24) Rotating ı

Sym- bol Component	Code no
Fuses	
F1 15A Hazard blinkers, water pump F2 5A Radio, clock, tachograph, CareTel F3 15A High beam	31, 97 2, 120 25
F4 15A Low beam F5 10A Parking lights, left F6 10A Parking lights, right	25 28 30
F7 25A Front working lights F8 25A Light switch F9 15A Trailer socket/fog light, rear F10 25A 3-pin current socket	44 28 35, 165 97
F11 5A Autocontrol (+Bat), buzzer 7 F12 10A Rot. warning light, cabin light F13 10A Reserve	71, 82B, 82D 99 94
F14 15A Starter switch, thermostart F15 25A Fan III – speed F16 10A Rear working lights, inner F17 10A Dir. indicators, Fieldmaster, Agrodata	4 56 42
F17 10A bil. Indicators, Fleidmaster, Agrodata F18 5A Instruments, warning lights, Autocontri F19 10A Windscreen wiper/washer, horn F20 10A Rear window wiper/washer, radio	32, 153 ol 17, 166 51 48, 101
F21 15A Fan (I, II), air conditioner, floor fan F22 10A 4WD, PTO, DPS F23 10A Rear working lights, outer	55 65, 160 41
 F24 10A Reserve F25 15A Air suspension seat/seat heating, rear prevention F26 10A Back buzzer, Sigma, HiShift 	94 steering 94 44, 96, 116
F27 10A Braking lights, differential lock F28 10A Telephone, 2A if HF* F29 10A Cigarette lighter, 2-pin current socke	62 96
F30 10A CareTel, 1A if HF* (F51) 15A Main switch, control, in engine room *If Hands Free is fitted	120 168
G1 Battery G2 Alternator	1, 165 4, 118, 166
 H1 Indicator light, direction indicator trailer II H2 Indicator light, direction indicator trailer I H4 Indicator light, air filter 	34 34 7
 H5 Indicator light, engine oil pressure H6 Warning light, stop, engine temp. H7 Indicator light, gearbox oil press. (H8) Indicator light, oil filter, gearbox 	8 15 9 10
H9 Indicator light, 4WD H10 Indicator light PTO H11 Indicator light, parking brake	65 67 12
H12 Indicator light, Thermostart H14 Indicator light, main beams H15 Indicator light, fuel reserve	6 27 16
H16 Indicator light, charging H18 Indicator light, gearb. oil temp. H19 Indicator light DPS I H20 Indicator light, diff. lock	6, 166 13 71 63
H21 Indicator light DPS II H22 Indicator light DPS III H23 Horn	71 71 50
(H24) Rotating roof light (H27) Reverse Buzzer (H28) Indicator light, STOP, rear (H30) Buzzer instrumentation rear	99 44 102
(H30) Buzzer, instrumentation, rear (H31) Indicator light, direction indicator, left instrumentation (H32) Indicator light, direction indicator, right	34
instrumentation (H33)Indicator light front PTO, instrumentation	34 19

(H33) Indicator light front PTO, instrumentation

Of Table of the land	$\overline{}$	Model	Code	Page
31. Tractor electrical system	1. 9. 2002	6200-8550	310	102

			0		01-
C		Oada	Sym		Code
Sym	- Component	Code no	DOI	Component	no
וטט	Component	110	S1	Switch, head lights	28
K1	Relay, front working lights	43	S2	Switch, rear working lights	41
K2	Relay, rear working lights	41	S3	Switch, fan	55
	Relay, fog light, rear	35	_	Combined switch	25, 34, 52
	Auxiliary relay, starter switch	7	S5	Switch, front working lights	43
	Auxiliary relay, starter switch	9		Switch, rot. warning light	99
K6	Relay, fan III	56	S7		32
K7	Control relay, 4-wheel brake	65		Switch, air conditioner	54
K9	Relay, interval wiper	53		Starter safety switch	4
	Direction indicator relay	34		Switch, braking lights, right	72
	Relay, brake lights/differential lock	64		Fuel gauge sender unit	17
	Control relay, differential lock	65		Pressure drop indicator, air filter	7
	Starter motor relay	4		Engine oil press. sender unit	8, 118
	Control relay, 4—wheel drive	69		Sender unit to parking brake ind. light	12
	Relay, PTO – emergency stop	68		Reed relay, parking brake (P)	149
	Relay, control stop	8		Gearbox temperature sender unit	13
	Control relay, HiShift	115		Gearbox oil pressure sender unit	9, 119
	Control relay, speed limit, HiShift			Engine temperature sender unit (stop)	16
	Control relay, 4WD on/off	68) Switch, compressor pressure	54
	Warning light, main switch	166		Switch braking lights, left	73
	Time – delay relay, cab light	97	S22	Switch, differential lock	62
1130	Time—delay relay, cab light	31) Switch, DPS, selector	70, 71
М1	Starter motor	3, 167		Switch, DPS, release	69
	Fan	55		Switch, PTO	75
	Windscreen wiper	53		Switch, fog light rear	35
	Windscreen washer	51) Switch, reverse buzzer	45
	Rear window wiper	48		Switch, PTO 540	68
	Rear window washer	46 47		Switch, PTO 1000/540E	67
	Floor fan	57		Switch, 4WD	68
	Water pump	95		Switch, floor fan	57
				Switch, rear window wiper and washer	47
(IVI9)	Roof window wiper	49		Change over switch, head lights up	23
P1	Engine temperature meter	16		Switch, water pump	96
P2	Engine temperature meter	17		Switch, rear steering prevention	94
P3	Fuel gauge Tachometer	18		Switch, control stop	4
P4	Running hour meter	19	•	Switch, front – PTO	162
P5	•	19		Door switch, cab light, RH	97
гэ	Clock, PTO – speed, AC, trip, oil temperature, speed (Agroline instrumentation)	101		Door switch, cab light, LH	98
	speed (Agrollile Institutification)	101		Indicator light switch, filter 180 bar	11
01	Heat/starter switch	4		Switch, HiShift	115, 142
Q1 (O2)	Main switch			.1) Extra switch, HiShift	115, 142
(42)	Main Switch	3, (167)		Change over switch, rpm/flow sensor	113
D1	Thermostart	5		Change over switch, speed sensor, tractor/	
R1 R4	Cigarette lighter	91	(330)	implement	
R7	Potentiometer, front PTO, starting speed	161	(\$53	Indicator light switch, filter, return	10
П	Fotentiometer, from FTO, starting speed	101		Indicator light switch, filter, 18 bar	11
				Switch, roof window washer	49
				Switch, main switch control	168
				Switch, instrumentation, display size setting	103
				Switch, trailer hitch light	101
				Switch, trailer mich light Switch, extra front working lights	46
			V1	Diodes Y1, Y2, Y3, Y4, Y6	
			V2	Diodes, AC-2	
			V3	Diodes Y1, Y2, Y3, Y4, Y6	65
			(V5)	Diodes, HiShift	115

		Model	Code	Page
31. Tractor electrical system	1. 9. 2002	6200-8550	310	103

Sym- bol Component	Code no	Sym- bol Component	Code no
		ACB/ACD Autocontrol power lift	
Ground leads		A1E Autocontrol electronic unit	82B, 82D
GR1 Rear lights, solenoid valves GR2 Roof		A2E Autocontrol, switch panel	83B, 83D
GR4 Autocontrol		B1E Position sensor	81B, 81D
GR5 Cable harness, instr. panel		B2E Draft sensor, right	81B, 81D
GR7 Battery GR8 Headlights		B3E Draft sensor, left (B4E) Position sensor, implement (ACD)	81B, 81D 81D
GR9 Cabin		(2 12) i content content, implement (102)	0.5
GR10 Electrical stop		E1E Lightning, switch panel	83B, 83D
X1 9 pin, distribution box		E2E Lightning, position potentiometer	83B, 83D
X2 9 pin, distribution box		R1E Potentiometer, pos .control	83B, 83D
X3 9 pin, distribution box		C1E Switch room operation r.h. lifting	01D 01F
X4 9 pin, distribution boxX5 9 pin, distribution box		S1E Switch, rear operation, r.h., lifting S2E Switch, rear operation, r.h., lowering	81B, 81D 81B, 81D
X6 9 pin, distribution box		S3E Switch, rear operation, I.h., lifting	81B, 81D
X7 9 pin, distribution box	00	S4E Switch, rear drive, I.h., lowering	81B, 81D
(X8) 2 pin, power socket X9 9 pin, combination control	92	S5E Switch, cabin, lifting/lowering S7E Switch, lowering speed	82B, 82D 83B, 83D
X10 9 pin, combination control		S8E Switch, top limit	83B, 83D
X11 9 pin, upwards		S9E Switch, mixing	83B, 83D
X12 9 pin, rearwards, right X13 37 pin, transmission		S10E Switch, lifting/lowering S11E Switch, forced lowering	83B, 83D 83B, 83D
X14 9 pin, rearwards, left		S12E Switch, Drive Balance Control/slip	83B, 83D
(X15) 3 pin, air cond., diodes	54	V4E Occasional and a contract of the contract	4 OD)
X17 7 pin, trailer socket (X18) 2 pin, rear window washer	32 48	X1E Connector housing, 9 pin, speed sensors (X2E Connector housing, 15 pin., supply & rear	
X19 37 pin, front wall	40	buttons (implement position sensor)	Judii
X20 9 pin, front direction indicator		WE 0 1 11 1 1 1	000 000
(X22) 2 pin, rot. roof light X23 3 pin, DPS, extra switches	99 71	Y1E Solenoid valve, lowering Y2E Solenoid valve, lifting	82B, 82D 82B, 82D
X24 9 pin, upwards	, ,	, G	025, 025
X26 26 pin, instrument left, white		CareTel, information collecting system	446
X27 26 pin, instr. right, blue (X29) 2 pin, STOP-alarm (max. 2 W)		A1L CareTel, data logger	118
X30 9 pin, switches gear levers		B1L Pressure sensor, CareTel, 18 Bar	117
(X32) 1 pin, electric stop	5	(B2L) Pressure sensor, CareTel, 190 Bar	116 117
(X33) 3 pin, fog light, rear (X36) 3 pin, HiShift, speed—limit+ supply		B3L Sensor, gearbox temperature B4L Temperature sensor, engine	118
X31 2 pin, PTO – emerg. stop	68, 74		
(X41) 2 pin, front PTO		H1L Indicator light, CareTel	120
(X42) 4 pin, front PTO, supply (X43) 8 pin, RS–232 bus		X1L Connector housing, 9 pin, CareTel,	
(X45) 9 pin, Fieldmaster, extra equipment		RS-232	117-120
(X46) 7 pin, Fieldmaster, current socket		X2L Connector housing, 3 pin, CareTel, CAN	117-120
(X47) 2 pin, GPS-supply, Fieldmaster (X48) 3 pin, radar, Fieldmaster		X3L Connector housing, 9 pin, CareTel, extra equipment	117-120
(X49) 2 pin, seat		X4L Connector housing, 3 pin, CareTel, supply-	+
(X50) 3 pin current socket	96	NBUS	117-120
(X55) 1 pin, Fieldmaster X64 2-speed., front PTO speed signal	162	Wire colours	
Y1 Solenoid valve, diff lock	63		
Y2 Solenoid valve, PTO	68	RU = brown PU = red	
Y3 Solenoid valve, 4WD	66	KE = yellow	
(Y4) Solenoid valve, DPS(Y5) Magnetic switch, compressor, air conditioner	69 54	SI = blue	
(Y6) Solenoid valve, DPS	70	MU = black	
(Y7) Solenoid valve, rear steering prevention	94	VI = green VA = white	
(Y8) Solenoid, engine running (Y9) Magnetic clutch, front PTO	4 164	HA = grey	
(Y14) Solenoid valve, HiShift	115	LI = lilac	
(Y15) Solenoid valve, HiShift, slowing (Y16) Solenoid, cold cranking	115 3	Explanations of the abbreviation	
, , , , ,	-	PTO = power take-off	
		AC = Autocontrol linkage	
		DPS = Delta Power Shift	
		AC = Autocontrol linkage	


24 Treater electrical aveters		Model	Code	Page
31. Tractor electrical system	1. 9. 2002	6200-8550	310	104


1. 9. 2002

Model C 6200-8550

310

Page **105**

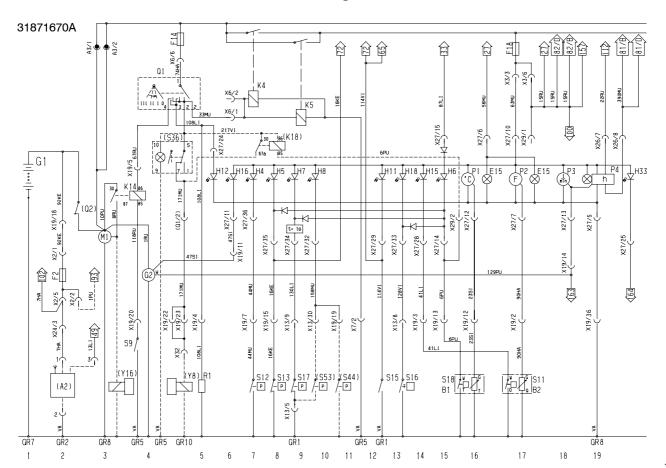

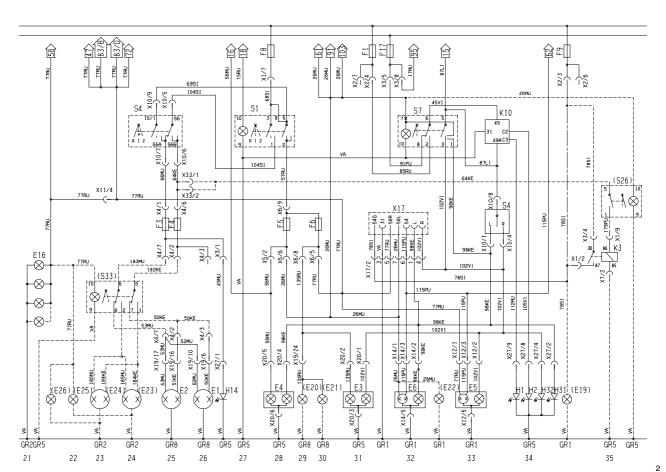

1. 9. 2002

6200-8550


Model

Code

Page 106

0-8550 310

Mezzo/Mega, L17307-

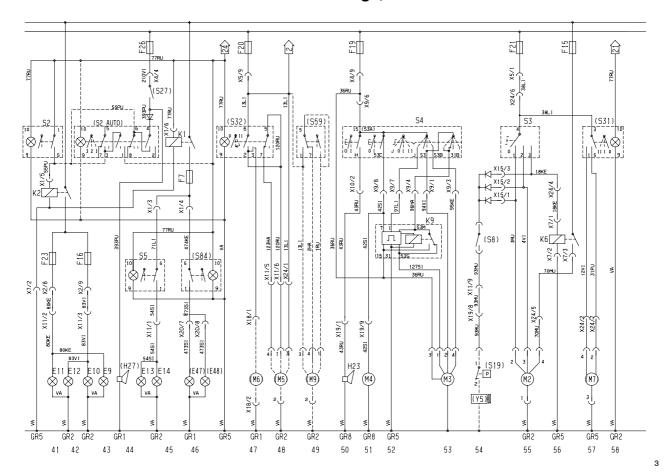

527 却自自愈 X5/8 115PU 530 5 constate 10 X38/2 /S29 /S28 (\$23)/ <u>/</u>S24 27HA 17351 (460) (A10) 73/6 V2/3 6471 16571 220 GR2 61 GR5 GR1 GR1 GR1 GR1 GR5 GR5 GR5 GR5 72


31. Tractor electrical system


1. 9. 2002

Model **6200-8550**

Code **310**

Page **107**

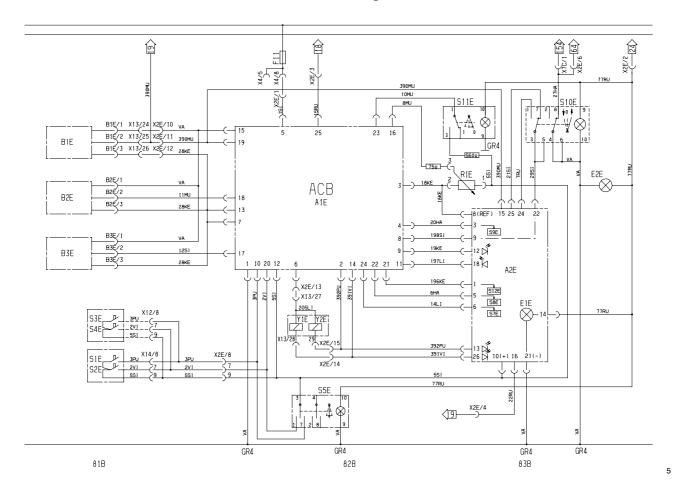

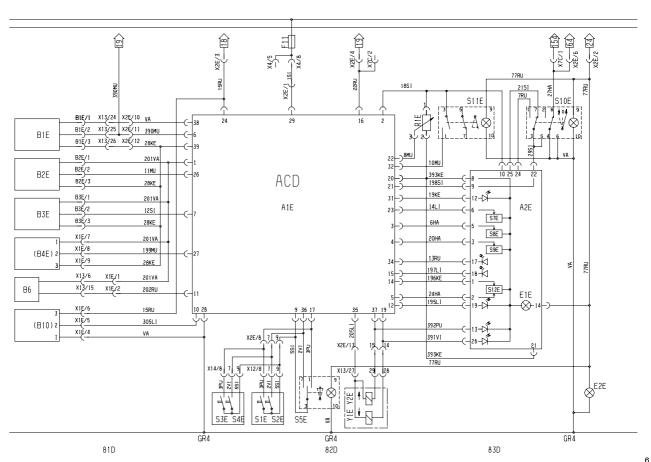



1. 9. 2002

Model 6200-8550


Page Code 310


108

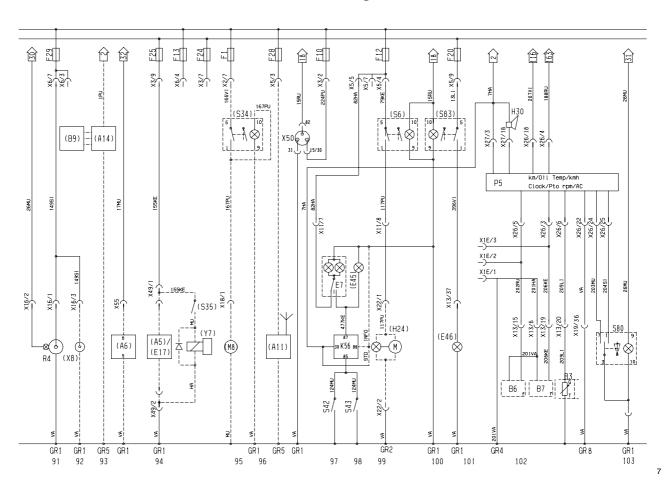

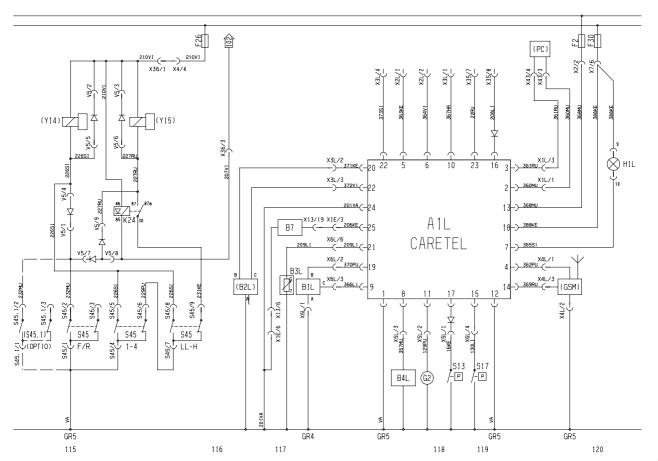

Of Tarabasel and a state	>>	Model	Code	Page
31. Tractor electrical system	1. 9. 2002	6200-8550	310	109

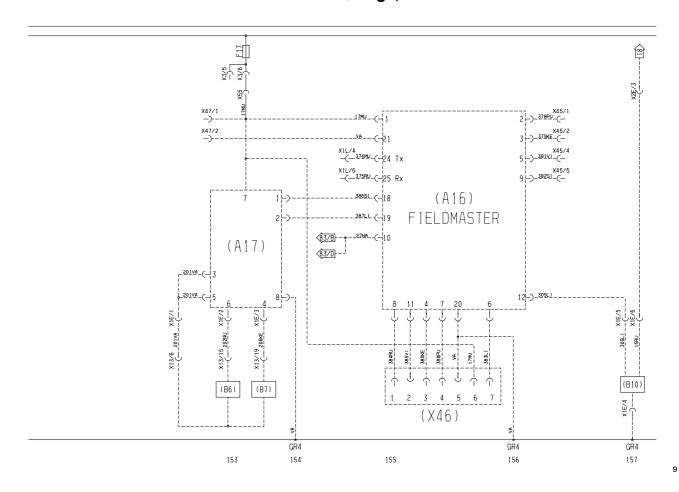

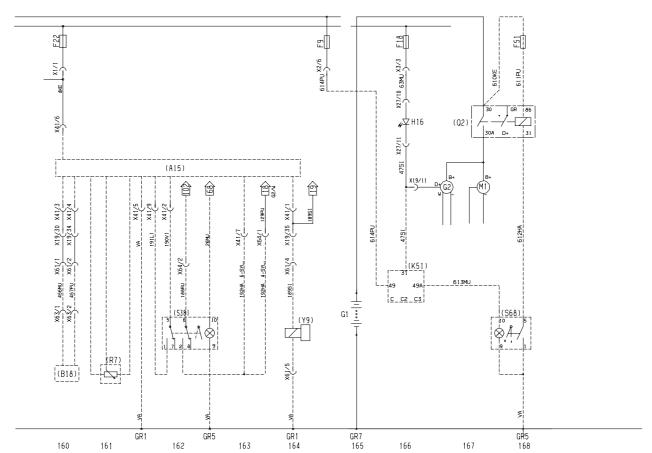

31. Tractor electrical system		Model	Code	Page
	1. 9. 2002	6200-8550	310	110



From the beginning of 1994 (662343—) all 6000—8400 tractors (except E-models) have Autocontrol II as standard equipment. Autocontrol II includes new push buttons of the Delta Powershift (if fitted) (compared to the rocking switch as shown in section 44).

In addition, Autocontrol II has a three-position lift/lower switch for the hydraulic power lift. Autocontrol II also controls the differential lock, 4WD and PTO.

Important! From serial no. **668103** incl., Autocontrol 2.1 replaces Autocontrol II. The differences are described under code 312.

Autocontrol II controls the transmission as follows:

1. Differential lock

The lock is controlled with a three – position rocking switch on the driver's right.

A. Rocking switch front edge depressed.

– the lock is always engaged except when brake pedal/pedals are depressed or when the power lift is in the transport position (signal light illuminates however). The lock engages when the brake pedal/pedals are released or when the lift/lower switch is in the lowering position or in the middle position.

B. Rocking switch in the middle position

- the differential lock is disengaged

C. Rocking switch rear edge depressed (spring returned)

 When the switch rear edge is depressed, the lock is engaged but it disengages when the brake pedal/pedals are depressed. After that the lock re-engages only if it is done with the switch.

2. Front wheel drive

Front wheel drive is engaged and disengaged with a switch in the range gear lever knob.

A. The switch in the front position

B. The switch in the rear position

- The 4WD is always engaged

 The 4WD is disengaged except when braking with both brake pedals. If it is used only one brake pedal, the 4WD does nor engage.

Model

6000-8750

Code

Page

2

311

3. Power take - off

The PTO is controlled with a lever and a three-position rocking switch on the driver's right.

PTO 540 or 1000 (or 540E) is selected mechanically with the lever at which time a pilot light comes on in the instrument panel.

The rocking switch front edge depressed (OFF)

The rocking switch in the middle position (ON)

The rocking switch rear edge depressed (START) (spring returned)

- the PTO is disengaged

- after starting the PTO is engaged and the PTO shaft rotates as long as the switch is in the middle position and the supply line is not switched off.

- When the rear edge is depressed, the PTO starts. After depressing, the switch is returned to the middle position by a spring.

PTO emergency stop

There is a emergency stop socket which has a plug at the rear of the cab. When the plug is removed, the PTO is disengaged and starts only when the rocking switch rear edge is depressed (the plug must be in the soc-

After an engine stop the PTO starts only when the rocking switch rear edge is depressed.

4. Delta Powershift, -668102

The Delta Powershift is controlled with two push buttons in the speed gear lever knob.

A. The front push button is depressed.

- With each press the gear ratio is changed one step down.

- B. The rear bush button is depressed.
- With each press the gear ratio is changed one

Indicator lights in the instrument panel show which gear ratio is engaged:

one light=reduction ratio


two lights=direct ratio

three lights=overdrive

When the clutch pedal is depressed, the Powershift gear is in the neutral position, but the ind. lights show the ratio which is to be engaged.

Delta Powershift has an alarm buzzer, which starts to alarm if the engine is stopped and the parking brake is not applied.

After starting the engine the gear is always engaged in the lowest ratio.

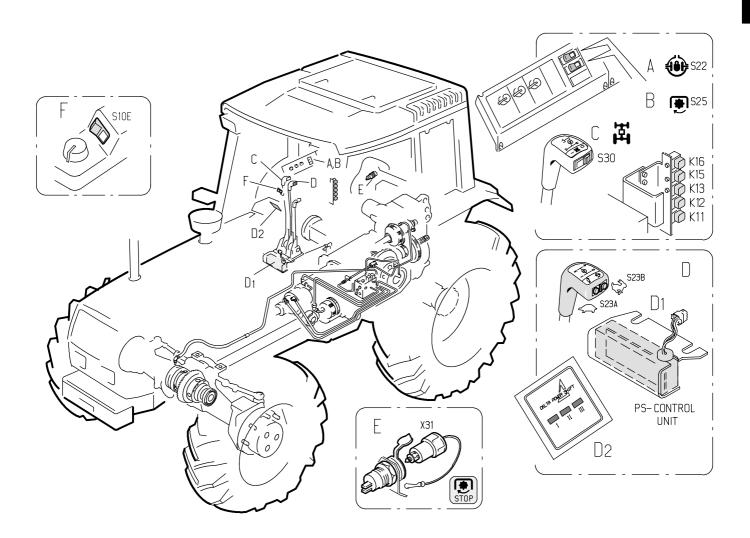

Picture 1. Components of the Autocontrol II


- A. Differential lock rocking switch on the right hand side of the seat.
- B. PTO rocking switch on the right hand side of the seat.
- C. 4WD switch in the range gear lever knob.
- D. Delta Powershift push buttons in the speed gear lever knob:
- D₁ Delta Powershift control unit
- $D_{\!2}^{\dot{}}$ Delta Powershift indicator lights in the instrument panel
- E. PTO emergency stop socket at the rear of the cab
- F. Three-position lift/lower switch of the hydraulic power lift

Control relays in the lever console on the driver's right:

K11: Differential lock relay.
K12: Differential lock relay
K13: Differential lock relay
K15: 4WD control relay.
K16: PTO control relay.

There is a relay K7 in the fuse box for the four wheel braking.

		Model	Code	Page
31. Autocontrol II	1. 1. 1994	6000-8750	311	4

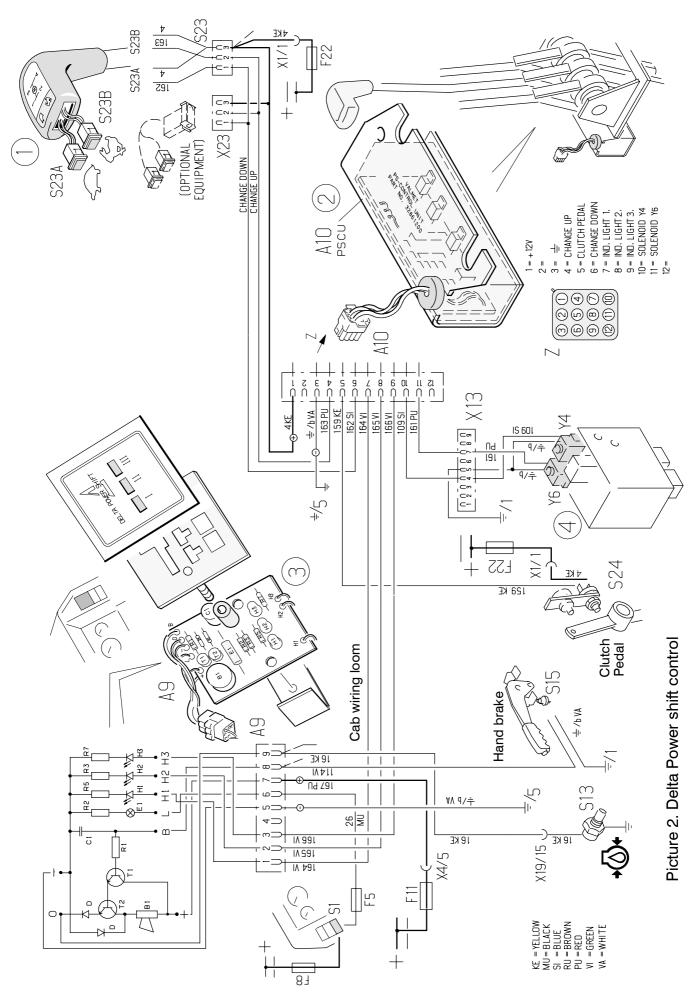

	1.1.1994	Model	Code	Page
31. Autocontrol II	1. 4. 1997	6000-8750	311	5

A. Delta Powershift

Picture 2. Delta Powershift control.

1. Powershift control buttons:

S23A=change down S23B=change up

- 2. Electronic control unit A10.
- **3.** The circuit card A9 of the buzzer and the pilot lights. The buzzer alarms if the engine is stopped (oil pressure sensor S13 indicates whether the engine is running) and the parking brake is not applied (the hand brake ind. light switch indicates whether the hand brake is applied).
- **4.** Valve block on which is fitted the solenoid valves (see also page **440/13**):

Y4=energised in reduction ratio = one ind. light

Y6=energised in overdrive=three ind. lights.

In the direct ratio both solenoid valves are energised=two ind lights.

When the clutch pedal is depressed, the pedal switch S24 disconnects both solenoid valves to make gear change easier. The switch must connect current to the control unit A10 when the clutch pedal has raised 1,5–3 cm from the bottom position


The switch function can be tested by connecting a test lamp to the wire from the switch (yellow wire no 159).

If you want remove the switch S24, disconnect both yellow wires from the switch and connect them together with connector SA1674.

Note! With effect from ser. no. F39513 the switch S24 has been removed and the safety switch S9 has been transferred to the support lower hole. On E – models there is further switch S24 and it is now fitted to the support upper hole.

Position of components:

- Delta Powershift control unit A10 and its 12 pin connector is fitted in the cab in front of the lever console. These are accessible after removing the panel in front of the lever console.
- The push button connector S23 is situated in the same place as above mentioned parts. Also connector X23 for optional push buttons and 4WD switch connector S30 are in the same place.
- The circuit card of the buzzer and pilot lights are placed in the instrument panel and they are accessible after removing the panel upper covering.
- The solenoid valve connector X13 is placed under the hand brake console on the driver's left.

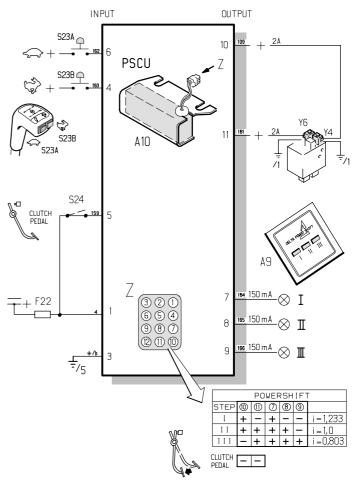

Picture 3. Input and output signals to the control unit A10. Supply voltage via the ignition switch and fuse F22.

Important! From tractor ser. no. 668103 incl., the control unit A10 has been modified, see Autocontrol 2.1 under code 312.

		Model	Code	Page
31. Autocontrol II	1. 1. 1994	6000-8750	311	6

Circuit card of buzzer and ind. lights

A. Buzzer test:

- Ground connector pin 5 and feed voltage of 12 V to pin 7.
- Ground pin 9 and feed voltage of 12 V to pin 8 at which time the buzzer should alarm continuously.
- Disconnect pin 8 after which the buzzer should alarm about 2 minutes.


B. Circuit card illumination:

 Feed voltage of 12 V to pin 6 at which time the lamp E1 should come on (pin 5 grounded).

C. Signal lights of Delta Power Shift:

With different ratios the control unit A10 feeds current to the circuit card A9 connector pins 1, 2 and 3. This current lights up leds H1, H2 and H3.

The led voltages (12 V) can be measured from pins 1, 2 and 3 of connector A9 with different gear ratios. Lacking voltage indicates that there are breaks in wires or the control unit A10 is faulty.

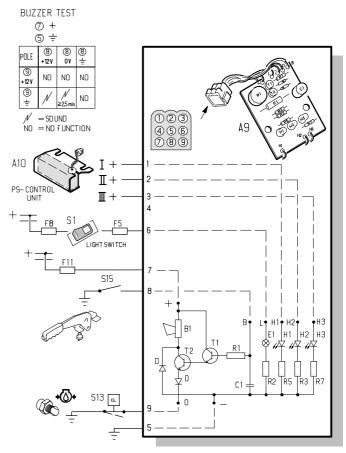

Picture 4. Circuit card A9 of buzzer and ind. lights. The card is supplied with permanent voltage via fuse F11.

Fault tracing

A. Fuses and supply voltages of Delta Powershift:

If there are malfunctions, take the following steps:

- Check the control unit fuse F22 in the fusebox.
- Check the buzzer fuse F11 in the fuse box.

If the fuses are in condition:

 Measure from the control unit A10 connector pin 1, that the unit gets the supply (12 V). Measure from the circuit card A9 connector pin 7, that the card gets the supply (12 V). Lacking supply voltage indicates that there are breaks in supply wires.

B. Solenoid valves:

Test whether the valves Y4 and Y6 get supply voltage (12 V). Engage different Powershift ratios and check whether the valve in question becomes energised. When the valve is energised, the nut at the end of the valve is magnetic. Voltage can also be measured from the valve connector. If there is no voltage, fault can lie in the control unit A10 or in wire contacts.

C. Control unit A10

The control unit has 5 input signals and 5 output signals (see picture 3). Output signals can be tested by checking the sole-noid valves as described above or by measuring voltages to the signal light circuit card as shown paragraph C above. The control unit cannot be repaired but it should be changed as a complete unit.

D. Push buttons:

- By pushing the foremost button, the 12 V signal is sent to the control unit connector pin 6 and ratio is changed one step down.
- By pushing the rearmost button, the 12 V signal is sent to the control unit connector pin 4 and ratio is changed one step up.

Note! Continuous pushing changes only one step up or down. In highest or lowest ratio, the ration does not change any more although the button of the direction in question is pushed.


E. Clutch pedal switch S24:

- When the pedal is in the upper position, voltage of 12 V is sent to the control unit connector pin 5.
- With depressed pedal, the voltage is zero and both solenoid valves are unenergised and power is not transmitted by the gear.
- The switch reduces the rotating masses to minimum in order to make gear change with gear levers easier.

IMPORTANT! If ind. light number 1 goes out and light 3 lights continuously, this indicates that there is line breaks in wires between the control unit A10 and the solenoid valves.

		Model	Code	Page
35. Autocontrol II	1. 1. 1994	6000-8750	311	7

B. Differential lock control

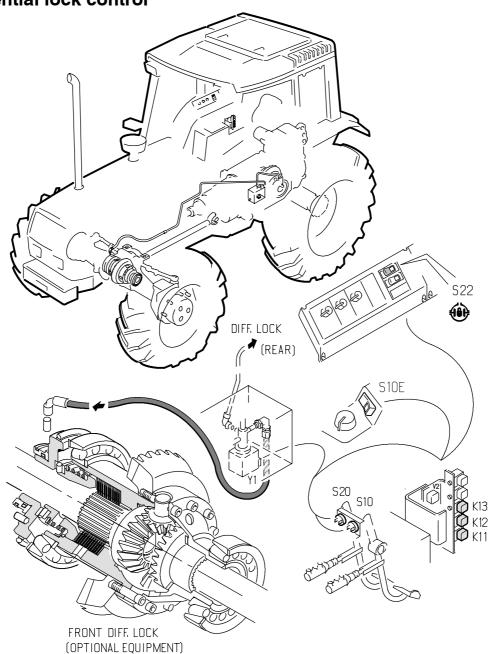

Picture 5. Differential lock components on tractor

Y1: Differential lock solenoid valve K11, K12 and K13: control relays S10 and S20: Brake pedal switches

V2: diodes

The differential lock rocking switch is placed on the selector panel on the driver's right.

In addition, the lift/lower switch also controls the diff. lock.

The relays are places in the lever console and are accessible after removing the console side panel:

K11: Switches off voltage to the diff. lock solenoid valve and switches on current to the brake lights, when the brake pedal/pedals are depressed. Switches on voltage again to the solenoid valve, when the brake pedal/pedals are released. Ind. light comes on.

- K12: Switches on voltage to the solenoid valve, when the rocking switch rear edge is depressed. Ind. light comes on. When the brake pedals after this are depressed, relay K11 is closed and current from relay K12 is cut off and the relay opens and switches off current to the solenoid valve and the ind. lights goes out. The diff. lock does not engage after this although the brake pedals are released.
- K13: Switches off voltage to the solenoid valve and the lock disengages, when the lift/lower switch is in the lifting position. The lock ind. light, however, illuminates. When the implement is lowered down to the working position, switches on voltage to the solenoid valve and the differential lock is engaged.

		Model	Code	Page
31. Autocontrol II	1. 1. 1994	6000-8750	311	8

Checking function of the differential lock control (engine at idling speed)

- Depress the rocking switch front edge at which time the lock indicator light comes on.
- Turn the switch to the middle position at which time the indicator light goes out.

This shows that:

- the rocking switch front and middle positions function
- The lock indicator light functions
- Depress the switch front edge at which time the indicator light comes on
- Disconnect the brake pedals and depress the pedals separately and together. When depressing the pedal/pedals, the diff. lock ind. light goes out and the brake lights comes on. When the pedal/pedals are released, the ind. light comes on and the brake lights goes out.

This shows that:

- the brake pedal switches function
- the switches are correctly positioned
- relay K11 functions
- Depress the switch rear edge at which time the ind. light should come on.
- Depress the brake pedal/pedals at which time the ind. light goes out.
- Release the brake pedal/pedals. The diff. lock ind lights must not come on and the lock must not engage

This shows that:


- the rocking switch rear position functions
- relays K11 and K12 function
- Depress the switch front edge and the ind. light comes on
- Turn the lift/lower switch to the transport position at which time the diff. lock disengages. Ind. light, however, remains on
- Turn the lift/lower switch to the lowering position or to the middle position and the differential lock engages.

This shows that:

- lift/lower switch functions
- relay K13 functions
- Drive the tractor at speed of 4 km/h and engage the lock by pushing the rocking switch front edge down. Ind. light comes on.
- Make a tight turn, raise and lower the lift at which time the diff. lock engages and disengages.
- You should see the rear tyres skid when the differential lock is engaged and feel a jerk as you engage and disengage. The front axle lock functions in the same way, if fitted (during the test the 4WD should be disengaged).

This shows that:

- solenoid valve functions
- differential lock functions

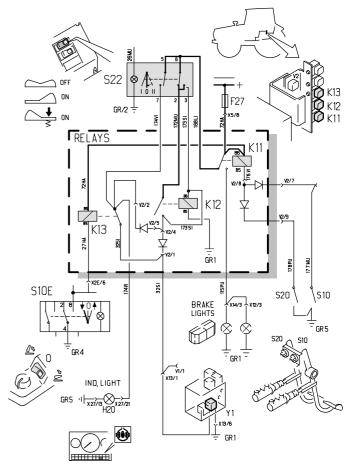

Picture 6. Differential lock control. The system is supplied via the ignition switch and via the fuse F27).

Important! Always check the fuse F27, if there is malfunctions in the control system. The diff. lock solenoid valve is fitted on the lower side of the valve block on the LH side of the gearbox. The rearmost valve Y1 is for the diff. lock. When the lock is on, the solenoid valve is energised. Then the nut on the valve is magnetic which can be verified with e.g. a screw-driver.

		Model	Code	Page
31. Autocontrol II	1. 1. 1994	6000-8750	311	9

C. 4WD control

Checking function (engine at low idling speed):

 Move the switch in the range gear lever knob to the front position at which time the 4WD ind. light comes on.

This shows that:

- 4WD switch functions
- 4WD indicator light functions
- Move the switch to the rear position and the ind. light goes out.
- Depress separately unlatched brake pedals. The 4WD RELAYS ind. light must not come on.
- Connect the brake pedals together and depress the pedals at which time the 4WD engages (ind. light comes on)
- Release the brake pedals and the ind. light goes out.


This shows that:

- brake pedal switches function
- relays K7 and K15 function
- Drive the tractor at speed of 4 km/h.
- Make a tight turn
- Engage and disengage the 4WD several times. When the 4WD is engaged, you should see the front axle skid and feel a jerk as you engage and disengage.

This shows that:

- solenoid valve functions
- 4WD clutch functions

Note! In case of malfunctions always check fuse F22. When the 4WD is disengaged, the solenoid valve Y3 is energised and the nut at the end of the valve is magnetic which can be verified e.g. with a screwdriver.

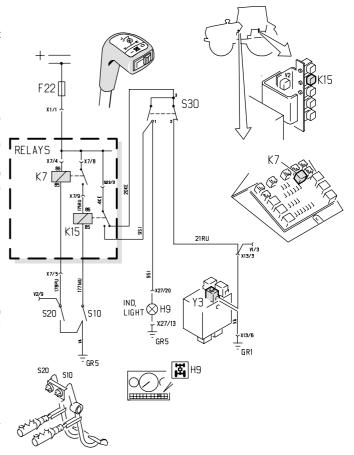

Picture 7. 4WD control. The system gets the supply via the ignition switch and fuse F22.

\$30: 4WD switch in range gear lever knob

Y3: 4WD solenoid valve **H9:** indicator light

\$10 and \$20: brake pedal switches

K7 and K15: Relays which engage the 4WD when latched together brake pedals are depressed

logelilei biake pedals ale deplessed

Note! If you want to prevent engagement of the 4WD when braking, relay K7 in the fuse box can be removed.

		Model	Code	Page
31. Autocontrol II	1. 1. 1994	6000-8750	311	10

D. PTO control

Checking function:

Make sure that the plug is fitted in the rear emergency socket. Move the control lever in the middle position. Check that the PTO rocking switch front edge is depressed (OFF). Switch off tractor current. Start the engine and let it run at idling speed.

- Move the PTO lever to the foremost position (540) at which time the indicator light should come on. The PTO shaft must not rotate.
- Move the lever to the middle position at which time the ind. light goes out
- Move the lever to the rear position (1000 or 540E) and the ind. light should come on. The PTO shaft must not rotate.
 Move the lever back to the middle position and the ind. light goes out.

This shows that:

- ind. light switches S28 and S29 functions
- indicator light functions
- Move the lever to the front position (540). Ind. light comes on.
- Turn the PTO rocking switch to the middle position (ON)
- Depress the rocking switch rear edge (START). The PTO shaft begins rotate and the rocking switch is returned to the middle position (ON) by the spring.

This shows that:

- PTO control relay K16 functions
- solenoid valve functions
- Depress the rocking switch front edge (OFF)
- PTO shaft stops to rotate
- Turn the switch to the middle position. The shaft must not rotate. Depress the switch rear edge at which time the shaft starts to rotate.

This shows that:


- PTO rocking switch functions
- Remove the plug from the rear socket at which time the shafts stops rotating. Also the indicator light goes out.
- Refit the plug. The shaft must not rotate but the ind. light comes on.
- Depress the switch rear edge and the PTO shaft must start to rotate.

This shows that:

- PTO emergency stop functions
- relay K16 functions
- Stop the engine.
- Start the engine. The PTO shaft must not rotate although the lever is in the engaged position
- Depress the rocking switch rear edge at which time the shaft begins to rotate.
- Move carefully the lever to the middle position. The ind. light goes out and shaft stops.
- Move the lever to the front position. The shaft must not rotate.
- Depress the rocker switch rear edge after which the PTO shaft starts to rotate.

This shows that:

- The PTO automatic stop functions when the main current circuit is cut off.
- relay K16 functions

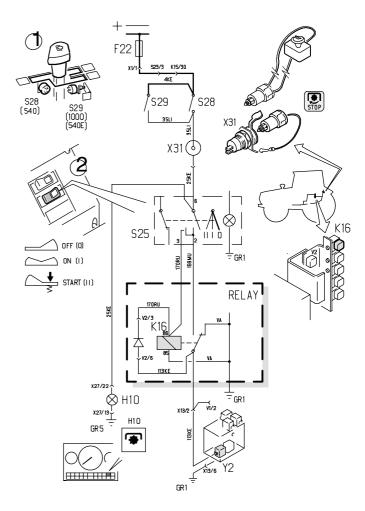

Picture 8. PTO control. The system is supplied via the ignition switch and fuse F22.

1. PTO control lever (540-free-1000 (540E)

S28: Lever switch S29: Lewer switch

X31: Emergency stop socket2. 3-position rocking switch

H10: Indicator light **Y2:** Solenoid valve

K16: relay which connects current to the solenoid valve, when the rocker switch rear edge is depressed (START). Solenoid is energised so far as the rocking switch is in the middle position (ON) and the circuit is not broken with the lever, emergency plug or with the ignition switch.

Important! The solenoid valve Y2 is placed under the valve block on the LH side of the gearbox (see picture). When the solenoid is energised, pressure oil is directed to the PTO clutch and the shaft can rotate. The nut at the end of the solenoid is magnetic when the solenoid is energised.



31. Autocontrol 2.1 | 15 4. 1995 | Model | Code | Page | 1. 9. 2002 | 6000 - 8750 | 312 | 1

1. Differences between AC II and AC 2.1

Autocontroll 2.1 replaces under code 311 shown Autocontrol II system from tractor serial number **668103** incl.

A. Delta Powershift control system

The order of the two push buttons on the gear lever knob have been changed. On AC 2.1 system the front button changes up and the rear button changes down.

The AC 2.1 system control unit is placed in connection with the circuit card of the Autocontrol power lift on the driver's right and it is connected to the tractor electrical system with 18 – pin connector.

Delta Powershift pilot lights have been placed in the dashboard in connection with the other warning lights. The lights have symbols I, II and III and they light individually when different ratios are engaged (I=lowest ratio, II=intermediate ratio and III=highest ratio). The pilot lights are green.

B. Sound signals

The new circuit card (control unit) has a buzzer, which functions as follows:

- a) If the engine is stopped (oil pressure drops), and the hand brake is not applied, the buzzer alarms continuously about 2 minutes, as if the driver does not apply the hand brake (also on AC II).
- b) When the engine is running (oil pressure up) and the hand brake is engaged, the buzzer gives a sound signal at intervals of 2 seconds, until the hand brake is released.
- c) If the ignition is switched off, and the headlights are on, the buzzer sounds, until the lights are switched off.

C. Control of transmission

Control of 4WD, differential lock and PTO happens as on AC II system, see pages 311/1-2 and pages 311/7-10.

D. Power lift

Compared with AC II system, the power lift has one rocker switch more. This forced—lowering switch is spring returned and is fitted on the RH side of the position control potentiometer. The switch is shown under code **320**.

2. Other optional or alternative equipment

A. Control stop

In connection with the optional electric engine stop is now an automatic control stop as a standard equipment. This system stops the engine automatically, if the instrument panel stop—light starts to flash. The control stop can be fitted on tractors with effect from serial number 662343 (AC II).

The control stop stops the engine automatically, if:

- engine temperature rises too much
- gearbox temperature rises too much
- engine oil pressure falls too far
- gearbox oil temperature falls too far

The control stop is switched on with a switch on the instrument panel.

Note! The control stop must be switched on just after engine start, since the engine does not start, if the control stop is switched on.


Note! The safety stop is meant to be used just when the tractor is driving an implement without control from tractor. The safety stop must not be used when driving.

e.g. when driving the tractor gearbox oil pressure can fall temporarily too low, then control stop relay connects and the engine stops.

B. Agrodata-instrument

Agrodata-instrument is presented under code 331.

Page 2

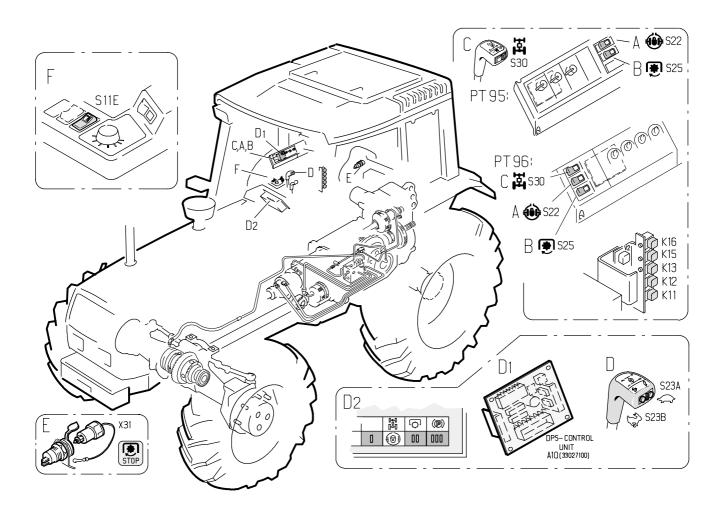

Picture 1. AC 2.1, control of Delta Powershift

A. Differential lock switch (as on AC II).

B. PTO switch (as on AC II).

C. 4WD switch on the range gear lever knob (as on AC II). On later tractors (spring -96) the 4WD switch is placed on the lever console on the driver's right.

D. DPS push buttons on the speed gear lever knob

D1. DPS-control unit (circuit card) (A10) in connection with the power lift circuit card. The circuit card is accessible after removing the power lift switch panel (see page 320/10). On ACII system, there is a separate control unit box at the lower end of the gear levers.

D2. Instrument panel combination instrument. DPS pilot lights have been fitted in connection with other pilot and warning lights. AC II system has a separate pilot light panel on the RH side of the instrument panel.

E. PTO emergency stop socket at the rear of the tractor (as on AC II system)

F. S11E is the power lift forced-lowering switch (see page 320/15).

Relays K11-K16 as on AC II system, see page 311/3. If the tractor has a stop control (see page 312/4), the stop control relay K18 is placed by relay K11.

Important! If on AC 2.1 system one pilot lights starts to flash when the driver changes the DPS ratio, this shows that there is a wire break, poor contacts or a short circuit between the solenoid valve in question and the DPS control unit (fault tracing, see the next page). However, the tractor can be driven with a DPS ratio, that functions i.e. the pilot light illuminates continuously.

Solenoid valve resistance is 11-12 ohms. Measure the resistance between pin 3 and pins 1 and 2 (pins, see the following page). If the resistance is not correct, measure the resistance once again from valve pins. If not correct, the solenoid valve is faulty. If the resistance is correct, the possible fault can lie in the diodes, which should be changed. If the resistance was infinite, when it was measured from the upper end connector, check solenoid valve wires and connectors (connector X13 under the hand brake console).

31. Autocontrol 2.1 | 15.4.1995 | Model | Code | Page | 31. 4. 1997 | 6000-8750 | 312 | 3

DPS circuit card

INPUT signals

Pin 3: Permanent earthing

Pin 4: 12 V via starter switch and fuse F22. Pin 5: 12 V, when the foremost push button

is pressed. Otherwise 0 V.

Pin 6: When the clutch pedal is in the upper position, this pin has 12 V voltage. When the pedal is depressed, the vol-

tage becomes 0.

Pin 10: 12V, when headlights are on, otherwise 0 V.


Pin 11: permanent current via fuse F11 (12 V)
Pin 12: When the hand brake is applied, this

pin gets earth.

Pin 13: Earthed, when engine is stopped 12 V, when the rearmost push button

is depressed, otherwise 0 V.

Pins 15 and 16: If the DPS ratio is direct—overd-rive—overdrive, the wire is connected to pin 15. If the ratio is reduction—direct—overdrive, the wire is connected to pin 16 (wire is energised with 12 V).

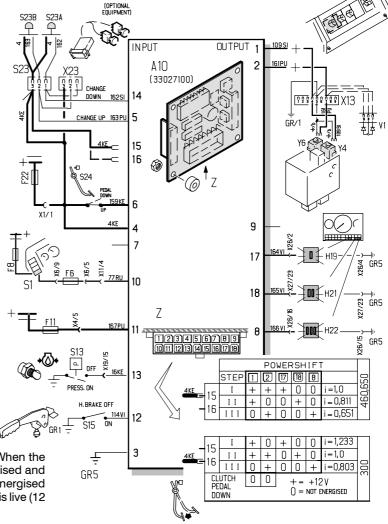

OUTPUT signals

Pins 1 and 2: Current to DPS solenoids (12 V). When the clutch pedal is depressed, both pins are deenergised and also the solenoid valves Y4 and Y6. When pin 1 is energised (12 V), solenoid valve Y4 is energised. When pin 2 is live (12 V) solenoid valve Y6 is energised.

Pins 17, 18 and 8: Signals to pilot lights (12 V).

Position of connectors

X1: In fuse box X4: In fuse box X6: In fuse box

X11: Connector in the cab roof

X13: Solenoid valve connector under the hand brake console

X19: Plug on the cab front wall on the RH side.

X26: White connector at the rear side of the instrument panel **X27:** Blue connector at the rear side of the instrument

S23: Push button connector at the lower end of gear levers

X23: Extra push button connectors at the lower end of gear levers

Fault tracing of input signals

The input signals can be measured from the detached connector of the circuit card, when the current is switched on. When malfunctions occur, check the fuses, supply voltages and earthing.

If one of input signals is uncorrect, check wiring and connectors of this function and the sensor/switch in question.

Testing the circuit card buzzer

- Ground pin 3 and feed voltage of 12 V to pin 11.
- Ground pin 13 and feed voltage of 12 V to pin 4, at which time the buzzer must give continuous signal. Disconnect pin 4, after witch the buzzer should alarm about 2 min.
- Remove ground from pin 13 and ground pin 12 and feed a voltage of 12 V to pin 4, after which the buzzer should give discontinuous sound signal.
- Feed pin 10 with 12 V and disconnect pin 4, after which the buzzer must give discontinuous alarm signal.

Picture 2. Input and output signals to/from Delta Powershift circuit card A10

+=energised, 0=unenergised

Z=18-pin connector seen from front

Pins 7 and 9 not in use

X23= Connector for extra buttons

GR1=Ground point in the rear part of the lever console

GR5=Ground point on the cab front wall

Note! Position of various component and connectors and wiring diagram are shown under code 310 alla.

Fault tracing of output signals

Signals from pins 1 and 2 to solenoid valves can be verified by engaging different ratios and by testing with a metal tool, whether the solenoid valve in question becomes magnetic (see \pm 0 table) and by measuring voltage in the solenoid valve connectors (12 V).


If there is no voltage at the solenoid valves, check connector X13 and wiring. If output signal from the circuit card A10 has no voltage, although the input signals are OK, the whole circuit card should be changed. The output signals can be measured with a multimeter from circuit card connector while current is switced on and connector Z is in place. All outputs are 12 V. When measuring on the lower pins, do not short circuit the pins. It is recommended, that the measurements are carried out on the wire side of the connector

From pins 17, 18 and 8 signals are sent to the pilot lights. The picture above shows which pins are energised with different ratios. The output signals (12 V) to the pilot lights can be measured on the card with a multimeter, when current is switched on and connector Z is in place. When the push buttons are pressed while the current is switched on, the pilot lights must come on and go out in correct

Modell 6000-8750 Code 312

4

Page

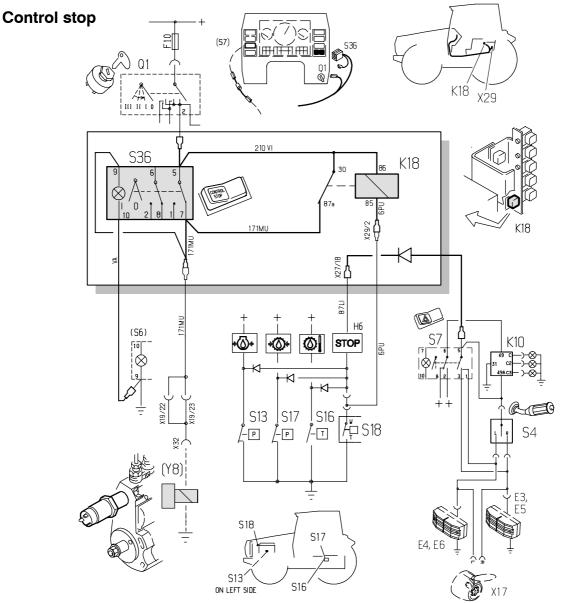

Picture 3. Wiring diagram of control stop (optional)

Q1=starter switch (number 32553200)

S36=control stop switch on the dashboard

Y8=stop solenoid on the fuel injection pump (in-line pump)

K18=control stop relay (in the lever console)

S4=combination control

S7=switch for hazard warning flashers

S13=engine oil pressure sensor

S16=gearbox oil temperature sensor

S17=gearbox oil pressure sensor

\$18=engine temperature sensor

K10=Direction indicator relay(in front of fuse box)

X29=control stop wire loom connector in the rear part of the lever console

Function

When switch S36 is in off position (in picture), current can affect the solenoid Y8 when the starter switch is turned to the starting position and the engine can be started (engine does not start, if the switch is in the on position).

When the switch S36 is turned on, current flows to the solenoid via relay K18. If on of sensors S13, S17, S16 or S18 becomes grounded, the relay breaks the circuit and the engine stops. Warning lights illuminates normally (also stop – light flashes).

Note! Stop-light wire must be equipped with a diod. Otherwise, when driver uses the direction indicator lever S4 or hazard warning flashers, relay K18 becomes earthed via bulbs E3-E6 caused engine stop. In the year -96 a diode has been added in the instrument, and the auxiliary diode is not needed. These instruments with the diode can be recognized by a green dot beside the part no.

The gearbox oil pressure sensor is placed on the servo valve block on the RH side of the gearbox and the temperature sensor is placed on the front side of the valve block

Engine oil pressure sensor is placed on the RH side of the engine and the temperature sensor on the engine beside the thermostat housing.

Testing the function

Regarding the stop solenoid, see page 350/7. If the tractor has Stanadyne distributor pump, the stop solenoid is as standard inside the pump, see picture on page 220/12.

The function can be tested while the engine is running and switch S36 in the on position. When a wire connector of one of the sensors S13, S16, S17 or S18 is connected to the tractor frame, the warning light must come on and the engine must stop. Stop light flashes, when engine temperature sensor becomes earthed. Other functions have separate warning lights.



	1.10.1999	Model	Code	Page
31. Σ-power system	1. 9. 2002	8750, 8950	313	1

1. Description

A. General


Engine (634 DS/634DSBIE) on Valtra 8750 and 8950 tractors has as a standard equipment Σ – power system (double output system). Tractor transmission max. output is 160 hp, but max. PTO output is 190 hp (8750) / 200 hp (8950).

The automatics of the Σ -power system have been designed so that the engine output for the tractor transmission never is larger than 160 hp. The injection pump has a boost control. Pressure loading from the intake manifold can be cut with the aid of a solenoid valve. When the PTO loading is high, the intake manifold pressure affects the membrane of the boost control unit (solenoid valve energised), which facilitates movement of the fuel injection pump control rod to the high output range. When the PTO loading decreases, the solenoid valve is

closed (which is controlled fully automatically by the control unit of the system) and the fuel pump control rod can move to the low output range.

The torque of the PTO unit is measured by two sensors. One sensor is placed at the flywheel under the starter motor (earlier at the engine front end. On 8950 Hi in front of the DPS) and another in the PTO unit. These sensors indicate a twist of the long PTO shaft as a phase shift, which in turn indicates the torque transmitted by the PTO unit. Always when the PTO is disengaged, the sensor phase shift is zeroed automatically to avoid inaccuracies caused by permanent deformation of the shaft or phase shift changes caused by repair works.

The $\Sigma-power$ system is controlled automatically by the control unit.

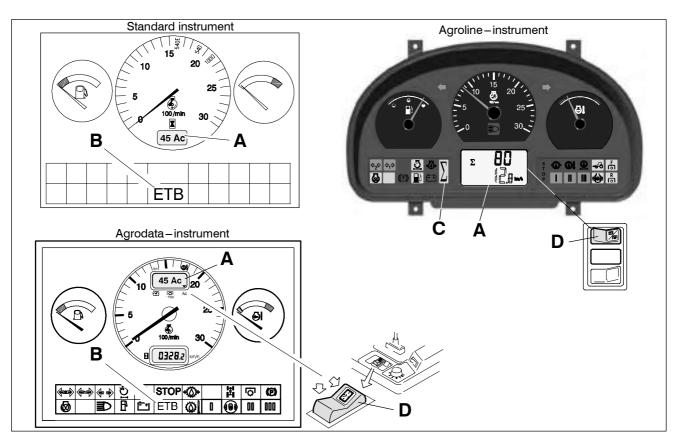

Differences in the dashboard:

On 8750 and 8950 tractors there is a digital instrument **(A)** which shows as a percentage, how large a part of the tractor total output is transmitted via the PTO unit, when the PTO is engaged. At other times the <u>Standard instrument</u> shows tractor running hours.

If tractor is equipped with the <u>Agrodata-instrument</u> (see code **331 page 1**), the Ac-display must be selected in the upper digital display by using switch **(D)** (see black arrow) before the PTO %-display can be seen.

In LCD-display of the <u>Agroline-instrument</u> the upper row can be changed by pressing the RH side edge of the switch **(D)**, before the PTO %-display can be seen. (see code **333 page 3**)


ETB light (B) Standard and Agrodata - instruments.

When the higher output range of the engine is engaged, there is a light ETB in the warning light panel (ETB=Extra Turbo Booster). The ETB-light has also a fault diagnostic function. It indicates by flashing, if the system has malfunctions.

Σ light (C) Agroline - instrument.

When the higher output range of the engine is engaged, there is a light Σ in the warning light panel. The Σ -light has also a fault diagnostic function. It indicates by flashing, if the system has malfunctions.

Note! If an electric welding is done on the tractor or on the trailer or implement, which are attached to the tractor, both battery cables must be disconnected. Otherwise the Σ -Power system may be damaged.

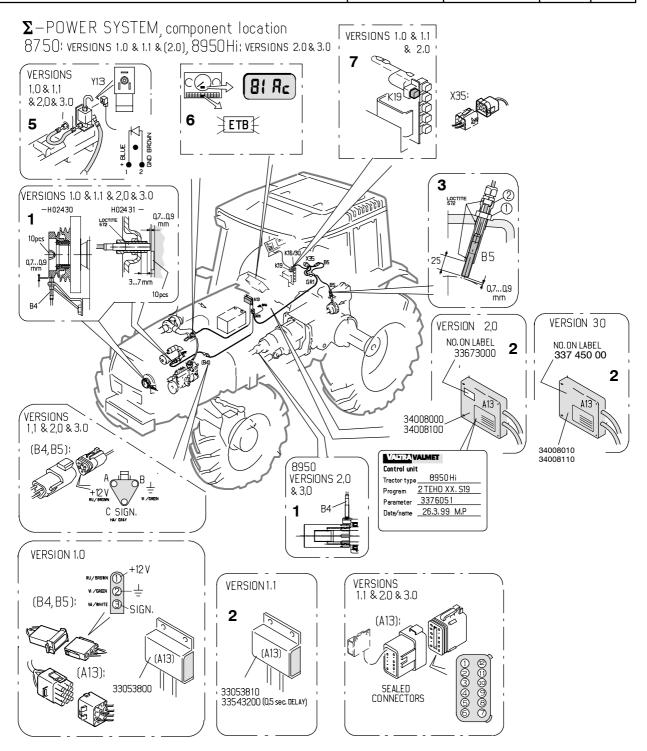

Picture 1. Components for Σ -power system

1. Engine speed sensor B4

Note! On 8950Hi tractor the engine speed sensor is placed at the front end of the DPS

2. Σ -Power control unit A13.

Note! Modifications have been made in the control unit, when new versions have been started to use. Different versions are shown in the table on the next page 313/2A.

- 3. PTO speed sensor B5
- **4.** Boost control unit on the fuel injection pump governor housing (see page **313/3**).

- 5. Solenoid valve Y13.
- 6. ETB-light and output % display
- **7.** Σ -Power relay K19 in the lever console in the cabin (not in version 3.0)

Position of connectors

- connector X35 (9 pins) is placed in the lever console and it is accessible after removing the console side cover.
- Sensor B4 connector in the engine compartment.
- Sensor B5 connector has been drawn into the lever console.
- Control unit connector A13 (12 pins) in the engine compartment near the control unit
- Control unit A13 earth point GR9 in the cab front wall
- Other Σ –Power earth point GR1 in the cab lever console rear part
- Relay K19 is placed in the lever console beside the relays for the AC 2.1 unit (not in version 3.0).

	1 10.1999	Model	Code	Page
31. Σ-power	1. 9. 2002	8750, 8950	313	2A

Version markings of SigmaPower

(see picture on page 313/2)

Sigma – ver- sion	Tractor	ractor Used in pro- duction	Sigma control unit A13, part number		Sensors B4 and B5	Wire loom	Modificati- ons
			In production.	As a spare part.			
1.0	8750	-G04413	330 538 00	34 008 000	330 545 00	330 262 00	-
	8750	G04414-			330 545 00	330 262 00	Engaging limit lowered 520 Nm -> 350 Nm.
1.1 8750 G22507 — 330 538 10 8750 H02431 —	1.1]	330 545 10	330 262 10	Tight con- nectors.		
	8750	H02431 –			330 545 10	330 262 10	Sensor B4 placed on flywheel hou- sing.
2.0	8950Hi	H49112-K02 116 ja K05209-	336 730 00	34 008 100	330 545 10	336 839 00	New control unit, enga- ging limit 400 Nm, enga-
	8750	J20107-	;	34 008 000	330 545 10	336 839 00	ging delay 0,5 seconds.

Sigma power 2.0

In the tractor production Sigma 2.0 is fixed on **8950Hi** and on **8750** tractors. Max. engine power output: 8950hi: 160 / 200 hp. 8750: 160 / 190 hp

Sigma engages at a torque of about 400 nm (350-450 Nm)

- measured at pto shaft; ac display shows 35-40 %

Sigma disengaging limit is about 50 nm_lower_than the engaging torque limit

 
Engaging delay is 0.5 seconds (= over 400 nm min. 0.5 sec.) Disengaging delay is 5 seconds (= below 350 nm min. 5 sec.)

The function of the 2.0 system is more accurate than earlier versions due to:

- new electronics and programs in the control unit
- zero calibration is made only with high engine speed modificated fault codes
- easier to check which sensor (b4 or b5) is faulty or wrongly adjusted


"Zero" calibration have to be done after repairs of pto and after fixing a new control unit

- disengage pto (lever & switch) > start the engine > keep engine speed at 1600 rpm 25...30 seconds > zero calibration value is saved in the memory automatically > ac display shows 0–2 %
- the zero calibration value is automatically determined and saved to memory every time when engine speed has been over
 1500 rpm over 5 seconds (pto lever in off position)
- the control unit uses always the latest zero calibration value in the memory (the value is kept in memory also when starter switch is switched to stop position)



	1.70.1999	Model	Code	Page
31. Σ-power system	1. 8. 2000	8750, 8950	313	3

B. Control unit A13

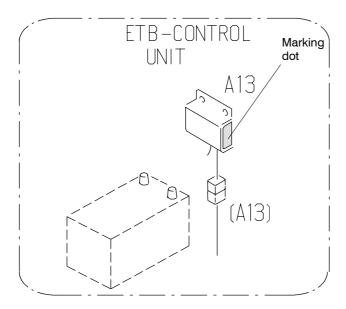

The control unit is situated in the engine compartment.

Function

The control unit gathers information from the sensors and switches and sends required electric signals to the solenoid valve and the pilot lights in order to switch on/off the higher engine output range.

The torque of the PTO unit should be at least 2 sec. (0,5 sec. in versions 2.0 and 3.0) above the switch—on torque, before the higher output range is switched on. This eliminates malfunctions caused by occasional torsional vibrations, e.g. during starting. When the PTO unit torque decreases, the torque should be at least 5 sec. below the disengaging torque before the lower engine torque range is switched on. Thus e.g. a sudden loading decrease in the PTO unit (e.g. at occasional holes or puddles etc.) does not disengage the higher output range. In addition, the disengaging torque is a little lower than the engaging torque. These differences in the times and torques also prevent possible seesawing engagements.

Note! The engaging torque has been changed, see table on page 313/2A.


If the ETB light does not light or flash, although the PTO is loaded so that the higher output range should engage and the digital instrument does not show the percentage value of the PTO output (e.g. the instrument shows 99 Ac or 0 Ac regardless of the loading of the PTO unit), this indicates that the system has been damaged, see fault tracing on pages 313/6–13.

If there are malfunctions in engagements between the two output ranges (e.g ETB-light blinking), the control unit may be damaged or the sensors have faulty adjustments.

Spare part control units have been programmed in the factory and they can be fitted in place of the damaged units (connectors are supplied with the unit). If the control unit A13 has to be changed, the solenoid valve seal must be broken.

IMPORTANT! If on 8750 tractor is fitted the control unit of version 2.0 in place of the versions' 1.0 or 1.1 units, connector A13 wires to pins 4, 7 and 12 (on tractor wire loom side) must be disconnected and the ends of the wires must be isolated (if not made earlier)

C. Solenoid valve Y13 and boost control

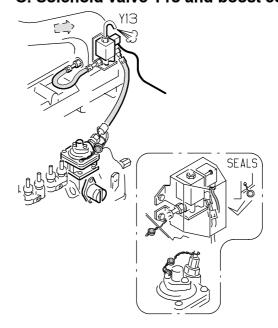

When voltage of 12 V is fed to the solenoid valve pins, the valve should become magnetic and "click" must be heard from the valve. Always when the ETB light illuminates, the solenoid is energised (higher output range is on).

Seals

To prevent overriding of the solenoid valve or supply direct to the solenoid pins, lead seals have been made on the solenoid valve and on the boost control pipe, see picture above.

If the solenoid valve has to be changed during the warranty period, the sealing must be done anew. If the control unit has to be changed, the solenoid valve seal must also be broken. If a tractor fails due to the overriding of the control unit, the warranty does not compensate the costs.


Note! The function of the boost control has been described on page 223/9, which deals with 6800 tractor, but the function is the same as on 8750 and 8950 tractors, when the solenoid valve is energised (open).

The ETB-light indicates, if the solenoid valve is not functioning, ETB-light then flashes in time 2 sec *) on and 0,5 sec off. This flashing indicates that the solenoid valve control is not on due to e.g. a short circuit or there is no load in the solenoid output pins, e.g. solenoid wire broken.

*) 1 sec. in versions 2.0 and 3.0.

	1.6:1999	Model	Code	Page
31. Σ–power system	1. 10. 1999	8750, 8950	313	4

D. Sensors B4 and B5, versions 1.0, 1.1 and 2.0

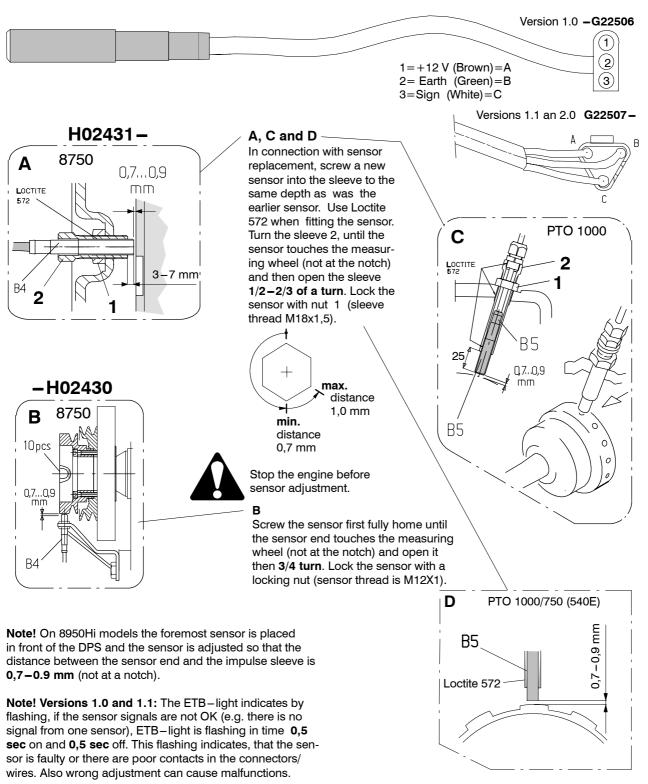

IMPORTANT! Versions 2.0 and 3.0: If the engine speed sensor is damaged, the ETB-light flashes in above mentioned time **twice**, after which there is a pause of 1,5 sec. If the PTO sensor is faulty, the ETB-light flashes **three times**, after which there is a pause of 1,5 sec.




The distance between the sensor end and the impulse surface must be at least 0,7 mm (at least 1/2 turn), otherwise the sensor can be damaged mechanically.

	1.70.1999	Model	Code	Page
31. Σ-Power system	1. 9. 2002	8950Hi	313	4A



O4 E manual anatam	1_10.1999	Model	Code	Page
31. Σ-power system	1. 8. 2000	8750	313	5

2. Electric connections, versions 1.0, 1.1 and 2.0

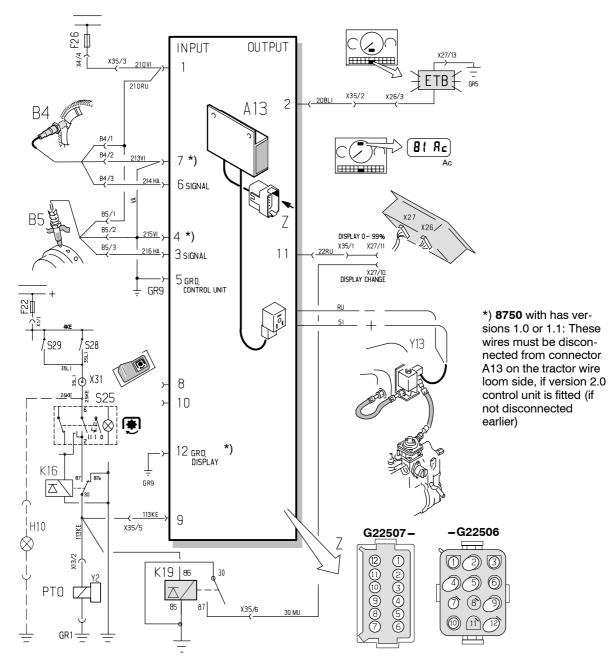

Picture 3. INPUT and OUTPUT signals to/from control unit A13 in versions 1.0, 1.1 and 2.0.

INPUT SIGNALS

Pin 1: Supply voltage (battery voltage) into the control unit A13 and into the sensors B4 and B5 via fuse F26 and starter

- Pin 3: Signal from the rearmost sensor B5
- Pin 4: Earthing of the rearmost sensor B5 (not used in version 2.0, wire 215 Green is not connected to unit)
- Pin 5: Control unit earthing
- Pin 6: Signal from the foremost sensor B4
- Pin 7: Earthing of the foremost sensor B4 (in version 2.0 RS232 RxD, wire 213 Green is not connected to unit)
- Pin 8: Not in use
- Pin 9: Control of PTO and %-display. Supply voltage, when PTO is engaged, otherwise 0 V.
- Pin 10: Not in use
- Pin 12: Earthing of display (in version 2.0 RS232 TxD, wire GR9 not connected to pin 12)

OUTPUT SIGNALS

Pin 2: Control of ETB-light. >10 V, when the higher output range is engaged (in %-display >25-30 %), otherwise 0 V.

Pin 11: Control of %-display. When the PTO is engaged: \sim 9 V=0 %, \sim 1 V=99 %.

Others! Supply voltage (12 V) into the solenoid valve Y13, when the higher output range is switched on (ETB-light illuminates), otherwise 0 V. Earth from relay K19 into the %-display, when the PTO is engaged. When not engaged, the digital instrument shows running hours. Helay NIP GIRLS AD-instrument shows 0 Ac, although the PTO is disengaged. https://tractormanualz.com/ instrument shows running hours. Relay K19 changes the display from running hours into the output percentage display.



	1.8-2000	Model	Code	Page
31. Σ-power system	1. 9. 2002		313	5A

	1 6: 1999	Model	Code	Page
31. Σ-power system	1. 10. 1999	8750, 8950	313	6

3. Fault tracing, adjustments and repairs

If the Sigma Power - system has malfunctions, the function is checked in the following order: **A.** Checking function with the aid of the ETB – light

- B. Checking function and sensor adjustment with the aid of the Ac display.
- C. Fault tracing by measuring voltages
- D. Checking and adjustment of the sensors with the aid of Fluke123 oscilloscope (if necessary)

A. Checking function with the aid of the ETB -light

The ETB light in the dashboard indicates the engagement of the system and it also shows by flashing possible faults which are found by the control unit.

ETB -light status	Description	Possible reasons
Off ¹)	Engine lower output range on (valve Y13 unenergised)	
On (when great PTO loading)	Engine higher output range on (valve Y13 is energised)	
On (although no loading in PTO) or flashes random.	Faulty function	Sensor adjustment incorrect, control unit faulty
Flashes 2 s on *) / 0,5 s off *) New control units: 1 sec on.	Solenoid valve Y13 control is not engaged (e.g. short circuit) or not load in the valve electric circuit	 Valve solenoid burnt, wire short circuit, earth fault Valve solenoid faulty, wire broken, poor connections, valve connector disconnected
Flashes 0,5 s on / 0,5 s off	- No signal from sensors B4 or B5 ¹) ²) ³)	Poor contacts in wires/connectors, sensor adjustment incorrect, faulty sensor

Note! 1) If the signal from both sensors is lacking, the ETB -light does not flash or glow. In this case the adjustment and voltages of both sensors must be checked.

Note! ²) **Versions 1.0 and 1.1**: The ETB light does not show, signal of which of the two sensors is lacking. This can be cleared up by disconnecting the engine sensor B4 connector and by starting the engine again. If the ETB -light again flashes (0,5s / 0,5s), the fault lies in the engine sensor B4 circuit. If the ETB light goes out, the fault lies in the PTO sensor B5 circuit.

Note! 3) Versions 2.0 and 3.0: Flashes twice in time mentioned above, after which there is a pause of 1,5 sec=engine sensor faulty. Flashes three times, after which there is a pause of 1,5 sec.=PTO sensor faulty.

B. Checking function and adjusting sensors with the aid of Ac-display

Instructions on instrument, see page 331/1.

The Ac-display shows in percentage, how big part of the tractor PTO output is transmitted by the PTO unit, when the PTO is engaged. On the ground of the display reading the function of the Sigma can be investigated during driving.

- 1. Start the engine (PTO disengaged), let it runt at the low idling speed for a while (about 20 s), now the control unit has made the calibration of the 0-mode. Set the instrument so that it shows the Ac-reading (Agrodata -instrument). Run the engine up to max revs (warm the engine first). If the Ac-display shows other digits as zero, this indicates that the sensor adjustment is incorrect.
- 2. If the sensor adjustment must be done, it is better to start the work with the foremost sensor. Turn the sensor in the flywheel housing fully home (not at the notch), and unscrew then 1/2-2/3 turn (thread M18x1,5), the clearance is now 0,75-1,1 mm (locking nut; spanner width 27 mm). If the foremost sensor impulse wheel is located in the front end of the crankshaft (-H02430), the clearance is easy to check and adjust to 0,8 mm.

3. Run the engine as in paragraph 1. If the situation did not change, the rear sensor must be adjusted (engine in the running during adjustment). Unscrew the locking nut (1000; spanner width 22 mm, 1000/540 E; 27 mm) and turn the sensor outwards, and test whether the fault disappeared or the situation changed.

With the adjustment is seek situation, in which percentage readings do not appear in the Ac-display, and the ETB-light does not flash in any revolution range. The rear sensor clearance can be checked, if needed, through the hole for the free return oil connection for the auxiliary hydraulics.


4. Start the engine and let it run at the low idling speed about 20 s. Engage PTO, run the engine up to max. revs. Small readings (1-3%) can be visible in the Ac-display when accelerating. Set the engine revs to 1800-2200, and pull at the hydraulic valve block lever. In the Ac-display there must be 10-25% (shaft twist caused by hydraulic pump, depends on oil temperature and revs).

If the Sigma still has malfunctions after adjusting sensors, the possible fault is seek by measuring internal voltages of the system.

	1. 10-4999	Model	Code	Page
31. Σ-power system	1. 9. 2002	8750, 8950	313	7

C. Fault tracing by measuring voltages

The latest connectors (**G22507** –) are tight, and connector rubber seals must not be opened, but the voltage measurements are done by connecting ETV 894 310 into the wire loom. On the earlier connectors (**-G22506**) the measurements can be done through the holes in connector A13 and/or through the holes in connectors B4 and B5. There are pin numbers on the connector housings.

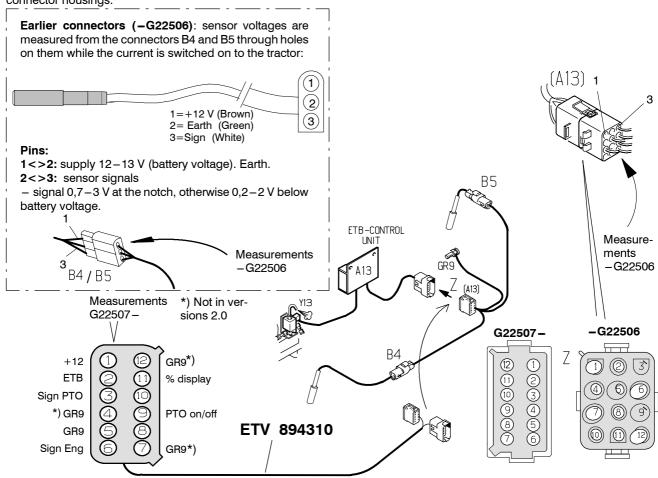

If the Σ -Power has malfunctions, disconnect connectors B4, B5 and A13 and reconnect them, so that possible poor contacts disappear. If the malfunctions still exist, carry out the following voltage measurements:

Earlier connectors (-G22506): Carry out measurements through the holes in the connectors.

The latest connectors (G22507-): Connect measuring cable ETV 894 310 between the control unit connector A13 and carry out measurements from the measuring cable connector.

Switch on current to the tractor and carry out the following measurements:

Pins	
+<> -	measure battery voltage from the battery terminals (12-13 V)
1<>5	supply voltage (battery voltage) into the control unit, control unit earthing
1<>7	Versions 1.0 and 1.1: supply voltage (battery voltage) into the sensors, sensor earthing
1<>4	Versions 1.0 and 1.1: supply voltage (battery voltage) into the sensors, sensor earthing
6<>5	signal from foremost engine sensor B4
3<>5	signal from rearmost PTO sensor B5
	Versions 1.0, 1.1 and 2.0: signal 0,7–3 V at the notch, otherwise 0,2–2 V below battery voltage
1<>12	Versions 1.0 and 1.1: supply voltage (battery voltage), display earthing
9<>12	Versions 1.0 and 1.1: control of PTO and %-display
	 supply voltage, when the PTO is engaged, otherwise 0 V
9<>5	Versions 2.0: control of PTO and %-display
	 supply voltage, when the PTO is engaged, otherwise 0 V
Start the eng	gine:
Pins	
11<>12	Versions 1.0 and 1.1: control of %-display
	– when the PTO is engaged: \sim 9 V= display 0 %, \sim 1 V= display 99 %.
11<>5	Versions 2.0: control of %-display
	– when the PTO is engaged: \sim 9 V= display 0 %, \sim 1 V= display 99 %.
2<>12	Versions 1.0 and 1.1. Control of ETB-light
	- > 10 V, when the higher output range is on ($> 25 - 30$ % in display), otherwise 0 V.
2<>5	Versions 2.0: Control of ETB-light
	->10 V, when the higher output range is on (>25-30 % in display), otherwise 0 V.
	– >10 V, when the higher output range is on (>25–30 % in display), otherwise 0 V. https://tractormanualz.com/
	9.5

	1 10.1999	Model	Code	Page
31. Σ-power system	1. 9. 2002	8750, 8950	313	8

Incorrect voltage readings may be caused by:

Pins

- +<>-: battery cable shoes, bad battery or faulty alternator.
- 1<>5: fuse F26, connectors X35, A13, or X4 or earth point GR9 in the cab front wall.
- 1<>7: Versions 1.0 and 1.1: connector A13 or earth point GR9.
- 1<>4: Versions 1.0 and 1.1: connector A13 or earth point GR9.
- 6<>5: connectors B4 or A13 or earth point GR9 or sensor B4.
- 3<>5: connectors B5 or A13 or earth point GR9 or sensor B5.
- 1<>12: Versions 1.0 and 1.1: fuse F26, connectors X35, X4, A13 or earth point GR9.
- **9<>12: Versions 1.0 and 1.1**: fuse F22, switches S28 or S29, emergency stop socket X31, PTO switch S25, PTO emergency stop relay K16 or connector X35 or earth point GR9.
- 11<>12: Versions 1.0 and 1.1: connector A13 or earth point GR9. If these are OK, but the voltages are incorrect, fault can lie in control unit A13. If the voltages are OK, but the %-display does not function, check con nectors X35 and X27. If the %-display is still defective, check relay K19. Fault can also lie in the instrument electronics.
- 2<>12: Versions 1.0 and 1.1: connector A13 or earth point GR9. If these are OK, but the voltage read ings were incorrect, the fault lies in the control unit A13. If the voltages were OK, but the ETB-light does not light, check connectors X35, X26, X27 and ETB-light earth point GR5. If these are OK, but the ETB-light does not light, the lamp can be defective.
- **9<>5 Version 2.0:** fuse F22, switches S28 or S29, emergency stop socket X31, PTO switch S25, PTO emergency stop relay K16 or connector X35 or earth point GR9.
- 11<>5: Versions 2.0: connector A13 or earth point GR9. If these are OK, but the voltages are incorrect, fault can lie in control unit A13.
 If the voltages are OK, but the %-display does not function, check connectors X35 and X27. If the %-display is still defective, check relay K19. Fault can also lie in the instrument electronics.
- 2<>5 Versions 2.0: connector A13 or earth point GR9. If these are OK, but the voltage readings were incorrect, the fault lies in the control unit A13. If the voltages were OK, but the ETB-light does not light, check connectors X35, X26, X27 and ETB-light earth point GR5. If these are OK, but the ETB-light does not light, the lamp can be defctive.

Note! If the measurements above show, that the unit is OK, but the higher output range does not engage, although the PTO loading is high (>25-30 %), the fault lies in the control unit A13, in the solenoid valve Y13 or in its wiring.


Others

If the sensor (B4, B5) wires are connected wrongly, the sensors will be damaged and also the control unit can be damaged. A damaged sensor does not damage the control unit, but too high voltage (>16 V) may damage it. The control unit does not be damaged, although the output lines (e.g. solenoid valve) are in a short circuit.

		Model	Code	Page
31. Σ-power system	1. 8. 1998	8750	313	9

D. Checking and adjusting sensors with Fluke123 -oscilloscope (if necessary)

1. Connect the measuring cable **ETV 894310** (requires later connectors, G22507 –) to the connector (A13) of the control unit. Connect the oscilloscope (FLUKE 123 Scopemeter) to the measuring cable connector with cables ETV 894 400. A red wire to connector pin 6 (foremost sensor channel A) and blue wire to connector pin 3 (rear sensor channel B). The middle wire (black) of the oscilloscope is connected to connector pin 5 (earth) (see picture below).

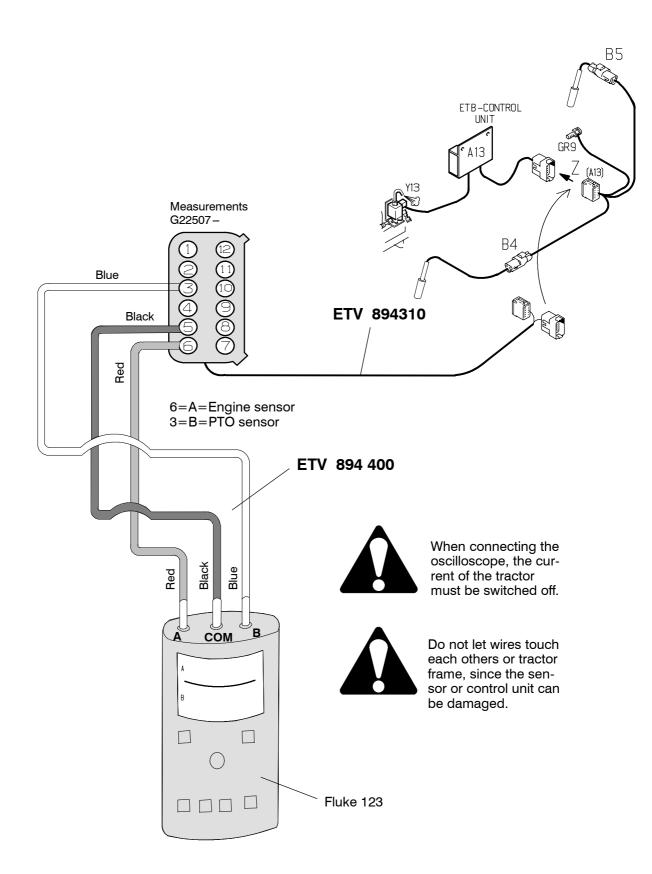


	1 8: 1998	Model	Code	Page
31. Σ-power system	1. 10. 1999	8750	313	10

INTERPRETATION OF OSCILLOSCOPE WAVES AND SPECIFIED VALUES

2. Select oscilloscope settings; channel A DUTY (pulse ratio %) and channel B PHASE (phase difference B>A (deg)) and DUTY (pulse ratio %). Display range of both channels; 5 V/d, 2 ms. More detailed instructions for the use of the oscilloscope can be found in the end of this instruction on pages 313/12–13.

The phase difference indicates the time difference of the waves in channels A and B as degrees within $-160^\circ...0^\circ...+200^\circ$ (the total wave length is 360°). The reading does not mean the angle of the crankshaft, since the sensor sends 10 pulses per one engine rotation. The sign (+/-) changes at degree values of 0° and $+200^\circ$ (= -160°), since at these degrees the Oscilloscope changes the comparing to the previous/next wave.

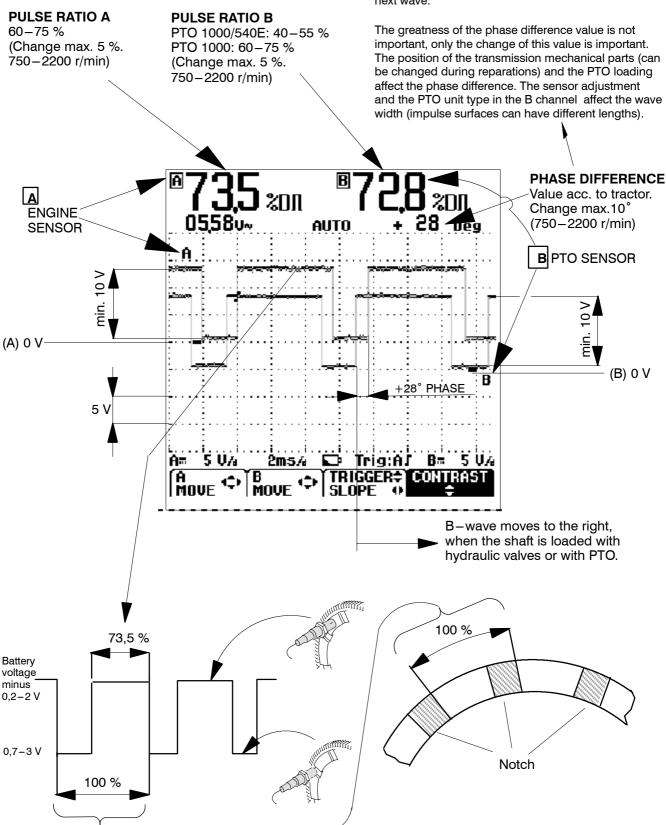

31.	Σ —	power	system

1 8: 1998 Model Code Page 1. 10. 1999 8750 313 11

- 3. Start the engine and let it run about 20 s at the low idling speed, PTO disengaged and the hydraulic pump in unloading circuit. Now the Ac –display must show 0, then the control unit has made the calibration of the zero mode.
- 4. In the Fluke -instrument display there must appear two step waves (see picture). The upper A—wave shows signal from the engine sensor B4 and the lower wave signal from the PTO sensor B5.

If one of the waves does not appear, check the wires and measure internal voltages. Change the sensor(s) when necessary. Adjust the distance between the sensor and the impulse wheel to 0,8 mm. Turn the sensor fully home (not at the notch), after which open it 1/2-2/3 turn (thread M18x1,5), the clearance is then 0,75-1,1 mm (locking nut; spanner width 27 mm). If the front sensor impulse wheel is located at the front end of the crankshaft (-H02430), the clearance is easy to adjust to 0,8 mm.

5. Let the engine run at the low idling speed and read off the pulse ratio values (% D). Raise the revs evenly to the max. revs and read again off the pulse ratio values. The values are allowed to change at the most 5% —units. The readings can be between 40–75% (PTO type and position of the foremost sensor affect the reading). The change of the pulse ratio values at different engine revs must be within the permissible %—limits.

If necessary, unscrew the sensor locking nut and adjust the sensor distance from the impulse wheel by turning the sensor a little at a time and by waiting for a while to show influence of the adjustment, until the readings remain within the given limits in the whole engine revolution range. **Be careful** not to touch the impulse wheel with the sensor: sensor can be damaged. The sensor end must always be at least 0,7 mm out of the impulse wheel surface (at least 1/2 turn open).


- 6. Read off sensors' phase difference, the change can be at the most 10° between the min and max revs of the engine. The value of the phase difference is unimportant, only the change is important (the phase difference value can be any between 1..180° (or -1 180°). If the value is e.g. 175° at the low idling speed and at max. revs -8° the change is 13°.
- 7. Set the display time value to 10 ms/d (with time-key). Let the engine run at low idling speed. Check that waves are in the display in even distances and that no wave is missing (stop the waves with hold-key).
- 8. Set the display scale to 5 ms/d, raise the engine revs to 2100 RPM. Check the same values as in stage 7. If one wave is missing, adjust the sensor and test its function.
- 9. Carry out the same test as in instr. B in paragrapf 4. If it is possible to use a PTO brake, the ETB light must come on with readings 25..32 % in the Ac-display (ca. 350-450 Nm in the PTO shaft). When loading the PTO the B-wave (sensor B5) is moving to the right and the phase difference value must change.


If still malfunctions occur, change the control unit A13.


10. Disconnect the measuring cable and wires from the tractor, and connect connector A13. Ensure, that the sensor locking nuts are tightened.

Figures below show two different measuring results from two different tractors with different PTO units (widths of waves). The position of the waves depends on a tractor, and thus the oscilloscope reading varies in different tractors.

EXAMPLE 1. PTO 1000/750 (540E)

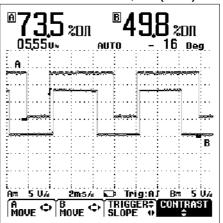


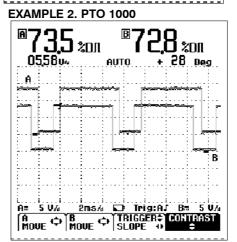

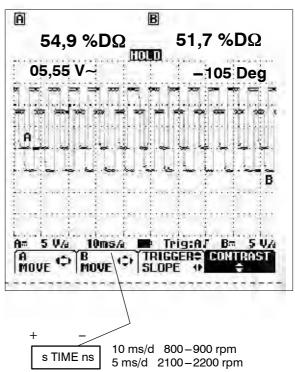



		Model	Code	Page
31. Σ-power system	1. 8. 1998	8750	313	12

More detailed instruction on how to carry out the oscilloscope settings:

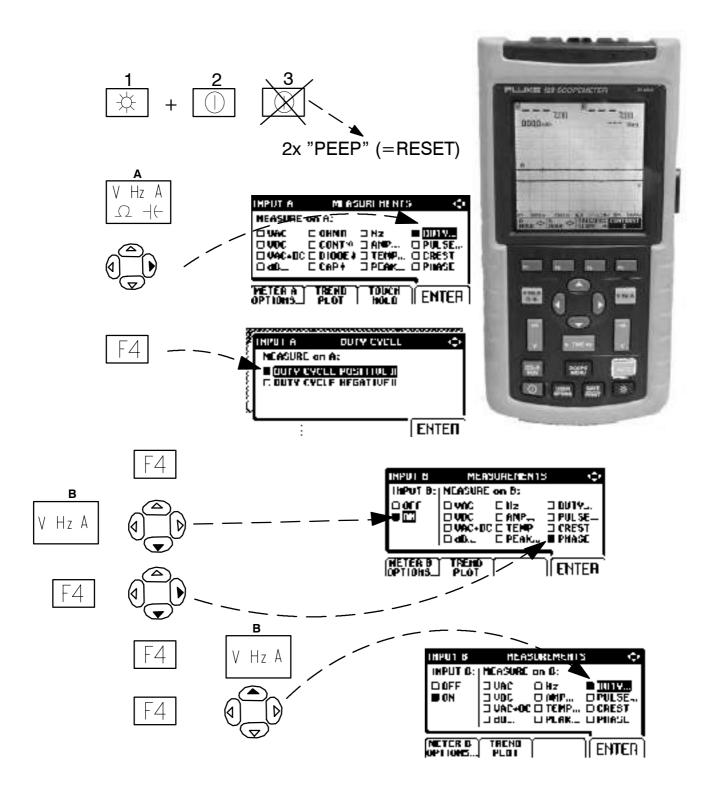

	1.8.1998	Model	Code	Page
31. Σ-power system	1. 6. 1999	8750, 8950	313	13

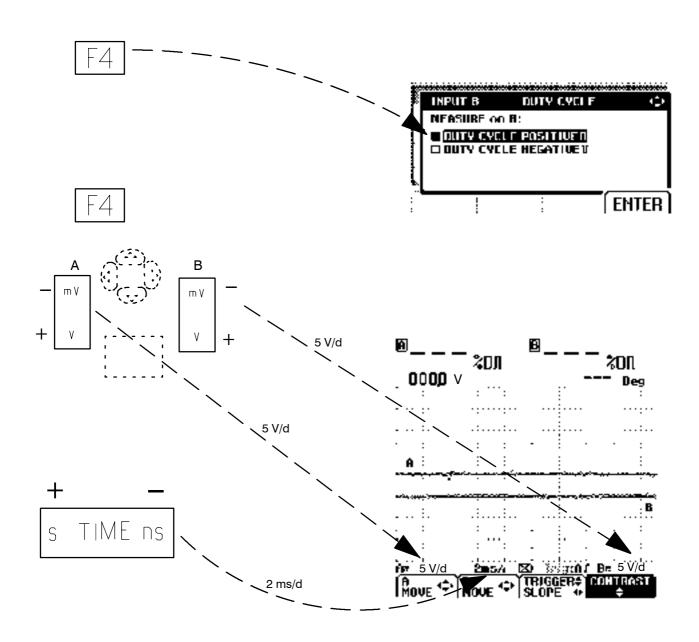

 



	1.6.1999	Model	Code	Page
31. Autocontrol 2.2/2.3	1. 8. 2000	6200-8150	314	1

Autocontrol 2.2 replaces under code 312 presented Autocontol 2.1 from ser. no. **J05133** incl. on tractors 6200 – 8150 (not Hi-Tech). Autocontrol 2.2 includes also **ACB** power lift which is a standard equipment on these tractors, see code 321. **Note!** AC 2.3 replaces AC 2.2. with effect from chassic no K44242.

Autocontrol 2.2/2.3 controls the transmission as follows:

1. Differential lock

The lock is controlled with a three-position rocker switch on the driver's right.

A. Rocker switch front edge depressed.

– the lock is always engaged except when brake pedal/pedals are depressed or when the power lift is in the transport position (signal light illuminates however). The lock engages when the brake pedal/pedals are released or when the lift/lower switch is in the lowering position or in the middle position.

B. Rocker switch in the middle position

- the differential lock is disengaged

C. Rocker switch rear edge depressed (spring returned)

– When the switch rear edge is depressed, the lock is engaged but it disengages when the brake pedal/pedals are depressed. After that the lock re-engages only if it is engaged with the switch again.

NOTE! The function of the differential lock has been changed in the latest tractors (AC 2.3), see page **314/10.** The function is the same as in the HiTech-tractors.

2. Front wheel drive

The 4WD is controlled with a three – position rocker switch on the driver's right.

A. Rocker switch front edge depressed

 The 4WD is disengaged except when braking with both brake pedals. If only one brake pedal is used, the 4WD does not engage.


B. Rocker switch in the middle position

 automatic position in which the 4WD engages when the diff. lock is engaged. When disengaging the diff. lock, also the 4WD disengages, but, however, not when braking with both brake pedals.

C. Rocker switch rear edge depressed

The 4WD is always engaged. Pilot light illuminates

31. Autocontrol 2.2 / 2.3 | Model | Code | 6200-8150 | 314

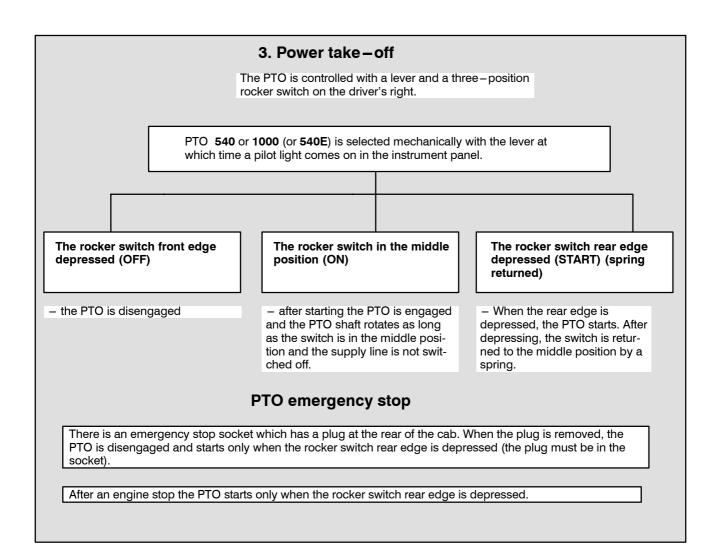

4. Delta Powershift (DPS)

The Delta Powershift is controlled with two push buttons in the speed gear lever knob.

A. The front push button is depressed.

 With each press the gear ratio is changed one step up.

B. The rear bush button is depressed.

Page

2

 With each press the gear ratio is changed one step down.

In the dashboard there are pilot lights, that show which one of the DPS ratios is engaged:


I=slowest ratio

II=middle ratio

III =fastest ratio

Delta Powershift circuit card A10 has a buzzer, which warns parking brake functions and head lights functions.

After starting the engine the DPS is always in the slowest ratio I. When the clutch pedal is depressed, the DPS ratios are changed which can be verified from the pilot lights.

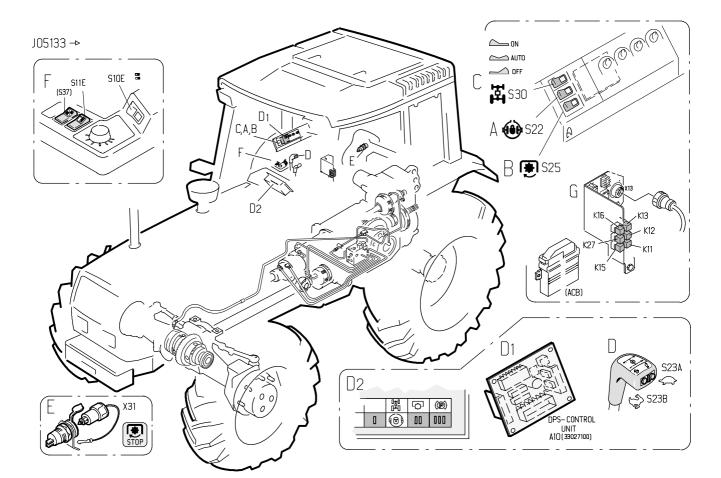

Picture 1. AC 2.2 / 2.3, components

A. Diff. lock rocker switch

B. PTO rocker switch

C. 4WD rocker switch

D. DPS push buttons in the speed gear lever knob

D1. DPS circuit card (A10, not HiTech) in connection with ACB power lift switch panel. The circuit card is accessible after removing the switch panel (see page **320/10**).

D2. Combination instrument, in which there are DPS pilot lights.

E. PTO emergency plug at the rear of the tractor

F. S10E: Lift/stop/lower – switch (Autocontrol – switch) S11E: Forced lowering switch

G: Relay bracket in the lever console

Relays **K11 – K13:** Diff. lock control relays (relay K12 is not fitted in AC 2.3).

Relay **K15**: 4WD control relay Relay **K16**: PTO control relay

There is a relay **K7** in the fuse box for the four wheel brak-

Relay K27: 4WD control relay

Note! In the relay bracket there can also be other relays depending on the tractor equipment (e.g. HiShift-relay K24, Control stop relay K18 and/or SigmaPower relay K19).

Note! The wire looms of the AC 2.2/2.3 tractors have been standardized with the wire looms of HiTech-models. Thus there is a connector bracket in the lever console. E.g. solenoid valve connector X13 is no more placed under the parking brake console, but X13 is a 37-pole connector in the lever console (as in HiTech-tractors).

31. Autocontrol 2.2 / 2.3	$\overline{}$	Model	Code	Page
on Addoonli of 2.2 / 2.5	1. 6. 1999	6200-8150	314	4

1. Fault tracing

A. General

Note! In connection with malfunctions fuses F6, F8, F11, F22 and F27 must be checked, which affect the function of the AC 2.2.

Important! If in AC 2.2 a pilot light (I, II or III) of engaged DPS ratio starts to flash, this indicates that the wires between the solenoid valve (Y4 or Y6) in question and the circuit card A10 of DPS have poor contacts or there is a short circuit in the solenoid valve or in wires. Tractor driving can be continued with a such DPS ratio, which is functioning i.e. the pilot ligts illuminates without flashing.

If one of the DPS pilot lights is flashing, so:

 check that the 18-pole connector is correctly fastened to the DPS circuit card A10 (the circuit card is placed under the ACB-power lift switch panel).

 check solenoid valves Y4 and Y6 and their wires and connector X13 on the support plate in the lever console (pins, see wiring diagram).

Solenoid valves:

Y1: diff. lock (magnetic, when diff. lock is engaged)

Y2: PTO (magnetic when PTO engaged)

Y3: 4WD (magnetic when 4WD disengaged)

Y4: DPS (magnetism depends on transmission type, see picture on the next page, +=magnetic)

Y6: DPS (magnetism depends on transmission type, see picture on the next page, +=magnetic)

Position of the solenoid valves on the valve block (on the LH side of the gearbox housing), see e.g. picture **5** on page **440/13**.

The resistance value of all solenoids is 11–12 ohms. If the transmission control system has malfunctions, check the solenoid valves. The reisistance of the valves can be measured on the wire loom connectors (e.g. X13), but if it is infinite, it must be measured on the valve pins, so that possible breaks can be verified.

If the resistance value is OK when measuring on the valve pins but the resistance is zero when measuring between pins 3<>1 or 3<>2 of DPS circuit card connector A10, the diodes are in short circuit and they must be replaced (solenoid valve diode housing V1, see e.g. picture on page 310/6C). In AC 2.3 diode housing V3 is for solenoid valves.

Supply voltages of DPS circuit card A10:

If the DPS has engaging problems, make sure that the DPS circuit card gets supply voltages by measuring it on pins of connector A10 (DPS circuit card):

- pin 3: continuous ground
- pin 4: 12 V via ignition switch
- Pin 6: 12 V via fuse F22 and ignition switch
- pin 11: 12 V continuous voltage via fuse F11

Check also earth points GR1 and GR5)

If no supply voltage exists, check the condition of the battery and check supply wires and various components in these circuits.

B. Buzzer functions

The buzzer notifies, when parking, that the parking brake must be applied (engine stopped) or that a driver does not drive with applied parking brake (engine running). The buzzer also alarms if the head lights remain on after the current is switched off.

Testing method:

- start the engine (oil pressure up)
- apply parking brake. The buzzer alarms at intervals of 5 seconds.
- switch on the head lights. Stop the engine and switch off current (oil pressure down). The buzzer starts to alarm about once or twice per second. Switch off the head lights, at which time the buzzer stops to alarm.
- release parking brake. The buzzer starts to alarm continuously

The buzzer is fitted on the DPS circuit card A10.

The buzzer can be tested in the loose circuit card as follows (see picture on the next page):

- Ground pin 3 and feed voltage of 12 V to pin 11.
- Ground pin 13 and feed voltage of 12 V to pin 4, at which time the buzzer must give continuous signal. Disconnect pin 4, after witch the buzzer should alarm about 2 min.
- Remove ground from pin 13 and ground pin 12 and feed a voltage of 12 V to pin 4, after which the buzzer should give discontinuous sound signal.
- Feed pin 10 with 12 V and disconnect pin 4, after which the buzzer must give discontinuous alarm signal.

Note! If the buzzer is damaged, the whole DPS circuit card A10 must be replaced.

C. DPS-circuit card A10

Pins 1 and 2: Current to DPS solenoid valves (Y4, Y6), battery voltage (12 V)

Pin 3: Continuous ground

Pin 4: voltage of 12 V via ignition switch and

fuse F22.

Pin 5: 12 V, when foremost DPS button is de-

pressed. Otherwise unenergised.

Pin 6: 12 V via fuse F22 and ignition switch
Pin 10: 12V, when head lights on, otherwise unenergised

Pin 11: continuous current via fuse F11 (12 V)

Pin 12: when parking brake is applied, pin 12


is earthed.

Pin 13: earthed, when engine is stopped

Pin 14: 12 V, when rearmost DPS button depressed. Otherwise unenergised.

Pin 15 and 16: In transmissions 460 and 650 wire is connected to pin 15 and in transmission 300 to pin 16 (12 V).

Pin 17, 18 and 8: Signals to DPS pilot lights (12 V).

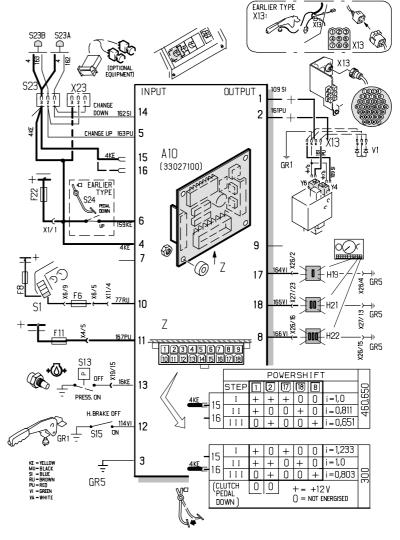

Position of connectors

X1: In fuse box X4: In fuse box X6: In fuse box X11: In cab roof

X13: on support plate in lever console X19: Socket on the cab wall on the RH side

X26: White connector on the rear face of the instrument X27: Blue connector on the rear face of the instrument

S23: DPS push button connector at the lower end of the gear lever

X23: DPS extra push buttons connector at the lower end of the gear lever

Picture 2. Delta Powershift circuit card A10

+=energised (solenoid magnetic), 0=unenergised

Z= 18-pin connector of the circuit card

Pins 7 and 9 not in use

X23= connector for extra push buttons

GR1 = earth point in the rear part of the lever console

GR5= earth point on the cab front wall

Note! Position of various components and wiring diagram are shown under code 310.

V1 = diode housing of solenoid valves. In AC 2.3 diode housing V3 is for solenoid valves.

Note! Electric signals into the circuit card A10 can be measured from pins of 18-pole connector when the ignition is switched on. Measure voltages with different switch positions (see picture above). If the measured value is faulty, check wires, switches and connectors which affect the circuit in question.

From pins 1 and 2 of the circuit card is sent current to the DPS solenoid valves Y4 and Y6 (see +/0 diagram in the picture above).

If no signal is sent to the solenoid valves, although other parts are OK, the fault lies in the circuit card.

On pins 1 and 2 can be measured voltage value when the current is switched on and the connector is fastened to the circuit card A10. When measuring on the lower pins, be carefully not to short circuit the poles. Measure rather on the wire side of the connector.

From pins 17, 18 and 8 are sent signals to the DPS pilot lights (12 V) in the dashboard instrument. When the DPS push buttons are pressed (ignition on) the pilot lights in the instrument must light up in a correct order. If the pilot lights have malfunctions, check the lamps and wires from the circuit card to the lamps. If the lamps and the wires are OK, but malfunctions occur, change the whole circuit card A10.

D. 4WD control

Checking function (engine is running):

 Depress the 4WD rocker switch rear edge, at which time the 4WD pilot light must light up.

This shows that:

- the 4WD switch functions
- the 4WD pilot light functions
- Depressed the switch front edge, at which time the pilot light must go out
- Depress separately unlatched brake pedals. The 4WD ind. light must not come on.
- Connect the brake pedals together and depress the pedals at which time the 4WD engages (ind. light comes on)
- Release the brake pedals and the ind. light goes out.
- apply parking brake, the 4WD ind. light must come on
- release parking brake at which time the 4WD ind. light must go out

This shows that:


- brake pedal switches function
- relays K7 and K15 function
- parking brake switch functions
- Drive the tractor at speed of 4 km/h.
- Make a tight turn
- Engage and disengage the 4WD several times. When the 4WD is engaged, you should see the front axle skid and feel a jerk as you engage and disengage.

This shows that:

- solenoid valve functions
- 4WD clutch functions
- Turn the 4WD switch to the middle position (automatic position, in which the 4WD engages, when the diff. lock is engaged). Testing of this position is made in connection with checking of the diff. lock, see page 314/8 (AC 2.2) or page 314/10 (AC 2.3).

Note! In case of malfunctions always check fuse F22. When the 4WD is disengaged, the solenoid valve Y3 is energised and the nut at the end of the valve is magnetic which can be verified e.g. with a screwdriver.

Note! 4WD is always engaged, when the engine is stopped (cup springs engage the 4WD). The use of the parking brake earths relays **K7** and **K15** and the 4WD is engaged.

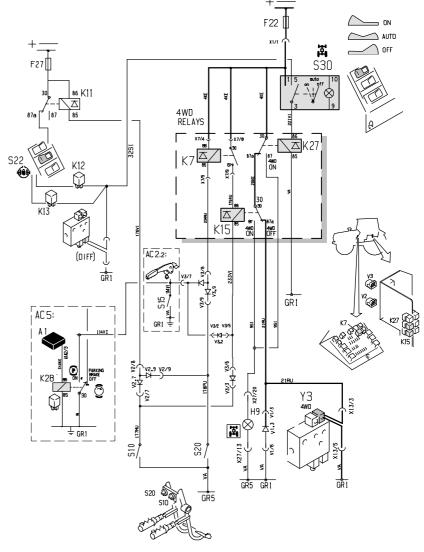

Picture 2.4WD control. The system gets the supply via the ignition switch and fuse F22.

F22: fuse

\$30: three-position rocker switch of 4WD

Y3: 4WD solenoid valve

H9: 4WD pilot light of 4WD

\$10 and \$20: brake light switches

K7 and **K15**: relays, which switch on 4WD, when latched together brake pedals are depressed.

K27: 4WD relay (4WD engages, when the diff. lock is engaged).


GR1: earth point (solenoid valvest) in the rear part of the lever console

GR5: earth point under the dashboard on the cab front wall **V1:** Solenoid valve diodes (see picture on page **310/6C**) **V3:** 4WD diode housing (see picture on page **310/6C**). This diode housing is for solenoid valves in AC 2.3.

Note! Engagement of the 4WD during braking can be prevented, when relay K7 (in the fuse box) is removed.

	1 6: 1999	Model	Code	Page
31. Autocontrol 2.2 / 2.3	1. 8. 2000	6000-8750	314	7

E. Differential lock control

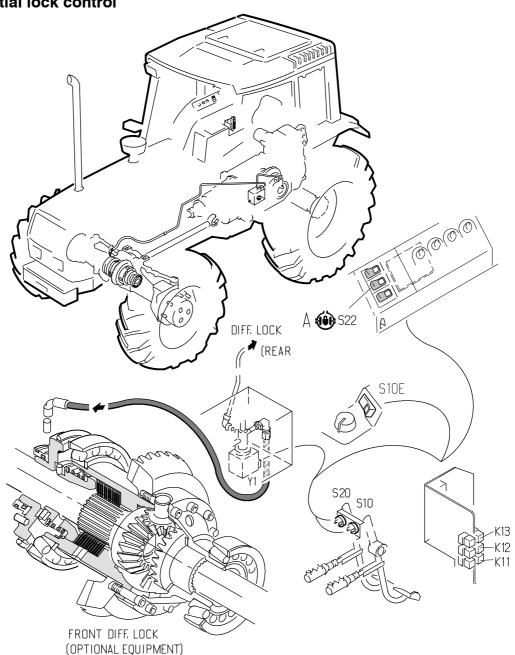

Picture 3. Differential lock component

Y1: Diff. lock solenoid K11, K12 (not in AC 2.3) and K13: control relays S10 and S20: brake light switches

The differential lock rocker switch S22 is placed on the selector panel on the driver's right. In addition, the lift/stop/lower switch of the ACB power lift also controls the diff. lock.

The relays are placed in the lever console and are accessible after removing the console side panel:

K11: Switches off voltage to the diff. lock solenoid valve and switches on current to the brake lights, when the brake pedal/pedals are depressed. Switches on voltage again to the solenoid valve, when the brake pedal/pedals are released. Ind. light comes on.

- K12: Switches on voltage to the solenoid valve, when the rocker switch rear edge is depressed. Ind. light comes on. When the brake pedals after this are depressed, relay K11 is closed and current from relay K12 is cut—off and the relay opens and switches off current to the solenoid valve and the ind. lights goes out. The diff. lock does not engage after this although the brake pedals are released. Note! This relay is not fitted in AC 2.3.
- K13: Switches off voltage to the solenoid valve and the lock disengages, when the lift/lower switch is in the lifting position. The lock ind. light, however, illuminates. When the implement is lowered down to the working position, switches on voltage to the solenoid valve and the differential lock is engaged.

31. Autocontrol 2.2

1. 8. 2000

Model **6000-8750**

Code **314**

Page 8

Checking function of the differential lock control (engine at idling speed). Concerning AC 2.3, see page 314/10.

- Depress the rocker switch front edge at which time the lock indicator light comes on. If the 4WD switch is in the middle position, also the 4WD pilot light lights up and the 4WD is engaged.
- Turn the switch to the middle position at which time the indicator light goes out (also 4WD disengages).

This shows that:

- the rocker switch front and middle positions function
- The lock indicator light functions
- the 4WD automatics function and also relay K27.
- Depress the switch front edge at which time the indicator light comes on (also the 4WD engages, if the 4WD switch is in the middle position)
- Disconnect the brake pedals and depress the pedals separately and together. When depressing the pedal/pedals, the diff. lock ind. light goes out and the brake lights comes on. When the pedal/pedals are released, the ind. light comes on and the brake lights goes out. Note! Also 4WD disengages, when the brake pedals are depressed separately)

This shows that:

- the brake pedal switches function
- the switches are correctly positioned
- relay K11 functions
- 4WD relay K27 functions
- Depress the switch rear edge at which time the ind. light should come on (also the 4WD engages, if the 4WD switch is in the middle position).
- Depress the brake pedal/pedals at which time the ind. light goes out (also 4WD disengages, when the brake pedals are depressed separately)
- Release the brake pedal/pedals. The diff. lock ind lights must not come on and the lock must not engage. 4WD remains on in the automatic position, when latched together brake pedals are depressed.

This shows that:


- the rocker switch rear position functions
- relays K11 and K12 function
- 4WD automatics function
- Depress the switch front edge and the ind. light comes on
- Turn the lift/stop/lower switch to the transport position at which time the diff. lock disengages. Ind. light, however, remains on.
- Turn the lift/stop/lower switch to the lowering position or to the middle position and the differential lock engages.

This shows that:

- lift/stop/lower switch functions
- relay K13 functions
- Drive the tractor at speed of 4 km/h and engage the lock by pushing the rocker switch front edge down. Ind. light comes on
- Make a tight turn, raise and lower the lift with the lift/stop/ lower switch at which time the diff. lock engages and disengages.
- You should see the rear tyres skid when the differential lock is engaged and feel a jerk as you engage and disengage. The front axle lock functions in the same way, if fitted (during the test the 4WD should be disengaged).

This shows that:

- solenoid valve functions
- differential lock functions

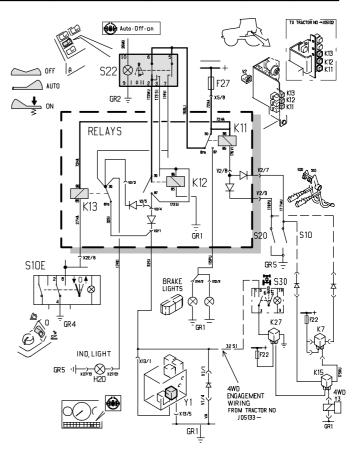

Picture 4. Differential lock control.

The system is supplied via the ignition switch and via the fuse F27).

\$22: Diff. lock control switch

K11, K12, K13: diff. lock control relays

S10E: Lift/stop/lower-switch of the ACB power lift

H20: Diff. lock pilot light Y1: Diff. lock solenoid valve S10 and S20: brake light switches

GR1: earth point in the rear part of the lever console

GR2: earth point in the roof

GR5: earth point under the dashboard on the cab front wall **V1**: Solenoid valve diode housing (see picture on page 310/6C)

V2: AC 2.2 diode housing (see picture on page 310/6C).

Important! Always check the fuse F27, if there is malfunctions in the control system. The diff. lock solenoid valve is fitted on the lower side of the valve block on the LH side of the gearbox. The rearmost valve Y1 is for the diff. lock. When the lock is on, the solenoid valve is energised. Then the nut on the valve is magnetic which can be verified with e.g. a screw-driver.

F. PTO control

Checking function:

Make sure that the plug is fitted in the rear emergency socket. Move the control lever in the middle position. Check that the PTO rocker switch front edge is depressed (OFF). Switch off tractor current. Start the engine and let it run at idling speed.

- Move the PTO lever to the foremost position (540) at which time the indicator light should come on. The PTO shaft must not rotate.
- Move the lever to the middle position at which time the ind.
 light goes out
- Move the lever to the rear position (1000 or 540E) and the ind. light should come on. The PTO shaft must not rotate.
 Move the lever back to the middle position and the ind. light goes out.

This shows that:

- ind. light switches S28 and S29 functions
- indicator light functions
- Move the lever to the front position (540). Ind. light comes on.
- Turn the PTO rocker switch to the middle position (ON)
- Depress the rocker switch rear edge (START). The PTO shaft begins rotate and the rocker switch is returned to the middle position (ON) by the spring.

This shows that:

- PTO control relay K16 functions
- solenoid valve functions
- Depress the rocker switch front edge (OFF)
- PTO shaft stops to rotate
- Turn the switch to the middle position. The shaft must not rotate. Depress the switch rear edge at which time the shaft starts to rotate.

This shows that:


- PTO rocker switch functions
- Remove the plug from the rear socket at which time the shafts stops rotating. Also the indicator light goes out.
- Refit the plug. The shaft must not rotate but the ind. light comes on.
- Depress the switch rear edge and the PTO shaft must start to rotate.

This shows that:

- PTO emergency stop functions
- relay K16 functions
- Stop the engine.
- Start the engine. The PTO shaft must not rotate although the lever is in the engaged position
- Depress the rocker switch rear edge at which time the shaft begins to rotate.
- Move carefully the lever to the middle position. The ind. light goes out and shaft stops.
- Move the lever to the front position. The shaft must not rotate
- Depress the rocker switch rear edge after which the PTO shaft starts to rotate.

This shows that:

- The PTO automatic stop functions when the main current circuit is cut off.
- relay K16 functions

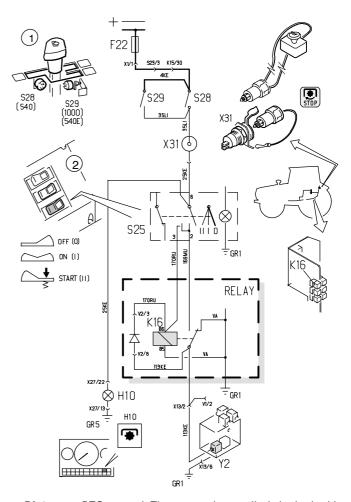

Picture 5. PTO control. The system is supplied via the ignition switch and fuse F22.

1. PTO control lever (540 – neutral – 1000 (540E)

S28: Lever switch S29: Lever switch

X31: Emergency stop socket

2. 3-pos. PTO rocker switch

V1: Solenoid valve diode housing (see picture on page 310/6C)

V2: AC 2.2 diode housing (see picture on page 310/6C).

V3: Solenoid valve diode housing in AC 2.3.

H10: Pilot light

Y2: PTO solenoid valve

K16: relay which connects current to the solenoid valve, when the rocker switch rear edge is depressed (START). Solenoid is energised so far as the rocker switch is in the middle position (ON) and the circuit is not broken with the lever, emergency plug or with the ignition switch.

GR1: earth point in the rear part of the lever console

GR5: earth point under the dashboard on the cab front wall.

Important! The solenoid valve Y2 is placed under the valve block on the LH side of the gearbox (see picture). When the solenoid is energised, pressure oil is directed to the PTO clutch and the shaft can rotate. The nut at the end of the solenoid is magnetic when the solenoid is energised.

The function of the differential lock has been changed in the latest tractors (AC 2.3): (concerns also HiTech models 6250Hi-8950Hi).

Note! Manufacturing of AC 2.3, K44242—. In connection with modification of the differential lock function, relay K12 has been removed and diodes V3 are for solenoid valves. Wiring diagram on pages **310/83—88** incl. AC 2.3.

1. Control of differential lock

The lock is controlled with a three-position rocker switch on the driver's right.

A. Rocker switch front edge depressed.

the differential lock is disengaged.

B. Rocker switch in the middle position.

– the lock is always engaged except when brake pedal/pedals are depressed or when the power lift is in the transport position. The lock engages when the brake pedal/pedals are released or when the lift/stop/lower switch is in the lowering position or in the middle position.

C. Rocker switch rear edge depressed.

 the lock is always engaged except when brake pedal/pedals are depressed. The lock engages when the brake pedal/pedals are released.

C. Differential lock control in AC 2.3

Depress the diff. lock rocker switch front edge. Now the lock must be disengaged and the pilot light must not be on. Solenoid valve Y1 must be unenergised.

This shows that:

rocker switch front position is OK.

Press the rocker switch to the middle position, at which time the lock must become engaged and the pilot light must come on. Solenoid valve Y1 must be energised.

This shows that:

- diff. lock pilot light and its wires are OK.
- rocker switch middle position is OK

While the rocker switch is in the middle position, depress the brake pedal/pedals, at which time the lock must be disengaged and the pilot light goes out. When the brake pedals are released, the lock must be engaged and the pilot light comes on.

This shows that:

- brake pedal switches S10 and S20 are OK
- relay K11 is OK

While the diff. lock rocker switch is in the middle position, press the power lift "lower/stop/lift" switch S10E into the transport position. Now the diff. lock must be disengaged. Press the power lift switch back to the middle or lowering position and the diff. lock must be engaged.

This shows that:

- switch S10E is functioning properly
- relay K13 is OK

Depress the diff. lock rocker switch rear edge. In this position the lock must be on and also the pilot light.

This shows that:


- diff. lock switch rear position is functioning properly.

While the rocker switch rear edge is down, depress the brake pedal/pedals, at which time the lock must be disengaged. When the brake pedals are released, the diff. lock is engaged and the pilot light comes on. The use of the power lift switch S10E must not affect the function of the lock.

This shows that:

relay K11 is OK


IMPORTANT! When the 4WD rocker switch is in the middle position, the 4WD is engaged, when the differential lock is engaged.

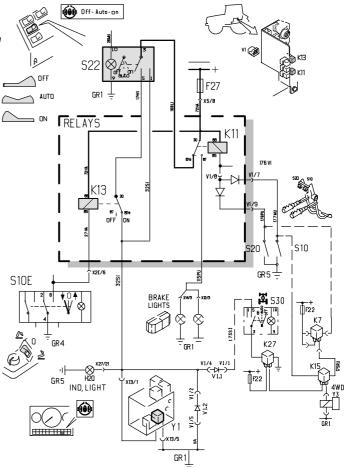

Picture 6. Diagram, differential lock, AC 2.3.



		Model	Code	Page	
32. Electro-hydraulic power lift	8. 11. 1990	6000-8400	320	1	

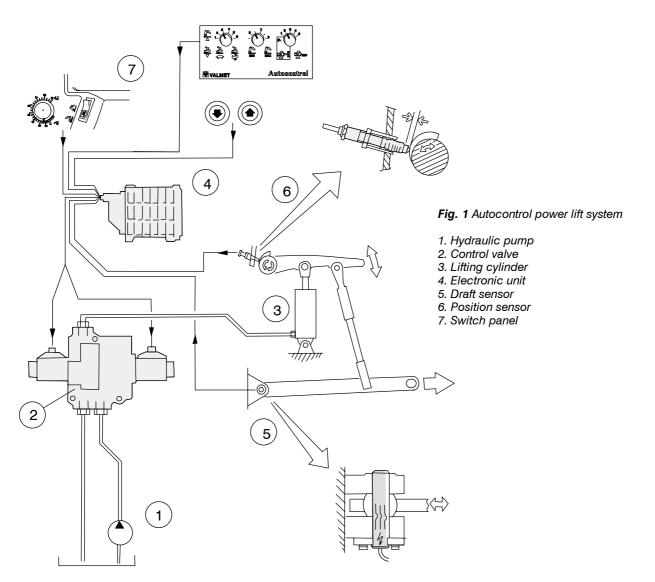

1. Autocontrol – hydraulic lift, electrical system

Note! Hydraulic system of the power lift is described in section 90. This Autocontrol – hydraulic lift is the same as on Valmet 505 – 905 tractors.

The Valmet Autocontrol is an electrically controlled hydraulic lift. All mechanical levers have been replaced with knobs and switches. Ideal mixing/sensitivity values for draft control have been pre-programmed and can be controlled with one switch.

Operation:


The pump (1) draws oil from the oil reservoir and delivers it to the control valve (2). The control valve directs the oil to the lifting cylinders (3) for the operation of the lifting arms (lifting, lowering and holding functions). The values set on the switch panel (7), and the actual values detected by the draft sensors (5) and position sensor (6), are fed into the electronic unit (4).

This unit determines the differences between the two sets of signals (i.e. from the sensors and switches) and feed the necessary control signal to the control valve solenoid.

The position sensor (6) is in permanent contact with an eccentric on the lift shaft. When the lower links are lifted or lowered the eccentric moves the pin, which sends a signal to the electronic unit; thus the hydraulic lift always "knows" the position of the lower links.

The lower links are connected to the draft sensors (5). When the draft force in the lower links increases the loading on the draft sensors also increases. This loading is then converted into electrical signals by the draft sensors.

These signals are amplified by an electronic device which is built into the the draft sensors. The signals are sent to the Autocontrol hydraulic lift. If the draft force increases the hydraulic lift will raise the implement, the draft control sensitivity depending on the setting of the switches in the cab.

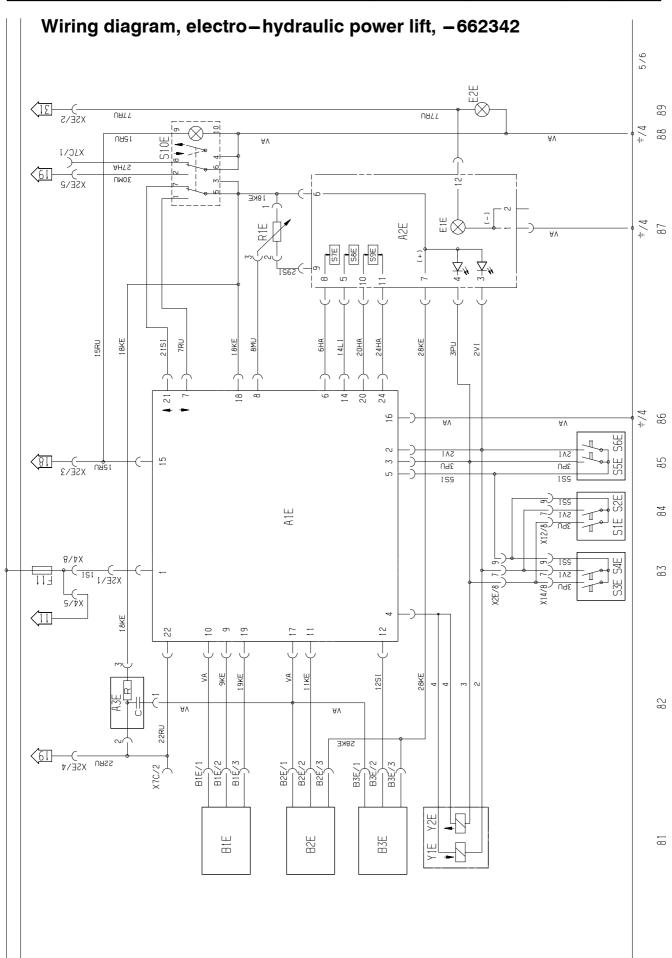

	8, 17: 1990	Model	Code	Page
32. Electro-hydraulic power lift	1. 1. 1994	6000-8400	320	3

Wiring diagram, -662342

(E-models, see section34)

Note! See also picture on page **310/6**. This diagram concerns 6000 – 8400 tractors up till the end of the year 1993.

Sym- bol	Component	Code
A1E A2E A3E	Autocontrol electronic unit Autocontrol, switch panel Compensator	70-73 74 70
B1E B2E B3E	Position sensor Draft sensor, right Draft sensor, left	69 69 69
E1E E2E	Illumination, switch panel Illumination, position control knob	74 75
R1E	Potentiometer, position control	74
S1E S2E S3E S4E S5E S6E S7E S8E S9E S10E	Push button, mudguard, lifting, right Push button, mudguard, lowering, right Push button, mudguard, lifting, left Push button, mudguard, lowering, left Push button, cabin, lifting Push button, cabin, lowering Switch, lowering speed Switch, transport height Switch, mixing/sensitivity Rocker switch, lift/lower	71 71 70 70 73 73 74 74 74
X2E	Connector, 9 pins, supply, push buttons	
Y1E Y2E	Solenoid valve, lowering Solenoid valve, lifting	69 69

Wire colours

Ru = brown

Pu = red

Ke = yellow

Si = blue


Mu = black

Vi = green Va = white

Li = lilac

		Model	Code	Page
32. Electro-hydraulic power lift	1. 1. 1994	6000-8400	320	ЗА

Wiring diagram,662343-

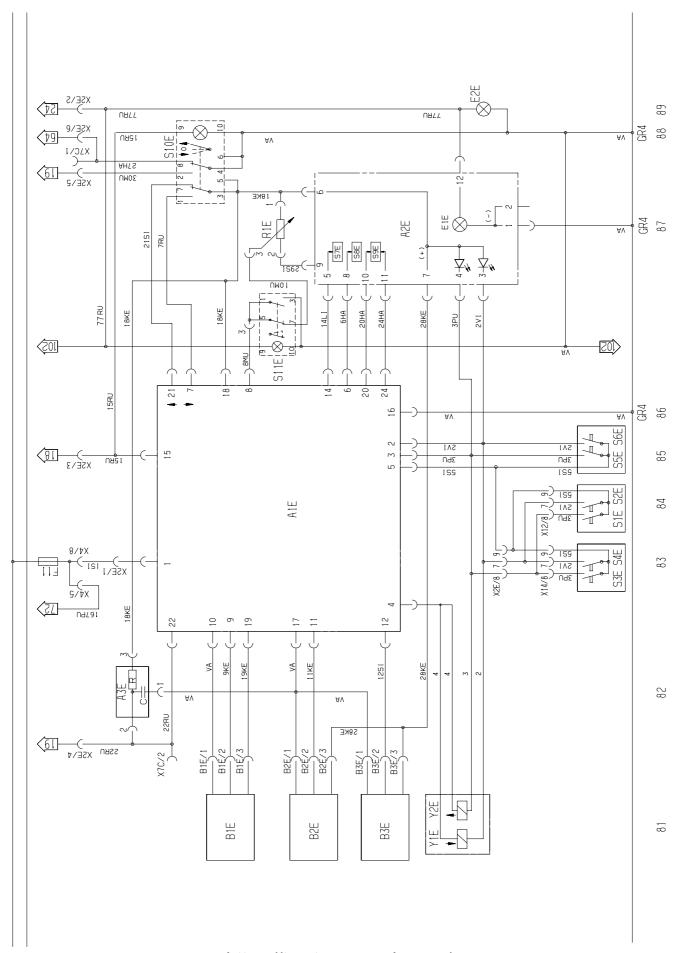

	1.1.1994	Model	Code	Page
32. Electro-hydraulic power lift	15. 4. 1995	6000-8400	320	3B

Wiring diagram 662343-F17106

Note! On 6000–8400 models the diff. lock is disengaged when the lift/lower switch is turned to the transport position, see Autocontrol II under code 311. In addition, the lift/lower switch has a middle position which stops the movement of the lower links. See also picture on page **310/6A**.

Note! With effect from serial number 668103 (AC 2.1), the power lift has a forced-lowering switch S11E.

Sym- bol	Component	Code no
A1E	Autocontrol electronic unit	84
A2E	Autocontrol, switch panel	87
A3E	Compensator	82
B1E	Position sensor	81
B2E	Draft sensor, right	81
B3E	Draft sensor, left	81
E1E	Illumination, switch panel	87
E2E	Illumination, position control knob	89
R1E	Potentiometer, position control	87
\$1E \$2E \$3E \$4E \$5E \$6E \$7E \$8E \$9E \$10E \$11E	Push button, mudguard, lifting, right Push button, mudguard, lowering, right Push button, mudguard, lifting, left Push button, mudguard, lowering, left Push button, cabin, lifting Push button, cabin, lowering Switch, lowering speed Switch, transport height Switch, mixing/sensitivity Rocker switch, lift/lower Rocker switch, forced lowering	84 84 83 83 85 85 87 87 87 88
X2E	Connector, 9 pins, supply, push buttons	
Y1E	Solenoid valve, lowering	81
Y2E	Solenoid valve, lifting	81

Wire colours

Ru = brown

Pu = red

Ke = yellow


Si = blue

Mu = black

Vi = green Va = white

Li = lilac

Page 3C

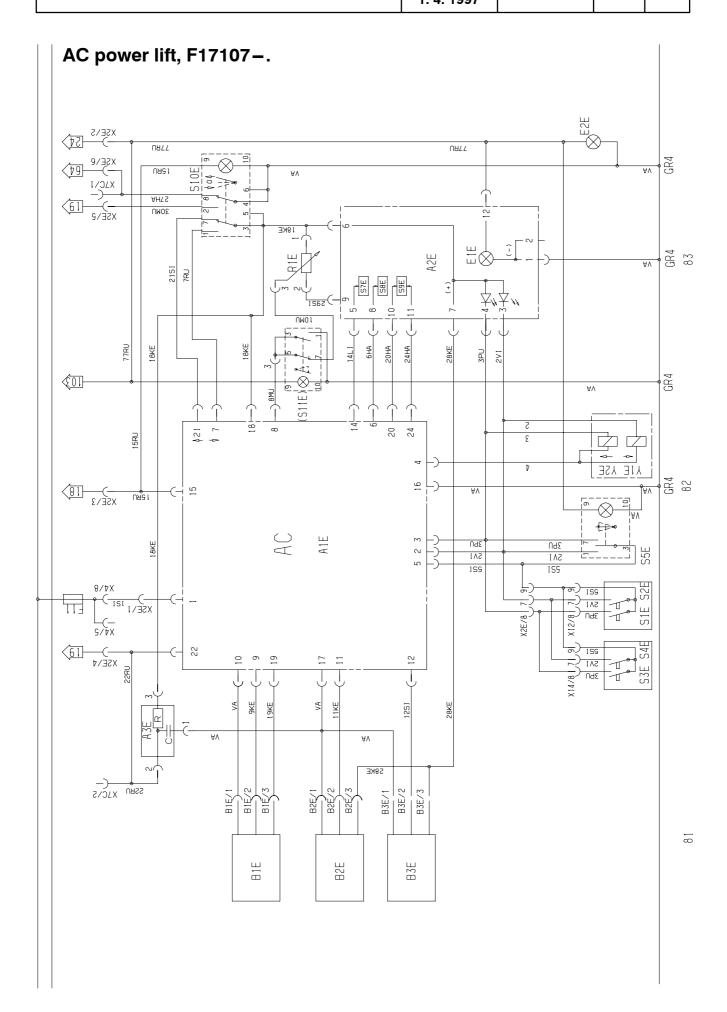

		Model	Code	Page
32. Autocontrol power lift	15. 5. 1996	6000-8400	320	3D

AC power lift, F17107-.

Component	Code no
Autocontrol electronic unit Autocontrol, switch panel Compensator	82 83 82
Position sensor Draft sensor, right Draft sensor, left	81 81 81
Illumination, switch panel Illumination, position control knob	83 83
Potentiometer, position control	83
Push button, mudguard, lifting, right Push button, mudguard, lowering, right Push button, mudguard, lifting, left Push button, mudguard, lowering, left Rocker switch, cabin, lifting/lowering Switch, lowering speed Switch, transport height Switch, mixing/sensitivity Autocontrol rocker switch, lift/stop/lower Rocker switch, forced lowering	82 82 82 82 83 83 83 83 83
Connector, 9 pins, supply, push buttons	
Solenoid valve, lowering Solenoid valve, lifting	82 82
	Autocontrol electronic unit Autocontrol, switch panel Compensator Position sensor Draft sensor, right Draft sensor, left Illumination, switch panel Illumination, position control knob Potentiometer, position control Push button, mudguard, lifting, right Push button, mudguard, lowering, right Push button, mudguard, lifting, left Push button, mudguard, lowering, left Rocker switch, cabin, lifting/lowering Switch, lowering speed Switch, transport height Switch, mixing/sensitivity Autocontrol rocker switch, lift/stop/lower Rocker switch, forced lowering Connector, 9 pins, supply, push buttons Solenoid valve, lowering

Wire colours

Ru = brown

Pu = red Ke = yellow Si = blue Mu = black

Vi = green Va = white Li = lilac

Page 4

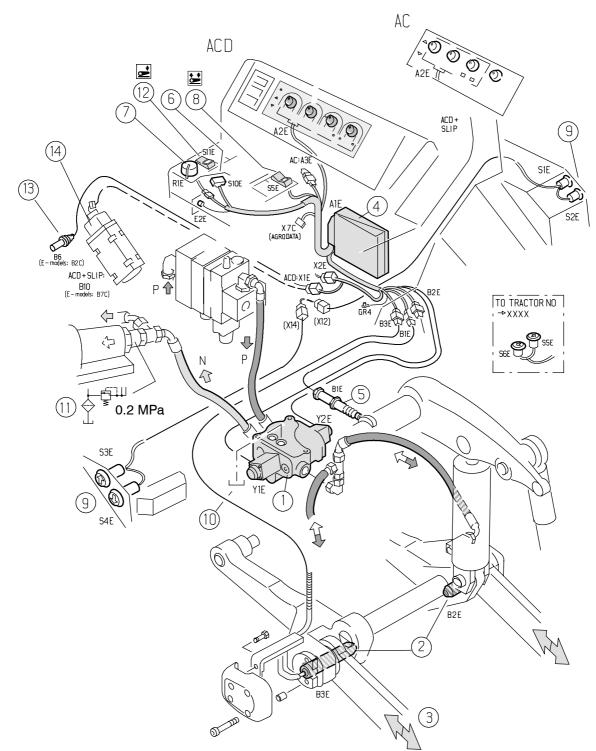


Fig. 2. Electro-hydraulic power lift AC/ACD


- 1. Control valve
- 2. Draft sensors
- 3. Lower links
- 4. Electronic unit (different on AC and ACD)
- 5. Position sensor
- 6. Lift/stop/lower switch (earlier two positions)
- 7. Potentiometer for position control
- 8. Rocker switch (earlier two push buttons)
- 9. Push buttons, rear mudguards
- 10. Return oil into the gearbox housing
- 11. Return oil from control valve
- 12. Switch, forced lowering (not on earlier models)
- 13. Gearbox speed sensor, ACD power lift
- 14. Radar, ACD power lift

Connectors (B1E, B2E and B3E) for position sensor and draft sensors are placed in the lever console in the cab and they are accessible after removing the console side panel. On ACD power lift, the position sensor connector is placed at the end of the sensor.

Electronic unit (A1E) and the rest of the connectors are also placed in the lever console on the driver's right.


Note! The picture above shows also parts for the ACD power lift, see under code 321.

32. Electro-hydraulic power lift

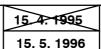

Model 6000-8400 Code 320

Page 5

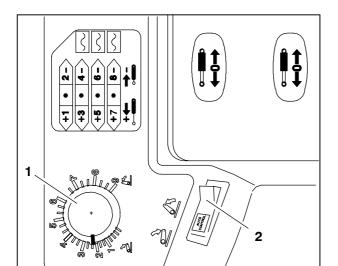



Note! For detailed instructions on how to use Autocontrolpower lift, see Operator's Manual.

1. Position control knob

- max. clockwise, lower links at transport height (with switch 4)
- max. anti-clockwise, lower links in lowest positiondoes not function if system has not been activated with switch 2.

Note! With effect from serial number 668103 (AC 2.1), there is the forced-lowering switch on the RH side of the position control knob. From spring -96 the forced-lowering switch is an option.

2. Lift/lower switch

- lift to the transport height determined by switch 4.
- lower to the position determined by position control knob
- activate the control system (after the main power has been switched off or if push button controls have been used.


Note! From the beginning of the year 1994 (Autocontrol II), the lift/lower switch has three positions. The middle position stops the movement of the lower links. The two other positions are the same as earlier.

3. Lowering speed selector

- six different lowering speed
- lowering speed is independent of the load

4. Transport height selector

- six different upper position
- push buttons over ride these settings

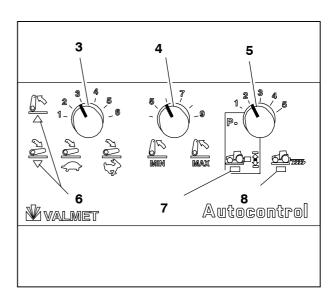

5. Position control/draft control:

- position P is position control
- positions 1-5 are for draft control

6. Lift/lower indicator lights

- lifting (red)
- lowering (green)

7. Indicator light, position control

light for position control (position P)

8. Indicator light, draft control

light for draft control (positions 1 – 5)

9. Lift/lower push buttons (not illustrated)

- in the cabin and on the rear mudguards
- lift button raises lower links to max. upper position (higher than max transport position with switch 4)
- push buttons does not function, if lift/lower switch (2) is in lifting position.

Note! From spring -96, the push buttons in the cab have been replaced with a three-position rocker switch. The switch has a middle position and the both extreme positions have the same functions as the push buttons. A spring returns the rocker switch to the middle position. On both mudguards there are push buttons as earlier.

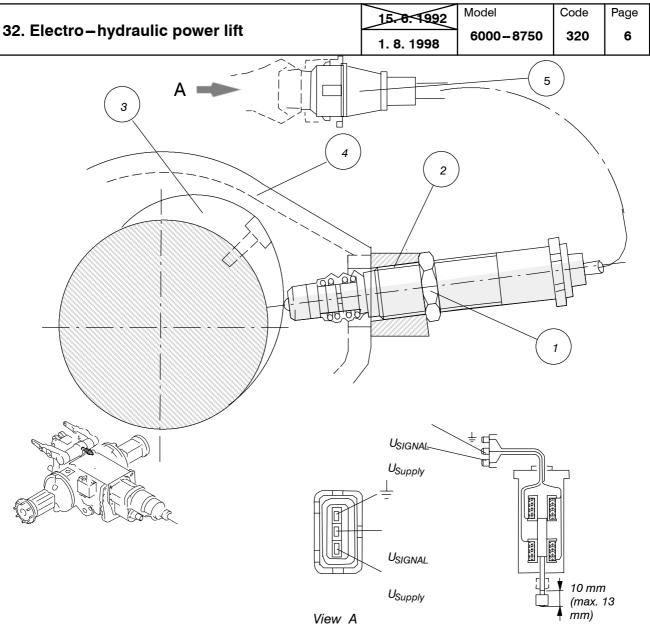


Fig. 4. Position sensor

- 1. Locking nut
- 2. On threads sealant Permatex Super 300
- 3. Eccentric on lifting arm shaft
- 4. Power take off housing
- 5. Connector (at the rear on right side)

Note! The position sensor must be changed if it is damaged. If the sensor lead is damaged it can be repaired using three pin connector.

Position sensor

The position sensor is mounted on the power take – off housing at the rear of the tractor. It supplies information on the actual position of the lower links. The sensor detects lower link position by means of an eccentric fitted to the lift shaft.

The construction of the position sensor can be compared to that of a solenoid. Inside the electromagnetic housing there is a pin which moves with the eccentric on the lift shaft.

Alternating current is fed to the coil, and the voltage in the middle of the coil depends on the position of the pin inside the housing. Thus the voltage is proportional to the position of the lower links.

 $\begin{array}{l} U_{SUPPLY}{=}6,3-7,7 \ V_{eff} \ (AC) \ (4-7kHz) \\ U_{SIGNAL}{=}33-67 \ \% \ x \ U_{Supply} \ (lower links \ down-up) \end{array}$

Measuring position sensor internal voltages, see page 320/13.

Adjusting the position sensor

Important! The lower links will rise a little higher when the push buttons are used instead of the lift/lower switch or position control knob (selector 4 in max upper position 9 (see figure 3)).

- 1. Lift the lower links to their highest level by using the push buttons.
- 2. Unscrew the position sensor lock nut (1). Turn the position sensor carefully by hand until it reaches the bottom. Then turn the sensor back one turn
- 3. Lift the power lift to transport position with the limiter at its maximum height (pos. 9) by using the lift/lower switch.
- if the power lift does not go up to the position where the cylinder stroke is **181–183 mm**, loosen the position sensor.
- if the power lift is raised too high, turn the position sensor in the reverse direction and occasionally use the lift/lower switch to lower the power lift.

Note! The sensor must not be put in the minimum position, when the links are raised. Apply sealing compound Permatex Super 300 to the threads (2) of the position sensor.

Page

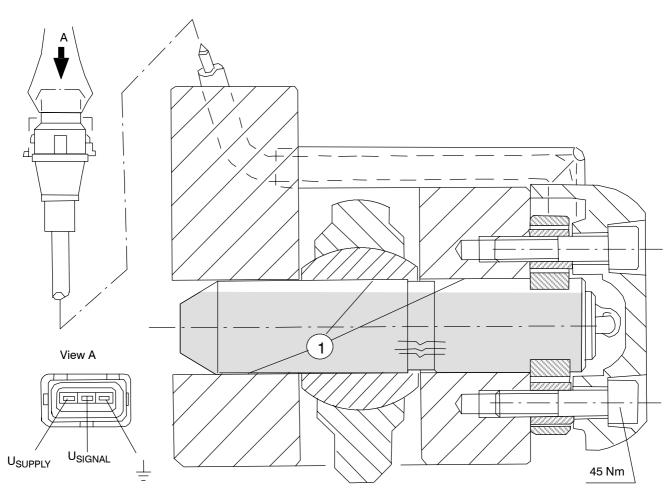


Figure 5. Draft sensor 1. Pressure resistant grease

Draft sensors

The draft sensors act as mounting bolts for the lower links. The sensors convert draft forces into electrical signals.

The draft sensors are housed in tubes manufactured from a special steel. Inside the sensor there is a carrier wave electronics unit, a signal amplifier, and a transformer which produces a magnetic field at the measuring point.

The draft force causes a shearing stress on the sensor and this changes the magnetic properties of the metal, which causes a variation in the voltage in the transformer secondary

 $U_{SUPPLY} = 9.5 - 10.5 \text{ V (DC)}$ U_{SIGNAL} = 2,5-7,5 V (DC) (draft max. - push max.) (signal voltage is 5 V when the lower links are unloaded).

The draft pins must be changed if they are damaged. If the sensor lead is damaged it can be repaired using three pin connectors.

Note!

Draft sensor 31287410, 40 kN (6200-6900) Draft sensor 33303900, 60 kN (8050-8750)

Measuring the draft sensor internal voltages

See page 320/13.

Short circuit in draft sensor line

- Short circuit in the supply line causes deadlock of the whole system (current breaks also in the selector panel A2E). If this short circuit is only momentary, the system starts normally with the lift/lower switch. If the short circuit is sustained, the power lift remains locked.
- Short circuit in the signal line causes the lifting reaction on the lower links during the short. The system returns automatically to the normal function after the short circuit ("ghost lifts").
- Contact between the supply and signal lines causes the full lowering reaction on the lower links during the short circuit.


Note! The draft sensor internal build – up has been changed. At the same time, the sensor coverings have been changed. The earlier sensor fits with the new coverings. The new sensor cannot be fitted with the earlier covers but they must be changed. The new cover can be used inplace with the earlier covers after changing the sheet metal cover.

32. Electro-hydraulic power lift



Model 6000-8400 Code **320**

Page 8

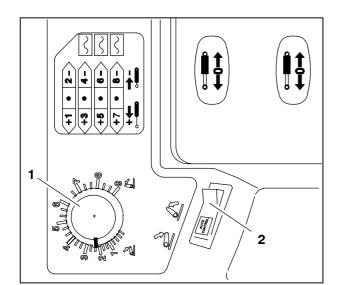

Functional checks

If a malfunction should occur, the reasons may be either in the electric control system or in the hydraulic system:

1. Distinguishing between electrical and hydraulic malfunctions

- Start the tractor. Apply the parking brake.
- Press the push buttons at the ends of the solenoids on the control valve. This moves the valve plunger mechanically. The lifting solenoid is the most accessible
- If the lower links move upwards and downwards, the hydraulic circuit is in order
- If the lower links fail to move when the buttons are depressed, check the condition of the pump and oil pipes. If necessary, the control valve must be checked (see section 90)

2. Checking the electrical operations


Important! The most likely causes of malfunction are poor contacts in the connectors and switches. In case of malfunction, all connectors and switches must be checked and cleaned. Most of the connectors are placed in the lever console. Connectors for sensors are at the rear of the tractor on right side.

A. Checking rear push buttons

- Start the tractor
- Set the lift/lower switch (2) in the lowering position
- Press the buttons on the mudguards and check if the lower links actually move upwards and downwards:

a) If the lower links respond to the push buttons, then this section is in working order

- b) If the lower links do not move when the buttons are pressed:
- check the power lift fuses (F11 5 A, F18 5 A)
- check the constant current (X2E/1) and current passing through the ignition switch (X2E/3) from the power lift inlet connection (X2E)
- check the lead connections for breaks and repair if necessary

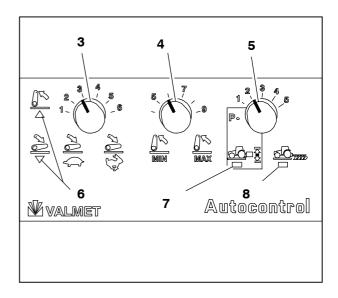

- c) If the lower links e.g. lift but will not lower:
- Change round wires to the solenoids and try the buttons again:
- If the lower links still move upwards only, the lower solenoid is defective and must be changed
- If the lower links move downwards only, the valve is in order, but the other solenoid is not receiving current. In this case, check the lead connectors.

B. Checking the lift/lower switch

The power lift control system is activated with this switch. (2). If the unit is not receiving current or information about the position of the lower links (e.g. the position sensor lead is damaged), the control system will not start to function and the power lift will not respond to the position control knob (1)

If the control system does not start to function, but the lower links respond to the push buttons:

- Check the lift/lower switch and the associated connections (if the power lift is left unused for some time the switch may become oxidized, and the control system will fail to activate).
- Check the position sensor lead and the other connections
- Check the electronic unit connection

If no defect is found, the whole electronic unit must be replaced. The unit is fitted to the lever console on the cabin.

C. Checking the position control knob (1)

- Activate the control system (switch 2)
- Turn switch (4) to position 9.
- Rotate the position control knob slowly to its extreme positions. The movement of the lower links should be steady (clockwise extreme position=max transport height. Anti-clockwise extreme position=lowest position of lower links.

Note! The numbers beside the position control knob and the transport height selector correspond to each others

Note! Checking the position control knob, see page 320/14.

	8, 17, 1990	Model	Code	Page
32. Electro-hydraulic power lift	15. 4. 1995	6000-8400	320	9

D. Checking the indicator lights on switch panel

- Check that the position control indicator light (7) is lit when the draft control selector (5) is in position P
- Check that the draft control indicator light (8) is lit, when the draft control selector is in position 1-5
- Raise the lower links by rotating the position control knob=red lift indicator light (6) is lit
- Lower the lower links = green light (6) is lit

Note! The lift/lower indicator lights are connected in parallel with the control valve solenoids. Therefore, if the indicator lights are lit this means that the solenoids are receiving current.

Note! Reconditioning indicator lights, see page 320/12.

E. Checking the transport height selector

- Activate the control system (switch 2)
- Rotate the transport height selector (4) to position 9
- Rotate the draft control selector (5) to position P
- Rotate the knob (1) max clockwise (to position 9)

The transport height selector (4) should at this point provide 6 different upper position for the lower links: the maximum upper position 9 (where the cylinder stroke is **181–183 mm**) and five lower positions, but not the lowest position

Checking the selector, see instruction on page 320/10.

F. Checking the lower speed selector

- Activate the control system (switch 2)
- rotate selector (5) to position P
- rotate selector (4) to position 9
- rotate selector (3) to position 6 (max lowering speed)
- connect an enough heavy load to the three-point linkage

Put the lift/lower switch (2) in the lifting position, so that the lower links are raised to an upper position. Lower them by putting the switch in the lowering position and use a timer to measure the lowering speed. Six different speeds should be found according to the position of the selector (3) (1=slowest, 6=fastest)

Note! The lowering speed for the slowest position (1) should be at least 6 seconds regardless of the load.

If the lowering speed control is out of order, the lowering speed will be the maximum (pos. 6).

Checking the switch panel, see page 320/10.

G. Checking the draft control operation

When the draft control is in use (Eg. during ploughing), the lift and lower indicator lights will flash. If the draft control is out of order, the power lift operates in the position control mode (as if selector were in position P.

Quick checking of the draft control ranges

- start the engine and activate the power lift (switch 2)
- use the position control knob (1) to set the lower links to position 4 (selector (5) in position P)
- stop the engine but leave the ignition on
- turn the draft control selector to position 2
- use the position control knob to stop the power lift fairly near the beginning of the lift cycle, ie. rotate the knob until the lift and lowering indicator lights are off, fairly close to the area where the lift light is lit
- turn the draft control selector to position 3. The lift indicator light should now be lit
- again use the position control knob to stop the power lift.
- turn the draft control selector to position 4. Now the lift indicator light should be lit
- use the position control knob to stop the power lift and turn the draft control selector to position 5. Once again, the lift indicator light should be lit.

Note! The graduation between the areas 3 and 4 is greater than elsewhere. It can be tested by turning the draft control in area 3 a little further to the lowering side. Returning to area 4, the lift indicator light is lit again.

Note! Checking draft control selector (switch panel), see page **320/10**.

Simple instructions for checking the operation of the draft sensors

- turn the draft control selector to position 5
- use the position control knob to lift the implement (but not to the limit)
- lock the right side check link and release the left one
- from the rear of the implement push the implement to the right. If the left draft sensor is operating, the red lift indicator light will flash, when the implement is being pushed against the check link
- test the right side sensor in a similar way

H. Three-position lift/lower switch and forced-lowering switch

Note! From the beginning of the year 1994 (AC II) the lift/lower switch has three position. The intermediate position stops the lower link movement. The other two positions are the same as before.

Note! With effect from serial no 668103 (AC 2.1) the power lift has a forced—lowering switch on the RH side of the position control knob, see page **320/15**.

	8_71.1990	Model	Code	Page
32. Electro-hydraulic power lift	15. 4. 1995	6000-8400	320	10

1. Checking switch panel A2E

If lowering speed (S7E), transport height (S8E) or draft control selector (S9E) does not function properly and the malfunction cannot be localized with the help of the preceding instruction, the switch panel A2E can be checked as follows:

N.B.! In the checking, a voltmeter (measuring scale 0-14 V DC) is needed. The voltmeter measuring heads should have

sharp ends so that they can be pricked through protective lacquer.

Measurements are done on the tinned terminals on the rear side of the switch panel. Measurements are done without detaching the connector from the panel.


A. Removing the switch panel for checking

1. Detach the bracket on which the switch panel is fitted by unscrewing four crosshead screws.

Note! On E – models and on models equipped with Agrodata, the switch panel and its bracket is fitted more to the rear on the lever console.

- 2. Turn the bracket/switch panel so that voltage measurements can be done according to **instruction B**.
- 3. Turn the current on with the ignition switch and activate the control system with the lift/lower switch. Do not detach the connector from the switch panel.

Note! From serial no **668103** incl. (AC 2.1), there is the DPS circuit card fitted on the power lift switch panel. Remove, if necessary, this circuit card before measuring the power lift voltages.

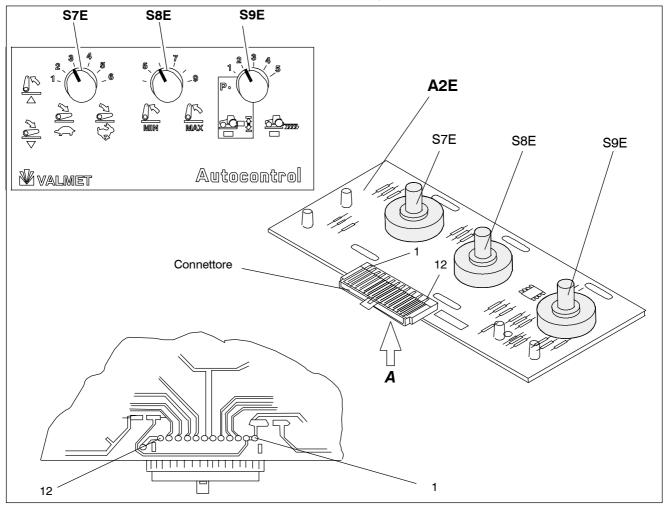

		Model	Code	Page
32. Electro-hydraulic power lift	8. 11. 1990	6000-8400	320	11

B. Voltage measurements

Turn the current on with the ignition switch and activate the control system with the lift/lower switch (do not detach the connector from the switch panel). Carry out measurements on the rear side terminals according to the figures a – d below.

Checking supply voltage


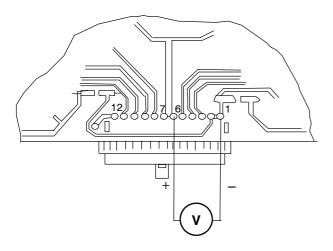


Figure a) Measuring supply voltage: measure voltage between terminals 1 and 6

Correct value is 9,5-10,5 V

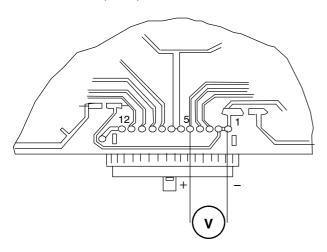

Checking lowering speed selector

Figure b) Checking lowering speed selector: Measure voltage between terminals 1 (or any frame contact) and terminal 5 with every selector (S7E) positions:

Position	Terminal 5
1	0,9-1,1 V
2	1,7-1,9 V
3	2,4-2,8 V
4	4,3-4,9 V
5	6,0-6,8 V
6	9.5-10.5 V

Checking transport height selector

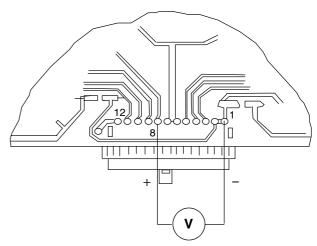


Figure c) Checking transport height selector: Measure voltage between terminals 1 (or any frame contact) and terminal 8 with every selector (S8E) positions.

Position	Terminal 8
4	9,5-10,5 V
5	7,6-8,4 V
6	5,7-6,3V
7	3,8-4,2 V
8	1,9-2,1V
9	0

Checking draft control selector

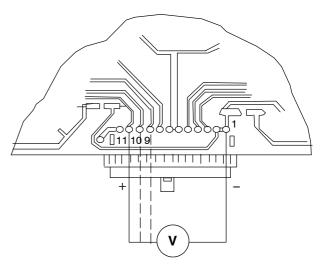


Figure d) Checking draft control selector: Measure voltage between terminals 1 (or any frame contact) and terminals 9, 10 and 11 separately with every selector (S9E) positions:

Pos.	Terminal 10	Terminal 9	Terminal 11
Р	9,5-10,5 V	0-0,2	9,5-10,5 V
1	3,7-4,1 V	0-0,2	7,7-8,5V
2	1,8-2,0 V	0-0,2	7,7-8,5 V
3	1,8-2,0 V	0-0,2	9,5-10,5 V
4	0	1,7-1,9 V	7,7-8,5 V
5	0	1,7-1,9 V	9,5-10,5 V


Note! If the supply voltage deviates from the correct value, the fault lies in various connectors. If other values are incorrect, the fault lies in the switch panel, which should be changed.

		Model	Code	Page
32. Electro-hydraulic power lift	8. 11. 1990	6000-8400	320	12

C. Changing switch panel

N.B: If the voltage measurements show that the switch panel is defective the panel must be replaced as a complete unit as follows:

- 1. Detach the switch panel from the bracket by removing selector knobs and by unscrewing ring nuts.
- 2. Remove also the lock washers and dust seals. Detach the switch panel connector so that the panel can be removed.

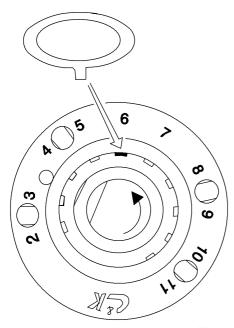

- 3. Fit onto new selectors washers with lugs. These washers limit selector positions. Before fitting the washers turn every selector anti-clockwise as far as possible to their extreme position. After this has been done, fit the washers so that the lugs engage in the holes at number six on every switch (see figure above). Make sure by turning the switches that they have six different positions.
- 4. Connect the connector to the new panel. Fit the dust covers (317 204 20). Fasten the circuit card to the panel by means of ring nuts (fit under nuts lock washers JE 9423).
- 5. Attach the connector to the switch panel. Fit the switch panel onto the bracket by means of the ring nuts (fit the cup washers under the nuts).
- 6. Fit the selector knobs and place the bracket onto the lever console with four cross head screws.

D. Checking switch panel indicator lights

If Autocontrol power lift functions properly, but indicator lights on the switch panel do not function correctly the following steps must be taken:

- Detach the switch panel (instr. A) and move the connector on the panel so that possible poor contacts disappear.
- If an indicator light is still out of order the voltage measurements shown in instruction B must be carried out.
- If voltages are between allowable limits but light is still out of order the fault is in the bulb and the whole switch panel has to be changed as a complete unit (see instruction C)

6000-8400

2. Measuring internal voltages of position sensor and draft sensors

The condition of the sensors can be checked by measuring the sensor supply and signal voltages with the aid of a special tool.

Connect the tool into the power lift by opening the position sensor or one of the two draft sensors connectors and by fitting the tool between the lead. Switch on current and acticate the power lift with lift/lower switch.

The correct values should be:

Position sensor: (ACB / ACD)

- Measure the sensor **supply voltage** in the alternating current (AC) position of the multimeter. The value should be between the red and black connectors: 6,3-7,7 VAC
- Measure the sensor **signal voltage** in the alternating current (AC) position of the multimeter. The value should be between the blue and black connectors:
- 1,2...2,5 VAC lower links down.
- 3,0...5,0 VAC lower links up.

Draft sensors: (AC, ACB, ACD)

- Measure the sensor supply voltage in the direct current (DC) position of the multimeter. The value should be between the red and black connectors: 9,5-10,5 VDC
- Measure the sensor signal voltage in the direct current (DC) position of the multimeter. The value should be between the blue and black connectors:
- 2,5 VDC max pull.
- 7,5 VDC max push.
- 5,0 VDC when lower links are unloaded..

Note! If the sensors do not receive the supply voltage, check the power lift fuses and the lead connectors. If these are OK the possible fault may be inside the Autocontrol electronic unit which should be replaced.



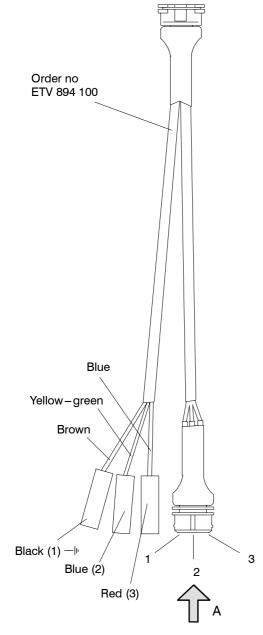


Figure 1. Tool for measuring the sensor voltages

Red = supply voltage=3 Blue = signal voltage=2 Black = earth lead=1

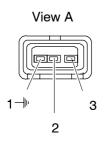


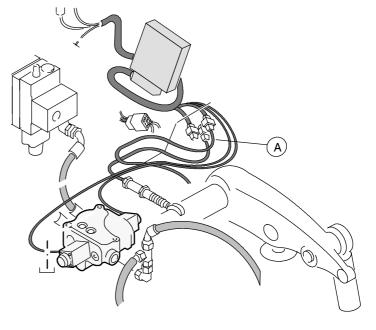

Sensor connectors (A) are placed in the lever console in the cab and are accessible after removing console side panel.

	1.6-1999	Model	Code	Page
32. Electro-hydraulic power lift	1. 9. 2002	6000-8400	320	14

3. Checking the position control potentiometer

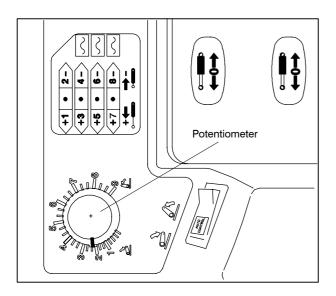

- 1. Stop the engine and switch off current
- 2. Remove the side panel of the lever console in cab and open the position control potentiometer connector.
- 3. Measure resistance (between blue and black leads) when the knob is in its both extreme positions and also in positions 4 and 7. Correct values should be:


Max. anti – clockwise	0,9 Ω (±20 %)
Point4	1420 Ω (±20 %)
Point 7	3,3 k Ω (±20 %)
Max. clockwise	4,7 k Ω (±20 %)

4. Then rotate the position control knob slowly from one extreme position to the other and make sure that the resistance value changes linearly without steps.

4. Checking control valve and its solenoid valves

If the lifting or lowering speeds do not function correctly, it is necessary to clear up whether the fault lies in the electric system or in the control valve (valve spools can get trapped etc.).

Checking electric system:

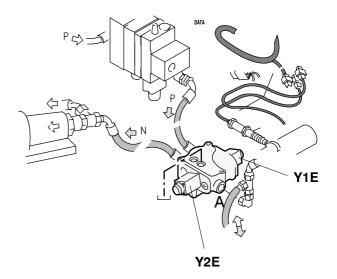

Connect an ampere – meter in series with control valve solenoids. Y1E lowering (inner) and Y2E lifting (outer). Use ETV 894 220 when measuring these values, see page **101/1**.

Lifting approx 3,45 A Lowering (yellow buttons) approx 1,96 A
Lowering speed positions:
1 approx 1,40 A
2 approx 1,55 A
3 approx 1,70 A
4 approx 2,15 A
5 approx 2,60 A
6 approx 3,45 A
Resistance of solenoid approx 1,6 Ω

Checking control valve:

If the measured values agree with the correct values above, but malfunctions occur in the lowering and lifting functions, the control valve should be removed and checked (see page 912/2).

32. Electro-hydraulic power lift

15. 5. 1996 1. 8. 1998


Model

Code

Page

6000-8400 320 15

Forced-lowering switch, 668103-.

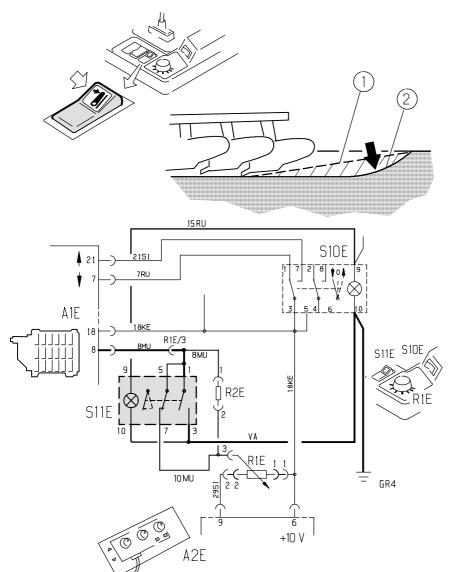

Picture 2. Forced-lowering switch

- 1. Without switch
- 2. With switch

S11E=forced lowering switch

S10E=lift/lower switch

A1E=control unit

A2E=switch panel

R1E=position control potentiometer

The forced lowering switch is placed on the RH side of the position control knob. When the switch rear edge (spring returned) is depressed, the Autocontrol adjustements are overidden (position control knob, sensitivity/mixing), and lower links lower to the lowest position (control unit pin 8 becomes earthed).

The lower links lowers so long the switch is depressed. When the switch is released, the lower links automatically find the position determined by position control knob.

The forced lowering switch does not override the lowering speed setting. The switch does not lower the lower links, if the lift/lower switch is in the lifting position or in the intermediate position.

If the position control knob is in max lowering position (max anticlockwise), the switch does not lower the links any more.

Note! From spring -96 the forced – lowering switch is an option. On ACD hydraulic lift (see under code 321) the forced lowering switch is a standard equipment.

Note! Resistance R2E has been added in the electric circuit of the forced – lowering switch.

		Model	Code	Page
32. Electro-hydraulic Power lift	1. 8. 1998	6000-8150	320	16

1. Special instructions

A. Control unit A1E of AC power lift

Note! The internal function of the control unit has been changed from analog to digital and the analog units are not manufactured any more. In addition, a number of the analog units in the store is limited.

The new digital unit replaces principally the analog unit. On the earlier tractors, however, the lifting height display in the dashboard does not function with the digital unit.

Suitability of the spare part units:

- Unit 31287215: 6000-8750 up to 7.96
- Unit 31287220: 6000 8750 *) from 8.96 incl (also earlier tractors, which have AD – instrument).
- *) Modification in instrument, instrument no. 31542060.

Note! When the new digital unit is fitted on the earlier 6000–8750 tractors, the compensator A3E (32634500) must be removed (to be disconnected from its connector). The compensator has been removed in the tractor production from new tractors (wire loom 31867940).

Note! With the new digital control unit the position sensor is adjusted in the same way as on ACD-power lift, see page **321/9**.

Malfunctions of position sensor and forced lowering

Position sensor

Up to manufacturing date 980331 of the digital unit the position sensor may have malfunctions. The faulty units are used in the tractor production from week 810 up to tractor no. H27415. From the date 980401 the faulty functions have been removed.

Note! The spare part units 31287220 do not cause the malfunctions.

If the AC power lift transport height has been adjusted wrongly, the lift activation can disappear and the lower links remain in the upper position.

At this time, stop the engine and switch off current. Restart the engine and lower the lower links downwards by using the push buttons. After this activate the lift normally. Carry out repair by adjusting the position sensor a little outwards, check the function..

Forced lowering

With the digital unit must always be used the forced—lowering wire loom 33009610. The earlier wire loom can cause malfunctions. This new wire loom can be fitted as a spare part in place of the earlier loom.

When using this wire loom, the forced lowering function can be fitted as an option also on all earlier manufactured tractors.




_	1.17.1998	Model	Code	Page
32. ACB/ACD electro-hydraulic power lift	1. 6. 1999	6250-8950	321	1

Valtra – Valmet 8450, **8550**, **8750** and **8950** tractors have as standard ACD power lift. Basic functions of the ACD are the same as described under code 320 showing Autocontrol power lift. ACD power lift is available as an alternative equipment also for other Mezzo – tractors. On E – models the ACD power lift is a standard equipment. Under this code are shown differences between Autocontrol power lift and ACD power lift.

Important! On HiTech tractors 6250–8150 there is as standard ACB power lift, which cannot be equipped with slip control and auxiliaty sensors cannot be connected. In addition, the engaging speed of the Drive Balance Control cannot be adjusted, but it is always engaged in the transport position, when the tractor is moving (can be switched off with a selector). The ACB power lift has not an indication light for the draft control mode. **Note!** 6200–8150 AC 2.2 tractors have as standard the **ACB**-power lift. ACB power lift can be recognized by letter B on the switch panel.

A. ACB / ACD power lift

- ACD and ACB power lift has a digital control unit
- Position sensor is different as on AC power lift.
- ACD and ACB power lift has as standard a Drive Balance Control, which damps in transport driving oscillation movements
 of the tractor caused a heavy implement which is attached to the three point linkage unit.
- A slip contror is available as an option (not ACB), which includes also a radar. The radar is the same as on AC III and AC IV units.
- For the slip control and Drive Balance Control the tractor has a gearbox speed sensor (not ACB) on the RH side of the shuttle unit. The sensor is the same as on AC IV unit and on Agrodata instrument.
- The ACB and ACD power lift switch panel has a diagnostic light, which indicates self-testing and locking of the power lift and it indicates with flashing numbers of fault codes so that possible faults can be localised. The flashing of the diagnostic light also confirms that a new switch-on frequency of the Drive Balance Control is valid (not ACB).
- Lowering speed selector and draft control selector have more positions than earlier.

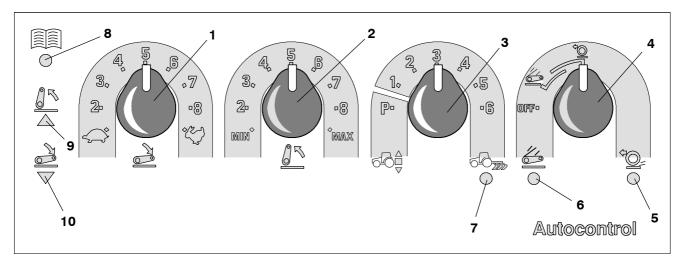

Picture 1. ACD power lift switch panel (ACB has not an ind. light 7 and selector 4 has not the slip control position)

- 1. Lowering speed selector (9 positions)
- 2. Transport height selector (9 position)
- 3. Position control/Draft control selector (position P is for position control. The draft control has 6 different positions
- 4. Drive Balance Control/Slip Control
 - OFF; Drive Balance Control and slip control are switched off
 - Drive Balance Control switched on
 - Both Drive Balance Control and Slip Control switched on (not ACB)
 - Position in picture; Slip control switched on (if fitted)
- 5. Indication light if slip control fitted
- 6. Indicator light, Drive Balance Control switched on
- 7. Indicator light, Draft control is switched on (positions 1-6) (not ACB)
- 8. Diagnostic light
- 9. Indicator light, lifting
- 10. Indicator light, lowering


Note! The functions of the position control potentiometer, lifting/lowering switch and the forced – lowering switch are the same as earlier (see code 320). The bush buttons in the cab have been replaced with one rocker switch, but the function is the same as earlier (also on Autocontrol power lift). There are bush buttons on the rear mudguards. The draft sensors are the same as earlier, see page **320/7**. Checking the function of the ACB and ACD power lifts, see page **321/14**.

_	工	} >	r 9 98
	4	44	1009

Model **8450-8750** Code **321**

Page 2

B. Position sensor, ACB and ACD

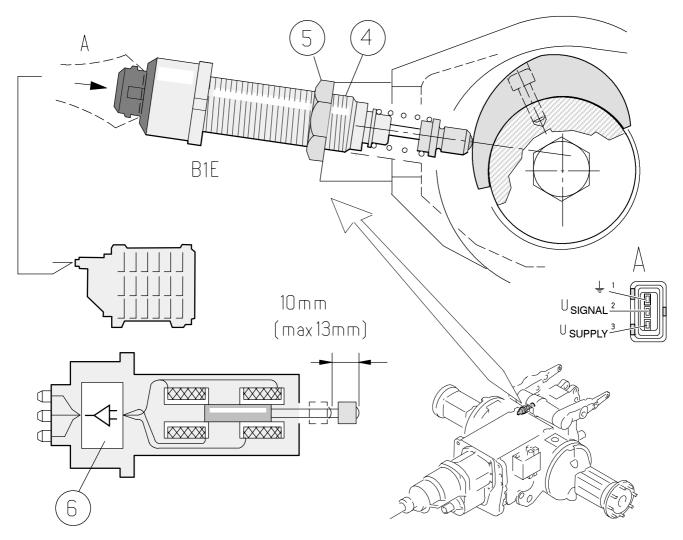

Picture 2. Position sensor on ACB/ACD power lift

- 4. Permatex Super 300 to threads
- 5. Locking nut
- 6. In-built amplifier

Connector A:

- 1. Earth wire
- 2. Signal wire
- 3. Supply wire

Direct current (DC) is fed into the ACD position sensor (earlier alternating current).

 $U_{Supply} = 9,5\pm0,3 V_{DC}$

U_{SIGNal} = 25-75 % x U_{Supply} (lower links down-up)

The position sensor connector is fitted at the end of the sensor.

Note! The position sensor cannot be repaired but a defect sensor must be changed for a new one.

Important! Fault code number **22** indicates, that the position sensor does not function. Diagnostic light and fault codes, see the following instr. **C**.

Measuring position sensor supply and signal voltages

Sensor voltages can be measured as earlier by using special tool **ETV 894 100** and a universal instrument, see page **320/13**.

Measuring values

- Supply voltage	. 9,2-9,8 V _{DC}
- Signal, lower links down	. 2,3-2,5 V _{DC}
- Signal, lower links up	. 6.9-7.4 Vnc

Adjusting position sensor, see page 321/9

15, 5, 1996	Model	Code
1. 11. 1998	8450-8750	321

Page

3

C. Function of diagnostic light and fault codes (ACB and ACD)

When the current is switched on with an ignition switch, the diagnostic light is lit for a while (book symbol). This is the self – testing of the ACD system. After a short time the diagnostic light is lit continuously. This indicates that the power lift is locked. When the light is on, all functions are locked, but the push buttons function.

The power lift is activated by turning the lift/lower switch first to the lifting and then to the lowering position, at which time the diagnostic light goes out and the power lift responds to all switches. Immediately after the activating the ACD limits the supply current to the solenoid valves for safety. This limit delays movements of the lower links. The current supply limit disappears, when the function limit of the control unit has been achieved or if the lift/lower switch is used anew.

After use of the push buttons the ACD is locked and the diagnostic light is illuminated.

Fault codes

ACD power lift continually monitors possible malfunctions in the system. The faults are divided into three different levels according to their seriousness as follows:

1. Serious faults:

- the power lift is locked
- relay closes (protects outputs)
- diagnostic light indicates the fault
- Remedy: Repair the fault, start the tractor and activate the power lift.

2. Medium serious faults:

- the power lift is locked.
- diagnostic light indicates the fault
- Remedy: Repair the fault and activate the power lift with the lift/lower switch

3. Minor faults

- the power lift continually functions
- diagnostic light indicates the fault. When the lift/lower switch is turned, the diagnostic light goes out, if the fault has disappeared.

A possible fault can be localised with the aid of the diagnostic light, which displays by flashing the number of the fault code. For example, if the signal wire to the draft control selector is damaged or there is poor contacts in connectors (fault code 36), the diagnostic lights flashes as follows:

- Long pause - three flashes - short pause - six flashes.

During momentary faults, the diagnostic light flashes, until the lift/lower switch is turned, although the fault has already disappeared.

Faul codes of ACD power lift

1. Serious faults

Fault code number	Fault	Control unit con- nector pin	Description
11	Output/lifting	37	Output signal to lifting solenoid faulty or poor contacts in solenoid wire to pin 35. Battery voltage low in pin 29 (fuse fault).
12	Output lowering	19	Output signal to lowering solenoid faulty or poor contacts in solenoid wire to pin 35. Battery voltage low in pin 29 (fuse fault).
13	Short circuit	35	Measured current in pin 35 too high. Short circuit between pins 19 and 35 or between pins 37 and 35 (solenoid in short circuit)
14	Open circuit	35	No current in pin 35, altought solenoid is activated. Possible poor contacts in wires to solenoid (pins 19, 37 ja 35). Solenoid damaged. No battery voltage in pin 29 (fuse fault)
15	Push buttons	9	Signal from push buttons not OK. Push button or its wire damaged.
16	Supply	2 (+) 20 (-)	Control unit supply not in order. Supply of 9,5 V and earthing not in order
17	Battery	29	Battery voltage greater than 18 V
18	Lift/lower switch	21	Signal from switch faulty. Poor contacts or signal wire not connected.

15, 5. 1996 1. 6. 1999

Model **8450-8750**

Code **321**

Page 4

2. Medium serious faults

Fault code number	Fault	Control unit con- nector pin	Description
22	Position sensor	6	Signal from sensor faulty - Poor contact or position sensor disconnected - Possible short circuit or earthing - Position sensor faulty adjusted
23	Position control potentiometer	22	Signal from potentiometer faulty. Poor contacts or wire loose.
24	Transport height selector	3	Signal from selector faulty. Poor contacts or wire loose.

3. Minor faults

Fault code numbers	Fault	Control unit con- nector pin	Description
31	RH side draft sen- sor	26	Signal from sensor faulty: - Poor contact or wire disconnected - Possible short circuit or earthing - Sensor overloaded
32	LH side draft sensor	7	Signal from sensor faulty: - Poor contact or wire disconnected - Possible short circuit or earthing - Sensor overloaded
33	Battery	24	Voltage too low (lower than 11,5 V).
34	Lowering speed selector	23	Signal from selector faulty. Poor contacts or wire disconnected.
35	Slip control selector	5	Signal from selector faulty. Poor contacts or wire disconnected.
36	Position control/ draft control selec- tor	4	Signal from selector faulty. Poor contacts or wire disconnected.
37	Control valve		Power lift does not lift, altougth current in lifting solenoid (pin 37). Dirt in control valve. No oil pressure. Control valve damaged, valve spools does not move.
38			

Other faults

Fault code numbers	Fault	Control unit con- nector pin	Description
41	Radar signal	10	Radar signal low, transmission sensor signal OK (can be verify only in draft control mode). Poor contacts or radar damaged.
42	Signal from trans- mission sensor	11	Transmission sensor signal low, radar signal in order (can be verify only in draft control mode). Poor contacts in sensor wire or sensor faulty.

Note! Fault codes 41 and 42: the diagnostic light does not show the fault code, if both the transmission sensor signal and radar signal are low, since this is a normal situation when the tractor is stationary.

		Model	Code	Page
32. ACB power lift	1. 11. 1996	6250-8150	321	4A

Fault codes of ACB power lift

1. Serious fault

Fault code number	Fault	Control unit con- nector pin	Description
11	Output/lifting	2	Output signal to lifting solenoid faulty or poor contacts in solenoid wire to pin 6.
12	Output lowering	14	Output signal to lowering solenoid faulty or poor contacts in solenoid wire to pin 6.
13	Short circuit	6	Measured current in pin 6 too high. Short circuit between pins 2 and 6 or between pins 14 and 6 (solenoid in short circuit)
14	Push button in mudguard, up- wards	10	Signal from push buttons not OK. Push button or its wire damaged.
15	Push button in mudguard, down-wards	20	Signal from push buttons not OK. Push button or its wire damaged.
16	Supply	12	Control unit supply not in order. Supply of 9,5 V and earthing not in order

2. Medium serious fault

Fault code number	Fault	Control unit con- nector pin	Description
22	Position sensor	19	Signal from sensor faulty - Poor contact or position sensor disconnected - Possible short circuit or earthing - Position sensor faulty adjusted
23	Position control potentiometer	16	Signal from potentiometer faulty. Poor contacts or wire loose.
24	Transport height selector	22	Signal from selector faulty. Poor contacts or wire loose.
28	Up/stop/down switch	8	Signal from switch faulty. Poor contacts or wire loose.

3. Minor faults

Fault code numbers	Fault	Control unit con- nector pin	Description
31	RH side draft sen- sor	18	Signal from sensor faulty: - Poor contact or wire disconnected - Possible short circuit or earthing - Sensor overloaded
32	LH side draft sen- sor	17	Signal from sensor faulty: - Poor contact or wire disconnected - Possible short circuit or earthing - Sensor overloaded
34	Lowering speed selector	24	Signal from selector faulty. Poor contacts or wire disconnected.
36	Position control/ draft control selec- tor	4	Signal from selector faulty. Poor contacts or wire disconnected.



15. 5. 1996	Model
1 11 1009	8450


) -- 8750

Code

Page 321

5

D. Drive Balance Control (DBC)

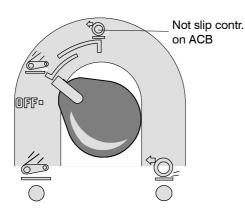

When a tractor is driven in transport drive and a heavy implement is attached to the power lift linkage, this causes oscillation of the tractor (front wheels tend to jump up from the ground) . ACB/ACD power lift has the Drive Balance Control (oscillation damping), which functions when the power lift is in the transport position. Shocks from an implement cause tensions in the draft sensors, and these tensions alter to electric signals, which in turn cause that the linkage makes small lift and lowering movements.

Drive Balance Control is activated, when the following four terms are valid:

- a) Power lift is activated
- b) Power lift is in transport position
- c) Drive Balance Control is switched on (ind. light lights).
- d) ACD: Transmission frequency signal (driving speed) is greater than the value, which has been saved in the memory of the control unit.

When these four terms are valid, the lower links lower about 4 % from the upper limit position to the intermediate limit posi-

The lower links can lower 4 % from the intermediate limit position to the lower limit position. Thus the max. distance between the upper limit position to the lower limit position is 8 %. All percentages are counted from the total movement range of the lower links (100 %).

Note! Position of the lowering speed selector does not affect the Drive Balance Control speed.

Note! ACD: The Drive Balance Control is switched off automatically, if the driving speed drops 25 % below the speed which is saved in the memory of the ACD.

ACD: Adjusting the switch-on driving speed

The DBC is switched on automatically in the transport mode, when the driving speed is about 8 km/h (when the above gfour terms are in operation).

The switch – on driving speed can be changed as follows:

- a) Adjust with the lowering speed selector to the minimum lowering speed.
- b) Adjust the position control potentiometer to the max upper position
- c) Drive with the tractor at the required switch on speed. The tractor must be in motion i.e. the transmission frequency signal should be greater than 25 Hz.
- d) Turn the lift/lower switch at least four times to the transport position during three seconds (CONTROL-TRANS-PORT).
- e) The frequency signal from the sensor remains in the memory of the ACD. After this the diagnostic lights flash for three seconds with frequency of ca. 8 Hz, which confirms that a new switch - on speed for the DBC is valid.

The DBC is activated automatically, when the signal from the transmission speed sensor (driving speed) exceeds the value in the memory.


The DBC can be switched off with the selector on ACB and ACD.

Verifying the function of the DBC

When the tractor is driven in transport driving on an uneven road or field with an heavy implement attached to the power lift linkage, the shocks caused by the implement must light the indicator lights for lifting and lowering. This indicates that the DBC is functioning (the draft sensors react to shocks from the implement).

When the DBC is activated, and tractor driving speed exceeds the switch-on speed, the indicator light for the lowering must light for a while, since the lower links lower 4 % to the intermediate limit position.

ACD: Transmission speed sensor

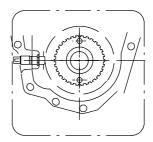

The sensor is placed on the RH side of the reverse shuttle housing. The sensor is the same and in the same place as on AC IV unit, see page 351/3 sensor B2C, or on Agrodata-instrument, see page 331/4 sensor B6.

Removing, fitting and adjustment of the sensor is done in the same way as on AC IV-unit or on Agrodata-instrument.

Note! The fault code no 42 indicates that there are malfunctions in sensor wires or in the sensor. Checking the DBC selector, see instr. F.

15 5. 19 96	
1. 11. 1998	

Model

8450-8750

Code


321

Page

6

E. Clip control (option) (not on ACB)

(on E-models as standard)

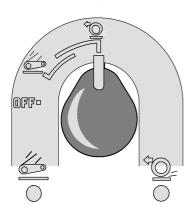

In the draft control mode the ACD-power lift uses the mutual relation of the draft control and the slip per cent when adjusting the working depth. The slip is determined with a speed difference between the transmission speed and the radar speed.

Note! Before the slip control functions, the radar signal and the transmission speed sensor signal should be calibrated. The calibrating drive ensures, that the ACD control unit "knows" the mutual relation of both these signals in an non-slip situation. When the wheels slip, the signals have different speeds, which the ACD recognises and makes a lifting reaction.

Transmission signal frequency depends on the tractor model and the wheel rolling radius. For this reason, the ACD has an automatically functioning calibrating default value.

Calibrating drive:

- Activate the ACD
- Attach load to the three point linkage, which assures that the calibrating occurs in the working condition.
- Drive the tractor on an firm surface.

With the lift/lower switch in the transport position: the driving speed should be greater than 15 km/h.


In the most difficult situation, the ACD requires a calibrating drive of 12 minutes after the first activation, to validate a correct transmission calibrating value. One term is that the radar signal is in order.

When the ACD is activated the first time, it has in the memory a calibrating value, which corresponds to the transmission frequency signal of 55 Hz / km/h. This default value is corrected continuously during the calibration drive, when the above mentioned terms are fulfilled.

The first calibration is carried out in the factory. If the ACD control unit is changed, a new calibrating drive must be done.

Functional check

- disengage the diff. lock and the 4WD
- raise the RH side rear wheel
- activate the ACD and adjust the lower links to the working position, in which they follow accurately the position control potentiometer.
- turn the draft control selector to position 6
- switch on the slip control
- start driving carefully (e.g. with gear M1). The raised rear wheel rotation can be slowed up with aid of the clutch pedal
- the lower links must raise when a "slip effect" has been produced
- declutch (the rear wheel stops). The lower links should lower almost to the original position
- turn the slip control selector to the OFF-position. Now the rotation of the RH side rear wheel must not cause a lifting reaction.

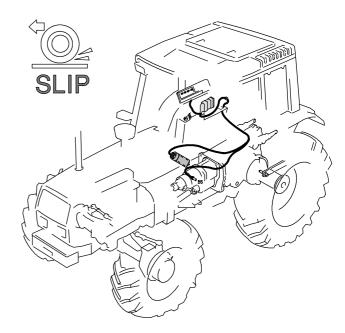

Important! Fault code **35** indicates, that there are malfunctions in the slip control selector. Fault code **41** indicates problems in the radar (only in the draft control mode) and fault code **42** indicates problems in the transmission speed sensor (only in the draft control mode). Checking the slip control selector, see instruction **F**.

Radar – You are not allowed to go under the tractor which has radar (slip control models) before the current switch has been turned off. – **dangerous for eyes.**

\ 	A -	1997
1	11	1998

Model	
8450-8750)


Code **321**

Page 7

F. 1. Checking switch panel of ACD

Remove the switch panel from the lever console (do not disconnect the connector). Switch on currrent and activate the ACD power lift. Measure from the terminals on the rear side of the circuit card (DC).


1. Measuring supply voltage

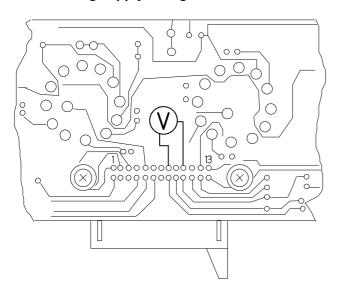

Picture a) Measure supply voltage between terminals 8 (-) and 10 (+): Correct value is 9,2-9,8 V (DC).

Note! If the measured value is incorrect, the fault lies in the connectors.


2. Checking lowering speed selector S7E

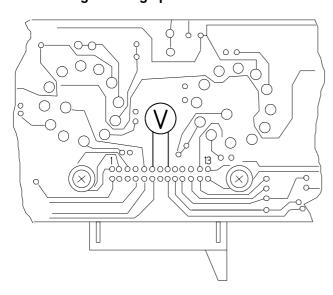

Picture b) Measure voltage (DC) between terminals **8** and **6** with all selector positions:

Position	Pin 6
1	0,4-0,6 V
2	0,9-1,3 V
3	1,3-1,8 V
4	1,9-2,4 V
5	2,8-3,5 V
6	3,8-4,5 V
7	5,0-5,6 V
8	6,9-7,4 V
9	9.2-9.8 V


3. Checking transport height selector S8E

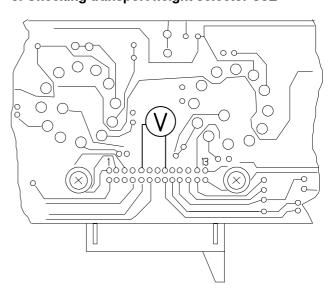

Picture c) Measure voltage between pins **8** and **5** with all selector positions:

Position	Pin 5
1	0
2	1,1-1,5 V
3	2,3-2,8 V
4	3,6-4,0 V
5	4,8-5,2 V
6	6,0-6,6V
7	7,2-7,8 V
8	8,5-9,1 V
9	9.2-9.8 V

4. Draft control selector S9E

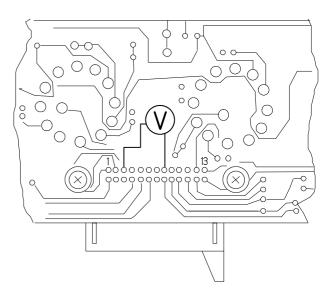

Picture d) Measure voltage between pin **8** and **3** with all selector positions:

Pos.	Pin 3
Р	9,2-9,8 V
1	4,9-5,3 V
2	4,0-4,4 V
3	3,0-3,5 V
4	2,0-2,4 V
5	0,9-1,3 V
6	0


1. 11. 1998 1. 9. 2002

Model **8450--8750** Code

321

Page 8

5. Checking DBC/slip control selector S12E

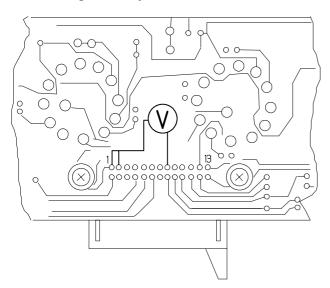


Picture e) Measure voltage between pin 8 and pins 1 (DBC) and 2 (slip control) with all selector positions:

Position	Pin 1	Pin 2
OFF	4,5-5,2 V	0
DBC	0	0
DBC+slip control	0	4,5-5,2 V
Slip control	4,5-5,2 V	4.5-5,2 V

Note! If the measured values in points **2–5** deviate from the given values, the fault lies in the switch panel circuit card which should be changed.

6. Checking lift/lower switch S10E

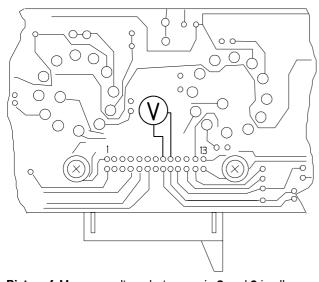

Picture f. Measure voltage between pin **8** and **9** in all rocker switch positions:

Position	Pin 9
Lowering position	3,0-3,4 V
Middle position	4,3-4,8 V
Transport position	6,0-6,6 V


Note! If the measured values deviate from the given values, check the switch connector. If the values are further incorrect, the fault lies in the circuit card which should be changed.

		Model	Code	Page
32. ACB power lift	1. 11. 1998	8250-8150	321	8A

F.2. Checking switch panel of ACB

Remove the switch panel from the lever console (do not disconnect the connector). Switch on currrent and activate the ACB power lift. Measure from the terminals on the rear side of the circuit card (DC).


1. Measuring supply voltage

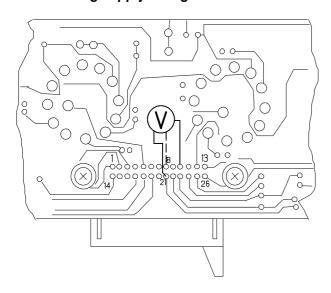

Picture a) Measure supply voltage between pins 21 (-) and 10 (+): Correct value is 9,2-9,8 V (DC). Measure also voltage between pins 21 and 8. Correct value is about 1,6 V

Note! If the supply voltage is incorrect, the fault lies in connectors/wires.


2. Checking lowering speed selector S7E

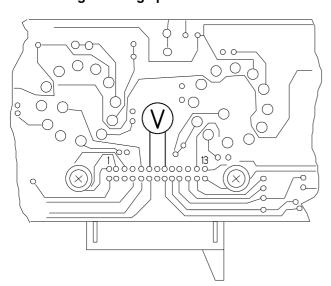

Picture b) Measure voltage between pins **8** and **6** with all selector positions:

Position	Pin 6
1	0,3-0,5 V
2	0,7-1,1 V
3	1,1-1,5 V
4	1,6-2,0 V
5	2,3-2,9 V
6	3,1-3,7 V
7	4,1-4,7 V
8	5,6-6,0 V
9	7,6-8,2 V


3. Checking transport height selector S8E

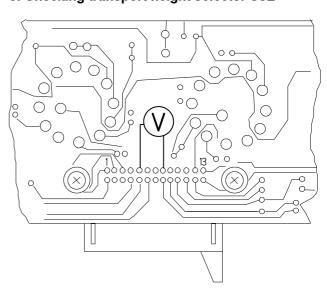

Picture c) Measure voltage between pins **8** and **5** with all selector positions:

Position	Pin 5
1	0
2	0,9-1,2 V
3	1,9-2,3 V
4	2,9-3,3 V
5	3,9-4,3 V
6	4,9-5,4 V
7	5,9-6,4 V
8	6,8-7,5 V
9	7,6-8,2 V

4. Draft control selector S9E

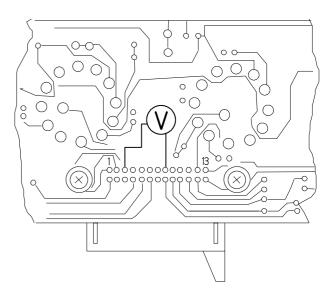


Picture d) Measure voltage between pins **8** and **3** with all selector positions:

Position	Pin 3
P	7,6-8,2 V
1	4,0-4,4 V
2	3,3-3,6 V
3	2,4-2,9 V
4	1,6-2,6 V
5	0,7-1,0 V
6	0

https://tractormanualz.com/

321

5. Checking DBC selector S12E

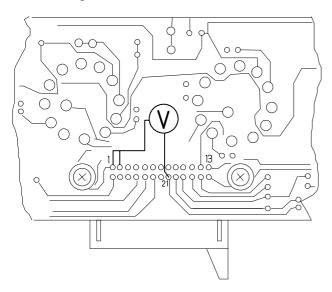


Picture e) Measure voltage between pins **21** and **1** (DBC) with two selector positions:

Position	Pin 1
OFF	2,0-2,4 V
DBC switched on	0

Note! If the measured values in points **2–5** deviate from the given values, the fault lies in the switch panel circuit card which should be changed.

6. Checking lift/stop/lowering switch S10E

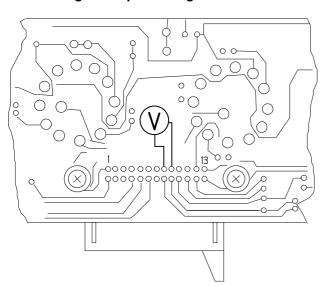

Picture f. Measure voltage between pins **8** and **9** with all three switch positions:


Position	Pin 9
Lowering	2,4-2,8 V
Middle position (Stop)	3,5-4,0 V
Transport position	4,9-5,4 V

Note! If the measured values deviate from the given values, check the switch connector. If the values are further incorrect, the fault lies in the circuit card which should be changed.

G. Changing switch panel, ACB/ACD

Note! If the voltage measurements show that the switch panel is defective the panel must be replaced as a complete unit as follows:

- 1. Remove the DPS circuit card support plate and the card from the ACD switch panel.
- 1. Detach the switch panel from the bracket by removing selector knobs and by unscrewing ring nuts. Remove the dust seals
- 2. Detach the switch panel connector so that the panel can be removed.

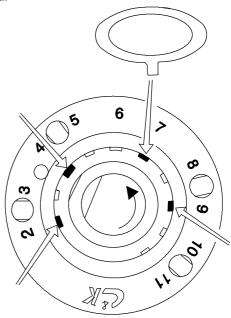

- 3. Fit onto new selectors washers with lugs. These washers limit selector positions. Before fitting the washers turn every selector anti-clockwise as far as possible to their extreme positions. After this fit washers so that the lugs engage in the holes given below:
- lowering speed selector; hole 9.
- transport height selector; hole 9.
- draft control selector; hole 7.
- DBC without slip control; hole 2.
- DBC with slip control; hole 4.
- 4. Ensure by rotating the selectors, that the lowering speed and transport height selectors have 9 positions, draft control selector 7 position and DBC selector 2 (DBC) or 4 (DBC + slip control) positions.
- 4. Connect the connector to the new switch panel. Fit the dust covers (no 317 204 20) onto the washers and fasten the circuit card to the switch panel with the ring nuts (under the nuts locking washers JE 9423).
- 5. Fit the knobs and fasten the DPS circuit card. Attach the selector panel onto the lever console.

32. ACB / ACD power lift	1.70.1999	Model	Code	Page
	1. 9. 2002	8250-8750	321	9

H. Checking switch panel indicator lights

If the ACB/ACD functions properly, but the indicator lights on the switch panel do not function correctly the following steps must be taken:

detach the switch panel and move the connector on the panel so that possible poor contacts are eliminated.
if an indicator light is still out of order the voltage measurements shown in instruction F must be carried out.
If the voltages are between allowable limits but the light is still out of order the fault is in the bulb and the whole switch panel has to be changed as a complete unit.


I. Checking control valve and its solenoid valves (not ACB)

If the lifting or lowering speeds do not function correctly, it is necessary to clear up whether the fault lies in the electric system or in the control valve (valve spools can get trapped etc.).

Checking electric system:

Note! Diagnostic lights and fault codes, see instr. C.

Note! When checking **ACB** power lift, there must be load in the three-point linkage.

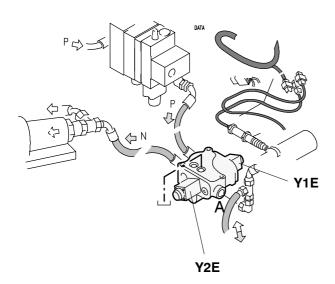

Connect an ampere – meter in series with control valve solenoids. Y1E lowering (inner) and Y2E lifting (outer). Use ETV 894 220 when measuring these values, see page **101/1**.

Lifting (with yellow push button) approx 1,60 A (maximum current when the Autocontrol-rocker switch is turned into the transport height).

Lowering (with yellow push button):

– ACD	. approx 1,50 A
– ACB	. approx 1,40 A

Lowering speed positions:

	ACD	ACB
1	approx 0,90 A	approx 1,25 A
2		approx 1,50 A
3	approx 1,15 A	approx 1,65 A
4	approx 1,30 A	approx 1,85 A
5	approx 1,60 A	approx 2,10 A
6	approx 1,85 A	approx 2,35 A
7	approx 2,20 A	approx 2,80 A *)
8	approx 2,65 A	approx 3,10 A *)
9	approx 3.00 A	approx 3.20 A *)

*) Values inaccurate, since lowering speed is so large, that ampere – meter reading is difficult to read off.

Resistance of solenoids approx **1,6** Ω

Checking the control valve:

If the measured values agree with the correct values above, but malfunctions occur in the lowering and lifting functions, the control valve should be removed and checked (see page 912/2).

Adjusting position sensor, ACB/ACD

Normally the position sensor does not require any adjustment. If the sensor has been removed, adjustment is necessary.


1. Apply sealing compound to the sensor threads. Screw the sensor locking nut to a point where the distance between the nut front side and the end of the thread is about 14 mm (rough adjustment)). Screw the sensor into place until the lock nut touches the PTO housing.

Warning! If the sensor is screwed too deep, the eccentric on the lifting arm shaft damages the sensor when the shaft rotates.

- 2. Start the engine. Raise the lower links to the max. transport position. By turning the sensor, find a point, where the pump relief valve is blowing off *) and screw the sensor from that point inwards 1/4 of a turn.
- 3. Lower the lower links.
- 4. Raise the lower links again to the transport position and ensure that the relief valve is not blowing off.
- 5. Raise the lower links to the max. upper position by using the yellow push button. In this position the relief valve is blowing off and the lifting cylinder stroke from the max. transport height is **3–4 mm**.
- 6. After adjustment, tighten the sensor locking nut.
- *) When the pump is on, the load on the engine can be heard easily.

22 425	1 8:1998	Model	Code	Page
32. ACD power lift	1. 11. 1998	8450-8750	321	10



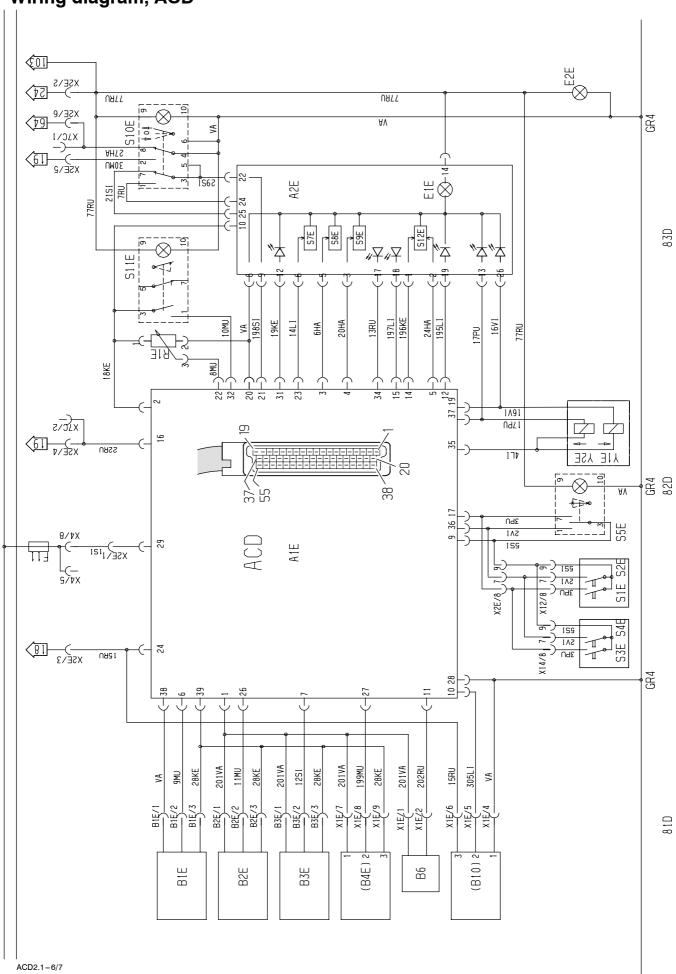

	1_71:1998	Model	Code	Page	l
32. ACD power lift	1. 6. 1999	8450-8750	321	11	

ACD: List of components

Sym-	-	Code
bol	Component	no
A1E	Autocontrol electronic unit	82D
A2E	Autocontrol, switch panel	83D
A3E	Compensator	82D
B1E	Position sensor, tractor	81D
B2E	Draft sensor, right	81D
B3E	Draft sensor, left	81D
(B4E)	Position sensor, implement	81D
B6	Speed sensor, gearbox	81D
(B10)	Radar	81D
E1E	Illumination, switch panel	83D
E2E	Illumination, position control knob	83D
R1E	Potentiometer, position control	83D
S1E	Push button, mudguard, lifting, right	82D
S2E	Push button, mudguard, lowering, right	82D
S3E	Push button, mudguard, lifting, left	82D
S4E	Push button, mudguard, lowering, left	82D
S5E	Switch, cabin, lifting/lowering	82D
S7E S8E S9E S10E S11E S12E	Switch, lowering speed Switch, transport height Switch, mixing/sensitivity Autocontrol rocker switch, lift/stop/lower Rocker switch, forced lowering Switch, Drive Balance Control (+slip control)	83D 83D 83D 83D 83D 83D
X1E X2E	Connector, 9 pins, ACD sensors Connector, 9 pins, supply, push buttons	
Y1E	Solenoid valve, lowering	82D
Y2E	Solenoid valve, lifting	82D

Wire colours

Ru = brown

Pu = red

Ke = yellow

Si = blue

Mu = black

Vi = green

Va = white

Li = lilac

Connectors:

Connector X1E for the radar (B10), for the gearbox speed sensor (B6) and for the possible position sensor on implement (B4E) are placed in the cab lever console. In addition, the sensor B6 pins have connectors. The radar connector is placed near the radar. The position sensor connector is situated at the end of the sensor.

Connector X2E for supply and for the rear push buttons is placed in the lever console. If the ACD does not respond when the push buttons are used, check then fuse F11. If the fuse is OK, check connector X2E (pin 1) and connector X4 pin 8 in the fuse box. Also check the earth point GR4 in the rear part of the lever console.

The wires from the LH side push buttons have been drawn via connector X14 (in the lever console) and the wires of the RH side push buttons have been drawn via connector X12 (in the lever console).


If the ACD power lift responds to the push buttons, but does not activate with the Autocontrol-switch (lift/stop/lower switch), check the Autocontrol-switch and its wires. If these are OK, but the ACD does not activate, the fault may lie in the control unit box.

Note! See also picture on page 320/4.

IMPORTANT! On earlier ACD power lifts (AC 2.1), which have ACD wire loom no. **33082800**, the switch panel A2E can be either earlier panel no. **33082700** or a new spare part panel **33571200**, but not a new ACB/ACD panel no. **33497800**.

		Model	Code	Page
32. ACB power lift	1. 11. 1998	8450-8750	321	11A

Circuit diagram, ACB

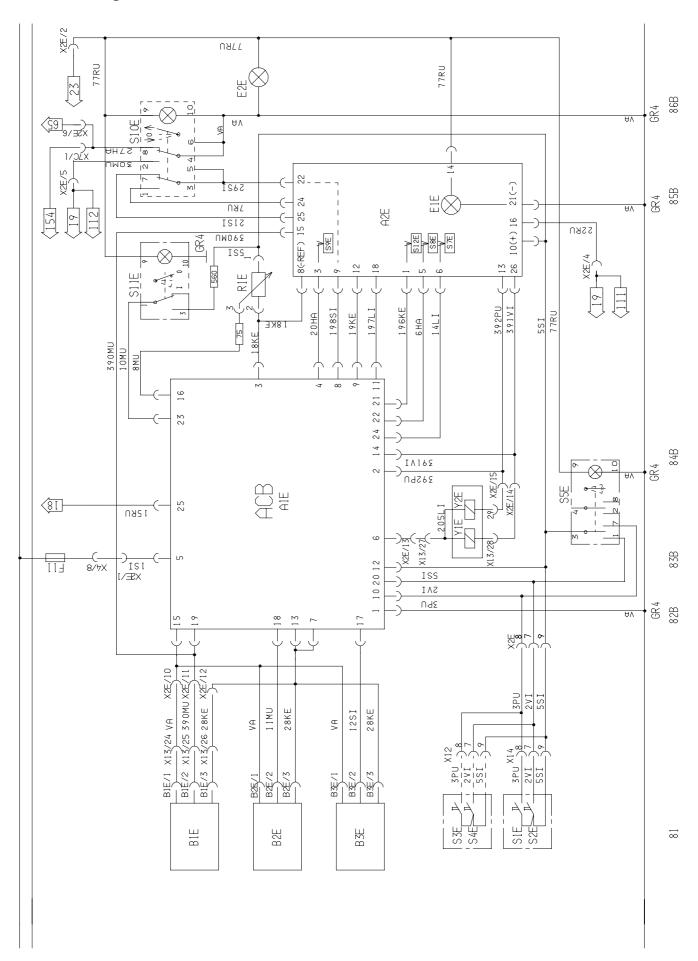

	1.71.1998	Model	Code	Page
32. ACB power lift	1. 6. 1999	6200-8750	321	11B

ACB: List of components

A1E A2E	ACB control unit Control switch circuit card	82B 85B
B1E B2E B3E	Position sensor Draft sensor, right Draft sensor, left	81B 81B 81B
E1E E2E	Illumination, switch circuit card Illumination, position potentiometer	85B 86B
R1E	Potentiometer, position control	85B
\$1E \$2E \$3E \$4E \$5E \$7E \$8E \$9E \$10E \$11E \$12E	Push button, mudguard, lifting, right Push button, mudguard, lowering, right Push button, mudguard, lifting, left Push button, mudguard, lowering, left Switch, cabin, lifting/lowering Selector, lowering speed Selector, transport height Selector, position control/draft control Switch, lift/stop/lowering Switch, forced lowering Switch, oscillation damping (DBC)	83B 83B 82B 82B 83B 85B 85B 86B 85B 85B
X2E	Connector, 15 pins, supply & rear buttons	
Y1E Y2E	Solenoid valve, lowering Solenoid valve, lifting	84B 84B

Connector X2E for supply and for the rear push buttons is placed in the lever console. If the ACD does not respond when the push buttons are used, check then fuse F11. If the fuse is OK, check connector X2E (pin 1) and connector X4 pin 8 in the fuse box. Also check the earth point GR4 in the rear part of the lever console.

The wires from the LH side push buttons have been drawn via connector X14 (in the lever console) and the wires of the RH side push buttons have been drawn via connector X12 (in the lever console).

If the ACD power lift responds to the push buttons, but does not activate with the Autocontrol-switch (lift/stop/lower switch), check the Autocontrol-switch and its wires. If these are OK, but the ACD does not activate, the fault may lie in the control unit box.

Note! See also picture on page 320/4.

Wire colours:

Ru = braun

Pu = red

Ke = yellow Si = blue


Mu = black

Vi = green


Va = white

	1, 11, 1998	Model	Code	Page
32. ACD Power lift	1. 6. 1999	8450-8750	321	12




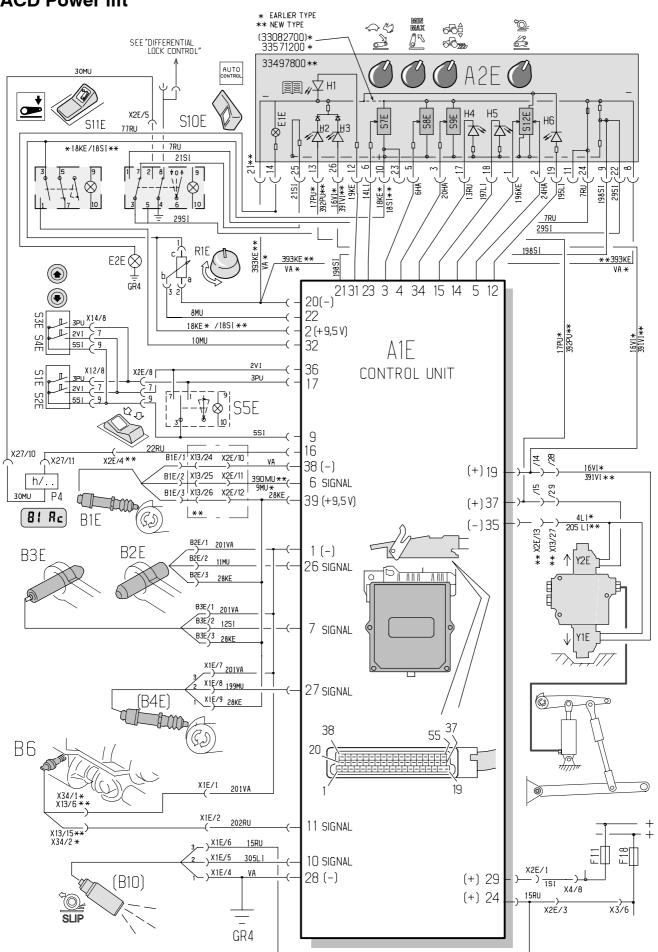

ACB Power lift

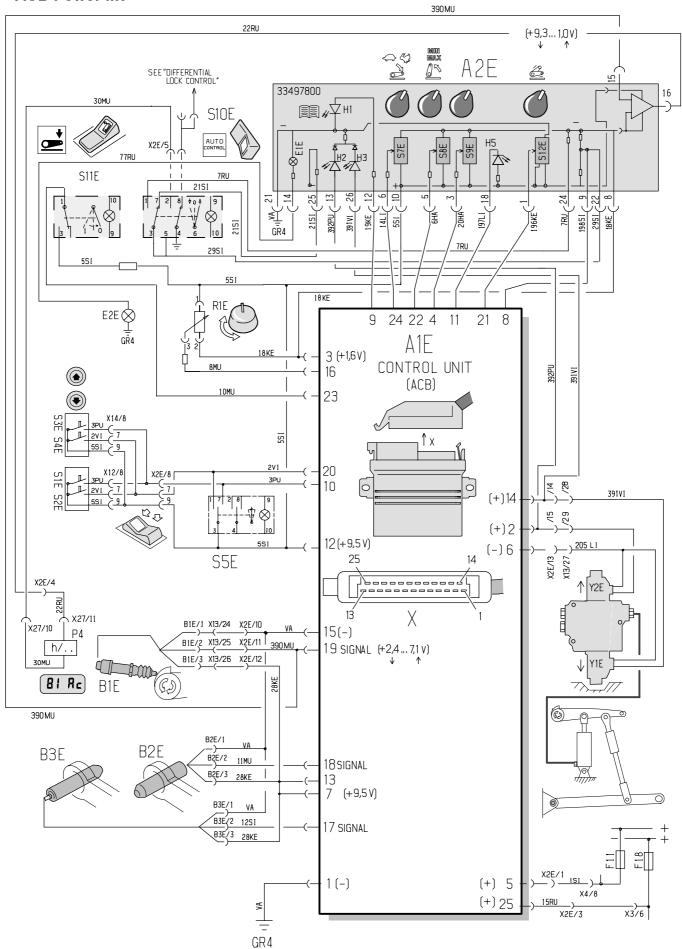

K. Checking function of ACB and ACD Power lifts

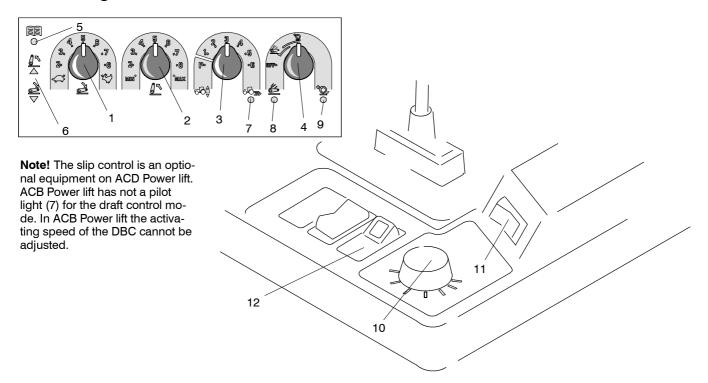

Note! The Power lift must function in the way written in this instruction.

- 1. Start the engine. The red diagnostic light (5) comes on. Activate the Power lift with the Autocontrol—switch (11), at which time the diagnostic light (5) goes out. Leave the Autocontrol—switch (11) in the lowering position and adjust the lower links with the position control potentiometer (10) to the lowest position.
- 2. Set the lowering speed (1) and transport height (2) to the minimum and position control/draft control switch (3) to position P.
- 3. Turn the Autocontrol—switch (11) into the transport position. The standard instrument shows running hours and the decimal point is flashing, when the engine is running (The display of AD—instrument does not change with Autocontrol—switch, but with a switch of its own).
- 4. Turn step by step the transport height selector (2). The lower links rise with even intervals, the red lifting ind. light (6) is lit when the lower links move up. Leave the transport height selector (2) to the max. value (pos. 9).
- 5. Turn the draft control switch (3) to the max. value (pos 6) and press the Autocontrol switch (11) to the lowering position. When the lower links go down, turn the lowerin speed selctor (1) to the max. value. The lowering speed increases clearly and the green light (6) is lit. Leave the lowering speed in the max. value.
- 6. When the lower links are in the bottom position, the green light (6) is lit (floating position), the standard instrument shows between 0–15 and text Ac (in the AD-instrument, the Ac-display must be selected in the upper display).
- 7. Lift the lower links up step by step (1-9) by using the position control potentiometer (10); The lifting intervals are almost the same and the red light (6) is lit when the links move up. Leave the knob (10) in the max. upper position; the display shows 100 Ac (in AD-instrument 99 Ac).

- 8. Raise the lower links more to the topmost position with lift/lower switch in the cab (not in picture above) (corresponding the yellow push buttons in the mudguard), diagnostic light (5) comes on and shows that the Power lift is locked. Release the towing hook and lower the lower links and towing hook with the yellow push buttons (the buttons function in all positions of the Autocontrol—switch (11)).
- 9. Turn the Autocontrol switch (11) to the transport position and immediately back to the middle position; the lower links start to rise but stop immediately, when the switch is turned to the middle position. The standard instrument shows running hours in the middle and transport position (display of AD instrument does not depend on the position of the switch (11)).
- 10. Turn switch (11) to the transport position, at which time the lower links rise up and the towing hook is locked by the pawl.
- 11. Switch on the position control mode (P). Push switch (12), at which time the lower links go down. Release the switch, at which time the lower links return to the original position. Check the position of the lower links in the Acdisplay.
- 12. **ACB**: Turn the switch (11) to the transport position, switch on the DBC with switch (4); lower links lower approximately 4 cm. Switch off the DBC, at which time the lower links rise up to the top position.

ACD: In order to activate the DBC (to lower the lower links approximately 4 cm) the tractor must be driven over the adjusted activating speed (see page **321/5**).

Note! Checking the optional slip control in ACD Power lift, see page **321/6**.


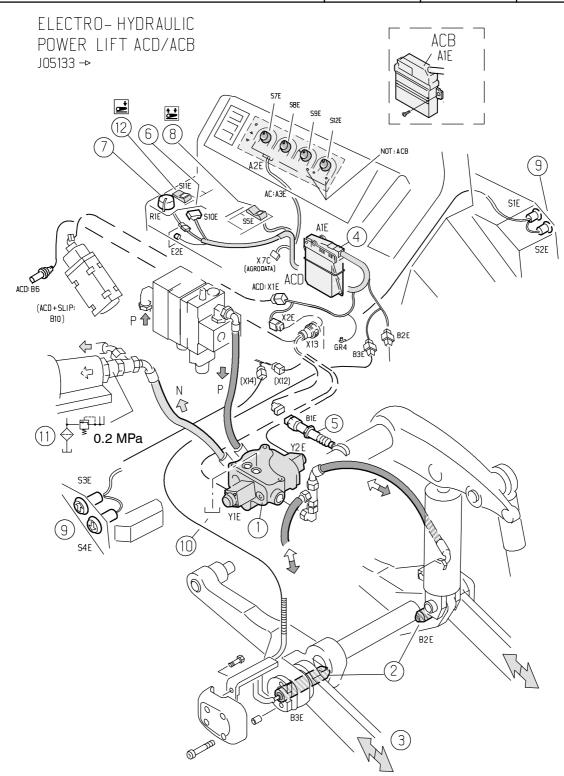


Fig. 3. Electro-hydraulic power lift ACB/ACD, J05133-.

 - 1. Control valve
- 2. Draft sensors
- 3. Lower links
- 4. Electronic unit (different on ACB and ACD)
- 5. Position sensor
- 6. Lift/stop/lower switch
- 7. Potentiometer for position control
- 8. Rocker switch
- 9. Push buttons, rear mudguards
- 10. Return oil into the gearbox housing
- 11. Return oil from control valve
- 12. Switch, forced lowering (not on earlier models)





		Model	Code	Page
33. Valmet Agrodata	8. 11. 1990	6000-8400	330	1

Valmet Agrodata performance monitor

N.B.! These instructions deal with trouble shooting on the Agrodata unit. For detailed instructions concerning the use of the Agrodata system, please see the Operator's Manual.

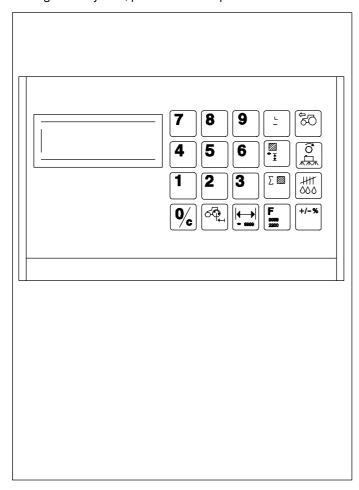


Figure 1. Agrodata function keys

Number keys (1-9) 1...9 Zeroing key for time, area, total area and litres. Also <u>%</u> used to input the figure 0. Wheel circumference input key Working width input key Function code Flow meter calibration O Time (hours and minutes) 55 Speed Area meter and distance travelled Total area meter O T Engine RPM and application rate (litres per hectare) ##T 000 Piece counter and total litres consumed Note! Additionally one rocker switch selects between tractor and implement wheel sensor for measurement of

General

Agrodata can be fitted on Valmet tractors as an optional accessory. Agrodata is meant to be used in agricultural and contract work for measuring tractor and implement functions and work performance.

Agrodata can monitor:

- Time (h, min)
- Rotation speed (RPM)
- Area (trip and total, ha)
- Distance (current meters)
- Speed (km/h)
- Flow rate (I/ha, I)
- Numbers of items (piece counter)

The different keys are pressed to call up a display of a particular function (see Operator's Manual)

Before the Agrodata unit can be used the following three values must be input:

speed and area. The other switch selects between of engine revs or implement functions (Eg. piece counter

or flow rate.

- the circumference of the wheel (cm) on which the magnetic sensor is mounted (LH rear wheel of tractor) divided by the number of magnets used.
- the effective working width (cm) of the implement
- the function code (9999 except when measuring flow rate and total consumption)

Important! Before measuring flow rate and total consumption, the Agrodata unit and flow meter must be calibrated in order to obtain the correct function code.

The data listed above is retained in the Agrodata unit's memory even if the battery cables are disconnected from the battery terminals.

6000-8400

Code

330

Page 2

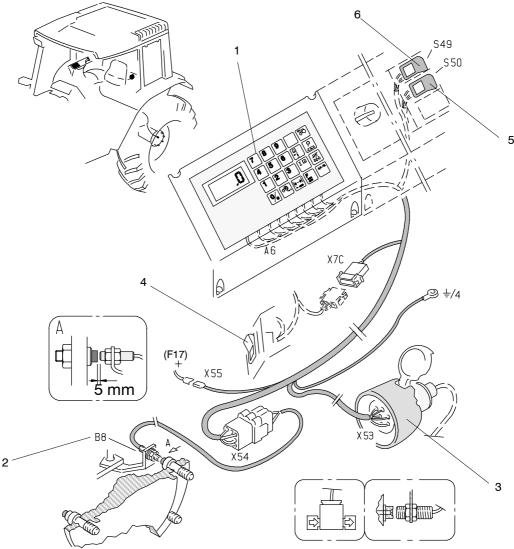


Fig. 2. Agrodata monitor and sensors

- 1. Agrodata unit
- 2. Magnetic sensor for detecting wheel rotation speed
- 3. Socket for connecting sensors on implement
- 4. Lift/lower switch for power lift (stops the area meter when the implement is raised)
- 5. Selector switch; selects between tractor and implement wheel sensor for measurement of speed and area
- 6. Selector switch; selects between measurement of engine revs and measurement of implement functions (Eg. piece counter or flow rate)

Equipment

The Agrodata unit consists of a monitor in the cab, wheel sensor (engine RPM sensor not fitted), socket for connecting sensors on implement, leads connecting monitor and sensors and supply voltage leads.

The Agrodata unit fuse (F17, 10 A) is placed in the fuse box. The connectors are placed in the lever console in the cab. The connectors are accessible by removing the side panel of the console.

On the rear cover of the Agrodata unit there are terminals for sensor leads and supply voltage leads. The terminals are numbered from one to nine. The leads have corresponding numbers (to terminal 9 is connected lead no 19) X55=supply voltage connector

X54=connector for sensors and implement socket

B8=wheel sensor

X7C=connector to lift/lower switch of power lift

X53=socket for sensors on implement

S49=selector switch

S50=selector switch


A6=Agrodata unit

The Agrodata system uses magnetic sensors. When the magnet and the sensor are in close proximity the sensor is activated and an electrical signal is transmitted to the monitor display.

The wheel sensor is fitted on the LH rear wheel mounting flange. Several magnets can be fitted on the wheel, evenly spaced for more accurate measurement of driving speed. Correct speed measurement is not possible if too few magnets are used with a big wheel.

Agrodata is connected to the hydraulic power lift. When implement is raised with the lift/lower switch, the area meter is stopped.

Sensors on implement (Eg. flow meter, piece counter etc) can be connected to the Agrodata via the socket at the rear of the tractor (implement sensors must be ordered separately from

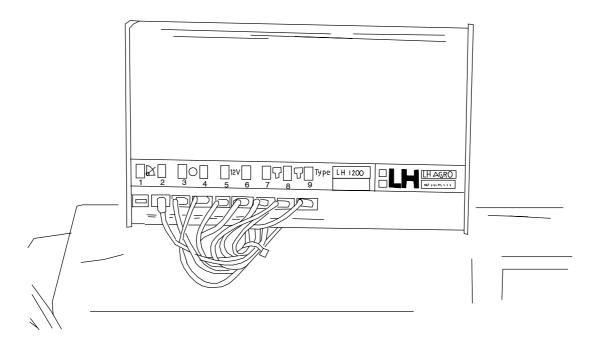

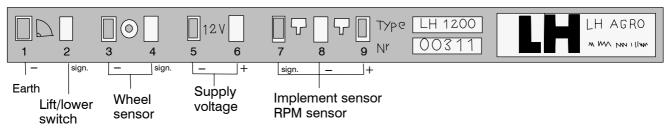


Figure 3. Cable terminal panel (monitor unit rear panel)

Terminal 1; earth (no lead)

Terminal 2; Signal from lift/lower switch of power lift

Terminal 3 and 4; Wheel sensor leads

Terminal 5 and 6; Supply leads (battery voltage)

Terminals 7, 8 and 9; Leads for sensors on implement (or en-

gine RPM sensor leads)

Note! Sensors on implement can be e.g. flow meter, piece counter, RPM sensor etc.

1. Trouble shooting

A. Checking display operation


The Agrodata unit receives its power supply from connector X55 (in the lever console).

- 1. Turn on the ignition. Check that:
- the monitor display is lit
- the display flashes the word "AGRO".
- 2. If this does not happen:
- check fuse F17 (10 A) in the fuse box
- disconnect the monitor (not the leads) and make sure that the unit is receiving power (measure voltage between terminals 5 and 6.
- 3. If the power supply is in order, but the monitor fails to operate, the defect is in the unit itself. In this case the monitor must be replaced (the condition of the other leads and sensors is irrelevant if the monitor is defective).
- 4. If the monitor responds to commands (e.g. working width, wheel circumference), it is in working order.
- 5. If the monitor displays or flashes the word "FEJL", this indicates that the supply voltage to the unit is not adequate (12 V). Check the condition of the battery and the battery connections.

		Model	Code	Page
33. Valmet Agrodata	8. 11. 1990	6000-8400	330	4

B. Checking the sensors and signal from lift/lower switch

- 1. Turn on the ignition and:
- input the working width by pressing the and followed by 8888.
- press the time function key . Following this the display should be clear (this indicates that the unit is in order.
- set switches 5 and 6 for the unit to measure tractor operations (front side pressed)
- 2. Now the unit will display the following letters:
- "h" (only flashes), when the wheel sensor is activated
- "r" (is lit), when the lift/lower switch is in the lifting position
- "F" (is lit), when the flow meter blade wheel is revolving (rocker switches in the implement position)) or if the RPM sensor is activated.
- 3. If the letter "h" does not flash, check that the wheel sensor and magnets are properly located.

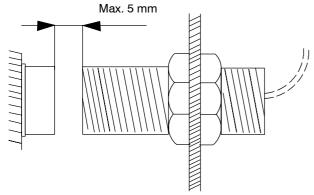

- 4. The distance between the magnet and sensor is max. 5 mm (magnet must be fitted so that yellow dot points towards the sensor)
- 5. If the sensors and magnets are correctly fitted then:
- disconnect the monitor (not the leads)
- switch on the ignition
- measure the voltage between terminal 1 (-) and the following; terminal 9 (+), supply voltage (about battery voltage)
- $-\,$ terminal 4 (+), wheel sensor (voltage $\,0\,V$ when sensor is activated, otherwise the voltage should be $11-13,5\,V$
- 6. Wheel sensor resistance (is measured between cable shoes 3 and 4) must be about **33 ohms** when the sensor is activated, otherwise **10 kilo-ohms** or greater.
- 7. Check the earth connection by measuring the voltage between terminals 8 (-) and 6 (+); this should equal battery voltage.

- 8. Set the lift/lower switch to the lifting position and measure the voltage between terminals 1 (-) and 2 (+); this voltage should be close to zero.
- 9. Press the lift/lower switch to the lowering position. Now the voltage should be 11 13,5 V.
- 10. The defects may be either in the sensors or in the leads. or the connectors have poor contacts
- 11. The sensors on the implement are checked in the same manner. When this is being done, the rocker switches (5 and 6) must be in implement position (the rear side pressed)

C. Connecting the leads from the implement sensor to the plug poles

Flow meter leads

Blue	to pole 5	(-)
Black	to pole 6	(+)
Brown	to pole 2	(signal)

Piece counter leads


Brown	to pole 5	(-)
Blue	to pole 6	(+)
Black	to pole 2	(signal)

Wheel sensor leads

Blue	to pole 3	(signal)		
Brown	to pole 1	(-)		

Sensor for detecting movement of part of implement

Blue to pole 7 (signal)
Brown to pole 5 (-)

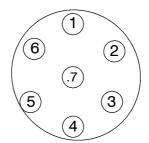

The numbering of poles can be found in the plug by the corresponding pole

Note! Figure shows the plug from the lead side.

Note! The line from the Agrodata unit to the socket can be checked as follows:

- input working depth of 8888 and press the time key
- shunt between the socket terminals no 5 (-) and 2 (signal) and the display should show "F" (flow meter, piece counter)
- shunt between terminals no 1 (-) and 3 (signal). The display should show letter "h" (only flashes) (wheel sensor).
- then shunt between terminals no 5 (-) and 7 (signal). The display should show letter " \mathbf{r} ".

33. Valmet Agrodata		Model	Code	Page
	8. 11. 1990	6000-8400	330	5

Spare part numbers for sensors and plug

Wheel sensor/sensor for detecting movement of part of imple-

ment: 31703200 (2-pole sensor)

Piece counter/flow meter: 31703000 (3-pole sensor)

Plug: 31702900

C. Further information on Agrodata operation

- Any short-circuit device may be use as a sensor (Eg. mechanical relays)
- Only original magnets should be used. If the magnet is not strong enough malfunctions will occur.
- The full supply voltage should not be connected to the sensor, because this may cause damage to the sensors.
- -The unit will not be damaged if the power supply wires are connected in reverse.
- The monitor bulbs cannot be changed in the present models. They are 10000 hour bulbs, and they not only illuminate the display but also dry out internal moisture.







33. Agrodata – instrument	15.4.1995	Model	Code	Page
	1. 8. 2000	6000-8950	331	1

Agrodata – instrument

Note! This is a different device as Agrodata performance monitor shown under code 330. Agrodata is a **factory-mounted** option. Standard equipment in HiTech tractors.

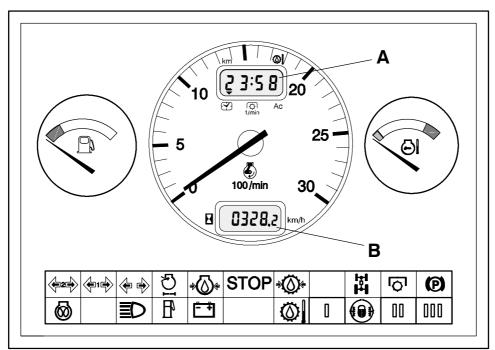

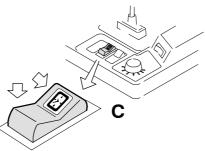

Agrodata has two digital number displays, which is fitted in place of the standard instrument.

Agrodata has a rev. counter, a temperature gauge and a fuel gauge as the standard instrument.

In addition, the lower digital display **B** shows:

- 1. Running hours, when the tractor is stationary (also when the current is switched of).
- 2. Driving speed, when the tractor is moving (from 0,3 km/h. There is letter L in front of the value, when the driving speed is slower than 7 km/h).


The upper digital display A shows:

- 1. Time (allways when ignition is switched off)
- 2. PTO shaft rotation speed (r/min)
- 3. Position of lower links (0-99)
- 4. Distance travelled (up to1000 km, after which is zeroed)
- Gearbox temperature (from +40°C. LO is shown at lower temperatures).

The different functions of the upper display can be changed by pressing the rear edge (spring returned) of the switch **C** on the LH side of the position control potentiometer. The black arrow indicates which function is selected.

Tractors, which have Agrodata, have two rotation speed sensors. One on the RH side of the reverse shuttle housing (driving speed, distance travelled) and another at the rear of the tractor for measuring the PTO shaft rotation speed. The sensors are the same as on AC IV system or in HiTech tractors.

	15. 4 . 19 95	Model	Code	Page
33. Agrodata – instrument	1. 8. 2000	6000-8950	331	2

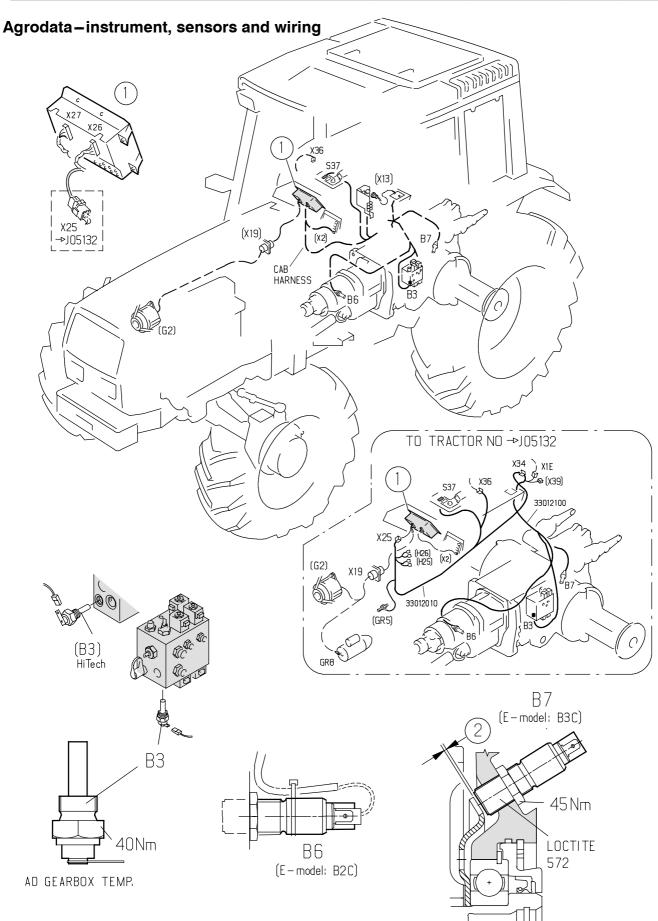

	15, 4, 1995	Model	Code	Page
33. Agrodata – instrument	1. 8. 2000	6000-8950	331	3

Agrodata – instrument, sensors and wiring

(See picture on previous page)

Agrodata – instrument P5 (upper display)

1. Agrodata-instrument P4 (lower display)

2. Clearance 1/4 of a turn

B3: Gearbox temperature sensor

B6: Gearbox speed sensor

B7: PTO shaft speed sensor

S37: Selector switch for Agrodata upper display

G2: Alternator (engine speed and running hours)

Position of connectors:

X2: In fuse box (not illustrated)

X3: In fuse box (not illustrated)

X13: on fastening plate in lever console (J05133-)

X19: Plug on the cab front wall on the RH side

X25: Connector for Agrodata under the instrument panel (-J05132)

X26: Connector on the rear side of the instrument (white)

X27: Connector on the rear side of the instrument (blue)

X34: Sensor connector in the rear part of the lever console (-.105132)

X1E: ACD power lift sensors (e.g. radar) on fastening plate in lever console (J05133-).

GR1: Earth point in the lever console rear part

GR5: Earth point on the cab front wall.

GR8: Earth point on the starter motor

Current from the ignition switch (12 V) comes to the Agrodata—unit as on the standard instrument via fuse F18. Agrodata—unit is supplied with permanent current (12 V) for the clock via fuse F2. If the unit does not work at all, check the fuses. The supply voltage wire to the clock is via plug X19/18 and via connector X2/5. The voltage can be measured between pins 23 (earth) and 24 (supply) of connector X26. Voltage via ignition switch can be measured on pin 26 of connector X27.

If the Agrodata – unit has an internal fault (e.g. in electronics), it cannot be repaired separately, but the damaged instrument section must be replaced as a complete unit.

The rev counter and fuel and temperaure gauges can be replaced separately and also the smaller circuit card (or bigger basis circuit card) which includes the digital displays. Warning light bulbs and instrument light bulbs can be changed separately without opening the instrument unit.

Switch S37 earths pin X26/12, when the rear edge is depressed. When depressing the front edge, pin X26/13 gets earthed.

Zeroing the travelling distance

- select travelling distance into the display by pressing the switch rear edge.
- press the switch front edge until the display is zeroed.

Time setting

- select time into the display by pressing the switch rear edge.
- press the switch front edge, until the hours are flashing.
- set the hours by pressing the switch rear edge
- press the switch front edge, until the minutes are flashing.
- set the minutes by pressing the switch rear edge
- when the time has been set, press the front edge, until the correct time appears into the display (flashing stops).

Calibrating the instrument for different tyres, see page 331/5.

	15. 4 . 19 95	Model	Code	Page
33. Agrodata – instrument	1. 8. 2000	6000-8950	331	4

1. Sensors

A. Gearbox speed sensor B6

Note! The sensor resistance should be 1,0-1,10 $k\Omega$. The resistance can be measured on the pins shown below. If the resistance is infinite, it should be measured on the sensor pins in order to clear up possible breaks:


Pins:

Sensor pins

X34: pins 1 and 2 (-J05132) X25: pins 1 and 2 (-J05132)

X26: pins 9 and 10 (white connector)

X13: pins 6 and 15 (J05133-) X1E: pins 1 and 2 (if in use)

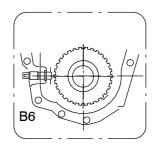


Changing the sensor:

Note! Before the gearbox speed sensor can be removed, the tractor frame must be split between gearbox—fuel tank.

- Remove the faulty sensor and clean the threads where the sensor fits
- Apply Loctite 572 onto the sensor threads and turn it against the gear wheel and then unscrew it 1/4 of a turn.
- Lock the sensor with the nut and connect wires
- Carry out a test drive and ensure that Agrodata unit functions
- Fit the plastic tube onto the sensor wire. Connect the wires to the sensor and protect with grease UC1913 (vaseline spray HHS 2000 (Wyrth)). Move the tube onto the sensor and warm it until

it is pressed tightly round the sensor.

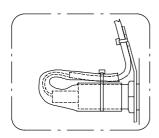


 Fold the wire on the sensor and fasten it with a plastic cable tie.

N.B.: In 50 km/h transmission the sensor locking nut must be removed and the sensor is locked with Loctite 572. This must be done since in this transmission, the measuring gear wheel is smaller and the sensor thread length is insufficient to fit the lock nut.

Note! If the driving speed display or travelling distance is clearly faulty, the fault can lie also in the wrong calibration of the instrument, see page **331/5**.

B. PTO speed sensor B7

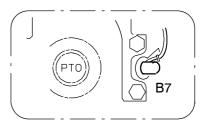

Engage the PTO and measure the PTO shaft rotation speed with a separate RPM meter and compare the reading with the display on the Agrodata—unit. Rudely said the diplay can be checked so that you adjust the engine speed until the rev. counter indicator is at 540 mark, at which time the display should show the same value (± 100 rpm).

If there is no PTO speed display or it is incorrect, check the sensor and its wiring (ensure that the emergency plug is placed in the rear socket):

Note! The sensor resistance should be $1,0-1,10 \text{ k}\Omega$. The resistance can be measured on the pins shown below. If the resistance is infinite, it should be measured on the sensor pins in order to clear up possible breaks in the loom:

Pins:

Sensor pins


X34: pins 5 and 6 (-J05132) X25: pins 5 and 6 (-J05132)

X26: pins 21 and 22 (white connector)

X13: pins 19 and 27 (J05133-) X1E: pins 5 and 6 (if in use)

Changing the sensor:

- Remove the faulty sensor and clean the threads where the sensor fits.
- Find with a dial gauge the shortest distance between the sensor and the impulse disc through the sensor hole.
- Apply Loctite 572 onto the threads and screw the sensor by hand until the sensor touches the impulse disc (do not screw too hard because the disc can spring). Unscrew the sensor then 1/4 of a turn.
- Lock the sensor with a locking nut and connect wires
- Ensure that the display shows the PTO speed.
- Fit a plastic tube onto the sensor leads. Connect the wires to the sensor and protect with grease UC1913 (vaseline spray HHS 2000 (Wyrth)). Move the tube onto the sensor and warm it until it is pressed tightly round the sensor.

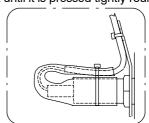

 Fold the wire on the sensor and fasten it with a plastic cable tie.


33. Agrodata – instrument

15 4 . 19 95	_
1. 8. 2000	

Modell **6000-8950** Code **331**

Page 5

C. Gearbox temperature sensor B3

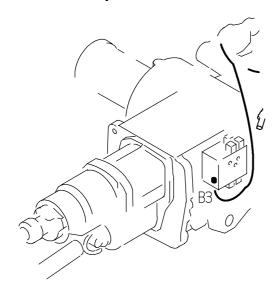

Note! The gearbox oil temperature must be higher than $+40^{\circ}$ C, before the display shows the temperature. At the lower temperatures the display shows LO.

If the Agrodata – unit does not show the gearbox temperature, check the sensor and its wiring.

Pins:

Sensor pin

X34 pin 9 (in the rear part of the lever console) (-J05132) X25 pin 9 (under the instrument panel) (-J05132) X26 pin 26 (white connector behind the Agrodata-instr.) X13 pin 20 (on fastening plate in lever console) (J05133-)


If you doubt that the sensor wiring is faulty, switch on the ignition. Select the gearbox temperaure into the Agrodata display (follow the black arrow).

Detach the wire from the sensor (under the servo valve block) and connect it to the tractor frame. When the wire is earthed, some temperature values must flash in the display and three lines must be visible in the display, if the display and the wiring is OK.

Some sensor resistances:

- **75–90** Ω (\sim +90 $^{\circ}$ C)
- $-200-250 \Omega (\sim +60^{\circ} C)$


(resistance value increases when temperature lowers).

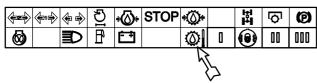

Note! There is an other temperature sensor on the front face of the servo valve block, which lights up the warning light, if the gearbox oil temperature rises too much. Also the Stop—light starts to flash.

2. Calibrating the instrument for different tyres

- 1. Remove the switch **C** by prying it carefully. Do not disconnect the wires.
- 2. Switch on current with the ignition switch.

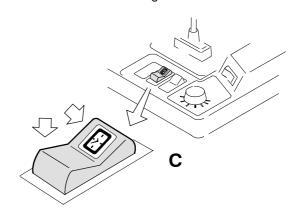

3. Connect the switch pins 1 and 7 with an auxiliary wire and press at the same time the switch front edge for over 3 seconds. "P" appears in the lower display and the valid code number (e.g. P243). The first digit is flashing. Remove the wire.



- 4. Adjust the hundreds by pressing the switch rear edge.
- 5. When the hundreds are correctly adjusted, press the switch front edge and tens start to flash.
- 6. Adjust the tens by pressing the rear edge and then press the front edge, at which time single units start to flash.
- 7. Adjust the ones by pressing the rear edge.
- 8. Finally press the front edge for over 2 seconds. Calibrating has been carried out and running hours appear in the lower display (read the note below). Fit the switch.

Note! In the beginning of the production (the first 20 tractors), the switch pins 1 and 7 must be once again connected with auxiliary wire and after that the switch front edge is pressed over 2 seconds.

Note! The code number value can vary between P100-P299. When pressing the switch rear edge, the code value changes from a smaller value to greater one. The code numbers and corresponding tyres are listed in the table on the next page.

33. Agrodata – instrument

1. 4. 1997 1. 6. 1999

Model **6000-8950**

Code **331**

Page **6**

Code numbers with different tyre sizes and transmission types

			DPS300	DPS300			DPS460, 5	50, 650
Rear wheel	r dyn	T300/40	T300/40	T450/30	T450/40	T450/50	T450/40	T450/50
13.6-38/8N	740	190	180	227	197	181	216	197
13.6R-38/8M	740	190	180	227	197	181	216	197
14.9R - 38/8M	765	184	174	219	191	175	209	191
14.9R - 38/8N	765	184	174	219	191	175	209	191
16.9-34/8N	745	189	179	225	196	180	214	196
16.9R - 34/8M	745	189	179	225	196	180	214	196
16.9R – 34/8N	745	189	179	225	196	180	214	196
16.9R – 38/8M	795	177	168	211	184	168	201	184
16.9R – 38/8N	795	177	168	211	184	168	201	184
18.4-34/8N	770	183	173	218	190	174	207	190
18.4-34/8N	770	183	173	218	190	174	207	190
18.4R – 34/8N	770	183	173	218	190	174	207	190
18.4R – 34/8M	770	183	173	218	190	174	207	190
16.9R-38/8M	795	177	168	211	184	168	201	184
18.4-34/14FOR	770	183	173	218	190	174	207	190
18.4R – 38/8M	820	172	163	204	178	163	195	178
620/75R-30/M	800	176	167	210	182	167	199	182
620/75R-30/M	800	176	167	210	182	167	199	182
16.9-34/14IND	745	189	179	225	196	180	214	196
18.4-34/14IND	770	183	173	218	190	174	207	190
18.4-34/14FOR	770	183	173	218	190	174	207	190
18.4R – 34/8M	770	183	173	218	190	174	207	190
18.4R – 34/8GY	770	183	173	218	190	174	207	190
13.6R-38/8M	740	190	180	227	197	181	216	197
14.9R – 38/8M	765	184	174	219	191	175	209	191
16.9R – 38/8M	795	177	168	211	184	168	201	184
16.9R – 34/8M	745	189	179	225	196	180	214	196
540/65R-38/M	791	178	169	212	185	169	202	185
18.4R – 34/8M	770	183	173	218	190	174	207	190
600/65R-38/M	830	170	161	202	176	161	192	176
600/65R-34/M	768	183	174	218	190	174	208	190
16.9R – 38/8N	795	177	168	211	184	168	201	184
16.9R – 38/8GY	795	177	168	211	184	168	201	184
18.4R – 38/8GY	820	172	163	204	178	163	195	178
18.4R – 38/14M	820	172	163	204	178	163	195	178
18.4-38/14FOR	820	172	163	204	178	163	195	178
20.8R – 38/M	855	165	156	196	171	157	187	171
18.4-38/14IND	820	172	163	204	178	163	195	178
18.4R – 38/M	820	172	163	204	178	163	195	178
18.4-34/14FOR	770	183	173	218	190	174	207	190
18.4-34/IND	770	183	173	218	190	174	207	190
18.4-38/FI	820	172	163	204	178	163	195	178
20.8R – 38/8M	855	165	156	196	170	157	187	176
	855	165	156	196	171	157	187	171
20.8R – 38/8M								
650/65R38M	867	163	154	193	168	154	184	168
520/70R – 34	784 701	180	170	214	186	171	203	186
540/65R – 38/M	791	178	169	212	185	169	202	185
480/70R – 38 520/70R – 38	805	175	166	208	181	166	198	181
	837	168	159	200	174	160	191	174

		Model	Code	Page
33. Agrodata – instrument	1. 4. 1997	6000-8750	331	7

Note! If a tractor has tyres which are not listed on the previous page, the code number can passably be calculated as follows:

$$X = \frac{Y \times V}{V_{\text{max}}} \qquad \text{in which}$$

 $\mathbf{X} = \text{correct code number}$

 
Y=actual code number in AD-instrument V= tractor's constructional speed (30, 40 or 50 km/h)

V_{max}=tractor's max driving speed which is shown by AD-instrument

Example:

In AD-instrument there is an actual code number 170 Tractor's constructional speed is 40 km/h AD-instrument shows the tractor max. driving speed of 38


$$X = \frac{170 \times 40}{38} = 179$$





		Model	Code	Page
33. FieldMaster	1. 8. 1998	6200-8750	332	1

1. Description

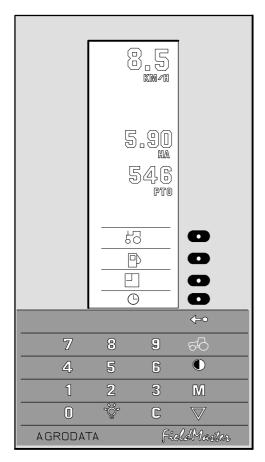



Note! The function of the four keys on the RH side of the display changes according to which one of the menus is open. The buttons have always the function which is shown in the display beside the button.

Picture 1. FieldMaster display unit in the cab on the RH side. The display shows three different functions at a time.


Function keys

Bushing this key returnes to the previous menu.

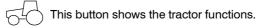

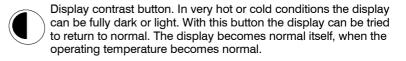

With this button can be added a bookmark on a certain page.
When the display shows another page, an operator can, by pushing this button, return to the page where the bookmark is situating. This button functions only for one implement at a time.

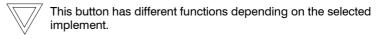

This button is used when coding together with the number keys.

Remove a selected character. This button also zeroes impulse counters in the TEST FUNCTION mode. This button returns the display contrast to the normal value.

This button switches on/off the display background light.

 \bigcirc The number keys are used when inputting code values.

FieldMaster is a combined performance monitor which can monitor both tractor and implement functions.

FieldMaster monitors the following tractor functions:

- driving speed, km/h,
- wheel slip (radar is required))
- PTO shaft rotating speed, rpm
- distance travelled, km
- area, ha
- time functions (clock, elapsed time, remaining time etc).

FieldMaster can monitor the following implement functions:

- sprayers (l/hour, l/ha, litres, alarm functions, automatic proportioning aso)
- fertilizers (kg, kg/ha, kg/hour, rpm, alarm functions etc)
- drills (kg/ha, seed amount in kilos, driving paths etc)
- balers (pcs, kg, rpm, alarm functions etc)
- slurry spreaders (ton/ha, tons, rpm etc)
- other implements (e.g. cultivated area)


Options:

- radar (slip, ground speed etc.)
- writer (output of work etc.). The writer is connected with a cable to the display unit.
- readiness for the global location system with the aid of a satellite (GPS)

The follow—up of different functions on an implement requires, that the implement has sensors which have been connected to the FM via a socket in the rear of the tractor.

On an implement there can be e.g. rpm sensors, position sensors, wheel sensors, flow meters, weight cells, manometers, actuators/position potentiometers, level sensors etc.

Note! This instruction does not handle operating instructions but it clears up the function of FieldMaster and a fault tracing.

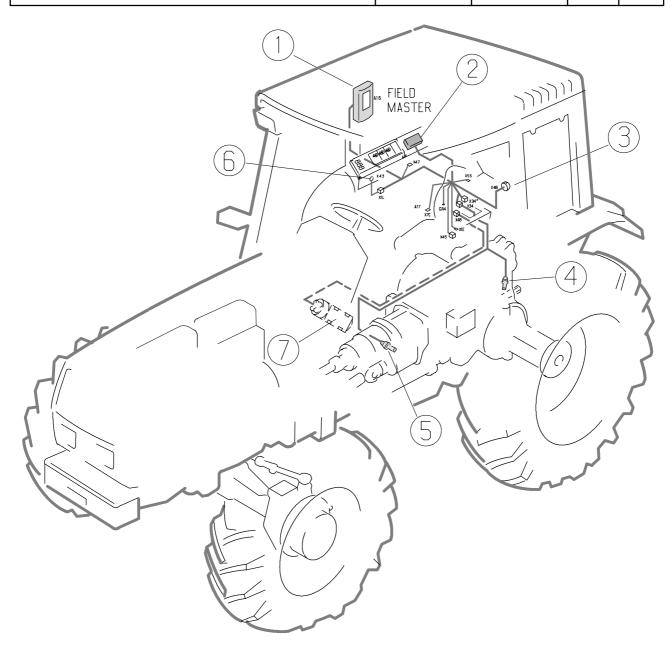

Picture 2. FieldMaster components on the tractor


- Display unit (A16). It has in built electronics for all functions of FieldMaster.
- 2. Adapter (A17), which is fitted under the AC/ACD power lift control panel. The adapter converts signals from the tractor speed sensors (4, 5) so that the diplay unit can use them.
- 3. Rear socket for connecting sensors on implement (X46)
- PTO shaft rotation speed sensor (same as for AD –instrument)
- 5. Gearbox speed sensor (same as for AD-instrument)
- Connector to connect auxiliary devices (e.g. PC) (serial port RS –232) (X43)
- 7. Radar (option)

Connectors

- X7C: connector for the lift/lower switch of the AC/ACD power lift. The function includes stopping the area counters, when the three point linkage is lifted. The connector is placed in the lever console.
- **X34:** connector for the speed sensors on the tractor (4, 5). The connector is situating in the lever console.
- **X48:** connector of the radar in the lever console. There is also another connector near the radar.
- **GR4:** FieldMaster earth point in the rear part of the lever console.
- **X55:** Supply voltage connector in the lever console (same as for the Agrodata performance monitor).
- **X1L:** via this connector are drawn wires of connector X43. The connector is situating under the switch panel of the power lift.

VA = WHITE

FieldMaster wiring diagram

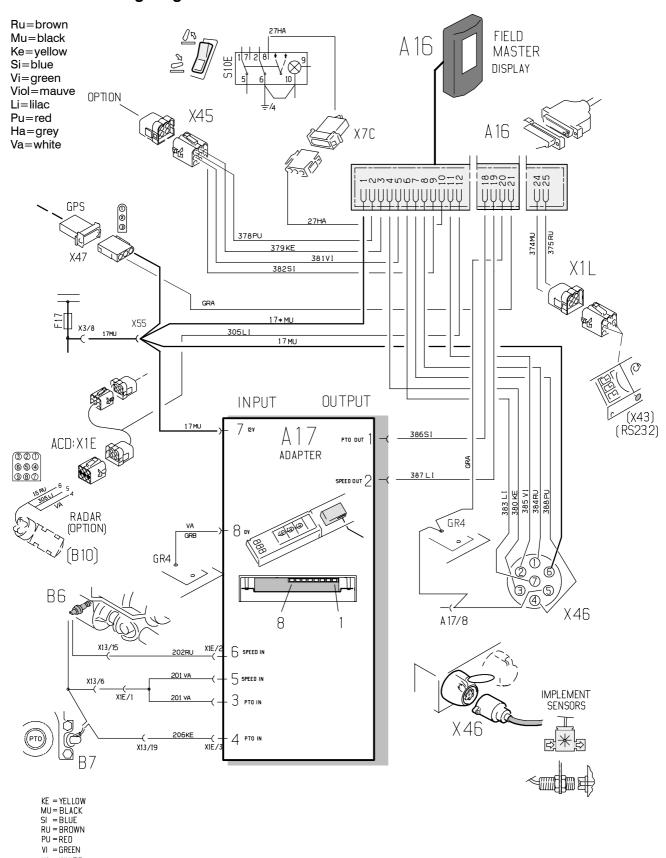

		Model	Code	Page
33. FieldMaster	1. 8. 1998	6200-8750	332	4

2. General functions

A. Calibrating gearbox speed sensor and radar (radar is an optional equipment)

Note! If the tractor wheels or FieldMaster display unit are changed, the calibration must be done.

1. Switch on current to the tractor and wait until the main menu appears in the display. In the main menu there are shown different symbols for tractor, implement, area and time functions.

IMPORTANT! If the language in the display is e.g Danish or other language, it can be changed by going either with arrow buttons or with NÆSTE SIDE button to another page, on which there can be found selection SYSTEM. By pressing button VÆLG can be moved to page, on which there is TEST INPUT, TEST OUTPUT, SPROG etc. By moving the highlighted are onto the text SPROG (=language) and by pushing VÆLG button can be moved to the language menu, in which can be selected english by moving the highlighted area onto the ENGLISH and by pushing VÆLG button. Now the language has been changed and it is in power until it is changed.

- 2. Press the yellow arrow button until you see a menu in which there are alternative implements such as SPRAYER, FERTILIZER DISTRIBUTOR, DRILL, BALER, SLURRY SPREADER and OTHER IMPLEMENTS. If there is SYSTEM in the menu, the unit shows page 2 and the implements are situating in page 1, change page with NEXT PAGE—command.
- 3. Choose one implement (e.g. sprayer) with SELECT—command. The unit shows one sprayer type, which must be accepted with ACCEPT—command. After this the sprayer symbol appears in the display. In addition, in the display there are the following commands: OPERATION, ENCODE and DATA/DELETE.
- 4. Choose ENCODE and a new menu appears, in which you can move from one row to another by using the arrow buttons. The small arrows in the upper or lower edge of the display indicate that more menus can be found in the next page, to which you can get either with NEXT PAGE—command or by scanning with the arrow buttons.
- 5. When you find selection SPEED SENSOR, press it and immediately after that press CALIB/CALC alternative.
- 6. A new menu appears in the display, in which there is a heading WHEEL TRACTOR and as a subheading text NO OF PULSES and DRIVE 100 M (i.e, number of pulses and an instruction to drive with the tractor 100 meters) and a subselection CALIB./CALC.
- 7. Drive the tractor to a place, where are ready—made markings of startpoint and endpoint of a distance of 100 meters. Drive the tractor onto the startpoint and press the CALIB—button, at which time the counter of the gearbox speed sensor is zeroed.

- 8. Drive straight ahead 100 meters on the marked course. During driving the display starts to show flashing text CALC. WHEEL, which indicates that the FieldMaster has received enough impulses on the distance of 100 meters.
- Stop driving at the endpoint marking and press CALC.WHEEL-button, at which time the impulse counter is stopped and a new number of the impulses (calibrating value) is input.

Note! If the tractor is equipped with a radar, it is calibrated in the same way as the speed sensor. The calibration of the radar is started from ENCODE—selection under which there is command RADAR. After this the calibrating procedure is the same as for the gearbox speed sensor.

B. Changing display language

Note! In this instruction it is understood, that the valid language is english.

- 1. When the display shows the main menu, press NEXT PAGE button, until you find selection SYSTEM.
- Press the SELECT-button, and you will see a page, which has selections TEST INPUT, TEST OUTPUT, LAN-GUAGE etc.
- 3. Move the highlighted area onto the LANGUAGE and press SELECT-button, after which the display shows the language menu. Move the highlighted area onto the desired language and press the SELECT-button.
- 4. A new display language is valid.

C. Others

Before the FieldMaster is able to show for example flow amount or area, the flow meter must be calibrated and working width of an implement must be input. In the same way must be calibrated extreme positions of possible position potentiometer. When necessary, possible weight measuring cell or manometer must also be calibrated. In addition, an amount of magnets for a measuring sensor affects the measurement.

		Model	Code	Page
33. FieldMaster	1. 8. 1998	6200-8750	332	5

3. Fault tracing

A. General

FieldMaster is supplied via fuse F17 (10 A). Supply voltage connector X55 is placed in the lever console.

When the current is switched on to the tractor, the main menu must appear in the display unit. If nothing appears in the display, check the fuse and supply connector X55 and earthing point GR4. If these are OK, check the display unit connector and adapter connector. If these are OK but the display does not function, the fault may lie in the display unit electronics, and the unit must be changed.


If the display unit does not show a certain implement function, check the sensor mounting on an implement and check the wires between the sensor and the rear socket. Check also the wire connections inside the socket. If these are OK, check also wires between socket—adapter—display.

Note! For the magnetic sensor the distance between the magnet and the sensor end should be max 5 mm. The yellow dot on the magnet should be turned towards the sensor. If the measuring wheel is big (rolling circumference over 2,5 m) more magnets must be fitted (180° (two magnets), 120° (three magnets), 90° (four magnets) etc.

Note! The gearbox speed sensor and the PTO speed sensor on the tractor are the same and in the same place as for the AD-instrument, see page 331/4. The optional radar is the same as on AC III and AC IV or on the ACD-power lift, which has the slip control. If the display does not show the tractor driving speed or the PTO shaft speed, the adapter can be damaged. Check the adapter connectors and the sensors.

Note! The FieldMaster adapter or the display unit cannot be repaired but they must be changed as a complete unit.

B. Error messages

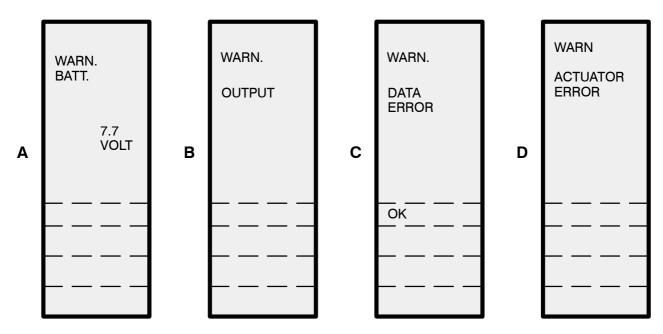

- A. Supply voltage to the FM below 10 V. This message disappears, when the supply voltage exceeds 10 V.
- **B**. If there is a short circuit in the wires from the display unit, this message is shown. The message disappears, when the short circuit has been repaired.
- C. This message appears, if the display unit memory has malfunctions. When "RETURN" button is pressed, the message disappears. After this check all coded values. If the message appears many times, the fault lies in the display unit and it must be changed.
- D. Error message for example from an actuator on the slurry spreader. The actuator has been connected wrongly or it is faulty. Check the actuator mounting and wires. If the message appears repeately, the fault may lie in the FM display unit or in its wiring.

C. Test mode

A test mode can be selected in the diplay. In this mode there are shown signals from various sensors when they are activated. The test mode can be selected in the display in the same way as the language (see Page 3), but in place of selection LANGUAGE must be selected TEST INPUT (or test output). The test mode is individual for different implements, and it depends on sensors which have been fitted on an implement in question.

The five first test points are the same for all implements, and they indicate the function of the tractor sensors as follows:

RADAR: In this point are shown signals from the radar, when driving slowly forwards.

PTO: Signals from the PTO sensor when the PTO shaft is rotating

WHEEL TRACTOR: Signals from the gearbox speed sensor, when driving slowly forwards.

DIESEL: Not in use

IMPLEM: Signal when the lift/lower switch of the AC/ACD-power lift is turned to the transport position.

Note! TRAIL.1 – TRAIL.7 in this mode mean correcponding poles in the rear socket. TRAIL.8 is not in use.

1. Sprayer:

TEST INPUT

RADAR 0	НІ
PTO	П
0	HI
WHEEL TRACTOR	
0	HI
DIESEL 0	н
IMPLEM.	1 11
0	HI
TRAIL.	1 HI
TRAIL.	пі 2
TD 4.11	HI
TRAIL. 0	4 LO
TRAIL.	7
0 TRAIL.	LO 8
0	LO
BOMTEST	ОК
	UK

TRAIL. 1: Signal from the pressure sensor. Low pressure gives only few signals per second, higher pressure more.

TRAIL. 2: Signal from the flow meter. On turn of an impeller gives two impulses.

TRAIL. 4: Signal from the wheel sensor of the sprayer always when the magnet is at the sensor when driving slowly forwards.

TRAIL. 7: Signal from the switch of the sprayer main valve or from the sensor of the manual valve.


TRAIL. 8: not in use.

BOOM TEST: OK or ERROR.

2. Fertilizer

TEST INPUT

TEST OUTPUT

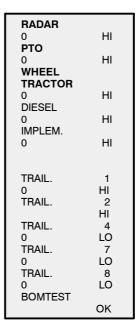

OUT	1	н
OUT	2	
OUT	3	HI
OUT	4	HI
0		HI
POT 1: 48 POT 2: 49		
OUT 1		
OUT 2	2	
OUT	3	
OUT 4		

TRAIL. 1: Signal from a rpm sensor (RPM 1), when the shaft equipped with the magnets is rotating.

TRAIL. 2: Not in use

TRAIL. 4: Signal from the implement wheel sensor, when driving slowly forwards.

TRAIL. 7: not in use.
TRAIL. 8: not in use.
BOOM TEST: not in use.

OUT 1: Signal from FM into an actuator to close a hatch. **OUT 2:** Signal from FM into an actuator to open the hatch

OUT 3: Not in use OUT 4: Not in use

POT 1: Signal from an actuator (potentiometer), which adjusts the position of the hatch. Lower number, when the hatch is closed and upper number when the hatch is open.

POT 2: Not in use.

3. Drill

TEST INPUT

RADAR 0 PTO 0 WHEEL TRACTOR 0 DIESEL 0 IMPLEM. 0	ні ні ні ні
TRAIL. 0 TRAIL. TRAIL. 0 TRAIL. 0 TRAIL. 0 TRAIL. 0 BOMTEST	1 HI 2 HI 4 LO 7 LO 8 LO

IMPLEM: Signal from the switch or sensor of the lifting arm, when the arm is raised.

TRAIL 1: Signal from the rpm sensor on the sowing shaft, when it is rotating.

TRAIL 2: Signal from the switches for the sowing shaft speed control. When the sowing shaft is rotating, HI is visible. When the shaft does not rotate, LO is visible. Can also show signals from the rpm sensor, when the shaft equipped with magnets is rotating.

TRAIL 4: Signal from the level sensor in the tank, when the tank is empty.

TRAIL 7: Signal from a switch for remote control of the hatch or from an implement sensor when the implement is raised.

TRAIL 8: Not in use BOOM TEST: Not in use.

33. FieldMaster	1.8.1998	Model	Code	Page
33. Fieldwaster	1. 8. 2000	6200-8950	332	7

4. Baler

TEST INPUT

RADAR	
0 PTO	HI
0	HI
WHEEL	
TRACTOR	н
DIESEL	
0 IMPLEM.	HI
0	HI
TRAIL.	1
0	HI
TRAIL. 0	2 HI
TRAIL.	4
	LO
TRAIL.	7
0 TRAIL.	LO 8
0	LÖ
BOMTEST	OK
	OK

TRAIL 1: Signal from a piece counter, when the sensor is activated.

TRAIL 2: Signal from the rpm sensor (RPM 3), when the shaft equipped with magnets is rotating or signal from the weight cell. A light load gives little and heavy load many impulses per second.

TRAIL 4: Signal from the rpm sensor (RPM 2), when the shaft equipped with magnets is rotating.

TRAIL 7: Signal from the rpm sensor (RPM 1), when the shaft equipped with magnets is rotating.

TRAIL 8: Not in use BOOM TEST: Not in use.

5. Slurry spreader

TEST INPUT

RADAR 0 PTO	НІ
0 WHEEL	НІ
TRACTOR 0	НІ
DIESEL 0 IMPLEM.	HI
0	HI
TRAIL. 0 TRAIL. 0 TRAIL. TRAIL. 0 TRAIL. 0 TRAIL. 0 TRAIL. 0	1 HI 2 HI 4 LO 7 LO 8 LO

TRAIL 1: Signal from the weight measuring cell, when activated.

TRAIL 2: Signal from the rpm sensor (RPM 3), when the shaft equipped with magnets is rotating, or from weight cells: A light load gives little and heavy load many impulses per second.

TRAIL 4: Signal from the rpm sensor (RPM 2), when the shaft with magnets is rotating. **TRAIL 7:** Signal from the rpm

TRAIL 7: Signal from the rpm sensor (RPM 1), when the shaft with magnets is rotating. **TRAIL 8:** Not in use.

BOOM TEST: Not in use.

D. Checking wire connections between rear socket and display unit

TESTING INPUTS:

- 1. Switch off current with the ignition switch.
- 2. Connect a test lamp to poles 5 (–) and 6 (+, battery voltage) of the rear socket. The lamp is glowing, if the supply circuit is OK. This can also be made by means of a voltage meter.
- 3. Switch on current to the tractor. Return in the FieldMaster menu to the beginning, where are the implement selections by pressing the yellow arrow button twice to the point SYSTEM (can be found in the second page).
- 4. Select TEST INPUT function (use next page button once) and make sure that all rear socket information in points TRAIL 1...TRAIL 7 shows HI mode (TRAIL. 8 is not in use).
- 5. By means of an auxiliary wire (or by test lamp) connect by turns with an auxiliary cable the poles given of the socket and make sure that HI markings (in points

TRAIL.1...TRAIL 7) change to LO:

circuit).


- connect poles 1 and 5 (TRAIL.1)

- connect poles 2 and 5 (TRAIL.2)

connect poles 4 and 5 (TRAIL.4)connect poles 7 and 5 (TRAIL.7)

WARNING! Do not connect poles 6 and 5 (makes short

6. If one of the HI markings did not change, check whether the wires are connected inside the socket. Always when the poles were connected, the impulse number in the LH side of the display increased.

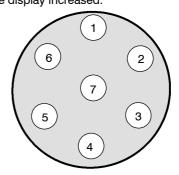

Order of socket poles seen from the rear.

Function of pole :	Wire colors:
1=RPM sensor, pressure sensor etc.	1=brown no 384
2=Flow meter	2=green no 385
3=Actuator 1, switch (OUTPUT)	3=yellow no 380
4=Wheel sensor, implement sensor	4=red no 388
5=Earthing	5=white GR
6=Supply (battery voltage)	6=black no 17
7=Implement sensor	7=lilac no 383

TESTING OUTPUT:

7. Select test output function (next after test input). Connect a voltage meter or a test lamp between poles 3 and 6. When you press button "OUT1" the voltage must be up as long as you press the button.

33. FieldMaster


1. 8. 1998 1. 8. 2000

Model **6200 -- 8950**

Code **332**

Page 8

E. Connecting sensor wires to plug

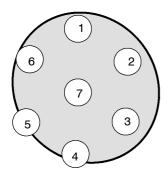

Plug poles seen from wire side (from sensor side). The pins have been numbered on the plug casing. The tables below show connections of the sensor wires to the plug. Plug ordering number is 31702900 (also Agrodata).

Sprayer				
Sensor	Wire color Plug pin			
	blue	5		
Flow meter	brown	2		
	black	6		
Wheel sensor	blue	4		
	brown	5		
Implement sen-	blue	7		
sor	brown	5		
Pressure sensor	blue	6		
	brown	5		
	black	1		

Fertilizer distributor			
Sensor	Wire color	Plug pin	
RPM sensor 1	blue	6	
	brown	5	
	black	1	
RPM sensor 2 or	blue	6	
weight module	brown	5	
	black	2	
Wheel sensor	blue	4	
	brown	5	
Implement sen-	blue	7	
sor	brown	5	


Drill			
Sensor	Wire color	Plug pin	
RPM sensor on drill shaft	blue	1	
(2 wires)	brown	5	
RPM sensor on	blue	6	
drill shaft (3 wires)	brown	5	
,	black	1	
RPM sensor on switch	blue	2	
	brown	5	
Drill boot sensor	blue	6	
	brown	5	
	black	4	
Implement sen-	blue	7	
sor	brown	5	

Baler			
Sensor	Wire color	Plug pin	
Piece counter	blue	1	
	brown	5	
RPM sensor 3 or	blue	6	
weight module	brown	5	
	black	2	
RPM sensor 2	blue	6	
	brown	5	
	black	4	
RPM sensor 1	blue	6	
	brown	5	
	black	7	

Slurry spreader			
Sensor	Wire color	Plug pin	
RPM sensor 1	blue	6	
	brown	5	
	black	1	
Flow meter	+12 V	6	
	0 V	5	
	Signal	2	
Wheel sensor	blue	4	
	brown	5	
Implement sen-	blue	7	
sor	brown	5	



	\setminus	Model	Code	Page
33. Agroline – instrument	1. 9. 2002	6200-8950Hi	333	1

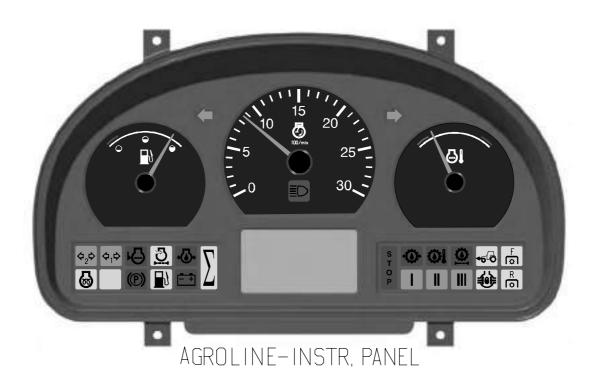

General

Mezzo/Mega/HiTech 6200 – 8950Hi tractors will be fitted with **Agroline** – instrument (Mezzo/Mega: **L17307** – . HiTech: **L18105** –).

Before this a new Agroline – instrument has been fitted to the following **HiTech** tractors: L04111, L11112, L11138, L11237, L17119, L17217, L17238, L17310, L17411, L17418, L17528, L17537 ja L17539.

With regard to the instrument change, modifications have been done in the dashboard. Some rocker switches have been positioned on the RHS side pillar of the cab.

The calibration of the instrument must be done if a new instrument or the rear tyre sizes have been changed. With the help of the calibration the Agroline—instrument can show the correct driving speed and driving distance (page 333/4).

The Agroline – instrument cannot be repaired but a spare part instrument is fitted in place. However, internal light bulbs and cover glass can be changed. Warning lights are LED – diodes and they cannot be changed. There are two connectors on the instrument rear face to connect the wire looms.


The instrument is controlled by a microprocessor and it is programmed according to the tractor type. Regarding service or repairs the instrument program cannot be changed.

A spare part instrument is deliver ready—programmed with

the actual running hours of the customer's tractor.

The tractor model, chassis number and the actual running hours must be given when ordering.

Agroline-instrument

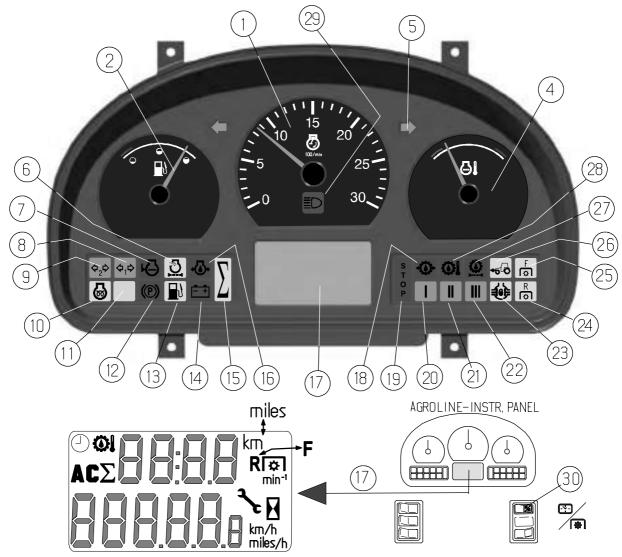

- 1. Revolution counter
- 2. Fuel gauge
- 4. Engine temperature gauge
- 5. Direction indicator flasher
- 6. Engine air filter warning light
- 7. Engine coolant level (not in use).
- 8. First trailer dir. ind. flasher (if one flasher bulb is blown, this light does not flash)
- 9. Second trailer dir. ind. flasher (if one flasher bulb is blown, this light does not flash)
- 10. Glowing
- 11. Not in use
- 12. Parking brake applied
- 13. Low fuel level (< 15 I, without extra reservoir)
- 14. Charging
- 15. Sigma-Power ind. light (8950Hi only)
- 16. Engine oil pressure
- 17. LCD-display
- 18. Gearbox oil pressure
- 19. Stop-central warning light
- 20. DPS-speed I (not HiTech)
- 21. DPS-speed II (not Hitech)
- 22. DPS-speed III (not HiTech)
- 23. Differential lock
- 24. Rear PTO
- 25. Front PTO
- 26. 4WD

- 27. Hydraulic pressure filter blocked
- 28. Gearbox oil temperature
- 29. High beams
- 30. Switch (S80) to select functions in LCD-display (17) upper row

Stop-central warning light (19) The Stop-light is controlled by the following functions, i.e. if one of the following warning lights come on, the STOP-light starts to flash:

- -engine oil pressure too low
- -engine temperature too high (not ind. light)
- -gearbox oil pressure too low
- -gearbox oil temperature too high
- -parking brake cable broken or faulty adjustment (HiTech only)


If the STOP-light only is flashing, the engine temperature is too high. If in the HiTech models the STOP-light comes on when the parking brake is engaged, the parking brake cable is broken or its adjustment is faulty. It is essential that this fault must be repaired before driving.

When the ignition is switched on, the following warning lights must come on:

- -engine oil pressure
- -stop-light is flashing
- -gearbox oil pressure
- -4WD
- -parking brake (HiTech models)I
- -charging

		Model	Code	Page
33. Agroline – instrument	1. 9. 2002	6200-8950Hi	333	3

1. Agroline-instrument LCD-display

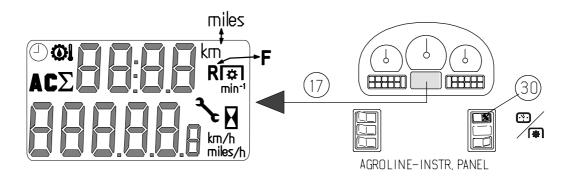

The display (17) can monitor the following functionst:

Upper row shows:

(the function can be changed by pressing the RH side edge of the switch **30**):

- distance travelled (m, km or miles) (max. 999 km)
- rear PTO revs (R) (r/min)
- front PTO revs, option (F) (r/min)
- time
- gearbox oil temp. (in display LO, when temperature below $+40^{\circ}$ C).
- position of lower links (0-100) AC.
- SigmaPower % (8950Hi only). Shows in percent how much power is transmitted via rear PTO.
- fault codes
- Service interval indication

Lower row shows:

(the lower row has two functions and cannot be affected with switch (30)):

- running hours (visible, when the ignition is on and the engine is not running)
- driving speed (km/h or miles/h) (visible when the ignition is on and the tractor is moving). When the speed is below 3 km/h, symbol L is visible.

When the ignition is switched on, the lower row shows first the running hours and in the upper row there is the function which was selected before the ignition was switched off.

Zeroing distance travelled:

- select the "distance travelled" to the upper row by pressing the right edge of the switch (30).
- press the switch (30) left edge as long as the distance value is zeroed.

Setting time:

Do not pause for over **10 sec**. while setting, because the display is then switched into the normal mode.

- Switch on ignition. Select the time in the upper row by pressing the right edge of switch (30).
- press the right edge for about 3 sec., then the minutes start to flash.
- set minutes by pressing the switch (30) left edge
- select hours in the display by pressing the switch (30) right edge
- set hours by pressing the switch (30) left edge.
- time is now set and the display is switched to the normal mode after 10 seconds or by pressing the right edge of switch (30) for over 3 seconds.

		Model	Code	Page
33. Agroline – instrument	1. 9. 2002	6200-8950Hi	333	4

2. Calibrating Agroline for different tyres

The calibration of the instrument must be done if a new instrument or the rear tyre sizes have been changed. With the help of the calibration the Agroline – instrument can show the correct driving speed and driving distance.

Do not pause more than **10 seconds** during calibration, because the display will be switched into the normal mode.

- switch on current. Choose the driving distance in the upper row by pressing the right edge of the switch (30).
- press the right edge of the switch (30) for about 3 sec. until the display is switched into the setting mode (minutes start to flas).
- press the switch (30) right edge quickly, at which time **m** starts to flash in the display.
- select the correct code value in the display by pressing the switch (30) left edge. When the left edge is kept down, numbers are changed continually.
- when the code is correct, the display is switched to the normal mode after 10 seconds. or by pressing the right edge of the switch (30) for over 3 seconds.
- if a correct code value you passed, scan forwards up to code 400, after which the code starts from 100.

Note! The code number could be between **100–400**. By pressing switch (**30**) the code value is changed from a smaller value to a greater one. The code numbers with various tyres are shown in the table below (same as for Agrodata – instrument).

Note! If tractor tyres cannot be found in the table below, the code number can be calculate as follows:

Example:

- Agroline instrument present code number is 170.
- Tractor max. driving speed is 40 km/h.

Agroline – instrument shows max. driving speed of $\bf 39~km/h$ when driving the tractor.

The code value X=174 can be calculated as follows:

$$X = \frac{170 \times 40}{39} = 174$$

Code numbers with different tyre sizes and transmission types (Mezzo ja Mega):

	6200-6400	6800	-8550		6200-6400	6800	-8550
Rear wheel	40 km/h	40 km/h	50 km/h traffic model	Takapyörä	40 km/h	40 km/h	50 km/h traffic model
13.6-38	216	216	197	480/80R42	181	181	166
13.6R38	215	215	197	520/70R34	203	203	186
14.9R38	209	209	191	520/70R38	193	193	177
16.9-34	214	214	196	520/70R38	191	191	174
16.9R34	212	212	194	520/85R38	181	181	166
16.9R38	201	201	184	520/85R42	169	169	155
18.4-34	207	207	190	540/65R38	200	200	183
18.4-38	195	195	178	580/70R38	182	182	167
18.4R38	195	195	178	600/65R34	203	203	186
20.8R38	183	183	167	600/65R38	193	193	177
20.8R42	173	173	159	600/65R38	192	192	176
230/95R48	200	200	183	620/75R30	199	199	182
270/95R48	194	194	178	650/65R38	184	184	168
340/85R38	215	215	197	650/65R42	175	175	160
420/85R38	199	199	182	650/75R38	173	173	159
460/85R38	190	190	174	680/75R32	183	183	168
480/70R38	198	198	181				•

		Model	Code	Page
33. Agroline – instrument	1. 9. 2002	6200-8950Hi	333	5

Code numbers with different tyre sizes and transmission types (HiTech):

	6250Hi-6550Hi	6850Hi-	-8150Hi	8350H	i–8950Hi
Rear wheel	40 km/h	40 km/h	50 km/h traffic model	40 km/h	50 km/h traffic model
13.6-38	216	216	197	217	196
13.6R38	215	215	197	216	196
14.9R38	209	209	191	210	190
16.9-34	214	214	196	215	195
16.9R34	212	212	194	214	194
16.9R38	201	201	184	202	183
18.4-34	207	207	190	208	189
18.4-38	195	195	178	196	177
18.4R38	195	195	178	196	177
20.8R38	183	183	167	184	167
20.8R42	173	173	159	174	158
230/95R48	200	200	183	201	182
270/95R48	194	194	178	195	177
340/85R38	215	215	197	216	196
420/85R38	199	199	182	200	181
460/85R38	190	190	174	191	173
480/70R38	198	198	181	199	181
480/80R42	181	181	166	182	165
520/70R34	203	203	186	204	185
520/70R38	193	193	177	194	176
520/70R38	191	191	174	192	174
520/85R38	181	181	166	182	165
520/85R42	169	169	155	170	154
540/65R38	200	200	183	201	182
580/70R38	182	182	167	183	166
600/65R34	203	203	186	204	185
600/65R38	193	193	177	195	176
600/65R38	192	192	176	193	175
620/75R30	199	199	182	200	182
650/65R38	184	184	168	185	167
650/65R42	175	175	160	175	159
650/75R38	173	173	159	174	158
680/75R32	183	183	168	184	167

		Model	Code	Page
33. Agroline – instrument	1. 9. 2002	6200-8950Hi	333	6

3. Others

Changing speed and distance units (km/h-miles/h)

The units have been set in the factory for various market areas. In Service the units cannot be changed.

Indication of periodical maintenance:





Note! When the tractor running hours reach a service interval, a spanner symbol and the running hours of the service interval in question come on into the diplay.

If the service is not done, the spanner and the service interval are visible for **10 seconds** every time the ignition is switched on.

The Service man (or customer) can confirm that the maintenance has been done by pressing switch (30) left edge and at the same time switching on the ignition. After this the spanner symbol is not visible until the next Service is approaching.

4. Fault codes

Agroline – instrument can show fault codes for a damaged sensor, at which time the spanner symbol is visible in the display.

The fault code can be seen by scanning with switch (30). The fault code is shown in the upper row of the display (17), if one of the following sensors have a malfunction or wires have problems:

- fuel level sensor **B2**. **First digit** of three-number code.
- engine temperature sensor B1. Middle digit of fault code.
- gearbox temperature sensor B3. Last digit of fault code.

0=0K

1 = poor contacts or too high resistance

2 = short circuit or too low resistance

E.g: 200: fuel sensor short circuit

E.g: 010: engine temperature sensor resistance too high

(wire broken, sensor damage etc.).

E.g: **001:** gearbox temperature sensor resistance too high

(wire broken, sensor damage etc.).

Fault tracing:

- If the Agroline-instruments have malfunctions, check that the instrument rear face connectors X26 and X27 are correctly connected. If the instrument is totally black although the current is switched on, check the fuses F14 (ignition switch) and F18 (instrument), supply wires and earth points. (See wiring diagrams on pages 310/105, Mezzo/Mega and 310/93, HiTech). The position of different components and connectors can be found on page 310/6C, (Mezzo/Mega) and 310/6E, (HiTech).
- When necessary, check various sensors and switches according to instructions 5 and 6. If wires, switches and sensors are OK, but the problem still exist, change the instrument.
- Switch (30) earths in the instrument rear face pins no 24 and 25 of the connector X26, when different edges of switch are pressed.

If the instrument does not respond to the use of these switches, check wire joints in the switches and instrument connectors behind the instrument. If these are OK, the fault can lie inside the instrument.

		Model	Code	Page
33. Agroline – instrument	1. 9. 2002	6200-8950Hi	333	7

5. Sensors and switches


A. Gearbox speed sensor B6

(For monitoring the speed and distance)

Note! The sensor is placed in the lower part of the shuttle housing on the RH side of the gearbox. The sensor is the same as in the Agrodata—instrument.

Note! If the driving speed and travelling distance values are incorrect in the diplay, the reason can also be faulty calibration of the tyres, see page **333/4**.

Note! The sensor resistance should be between 1,0–1,10 $k\Omega$. It can be measured from pins X26/5 and X26/22. If the resistance was infinite, it must be measured from sensor poles, so that possible continuity problems can be identified

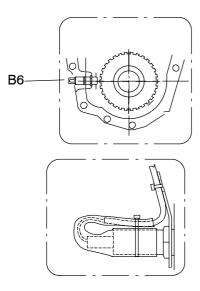


Changing the speed sensor, see page 331/4.

Note! The instruction are as for Agrodata-instrument but connectors have differences, see wiring diagrams.

B. Rear PTO speed sensor B7

(for monitoring PTO revs.).



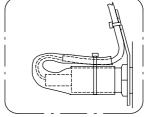



The sensor is the same as in Agrodata–instrument. The sensor resistance should be $1,0-1,10~k\Omega$. The resistance can be measured from pins X26/9 and X26/22. If the resistance was infinite, it must be measured from sensors.

If the resistance was infinite, it must be measured from sensor poles, so that possible continuity problems can be identified.

Changing the sensor, see page 331/4

Note! The instruction are as for Agrodata-instrument but connectors have differences, see wiring diagrams.



IMPORTANT! If the tractor has front PTO, the speed signals comes from alternator or separate speed sensor.


The Agroline – instrument has front PTO pilot light and its rotation speed can be selected in the instrument LCD – display.


		Model	Code	Page
33. Agroline – instrument	1. 9. 2002	6200-8950Hi	333	8

C. Gearbox oil temperature B3

(for monitoring gearbox oil temperature)

IMPORTANT! Agroline – instrument shows a fault code, if this sensor is faulty, see page **333/6**.

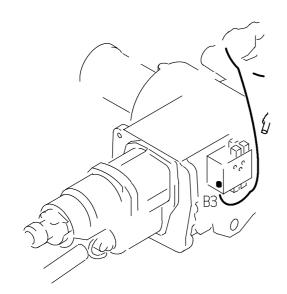

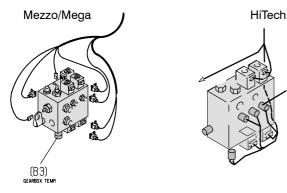

Position of the sensor:

- In Mezzo/Mega: on the lower face of the servo valve block
- In HiTech: on the outer face of the servo valve block

Note! The gearbox oil temperature must be higher than +40°C, before the instrument shows the temperature value. In lower temperatures LO (=LOW) is visible in the display.

If the display does not show the temperature value, check the sensor wires and the sensor.

Sensor resistance values:

The resistance can be measured between pin **X26/6** and frame contact. If the value is infinite, the resistance must be measured on the sensor pins.

Due to manufacturing tolerances of the sensor **B3** for instrument display, the display value can deviate a bit before the warning light of the sensor **S16** comes on.

If the gearbox oil temperature is continuously very high (e.g. +90°...+99°C), check the cleanliness of the oil cooler and the transmission oil level. If the gearbox oil level is at "extra max" line, the oil overheats easily in high loads and at high driving speeds. In some cases it can be useful to reduce the oil level down to "min" or "max" line of the dipstick. If there is too little oil in the gearbox, it must be topped up to the dipstick lines.


		Model	Code	Page
34. Agroline – instrument	1. 9. 2002	6200-8950Hi	333	9

D. Engine temperature sensor B1

(for monotoring the engine temp. and to control the STOP-light)

Note! The sensor is placed on the engine beside the thermostat housing.

IMPORTANT! Agroline – instrument shows a fault code, if this sensor malfunctions, see page **333/5**.

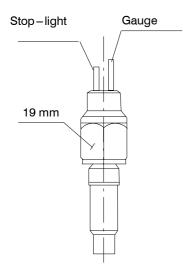

Gauge pin resistance values:

 60° C=134± 13,5 Ω

90°C=**51,2± 4,3** Ω 100°C=**38,5± 3,0** Ω

The resistance can also be measured between pin X27/12 and frame contact (GR3).


STOP – warning light flashes, if the engine temperature is too high (can also be seen in the gauge):

Part no	Alarm temperature
8366 40772	106 ± 3°C

E. Engine oil pressure sensor S13 (for warning lights)

STOP – warning light flashes, if the engine oil pressure is too low. Also warning light illuminates (at the same time also air filter warning ligh comes on). In this case the engine must be stopped immediately and possible reason must be found and repaired.

The warning light must be on, when the ignition is switched on (without starting the engine). The warning light must go out, when the engine has started (oil pressure rises in the engine).

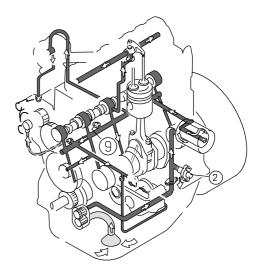


The oil pressure sensor (9) is placed on the RH side of the engine. The pressure relief valve (2) is placed on the LH side.

F. Fuel level sensor B2 (for fuel gauge and warning light)

IMPORTANT! Agroline—instrument shows a fault code, if this sensor has a fault, see page **333/5**. Possible fault can also be seen in the fuel gauge. The warning light comes on, when the fuel amount is less than 15 litres (without extra tank).

Warning light switch function can be checked by measuring between pin W and earth (switch function)

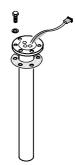

The sensor resistance can be measured direct from the sensor or between pole G and earth or between pin X27/7 and earth point (GR3). Resistance is about 70 ohms, when the tank is empty and about 3 ohms, when it is full.

In case of failure, the sensor is changed. The connector contact problems can be removed by disconnecting and reconnecting the connector.

G. sensor S12 for engine air filter warning light (for warning ligh)

The warning light comes on, when the air filter is blocked. The sensor is placed in the induction pipe of the filter. If the filter is blocked, a vacuum is created in the pipe. Clean or change the filter.


Note! The air filter warning light comes on, if the engine oil pressure warning light comes on while driving, although the filter is OK. The filter warning light is on when the current is on but the engine has not been started.

		Model	Code	Page
33. Agroline – instrument	1. 9. 2002	6200-8950Hi	333	10

H. Gearbox oil pressure S17 (for warning light)


The warning light comes on, when the pressure is too low (20-50 kPa).

The sensor is placed on the servo valve block on the LH side of the gearbox:

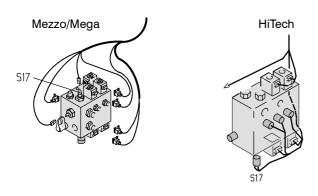

- Mezzo/Mega: the sensor S17 is located on the upper face of the valve block.
- HiTech: the sensor S17 is located on the lower face eof the valve block.

I. Gearbox oil temperatute switch S16 (for warning light)

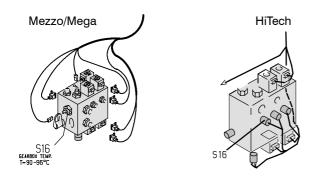

Position of switches:

- Mezzo/Mega: on the front face of the valve block
- HiTech: on the outer face of the valve block

Note! The switch illuminates the warning light in the dashboard, when the gearbox oil temperature rises too much e.g. 90–96 °C. Also the STOP–light starts to flash. Then stop the tractor and try to find out the fault.

The engaging temperature tolerance of the warning light sensor S16 is 93 $^{\circ}$ C \pm 4 $^{\circ}$ C.


Due to manufacturing tolerances of the sensor **B3** for instrument display, the display value <u>can deviate a bit from this</u> before the warning light of the sensor **S16** comes on

If the temperature is continuously over 90 °C, clean the radiator and check the gearbox oil level.

Note! Too high oil level in the gearbox can cause overheating at high driving speeds.

J. Switch S44 for blocked pressure filter


(for warning light)

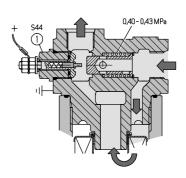

The switch (1) is placed in the pressure filter bracket. If the tractor has many pressure filters/return filters (on HiTech – models three), all filters have switch **S44**, see page **910/9B**. If only one filter is blocked the warning light comes on.

K. Parking brake warning light switch

\$52 (for STOP-light and warning light)

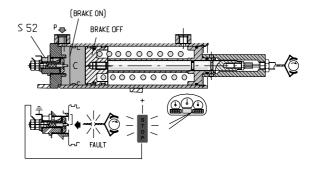

HiTech-models:

There is a switch **S52** placed in the front end of the parking brake hydraulic cylinder. The switch activates the STOP—light, if e.g. the parking brake cable is damaged or its adjustment is incorrect, see page **521/3**.

In addition, there is a warning light in the dashboard, which comes on when the shuttle lever is in P-position.

Mezzo/Mega-models:

There is a switch **S15** in the rear end of the parking brake lever on the LH side of the seat. The switch activates the warning light, when the lever is pulled up.

		Model	Code	Page
33. Agroline – instrument	1. 9. 2002	6200-8950Hi	333	11

6. Others

A. Direction indicator flashers





There are three indicator lights in the instrument:

- tractor flashers
- first trailer flashers
- second trailer flashers

The indicator lights flash simultaneously with the flasher lamps. If e.g. one of the trailer lamps is blown, the indication light in question does not flash in the dashboard.

The flasher relay **K10** is placed separately in front of the fuse box.

B. Indication light for glowing



This light is lit when the ignition switch is turned to the glowing position (THERM), at which time the glow plug in the engine intake manifold is energised and warms up engine intake air.

C. Charging light



This light is on, when the ignition is switched on, but the engine is not running. After the engine has started the light must go out.

If this light comes on while driving, check the alternator wires and the alternator.

D. DPS indication lights (not HiTech)



These lights are in Mezzo/Mega-tractors, which have the AC 2.3 system. In HiTech-models the DPS speed is shown in the AC 5-display on the RH side front pillar of the cab, see page 370/4.

Concerning function of these indication lights, see AC 2.3 pages 314/4-5.

E. Σ -light in 8950Hi.



When the higher output range of the engine is engaged, there is a light Σ in the warning light panel.


This light also works as a fault diagnostic light informing by flashing (with different frequencies) of a possible fault (sensor is out of order/cable is broken). Warning light gets the signals from the Σ -Power unit.

SigmaPower – basic functions in Agroline are the same as in Agrodata – instrument (see page 313/1).



Agroline—instrument can show in 8950Hi—model, how many percent of the max PTO power is transmitted via the rear PTO, when the PTO is engaged.

F. Hour recorder and rev counter

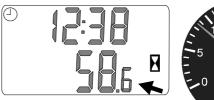



The analog engine revs counter (equipped with a hand) receives signals fron the alternator pin \mathbf{W} . The Agroline-instrument digital hour recorder gets the signals from the alternator pole \mathbf{W} .

In case of problems, check the alternator wires and alternator

G. Position of lower links



Agroline—instrument can monitor the position of the lower links (AC) between digits 0–100. This function is both in ACB and ACD power lifts. The function is the same as earlier in the Agrodata—instrument.

The display shows symbol **AC** and the position of the lower links as a percentage scale $\mathbf{0} - 100$. $\mathbf{0} =$ the lower links are in the lowest position and $\mathbf{100} =$ the lower links are in the top position. When the lower links are in the middle position, the display shows the number $\mathbf{50}$.



	8-11, 1990	Model	Code	Page
34. Autocontrol – III	15. 6. 1992	6600E, 8100E	340	1

Valmet Autocontrol – III Tractor control system is a standard equipment on tractors 6600E, 6600E Hi – Trol and 8100E


AC-III controls automatically the following functions:


- front wheel drive
- power take-off
- differential lock
- quick-shift gear
- cold starting
- slip control

Additionally AC-III measures:

- rotation speeds
- battery voltage
- temperatures
- driving speed and distance travelled
- trip area/total area
- number of items
- Application rate/liquid consumption
- position of linkage
- wheel slip
- time and costs

Autocontrol - III controls tractor transmission as follows:

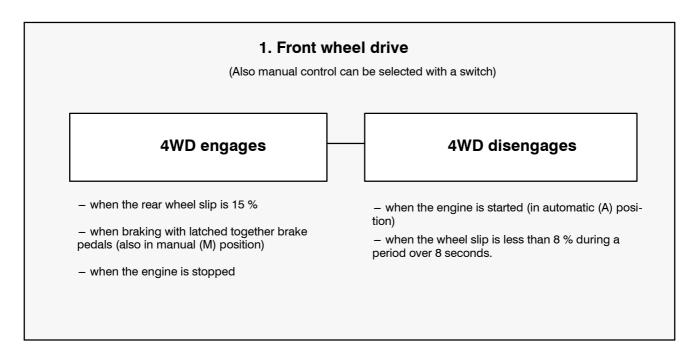

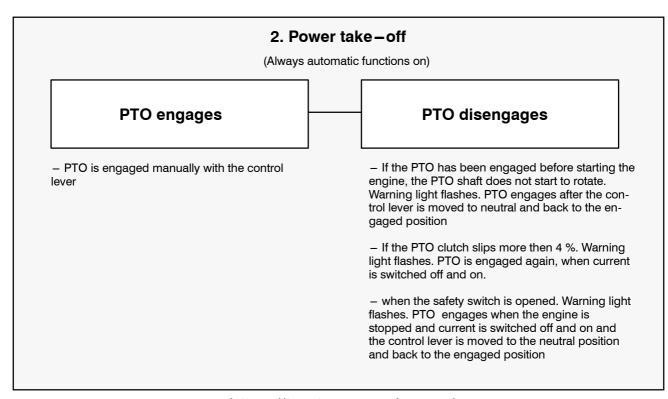

34. Autocontrol-III 8 1. 1990 Model Code Page 6600E, 8100E 340 2

3. Differential lock (Also manual control can be selected with a switch) Diff. lock engages Diff. lock disengages when the rear wheel slip is less than 10 % - when one rear wheel rotates 25 % faster than during a period of one second. the other - when the brake pedal/pedals is/are pressed (also in the manual (M) position) - when the clutch pedal is depressed - when the front wheel steering angle is more than ±10° - when the tractor driving speed is over 12 km/h - when the tractor is stopped

4. Quick-shift gear

(Also manual control can be selected with a switch)

Automatic changing A1

 Gear changing according to the max. torque. Economical, changes later and allows the engine revs to fall.


Automatic changing A2

 Gear changing according to the max. effect. Changes earlier and does not allow the engine revs to fall.

 Automatic gear changing, which changes to the lower gear when accelerating and to the higher gear when decelerating (in both ranges A1 and A2)

	8. 17. 1990	Model	Code	Page
34. Autocontrol – III	15. 6. 1992	6600E, 8100E	340	3

AC-III controls also the following functions:

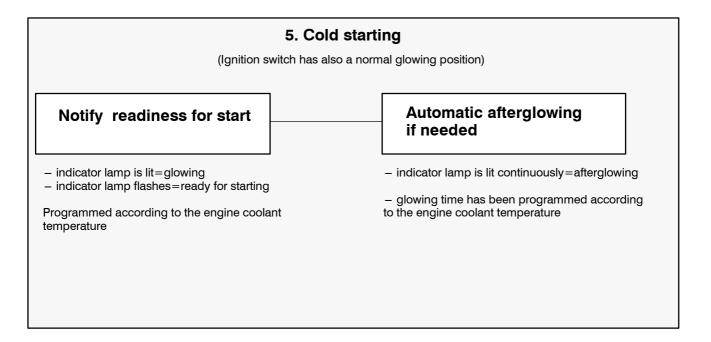


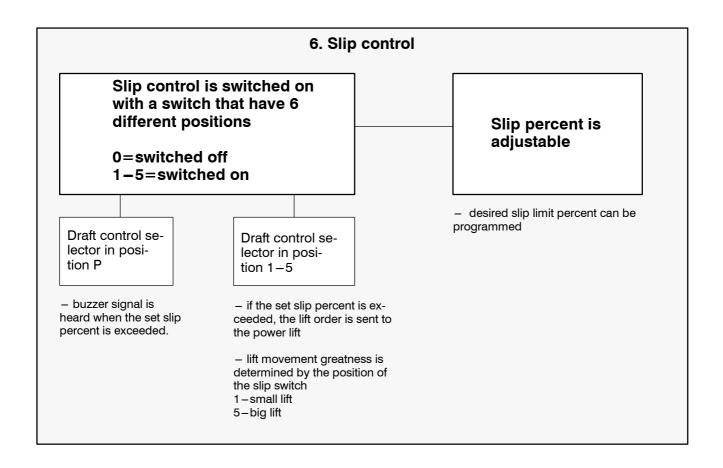


Figure 1. Components for AC-III system

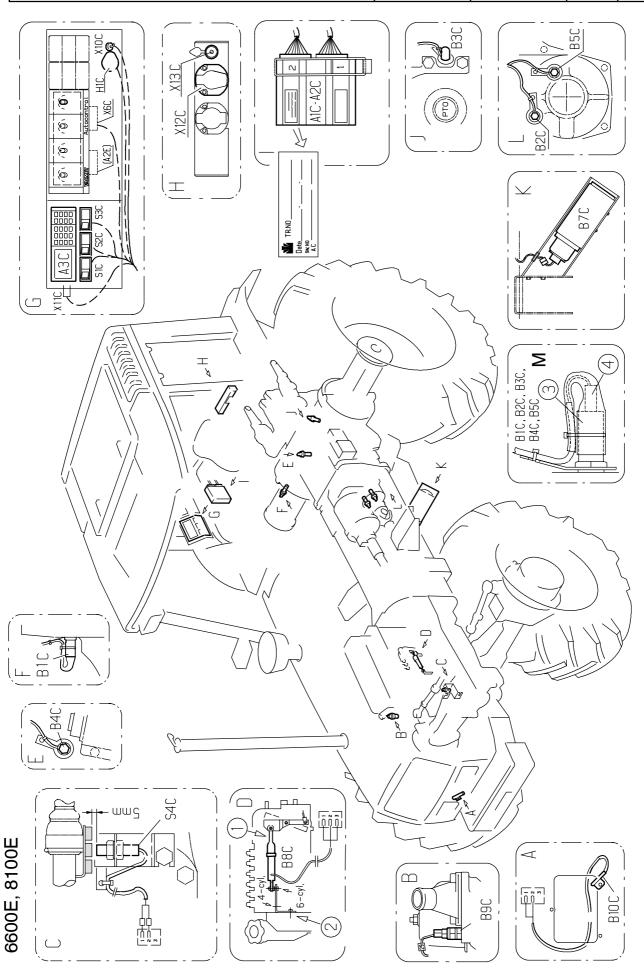

https://tractormanualz.com/

	15 6: 1992	Model	Code	Page
34. Autocontrol-III	15. 5. 1996	6600E, 8100E	340	5

Components for AC-III system

(see figure 1 on previous page)

A. Sensor for outdoor temperature

Sensor (B10C) is fitted under the fixing screw for the headlight. AC-III display shows the outdoor temperature.

B. Sensor for engine coolant temperature

Sensor (B9C) controls the cold starting automatics. An indicator light on the instrument panel shows when the engine can be started. The system controls automatically the afterglowing in cold conditions. AC–III display shows also the engine coolant temperature.

C. Sensor for front wheel steering angle

Sensor (S4C) notifies the AC–III system when the font wheel steering angle is over $\pm 10^{\circ}$. Then the automatics disengage the differential lock. The lock is re–engaged automatically when the front wheels are turned less than $\pm 10^{\circ}$

D. Potentiometer on fuel injection pump

Potentiometer (B8C) notifies the system the position of the governor control lever on the fuel injection pump. AC-III compares the governor control lever position and the engine revs. Eg. the system changes automatically to the lower gear when the engine revs drop during a hard load (and vice versa)

- 1) Grease
- 2) Locking fluid Loctite 242

E. Sensor for engine revs

Sensor (B4C) is fitted on the gearbox under the cab. The sensor measures the engine rotation speed from the gear for the hydraulic pump drive mechanism. The display shows also the engine revs. The sensor controls the engagement of the quick – shift gears and indicates if the PTO clutch is slipping.

F. Sensor for rear axle rotation speed

Sensor (B1C) measures the rotation speed of the RH side rear axle from the impulse disc fitted on the final drive planetary gear. Engages the differential lock when the rotation speed difference between the rear axles exceeds 25 %.

G. Display unit

Function keys on the display unit (A3C) have been presented on pages 340/6–7. Below the display unit there are switches for selecting between the manual or automatic control of the tractor transmission.

H. Sockets at the rear of the tractor

Socket X12C (for connecting implement sensors to the AC – III system)

PTO emergency stop socket X13 C (terminator)

I. Central processing unit ECS (Electrical Control System)

The central unit ECS (A1C, A2C) is fitted in the lever console in the cab. On the ECS is fitted a sticker with the tractor manufacturing number etc.

J. Sensor for PTO revs

Sensor (B3C) measures the rotation speed of the PTO shaft from the impulse disc fitted on the shaft. Display shows the PTO rotation speed.

K. Radar

Radar (B7C) notifies the ECS the actual tractor travelling speed. The radar is used e.g. for detecting the wheel slip. The radar has been connected to the hydraulic power lift so that when the set slip percent is exceeded the lift order is sent to the power lift. The radar controls also the engagement of the front wheel drive and the differential lock.


Radar – You are not allowed to go under the tractor which has radar (slip control models) before the current switch has been turned off. – dangerous for eyes.

L. Rotation speed sensors for front axle and gearbox

Sensors (B2C and B5C) are fitted on the front face of the reverse shuttle. The gearbox speed sensor measures the bevel pinion shaft rotation speed from the impulse disc at the front end of the shaft. The front axle rotation speed is measured from the impulse disc which is fitted on the output shaft to the front axle.

M. Fitting speed sensors

See figure M and instruction on page 341/1)

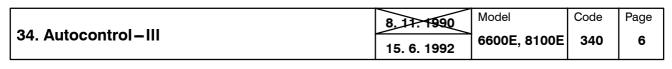

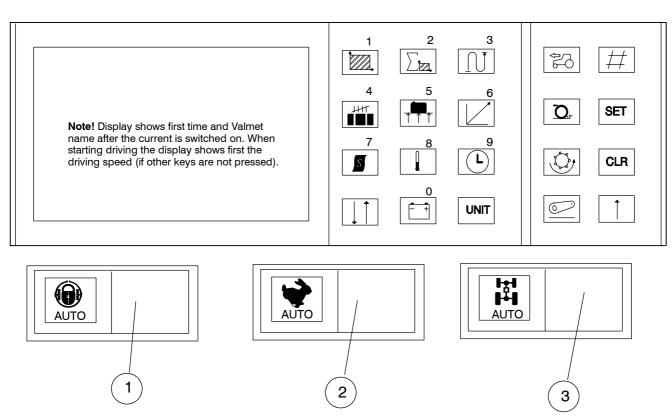


Figure 2. AC-III display unit, function keys and rocker switches 1. Switch for differential lock: - rear edge down=manual - front edge down=automatic

- 2. Switch for quick-shift gear: rear edge down=manual
- (PS Algorithm) middle position (A2) = automatic change according to the max. effect
 - front edge down (A1)=automatic change according to the max. torque
- 3. Switch for 4WD: rear edge down=manual
 - front edge down=automatic

The function keys have been presented in the figures on the next page. Hidden functions of the keys have been marked with the double boxes. These hidden functions can be activated with a special function code

The function keys act as number keys when the SET-key is pressed.

Calibrating mode for the hidden functions

(this mode is needed when calibrating the quick – shift gear or when checking the speed sensors)

Some functions have been hidden from the Operator by a special code. The calibrating mode is activated as follows:

- switch on the current and start the engine
- press the function keys in the following order;
 9-1-0-4-0-9 (do not use the SET-key, display changes every time the key is pressed).

Note! Now the quick—shift gear is ready for calibrating and the speed sensors can be checked. If the current is switched off the code must be input again.

escaping from this mode is done by switching off the current.

Parameters

In the factory a parameter file is input with a micro computer into every AC-III system . The parameter file includes: transmission type, engine type, engaging limits for the diff. lock and the 4WD and the display language. These functions are different on different tractors.


PC is connected to the AC-III socket X10C with a middle wire. In PC there must be a Service Program which sends the parameter file into the ECS. See **Code 343.**

If a fault occurs in the actual parameter file, the ECS replaces the damaged file automatically with a default parameter file. The display shows this with text DEFAULT PARA every time the current is switched on.

The tractor functions properly with the default parameter file, but as soon as possible the actual parameter file must be input with a PC into the system.

Micro computer can also be used for detailed fault tracing for the AC-III system (see **Code 342**)

34. Autocontrol-III

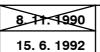

Model 6600E, 8100E

Code 340 Page 7

Function keys

Area

Working width input

Trip area







Area	Distance
Total area	Distance travelled
	Calibrating distance

Note! One key can have several functions. E.g. when pressing RPM-key 1-4 times, different rotation speeds can be ob-





Speed	
Radar speed	Starting/stopping counter
Average speed	
Gearbox speed	
Rear wheel speed	
Front wheel speed	







Item number	Liquid	Position
Piece counter	Liquid consumption (litres/hectare)	Position of part of implement
# Program pcs limit	Liquid amount (litres)	Calibrating pos. potentiometer
	Calibrating flow meter	# program pos actuator 1
		# automatic controlling



SET

Slip	Set
Wheel slip	Programming SET value
Average slip	
Program wheel slip	







Economy	Temperature	Time
Value since start point	Coolant temperature	Time since start point
Programming the price	Outdoor temperature	Time and date
Printer		time left area or distance



CLR

RPM	Clear
Power take – off	
Engine	
Implement	
Quick-shift gear calibration	







	Voltage	Unit
Quick selection	Battery voltage	Changing unit (I, I/ha)





	•
Linkage	
Positon of lower links	Scanning menus
Calibrating linkage pos.	

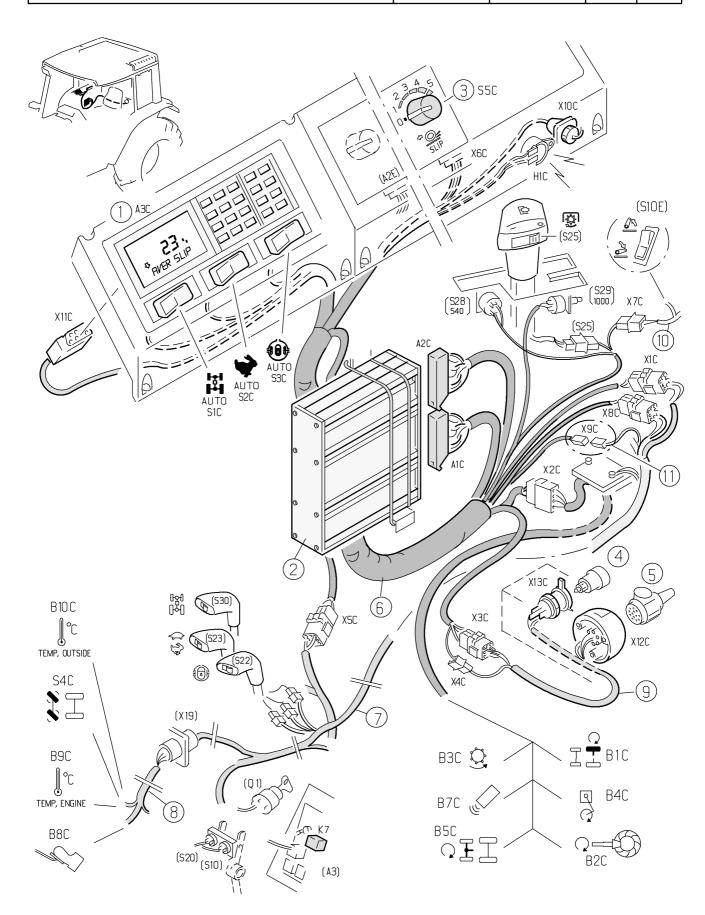


Figure 3. Autocontrol -III harness looms and connectors

(concerning component symbols, see component list on pages 340/10-12).

	15-8:1992	Model	Code	Page
34. Autocontrol – III	1. 9. 1992	6600E, 8100E	340	9

Harness looms and connectors

(see figure 3 on previous page)

- 1. Display unit (A3C). To the display unit rear side is connected connector $\mathsf{X}11\mathsf{C}$.
- 2. Central processing unit (ECS) is fitted in the lever console in the cab and is accessible after removing the lever console side panel.
- 3. Slip Control selector (S5C).
- 4. PTO emergency stop socket (terminator).
- 5. Socket for connecting implement sensors to the AC-III system.
- 6. ECS harness loom.
- 7. Harness loom for cab.
- 8. Harness loom for engine.
- 9. Harness loom for rear sockets.
- 10. Harness loom for electro-hydraulic power lift.
- 11. If you want to use the PTO unit manually , i.e. override the ECS controls, connect connectors X9C.

Position of connectors

The following connectors are placed in the cab lever console and are accessible after removing the console side panel:

- A1C and A2C (central processing unit (2) connectors)
- X1C (connector for wires from engine harness loom (8))
- X2C (speed sensor wire connector)
- X3C and X4C (connectors for rear sockets)
- X8C (output signals from ECS)
- X9C (PTO manual control connector)

Connector X5C (switches from gear lever knobs) is on the RH side mudguard in the front part of the lever console

Electro – hydraulic power lift connectors which are in the lever console, are accessible after removing the ECS box (2).

Connector B8C (fuel injection pump potentiometer) is placed under the instrument panel

Connector X19 (sensors in front part of the tractor) is placed on the cab front wall on the RH side.

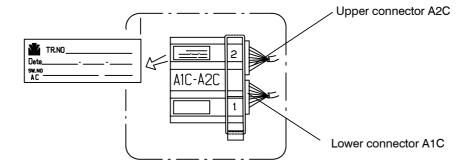


Figure 4. Central processing unit (ECS) is placed in the lever console in the cab. Central unit is accessible when the console side panel is removed.

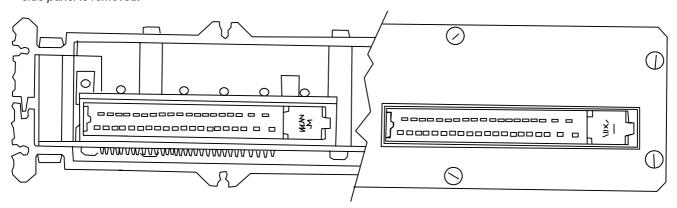


Figure 5. Rear side of the ECS

Voltage measurements can be done from the pins of connectors A1C and A2C. The pins have been numbered. When measuring output signals the pins must have a load.

Supply voltage can be measured from connector A2C (earth A2C:1. Supply voltage A2C:2, A2C:21 and A2C:25 (current must be switched on).

	15-8.1992	Model	Code	Page
34. Autocontrol-III	1. 9. 1992	6600E, 8100E	340	10

Component list for wiring diagram (E-models). Diagram no. 325 499 00 32B.		am	Sym- bol	- Component	Code no
Sym- bol	- Component	Code no	G 1 G 2	Battery Alternator	1 4
(A2) A3 (A4)	Radio Distribution box Velocity meter	2	H 1 H 2 H 3	Ind. light, direction indicator III Ind. light, direction indicator II Ind. light, direction indicator I	34 33 32
(A5)	Seat with air springs	67	H 4	Warning light, engine air filter	7
(A7)	Electric air filter	68	H 5	Warning light, engine oil pressure	8
(A8)	Buzzer control		H 6 H 7	Warning light, STOP, engine temp. Warning light, gearbox oil pressure	13 9
B1	Sender unit, engine temperature	13 16	(H8) H 9	Gearbox oil filter Ind. light, 4WD	58
B 2	Sender unit, fuel gauge	16	П 9 Н10	Ind. light, PTO 540	61
E 1	Headlights, right	24	H11	Ind. light, parking brake	11
E 2	Headlights, left	23	H12	Ind. light, thermostart	5
E 3	Front direction indicator, right	28	H14	Ind. light, main beams	22
E 4	Front direction indicator, left	26	H15	Warning light, low fuel level	12
E 5	Rear light, right	31	H16	Ind. light, charging	6
E 6	Rear light, left	30	H18	Warning light, gearbox oil temperature Warning light, differential lock	12 57
E 7 E 9	Cabin light Rear working light, right outer	43 38	H20 H21	Ind. light, PTO 1000	61
E10	Rear working light, right inner	37	H22	Reserve/Ind. light, quick-shift gear (ECS)	O1
E11	Rear working light, left outer	39	H23	Horn	18
E12	Rear working light, left inner	38	(H24)		44
E13	Front working light, right	41	, ,		
E14	Front working light, left	41	174	B. ()	40
E15	Instrument light	14,16	K1	Relay, front working lights	40
E16	Roof console light	51	K 2 K 3	Relay, rear working lights Relay, thermostart	38 55
(E17) (E18)	Seat heating Foot step light	67 42	K4	Starter switch relay	7
(E20)	Parking light, right Norway	27	K 5	Starter switch relay	9
(E21)	Parking light, left Norway	27	K 6	Relay, fan III speed	49
(E22)	Number plate light		K 7	Brake lights (ECS)	56
			K 9	Relay, interval wiper	20
F 1	15 A Hazard warning flasher, reserve	29	K10	Direction indicator relay	31–32
F 2	5 A Radio (clock),	2	K14	Starter motor relay	4
F 3 F 4	10 A Main beams, –ind. light	23 23	M 1	Starter motor	3
F 5	10 A Dipped beams 5 A Parking light, left	23 26	M 2	Fan	48
F 6	5 A Parking light, right	28	M 3	Windscreen wiper	21
F 7	10 A Front working lights	40	M 4	Windscreen washer	19
F 8	20 A Light switch	27	(M 5)	Rear window wiper	46
F 9	15 A Trailer socket	31	(M 6)	Rear window washer	45
F10	15 A Starter switch, thermostart	4	M 7	Floor fan	50
F11	5 A Autocontrol (+30)	69	P 1	Engine coolant thermometer	14
F12 F13	10 A Rot. warning light, cabin and door light10 A Brake lights	44 54	P2	Engine coolant thermometer Fuel gauge	16
F14	10 A Reserve	66	P 3	Revolution counter	16
F15	20 A Fan III-speed	49	P 4	Hour recorder/working height	17
F16	10 A Rear working lights, inner	38			
F17	10 A Direction indicators	29	Q 1	Starter switch	4
F18	5 A Instruments, warning lights, Autocontr.		(Q 2)	Main circuit breaker	2
F19	10 A Combination lever, wiper return	20	Б.4	The successful	0
F20	10 A Rear window wiper/washer	45	R 1	Thermostart	6 35
F21 F22	15 A Fan I, II, Air conditioner, Floor fan 10 A Solenoid valves, ECS	48 57	(R 4)	Cigarette lighter	33
F23	10 A Solehold valves, ECS 10 A Rear working lights, outer	38	S 1	Switch, headlights	25-26
F24	10 A ECS	85	S 2	Switch, rear working lights	37
F25	10 A Seat with air springs, seat heating	67	S 3	Switch, fan	48
F26	10 A Reserve/electric air filter	68	S 4	Combination control	19
F27	10 A Reserve	68	S 5	Switch, front working lights	40
F28	10 A Reserve (telephone)	66	(S 6)	Switch, rot. warning light	44
F29	10 A Cigarette lighter, Power socket	35 56	S 7	Switch, hazard warning flashers	30 47
F30	10 A Reserve	56	(S 8)	Switch, air conditioner	47


	15. 6. 1992	Model	Code	Page
34. Autocontrol-III	1. 9. 1992	6600E, 8100E	340	11


Sym- bol	Component	Code no	/1 /2 /4	Earth lead, rear lights Earth lead, roof Earth lead, Autocontrol	
0.0	Cofety sirewit breeker	4		· · · · · · · · · · · · · · · · · · ·	
S 9	Safety circuit breaker	4	/5 /7	Earth lead, cable harness instr. panel	
S10	Brake light contact, right	54	/7	Earth lead, battery	
S11	Fuel gauge sender unit	16	/8	Earth lead, headlights	
S12	Pressure drop indicator, air filter	7	/9	Earth lead, cab	
S13	Engine oil pressure sender unit	8			
S15	Sender unit to hand brake ind. light	11	Option	nal equipment listed in brackets.	
S16	Gearbox temperature sender unit	12			
S17	Gearbox oil pressure sender unit	9			
S18	Engine temperature sender unit (STOP)	13			
	Air cond. compressor pressure switch	47			
S20	Brake light contact, left	54			
S22	Switch, differential lock	89			
S23		95			
	Switch, quick—shift gear (engaging)				
S24	Switch, quick-shift gear (disengaging)	58			
S25	Switch, power take—off	63			
S28	Switch, PTO 540	62			
S29	Switch, PTO 1000	65			
S30	Switch, 4WD	88			
S31	Switch, floor fan	50			
(S32)	Switch, rear window washer and wiper	45			
(S52)	Switch, floor	42	ECS		
V 14	Diode		Cum		Cada
	2.03.0		Sym-		Code
X 1	Connector, 9 pins, distribution box		bol	Component	no
X 2	Connector, 9 pins, distribution box		440	0 1 1 '' '' (500)	00
X 3	• • •		A1C	Central processing unit (ECS), red	80
X 4	Connector, 9 pins, distribution box		A2C	Central processing unit (ECS)	91
	Connector, 9 pins, distribution box				
X 5	Connector, 9 pins, distribution box		B1C	Speed sensor, rear wheel	78
X 6	Connector, 9 pins, distribution box		B2C	Speed sensor, gearbox	78
X 7	Connector, 9 pins, distribution box		B3C	Speed sensor, PTO	79
(X 8)	Connector, 2 pins, power socket	36	B4C	Speed sensor, engine	79
Χ9	Connector, 9 pins, combination control		B5C	Speed sensor, front axle	78
X10	Connector, 9 pins, combination control		B7C	Radar	77
X11	Connector, 9 pins, upwards		B8C	Potentiometer, fuel injection pump	87
X12	Connector, 9 pins, rearwards, right		B9C	Temperature sensor, thermostart	93
X13	Connector, 4 pins, solenoid valves		B10C		92
X14	Connector, 9 pins, rearwards, left		D100	Oddoor temperature sensor	32
X15	Connector, 3 pins, air cond., diodes		LI1C	Puzzor	94
X16	Connector, 3 pin., cigarette lighter, current se	ocket	H1C	Buzzer	94
X17	Trailer socket 7 pins		H2C	Led, slip control	
X17	Connector, 2 pins, rear window washer	00			
X19		10	S1C	A/M – switch, diff. lock	88
	Connector, 37 – pins. ECS , front wall	10	S2C	A/M-switch, quick-shift gear	91
X20	Connector, 9 pins, front direction ind.		S3C	A/M-switch, 4WD	88
X21	Connector, 3-pins, buzzer		S4C	Switch, steering angle	90
X22	Connector, 1 pin, rot. warning light		S5C	Switch, slip control	00
X24	Connector, 9 pins., upwards		000	Witori, one control	
X26	Connector, 26 pins, instr. left white		X1C	Connector, 9 pins, front (yellow)	
X27	Connector, 26 pins, instr. right blue		X1C X2C		
X28	Connector, 6 pins, diodes			Connector, 15 pins, speed sensors	
X49	Connector, 2 pins, seat		X3C	Connector, 9 pins, rear sockets (black)	
	·		X4C	Connector, 3 pins, rear sockets (black)	
			X5C	Connector, 9 pins, switches on lever knobs	
Y 1	Solenoid valve, diff. lock	56	X6C	Connector, 12 pins., Autocontrol switch panel	74
Y 2	Solenoid valve, PTO	63	X7C	Connector, 3 pins, Autocontrol cable harness	
Y 3	Solenoid valve, 4WD	60	X8C	Connector, 9 pins, outputs (red)	
(Y 4)	Solenoid valve, quick-shift gear	65	X9C	Connector, 1 pin, PTO manual control	
(Y 5)	Solenoid valve, compressor	47	X10C	Connector, 8 pins, RS232/RS485	
(1.5)	23.3.16.6 Taite, compressor	.,	X11C	Connector, 9 pins, display unit	77
				ECS – socket 13 pins	
				PTO emergency switch, socket, 2 pins.	62
				,,, -	-


Autocontrol Wire colours


Sym- bol	Component	Code no	Ru = brown Pu = red Ke = yellow
A1E A2E A3E	Autocontrol central unit Autocontrol switch panel Compensator	71 74 70	Si = blue Mu = black Vi = green Va = white
B1E B2E B3E	Position sensor Draft sensor, right Draft sensor, left	69 69 69	Ha = grey Li = lilac
E1E E2E	Illumination, switch panel Illumination, position control knob	74 75	
R1E	Potentiometer, position control	74	
\$1E \$2E \$3E \$4E \$5E \$6E \$7E \$8E \$9E \$10E	Push button, right mudguard, lifting, Push button, right mudguard, lowering Push button, left mudguard, lifting Push button, left mudguard, lowering Push button, cabin, lifting Push button, cabin, lowering Switch, lowering speed Switch, transport height Switch, draft control/position control Switch, lift/lower switch Connector, 9 pins, supply, push buttons	71 71 70 70 73 73 74 74 74	
∧∠ ⊑	Connector, a pins, supply, push buttons		
Y1E Y2E	Solenoid valve, lowering Solenoid valve, lifting	69 69	


	15.6.1992	Model	Code	Page
34. Autocontrol-III	1. 9. 1992	6600E, 8100E	340	13

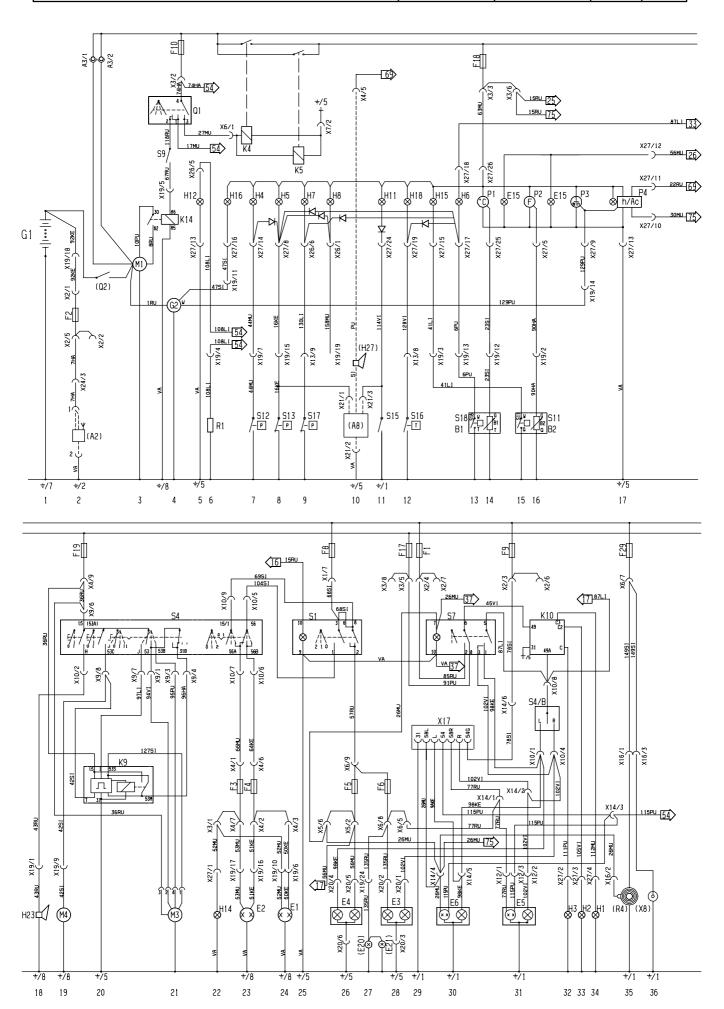

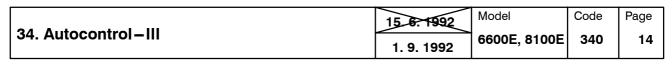


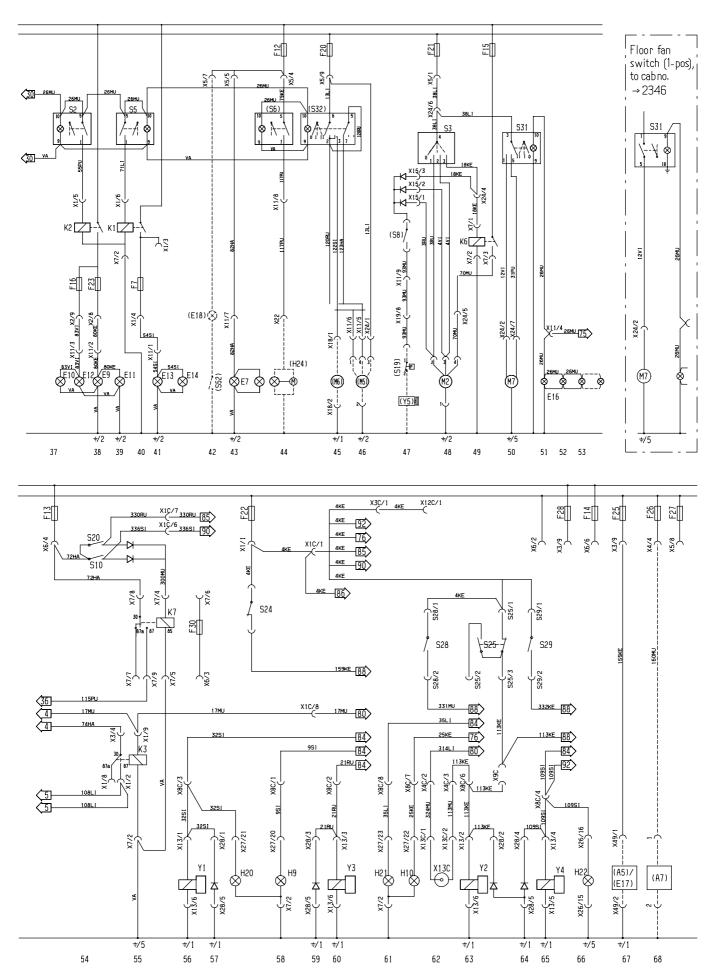

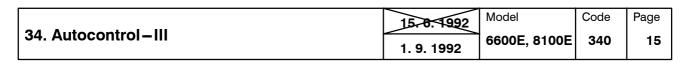

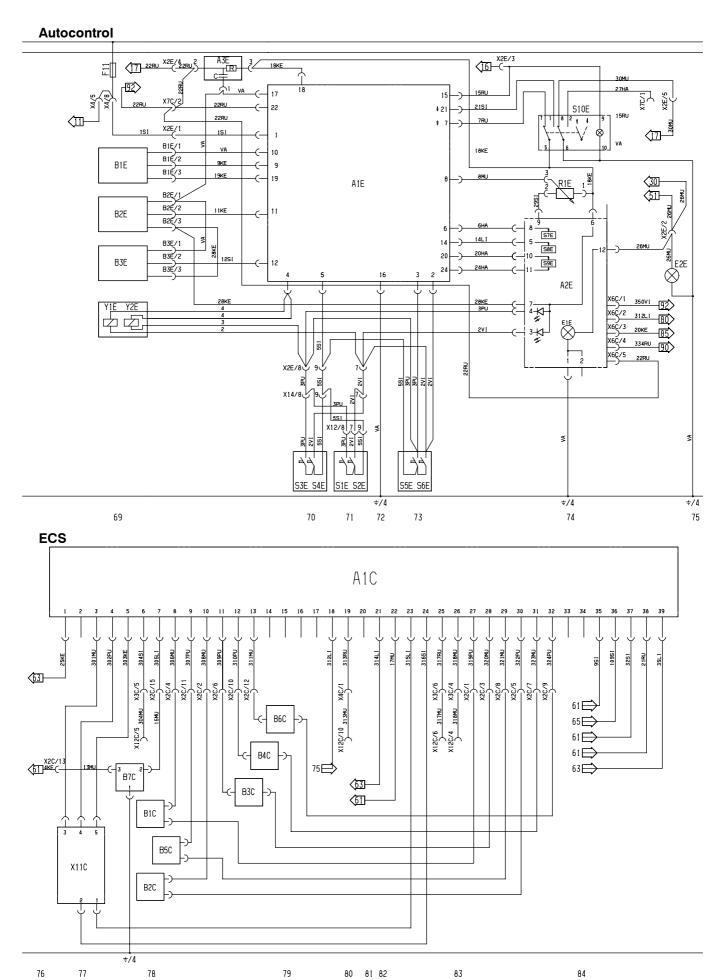

	15-8-1992	Model	Code	Page
34. Autocontrol-III	1. 9. 1992	6600E, 8100E	340	16

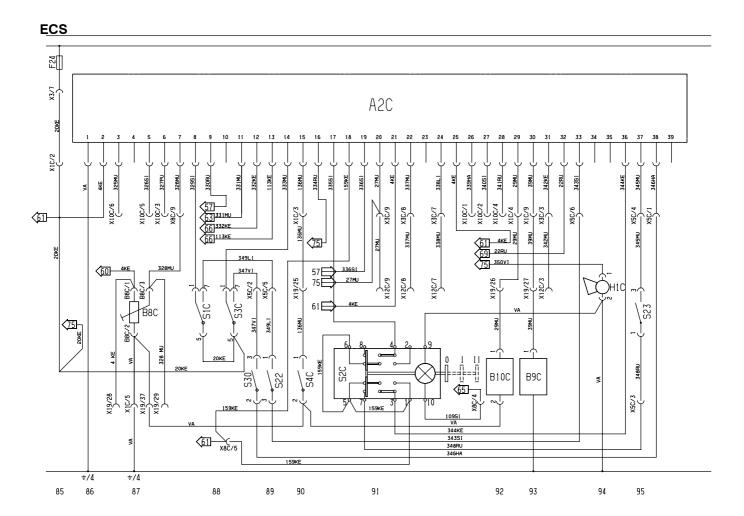



	8, 11, 1990	Model	Code	Page
34. Autocontrol – III	15. 6. 1992	6600E, 8100E	341	1

Trouble shooting and repairs

(Computer-aided trouble shooting, see Code 342)

1. Checking and fitting sensors

A. Fitting speed sensors

- Clean the sensor threads on the tractor.
- Seek with a dial gauge the shortest distance between the sensor and the impulse disc through the sensor hole (not necessary for engine speed sensor. Pull the 4WD output shaft outwards before measurement).
- Apply Loctite 572 onto the threads and screw the sensor by hand until the sensor touches the impulse disc or gear (do not screw too hard because the impulse disc can be springy).
- Then unscrew the sensors as follows:

Gengine speed sensor 1/3 of a turn Grear axle sensor 1/4 of a turn GPTO speed sensor 1/3 of a turn Ggearbox speed sensor 1/10 of a turn Gfront axle sensor 1/10 of a turn

- Lock the sensor with a locking nut and connect wires.
- Calibrate and check the speed sensors (see instr. B).
 Check the engine rotation speed sensor (see instr. C) and check the PTO speed sensor (see instr. D)
- **N.B.** The sensors should be checked with an oscilloscope if necessary. The resistance of every speed sensors (not a radar) is **1,0-1,10 k** Ω
- When the sensor functions, fit a plastic tube onto the sensor leads. Connect cable shoes to the sensors and protect shoes with grease. Put the plastic tube onto the sensor and warm it up until it is pressed tightly round the sensor. See figure M on page 340/4.

B. Calibrating the speed sensors

- 1. Drive the tractor onto the hard ground (free driving distance about 50 m)
- 2. Select gear **M2**, disengage diff. lock and 4WD (in M-position). Select HARE-range for the quick shift gear and adjust the engine revs to **1800 RPM** with a hand throttle lever.
- 3. Press the distance-key two times and the display shows text **CAL DIST**.
- 4. Drive the tractor straight ahead with the hand throttle lever.
- 5. Press **SET** –key (display shows text **DRIVE**). Continue driving until the display is switched off and then started again (=successful calibration).
- 6. If the display shows text **NO CALIB** (=signal from the radar too weak), carry out a new test-driving. If the calibration fails again, check the radar and its wiring.
- 7. If the display shows:
- ERROR GB=gearbox speed sensor damaged
- ERROR FA = front axle speed sensor damaged
- ERROR RW = rear wheel speed sensor damaged

In this case, check the sensor in question and also its mounting and wiring.

- 8. After successful calibration, change display to the **calibrating mode for the hidden functions** (see page **340/6**) and continue driving straight ahead.
- 9. Press once the SPEED-key, and the display shows the radar speed.
- 10. Press then twice the SPEED-key and the display will show the **gearbox speed** which should be the same as the radar speed $(\pm 0.1 \text{ km/h})$.
- 11. Press once again the SPEED –key and the display will show the **rear axle speed** which should be the same as the previous speeds $(\pm 0.1 \text{ km/h})$.
- 12. Press once again the SPEED-key and the **front axle speed** can be seen. It must be the same as the previous speeds (±0,1 km/h).
- 13. Press the menu scanning key four times = radar speed.

Note! The calibrating mode can be left by switching off the current.

C. Sensor for engine revs

The engine RPM sensor can be checked by pressing the RPM-key until the display shows the engine revs. The display reading must be about the same as the rev counter reading (± 50 RPM) in the instrument panel.

Checking can be carried out more accurately by adjusting the engine revs in the display to 1874 r/min at which time the PTO shaft rotating speed must be 540 r/min which can be seen in the display by pressing the RPM-key.

If the display does not show the engine RPM, check the sensor and its wiring. The resistance of the sensor must be between **1,0–1,10** k Ω (pins A1C/31, 12). If the sensor is OK, the possible fault can be a faulty ECS or the display unit is defective. Also the impulse disc can be damaged.

D. PTO speed sensor

Engage the 540 r/min PTO. Press the RPM—key until the display shows the PTO shaft speed. Adjust the engine revs so that the rev counter indicator in the instrument panel is at the 540 mark. Now the AC—III display should also show 540 RPM (± 50 RPM). In the same way, check the 1000 r/min PTO.

More accurately the display reading for the PTO speed can be checked by measuring the PTO shaft speed with a separate tachometer. Then compare the tachometer reading with the reading in the the AC-III display.

If the display does not show the PTO RPM, check the sensor and its wiring. The resistance of the sensor must be between $\textbf{1,0-1,10}~\textbf{k}\Omega$ (pins A1C/28, 11). If the sensor is OK, the possible fault can be a faulty ECS or the display unit is defective. Also the impulse disc can be damaged. **N.B.** Check that the emergency plug is fitted in the rear socket.


	8.11.1990	Model	Code	Page
34. Autocontrol – III	15. 6. 1992	6600E, 8100E	341	2

E. Potentiometer on the fuel injection pump

The potentiometer must be adjusted so that when the accelerator pedal (governor control lever) is in its extreme positions, the pedal (or governor control lever) movement is not limited by the potentiometer because it does not resist that kind of load.

Measure the potentiometer voltage between pins 2 and 3 in connector B8C (under instrument panel). The voltage reading must be **below 3 V** when the accelerator pedal is in its upper position and **over 9 V** when the pedal is in lowest position. (difference between max and min reading at least 6 V).

Resistance measurements of the potentiometer:

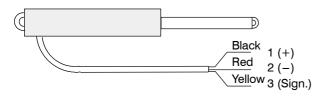

1-2: resistance about **1,01 k** Ω

3 - 2

- spindle in, resistance about **0,62** $\mathbf{k}\Omega$
- spindle out, resistance about 1,89 $\mathbf{k}\Omega$

If the resistance values deviate, the potentiometer is faulty.

G. Sensor for outdoor temperature

Press the temperature—key twice and the display will show the outdoor temperature. Compare the display reading with a reading measured with a separate thermometer. If the reading is faulty or there is no outdoor temperature reading on AC III display, check the sensor and its wiring. If these are OK the ECS or the display unit can be faulty.

Resistance values at certain temperatures:

 $\begin{array}{lll} \pm 0\,^{\circ}\text{C} & 10,00\pm 1,0 \text{ k}\Omega \\ +22\,^{\circ}\text{C} & 3100\pm 50 \text{ }\Omega \\ \text{Pins:} & \text{Sensor poles} \end{array}$

Plug X19/26 Connector X1C/4 ECS connector A2C/29

H. Sensor for steering angle

A steering angle sensor magnet must be fitted so that yellow dots point towards the sensor. Distance between the magnets and sensor must be adjusted to 5 mm. When the front wheels are straight ahead, the middle magnet should be opposite the center line of the sensor.

- sensor resistance is **33** Ω , when the sensor is at the magnet.
- otherwise **10** $\mathbf{k}\Omega$ or greater.

Pins: Sensor poles

Plug X19/25 Connector X1C/3 ECS connector A2C/15

F. Sensor for engine coolant temperature

Press once the temperature – key and the engine coolant temperature can be seen in the display. Measure the coolant temperature with a separate thermometer and compare the readings. If the display reading is faulty or there is no coolant temperature reading, check the sensor and its wiring. If these are OK the ECS or the display unit can be faulty.

Resistance values at certain temperatures:

 $\begin{array}{lll} -20\,^{\circ}\text{C} & 6480 \pm \,1000 \,\,\Omega \\ \pm 0\,^{\circ}\text{C} & 2450 \pm 320 \,\,\Omega \\ +20\,^{\circ}\text{C} & 1450 \pm 118 \,\,\Omega \\ +40\,^{\circ}\text{C} & 496 \pm 44 \,\,\Omega \\ +60\,^{\circ}\text{C} & 245 \pm 22 \,\,\Omega \\ \textbf{Pins:} & \text{Sensor poles} \end{array}$

Plug X19/27 Connector X1C/9 ECS connector A2C/30

	8.11.1990	Model	Code	Page
34. Autocontrol-III	15. 6. 1992	6600E, 8100E	341	3

2. Fault tracing without microcomputer

A. Manual fault tracing

(Computer-aided traouble shooting, see Code 342)

Manual fault tracing is based on the functional checks and possible malfunctions which are found in these checks (see pages 341/4-7 later in this section).

A possible malfunction can then be localised by measuring with a voltmeter voltages or resistances from the pins of the ECS connectors A1C (lower) and A2C (upper). Connector pins have been numbered on the connectors.

Inputs

Input signals for controlling the transmission can be measured from the connector A2C. The measurements are carried out according to the fault tracing tables in instruction under code **342** (computer-aided trouble shooting). Switches and pedals must be in the positions given in the tables. If no input signal comes, check the switch in question and its wiring.

Input signals from various sensors can be checked by means of resistance measurements according to the instruction 1 A-H above.

Outputs

Output signals for controlling the transmission can be measured from the pins of connector A1C. The pins must have loading when measuring (e.g. test pen). Here must also be used the tables under code **342**. If a correct output signal comes, but the tractor does not function, check a solenoid valve and an indication light in question and their wirings. If output signal fails to come, the ECS is faulty. Output signals into the implement socket, see page **342/9**.

A. Supply voltages

- Switch on current to the tractor
- If Valmet name and time appears on the AC III display, the unit is in order.
- If nothing appears on the display, check the AC III unit fuses in the fusebox: **F22** (10 A) and **F24** (10 A).
- If the fuses are OK, disconnect the ECS upper connector
 A2C and measure supply voltages: pin 1 (earth), pin 2 (supply), pin 21 (supply) and pin 25 (supply).
- If there are not supply voltages, check supply voltage wirings and connectors.
- If there are supply voltages, the central unit ECS is faulty or the display unit is defective.


B. ECS (central processing unit)

If the AC III display unit only flashes and then switches off when the current is switched on, the ECS is faulty and should be changed.

If the ECS uses always the default parameter file although a correct file is input with a microcomputer, the ECS is faulty and should be changed.

When You are programming the AC III unit with a microcomputer and message ERROR IN EPROM appears in the message window, switch off current and start from the beginning. If the same message appears, the ECS should be changed.

When You measure output signals from the ECS, the lacking signal indicates that the ECS is faulty and must be changed.

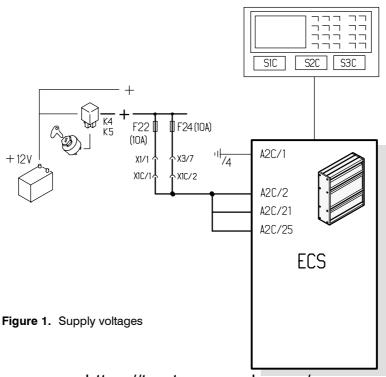

https://tractormanualz.com/

	8.11.1990	Model	Code	Page
34. Autocontrol-III	15. 6. 1992	6600E, 8100E	341	4

3. Functional check

(Fault tracing with a microcomputer, see under code no 342)

A. Front wheel drive

- start the engine (tractor stationary and the brake pedals are not pressed).
- set the 4WD rocker switch to M-position
- engage and disengage the 4WD with a switch on the range gear lever knob. Indicator light comes on in the engaged position.
- disengage the 4WD
- press brake pedals (latched together) at which time the indicator light should be lit
- release the brake pedals and the indicator light goes out.
- press one brake pedal. Ind. light must not come on.
- engage the 4WD with the switch on the lever knob and the ind. light comes on.
- turn the 4WD rocker switch to the A-position and the ind. light should go out.
- the 4WD engages (A/M-switch in A-position) when the clutch pedal is released rapidly. Declutch (wheels stop) and after 8 seconds the 4WD must be disengaged.

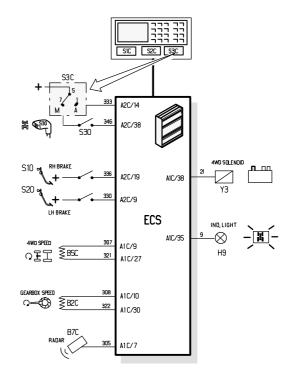


Figure 2. Inputs and outputs to/from the ECS for controlling the 4WD

B. Differential lock

- start the engine (tractor stationary and the brake pedals are not pressed).
- set the diff. lock rocker switch to M-position
- engage and disengage the lock with a switch on the reverse shuttle lever knob. Indicator light comes on in the engaged position.
- engage the diff. lock with the lever knob switch
- press the brake pedal/pedals (both separately and latched together) and the ind. light goes out
- release the pedal/pedals and the ind. light comes on.
- turn the diff. lock rocker switch to A-position and the ind. light goes out
- remove fuse F13 (brake lights). Unlatch the brake pedals.
- drive the tractor (front wheels straight ahead) and brake one rear wheel at which time the diff. lock indicator light comes on
- while the ind. light is on, turn the front wheels over $\pm 10^{\circ}$, and the diff. lock ind. light should go out.
- Turn the front wheels straighter (further pressing one brake pedal) and the diff. lock ind. light comes on
- stop the tractor and the diff. lock disengages

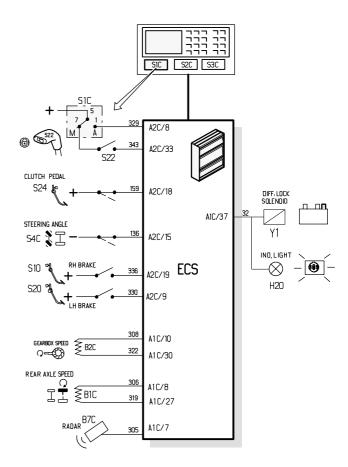


Figure 3. Inputs and outputs to/from the ECS for controlling the differential lock

	15 6: 1992	Model	Code	Page
34. Autocontrol – III	1. 9. 1992	6600E, 8100E	341	5

C. Quick-shift gear

- set the quick-shift gear rocker switch to M-position
- drive the tractor and engage and disengage the quick shift gear with a switch on the speed gear lever knob
- in HARE-position, a light comes on in the A/M-switch
- set the lever knob switch to the HARE-position
- set the A/M-switch to the middle position (A2, max. effect)
- set the display to show the engine revs.
- select gear H1 and drive at engine revs of 2000 r/min
- quick-shift gear changes automatically to the TORTO-ISE-range
- continue driving and press the brake pedals (latched together).
- the quick shift gear changes automatically to the HARE range at engine revs of about 1700 RPM
- A/M-switch light comes on
- release the brakes and the quick shift gear changes to the TORTOISE – range when engine revs increases
- A/M-switch light goes out
- set the A/M switch to the position A_1 (max. torque) (switch front edge down)
- make the same test as above; quick shift gear changes to the HARE – range at engine revs of about 1400 RPM.
- A/M-switch light comes on
- release the brake pedals and the quick shift gear changes to the TORTOISE – range when the engine revs increases
- A/M-switch light goes out

Calibrating the quick-shift gear

- set the display to the calibrating mode (see page 340/6)
- press the RPM key four times and the display shows text CAL PS
- press the SET-key
- display shows text CAL 700 and the actual engine revs
- adjust the engine revs to 700±20 RPM (or min revs) with a hand throttle lever and press SET
- display shows text CAL 1100 and the actual engine revs
- adjust the engine revs to 1100 r/min and press SET
- in the same way go through speeds 1500, 1900 and 2200 (or max. revs)
- when the last time SET is pressed, the calibration is completed
- escape from the calibrating mode by switching off the current

D. Power take-off

- set the display to show the PTO revs
- $-\,$ engage PTO 540 and the ind. light comes on
- switch current off and then on and the ind. light starts to flash
- PTO shaft must not rotate
- move the control lever to neutral and back to engaged position
- $-\ 540$ ind. light comes on and the PTO shaft starts to rotate
- disengage the 540 PTO and the ind. light goes out
- in the same way test the 1000 RPM PTO
- engage the 540 PTO and remove the emergency switch (terminator) from the rear socket
- the PTO shaft stops and the 540 ind. light starts to flash
- fit the emergency switch back. PTO shaft must not start to rotate
- move the control lever off and then on. The PTO shaft must not start to rotate
- stop the engine and switch off the current. Then start the engine and move the control lever off and on. Now the PTO is in function.

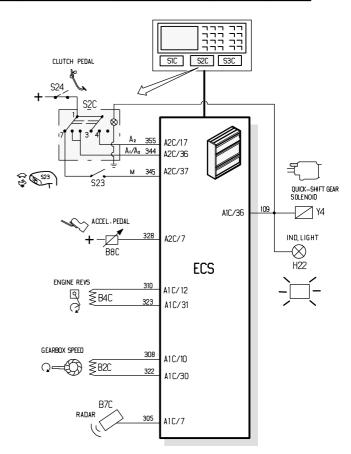


Figure 4. Inputs and outputs to/from the ECS for controlling the quick—shift gear

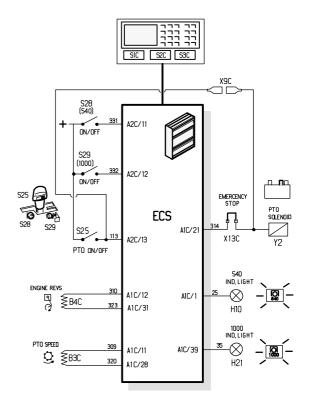


Figure 5. Inputs and outputs to/from the ECS for controlling the PTO.

	15 . 6. 1992	Model	Code	Page
34. Autocontrol – III	15. 5. 1996	6600E, 8100E	341	6

E. Slip control

Slip percent can be programmed. Slip control system is controlled with a selector which has six different positions. In the first position (0), the slip control is not in function. Other positions (1-5) determine the lift movement. In addition, the system has a buzzer which gives a signal if the set slip percent is exceeded in position control mode (draft control selector in position P).

- disengage the diff. lock and 4WD (switch in M-position)
- raise the RH rear wheel
- adjust lower links to working position
- start carefully driving with a low gear (e.g. M1)
- set the draft control selector to position P
- switch on the slip control (SLIP selector to one of the positions 1–5), buzzer gives a sound
- turn the draft control selector to position 1, buzzer sound stops. Set the SLIP selector to position 0 $\,$
- make sure that the lift/lower switch is in the lower position
- adjust the lower links (with the position control knob) to the lowest position, where they follow accurately the position control
- start driving
- turn the SLIP selector in turns to positions 1-5. The lower links must rise stepwise (1=small lift, 5=big lift)
- finally turn the SLIP selector to position 0 and the lower links will lower almost to the starting position.

Setting slip percent (%)

- press the SLIP-key three times and the display will show text SLIP LIM and the valid slip percent
- press SET-key, and the display shows SLIP LIM?
- input a new slip percent e.g. 18 and press SET
- slip percent is now 18 %

F. Cold starting device

Cold starting automatics can be checked by observing the indicator light and its lighting time

Ind. light flashes=ready for starting

Ind. light lights continuously=glowing (afterglowing)

The cold starting automatic has been programmed as follows:

>+5°C = immediately ready for starting

 $+5^{\circ}$ C... -10° C = 15 sec glowing+5 sec afterglowing

<-10°C=20 sec glowing + 15 sec afterglowing

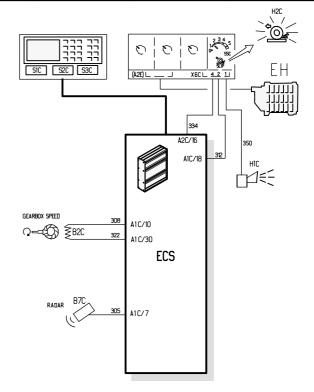


Figure 6. Inputs and outputs to/from ECS for slip control system

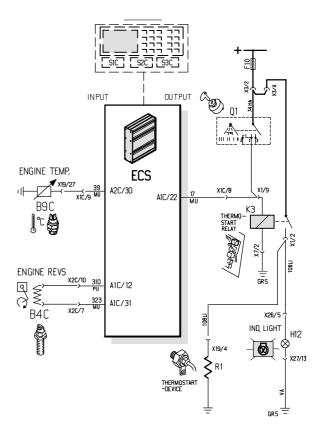


Figure 7. Inputs and outputs to/from ECS for cold start automatic

		Model	Code	Page
34. Autocontrol – III	15. 6. 1992	6600E, 8100E	341	7

3. Counter functions

Setting working width:

- Press the AREA key twice, and the display shows the text WIDTH?
- press the SET-key and input number 1000 (cm) (=10 m)
- press again the SET key after which the working width has been input.

Setting time and date:

- press the TIME-key twice and the display shows current date and time
- press the SET-key, and the display shows the text TIME?. Input right time (h, min e.g. 14 09) and press SET
- now the display shows the text DATE?. Input current month and day (e.g. 05 28) and press the SET-key. Now there is text YEAR? in the display
- input current year (e.g. 91) and press the SET-key. Now the system has correct time and date and the display shows again the date-function.

Zeroing the counters:

- press the AREA-key once and then the CLR-key twice=zeroing
- press the TOTAL AREA key once and then the CLR key twice=zeroing
- press the working time key. Working time should be zero (working time is zeroed when the area is zeroed)
- press the distance key. The distance should be zero (distance is zeroed when the area is zeroed)

Starting and stopping counters:

- Set one of the counter functions in the display (otherwise the counters do not start).
- press the #-key, until the arrow in the display starts to flash=counters in function. Press the key again and the arrow stops to flash=counters stopped. Start the counters.

Note! The distance counter show the travelled distance, although the arrow does not flash.

Checking function of the lift/lower switch:

(switches off the area counter when the implement is raised to the transport position)

- activate the hydraulic power lift with the switch
- set the lift/lower switch to the lowering position. Now the arrow in the display must point downwards
- set the switch to the transport position and the arrow points upwards
- set the lift/lower switch to the lowering position

Test-run:

Drive the tractor and check that the counters show the correct values (area, total area, time, distance).

Checking battery voltage:

Check that the display shows the correct voltage:

- engine stopped: battery voltage about 12,5 V
- engine started: voltage about 13-14 V

Calibrating display for three-point linkage position

- press the position-key twice and the text CAL LIFT appears in the display
- press the SET-key and the display shows text LOW
- adjust the lower links to the lowest position and press the SET-key
- now the display shows text HIGH.
- lift the lower links to the max. upper position and press the SET-key.
- now the calibration has been completed (escape from the calibrating mode by pressing e.g. the SPEED-key)
- check that the display shows zero when the lower links are in the lowest position and 100 when the links are in the upper position

Implement functions

The following sensors can be fitted on an implement:

- flow meter
- rotation speed sensor
- pieces counter
- sensor for working position
- position potentiometer
- possible linear actuator

The implement sensors send signals to the AC-III display which shows various functions of implement.

Line from the ECS to the implement socket can be checked according to the instruction on page **342/9** even though You do not have a microcomputer. In this case, shunt between diferent socket terminals and observe the AC III display readings in different functions.



		Model	Code	Page
34. Autocontrol – III	15. 6. 1992	6600E, 8100E	342	1

Computer-aided fault tracing

A computer program has been made for Autocontrol III (Service Program) which can be used when trouble shooting is carried out with a microcomputer (PC).

In this instruction is used a portable PC which is IBM compatible and uses MS-DOS 3.3 operating system or later version. Additionally PC must have a serial port RS-232C (9 pins) when the PC is connected to the AC-III unit with cable 326 682 00.

Service Program floppy disk can be ordered from Valmet if needed. It is useful to copy the Program into the hard disk of the PC.

Note! Service Program error messages, see page 343/3.


Starting fault tracing

In this instruction the Program is in the hard disk (C:). If it is in the floppy disk drive, use a correct prompt (e.g. A:)

- H Connect the PC with the cable to the socket X10C.
- H Switch on current to a tractor and to the PC.
- H When prompt C:\> appears, type AC (ACC if colour monitor) and press ENTER.
- **H** A trouble shooting chart appears on the PC display. In the LH side lower corner of the chart there is the following menu:

1PARAMETERS 5SENSOR LOG.

- **H** Press **F5**, and the computer starts to update the trouble shooting chart (i.e. PC changes X marks). Wait for a while before starting the trouble shooting.
- H Return to the disk operating system by pressing the function key **F10** (EXIT).

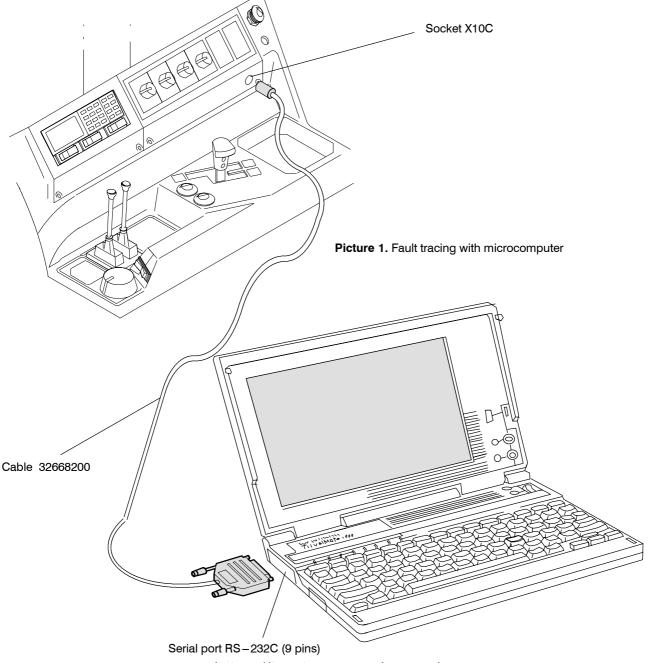

https://tractormanualz.com/

	Model	Code	Page	l
34. Autocontrol – III	15. 6. 1992 6600E,	8100E 342	2	

Fault tracing chart on PC monitor

AC Commun	ication link ve	r 1.0			hh:mm:ss	
DIGITAL INPUTS Steering angle Main clutch PS algorithm Implement pos Forward/Rev Brake left Brake right Slip cntr 1/0 Extra 3 PS manual 1/0	J2:15 X J2:18 X J2:17 X J2:20 X J2:10 X J2:9 X J2:19 X J2:16 X J2:39 X J2:37 X	DIGITAL OUTPUTS Slip control 4WD solenoid 4WD lamp DL sol & lamp Pto solenoid Pto 540 lamp Pto 1000 lamp PS sol & lamp Forward/Reverse	J1:18 X J1:38 X J1:35 X J1:37 X J1:21 X J1:1 X J1:39 X J1:36 X	FREQUENCY INPU Flow Radar Gearbox Front axle Rear wheel Front wheel RPM impl RPM Engine RPM Pto PCS	TS J1:26	
4WD A/M 4WD manual 1/0 DL A/M DL manual 1/0 Extra 1 PTO 1/0 Extra 2 PTO 540 1/0 PTO 1000 1/0 PS A/M	J2:37 X J2:14 X J2:38 X J2:33 X J2:34 X J2:13 X J2:35 X J2:11 X J2:12 X J2:36 X	Extra 1 Extra 2 Implement dir Implement act Fuel preheater Pieces counter Parameter table no Date of production PROM Checksum	J1:23 X J2:23 X J2:22 X J2:24 X J1:22 X J1:19 X	ANALOG INPUTS Power lift Outside temp Acc pedal pos Coolant temp Implement pot System volt	J2:32 XXX J2:29 XXX J2:7 XXX J2:30 XXX J2:31 XXX J2:25 XXX	
EPLD Version XX Message Window Berifors 1990 1PARAMETERS 5SENSOR LOG 10EXIT						

- X=nothing (see chart above)
- E=error, short circuit or open circuit
- 1=current on
- 0=current off

Markings after the names are ECS connector pins:

E.g. J2:15 = A2C pin 15J1:18 = A1C pin 18

		Model	Code	Page
34. Autocontrol – III	15. 6. 1992	6600E, 8100E	342	3

In the tables below the marks above the thick line and the corresponding marks on the PC display should be similar with the given switch and pedal positions under the thick line.

For these checks it is supposed that the tractor hydraulics and mechanics are in perfect condition. During the test current is switched on to the tractor but the engine is stopped (if not otherwise informed)

Important! If the tables below and the computer display chart do not agree, check first that the cable between the PC and the AC-III unit is correctly connected to the PC serial port and to the socket X10C.

The symbols after the names above the thick lines are connector pins from which possible voltage measurements can be done. Thus the tables below can be used for trouble shooting even though You don't have a PC.

A. Fault tracing, front wheel drive control

Input signals to ECS for controlling 4WD (DIGITAL INPUTS).

4WD A/M (A2C/14)	0	0	1	1
4WD MANUAL 1/0 (A2C/38)	0	1	0	0
A/M-SWITCH	М	M	Α	Α
ON/OFF-SWITCH	OFF	ON	OFF	ON

BRAKE LEFT (A2C/9)	0	1	0
BRAKE RIGHT (A2C/19)	0	0	1
LH SIDE BRAKE PEDAL	OFF	ON	OFF
RH SIDE BRAKE PEDAL	OFF	OFF	ON

- If the marks above the thick lines agree with the corresponding marks on the computer display, the input signals are OK.
- If the marks on the PC display do not agree with the marks above the thick lines, the fault lies in the switch in question or its wiring is faulty.
- Input signals from the radar, front axle sensor and gearbox sensor are checked with a calibrating test, see page **341/1** or according to the instruction **F** on page **342/7**.

Output signals from ECS for controlling 4WD (DIGITAL OUTPUTS).

4WD SOLENOID (A1C/38)	1	0
4WD LAMP (A1C/35)	0	1
4WD A/M	М	М
4WD MANUAL 1/0	OFF	ON

- If the marks above the thick line agree with the corresponding marks on the computer display, the possible fault lies in the solenoid valve, indicating light or their wirings are faulty.
- If the output signals on the PC display differ from the marks in the table above, the central processing unit (ECS) is faulty and should be changed.

		Model	Code	Page
34. Autocontrol – III	15. 6. 1992	6600E, 8100E	342	4

B. Fault tracing, quick-shift gear control

Input signals to ECS for controlling quick-shift gear power shift (DIGITAL INPUTS).

PS algorithm (A2C/17)	0/0	0/0	1/0	1/0	0/0	0/0
PS A/M (A2C/36)	0/0	0/0	1/0	1/0	1/0	1/0
PS MANUAL 1/0 (A2C/37)	1/0	0/0	0/0	0/0	0/0	0/0
PS algorithm-switch (M/A ₁ /A ₂)	М	М	A1	A1	A2	A2
PS algorithm-switch (M/A ₁ /A ₂) PS MANUAL 1/0 (T=TORTOISE, H=HARE)	M T	M H	A1 T	A1 H	A2 T	A2 H

MAIN CLUTCH (A2	C/18)	1	0
CLUTCH PEDAL	(U=UP, D=DOWN)	U	D

⁻ If the marks above the thick lines agree with the corresponding marks on the computer display, the input signals are OK.

Output signals from ECS for controlling quick-shift gear (DIGITAL OUTPUTS).

PS SOLENOID AND LAMP (A1C/36)	1/0	0/0
PS algorithm-switch (M/A ₁ /A ₂)	М	М
PS MANUAL 1/0 (T=TORTOISE, H=HARE)	T	Н
CLUTCH PEDAL (U=UP , D=DOWN)	U/D	U/D

⁻ If the marks above the thick line agree with the corresponding marks on the computer display, the possible fault lies in the solenoid valve, indicating light or their wirings are faulty.

C. Fault tracing, differential lock control

Input signals to ECS for controlling differential lock (DIGITAL INPUTS).

DL A/M (A2C/8)	0	0	1	1
DL MANUAL 1/0 (A2C/33)	0	1	0	0
A/M-SWITCH	М	М	Α	Α
ON/OFF-SWITCH	OFF	ON	OFF	ON

BRAKE LEFT (A2C/9)	0	1	0
BRAKE RIGHT (A2C/19)	0	0	1
LH SIDE BRAKE PEDAL	OFF	ON	OFF
RH SIDE BRAKE PEDAL	OFF	OFF	ON

⁻ If the marks on the computer do not agree with the marks above the thick lines with given switch and pedal positions, the fault lies in the switch in question or its wiring is faulty.

⁻ Input signals from the radar and gearbox speed sensor are checked with the calibrating test, see page 341/1 or according to the instruction F on page 342/7. The engine speed sensor, see page 341/1 and the injection pump potentiometer, see pages 341/2 or 342/8.

⁻ If the output signals on the PC display differ from the marks in the table above, the central processing unit (ECS) is faulty and should be changed.

		Model	Code	Page
34. Autocontrol – III	15. 6. 1992	6600E, 8100E	342	5

MAIN CLUTCH (A2C/18)	1	0
CLUTCH PEDAL (U=UP, D=DOWN)	U	D

STEERING ANGLE (A2C/15)	0	1	1
FRONT WHEELS	STRAIGHT	TO RIGHT ☐ 10°	TO LEFT □10°

- If the marks above the thick lines agree with the corresponding marks on the computer display, the input signals are OK.
- If the marks on the computer do not agree with the marks above the thick lines with given switch, pedal and steering wheel positions, the fault lies in the switch or sensor in question or their wirings are faulty.
- Input signals from the radar, front axle sensor and rear wheel sensor are checked with the calibrating test, see page 341/1 or according to the instruction F on page 342/7.

Output signals from ECS for controlling differential lock (DIGITAL OUTPUTS)

DL SOLENOID AND LAMP (A1C/37)	0	1
DL A/M	M	M
DL MANUAL 1/0	OFF	ON

- If the marks above the thick line agree with the corresponding marks on the computer display, the possible fault lies in the solenoid valve or indicating light or their wirings are faulty.
- If the output signals on the PC display differ from the marks in the table above, the central processing unit (ECS) is faulty and should be changed.

D. Fault tracing, power take-off control

Input signals to ECS for controlling power take-off (DIGITAL INPUTS)

PTO 540 1/0 (A2C/11)	0	1	1	0	0
PTO 1000 1/0 (A2C/12)	0	0	0	1	1
PTO 1/0 (A2C/13)	0	0	1	0	1
PTO 540 ON/OFF	OFF	ON	ON	OFF	OFF
PTO 540 ON/OFF PTO 1000 ON/OFF	OFF	ON OFF	ON OFF	OFF ON	OFF ON

- If the marks above the thick line agree with the corresponding marks on the computer display, the input signals are OK.
- If the marks on the computer do not agree with the marks above the thick line with given switch positions, the fault lies in the switch in question or its wiring is faulty.
- The engine speed sensor and the PTO speed sensor are checked according to the instructions on page **341/1** or according to instruction **F** on page **342/7**.

	15, 6, 1992	Model	Code	Page
34. Autocontrol – III	1. 9. 1992	6600E, 8100E	342	6

Output signals from ECS for controlling power take-off (DIGITAL OUTPUTS)

PTO 540 LAMP (A1C/1)	0	0	1 ¹)	0	0
PTO 1000 LAMP (A1C/39)	0	0	0	0	1 ¹)
PTO SOLENOID (A1C/21)	0	0	1 ¹)	0	1 ¹)
PTO 540 ON/OFF	OFF	ON	ON	OFF	OFF
PTO 540 ON/OFF PTO 1000 ON/OFF	OFF OFF	ON OFF	ON OFF	OFF ON	OFF ON

^{1) 1} is seen only momentarily when the ON/OFF switch is moved to the ON position and then it changes to 0. However, if the engine is running during the test the 1 remains on.

- a) Engine is stationary and the 540 RPM PTO is engaged; when the emergency plug is pulled out, the PC display shows E at the PTO SOLENOID. E changes to 0 when the plug is refitted. This same function concerns also the 1000 RPM PTO
- b) Engine is running and the 540 RPM PTO is engaged; when the emergency plug is pulled out, the PC display shows E at the PTO SOLENOID and the PTO 540 LAMP starts to flash. When the plug is refitted, the E changes to 0 but the PTO 540 LAMP remains flashing. This same function concerns also the 1000 RPM PTO.
- If the table marks above and the PC display marks agree with the given switch positions, the possible fault must lie in the emergency plug, in the solenoid valve or in the indicating lamp or their wirings are faulty.
- If the output signals on the PC display differ from the marks in the table above, the central processing unit (ECS) is faulty and should be changed.

E. Fault tracing, slip control

Input signals to ECS for slip control (DIGITAL INPUTS)

SLIP CNTR 1/0 (A2C/16)	0	1
SLIP CONTROL ON/OFF	OFF	ON

- If the marks above the thick line agree with the corresponding marks on the computer display, the input signals are OK.
- If the marks on the computer do not agree with the marks above the thick line with given switch positions, the fault lies in the switch or its wiring is faulty.
- The radar and the gearbox speed sensor are checked according to the calibrating instruction on page 341/1 or according to the instruction F on the next page.

Output signals from ECS for slip control (DIGITAL OUTPUTS)

SLIP CNTR (A1C/18)	0	1
SLIP CONTROL ON/OFF	OFF	ON ¹)

¹⁾ When the switch is in the ON position, disconnect the radar connector and drive the tractor at a speed of 3 km/h (power lift activated in the position control mode). Alternatively one rear wheel can be raised and then started carefully to drive with a low gear (4WD must be disengaged and the A/M switch must be in M position).

- If the table marks above and the PC display marks agree, the signal is sent from ECS to the hydraulic lift. If the lower links do not make a lifting correction the possible fault lies in wiring or the power lift electronics do not function.
- If the marks on the PC do not agree with the marks above, the fault lies in the ECS which must be changed.

		Model	Code	Page
34. Autocontrol – III	15. 6. 1992	6600E, 8100E	342	7

F. Fault tracing, speed sensors (FREQUENCY INPUTS)

The following speed sensors are fitted on E-models:

- Radar (Radar) (A1C/7)
- Gearbox speed sensor (Gearbox) (A1C/30, 10)
- Front axle speed sensor (Front axle) (A1C/29, 9)
- Rear wheel rotation speed sensor (Rear wheel) (A1C/27, 8)
- Engine rotation speed sensor (RPM engine) (A1C/31, 12)
- PTO rotation speed sensor (RPM Pto) (A1C/28, 11)

N.B.! The speed sensor resistance (not radar) should be $1,0-1,10 \text{ k}\Omega$ which can be measured from connector X2C (pins, see wiring diagrams) or from the lower ECS connector A1C (pins, see above). If the resistance value is infinite a new measurement should be done from the sensor poles so that possible faults on wiring can be localised. A faulty sensor should be changed, see page 341/1.

a) Checking radar

Drive the tractor at different speeds and write down impulses from the radar. The following values were measured from a radar which was in a perfect condition:

☐ Constant

$0 \sim 38 \ (1 \ km/h)$	(inaccuracy	increases at	low driving	speeds)
--------------------------	-------------	--------------	-------------	---------

 $D \sim 157 (4,3 \text{ km/h})$

D ~ 327 (8,8 km/h)

Number of impulses

Driving speed

 $D \sim 416 (11,4 \text{ km/h})$

 $D \sim 757 (20,6 \text{ km/h})$

- D~1026 (28,2 km/h)
- If number of impulses from the radar correspond to values above, the radar is in perfect condition.
- If no impulses come from the radar or if they deviate much from the values above, the radar is faulty or its wiring is damage.

b) Checking speed sensors for front axle, rear axle and gearbox

- a) Drive the tractor on a road at a speed of 1-2 km/h and write down impulses from the radar (T1) and from one of the speed sensors (A1).
- b) Drive then with a faster speed (~20 km/h) and write down impulses from the radar (T2) and from the speed sensor (A2).
- c) Equation A1/T1 \square A2/T2 must come true (deviation can be \leq 0,16).
- If the equation comes true, the speed sensor is OK.
- If the equation does not come true, the speed sensor in question, its adjustment, wiring or impulse disc is faulty.

c) Checking rotation speed sensors for engine and PTO

- a) RPM engine; impulse value is about 0616 at engine revs 1000 r/min.
- b) RPM Pto, impulse value is about 0364 at the PTO speed of 540 r/min.
- If impulses from the sensor correspond to values above, the sensor is functioning properly.
- If no impulses can be observe or number of impulses deviates much from values above, the sensor is faulty. Check then the wiring and the sensor.

d) Calibrating and fitting speed sensors, see page 341/1.

		Model	Code	Page
34. Autocontrol – III	15. 6. 1992	6600E, 8100E	342	8

G. ANALOG INPUTS

Here are given some base values for certain analog inputs. These values were measured from the AC-III unit, which functioned perfectly:

Power lift (A2C/32):

- a) signal is about 194 when the lower links are in the lowest position
- b) lower links in max transport height, signal is about 014.
- if the signal values are correct everything is OK.
- if no signal comes or its deviates much from values above, check then connectors and wiring. Fault can also lie in the hydraulic power lift electronics.

Outside temp (A2C/29):

- a) signal is about 130 at outside temperature of -3°C
- b) signal is about 120 at outside temperature of +1°C
- **N.B.** Signal value decreases when temperature rises.
- if the signal values are correct everything is OK.
- if no signal comes or its deviates much from values above, the sensor is faulty or its wiring and connectors.

Coolant temp (A2C/30):

- a) signal at coolant temperature -2°C is about 183.
- b) signal at coolant temperature 15°C is about 130.
- c) signal at coolant temperature 20°C is about 116.
- d) signal at coolant temperature 25°C is about 108.
- e) signal at coolant temperature 40°C is about 084.
- f) signal at coolant temperature 50°C is about 064.
- if the signal values are correct everything is OK.
- if no signal comes or its deviates much from values above, the sensor is faulty or its wiring and connectors.

System volt (A2C/25):

- a) signal value is about 167, when the engine is running at 1000 r/min (correspond voltage \sim 13,5 V).
- b) signal value is about 140, when the engine is stopped (correspond voltage \sim 12 V).
- If the signal values are correct, everything is OK (values depend also on condition of battery)
- If no signal comes or it is faulty, check connectors and wiring.


Acc pedal pos (A2C/7):

- a) signal is about 020 when the acc. pedal is in the upper position.
- b) signal is about 230 when the acc. pedal is in the lower position.
- if the signal values are correct, everything is OK
- if no signal comes or it is faulty, check the potentiometer on the injection pump and its wiring.

Checking injection pump potentiometer, see page 341/2.

Checking temperature sensors, see page 341/2.

AC-III, implement socket

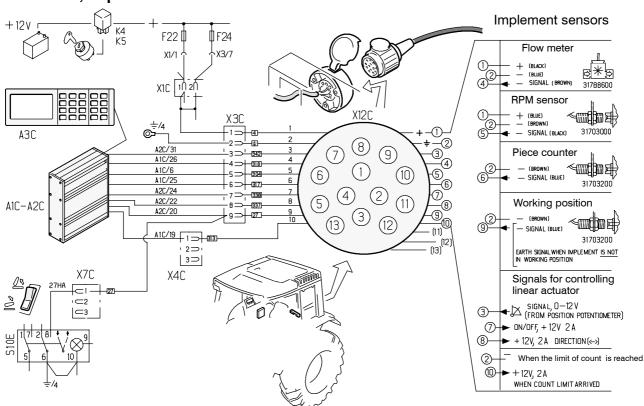

Checking line from implement socket to AC-III unit

- Switch on current to the tractor
- Measure the supply voltage between socket terminals 1 and 2 (= battery voltage, about 12 V DC).
- Connect a microcomputer to the AC-III unit and activate the trouble shooting chart (see page 341/1).

FREQUENCY INPUTS

- 1. Shunt between socket terminals 2 and 4 (break connection). A number signal must appear on the PC at point Flow. This function is the same as the flow meter paddle wheel would revolve. Also AC-III display shows some value in the liquid amount mode (litres).
- 2. Shunt between socket terminals 2 and 5 (break connection). A number signal must appear on the PC at point **RPM impl**. Also AC-III display shows some value in the implement RPM mode. This function is the same as a magnet would pass by the sensor.
- 3. Shunt between socket terminals 2 and 6. A number signal must appear on the PC at point PCS every time the connection is broken off and on (summing counter). Also AC-III display shows in the piece counter mode the same value. Note possible limiting program, which limits the max number of items. When the limit value is achieved a signal (0 changes to 1) appears at the point Pieces counter (DIGITAL OUT-PUTS). This signal can also be measured with a voltmeter between socket terminals 2 and 10. This function is the same as a magnet would pass by the sensor.

DIGITAL INPUTS

4. Activate the hydraulic power lift and turn the lift/lower switch

to the lowering position. Shunt between socket terminals 2and 9. A signal (1 changes to 0) appears on the PC at point Implement pos. When the socket terminals are connected the arrow on the AC-III display turns to point upwards. The function is the same as a magnet would be opposite the sensor. The lift/lower switch has the same function.

ANALOG INPUTS

5. Signal from possible position potentiometer: Shunt between socket terminals 1 and 3, after which a number signal appears on the PC at the point Implement pot. Here with battery voltage the signal is about 250. Also AC-III display shows some value (e.g. 100) in the implement position mode.

Signals to linear actuator

- connect an adjustable resistor to the socket poles 1 (+: black), 2 (-: Red) and 3 (sign: Yellow).
- calibrate the resistor's extreme positions (e.g. 0 (P1) and 100 (P2)).
- input 5 pcs pre-programmed resistor positions (e.g. 10, 30, 50, 70 and 90)
- move the resistor spindle inwards and outwards in the middle range and check that the output signals appear on the PC with e.g. the pre – set position 50. **Implement dir** (current to a relay for controlling actuator rotation direction; 0 or 1) and **Implement act** (current to a relay for controlling actuator; 0 or 1) (both DIGITAL OUTPUTS)
- By connecting a test lamp to the socket poles 7 or 8 (earth from any frame contact) it can be checked if the current actually comes to the socket.
- **N.B.** If the line from the socket does not function, check connectors X3C and X4C (in the lever console). Check also wire connections in the socket. If the output signals do not come the ECS is faulty.






		Model	Code	Page
34. Autocontrol – III	15. 6. 1992	6100E, 8100E	343	1

Copying parameter file into AC-III unit

One qualification for the correct function of the AC-III:n unit is that the central processing unit (ECS) knows the tractor which it is fitted on. For that reason certain data must be input into the ECS. A parameter file includes this data.

Already in the factory a parameter file has been input into the AC-III unit. If this file gets out of order, the unit takes automatically into use a default parameter file. The unit indicates this with text DEFAULT PARA every time current is switched on to the tractor. The default file must be replaced as soon as possible with a correct file. If tractor's technical values are changed so must also be checked if the parameter file should be changed. If the central processing unit (ECS) has been changed, a correct parameter file must be input.

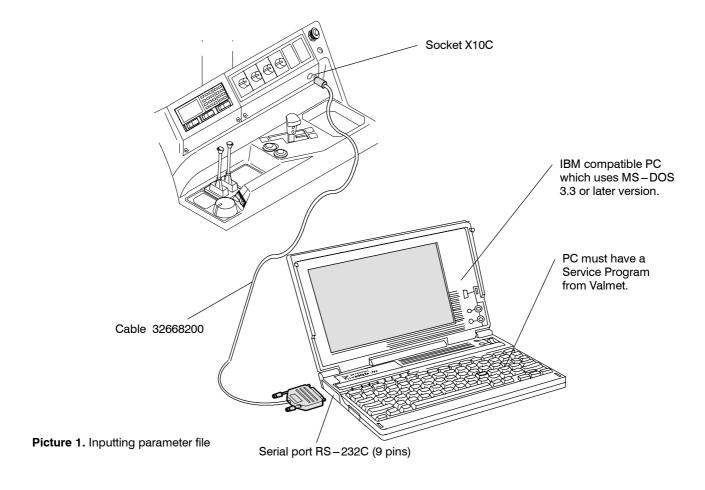

Parameter files have been named according to the code system. A parameter file name includes eleven marks as follows:

E.g. AC 45 02 5M . 6 4 E

AC = Autocontrol (common in all file names)

45 = Program version name. Here V 4.5. This changes only if the program version needs a new parameter file.

02 = Parameter file order number (0-99). The order number changes always with exception that different language versions have a same order number.

5 = Engine revs which give the max torque. The first an two last figures have been leaved out. Here 5=1500 RPM.

 $\mathbf{M} = \text{Clutch type}, \, \mathbf{M} = \text{mechanical}, \, \mathbf{H} = \, \mathbf{Hi} - \mathbf{Trol}$

6 = Number of cylinders in engine (6 or 4)

4 = Transmission type (40 or 30 km/h)

E = Language (E=English, R=Swedish, S= Finnish

A parameter file is input into the AC-III unit with aid of a microcomputer. Service Program floppy disk can be ordered from Valmet. This same program is used also when trouble shooting is done.

		Model	Code	Page
34. Autocontrol – III	15. 6. 1992	6100E, 8100E	343	2

Alternative parameter files

Model	Transmission	Language	Parameter file name
6600E	420GL 40 km/h	Finnish Swedish English	AC01086M.44S AC01086M.44R AC01086M.44E
6600EH	420GL 40 km/h	Finnish Swedish English	AC01046H.44S AC01046H.44R AC01046H.44E
8100E	420GL 40 km/h	Finnish Swedish English	AC01095M.64S AC01095M.64R AC01095M.64E
8100E	420GL 30 km/h	Finnish Swedish English	AC01105M.63S AC01105M.63R AC01105M.63E

Copying parameter file into AC-III unit

In this instruction the Program is in the hard disk (C:). If it is in the floppy disk drive, use a correct prompt (e.g. A:)

- J Connect the PC with the cable to the socket X10C.
- J Switch on current to a tractor and to the PC.
- J When prompt C:\> appears, type AC (ACC if colour monitor) and press ENTER.
- ${\bf J}\,$ A trouble shooting chart appears onto the PC display. In the LH side lower corner of the chart there is the following menu:

1PARAMETERS 5SENSOR LOG.

J Press F1 and the following text appears:

TRACTOR MODEL PARAMETERS

File name:

- J Type after colon a correct parameter file name.
- J Press ENTER
- **J** Message **PROGRAMMING AC-III** appears onto the PC display. Programming in action.
- J When the programming is successfully completed, text **AC III PROGRAMMED** appears in the message window in the RH side lower corner. During successful programming the AC-III display switch off and on.

Note! Service Program error messages, see next page.

J To the disk operating system is returned by pressing the function key **F10** (EXIT).

The Service Program chart (on PC display) has the following information:

Parameter table no = parameter file order no
Date of production = manufacturing date of ECS
PROM Checksum = program version
EPLD Version = program version of logic circuit

If the central processing unit (ECS) or the parameter file is changed, write on the ECS sticker no 32666800 tractor serial number, date and parameter file name after text SW.NO. Fix the sticker onto the ECS.

		Model	Code	Page
34. Autocontrol – III	15. 6. 1992	6100E, 8100E	343	3

Error messages in Service Program

Service Program has the following error messages which appear in the MESSAGE WINDOW in the RH side lower corner of the fault tracing chart. If other error messages appear, switch off current and start from the beginning.

ERROR IN CHECKSUM If this message appears on the PC display when you are programming the AC-III unit, You

must start from the beginning after switching off and on current.

PARAMETER REV MISMATCH. Parameter file and EPROM have different version numbers.

ERROR IN EPROM If You have found an error in EPROM, switch off the AC-III unit for a while and start the

Service Program and try again programming. If this is not enough, change the central processing unit (ECS). (EPROM=eraseable and programmable read only memory)

AC-III DOES NOT RESPOND Connection between the PC and the AC-III unit does not function. Check the middle cable

and check that the AC-III unit is switched on. Check AC-III fuses.

ERROR IN COMMUNICATION Switch off the AC-III unit for a while and start the Service program again.

WRONG NUMBER OF CHAR

This message appears if You try to copy into the AC-III unit a parameter file which has not


correct number of characters. Program error.

ILLEGAL CHAR FOUND A parameter file includes an illegal character/characters. Only figures 0–9 are allowed.

Program error.

FILE ERROR If the file does not exist, appears this message on the PC display. Check the parameter file

name. Start from the beginning after turning current off and on.

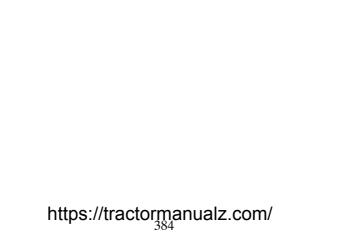



35. Autocontrol IV

1 3>1994	Model	Code	Page
1. 1000	6600E	350	4
1. 1. 1995	8100E-8750E	350	

Valmet Autocontrol IV Tractor Control System is standard equipment on tractors 6600E - 8750E from the beginning of the year 1994 (662343 -). Autocontrol IV replaces Autocontrol III which is shown in section 34.

Autocontrol IV is in many points the same as Autocontrol III. The main difference is that Autocontrol IV controls the 3-step Delta Powershift gear (Autocontrol III controlled the 2-step quick-shift gear).

4WD control AC IV

Manual or automatic control with aid of the 3-position rocking switch.

Rear edge depressed: 4WD disengaged except when latched together brake pedals are depressed.

Middle position:4WD is engaged manually

Front edge depressed: AC IV controls automatically the 4WD as follows:

4WD engages

4WD disengages

- when the rotation speed difference of the front and rear axle exceeds 9%
- when braking with latched together brake pedals (also in manual position).
- when the engine is stopped

- when the engine is started (in automatic (A) position)
- when the wheel slip is less than 2% for more than 6 seconds.

Differential lock control AC IV

Manual or automatic control with aid of the 3-position rocking switch.

Rear edge depressed:differential lock is disengaged.

Middle position: lock is engaged manually but disengages when brake pedal/pedals are depressed Front edge depressed: AC IV controls automatically the lock as follows:

Diff. lock engages

Diff. lock disengages

- when one rear wheel rotates 20% faster than the other and the driving speed is less than 12 km/h
- when the rear wheel slip is less than 10 % during a period of one second (speed <12 km/h).
- when the brake pedal/pedals are depressed (also in the manual position)
- when the clutch pedal is depressed
- when the steering angle is more than \pm 15 $^{\circ}$
- when the tractor driving speed is over 12 km/h
- when the tractor is stopped

Delta Powershift control AC IV

Manual or automatic control with aid of the 2-position rocking switch.

Rear edge depressed: the gear is controlled with the push buttons in the gear lever knob

Front edge depressed: AC IV controls the gear automatically as follows:

Change down

Change up

- changes automatically down when the loading increases
- changes to the lowest ratio when the tractor speed is below 1,5 km/h and the clutch pedal is depressed.
- AC IV selects automatically the best possible higher ratio
- highest ratio reduces noice and fuel consumption.

Note! In the automatic position the gear ratio can temporarily be changed with the push buttons. There is a buzzer in the instrument panel which alarms when the engine is stopped and the parking brake is not applied.

350

2

PTO control AC IV

(Always automatic functions on)

PTO engages

PTO disengages

- 1. PTO is engaged manually with the control lever
- electric engagement with the switch in the lever knob
- if the PTO has been engaged before starting the engine, the PTO shaft does not start to rotate. Warning light flashes. PTO engages after the control lever is moved to neutral and back to the engaged position.
- If the PTO clutch slips more than 4 %. Warning light flashes. PTO is engaged again, when current is switched off and on.
- when the safety switch is opened over 3 seconds. Warning light flashes. PTO engages when the engine is stopped and current is switched off and on and the control lever is moved to the neutral position and back to the engaged position. Note! If the safety plug is replaced into the socket within 2 seconds the PTO begins to rotate. This must be observed when using a remote emergency switch connected to the plug.

Slip control AC IV Slip control is switched on with a switch that has 6 Slip percent is adjustadifferent positions ble 0 = switched off 1 - 5 =switched on Draft control selector in Draft control selector in - desired slip limit can be position P. position 1-5 programmed buzzer signal is heard - if the set slip percent is exceeded, the lift when the set slip percent order is sent to the power lift. is exceeded. - lift movement is determined by the position of the slip switch: 1-small lift 5-big lift

Cold starting AC IV

(Ignition switch has also a normal glowing position)

Notify readiness for start

Automatic afterglowing if needed


- indicator lamp is lit=glowing
- indicator lamp flashes=ready for starting
 Programmed according to the engine coolant temperature.
- indicator lamp is lit continuously=afterglowing
- glowing time has been programmed according to the engine coolant temperature.

Model 6600E 8100E-8750E Code **350**

3

Page

Autocontrol IV display unit and function keys

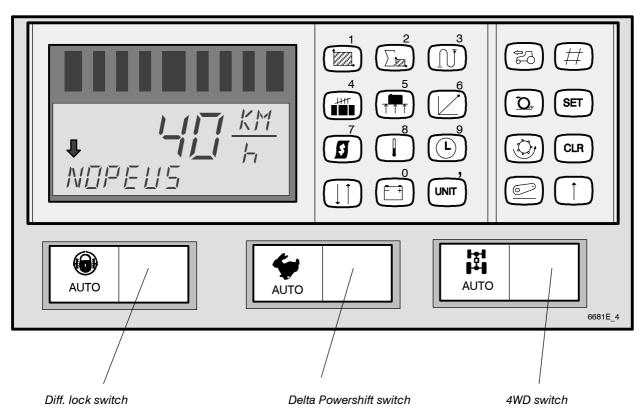

Picture 1. Display unit and function keys

Diff. lock switch:

Rear edge depressed: differential lock is engaged.

Middle position: lock is engaged manually but disengages when brake pedal/pedals are depressed

Front edge depressed: AC IV automatically controls the lock

Delta Powershift switch:

Rear edge depressed: the gear is controlled with the push buttons in the gear lever knob.

Front edge depressed: AC IV controls the gear automatically.

4WD switch:

Rear edge depressed: 4WD disengaged except when latched together brake pedals are depressed

Middle position: 4WD is engaged manually

Front edge depressed: AC IV automatically controls the 4WD

The display unit and keys are the same as on Autocontrol III, see pages **340/6 and 7**. The key functions differ a little when calibrating the flow meter.

The switches below the display unit differ from the switches on Autocontrol III, see page 340/6 (AC III) and page 350/1 (AC IV).

Calibrating mode for the hidden functions, see AC III on page 340/6.


35. Autocontrol IV

Model 6600E 8100E--8750E 1. 1. 1994

Code

350

Page 4

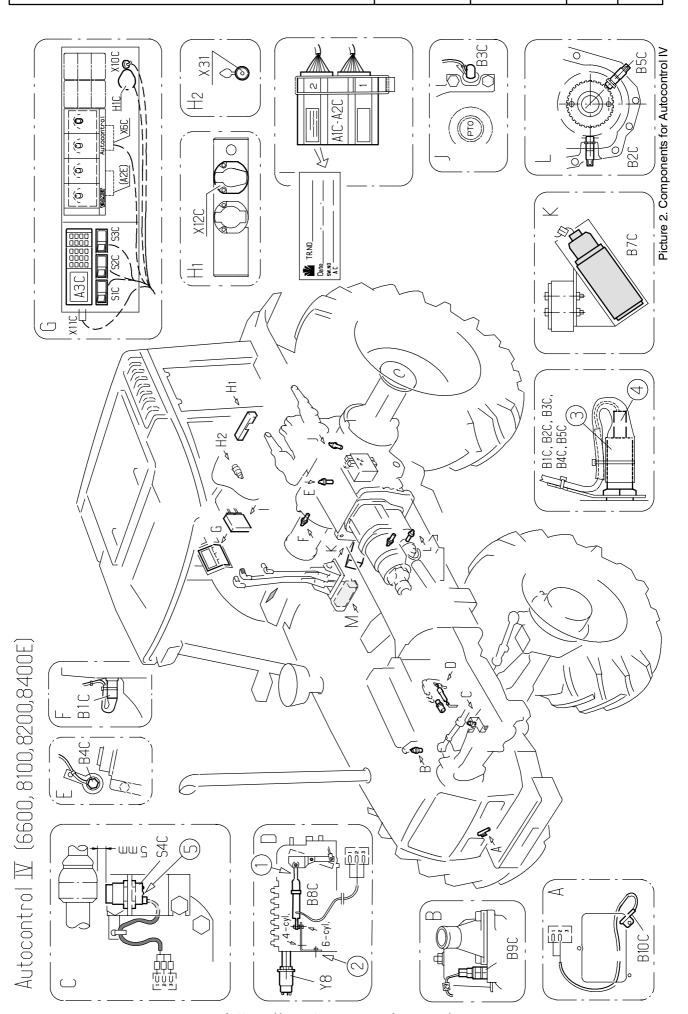

35. Autocontrol IV | Model | Code | Page | 6600E | 8100E-8750E | 350 | 5

Components for AC IV system

See picture 2 on previous page.

A. Outdoor temperature sensor

Sensor B10C is fitted under the fixing screw for the headlight. AC IV display shows the outdoor temperature.

B. Sensor for engine coolant temperature

Sensor (B9C) controls the cold starting automatics. An indicator light on the instrument panel shows when the engine can be started. The system controls automatically the afterglowing in cold conditions. AC IV display shows also the engine coolant temperature.

C. Sensor for front wheel steering angle

Sensor (S4C) notifies the AC IV system when the font wheel steering angle is over $\pm 15^{\circ}$. Then the automatics disengage the differential lock. The lock is re-engaged automatically when the front wheels are turned less than $\pm 15^{\circ}$

5. Sensor signal lights.

D. Potentiometer on fuel injection pump

Potentiometer (B8C) notifies the system the position of the governor control lever on the fuel injection pump. AC IV compares the governor control lever position and the engine revs. Eg. the system changes automatically to the lower gear when the engine revs drop during a hard load (and vice versa)

- Universal grease.
- 2. Loctite 242.

E-models have a starting solenoid Y8 in the front face of the fuel injection pump, see page **350/7**.

E. Sensor for engine revs

Sensor (B4C) is fitted on the gearbox under the cab. The sensor measures the engine rotation speed from the gear for the hydraulic pump drive mechanism. The display shows also the engine revs. The sensor controls the engagement of the Delta Powershift and indicates if the PTO clutch is slipping.

F. Sensor for rear axle rotation speed

Sensor (B1C) measures the rotation speed of the RH side rear axle from the impulse disc fitted on the final drive planetary gear. Engages the differential lock when the rotation speed difference between the rear axles exceeds 20 %.

G. Display unit

Display unit A3C and the function keys are the same as on AC III. Below the display unit there are switches for selecting between the manual or automatic control of the tractor transmission.

H₁ and H₂. Sockets at the rear of the tractor

Socket X12C for connecting implement sensors to the AC IV system.

PTO emergency stop socket X31 (terminator)

I. Central processing unit ECS (Electrical Control System)

The central unit ECS (connectors A1C, A2C) is fitted in the lever console in the cab. On the ECS is fitted a sticker with the tractor manufacturing number etc.

J. Sensor for PTO revs

Sensor (B3C) measures the rotation speed of the PTO shaft from the impulse disc fitted on the shaft. Display shows the PTO rotation speed.

Note! With effect from ser. no. F17107 the PTO control system has been modified. In this new system the PTO has a relay control (compare AC II and AC 2.1).

K. Radar

Radar (B7C) notifies the ECS the actual tractor travelling speed. The radar is used e.g. for detecting the wheel slip. The radar has been connected to the hydraulic power lift so that when the set slip percent is exceeded the lift order is sent to the power lift. The radar controls also the engagement of the front wheel drive and the differential lock.

Radar – You are not allowed to go under the tractor which has radar (slip control models) before the current switch has been turned off. – dangerous for eyes.

L. Gearbox rotation speed sensor B2C and front axle speed sensor B5C

The reverse shuttle housing has been changed. That is why the above mentioned sensors are fitted in different positions as on Autocontrol III.

M. Delta Powershift control unit A10


The control unit is the same on all Mezzo – tractors which have the Delta Powershift control with two push buttons in the gear lever knob (not rocking switch). Control unit A10, ind. light panel A9 and the buzzer B1 are shown on pages 311/3-6 (Autocontrol II).

Important! IN AC.2.1 system there are changes for DPS control, see code 312.

Differences between Autocontrol III and IV

- The front wheel steering angle sensor is different to Autocontrol III.
- The gearbox speed sensor is fitted on the RH side of the reverse shuttle and it measures gearbox rotation speed from the gearwheel of the 4WD clutch drum (not an impulse disc as on AC III).
- The front axle speed sensor measures the rotation speed of the 4WD output shaft. There is an impulse plate fitted between the two output shaft nuts. On the side of the impulse plate there are holes for possible running recorder (tachograph) which must be ordered separately.

Central processing unit ECS

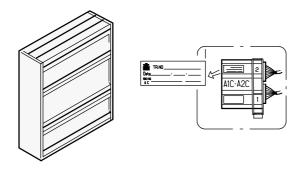

The ECS is fitted in the same place as on ACIII. The central unit of the AC IV is different as on AC III but its appearance and size is the same. The AC IV ECS has a sticker with marking "Autocontrol 4 Control Unit", order no 32884200. Other markings, see page **353/2**.

Parameter files:

Autocontrol IV parameter files are different compared with AC III, see page **343/2** (AC III) and **353/2** (AC IV). AC III parameter files must not be used. The parameter file is input into the ECS in the same way as on AC III (see under code **353**) but the Service Program is different.

Delta Powershift control

The greatest difference is the automatic control of the Delta powershift. AC IV has a 2-position rocker switch with which can be selected either manual or automatic control of the gear. In the manual mode the gear ratio is changed with the push buttons in the speed gear lever knob.

On AC IV the Delta Powershift control unit A10, indicator light panel A9 and buzzer B1 are the same as on Autocontrol II, see pages 311/3-6.

In the automatic mode, AC IV engages the best possible gear ratio according to the loading conditions. When changing the gear, ECS sends a current signal to the control unit A10 to the same pins as the push buttons in the manual mode. The control unit A10 then sends output signals to the gear solenoids and indicator lights for gear changing.

On AC III, the automatic gear change happened according to the max output or max torque. On AC IV there is only one automatic position and the gear change happens between these two possibilities and the rocking switch has only one automatic position.

Slip control and the power lift

The slip control is the same as on AC III. The hydraulic power lift is the same as on AC III but the lift/lower switch has three positions from the beginning of the year 1994. The middle position stops the movement of the lower links.

Display unit and switches

The function keys are the same as on AC III but the possible flow meter calibration has been changed a little. The functions of the switches below the display unit are different. The 4WD and diff. lock switches have been removed from the gear lever knobs.

Counting functions (same as on AC II)


The counting functions are checked in the same way as on AC III, see page 341/7.

Implement functions (same as on AC III)

The implement functions and the rear socket are the same as on AC III. Possible functional checking is carried out in the same way as on AC III, see page **352/9** (AC IV).

Electric stop of the engine

E-models have not a stop control knob but the engine stops when the ignition switch is turned to the 0-position. The fuel injection pump is moved to the stop position by a solenoid spring when the current to the solenoid is cut-off.

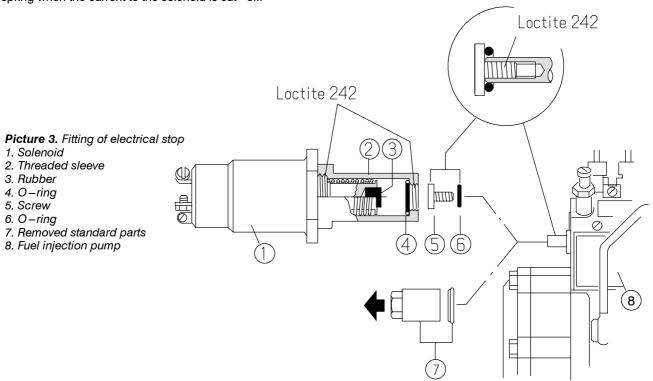

When the ignition switch is in the ON – position, the solenoid is energised and the magnet keeps the pump in the running position.


The solenoid earth wire (white) has been fastened under the bolt of the injection pump potentiometer fixing plate. The solenoid supply wire (171/Black) has connector X32 and the wire goes via the socket X19 on the front wall of the cab. The electric stop requires a different ignition switch compared with the normal stop system. From date 9403 all Mezzo—tractors have an ignition switch no 325 53200 which can control the electric stop.

If the engine stops during driving, the solenoid magnet can be damaged or there can be poor wire contacts. When current is switched on to the solenoid, a click sound can be heard.

Note! On later E-Models, the automatic stop control is a standard equipment, see pages 312/1 and 312/4 and wiring diagrams on pages 350/12-17.

35. Autocontrol IV 11. 1994 | Model | 6600E | 8100-8750E | 350 | 8

Connectors and wiring

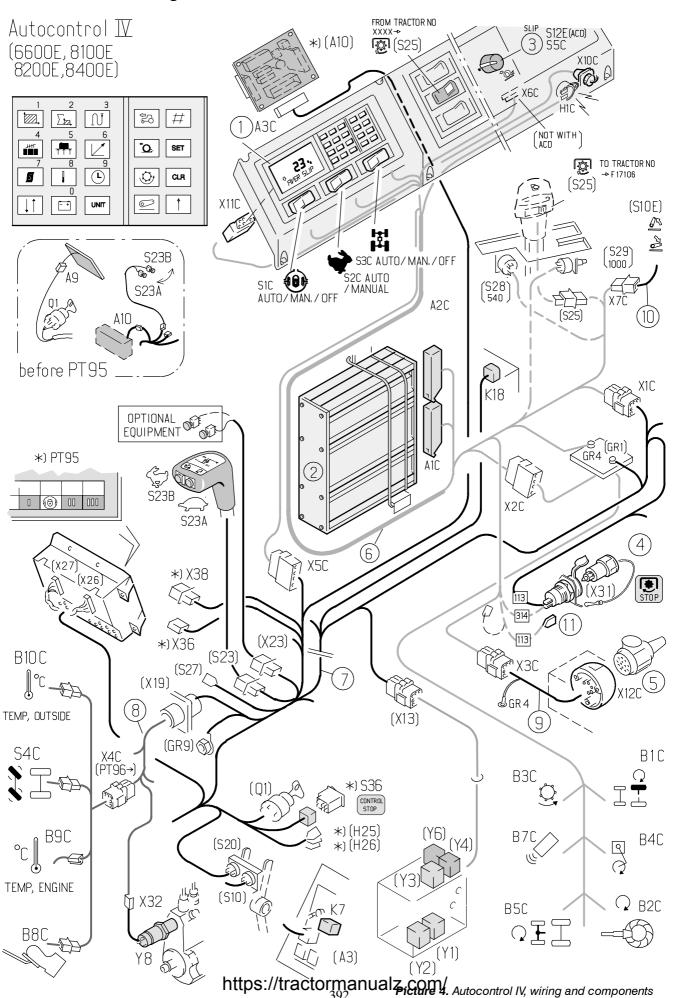

	1_1-1995	Model	Code	Page
35. Autocontrol IV		6600E 8100E-8750E	350	9

Wiring and connectors


See picture 4 on previous page.


- 1. Display unit with connector X11C.
- 2. Central unit (ECS, in the lever console).
- 3. Slip control (+buzzer)
- 4. PTO emergency stop socket
- 5. Implement socket
- 6. ECS wiring loom
- 7. Cab wiring loom
- 8. Engine wiring loom
- 9. Rear socket wiring loom
- 10. Power lift wiring loom

11. If the ECS is damaged, the PTO automatics can be overridden by disconnecting wire nr 314 (lilac) from the emergency stop socket (in the lever console) and then by connecting free wire nr 113 (yellow) inplace of the lilac wire. The PTO can now be controlled manually with the switch S25 in the PTO lever knob. The emergency stop functions also with this connection but not the slip control.

Note! With effect from spring -96 a new connector X4C has been fitted for the sensors in the front part of the tractor. This connector is in the engine compartment on the RH side.

Note! With effect from ser. no. F17107 the PTO control system has been modified. In this new system the PTO has a relay control (compare AC II and AC 2.1).

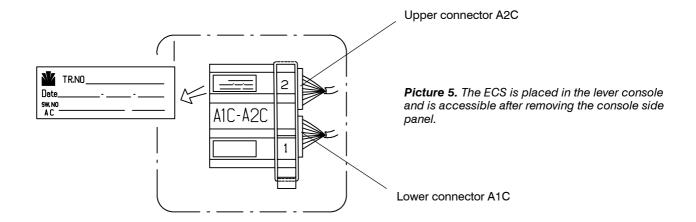


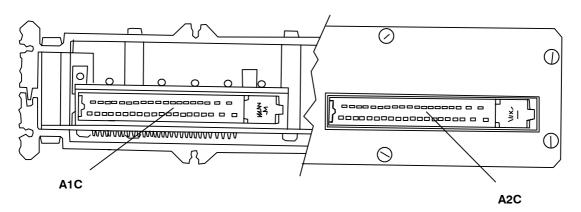

Picture 6. Rear side of the ECS

Voltage and resistance measurements can be done from the pins of connectors A1C and A2C. The pins have been numbered.

Supply voltage can be measured from connector A2C: Earth A2C/1. Supply voltage A2C/2, A2C/21 and A2C/25 (current must be switched on)

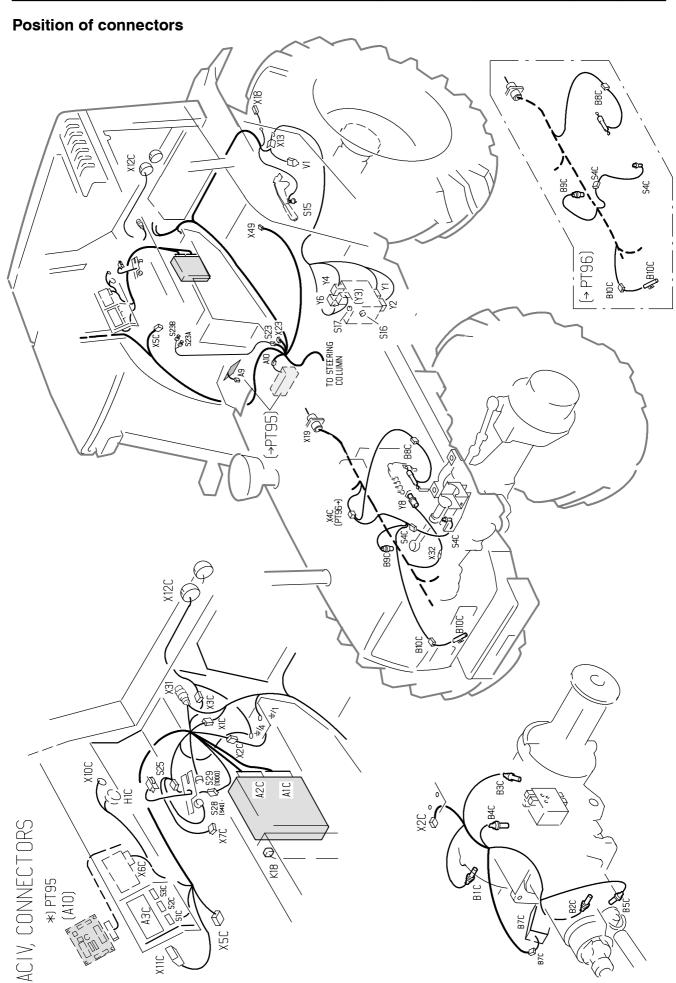

	1_1-1994	Model	Code	Page
35. Autocontrol IV		6600E 8100E8750E	350	11

Position of connectors

See picture 7 on previous page.

The ECS connectors A1C (red) and A2C (see also page **350/9**) are placed in the cab lever console on the driver's right.

In the lever console, there are also the following connectors:

- X1C: ECS supply and solenoid valve wires
- X2C: speed sensors and radar wires
- X3C: implement socket wires
- X5C: switch and sensor wires
- X6C: power lift control panel wires
- X7C: power lift wiring loom connector

In front of the lever console under the panel:

- A10: Delta Power Shift control unit A10 connector
- S23: Power Shift push button connector
- X23: connector for extra push buttons

All speed sensor pins are equipped with connectors. The radar connector B7C is located near the radar.

Sensors in the engine compartment:

- $\boldsymbol{-}$ the outdoor temperature sensor connector is fitted in the front part of the tractor.
- the engine temperature sensor pin has a connector.
- the front wheel steering angle sensor connector S4C is located on the right hand side of the engine
- X4C: connector for sensors in the front part of the tractor
- fuel injection pump potentiometer connector B8C.
- Y8 is a starting solenoid on the fuel injection pump

Note! All wires from the sensors in the engine compartment are drawn via socket X19 in the cab front wall on the RH side.

The solenoid valve connector X13 is placed under the hand brake lever console on the driver's left. In addition, the solenoid pins have connectors:

Y1=Diff. lock solenoid


Y2=PTO solenoid

Y3=4WD solenoid (energised when 4WD is disengaged)

Y4=Delta Power Shift, reduction ratio

Y6=Delta Power Shift, overdrive

In the direct ratio, both solenoid valves are energised.

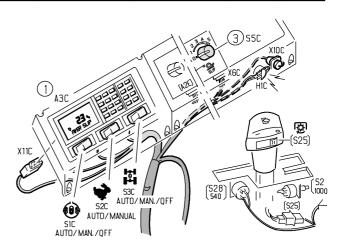

Display unit (1), A/M-switches, power lift controls and slip control selector (3) and slip control buzzer (H1C) are accessible after unscrewing the panel cross-head screws. The panel has two sections.

	1_1-1995	Model	Code	Page
35. Autocontrol IV		6600E 8100E8750E	350	12


Wiring diagram, E-models,		Sym- bol	- Component	Cod- no
-F17106		11.4	AMenine Ballate Bureatter to the standill	0.4
Diagram no 32549920A on pages 350/14-16.		H 1 H 2	Warning light, direction indicator III Warning light, direction indicator II	34 34
Sym-	Cod-	H 3	Warning light, direction indicator I	34
bol Component	no	H 4	Warning light, air filter	7
(A 2) Radio A 3 Electric centre	2	H 5 H 6	Warning light, engine oil pressure Warning light, stop, engine temp.	8 15
(A 5) Air suspension seat	93	H 7	Warning light, stop, engine temp. Warning light, gearbox oil pressure	9
(A6) Agrodata		(H8)	Light, oil filter, gearbox	10
(A7) Elektric air filter A10 Control unit, Delta Power Shift	102	H 9 H10	Light, 4WD	65 67
(A11) Telephone	99	H11	Light, PTO Light, parking brake	12
(A14) Tachograph	1	H12	Light, Thermostart	6
B 1 Sensor, engine temperature	16	H14	Light, main beams	27
B 2 Sensor, fuel gauge	17	H15 H16	Warning light, low fuel level Warning light, charging	14 6
(B 3) Sensor, gearbox temperature	95	H18	Warning light, gearb. oil temp.	13
(B 9) Sensor, tachograph	1	H19	Light, DPS I	102
E 1 Headlights, right	26	H20 H21	Light, diff. lock Light, DPS II	62 102
E 2 Headlights, left	25	H22	Light, DPS III	102
E 3 Front indicator, R.H	31	H23	Horn	50
E 4 Front indicator, L.H E 5 Rear light, right	28 33	(H24)		96
E 6 Rear light, left	32	(H27)	DUCK DUZZEI	90
E 7 Cabin light	46	K 1	Relay, front working lights	43
E 9 Rear working light, R, outer E10 Rear working right, R, inner	42 42	K 2	Relay, rear working lights	41
E10 Rear working right, R, inner E11 Rear working light, L, outer	41	K 3 K 4	Relay, thermostart Starter switch relay	6 8
E12 Rear working light, L, inner	41	K 5	Starter switch relay	9
E13 Front working light, right	44	K 6	Relay, fan III	56
E14 Front working light, left E15 instrument lights	44 17	K 7 K 9	Break lights Relay , interval wiper	65 53
E16 Roof console lights	21	K10	Direction indicator relay	34
(E17) Seat heater	94	K14	Starter motor relay	4
(E19) Fog light, rear (E20) Parking light, right, Norway	35 29	(K17) K18		35 12
(E21) Parking light, left, Norway	30	KIO	Relay, Control stop	12
(E22) Registration plate light	32	M 1	Starter motor	3
(E23) Upper head light, right (E24) Upper head light, left	24 23	M 2	Heating fan	55 50
(E25) Parking light, upper, right	22	M 3 M 4	Windscreen wiper Windscreen washer	53 51
(E26) Parking light, upper, left	22	(M 5)	Rear window wiper	49
F 1 15 A Hazard light, reserve	21	(M 6)	Rear window washer	48
F 1 15 A Hazard light, reserve F 2 5 A Radio, clock, tachograph	31 2	(M 7) (M 8)	Floor fan Water pump	57 98
F 3 10 A High beam, indicator light	25	(5)	Trate: pamp	00
F 4 10 A Low beam	25	P 1	Engine coolant gauge	16
F 5 5 A Parking lights, left F 6 5 A Parking lights, right	28 30	P 2 P 3	Fuel gauge Rev. counter	17 18
F 7 10 A Front working lights	44	P 4	Hour meter/working height	19
F 8 20 A Light switch	28	(P 4)	Agrodata – instrument	
F 9 15 A Trailer socket/rear fog light F10 15 A Heat/starter switch, thermostart	35 4	(P 5)	Agrodata-instrument	94
F11 5 A Autocontrol (+bat), buzzer	83	Q 1	Starter switch	4
F12 10 A Rotating warning light, cabin light	47	(Q2)	Main switch	3
F13 10 A Reserve F14 15 A Water pump	93 97	D 1	Thormostart	E
F15 20 A Fan III – speed	56	R 1 R 4	Thermostart Cigarette lighter	5 91
F16 10 A Rear working lights, inner	42		elgarette lighter	0.
F17 10 A Direction indicators, Agrodata	32	S 1	Switch, head lights	28
F18 5 A Instruments, warning lightsAutocontrol F19 10 A Combination switch, wiper return	17 51	S 2 S 3	Switch, rear working lights Switch, fan	41 55
F20 10 A Rear window wiper/ washer	48	S 4	Combination control	25,34,52
F21 15 A Fan I, II, air conditioner, floor fan	55	S 5	Switch, front working lights	43
F22 10 A Delta Power Shift F23 10 A Rear w. lights, outer	101 41	(S 6) S 7	Switch, rot. warning light	47 32
F24 10 A AC-4 control unit	62	S / (S 8)	Switch, hazard warning flashers Switch, air conditioner	32 54
F25 10 A Seat with air suspension, seat heating,		Š 9 ´	Starter safety switch	4
rear steering prevention	93	S10	Brake light contact, right	65
F26 10 A Back buzzer, trailer brakes F27 10 A Braking lights	96 65	S11 S12	Fuel gauge sender unit Pressure drop indicator, air filter	17 7
F28 10 A Reserve (Telephone)	99	S12	Engine oil press. sender unit	8
F29 10 A Cigarette lighter, power socket	91	S15	Sender unit to hand brake ind. light	12
F30 10 A ACIV sensors (F31) 15 A Electric air filter	66 97	S16 S17	Gearbox cil pressure sender unit	13 9
G 1 Battery	1	317	Gearbox oil pressure sender unit	9
G 2 Alternator	4			


	1_1-1995 Model	Code	Page
35. Autocontrol IV	6600E 15. 4. 1995 8100E-8750E	350	13

Sym-	Component	Cod-	Sym- bol	Component	Cod- no
bol	Component	no	A3E	Compensator	82
S18 (S19) S20 S23	Engine temperature sender unit (stop) Air cond. compressor press. switch Brake light contact, left Switch, Delta Power Shift, selector	16 54 65 102	B1E B2E B3E	Position sensor Draft sensor, R.H Draft sensor, L.H	81 81 81
(S23) S24 (S26)	Extra sw., Delta Power Shift, selector Switch, Delta Power Shift release Switch, rear fog light	102 100 35	E1E E2E	Lighting, switch panel Lighting, position potentiometer	87 88
(\$27) \$28 \$29 (\$31) (\$32) (\$33) (\$34) (\$35) \$36 (\$37) (\$38) \$42 \$43	Switch, back buzzer Switch, PTO 540 Switch, PTO 1000/ 540E Switch, floor fan Switch, rear window washer and wiper Change over sw., head lights up Switch, water pump Rear steering prevention Switch, Control stop Switch, Agrodata—unit Switch, Front PTO Door switch, right, cab light Door switch, left, cab light	66 66 57 48 23 97 94 4 94	S1E S2E S3E S4E S5E S6E S7E S8E S9E S10E S11E	Potentiometer, pos.control Switch, rear operation, r.h., lifting Switch, rear operation, r.h., lowering Switch, rear operation, l.h., lifting Switch, rear drive, l.h., lowering Switch, inside, lifting Switch, inside, lowering Switch, lowering speed Switch, top limit Switch, sensitivity /mixing Switch, lifting /lowering Switch, forced lowering Connector housing, 9 pole.,	87 84 84 83 85 85 87 87 87 88 86
V 14 V 3	Diodes (Y1, Y2, Y3, Y4, Y6) Diod, Control stop		AZE	EH – supply, rear push buttons	
X 1 X 2 X 3	Connector, 9—pole, distribution box Connector, 9—pole, distribution box		Y1E Y2E	Solenoid valve, lowering Solenoid valve, lifting	81 81
X 4 X 5 X 6	Connector, 9—pole, distribution box Connector, 9—pole, distribution box Connector, 9—pole, distribution box Connector, 9—pole, distribution box		AC IV A1C A2C	UNIT: ACIV- control unit (red connector) ACIV- control unit	61,66 61,66
X 7 (X 8) X 9 X10 X11 X12 X13 X14 (X15) (X16)	Connector, 9—pole, distribution box Conn., 2—pole, power socket Connector, 9—pole, combination control Connector, 9—pole, combination control Connector, 9—pole, upwards Connector, 9—pole, rearwards, right Connector, 9—pole, solenoid valves. Connector, 9—pole, rearwards, left Connector, 3—pole, air cond., diodes Connector, 3—pole, cigarette lighter,	92	B1C B2C B3C B4C B5C B7C B8C B9C B10C	Speed sensor, rear wheel Speed sensor, gearbox Speed sensor, PTO Speed sensor, engine Velocity sensor, front axle Radar Potentiometer, accelerator Temperature sensor, thermostart Outside temperature sensor	61 61 61 68 65 63 19
X17 (X18)	current socket Trailer socket, 7-pole Connector, 2-pole, rear window washer	32	H1C H2C	Buzzer, slip Led, slip control	89
X19 X20 (X22) X23	Connector, 24—pole, front wall Connector, 9—pole, front direction indicator Connector, 2 pole, rot. roof light Connector, 3—pole,Delta Power Shift, extra switches		\$1C \$2C \$3C \$4C \$5C	Switch, diff. lock, autom./ manual Switch, Delta Power Shift autom./man. Switch, 4WD, autom./manual Switch, steering angle Switch, slip control	68 102 67 69
X24 (X25) X26 X27 (X29) X31 X32 (X33) (X34) (X35)	Connector, 9 pole, upwards Connector, 9 pole, Agrodata—instr. Connector, 26 pole, instr. left, white. Connector, 26 pole, instr. right, blue Connector, 2-pole, stop—alarm Socket, 2-pole, PTO—emerg. stop Connector, 1 pole, electric stop Connector, 3-pole, fog light, rear Connector, 9-pole, Agrodata sensor Connector, 9-pole, ETB supply	68	X1C X2C X3C X5C X6C X7C X10C X11C X12C	Connector housing, 9-pole, sources/solenoids Connector housing, 15-pole, wheel sensors Connector housing, 9-pole, rear socket Connector housing, 15-pole, sensors switches Conn. housing, 12-pole, EH-card Connector housing, EH wiring assy Connector housing, 8-pole, RS232/RS485 Conn. housing, 9-pole, display Rear socket, 13-pole	87 61 61 71
Y 1 Y 2 Y 3 Y 4 (Y 5) Y 6 (Y7) Y8 (Y9)	Connector, 9—pole, seat Solenoid valve, diff. lock Solenoid valve PTO Solenoid valve 4WD Solenoid valve, Delta Power Shift Solenoid valve compressor (air.cond.) Solenoid valve, Delta Power Shift Solenoid valve, rear steering prevention Solenoid, engine stop Solenoid, front PTO	63 68 66 100 54 102 94 4	Wire of Ru = 1 k	red vellow lue black reen vhite grey	
	Earth lead, rear lights, solenoids Earth lead, roof Earth lead, autocontrol Earth lead, cable harness, instr. panel Earth lead, battery Earth lead, headlights Earth lead, cabin Earth lead, electrical stop CONTROL POWER LIFT:				

AUTOCONTROL POWER LIFT:
A1E Autocontrol
A2E Autocontrol, switch panel


		Model	Code	Page
35. Autocontrol IV	1. 1. 1995	6600E 8100E-8750E	350	14

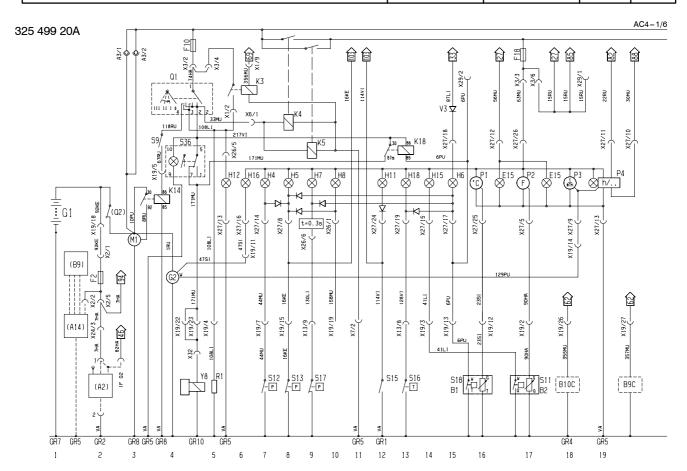


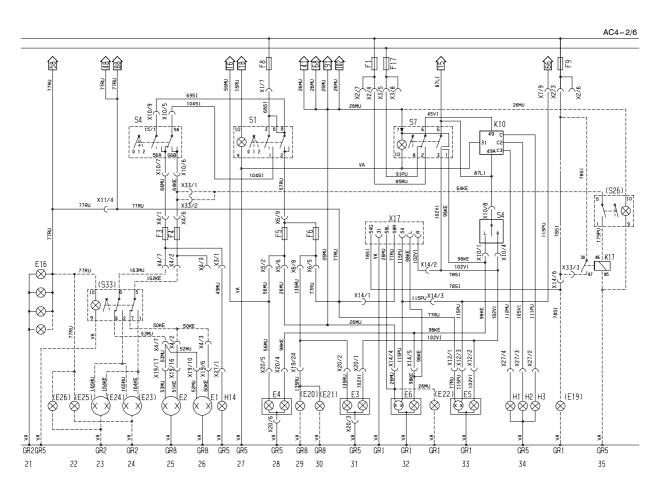

Model 6600E 8100E-8750E Code **350**

Page 16

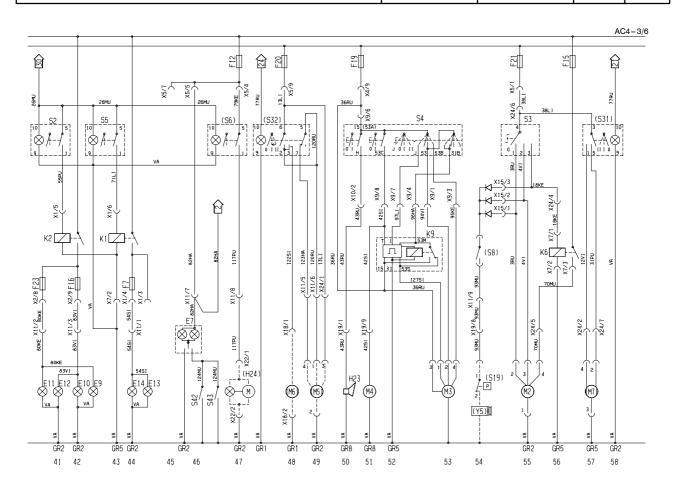


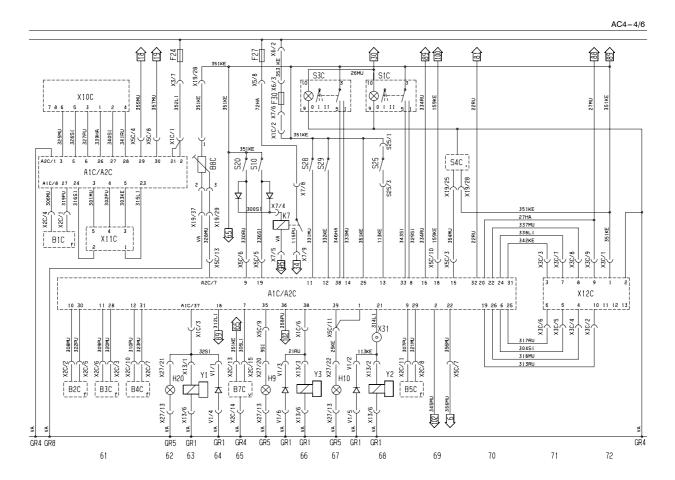


Model 6600E 8100E-8750E Code **350**

17

Page

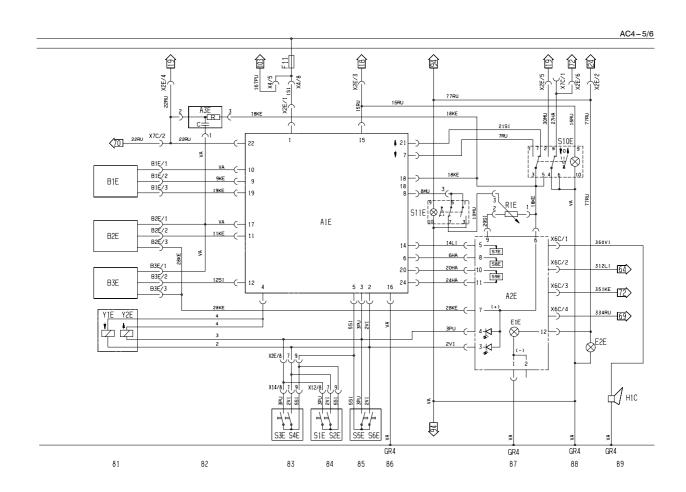

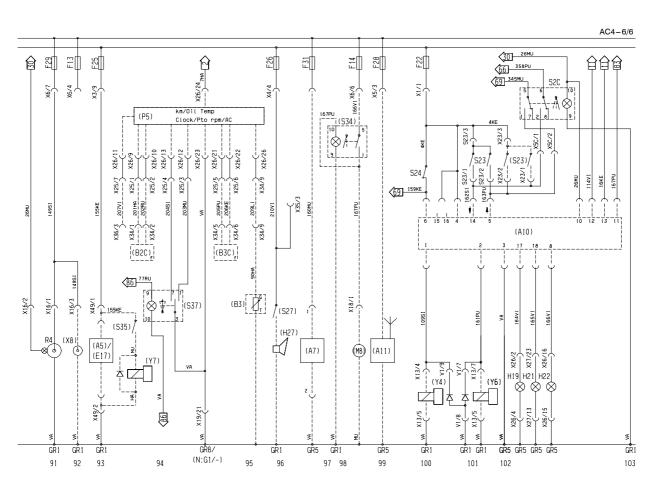



	15. 5. 19 96 M	Model	Code	Page
35. Autocontrol IV	1. 4. 1997	600E-8750E	350	19

F25

15A Seat with air suspension, seat heating, rear steering prevention 10 A Back buzzer, trailer brakes,

93

Wiring diagram, E-models,
F17107- F50111

F17	107- F50111	·	F26	10 A Back buzzer, trailer brakes,	
_	ams on pages 350/23-25 . Incl. new cannot relay control for PTO.	ab wire loom	F27 F28	Sigma 10 A Braking lights 10 A Reserve (Telephone)	61 97
	,		F29	10 A Cily sansara BTO	91
Sym-		Code	F30 (F31)	10 A ACIV sensors, PTO 15 A Electric air filter	64 97
bol	Component	no		_	
(A2)	Radio	2	G 1 G 2	Battery Alternator	1 4
A3	Electric centre	00	G Z	Alternator	4
(A5)	Air suspension seat	93	H 1	Indicator light, direction indicator III	34
(A7)	Electric air filter	97	H 2	Indicator light, direction indicator II	34
À1Ó	Control unit, Delta Power Shift	101	H 3 H 4	Indicator light, direction indicator I Indicator light, air filter	34 7
	Telephone	97	H 5	Indicator light, an inter	8
	Control unit, Sigma Tachograph	1	H 6	Warning light, stop, engine temp.	15
(414)	racriograph		H 7	Indicator light, gearbox oil pressure	9
B 1	Sensor, engine temperature	16	(H8) H 9	Indicator light, gearbox oil filter Indicator light, 4WD	10 69
B 2	Sensor, fuel gauge	17	H10	Indicator light, PTO	98
(B4)	Sensor, Sigma, crankshaft		H11	Indicator light, parking brake	12
(B5)	Sensor, Sigma, PTO		H12	Indicator light, Thermostart	6
(B9)	Sensor, tachograph	1	H14 H15	Indicator light, main beams Indicator, low fuel level	27 14
- 4		20	H16	Indicator, low identever	6
E 1 E 2	Headlights, right	26 25	H18	Indicator light, gearb. oil temp.	13
E3	Headlights, left Front indicator, R.H	31	H19	Indicator light, DPS I	102
E 4	Front indicator, L.H	28	H20 H21	Indicator light, diff. lock	68 102
E 5	Rear light, right	33	H22	Indicator light, DPS II Indicator light, DPS III	102
E 6 E 7	Rear light, left	32 46	H23	Horn	50
E / E 9	Cabin light Rear working light, R, outer	46 42		Rotating roof beacon	47
E10	Rear working right, R, inner	42	(H27)	Back buzzer	94
E11	Rear working light, L, outer	41	14.4	B	40
E12 E13	Rear working light, L, inner	41 44	K 1 K 2	Relay, front working lights Relay, rear working lights	43 41
E13	Front working light, right Front working light, left	44	K3	Relay, thermostart	6
E15	instrument lights	17	K 4	Starter switch relay	8
E16	Roof console lights	21	K 5	Starter switch relay	9
(E17)		93 35	K 6 K 7	Relay, fan III Brake lights	56 61
(E19) (E20)	Fog light, rear Parking light, right, Norway	29	K9	Relay, interval wiper	53
	Parking light, left, Norway	30	K10	Direction indicator relay	34
(E22)		32	K14	Starter motor relay	4
; _ ;	Upper head light, right	24	K16 (K17)	Relay, PTO – emergency stop Relay, rear fog light	99 35
(E24) (E25)	Upper head light, left Parking light, upper, right	23 22	K18	Relay, Control stop	13
(E26)		22	K19	Relay, display control, Sigma	
г.	15 A Hazard light records	01	M 1	Starter motor	3
F 1 F 2	15 A Hazard light, reserve 5 A Radio, clock, tachograph	31 2	M 2	Heating fan	55
F 3	15 A High beams, indicator light	<u>2</u> 5	М 3	Windscreen wiper	53
F 4	15 A Low beams	25	M 4	Windscreen washer	51
F 5 F 6	5 A Parking lights, left	28 30		Rear window wiper Rear window washer	49 48
F 7	5 A Parking lights, right 10 A Front working lights	44	(M 7)	Floor fan	57
F 8	20 A Light switch	28	(M 8)	Water pump	96
F 9	15 A Trailer socket/rear fog light	35	В.4	Facina applications as	10
F10	15 A Heat/starter switch,	4	P 1 P 2	Engine coolant gauge Fuel gauge	16 17
F11	thermostart 5 A Autocontrol (+bat), buzzer 8:	4 2,103	P 3	Rev. counter	18
F12	10 A Rot. warning light, cabin light	47	P 4	Hour meter/working height	19
F13	10 A Reserve	92	0.4	Observation and Mark	4
F14 F15		4,96 56	Q 1 (Q2)	Starter switch Main switch	4 3
F16	20 A Fan III – speed 10 A Rear working lights, inner	42	(&2)	Widin Switch	3
F17	10 A Direction indicators	32	R 1	Thermostart	5
F18	5 A Instruments, warning lights	. —	R 4	Cigarette lighter	91
F19	Autocontrol 10 A Combination switch, wiper return	17 n 51	S 1	Switch, head lights	28
F20	10 A Rear window wiper/ washer	48	S 2	Switch, rear working lights	41
F21	15 A Fan I,II, air conditioner, floor fan	55	S 3	Switch, fan	55
F22	10 A Delta Power Shift	100	S 4	Combination control	25,34,52
F23 F24	10 A Rear w. lights, outer 10 A AC-4 control unit	41	S 5 (S 6)	Switch, front working lights Switch, rot, warning light	43 47
ı 4 4	ht	tps://tract	ormanua	alz.com/	71
		•	403		


35. Autocontrol IV		-	_		Model	Code	Page
- Autocomioniv			15	5. 5. 1996	6600E-8750E	350	20
ym_	Code	Y 1	S	Solenoid valve	, diff. lock		68
ol Component	no	Y 2		Solenoid valve			99
7 Switch, hazard warning flashers	32	Y 3		olenoid valve			69
8) Switch, air conditioner	54	Y 4			, Delta Power Shift,	,	100
9 Starter safety switch	4	(Y 5)		Solenoid valve	compressor		- 4
10 Brake light contact, right11 Fuel gauge sender unit	62 17	Y 6		air.cond.)	Dolto Bower Chift		54 101
Pressure drop indicator, air filter	7	(Y7)		Solenoid valve	, Delta Power Shift,	,	101
13 Engine oil press. sender unit	8	(17)		teering prever			94
Sender unit to hand brake ind. light	12	Y8		Solenoid, engir			4
16 Gearbox temperature sender unit	13	(Y9)	S	Solenoid, front			-
17 Gearbox oil pressure sender unit	9	(Y13	3) S	Solenoid valve	, Sigma		
18 Engine temp. sender unit (stop)	16	(Y16	3) S	Solenoid, Cold	cranking		
19) Air cond. compressor press. switch	54		_				
20 Brake light contact, left	62	GR1			r lights, solenoids		
23 Switch, Delta Power Shift, selector	102	GR2		arth lead, roo			
23) Extra sw., Delta Power Shift, selector	102	GR4		arth lead, aut		onol	
24 Switch, Delta Power Shift release 25 Switch, PTO	100 99	GR5			ole harness, instr. p	anei	
,	99 35	GR7 GR8		arth lead, bat			
26) Switch, rear fog light 327) Switch, back buzzer	94	GR9		arth lead, hea arth lead, cab			
28 Switch, PTO 540	94 99			tarrn lead, cab Earth lead, elec			
29 Switch, PTO 1000/ 540E	99 98	uni	J E	.a	στισαι στορ		
31) Switch, floor fan	96 57	ΔCD) P(WER LIFT:			
32) Switch, rear window washer and wiper	48	700					
33) Change over sw., head lights up	23	A1E	Α	utocontrol			82
34) Switch, water pump	96	A2E		utocontrol, sw	vitch panel		83
35) Rear steering prevention	93	A3E		Compensator			82
Switch, Control stop	4						
38) Switch, Front PTO		B1E	Р	osition sensor	r		81
Door switch, right, cab light	46	B2E		raft sensor, R			81
I3 Door switch, left, cab light	46	B3E		raft sensor, L.			81
44) Indicator light switch, gearbox filter	10	(B4E		osition sensoi			81
49) Change over switch, rpm-/flow sensor		`	,		, 1		
50) Change over switch, speed sensor		E1E		ighting, switch	n panel		83
tractor / implement		E2E	L	ighting, position	on potentiometer		83
4 Diodes (Y1, Y2, Y3, Y4, Y6)		D4E	_)_4			00
Diod, Control stop		R1E	Р	otentiometer,	pos .controi		83
1 Connector, 9-pole, distribution box		045	_		avatian ula liftima		00
Connector, 9-pole, distribution box Connector, 9-pole, distribution box		S1E S2E			eration, r.h., lifting	na	82 82
Connector, 9-pole, distribution box Connector, 9-pole, distribution box		S3E			eration, r.h., loweri eration, l.h., lifting	ng	82
5 Connector, 9 – pole, distribution box		S4E			ve, I.h., lowering		82
6 Connector, 9—pole, distribution box		S5E			lifting / lowering		82
7 Connector, 9—pole, distribution box		OOL		witch, inside,	mang / lowering		02
8) Conn., 2–pole, power socket	92	S7E	S	Switch, lowerin	a speed		83
Connector, 9 – pole, combination control	02	S8E		Switch, top lim			83
0 Connector, 9-pole, combination control		S9E		Switch, sensitiv			83
1 Connector, 9-pole, up		S10E		vitch, Íifting /lo			83
2 Connector, 9-pole, rearwards, right				vitch, forced lo			83
3 Connector, 9-pole, solenoid valves.					alance system / sli	р	83
4 Connector, 9-pole, rearwards, left				•	-		
15) Connector, 3-pole, air cond., diodes	54	X1E			sing, 9 pole, speed	d sensors	
16) Connector, 3-pole, cigarette lighter,		X2E	С	Connector hou	sing, 9 pole,		
current socket	91		Е	H- supply, r	ear push buttons		
7 Trailer socket, 7-pole	32						
18) Connector, 2-pole, rear window washer		Y1E		Solenoid valve			82
9 Connector, 32-pole, front wall		Y2E	S	Solenoid valve	, lifting		82
O Connector, 9-pole, front direction							
indicator		(OP)	HON	NAL EQUIPME	ENT IN PARENTHE	SES)	
22) Connector, 2 pole, rot. roof light							
3 Connector, 3-pole, Delta Power Shift,							
extra switches							
Connector, 9 pole, upwards Connector, 26 pole, instr. left, white.							
Connector, 26 pole, instr. left, white. Connector, 26 pole, instr. right, blue							
29) Connector, 2–pole, tristr. right, blue							
1 Socket, 2-pole, PTO-emerg. stop	99						
2 Connector, 1 pole, electric stop	33						
33) Connector, 3-pole, fog light, rear							
35) Connector, 9-pole, log light, real 35) Connector, 9-pole, Sigma supply							
36) Reserve							
38) Reserve							
39) Reserve							
(40) Reserve							
	//tractor	manı	-ادر	z com/			
HUDS.	ıı u aulul	ıııaııu	ıaı	∠.∪UIII/			


	Model	Code	Page
35. Autocontrol IV	15. 5. 1996 6600E-8750E	350	21


	Code
Component	no
UNIT:	
ACIV – control unit (red connector) ACIV – control unit	62-7 62-7
Speed sensor, rear wheel Speed sensor, gearbox Speed sensor, PTO Speed sensor, engine Velocity sensor, front axle Radar Potentiometer, accelerator Temperature sensor, thermostart Outside temperature sensor	62 63 64 65 66 67 65 63 66
Switch, diff. lock, autom./ manual Switch, Delta Power Shift autom./man. Switch, 4WD, autom./manual Switch, steering angle	71 102 70 64
Connector housing, 9-pole, sources/solenoids Connector housing, 15-pole, wheel sensors Connector housing, 9-pole, rear socket Connector, 9-pole, sensors, tractor's front particular from the connector housing, 15-pole,	72 art
sensors, switches Not in use Connector housing, 3-pole, EH wiring assy Connector housing, 8-pole, RS232/RS485 Conn. housing, 9-pole, display Rear socket, 13-pole	68 71 72
	UNIT: ACIV – control unit (red connector) ACIV – control unit Speed sensor, rear wheel Speed sensor, gearbox Speed sensor, PTO Speed sensor, PTO Speed sensor, engine Velocity sensor, front axle Radar Potentiometer, accelerator Temperature sensor, thermostart Outside temperature sensor Switch, diff. lock, autom./ manual Switch, Delta Power Shift autom./man. Switch, 4WD, autom./manual Switch, steering angle Connector housing, 9 – pole, sources/solenoids Connector housing, 15 – pole, wheel sensors Connector housing, 9 – pole, rear socket Connector, 9 – pole, sensors, tractor's front pa Connector housing, 15 – pole, sensors, switches Not in use Connector housing, 3 – pole, EH wiring assy Connector housing, 8 – pole, RS232/RS485 Conn. housing, 9 – pole, display

Wire colours Ru = brown Pu = red Ke = yellow Si = blue Mu = black Vi = green Va = white Ha = grey Li = lilac

		Model	Code	Page
35. Autocontrol IV	15. 5. 1996	6600E-8750E	350	22

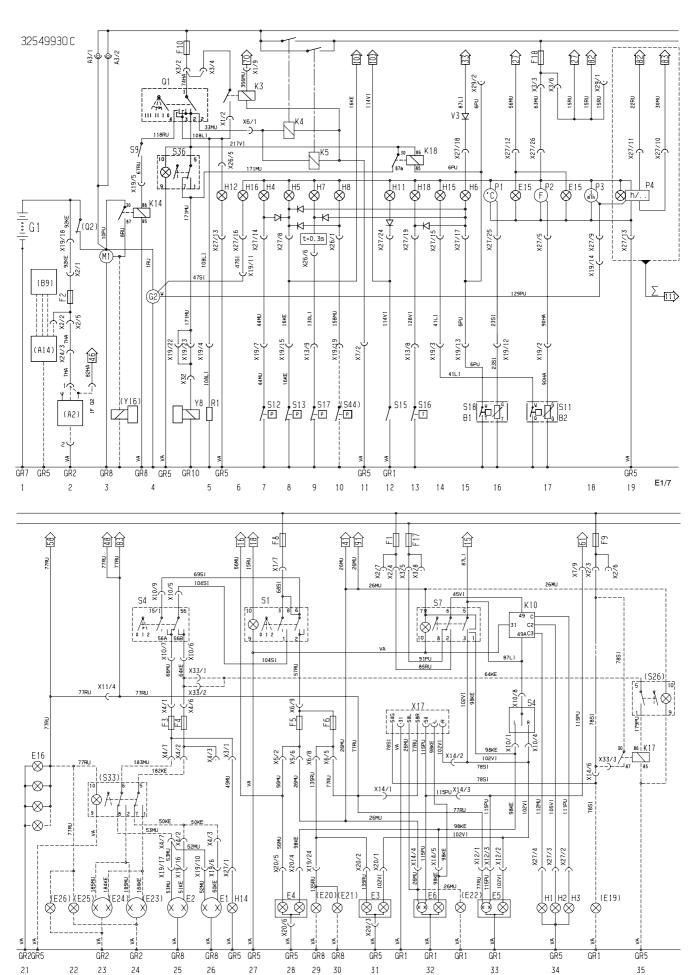

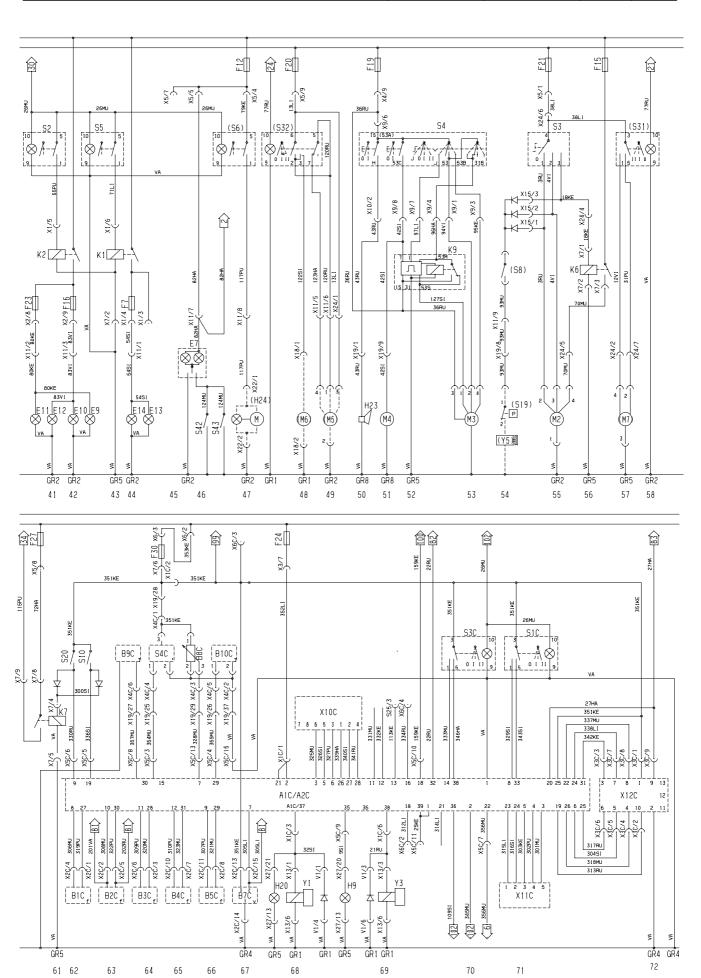

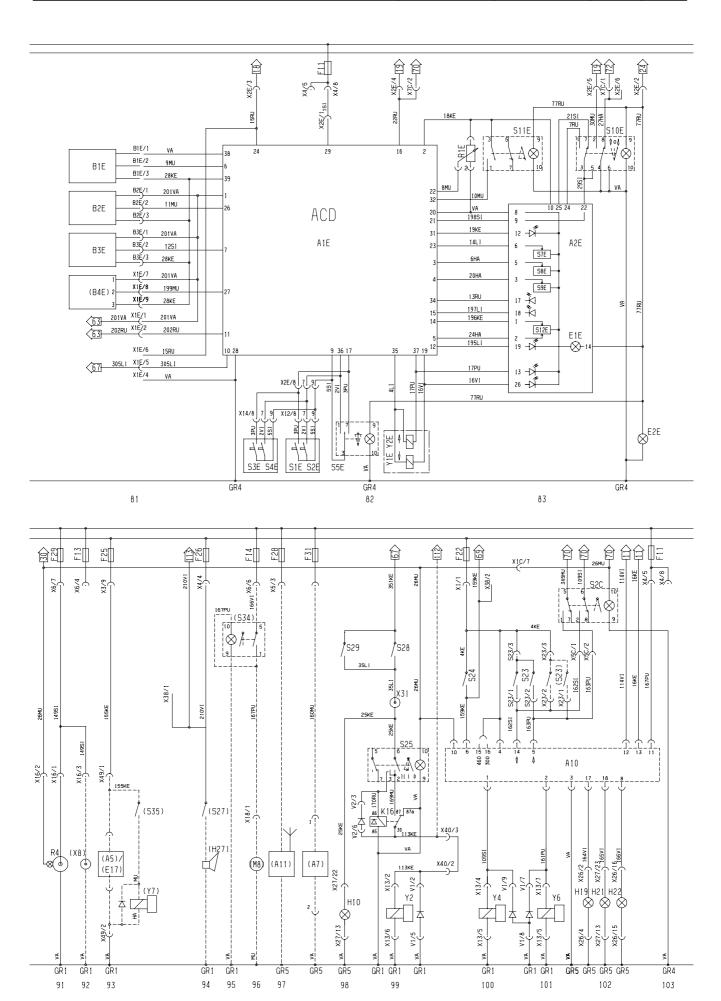

		Model	Code	Page
35. Autocontrol IV	1. 4. 1997	6600E-8750E	350	27

	ing diagram, E–models, 112–		F25	15A Seat with air suspension, seat heating, rear steering prevention	93
Diagra	ams on pages 350/31-34. Incl. modifications	s of dis-	F26 F27	10 A Back buzzer, trailer brakes, Sigma 10 A Braking lights	61
tributio	on box.		F28	10 A Reserve (Telephone)	97
Sym-		Code	F29 F30	10 A Cigarette lighter, power socket 10 A ACIV sensors, PTO	91 64
bol	Component	no		15 A Electric air filter	97
(A2)	Radio	2	G 1	Battery	1
A3 (A5)	Electric centre Air suspension seat	93	G 2	Alternator	4
(47)	Floatric oir filter	97	H 1 H 2	Indicator light, direction indicator III	34 34
(A7) A10	Electric air filter Control unit, Delta Power Shift	101	п 2 Н 3	Indicator light, direction indicator II Indicator light, direction indicator I	34
	Telephone	97	H 4	Indicator light, air filter	7
	Control unit, Sigma	113	H 5	Indicator light, engine oil pressure	8
(A14)	Tachograph	1	H 6	Warning light, stop, engine temp.	15
В1	Sensor, engine temperature	16	H 7 (H8)	Indicator light, gearbox oil pressure Indicator light, gearbox oil filter	9 10
B 2	Sensor, fuel gauge	17	H 9	Indicator light, 4WD	69
	, 3 3		H10	Indicator light, PTO	98
(B4)	Sensor, Sigma, crankshaft	114	H11	Indicator light, parking brake	12
(B5) (B9)	Sensor, Sigma, PTO	114 1	H12 H14	Indicator light, Thermostart	6 27
(69)	Sensor, tachograph	ı	H15	Indicator light, main beams Indicator, low fuel level	14
E 1	Headlights, right	26	H16	Indicator light, charging	6
E 2	Headlights, left	25	H18	Indicator light, gearb. oil temp.	13
E 3	Front indicator, R.H	31	H19	Indicator light, DPS I	102
E 4 E 5	Front indicator, L.H Rear light, right	28 33	H20 H21	Indicator light, diff. lock Indicator light, DPS II	68 102
E6	Rear light, left	32	H22	Indicator light, DPS III	102
E 7	Cabin light	46	H23	Horn	50
E 9	Rear working light, R, outer	42	(H24)	•	47
E10 E11	Rear working light Louter	42 41	(H27)	Back buzzer	94
E12	Rear working light, L, outer Rear working light, L, inner	41	12.4	B. ()	40
E13	Front working light, right	44	K 1 K 2	Relay, front working lights Relay, rear working lights	43 41
E14	Front working light, left	44	K3	Relay, thermostart	6
E15 E16	instrument lights Roof console lights	17 21	K 4	Starter switch relay	8
(E17)	Seat heater	93	K 5	Starter switch relay	9
(E19)		35	K 6 K 7	Relay, fan III Brake lights	56 61
(E20)	Parking light, right, Norway	29	K9	Relay, interval wiper	53
(E21) (E22)	Parking light, left, Norway	30 32	K10	Direction indicator relay	34
	Registration plate light Upper head light, right	24	K14	Starter motor relay	4
	Upper head light, left	23	K16 (K17)	Relay, PTO – emergency stop Relay, rear fog light	99 35
(E25)		22	K18	Relay, Control stop	13
(E26)	Parking light, upper, left	22	K19	Relay, display control, Sigma	112
F 1	15 A Hazard light, reserve	31	M 1	Starter motor	3
F 2 F 3	5 A Radio, clock, tachograph 15 A High beams, indicator light	2 25	M 2	Heating fan	55
F 4	15 A Low beams	25	M 3 M 4	Windscreen wiper Windscreen washer	53 51
F 5	5 A Parking lights, left	28		Rear window wiper	49
F 6	5 A Parking lights, right	30		Rear window washer	48
F 7 F 8	10 A Front working lights 20 A Light switch	44 28	(M 7)		57
F 9	15 A Trailer socket/rear fog light	35	(M 8)	Water pump	96
F10	15 A Heat/starter switch,		P 1	Engine coolant gauge	16
E11	thermostart	4	P 2	Fuel gauge	17
F11 F12	5 A Autocontrol (+bat), buzzer 82,103 10 A Rot. warning light, cabin light	47	P 3	Rev. counter	18
F13	10 A Reserve	92	P 4	Hour meter/working height	19
F14	15 A Water pump 94,96		Q 1	Starter switch	4
F15 F16	20 A Fan III – speed 10 A Rear working lights, inner	56 42	(Q2)	Main switch	3
F17	10 A Direction indicators	42 32			_
F18	5 A Instruments, warning lights	<u>-</u>	R 1 R 4	Thermostart Cigarette lighter	5 91
	Autocontrol	17	11. 4	Organistic lightel	91
F19	10 A Combination switch, wiper return	51 48	S 1	Switch, head lights	28
F20 F21	10 A Rear window wiper/ washer 15 A Fan I,II, air conditioner, floor fan	48 55	S 2	Switch, rear working lights	41
F22	10 A Delta Power Shift	100	S 3 S 4	Switch, fan Combination control	55 25,34,52
F23	10 A Rear w. lights, outer	41	S 5	Switch, front working lights	25,54,52 43
F24	10 A AC-4 control unit	68	(S 6)	Switch, rot. warning light	47
	https:/	vtractor/	manua	alz.com/	

https://tractormanualz.com/


35. Autocontrol IV]	_		Model	Code	Page
33. Adiocomion iv			1	. 4. 1997	6600E-8750E	350	28
sym-	Code	Y 1		Solenoid valve	, diff. lock		68
ol Component	no	Y 2		Solenoid valve			99
7 Switch, hazard warning flashers S8) Switch, air conditioner	32 54	Y 3 Y 4		Solenoid valve			69 100
9 Starter safety switch	5 4 4	(Y 5)		Solenoid valve	, Delta Power Shift,		100
10 Brake light contact, right	62	(1.5)		(air.cond.)	Compressor		54
11 Fuel gauge sender unit	17	Y 6			, Delta Power Shift,		101
12 Pressure drop indicator, air filter	7	(Y7)		Solenoid valve			
13 Engine oil press. sender unit	8	()		steering prever			94
15 Sender unit to hand brake ind. light	12	Y8		Solenoid, engir	ne stop		4
16 Gearbox temperature sender unit	13	(Y9)		Solenoid, front			
17 Gearbox oil pressure sender unit	9			Solenoid valve			113
18 Engine temp. sender unit (stop)	16 54	(116	5)	Solenoid, Cold	cranking		3
S19) Air cond. compressor press. switch 20 Brake light contact, left	5 4 62	GR1		Farth lead rea	r lights, solenoids		
23 Switch, Delta Power Shift, selector	102	GR2		Earth lead, roo			
623) Extra sw., Delta Power Shift, selector	102	GR4		Earth lead, auto			
24 Switch, Delta Power Shift release	100	GR5			ole harness, instr. p	anel	
25 Switch, PTO	99	GR7		Earth lead, batt			
S26) Switch, rear fog light	35	GR8	3	Earth lead, hea	ıdlights		
S27) Switch, back buzzer	94	GR9		Earth lead, cab			
28 Switch, PTO 540	99	GR1	0	Earth lead, elec	ctrical stop		
29 Switch, PTO 1000/ 540E	98		_				
S31) Switch, floor fan	57	ACL	P	OWER LIFT:			
632) Switch, rear window washer and wiper	48	۸ . ۲		Autocontrol			90
633) Change over sw., head lights up 634) Switch, water pump	23 96	A1E A2E		Autocontrol Autocontrol, sw	vitah nanal		82 83
635) Rear steering prevention	93	A3E		Compensator	viicii pariei		82
36 Switch, Control stop	4	AOL		Compensator			0Z
S38) Switch, Front PTO		B1E		Position sensor	r		81
42 Door switch, right, cab light	46	B2E		Draft sensor, R	.Н		81
43 Door switch, left, cab light	46	B3E		Draft sensor, L.	Н		81
644) Indicator light switch, gearbox filter	10	(B4I	E)	Position sensor	r, implement		81
Change over switch, rpm-/flow sensor							
650) Change over switch, speed sensor tractor / implement		E1E E2E		Lighting, switch	n panel on potentiometer		83 83
·		LZL		Lighting, positi	on potentiometer		03
14 Diodes (Y1, Y2, Y3, Y4, Y6) Biod, Control stop		R1E		Potentiometer,	pos .control		83
•				,	'		
 Connector, 9-pole, distribution box Connector, 9-pole, distribution box 		S1E		Switch rear on	eration, r.h., lifting		82
3 Connector, 9—pole, distribution box		S2E			eration, r.h., loweri	na	82
4 Connector, 9—pole, distribution box		S3E			eration, I.h., lifting	9	82
5 Connector, 9-pole, distribution box		S4E			ve, I.h., lowering		82
6 Connector, 9-pole, distribution box		S5E		Switch, inside,	lifting / lowering		82
7 Connector, 9-pole, distribution box							
(8) Conn., 2-pole, power socket	92	S7E		Switch, lowerin			83
9 Connector, 9-pole, combination control		S8E		Switch, top lim			83
Connector, 9—pole, combination control		S9E		Switch, sensitiv			83
11 Connector, 9-pole, up 12 Connector, 9-pole, rearwards, right				Switch, lifting /lo Switch, forced lo			83 83
13 Connector, 9-pole, solenoid valves.					alance system / sli	n	83
14 Connector, 9-pole, rearwards, left		012	_	Owner, arive b	alarice system / sil	P	00
(15) Connector, 3-pole, air cond., diodes	54	X1E		Connector hou	sing, 9 pole, speed	sensors	
(16) Connector, 3-pole, cigarette lighter,	01	X2E		Connector hou		2 00110010	
current socket	91				ear push buttons		
17 Trailer socket, 7-pole	32			11.37	•		
(18) Connector, 2-pole, rear window washer		Y1E		Solenoid valve	, lowering		82
19 Connector, 32-pole, front wall		Y2E		Solenoid valve	, lifting		82
20 Connector, 9-pole, front direction		(O.D.	- . ~		-	.050	
indicator		(OP	ПС	MAL EQUIPME	ENT IN PARENTHE	SES)	
(22) Connector, 2 pole, rot. roof light 23 Connector, 3 – pole, Delta Power Shift,							
the state of the s							
extra switches 24 Connector, 9 pole, upwards							
26 Connector, 26 pole, instr. left, white.							
Connector, 26 pole, instr. right, blue							
(29) Connector, 2-pole, stop- alarm							
31 Socket, 2-pole, PTO-emerg. stop	99						
32 Connector, 1 pole, electric stop							
(33) Connector, 3-pole, fog light, rear							
(35) Connector, 9-pole, Sigma supply							
(36) Reserve							
(38) Reserve							
(39) Reserve							
(40) Reserve							
X49) Connector, 2-pole, seat https://	//tractor	manı	ıa	Iz.com/			


		Model	Code	Page
35. Autocontrol IV	1. 4. 1997	6600E-8750E	350	29


Sym- bol	Component	Code no
AC IV	UNIT:	
A1C A2C	ACIV – control unit (red connector) ACIV – control unit	62-7 62-7
B1C B2C B3C B4C B5C B7C B8C B9C B10C	Speed sensor, rear wheel Speed sensor, gearbox Speed sensor, PTO Speed sensor, engine Velocity sensor, front axle Radar Potentiometer, accelerator Temperature sensor, thermostart Outside temperature sensor	62 63 64 65 66 67 65 63 66
S1C S2C S3C S4C	Switch, diff. lock, autom./ manual Switch, Delta Power Shift autom./man. Switch, 4WD, autom./manual Switch, steering angle	71 102 70 64
X1C X2C X3C X4C X5C X6C	Connector housing, 9-pole, sources/solenoids Connector housing, 15-pole, wheel sensors Connector housing, 9-pole, rear socket Connector, 9-pole, sensors, tractor's front particular forms of the sensors, switches Not in use	72 art
X7C X10C X11C X12C	Connector housing, 3-pole, EH wiring assy Connector housing, 8-pole, RS232/RS485 Conn. housing, 9-pole, display Rear socket, 13-pole	68 71 72

Wire colours
Ru = brown
Pu = red
Ke = yellow
Si = blue
Mu = black
Vi = green
Va = white
Ha = grey
Li = lilac


		Model	Code	Page
35. Autocontrol IV	1. 4. 1997	6600E-8750E	350	30

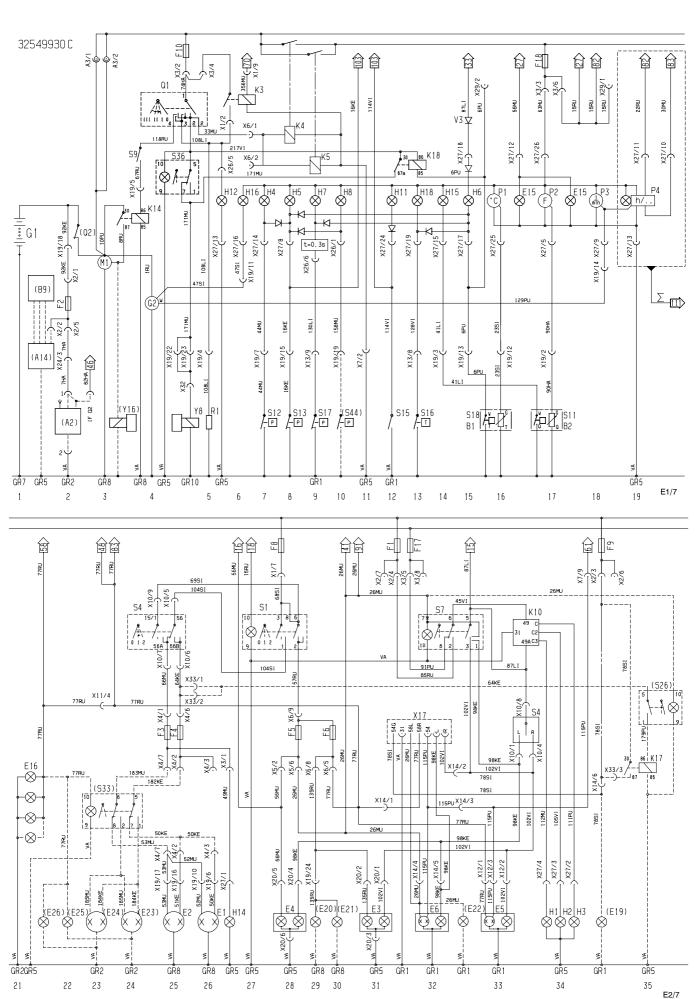

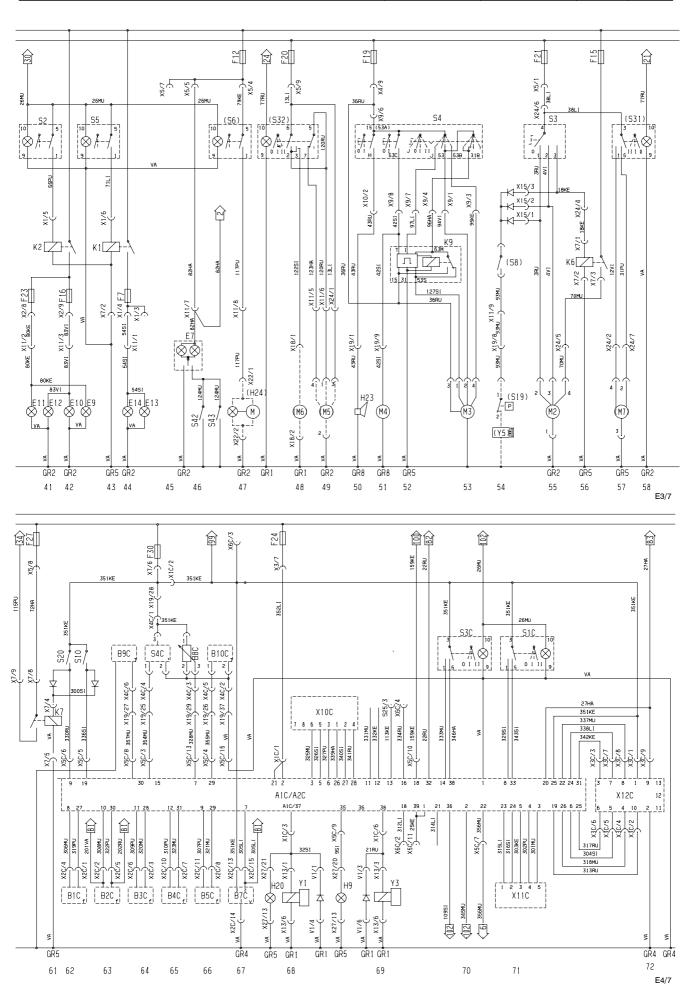

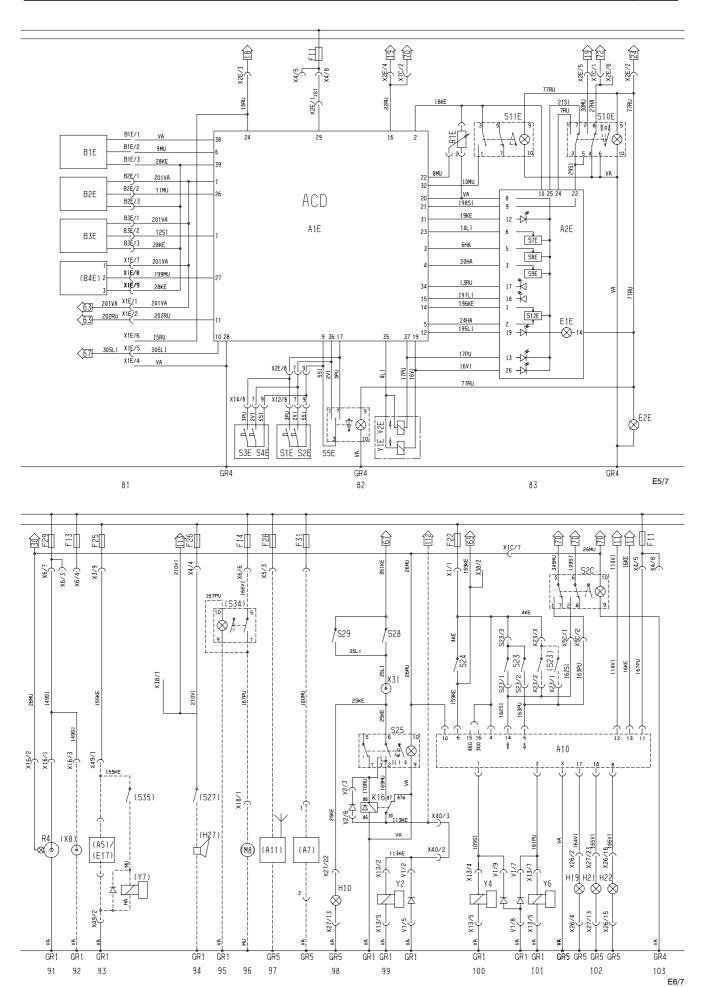

		Model	Code	Page
35. Autocontrol IV	1. 4. 1997	6600E-8750E	350	34

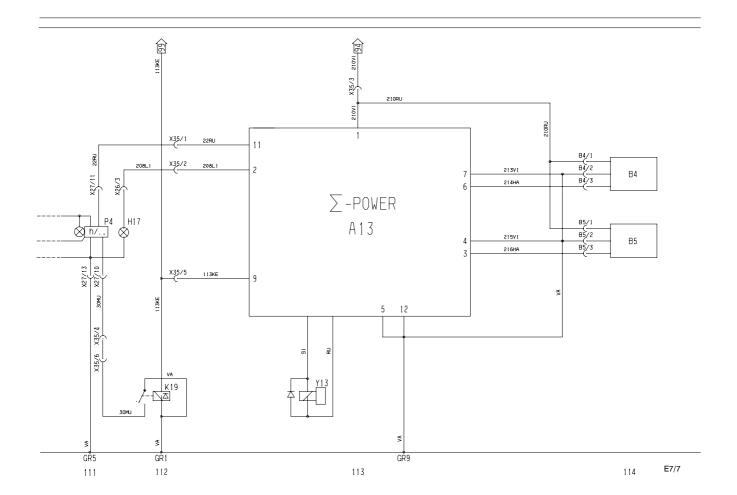



		Model	Code	Page
35. Autocontrol IV	1. 1. 1994	6600E 8100E-8750E	351	1

Fault tracing without microcomputer

(Computer aided trouble shooting, see code 352)

The usual malfunctions are caused by poor contacts in various connectors (moisture, impurities etc). The connectors and their locations are shown on pages 350/8-11. External wires can also damage when the tractor is in use.

Fault tracing of the radar and various sensors, see pages 351/2-4. Impurities on the sensors can cause malfunctions.

Fault tracing of the transmission controls, slip control and cold starting are carried out according to the functional checks on pages 351/5-7.

A possible malfunction can then be localised by measuring with a multimeter voltages or resistances from the pins of the ECS connectors A1C (lower) and A2C (upper). Connector pins have been numbered on the connectors.

Inputs

Input signals for controlling the transmission can be measured from the connector A2C pins. The connector must be attached to the ECS. The measurements are carried out according to the fault tracing tables in instructions under code **352** (computer—aided trouble shooting) (1=current signal, 0=no signal). Switches and pedals must be in the positions given in the tables. If no input signal shows, check the switch in question and its wiring.

Outputs

Output signals for controlling the transmission can be measured from the pins of connector A1C. Here must also be used the tables under code **352**. If a correct output signal comes, but the tractor does not function, check a solenoid valve and an indication light in question and their wirings. If output signal fails to show, the ECS is faulty. Output signals into the implement socket, see page **352/9**.

ECS (central processing unit)

If some control function functions in the manual control but not in the automatic control, the ECS can be damaged.


If the AC IV display unit only flashes and then switches off when the current is switched on, the ECS is faulty and should be changed.

If the ECS always uses the default parameter file although a correct file is input with a microcomputer, the ECS is faulty and should be changed.

When you measure output signals from the ECS, the lack of a signal indicates that the ECS is faulty and must be changed.

Supply voltages

- Switch on current to the tractor
- If Valmet name and time appears on the AC IV display, the unit is in order.
- If nothing appears on the display, check the AC IV unit fuses in the fusebox: **F30** (10 A) and **F24** (10 A).
- If the fuses are OK, disconnect the ECS upper connector A2C and measure supply voltages: pin 1 (earth), pin 2 (supply), pin 21 (supply) and pin 25 (supply).
- If there are not supply voltages, check supply voltage wirings and connectors.
- If there are supply voltages, the central unit ECS is faulty or the display unit is defective.

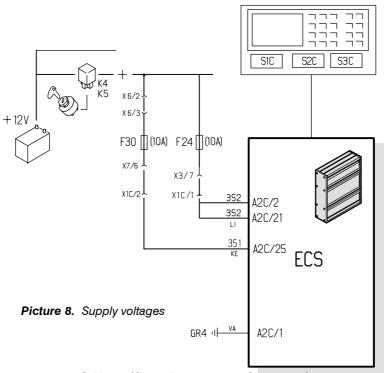

	1 + 1994 Model	Code	Page
35. Autocontrol IV	1. 1. 1995 6600E 8100E-87	50E 351	2

2. Checking and changing sensors

A. Checking radar, gearbox, rear axle and front axle speed sensors

- 1. Drive the tractor onto the hard ground (free driving distance about 50 m).
- 2. Select gear **M2**, disengage the diff. lock and 4WD (in M-position). Select the Delta PS highest ratio (in M-position) and adjust the engine revs to **1800 RPM** with the hand throttle lever
- 3. Press the distance-key two times and the display shows text **CAL DIST**.
- 4. Drive the tractor straight ahead with the hand throttle lever.
- 5. Press **SET** –key (display shows text **DRIVE**). Continue driving until the display is switched off and then started again (=successful calibration).
- 6. If the display shows text **NO CALIB** (=signal from the radar too weak), carry out a new test-driving. If the calibration fails again, check the radar and its wiring.
- 7. If the display shows:
- ERROR GB=gearbox speed sensor damaged
- ERROR FA = front axle speed sensor damaged
- ERROR RW = rear wheel speed sensor damaged
 In this case, check the sensor in question and also its mounting and wiring according to instruction B.
- 8. After successful calibration, change display to the **calibrating mode for the hidden functions** (see page **340/6**) and continue driving straight ahead. Adjust the driving speed to about 8–10 km/h.
- 9. Press once the SPEED-key, and the display shows the radar speed.
- 10. Press then twice the SPEED-key and the display will show the **gearbox speed** which should be the same as the radar speed $(\pm 0.1 \text{ km/h})$.
- 11. Press once again the SPEED –key and the display will show the **rear axle speed** which should be the same as the previous speeds $(\pm 0.1 \text{ km/h})$.
- 12. Press once again the SPEED-key and the **front axle speed** can be seen. It must be the same as the previous speeds (±0,1 km/h).
- 13. Press the menu scanning key four times=radar speed.

Note! Do the same test according to paragraphs 9–13 but drive this time at a speed of about 3 km/h. This method shows if the impulse discs/measuring gear wheels are in perfect condition.

Note! The calibrating mode can be left by switching off the current.

B. Changing gearbox, front axle and rear axle speed sensors

Note! The resistance of the speed sensors (not a radar) is $1,0-1,10 \text{ k}\Omega$. The resistance can be measured from connector pins shown below. If the resistance is infinitive, measure the resistance on the sensor pins to clear up possible breaks:

Pins of the rear axle speed sensor

A1C: 27 and 8. X2C: 4 and 1 Sensor pins

Pins of the gearbox speed sensor:


A1C: 30 and 10. X2C: 2 and 5 Sensor pins

Pins of the front axle speed sensor:

A1C: 29 and 9. X2C: 11 and 8 Sensor pins

Changing rear axle speed sensor B1C:


- Remove the faulty sensor and clean the threads on the tractor.
- Seek with a dial gauge the shortest distance between the sensor and the impulse disc through the sensor hole.
- Apply Loctite 572 onto the threads and screw the sensor by hand until the sensor touches the impulse disc (do not screw too hard because the disc can be springy).
 Unscrew the sensor then 1/4 of a turn.
- Lock the sensor with a locking nut and connect wires
- Calibrate and check the speed sensors according to instruction A.
- When the sensor functions, fit a plastic tube onto the sensor leads. Connect the wires to the sensor and protect shoes with grease UC1913 (vaseline spray HHS 2000 (Wyrth)). Move the tube onto the sensor and warm it until it is pressed tightly round the sensor.

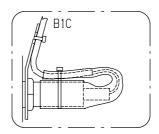

 Fold the wire on the sensor and fasten it with a plastic binder. Fasten the wire also to the lock washer under the sensor locking nut, see picture above.

	1, 1, 1994	Model	Code	Page
35. Autocontrol IV	1. 1. 1995	6600E 8100E-8750E	351	3

Changing gearbox speed sensor B2C:

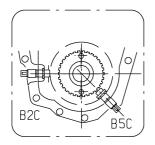


- Remove the faulty sensor and clean the threads on the tractor.
- Apply Loctite 572 onto the sensor threads and turn it against the gear wheel and then unscrew it 1/4 of a turn.
- Lock the sensor with the nut and connect wires
- Carry out the calibrating drive and check the speed sensors, see instruction A.
- When the sensor functions, fit a plastic tube onto the sensor wire. Connect the wires to the sensor and protect shoes with grease UC1913 (vaseline spray HHS 2000 (Wyrth)). Move the tube onto the sensor and warm it until it is pressed tightly round the sensor.
- Fold the wire on the sensor and fasten it with a plastic binder. Fasten the wire also to the lock washer under the sensor locking nut

N.B.: In transmission 50 km/h the sensor locking nut must be removed and the sensor is locked with Loctite 572. This must be done since in this transmission type the measuring gear wheel is smaller and the sensor thread length is insufficient.

Changing front axle speed sensor B5C:

- Remove the faulty sensor
- Screw a new sensor against the impulse plate and then unscrew it 1/4 of a turn.
- Lock the sensor with a locking nut and connect wires.
- Carry out the calibrating drive and check the speed sensors, see instruction A.
- When the sensor functions, fit a plastic tube onto the sensor wire. Connect the wires to the sensor and protect shoes with grease UC1913 (vaseline spray HHS 2000 (Wyrth)). Move the tube onto the sensor and warm it until it is pressed tightly round the sensor.
- Fold the wire on the sensor and fasten it with a plastic binder. Fasten the wire also to the lock washer under the sensor locking nut

C. Checking/changing engine speed sensor

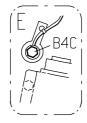

The display unit shows the engine speed. Press the rotation speed key until the display shows the engine speed. It should be the same as the rotation speed shown by the instrument panel tachometer $(\pm 50 \text{ r/min})$.

If there is not the engine speed display or it is incorrect, check the sensor and its wiring:


The sensor resistance should be $1,0-1,10~k\Omega$. The resistance can be measured on the pins shown below. If the resistance is infinite, it should be measured on the sensor pins in order to clear up possible breaks:

Connector pins to measure the engine speed sensor resistance:

A1C: 31 and 12. X2C: 10 and 7 Sensor pins

Changing engine speed sensor, see change of the gearbox speed sensor.

D. PTO speed sensor

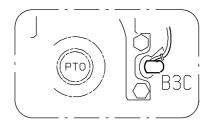

Engage PTO 540 r/min. Press the rotation speed key until the display shows the PTO speed. Adjust the engine speed so that the tachometer indicator in the instrument panel is at the 540 mark. The display should also show the same PTO speed ($\pm 50 \text{ r/min}$). The PTO shaft speed can also be measured with a separate tachometer.

If there is not the PTO speed display or it is incorrect, check the sensor and its wiring (ensure that the emergency plug is placed in the rear socket):

The sensor resistance should be $1,0-1,10 \text{ k}\Omega$. The resistance can be measured on pins shown below. If the resistance is infinite, it should be measured on the sensor pins in order to clear up possible breaks:

Connector pins to measure the engine speed sensor resistance:

A1C: 28 and 11. X2C: 6 and 3 Sensor pins

Changing PTO speed sensor, see change of the rear axle sensor on page 351/2.


35. Autocontrol IV 1.1.1994 | Model | Code | Sivu | 6600E | 8100E-8750E | 351 | 4

E. Potentiometer on the injection pump

The potentiometer must be adjusted so that when the accelelator pedal is in its extreme positions, the pedal movement is not limited by the potentiometer because it does not resist that kind of load.

Measure the potentiometer voltage between pins 2 and 3 in connector B8C. The voltage reading must be below 3 V when the accelerator pedal is the upper position and over 9 V when the pedal is in the lowest position (difference between max. and min reading at least 6 V). The voltage value should be change without steps.

Resistance measurements of the potentiometer:

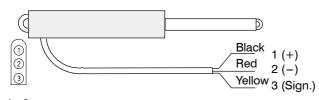

1-2: about **1,01 k** Ω

3 - 2


– spindle in, resistance about **0,62** $\mathbf{k}\Omega$

– spindle out, resistance about 1,89 $\mathbf{k}\Omega$

Pins: Connector B8C

Socket X19/29 X5C/13 A2C/7

F. Sensor for engine coolant temperature

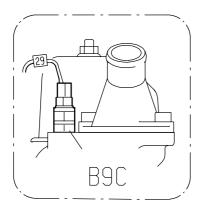

Press once the temperature key and the engine coolant temperature can be seen in the display. Measure the coolant temperature with a separate thermometer and compare the readings. If the display reading is incorrect or there is no coolant temperature reading, check the sensor and its wiring. Check the connectors. Change if necessary the faulty sensor.


Resistance values of the sensor:

$6480 \pm 1000 \Omega$
2450 \pm 320 Ω
1450 \pm 118 Ω
496 \pm 44 Ω
245 \pm 22 Ω

Pins: Connector B9C

Socket X19/27 Connector X5C/8 ECS connector A2C/30

G. Sensor for outdoor temperature

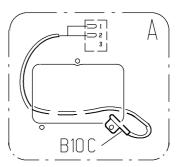

Press the temperature key twice and the display will show the outdoor temperature. Compare the display reading with a separate thermometer reading. If the display reading is incorrect or there is no outdoor temperature reading on AC IV display, check the sensor and its wiring. If these are OK the ECS or the display unit can be faulty


Resistance values at certain temperatures:

 \pm 0°C 10,00±1,00 kΩ + 22°C 3100±50 Ω

Pins: Connectort B10C

Socket X19/26 Connector X5C/4 ECS connector A2C/29

H. Sensor for steering angle

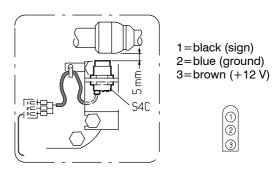

Adjust the distance between the sensor and the front axle tie rod joint to $5\ \mbox{mm}$.

Pins: Sensor connector S4C

Socket X19/25 Connector X5C/3 ECS connector A2C/15

Note! After fitting the sensor, check the function of the sensor by following the signal lights on the lower face of the sensor. When the wheels are straight ahead or turned less that $\pm 15^\circ$, the green and yellow lights should light. When the wheels are turned $\pm 15^\circ$ or more the yellow light must go out and it must not light between the steering angle $\pm 15^\circ$ and the max. steering lock. The function of the signal lights indicates that the sensor supply is OK and that the sensor is functioning.

3. Functional check

A. 4WD


- Start the engine (tractor stationary and brake pedals are nor depressed)
- Depress the rear edge of the 4WD rocking switch
- The 4WD should be disengaged and the ind. light does not light.
- Depress the latched together brake pedals at which time the 4WD engages and the ind. light comes on.
- Release the brake pedals and the ind. light goes out.
- Turn the rocking switch to the middle position and the 4WD engages and the ind. light comes on. Depressing the brake pedals must not affect the 4WD.
- Depress the front edge of the 4WD rocking switch and the ind. light must go out.
- Depress the latched together brake pedals and the ind. light should come on. Release the brakes and the ind light must go out.
- Engage a gear and release clutch pedal rapidly, at which time the 4WD ind light should come on.
- Depress the clutch pedal (wheels stop). After 6 seconds the 4WD must be disengaged (ind. light goes out).

Note! When the 4WD is disengaged, the 4WD solenoid is energised and is magnetic which can be verified e.g. with a screwdriver. Check the engagement of the 4WD by driving at a speed of 4 kph and by turning the front wheels to max steering lock. When the 4WD is engaged, you can see that the front wheels slip (brake) and you feel a jerk when the 4WD engages.


B. Differential lock

- Start the engine (tractor stationary and brake pedals are nor depressed). Disengage the 4WD.
- Depress the diff. lock rocking switch rear edge at which time the lock must be disengaged and the ind. light must not light. Depressing the brake pedals must not engage the lock.
- Turn the rocking switch to the middle position and the lock should be engaged and the ind. light comes on.
- Depress the brake pedal/pedals and the lock disengages during braking and the ind. light goes out.
- Release the brake pedal/pedals and the lock must engage and the ind. light comes on.
- Depress the rocking switch front edge at which time the lock ind. light must go out.
- Remove fuse F27 (brake switches). Unlatch the brake pedals.
- Drive the tractor and brake one rear wheel at which time the lock engages and the ind. light comes on.
- While the ind light lights, turn the front wheels more than ±15° at which time the lock disengages and the ind light goes out.
- Turn the wheels straight ahead and the lock must engage.
- Stop the tractor at which time the lock disengages.

Note! When the lock is engaged, the solenoid valve is energised and it is magnetic. Drive the tractor at a speed of about 4 kph. Turn the front wheels to the full steering lock. Engage and disengage the lock. You can see that the rear wheels slip (brakes) when the lock is engaged and you also feel a jerk when the lock engages. In the same way functions the possible front axle lock (4WD must be disengaged)

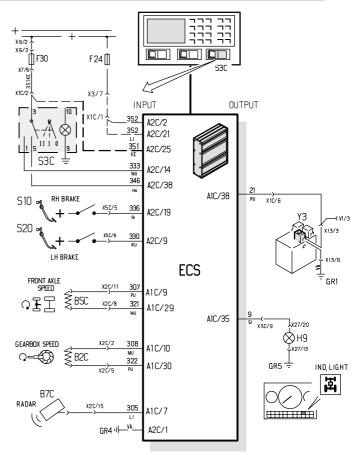

Picture 9. 4WD control

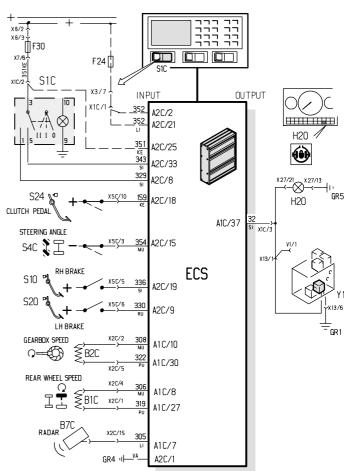

C. Delta Powershift

(the gear has three ratios)

- Depress the Delta PS rocking switch rear edge: Manual mode.
- Start the engine. The lowest ratio should be on, at which time one ind. light lights in the dashboard.
- Drive the tractor and press the push buttons in the gear lever knob. The front button changes one step downwards and the rear one step upwards.
- The lowest ratio: one ind. light, direct ratio: two ind. lights, highest ratio: three ind. lights.
- Engage the highest ratio, stop the engine and switch off current. A buzzer alarms if the parking brake is not applied. Start the engine and the lowest ratio should be on = one ind. light.


Note! The continuous pressing of the buttons changes only one step up or down. In the highest or lowest ratio, the pressing of the button of direction in question does not change ratio any more.

- Depress the Delta PS rocking switch front edge (Automatic mode).
- Select gear H1 and start driving and raise engine revs with the hand throttle lever
- The Delta PS ratio changes automatically upwards when the accelerator pedal position is over 1900 rpm. The change happens at 50–200 rpm lower than the accelerator pedal position. Follow the ind. lights.
- When the highest ratio is on, depress the together latched brake pedals. The AC IV starts to change down when the loading increases and the engine revs lower. The change down occurs when the engine revs fall 250-400 rpm (at higher revs a larger drop in revs is allowed) lower that the accelerator pedal position supposes (increased loading).
- Release the brake pedals and when the engine revs start to rise, the system changes automatically up.
- Press the push buttons at which time the ratio is changed temporarily but the ACIV changes the ratio as soon as the loading conditions require it.
- Depress the clutch pedal and stop the tractor. The AC IV will change automatically to the lowest ratio.
- Stop the engine. The buzzer alarms. Apply the hand brake and the buzzer sound extinguishes


Note! If the gear change functions in the manual mode but not in the automatic mode, this indicates that the ECS is faulty or automatic mode components (e.g. fuel injection pump potentiometer, engine speed sensor) are faulty or wiring has poor contact. To check the DPS solenoids, see page **440/13**.

Calibrating the Delta Powershift

The calibration is carried out in the same way as on AC III, see page **341/5**. However, the lowest engine calibrating revs are 800 r/min (or min. revs) and the highest engine calibrating revs are 2200 (or max. revs).

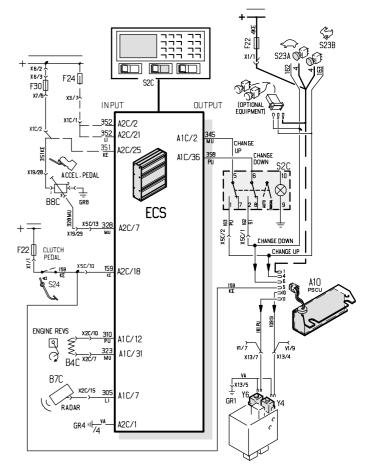

Picture 11. Delta Powershift control

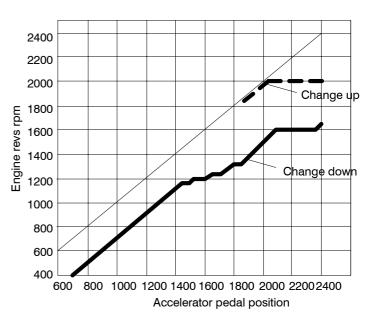

D. PTO (-F17106)

- Ensure that the PTO emergency plug is placed in the rear socket.
- Start the engine.
- Set the display to show the PTO shaft revs.
- Move the PTO lever to the front position (540 r/min), at which time the ind. light starts to flash.
- Move the lever knob switch to the front position and the PTO shaft starts to rotate and the ind. light lights continually. Move the switch to the rear position and the PTO shaft must stop and. ind. light goes out.
- Move the lever to the middle position.
- Engage PTO 540 r/min (shaft rotates). Switch off current with the ignition switch. Restart the engine
- PTO ind light must flash and the PTO shaft must not rotate.
 Move the lever to the middle position and back to the front position at which time the PTO shaft starts to rotate and the ind. light lights continuously.
- Remove the emergency plug and the shaft stops rotating and the ind. light starts to flash. Refit the plug. The PTO shaft must not rotate. Ind. light flashes.
- Move the lever to the middle position and back to the front position. The shaft must not rotate.
- Stop the engine and switch off the current. Restart the engine. The ind. light still flashes. Move the lever to the middle position and back to the front position and the shaft starts to rotate and the ind. light lights up.

Note! If the PTO clutch slips too much, the AC IV disengages the PTO. The PTO restarts after the current is switched off and then on with the ignition switch. This PTO automatics can be overridden by making a connection in the lever console, see page **350/9**.


When the PTO solenoid is energised, the nut at the end of the solenoid is magnetic. This can be verified with e.g. a screwdriver. The solenoid is energised when the PTO is on.

E. Slip control


Same as on Autocontrol III, see page **341/6** instr. **E**. Setting the slip limit percent, see Autocontrol III on page **341/6**.

F. Cold starting automatics

The same as on Autocontrol III, see page 341/6 instr. F.

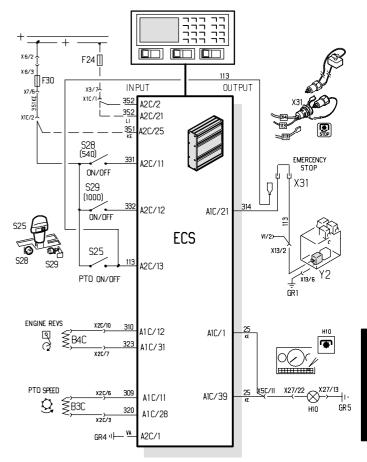

Picture 12. PTO control

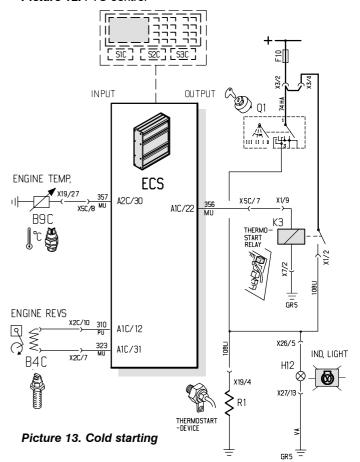



	Model	Code	Page
35. Autocontrol IV	6600E 1. 1. 1994 8100E-8750B	352	1

Computer-aided fault tracing

A computer program has been made for Autocontrol IV (Service Program) which can be used when trouble shooting is carried out with a microcomputer (PC).

In this instruction is used a portable PC which is IBM compatible and uses MS-DOS 3.3 operating system or later version. Additionally PC must have a serial port RS-232C (9 pins) when the PC is connected to the AC-IV unit with cable 326 682 00.

Service Program floppy disk can be ordered from Valmet if needed. It is useful to copy the Program into the hard disk of the PC.

Note! Service Program error messages, see page 353/3.


Starting fault tracing

In this instruction the Program is in the hard disk (C:). If it is in the floppy disk drive, use a correct prompt (e.g. A:)

- Н Connect the PC with the cable to the socket X10C.
- Н Switch on current to a tractor and to the PC.
- When prompt C:\> appears, type AC (ACC if colour Н monitor) and press ENTER.
- A trouble shooting chart appears on the PC display. In the LH side lower corner of the chart there is the following menu:

1PARAMETERS 5SENSOR LOG.

- Press F5, and the computer starts to update the trouble shooting chart (i.e. PC changes X marks). Wait for a while before starting the trouble shooting.
- Return to the disk operating system by pressing the function key F10 (EXIT).

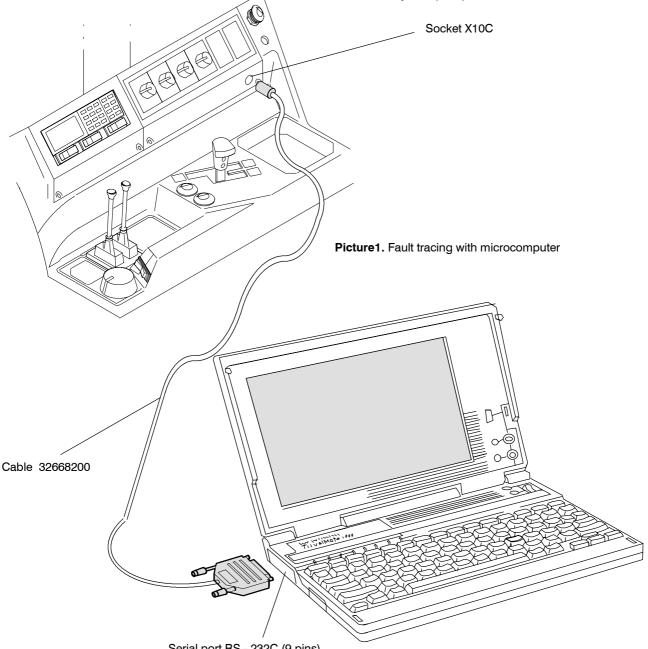

Serial port RS-232C (9 pins)

https://tractormanualz.com/

	Model	Code	Page
35. Autocontrol IV	6600E 1. 1. 1994 8100E-8750E	352	2

Fault tracing chart on PC monitor

AC Commu	nication link v	er 2.1			hh:mm:ss —
DIGITAL INPUTS Steering angle Main clutch PS algorithm Implement pos Extra 4 Brake left Brake right Slip cntr 1/0 Extra 3 Extra 5 4WD A/M 4WD manual 1/0 DL A/M DL manual 1/0 Extra 1 PTO 1/0 Extra 2 PTO 540 1/0 PTO 1000 1/0 Extra 6	J2:15 X J2:18 X J2:17 X J2:20 X J2:10 X J2:9 X J2:19 X J2:16 X J2:39 X J2:33 X J2:34 X J2:33 X J2:34 X J2:34 X J2:35 X J2:11 X J2:35 X J2:11 X J2:36 X	DIGITAL OUTPUTS Slip control 4WD solenoid 4WD lamp DL sol & lamp Pto solenoid Pto 540 lamp Pto 1000 lamp PS Downwards PS Upwards Extra 1 Forward/Reverse Implement dir Implement act Fuel preheater Pieces counter Parameter table no Date of production PROM Checksum EPLD Version	J1:18 X J1:38 X J1:35 X J1:37 X J1:21 X J1:1 X J1:39 X J1:36 X J1:2 X J1:23 X J2:23 X J2:22 X J2:24 X J1:19 X XX XXXX XXXX	FREQUENCY INPUT Flow Radar Gearbox Front axle Rear wheel Extra 1 RPM impl RPM Engine RPM Pto PCS ANALOG INPUTS Power lift Outside temp Acc pedal pos Coolant temp Implement pot System volt	J1:26 XXXX J1:7 XXXX J1: 30, 10 XXXX J1: 29, 9 XXXX J1: 27, 8 XXXX J1: 32, 13 XXXX J1: 6 XXXX J1: 31, 12 XXXX J1: 28, 11 XXXX J1: 25 XXXX J2:32 XXX J2:32 XXX J2:32 XXX J2:31 XXX J2:31 XXX J2:25 XXX
				Messa	ge Window ————————————————————————————————————
1PARAMETERS 5S	ENSOR LOG				10EXIT

Service Program indicates the AC IV unit input and output signals with the following marks:

- X=nothing (see chart above)E=error, short circuit or open circuit
- 1 = current on0 = current off

Markings after the names are ECS connector pins:

E.g. J2:15 = A2C pin 15J1:18 = A1C pin 18

		Model	Code	Page
35. Autocontrol IV	1. 1. 1994	6600E 8100E-8750E	352	3

In the tables below the marks above the thick line and the corresponding marks on the PC display should be similar with the given switch and pedal positions under the thick line.

For these checks it is presumed that the tractor hydraulics and mechanics are in perfect condition. During the test current is switched on to the tractor but the engine is stopped (if not otherwise informed) **Important!** If the tables below and the computer display chart do not agree, check first that the cable between the PC and the AC-IV unit is correctly connected to the PC serial port and to the socket X10C.

The symbols after the names above the thick lines are connector pins from which possible voltage measurements can be done. Thus the tables below can be used for trouble shooting even though You don't have a PC.

A. Fault tracing, front wheel drive control

Input signals to ECS for controlling 4WD (DIGITAL INPUTS).

4WD A/M (A2C/14)	0	0	1
4WD MANUAL 1/0 (A2C/38)	0	1	0
$A/M-SWITCH (M_{1}= rear edge down, M_{2}= middle pos. A= front edge down)$	M ₁	M ₂	Α

BRAKE LEFT (A2C/9)	0	1	0
BRAKE RIGHT (A2C/19)	0	0	1
LEFT BRAKE PEDAL U=Up D=Down	U	D	U
RIGHT BRAKE PEDAL U=Up. D=Down.	U	U	D

⁻ If the marks above the thick lines agree with the corresponding marks on the computer display, the input signals are OK. If not, the fault lies in the switch in question or its wiring is faulty.

Output signals from ECS for controlling 4WD (DIGITAL OUTPUTS)

4WD SOLENOID (A1C/38)	1	0	1
4WD LAMP (A1C/35)	0	1	0
A/M-SWITCH (M ₁₌ rear edge down, M ₂ =middle position, A=front edge down.	M ₁	M ₂	Α

⁻ If the marks above the thick line agree with the corresponding marks on the computer display, but the system does not function, the possible fault lies in the solenoid valve, indicator light or their wirings are faulty.

⁻ Input signals from the radar, front axle speed sensor and gearbox sensor are checked with a calibrating test, see page **351/2** or according to the instruction **F** on page **352/7**.

⁻ If the output signals on the PC display differ from the marks in the table above, the ECS is faulty and should be changed.

	Model Code	Page
35. Autocontrol IV	1. 1. 1994 6600E 8100E8750E	4

B. Delta Powershift control

Input signals (DIGITAL INPUTS).

- The Service program does not show the input signals from the A/M switch or push buttons to the Powershift control unit A10 (concerning control unit A10, see Autocontrol II under code 311). The push buttons and the ind. lights should be checked by driving the tractor and by engaging the different ratios of the Delta Powershift, see page 351/6.
- The AC IV automatics change the Delta Powershift lowest ratio (one ind. light), when the clutch pedal is depressed and the tractor driving speed is below 1,5 km/h. The input signals from the clutch pedal to the ECS should be as follows:

MAIN CLUTCH (A2C/18)	1	0
Clutch pedal (U=Up, D=Down)	U	D

- Input signals from the radar and the gearbox speed sensor to the ECS can be checked with the calibrating drive, see page 351/2 or see instruction F on page 352/7. Checking the engine speed sensor and the fuel injection pump potentiometer, see pages 351/3-4 or pages 352/7-8.

Output signals from the ECS (DIGITAL OUTPUTS).

Note! Before test, ensure that it is **0** in points PS Downwards and PS Upwards. If it is E in these points, stop the engine and switch off current to the PC and restart then engine and the PC. Ensure that the Powershift A/M – switch is in A position (front edge down).

PS DOWNWARDS (A1C/36)	1 only flashes when the gear ratio is changing automatically down, but is 0 after that.
PS UPWARDS (A1C/2)	1 only flashes when the gear ratio is changing automatically up, but is 0 after that.

- the automatic change up happens when the tractor is driven and the engine revs are increased with the hand throttle lever. When the highest ratio is on (three ind. lights), depress both brake pedals and the AC IV starts to change down.
- If the marks above agree with the PC display, but the gear ratio change does not happen, the fault lies in the Powershift solenoid valves or in their wiring or PS control unit A10 is faulty. In this case the ratio doesn't change in the manual control either.
- If the output signals from the ECS lack, the ECS is faulty (inputs should be correct).

C. Differential lock control

Input signals to the ECS (DIGITAL INPUTS)

DL A/M (A2C/8)	0	0	1
DL MANUAL 1/0 (A2C/33)	0	1	0
A/M-SWITCH (M ₁ = rear edge down, M ₂ =middle position, A=front edge down	M ₁	M ₂	Α

BRAKE LEFT (A2C/9)	0	1	0
BRAKE RIGHT (A2C/19)	0	0	1
LEFT BRAKE PEDAL (U=up, D=down)	U	D	U
RIGHT BRALE PEDAL (U=up, D=down)	U	U	D

	1 1 1994 Model	Code	Page
35. Autocontrol IV	1. 4. 1997 6600E 8100E-87	50E 352	5

MAIN CLUTCH (A2C/18)	1	0
CLUTCH PEDAL (U=UP, D=DOWN)	U	D

STEERING ANGLE (A2C/15)	0	1	1
FRONT WHEELS	STRAIGHT	RIGHT. ☐ 15°	LEFT □15°

- If the marks above the thick lines agree with the corresponding marks on the PC, the input signals are OK. If not, the fault lies in the switch or sensor in question or their wirings are faulty.
- Input signals from the radar, front axle sensor and rear axle sensor are checked with the calibrating drive, see page **351/2** or see instruction **F** on page **352/7**.

Output signals from ECS (DIGITAL OUTPUTS)

DL SOLENOID AND LAMP (A1C/37)	0	1	0
$A/M-SWITCH$ ($M_1=$ rear edge down, $M_2=$ middle pos., $A=$ front edge down.	M ₁	M ₂	Α

- If the marks above agree with the corresponding marks on the computer display, but there is malfunctions, the possible fault lies in the solenoid valve or ind. light or their wiring is incorrect.
- If the output signals lack, the ECS is faulty and should be replaced.

D. Power take-off control (-F17106)

Note! From tractor ser. no. F17107 incl. the PTO system has a relay control, see AC II under code 311.

Input signals to ECS (DIGITAL INPUTS)

PTO 540 1/0 (A2C/11)	0	1	1	0	0
PTO 1000 1/0 (A2C/12)	0	0	0	1	1
PTO 1/0 (A2C/13)	0	0	1	0	1
PTO 540 ON/OFF (ON=lever in front position, OFF=lever in middle position)	OFF	ON	ON	OFF	OFF
PTO 1000 ON/OFF (ON=lever in rear position, OFF=lever in middle position)	OFF	OFF	OFF	ON	ON
PTO ON/OFF (ON =lever knob switch in front position, OFF =rear position)	OFF	OFF	ON	OFF	ON

⁻ If the marks above the thick line agree with the corresponding marks on the computer display, the input signals are OK. If not, the fault lies in the switch in question or its wiring is incorrect.

⁻ The engine speed sensor and the PTO speed sensor are checked according to the instructions on page **351/3** or according to instruction **F** on page **352/7**.

	Model Code Pag	je
35. Autocontrol IV	6600E 1. 1. 1994 8100E-8750E 352 6	

Output signals from ECS (DIGITAL OUTPUTS)

PTO 540 LAMP (A1C/1)	0	0	1 ¹)	0	0
PTO 1000 LAMP (A1C/39)	0	0	0	0	1 ¹)
PTO SOLENOID (A1C/21)	0	0	1 ¹)	0	1 ¹)
PTO 540 ON/OFF (ON=lever in front pos., OFF=middle pos.)	OFF	ON	ON	OFF	OFF
PTO 1000 ON/OFF (ON=lever in rear pos., OFF=middle pos.)	OFF	OFF	OFF	ON	ON
PTO ON/OFF (ON=lever knob switch in front pos., OFF=switch in rear pos.)	OFF	OFF	ON	OFF	ON

^{1) 1} is seen only momentarily when the ON/OFF switch is moved to the ON position and then it changes to 0. However, if the engine is running during the test the 1 remains on.

- a) Engine is stationary and the 540 RPM PTO is engaged; when the emergency plug is pulled out, the PC display shows E at the PTO SOLENOID. E changes to 0 when the plug is refitted. This same function concerns also the 1000 RPM PTO
- If the table marks above and the PC display marks agree with the given switch positions, but the PTO does not function, the possible fault must lie in the emergency plug, in the solenoid valve or in the indicating lamp or their wirings are faulty.
- If the output signals on the PC display differ from the marks in the table above, the central processing unit (ECS) is faulty and should be changed.

E. Slip control

Input signals to ECS (DIGITAL INPUTS)

SLIP CNTR 1/0 (A2C/16)	0	1
Slip Control ON/OFF (OFF=switch in pos. 0, ON=switch in pos 1-5)	OFF	ON

- If the marks above the thick line agree with the corresponding marks on the computer display, the input signals are OK. If not, the fault lies in the switch or its wiring is faulty.
- The radar and the gearbox speed sensor are checked according to the calibrating instruction on page **351/2** or according to the instruction **F** on the next page.

Output signals from ECS (DIGITAL OUTPUTS)

SLIP CNTR (A1C/18)	0	1
SLIP CONTROL ON/OFF (OFF=Switch in pos 0, ON=switch in pos. 1-5)	OFF	ON ¹)

¹⁾ When the switch is in the ON position, disconnect the radar connector and drive the tractor at a speed of 3 km/h (power lift activated in the position control mode). Alternatively one rear wheel can be raised and then start carefully to drive with a low gear (4WD must be disengaged and the A/M switch must be in M position).

- If the table marks above and the PC display marks agree, the signal is sent from ECS to the hydraulic lift. If the lower links do not make a lifting correction the possible fault lies in wiring or the power lift electronics do not function.
- If the marks on the PC do not agree with the marks above, the fault lies in the ECS which must be changed.

Others

Lift/lower switch (DIGITAL INPUT)

When the lift/lower switch is in the lowering position or in the middle position, there is 1 in point IMPLEMENT POS (A2C/20). When the switch is in the transport position the 1 changes to 0.

Thermostart (DIGITAL OUTPUTS)

In point FUEL PREHEATER (A1C/22), there is 1 when the glowing is on, otherwise 0.

		Model	Code	Page
35. Autocontrol IV	1. 1. 1994	6600E 8100E-8750E	352	7

F. Fault tracing, speed sensors (FREQUENCY INPUTS)

The following speed sensors are fitted on E-models:

- Radar (Radar) (A1C/7)
- Gearbox speed sensor (Gearbox) (A1C/30, 10)
- Front axle speed sensor (Front axle) (A1C/29, 9)
- Rear wheel rotation speed sensor (Rear wheel) (A1C/27, 8)
- Engine rotation speed sensor (RPM engine) (A1C/31, 12)
- PTO rotation speed sensor (RPM Pto) (A1C/28, 11)

N.B.! The speed sensor resistance (not radar) should be $1,0-1,10 \text{ k}\Omega$ which can be measured from connector X2C or from the lower ECS connector A1C (pins, see above). If the resistance value is infinite a new measurement should be done from the sensor poles so that possible faults on wiring can be localised. A faulty sensor should be changed, see page 351/2.

a) Checking radar

Drive the tractor at different speeds and write down impulses from the radar. The following values were measured from a radar which was in a perfect condition:

D~38 (1 km/h) (inaccura	acy increases at low drivi	ng speeds)
D ~ 157 (4,3 km/h)	-	
D ~ 327 (8,8 km/h)	Number of impulses	
D ~ 416 (11,4 km/h)	Driving speed	☐ Constant
D ~ 757 (20,6 km/h)	zg speed	
D ~ 1026 (28,2 km/h)		

- If number of impulses from the radar correspond to values above, the radar is in perfect condition.
- If no impulses come from the radar or if they deviate much from the values above, the radar is faulty or its wiring is damage.

b) Checking speed sensors for front axle, rear axle and gearbox

- a) Drive the tractor on a road at a speed of 1-2 km/h and write down impulses from the radar (T1) and from one of the speed sensors (A1).
- b) Drive then with a faster speed (~20 km/h) and write down impulses from the radar (T2) and from the speed sensor (A2).
- c) Equation A1/T1 \square A2/T2 must come true (deviation can be \leq 0,16).
- If the equation comes true, the speed sensor is OK.
- If the equation does not come true, the speed sensor in question, its adjustment, wiring or impulse disc is faulty.

c) Checking rotation speed sensors for engine and PTO

- a) RPM engine; impulse value is about 0616 at engine revs 1000 r/min.
- b) RPM Pto, impulse value is about 0364 at the PTO speed of 540 r/min.
- If impulses from the sensor correspond to the values above, the sensor is functioning properly.
- If no impulses can be observe or number of impulses deviates much from the values above, the sensor is faulty. Check then
 the wiring and the sensor.

d) Calibrating and fitting speed sensors, see page 351/2.

		Model	Code	Page
35. Autocontrol IV	1. 1. 1994	6600E 8100E-8750E	352	8

G. ANALOG INPUTS

Here are given some base values for certain analog inputs. These values were measured from the AC – IV unit, which functioned perfectly:

Power lift (A2C/32):

- a) signal is about 194 when the lower links are in the lowest position
- b) lower links in max transport height, signal is about 014.
- if the signal values are correct everything is OK.
- if no signal comes or deviates much from the values above, check the connectors and wiring. The fault can also lie in the hydraulic power lift electronics.

Outside temp (A2C/29):

- a) signal is about 130 at outside temperature of -3°C
- b) signal is about 120 at outside temperature of +1°C
- **N.B.** Signal value decreases when temperature rises.
- if the signal values are correct everything is OK.
- if no signal comes or deviates much from the values above, the sensor is faulty or its wiring and connectors.

Coolant temp (A2C/30):

- a) signal at coolant temperature -2°C is about 183.
- b) signal at coolant temperature 15°C is about 130.
- c) signal at coolant temperature 20°C is about 116.
- d) signal at coolant temperature 25°C is about 108.
- e) signal at coolant temperature 40°C is about 084.
- f) signal at coolant temperature 50°C is about 064.
- if the signal values are correct everything is OK.
- if no signal comes or deviates much from the values above, the sensor is faulty or its wiring and connectors.

System volt (A2C/25):


- a) signal value is about 167, when the engine is running at 1000 r/min (correspond voltage \sim 13,5 V).
- b) signal value is about 140, when the engine is stopped (correspond voltage \sim 12 V).
- If the signal values are correct, everything is OK (values depend also on condition of battery)
- If no signal comes or it is faulty, check connectors and wiring.

Acc pedal pos (A2C/7):

- a) signal is about 020 when the acc. pedal is in the upper position (can vary even 20 units up or down).
- b) signal is about 230 when the acc. pedal is in the lower position (can vary even 20 unit up or down).
- if the signal values are correct, everything is OK
- if no signal comes or it is faulty, check the potentiometer on the injection pump and its wiring.

Checking injection pump potentiometer, see page 351/4.

Checking temperature sensors, see page 351/4.

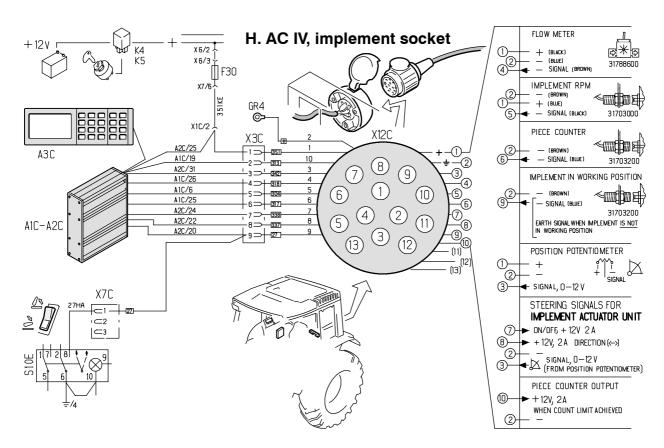

Checking line from implement socket to AC-IV unit

- Switch on current to the tractor
- Measure the supply voltage between socket terminals 1 and 2 (= battery voltage, about 12 V DC).
- Connect a microcomputer to the AC-IV unit and activate the trouble shooting chart (see page 352/1).

FREQUENCY INPUTS

- 1. Shunt between socket terminals 2 and 4 (break connection). A number signal must appear on the PC at point **Flow**. This function is the same as the flow meter paddle wheel would revolve. Also AC-IV display shows some value in the liquid amount mode (litres).
- 2. Shunt between socket terminals 2 and 5 (break connection). A number signal must appear on the PC at point **RPM impl**. Also AC-IV display shows some value in the implement RPM mode. This function is the same as if a magnet would pass by the sensor.
- 3. Shunt between socket terminals 2 and 6. A number signal must appear on the PC at point PCS every time the connection is broken off and on (summing counter). Also AC IV display shows in the piece counter mode the same value. Note possible limiting program, which limits the max number of items. When the limit value is achieved a signal (0 changes to 1) appears at the point Pieces counter (DIGITAL OUT-PUTS). This signal can also be measured with a voltmeter between socket terminals 2 and 10. This function is the same as a magnet would pass by the sensor.

DIGITAL INPUTS

4. Activate the hydraulic power lift and turn the lift/lower switch to the lowering position. Shunt between socket terminals

2 and 9. A signal (1 changes to 0) appears on the PC at point Implement pos. When the socket terminals are connected the arrow on the AC-IV display turns to point upwards. The function is the same as a magnet would be opposite the sensor. The lift/lower switch has the same function.

ANALOG INPUTS

5. Signal from possible position potentiometer: Shunt between socket terminals 1 and 3, after which a number signal appears on the PC at the point Implement pot. Here with battery voltage the signal is about 250. Also AC-IV display shows some value (e.g. 100) in the implement position mode.

Signals to linear actuator

- connect an adjustable resistor to the socket poles 1 (+: black), 2 (-: Red) and 3 (sign: Yellow).
- calibrate the resistor's extreme positions (e.g. 0 (P1) and 100 (P2)).
- input 5 pcs pre-programmed resistor positions (e.g. 10, 30, 50, 70 and 90)
- move the resistor spindle inwards and outwards in the middle range and check that the output signals appear on the PC with e.g. the pre set position 50. Implement dir (current to a relay for controlling actuator rotation direction; 0 or 1) and Implement act (current to a relay for controlling actuator; 0 or 1) (both DIGITAL OUTPUTS)
- By connecting a test lamp to the socket poles **7** or **8** (earth from any frame contact) it can be checked if the current actually comes to the socket.
- **N.B.** If the line from the socket does not function, check connector X3C (in the lever console). Check also wire connections in the socket. If the output signals do not come the ECS is faulty.




		Model	Code	Page
35. Autocontrol IV	1. 1. 1994	6600E 8100E-8750E	353	1

Copying parameter file into AC IV unit

One qualification for the correct function of the AC-IV unit is that the central processing unit (ECS) knows the tractor which it is fitted on. For that reason certain data must be input into the ECS. A parameter file includes this data.

In the factory a parameter file has been input into the AC-IV unit. If this file gets out of order, the unit automatically uses a default parameter file. The unit indicates this with text DEFAULT PARA every time current is switched on to the tractor. The default file must be replaced as soon as possible with a correct file. If the tractor's technical values are changed so it must also be checked if the parameter file should be changed. If the central processing unit (ECS) has been changed, a correct parameter file must be input.

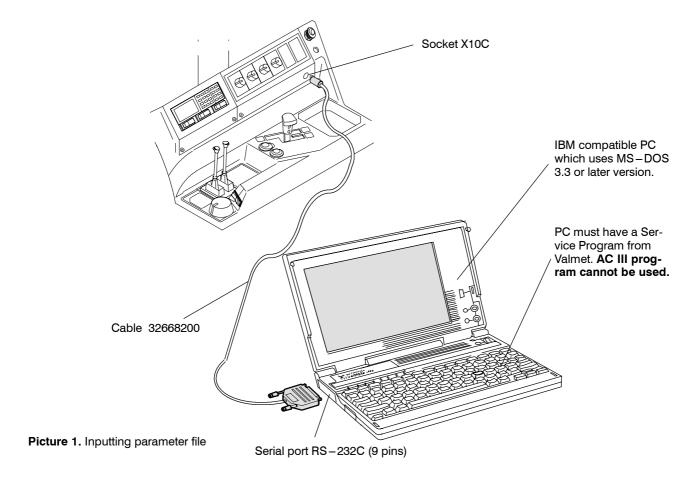

Parameter files have been named according to the code system. A parameter file name includes eleven characters as follows:

E.g. AC 4 0 12 XX . N X E

AC = Autocontrol

4 = AC system number in use. AC IV=4. 4.5.

0 = Program version name. This changes only if the program version needs a parameter file.

12 = Parameter file order number (0-99). The order number changes always with exception that different language versions have a same order number. AC IV numbers start from nr 11.

X = Not in use on AC IV.

X = Not in use on AC IV.

N = PTO type. N = 540/1000 (normal), E = 540/750 (= 540E) (economy).

X = Not in use on AC IV.

E = Language (E=english, R=swedish, S= finnish)

A parameter file is input into the AC-IV unit with aid of a microcomputer. Service Program floppy disk can be ordered from Valmet. This same program is used also when trouble shooting is done. **AC-III program cannot be used**.

Alternative parameter files

Tractors 6600E, 8100E, 8200E and 8400E have files which are selected according to the PTO type and display language:

Tractor	Gearbox	РТО	Language	Parameter file name
6600E-8400E	30/40/50 km/h	540/1000	Finnish Swedish English	AC4011XX.NXS AC4011XX.NXR AC4011XX.NXE
6600E-8400E	30/40/50 km/h	540/540E (750)	Finnish Swedish English	AC4012XX.EXS AC4012XX.EXR AC4012XX.EXE
Parameter files	on E-models which are	e equipped with HiSI	nift	
6600E-8750E	30/40/50 km/h	540/1000	Finnish Swedish English	AC4013XX.NXS AC4013XX.NXR AC4013XX.NXE
6600E-8750E	30/40/50 km/h	540/540E (750)	Finnish Swedish English	AC4014XX.EXS AC4014XX.EXR AC4014XX.EXE

Copying parameter file into AC IV

In this instruction the Program is in the hard disk (C:). If it is in the floppy disk drive, use a correct prompt (e.g. A:)

- J Connect the PC with the cable to the socket X10C.
- J Switch on the current to the tractor and to the PC.
- J When prompt C:\> appears, type AC (ACC if colour monitor) and press ENTER.
- J A trouble shooting chart appears onto the PC display. In the LH side lower corner of the chart there is the following

1PARAMETERS 5SENSOR LOG.

J Press F1 and the following text appears:

TRACTOR MODEL PARAMETERS

File name:

- J Type after colon a correct parameter file name.
- J Press ENTER
- **J** Message **PROGRAMMING AC-IV** appears onto the PC display. Programming in action.
- J When the programming is successfully completed, text AC IV PROGRAMMED appears in the message window in the RH side lower corner. During successful programming the AC-IV display is switched off and on.

Note! Service Program error messages, see next page.

 ${\sf J}$ To return to the disk operating system press function key **F10** (EXIT).

The Service Program chart (on PC display) has the following information:

Parameter table no = parameter file order no
Date of production = manufacturing date of ECS
PROM Checksum = program version
EPLD Version = program version of logic circuit

If the central processing unit (ECS) or the parameter file is changed, write on the ECS sticker no 32666800 tractor serial number, date and parameter file name after text SW.NO. Fix the sticker onto the ECS.

Note! If HiShift is retrofitted on an E-model, a new parameter file must be copied into the AC IV unit. The program diskette can be ordered from the Service Department of Tractor Works.

		Model	Code	Page
35. Autocontrol IV	1. 1. 1994	6100E 8100E-8750E	353	3

Error messages in Service Program

Service Program has the following error messages which appear in the MESSAGE WINDOW in the RH side lower corner of the fault tracing chart. If other error messages appear, switch off current and start from the beginning.

ERROR IN CHECKSUM If this message appears on the PC display when you are programming the AC-IV unit, You

must start from the beginning after switching off and on current.

PARAMETER REV MISMATCH. Parameter file and EPROM have different version numbers.

ERROR IN EPROM If You have found an error in EPROM, switch off the AC-IV unit for a while and start the

Service Program and try again programming. If this is not enough, change the central processing unit (ECS). (EPROM=eraseable and programmable read only memory)

AC-IV DOES NOT RESPOND Connection between the PC and the AC-IV unit does not function. Check the middle cable

and check that the AC-IV unit is switched on. Check AC-IV fuses.

ERROR IN COMMUNICATION Switch off the AC-IV unit for a while and start the Service program again.

WRONG NUMBER OF CHAR

This message appears if you try to copy into the AC-IV unit a parameter file which has not

the correct number of characters. Program error.

ILLEGAL CHAR FOUND A parameter file includes an illegal character/characters. Only figures 0–9 are allowed.

Program error.

FILE ERROR If the file does not exist, this message appears on the PC display. Check the parameter file

name. Start from the beginning after turning current off and on.




nactors				
		Model	Code	Page
31. CareTel	1. 4. 1997	6000-8750	360	1

CareTel (option) can receive questions from a remote GSM phone and send answers to the GSM phone about different tractor functions. One condition is that the GSM phone is in the phone service area and another that the GSM phone has a short message (SMS) function. The messages can also be received with a computer which is connected to the phone. In addition, CareTel has been programmed to send an alarm message automatically to a selected phone number/numbers, if information from one sensor is in the critical point and the tractor can fail. CareTel data logger includes specified information about the tractor. This information has been fed into the data logger in the factory.

CareTel measures, gathers and sends information about the following tractor functions:

- Engine coolant temperature (C°)
- Transmission oil temperature (C°)
- Engine torque, 8750 Σ power only (as percent of the total torque)
- Engine revs (RPM)
- PTO shaft revs (RPM)
- Pressure in low pressure circuit (BAR)
- Lubricating oil pressure in transmission (OK/LOW)
- Engine oil pressure (OK/LOW)
- $-\Sigma$ -power (ETB light) (ON/OFF)

In addition, CareTel shows the tractor serial number and running hours at the measuring time. CareTel shows also if the tractor engine is running or not (*).

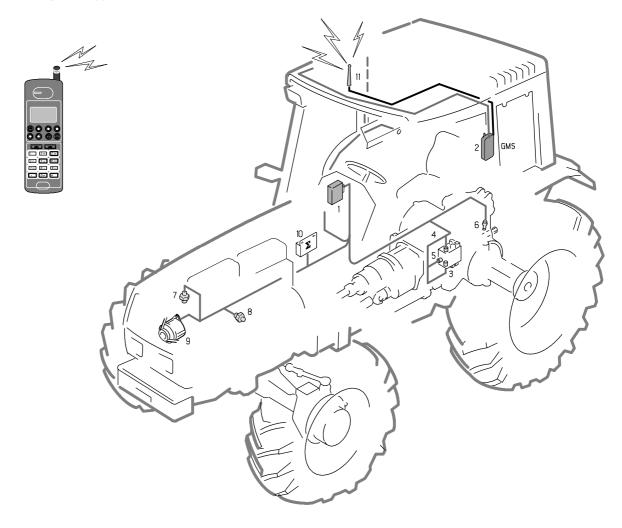

Picture 1. CareTel system.

- 1. Data logger
- 2. GSM phone (Nokia GSM 880, 2110 or 5000)
- 3. Transmission oil temperature sensor
- 4. Transmission oil pressure sensor
- 5. Low pressure circuit pressure sensor

- 6. Rotation speed sensor of PTO shaft
- 7. Engine coolant temperature sensor
- 8. Engine oil pressure sensor
- 9. Alternator (engine revs, running hours)
- 10 Sigma-Power control unit, 8750
- 11. GSM phone antenna

		Model	Code	Page
31. CareTel	1. 4. 1997	6000-8750	360	2

Data logger

Note! In the dashboard there is an indicator light (DATA), which shows the status of the data logger (A1L) as follows when current is switched on:

- lights continually = normal status
- flashes with frequency of 1 Hz = alarm messages in queue, switch on the GSM phone
- flashes with frequency of 10 Hz = faulty or wrong settings in data logger
- light does not light = data logger damaged.

Note! If the data logger must be changed, the specified set values must be fed into the spare part logger in the factory. Although supply to the logger is cut off (e.g. battery is disconnected), the set values remain in the logger's memory. The data logger is placed under the dash board on the RH side. It gets supply voltage direct from the battery via fuse F2. The logger gets supply also via the ignition switch (F30). The logger is connected to the tractor electric system with aid of a 26-pin connector (earth points GR4 and GR5).

CareTel GSM phone

The data logger (A1L) functions alone, but a GSM phone is needed for receiving/sending the SMS-messages. The system phone must be placed in the bracket in the cab, current switched on and activated and its connector must be connected. Tractor works do not dispatch this system phone. The phone bracket is the same as brackets used in cars and the phone is also charged in the bracket.

Care Tel uses Nokia mobile phone technology, and for that reason only Nokia GSM 2110, 5000 or 880 can be uses as a system phone. However, messages from/to CareTel system can be sent with all GSM phone which have the text message function. CareTel messages, however, have been formed so that they are most suitable in the Nokia phone displays.

Sensors


Standard sensors for CareTel use:

- engine oil pressure sensor (S13) on the RH side of the engine (warning light in the dashboard)
- transmission oil pressure sensor (S17) on the upper surface of the servo valve block (warning light)
- transmission oil temperature sensor (B3) on the lower face of the servo valve block (warning light). Same as used in Agrodata – instrument.


The low pressure circuit sensor (B1L), which is fitted on the front face of the servo valve block, is a special sensor for CareTel use.

CareTel engine temperature sensor (B9C) is the same and in the same place as on E-models, but it has been connected differently. PTO shaft revs sensor (B7) is the same as on E-models and AD-instrument.

Engine revs and running hours CareTel takes from the alternator. In the dashboard, there are corresponding instruments. Engine torque CareTel takes from the Sigma – Power control unit A13 (8750 only) as well as Sigma – power ON/OFF information (ETB light).

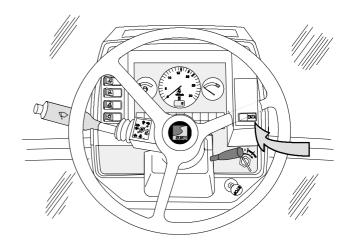



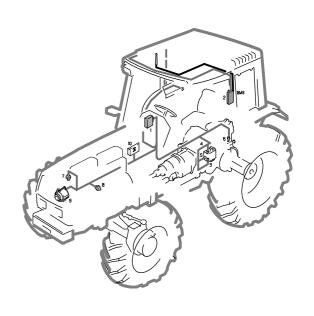

_		Model	Code	Page
31. CareTel	1. 4. 1997	6000-8750	360	3

1. Remote use of CareTel with GSM phone

To/from CareTel can be sent/received SMS – messages with a GSM phone. All GSM phones with the SMS – function can be used. In the CareTel design has been used Nokia 2110 GSM phone. In the display of this phone can be seen 10 characters in three lines.

Note! Normally from the GSM phone menu is selected the SMS message typing mode and after typing the message it is sent to the CareTel system phone. See Instruction Manual of the phone.

Care Tel uses five different message types:

- Questions
- Answers
- Settings (have been fed in the factory)
- Confirmations
- Alarm messages (the receiver phone numbers have been fed into the data logger in the factory)

Important! It is possible that with the Care Tel set values have been determined different rights of usage for different GSM phones. If a question has been sent from a phone, which has not adequate rights, the CareTel does not send an answer message.

Note! Concerning different measuring logs in the data logger, see page 360/8.

A. Query of one measuring value

Query

ZZ[-H|L|n][-A|PH|PL]

ZZ=name of measuring value. In the CareTel settings there are determined two-letter names for all different measuring values as follows.:

TE=Temperature Engine, °C

TT=Temperature Transmission, °C

ME=Moment Engine, %, Sigma-Power 8750 only

RE=Revs Engine, RPM

RP=Revs PTŎ, RPM

PH=Pressure Hydraulics (low pressure circuit), BAR

PT=Pressure Transmission, OK/LOW

PE=Pressure Engine, OK/LOW

SP=Sigma-Power (ETB light), ON/OFF

- -H=maximum value
- -L=minimum value
- -n=which value in order from the last value backwards (in memory 1-195 values)
- -A=query is directed to the alarm log (in this log there is stored maximum and minimum values of the critical limit values)
- -PH=query from maximum log
- -PL=query from minimum log

Note! if -A, -PH or -PL parameters are not given, the query is directed to the standard log. If the query is directed to the max. or min. log, parameters -H, -L or -n have no signification.

Care Tel gives value to the asked measurement and, in addition, values to the four previous measurements, if the query is not directed to the min or max logs.

Exsamples:

ΤE

Query of five last measurements of engine temperature.

TT -A

Query of transmission temperature from the alarm log, five last measurements.

PT -100

Query of transmission oil pressure from standard log, five values from value nr 100 backwards.

		Model	Code	Page
31. CareTel	1. 4. 1997	6000-8750	360	4

Answers


In the answer of one value there is always the tractor serial number in the beginning (fed into the data logger in the factory). In the same line, there is an asterisk, if the engine is running and a log identifier, in which **S**=standard log, **A**=alarm log and **E**=special tracking log.

The measuring frequency has been set in the factory. The frequency below is 10 seconds.

Exsamples:


Answer to question PH -n:

Answer to question PH -n -A:

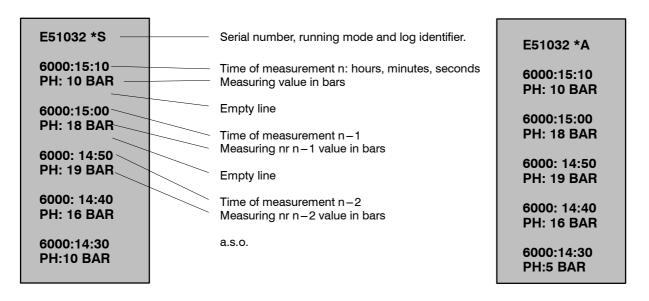


Answer to question PH -H:

Answer to question PH -L:

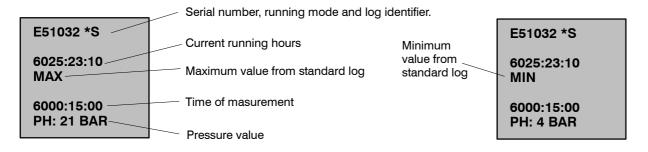

Answer to question PH -PH:

Answer to question PH -PL:

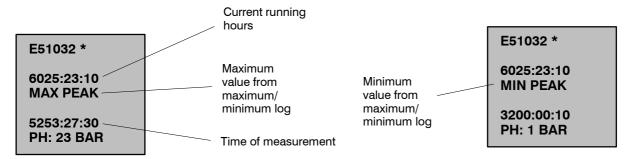

_		Model	Code	Page
31. CareTel	1. 4. 1997	6000-8750	360	5

B. Query of all measurements

TO[-n][-A]

- -n=which value in order from the last value backwards (1-195 values in memory)
- -A=query is directed to the alarm log. If −A is not given, the query is directed to the standard log.

Answers

Exsamples

Answer to question TO -n Answer to question TO -n -A Serial number, running mode, log identifier E51032 *S E51032 *A Current running hours 6025:23:10 -6025:23:10 6000:15:10 Time of measurement n -5600:14:20 TE: 92 C TE: 92 C Engine temperature TT: 80 C TT: 80 C ME:80 Transmission temperature ME:80 **RE:2000 RPM** Moment engine (8750 only) **RE:2000 RPM** RP: 1000 RPM **RP: 1000 RPM** Engine revs **PH: 18 BAR PH: 10 BAR** PT: OK PTO shaft revs PT: OK PE: OK Low pressure circuit pressure PE: OK SP:OFF

SP:OFF

C. Query of number of exceeding times of warning limits

Transmission oil pressure

Engine oil pressure Sigma-Power (8750 only)

WA[-H|-L]


- -H=exceeding of upper limits
- -L=undershoot of lower limits

If these parameters are not given, CareTel shows the exceeding of the upper limits.

Answers


Exsamples

Answer to question WA

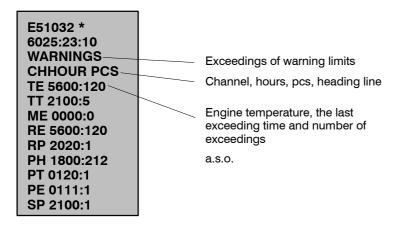

		Model	Code	Time
31. CareTel	1. 4. 1997	6000-8750	360	6

D. Query of number of exceeding times of alarm limits

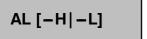


- -H=exceedings of upper limits
- -L=undershoots of lower limits

If these parameters are not given, CareTel shows the exceedings of the upper limits.

Answers

Example


Answer to question AL

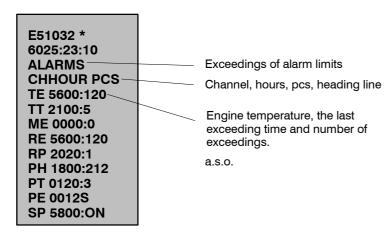

E. Automatic alarm message

CareTel sends automatically an alarm message, if the alarm limits are exceeded, at the most to three GSM phones determined in the set values. The alarm message includes tractor serial number, running mode, running hours and values of all measurements from the alarm log.

Exsample:

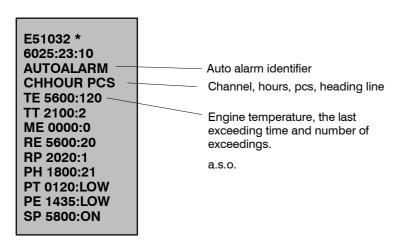

Note! The alarm message is sent only once from every limit exceedings during driving. After engine stop and restarting the alarm messages are sent anew, if the limits are exceeded.

_	M	lodel l	Code	Page
31. CareTel	1. 4. 1997	6000-8750	360	7

F. Query from special tracking log

The measuring values, which are gathered in the special tracking log, are initiated with ST message.

Note! In the special tracking is gathered 2000 different measuring values from certain sensor in frequency of normal standard log. The measuring frequency has been set in the factory. Default value is 10 seconds.



This question above shows five measuring values from the special tracking log from beginning of measurement no -n and backwards. In this log parameter -n can vary between 1-2000.

Control of special tracking log

One measuring point is switched on to the special tracking mode with ST command.



In the command above, ZZ is a two-letter name of the measuring point in question.

The STOP command below stops the gathering of data into the special tracking log.



Zeroing of this log is with the CLEAR command below.

ST CLEAR

G. Control of automatic alarm messages

CALL ID OFF

CALL ID ON

ID=tractor serial number

OFF=automatic alarm messages are not sent.

ON=automatic alarm messages are sent

When the above shown command has been sent, CareTel sends a confirm (ACK CALL=positive confirm, NACK CALL=negative confirm. The confirms show also the tractor serial number and running hours.).

		Model	Code	Page
31. CareTel	1. 4. 1997	6000-8750	360	8

2. Measuring logs

Standard log

Measuring data from all sensors is gathered in the standard log with frequency determined in the set values. The measuring frequency can vary between 1 – 255 seconds. In the standard log, there are stored 195 last measuring values.

Exceeding log

In this log there are stored exceedings (pcs) of the warning and alarm limits of all sensors, and the last exceeding time of the alarm limits.

Alarm logs

When an alarm limit of a sensor is exceeded or undershooted, 195 previous measuring values from all sensors are copied from the alarm buffers to the alarm logs in frequency determined in the settings (1–255 seconds). There are two alarm logs and in them there are stored data from the two last exceedings of the alarm limits. In order to interpret an alarm limit exceeding as a new one, the value must be over five seconds below the alarm limit. When asking data from the alarm logs with a GSM phone, the question is always directed to the newer alarm log.

Alarm buffer

Measuring values (alarm limit exceeding values), which are copied into the alarm log in turn, are gathered in frequency determined in the setting values into the alarm buffer. The alarm buffer is an internal value table in the data logger, and it is not visible outwards.

Maximum and minimum logs

Maximum and minimum values from all sensors and their measuring time during the total running time of the tractor are gathered and stored in these logs.

Special tracking log, see previous page.



	$\overline{}$	Model	Code	Page
31. CareTel	1. 4. 1997	6000-8750	361	1


1. Checking function of CareTel

If the system does not function:

- check fuse F2 and F30 in the fuse box
- switch on current to the tractor and check the status of the data logger with aid of the ind. light, see page **360/2**.
- ensure that the system phone is switched on, field strength is adequate and that the phone is connected to the bracket connector.
- check wires to/from the bracket (antenna, data logger)
- ring to the system phone with an auxiliary GSM phone and assure, that it receives alarm/message. Ring/send a message with the system phone to the auxiliary phone and ensure that it is functioning.

If the answers from the CareTel are faulty, so:

 start the engine and ask with the auxiliary GSM phone with TO command current values from all sensors:

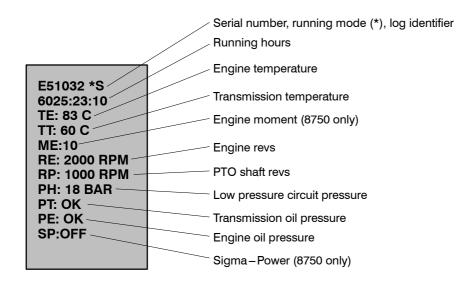


- investigate the message, and ensure whether one or more of the values are clearly faulty or fail.
- raise engine revs and warm the transmission and load it and engage servo functions of the low pressure circuit and carry out a new TO query, and compare values
- if one or more measuring values can easily be verified faulty or it fails, check the sensor in question and its wires, see the following page.
- if the fault cannot be found, change the data logger into a new one.

Note! There are specified GSM numbers and rights of usage and the setting values in the data logger. When ordering a new logger, the tractor in question must be specified.

WARNING! Electric signals from the GSM phone may affect the tractor electric system (e.g. AC/ACD – power lift). Do not keep the GSM phone on the lever console near the AC/ACD power lift electronics.

2. Sensors

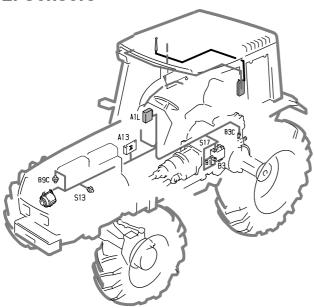

a) Engine oil pressure sensor S13Transmission oil pressure sensor S17

When the lubricating oil pressures drop under a certain level, the sensors ground the electric circuit and a warning light in question comes on in the dashboard (LOW). When the pressure rises up to a certain level, the sensor cuts off the circuit and the warning light goes out (OK).

Start the engine and ensure that the warning lights do not light. Disconnect the sensor wire and connect it to tractor frame at which time the warning light in question comes on. Connect the wire to the sensor pin and the warning light should go out.

Stop the engine, at which time the warning lights come on and light if the current is switched on. If the warning lights function as shown above, the sensors and wires are probably in order.

b) Engine temperature sensor B9C

Resistance values of the sensor:

- $-120-148 \Omega (+60^{\circ}C)$
- $-47-56 \Omega (+90^{\circ}C)$
- $-35-42 \Omega (+100 ^{\circ} C)$

(the resistance increases when temperature lowers).

CareTel temperature value can be compared with the reading of the dashboard temperature gauge at which time can be estimated the size class of the value. The working temperature of the engine varies between +75...+95°C according to loading. Engine coolant temperature can be measured with an auxiliary thermometer, at which time is obtained a more accurate value of comparison.

c) Transmission oil temperature sensor B3

Resistance values of the sensor:

- $-200-250 \Omega (+60° C)$
- $-75-90 \Omega (+90^{\circ} C)$

(the resistance increases when temperature lowers).

If the tractor is equipped with Agrodata-instrument, the function of this sensor can be checked by ensuring that the AD-instrument shows a correct temperature value, see code 331.

In the dashboard there is a warning light for too high temperature in the transmission. Transmission oil working temperature varies between +60...+85 °C according to the loading.


d) PTO shaft rotation speed sensor B7

Resistance of the sensor should be $1,0-1,10 \text{ k}\Omega$.

If the tractor has AD-instrument, check whether it shows the PTO revs. If it shows the revs and the reading reacts to the alterations of the revs, the sensor is in order.

e) Pressure sensor B1L for low pressure circuit

The basic pressure of this circuit is **18–19 bar**. The circuit maintains clutch pressures in various transmission multi—disc clutches, such as DPS, lock, 4WD, PTO, see pages **911/1–2**. Sensor output voltage (DC) depends on the pressure linearly, see diagram below. The connector must be connected to the sensor when measuring output voltages.

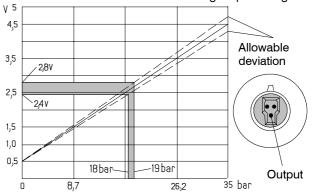

Others

Engine revs and running hours

CareTel takes engine revs and running hours from the alternator. In the dashboard there is a rev counter. If it seems to function and reacts to the revs alterations, the measuring circuit is in order.

CareTel running hour reading can be checked by comparing it with the reading in the dashboard.

CareTel takes the engine running mode (*) from the ignition switch position and engine revs (charging light), so that when the engine revs are over 400 r/min, CareTel assumes that the engine is running, if the ignition switch is in the running position.

Engine moment and Σ -power


These functions only on 8750 tractor, which has Σ -power, see under code 313.

In point SP there is ON, when the engine is working in the higher output range, at which time also the dashboard ETB-light lights, otherwise OFF.

CareTel shows the engine torque as percents of the total torque.

Page Model Code 31. CareTel 361 3 6000-8750 1.4.1997

Wiring diagram (see also diagrams on pages 310/33-38)

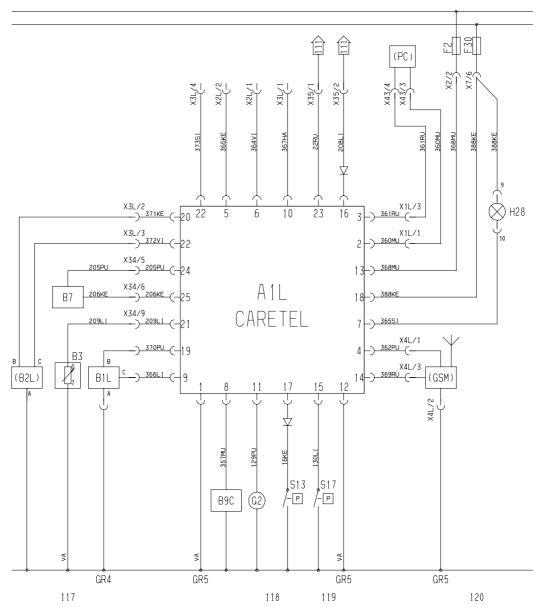

Position of connectors:

Connector in the rear part of the lever console (9 pins) X34:

X35: Connector in the lever console (9 pins)

X43: Socket on the lever console on the driver's right (8 pins)

X2: Connector in the fuse box (9 pins) X7: Connector in the fuse box (9 pins)

X1L: Under the AC/ACD switch panel in the lever console on the driver's right (8 pins)

X2L: In the steering wheel console under the dashboard (3 pins) X3L: In the steering wheel console under the dashboard (9 pins)

X4L: In the cab roof on the LH side (3 pins)

GR4: Earth point in the rear part of the lever console GR5: Earth point on the cab front wall under the dashboard

Ru = brown

Pu = red

Ke = yellow

Si = blue

Mu = black

Vi = green

Va = white

Ha = grey

Li = lilac





				
	1.8-2000	Model	Code	Page
37. Autocontrol 5 / 5.2	1. 9. 2002	6250-8950	370	1

Contents

Code 370:

1. AC 5, description	
A. AC 5 control buttons and levers	
B. Display unit	4
2. Fault tracing	_
A. General	
B. Self diagnostics	
C. Working orders for fault tracing	
D. Using test mode to carry out trouble shooting	
E. Checking I.D. numbers of various AC 5 programs	
F. Functional differences of program versions, comparison, AC 5 only	
H. Testing temperature sensors and position sensors (A1 – A4) in the test mode in AC 5	
I. Testing RPM—sensors (F1—F7) in the test mode in AC 5	
J. Testing proportional valves (P1–P6) in the test mode in AC 5	
K. Counter functions, J38343-, (program versions 42-), AC 5	ISA
2. Sattings and chaptring of control circuits	
3. Settings and checking of control circuits A. Activating setting mode	11
B. Calibrating gas pedal position sensor	
C. Calibrating clutch pedal position sensor	
E. Checking DPS quick – shift gear pressures	
H. Resetting driving speed parameters	
J. Choosing driving speed unit	
K. Setting PTO parameters	
L. Check of the gas pedal sensor calibration with the computer, AC 5 and 5.2	
E. Official of the gas pedal scrissic edibration with the compatel, 70 o and 5.2	100
4. AC 5 components	
A. Control unit A1 and display	20
B. Switches	
C. Proportional valves	
D. Rotation speed sensors	
E. Temperature sensors, AC 5 only	
F. Clutch pedal position sensor, AC 5 only	
G. Gas pedal position sensor, AC 5 only	
H. Detection of driver	
5. Working orders	
A. Fitting control unit A1	24A
B. Programming of AC5 and AC5.2 control unit by means of	
HYPERTERMINAL —loading program	24B
C. Programming of AC5 and AC5.2 control unit by means of	
LOADER 1.5 loading program	240
D. Main program and parameter files tables of AC5 and AC5.2 – control units	24G
E. Setting indexes for DPS and shuttle	
F. Test—run	
6. Others	
A. Electric connections of control unit A1, AC 5 only	25
A. Electric connections of control unit A1, AC 5 only	

Code 371:

Note! Under code 371 are shown AC 5.2 system's properties, which differ from AC 5 and which cannot be shown under code 370 due to lack of space. Under code 370 are given necessary references to code 371.

	1 10.1999	Model	Code	Page
37. Autocontrol 5 / 5.2	1. 8. 2000	6250-8950	370	2

1. AC 5 and 5.2, description


Autocontrol 5 (-K41106) or 5.2 (K41107-) includes:

- Electric engagement control of HiTech shuttle
- Engagement control of DPS and PTO with electro-proportional valves
- Automatic speed change of DPS. AC 5.2: Additionally AutoTraction and Speed Matching functions of DPS.
- Autocontrol 5/5.2 display unit
- AC 5/5.2 control unit (in the lever console) and required sensors and wires.
- Fault diagnostic functions and setting procedures.

Autocontrol 5/5.2 can be fitted on 6250 – 8950 HiTech tractors. In these tractors the separate circuit card A10 for the DPS is removed (see Autocontrol 2.1 and 2.2).

Autocontrol 5/5.2 system includes a display unit which shows functions of transmission, helps with manual gear change and shows a fault code if the system has malfunctions. The display is also used, when testings and settings are carried out.


A. AC 5 / 5.2 control buttons and levers

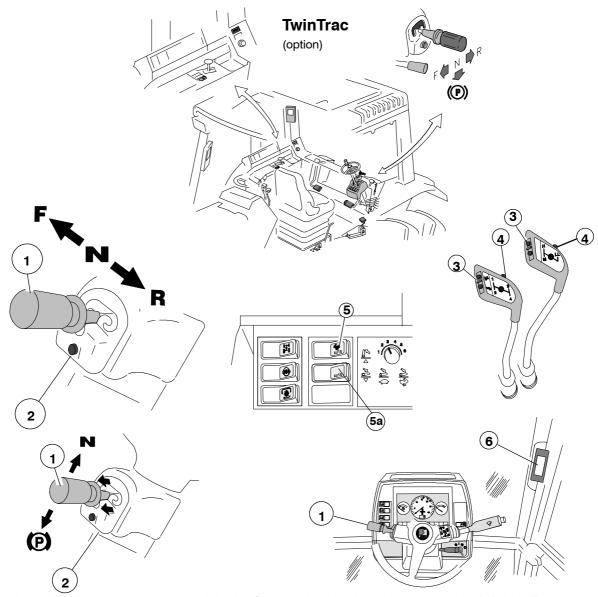

- 1. Reverse shuttle lever/hand brake lever on the LH side of the steering wheel (or alternatively on the RH side). The parking brake must always be engaged, when the tractor is parked.
- 2. The button for pre programming the DPS speed when the tractor driving direction is changed (this button is also used when testing AC 5 or when carrying out settings).
- 3. Push buttons for the manual control of DPS (as earlier) (these buttons are also used in the test mode and setting mode).
- 4. Push buttons for disengaging the reverse shuttle (function as in HiShift, but the clutch pedal is not depressed). The tractor has also the clutch pedal for the electrical disengagement of the HiTech shuttle and for normal driving with the pedal.
- 5. Three position rocker switch for selecting manual or automatical speed change of the DPS (man/auto1/auto2) (as on AC III).
- 5a. Switch for AutoTraction function, AC 5.2 only.
- 6. AC 5/5.2 display unit, see page 4. https://tractormanualz.com/

Model

Page 3

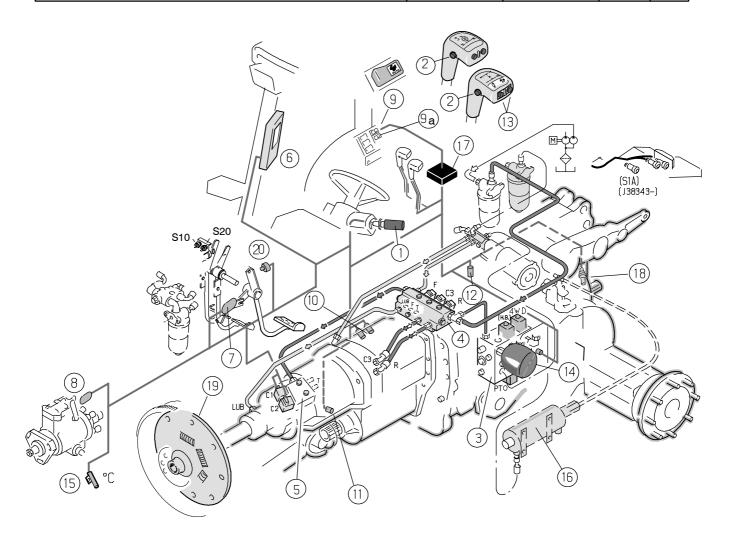

Picture 1. Autocontrol 5 / 5.2 components

- 1. Reverse shuttle lever/parking brake lever
- 2. Push buttons in the gear lever knobs for disengaging the Shuttle electrically (like HiShift. When the buttons are pressed, the clutch pedal does not move down)
- 3. Servo valve block of the low pressure circuit. On the block there are gearbox oil temperature sensor, pressure accumulator, electro—proportional valve for the PTO, solenoid valves for the hand brake, 4WD and the diff. lock. The block is presented on pages 420/20C and on page 440/24.
- 4. Valve block on which there are electro—proportional valves for the forward drive (F), reverse drive (R) and for the DPS rearmost clutch C3. The valve block is presented on page 440/25.
- 5. Valve block on which there are electro proportional valves for foremost (C1) and middle (C2) clutches of the DPS, see also page **440**/25.
- 6. Display unit
- 7. Position sensor on the clutch pedal
- 8. Position sensor on the fuel injection pump
- 9. Auto1/Auto2/Man-switch for the DPS
- 9a. Switch for AutoTraction function (AC 5.2 only)
- 10. Two rpm sensors on the Shuttle
- 11. Gearbox speed sensor (driving speed)
- 12. Engine speed sensor
- 13. Push button for the manual control of the DPS (as AC 2.1)
- 14. Pressure accumulator
- 15. Outdoor temperature sensor
- 16. Hydraulic ram of the parking brake
- 17. Control unit of AC 5 / 5.2.
- 18. PTO shaft speed sensor
- 19. Drive disc on the flywheel (see page 410/4A)

20. Limit switch

IMPORTANT! In the reverse drive controls (TwinTrac) there is a shuttle/parking brake lever, clutch and gas pedal (and steering wheel). In AC 5.2 the rear switches have own digital inputs in the control unit and also clutch pedal sensor inputs (the rear gas pedal has been connected to the front pedal with a cable).


Note! On AC 5 / 5.2 there is a position sensor (8) on the fuel injection pump throttle lever and an engine speed sensor (12) on the gearbox, at which time the automatic speed change according to the engine loading is possible. The clutch pedal has a position sensor (7) and a limit switch (20) to disengage the multi-disc clutches in the shuttle.

There are two speed sensors (10), which indicate the rotation speed and direction of the shuttle output shaft. The shuttle rotation speed is compared with the engine rpm so that the AC 5/5.2 can change the driving direction safety and progressively. The AC 5 / 5.2 prevents the direction change, if the driving speed is over 10 km/h. The gearbox speed sensor (11) indicates the tractor driving speed. When the driving direction change is happening, the AC 5/5.2 pressurises the shuttle clutches progressively.

On the servo valve block (3) there is a temperature sensor, which steers the shuttle automatics so that the shuttle functions progressively regardless of the transmission oil temperature.

There is an outdoor temperature sensor (15) in the front part of the tractor. The display unit (6) is shown on the next page.



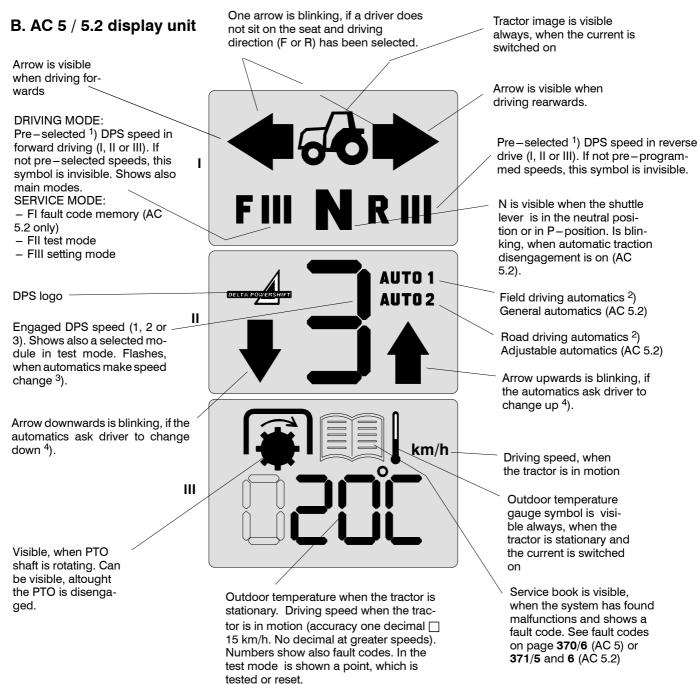

I = Shuttle, II = DPS, III = Diagnosis

- 1) Pre-selection means the DPS speed, which is automatically switched on when the driving direction is changed and which is pre-programmed with the button beside the shuttle lever. The pre-programming is carried out so that when one of the driving directions is engaged, driver engages the desired DPS speed and then presses the button at least 2 seconds. During the pre-programming the clutch pedal must be depressed. Thus the selected DPS speed remains in the memory of AC 5 and engages always when the driving direction in question is selected. If only one direction is pre-programmed, the pre-programming is valid only for this direction. The DPS speed remains the same in the other direction.
 - The pre-programmin is cancelled by pushing the button at least 2 seconds, when the shuttle is in the neutral.
- 2) The two DPS automatic modes (Auto1 and Auto2) are selected with the three position rocker switch on the lever console. The function is the same as on AC III. The switch has also a manual position.
- ³) If a driver changes quickly from DPS speed 1 to 3, the speed 3 flashes immediately in the display (although the automatics changes the speeds also via speed 2) and speed 3 stops to flash just when the gear change is completed.
- ⁴) When the DPS is in the automatic mode (AUTO 1 or AUTO 2), it changes automatically down or up and informs with the flashing arrow, if the automatics cannot do more and a driver must change up or down manually.

Note! The display has a background light when the current is switched on. Tractor image, DPS-logo and outdoor temperature (stationary) or driving speed (in motion) are visible always when the current is switched on. There is a connector (RS-232) in the lever console for connecting e.g. a micro-computer for re-programming the control unit A1.

	1.8-2000	Model	Code	Page
37. Autocontrol 5 / 5.2	1. 9. 2002	6250-8950	370	5

2. Fault tracing

A. General

AC 5 / 5.2 unit has an in—built function for **self—diagnosis**. If fault/faults appear in the AC 5 when working with a tractor, the fault code of the fault in question is shown in the diplay. In this instruction is shown a table in which there are listed all fault codes and corresponding faults. In this way can be localised the fault and possible repair works can be carried out. In addition, AC 5 / 5.2 unit has an additional diagnostic mode. By pressing certain tractor switches and buttons in a correct order (instructions later), the display can be activated into the **test mode**, in which the diplay shows technical values of various electrical components when components in question are activated. Later in this instruction are shown tables which show the correct technical values of the components. These values are compared with the actual signals in the display so that possible incorrect functions can be verified.

In the same way the diplay unit can be activated into the **setting mode**, in which can be done various settings of the AC 5 components. The setting instructions are shown later in this instruction. In section 4 (components) are given instructions to measure with a multimeter. With the aid of these instructions the components can be checked and verified a faulty component.

NOTE! On page 370/7 there are shown working orders för the fault tracing.

B. Self-diagnosis

The self-diagnosis of AC 5 / 5.2 follow up possible faults in the system (when the current is switched on) and show a fault code, which appears in the lower display block (also a book image and the symbol of the module in the middle display block are blinking, when the fault code is shown).

FAULT GROUPS:

A: analog input (position and temp. sensors)
P: proportional output (proportional valves)

d: digital input (switches)

F: frequency input (rpm sensors)

L: logical fault (slipping clutch)

FAULT TYPES:

1=short circuit or cut

2=cut

3=value not in permissible limits

4=multi-disc clutch is slipping

All fauts are numbered with running numbers (01 – 99). In addition, fault type is shown with numbers (1 – 4).


FAULT CODES: (e.g. P101)

The fault code is shown in the display diagnosis block (lower) in four display segments as follows:

- The first segment from the left shows the fault group (A, P, d, F or L).
- The second segment from the left shows the fault type (1-4)
- The two RH side segments show the order number of the fault (01 -99).

Note! When the fault code is shown, the symbol of the module is shown in the middle block (A=AC 5 / 5.2), which the fault has been found.

When the self-diagnosis shows the fault code, the book image is flashing in frequency of **2 Hz**. If two or more faults are found simultaneously, the codes of different faults are shown three seconds by turns. When the current is switched off, the fault code memory is erased. If a fault code has been found, the driving speed or outdoor temperature cannot be seen in the lower display block. Also number of the quick-shift gear cannot be seen.

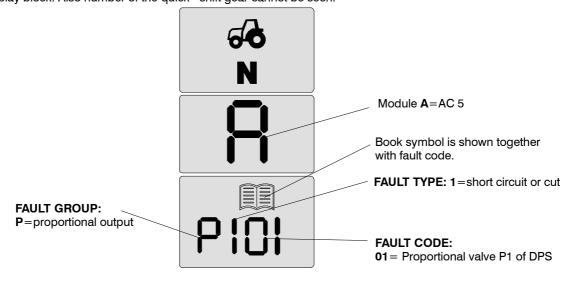

IMPORTANT! Escaping from the fault code mode is done by switching off current with the starter switch, when the fault codes exit from the display block.

37. Autocontrol 5

1 8: 2000 1. 9. 2002 Model 6250-8950

Code Page 370

6

Fault codes in AC 5. Note! Fault codes in AC 5.2, see pages 371/5 and 6.

Fault code	Pins	Fault identification	Fault funk- tion le- vel	Tests	Repairs, settings
P101	A1A2/12	Proportional valve P1 of DPS takes current which exceeds or goes below the given limits. Short circuit or wire damage (C1).	3		
P103	A1A2/10	Proportional valve P2 of DPS takes current which exceeds or goes below the given limits. Short circuit or wire damage (C2).	3	See table	See instr.
P105	A1A2/8	Proportional valve P3 of DPS takes current which exceeds or goes below the given limits. Short circuit or wire damage (C3).	3	d) on pa- ge 370 / 13	C on page 370/21.
P107	A1A2/6	Forward drive proportional valve P4 takes current which exceeds or goes below the given limits. Short circuit or wire damage (F).	3		
P109	A1A2/4	Reverse drive proportional valve P5 takes current which exceeds or goes below the given limits. Short circuit or wire damage (R).	3		
A311	A1A3/2	Gearbox oil temperature value (sensor B14) impossible (over +150°C). Faulty sensor or its wiring	3	See table b) on pa-	See instr. E on page
A312	A1A3/2	Gearbox oil temperature value (sensor B14) impossible (below –50°C). Faulty sensor or its wiring	3	ge 370/11	370/23.
A313	A1A3/4	Signal from gas pedal position sensor B15 below 1 V (DC) or over 7 V (DC). Sensor wrongly fitted or sensor/wires damaged. If fault code A313 is visible together with fault code A314, there can be a short circuit or earth leak in sensors B15 or B16 (same supply voltage).	3	See table b) on pa- ge 370 /11	See instr. G on page 370/24.
A314	A1A3/7	Signal from clutch pedal position sensor B16 below 1 V (DC) or over 7 V (DC). Sensor wrongly fitted or sensor/wires damaged.	3	See table b) on pa-ge 370/11	See instr. F on page 370/23 .
A315	A1A3/7 A1A4/4	When the clutch pedal is down (digital input d06 is active), the signal from the clutch pedal position sensor B16 is 0,5 V (DC) greater or smaller than it was in the calibrating point (voltage value must be beyond allowable limit over one second). Check the adjustment of the pedal limit switch S9 with the aid of the test mode, adjust if necessary. Measure and calibrate the position sensor B16. If the fault code appears in connection with the engine start, ensure the correct starting: depress first the clutch pedal and after that start the engine. Check the battery condition and charge (Voltage can be fall too low).	3	See table b) on page 370 /11	See instr. F on page 370/23.
d116	A1A3/9, 10	DPS up – down push buttons (S23) are active simultaneously. Push buttons in the lever knobs may be in short circuit.	1		
d117	A1A4/7, 8	Forward (S40) and reverse drive direction (S41) are active simultaneously. Shuttle lever switches may be in short circuit.	4	See table a) on pa- ge 370/10	See instr. B on page 370/20 .
d118	A1A4/10, 11	Both PTO speeds are engaged simultaneously. PTO lever switches (S28/S29) may be in short circuit.	2	go 070 /10	010,20.
d123	A1A4/14, 7, 8	Hand brake and one or both shuttle directions engaged simultaneously. Shuttle lever switches may be in short circuit.	4	See table a) on pa- ge 370/10.	See instr. B on page 370/20.
d225	A1A3/7 A1A4/4	Clutch pedal position is below 2 % (01 %) and d06 is not active (d06=clutch pedal limit switch). Check the adjustment of the clutch pedal limit switch S9. Check the function of the parking brake pilot light H11 (program versions 42-).	3	See table b) on pa-ge 370/11	See instr. F on page 370/23.
F320	A1A1/5, 7	Shuttle speed sensors (B12/B13) give different frequency. Difference over 30 %. One of the sensor possible faulty.	3	See table	See instr D
F321	A1A1/13	Engine rpm lower than what the shuttle sensors (B12/B13) indicate, when one solenoid is fully active. Engine rpm sensor B11 may be faulty.	3	c) on page 370/12 .	on page 370/22 .
F324	A1A1/5, 7	Driving speed over 10 km/h and direction information in the control unit is changing. Shuttle sensors B12 or B13 may be faulti or wire problems.	3	See table c) on page 370/12.	See instr D on page 370/22
L419	A1A1/3	Full pressure has been connected to the PTO clutch over 3 seconds, but the PTO shaft rotation speed is lower than it should be. PTO-clutch may slip. It is possible that the PTO rpm sensor B7 is faulty. Check in the test mode PTO lever switches S28 and S29 (check in the test mode that not connected the wrong way round). Check that there is a correct parameter file in the control unit. Ensure that the PTO speed parameters P and L are correctly set (in program version 42-).	2	See table c) on pa- ge 370/12	See instr D on page 370/22 and pages 370/19 and 370/24B.
L422	A1A1/13, 8, 6	One shuttle direction is engaged and full control has been active over 3 seconds. Shuttle rotation speed is lower than engine speed in relation to the DPS ratio. One multi-disc clutch in the DPS or in the Shuttle can slip or one proportional valve (Y4,Y6,Y17,Y11,Y12) can be trapped. This fault code also appears, if both shuttle sensors (B12,B13) do not give a signal, when engine revs are over 1600 rpm (1700 rpm in versions 50, 52. 60, 62). Check fuse F22. https://tractormanualz.com/	4		

	1 8:2000	Model	Code	Page
37. Autocontrol 5 / 5.2	1. 9. 2002	6250-8950	370	7

C. Working orders, AC 5 and 5.2

- If the display unit shows a fault code:

l	weasures:	
ľ	1. Decode the fault code according to instr. 370/5	-6 (self-diagnosis)

- 2. Check the function of the component in the test modet (instr. 370/8).
- 3. Repair the fault.
- 4. If the control unit A1A or programs have been changed, make necessary settings according to instr. 370/24A.
- 5. Carry out all points in the test mode (instr. 370/8). This ensures, that the tractor is OK before delivery. From ser. no. K41107 incl: Check in the fault code memory F1.
- 6. Test-run the tractor according to instr. 370/24E.

If the display does not show the fault code:

In the table below, there are faults which have not the fault codes:

Component:	Possible reason:	Measures:
AC 5 display unit does not function (on the LH side pillar)	control unit A1 supply voltage or earth has malfunctions or the display supply. display unit P6 faulty control unit connector A1A1 loose	- check fuse F24 - voltage measures from control unit A1 connectors A1A1/1 - A1A1/2 (=battery voltage) - new display unit, if the system does not function - check connections
In the dashboard there is lit "P", although the driving direction has been selected	 shuttle lever switch S15 (P) faulty or wrongly fitted. 	 testing in the test mode, point d16 / d22 1) check the fitting of switch S15 (page 370-20)
Black arrow is blinking, although the driving direction has been selected	 driver has left the seat over 4 (6) seconds. AC 5.2: over 30 sec., when the clutch pedal is depressed. detector switch S60 (in the seat) does not function or wire damage 	on the seat, shuttle lever to position P, shuttle lever to the driving position testing in the test mode, point d05 , 2)
4. Black arrow does not change, when using the shuttle lever	 shuttle lever switch S40 (F) or S41 (R) faulty or loosed in the frame. 	testing in the test mode, pointsd09, d10 / d18, d19
5. Shuttle, DPS or PTO have malfunctons (e.g. function is slow)	- fault, that the control unit A1 has not identified - pressure in the low pressure circuit too low - clutch pre-fillling or initial pressure indexes are wrongly set	 carry out all procedures in the test mode (instr. 370/8) low hydraulics pressure measuring, see instr no. 911 – 1 check indexes / in the setting mode, (instr. 370/24D, AC5.2: instr. 371/11.)
6. Engine does not start (starter motor does not rotate) Tractors J38343	- no supply to control unit A1. - Parking brake switch S15 or input signal A1A4/14 (AC 5) or A1A8/8 (AC 5.2) faulty - Control unit output signal A1A2/3 (AC 5) (to relay K28) or A1A3/5 (AC 5.2) faulty.	- check fuse F24 - testing in test mode, point d16/d22 (if necessary, change switch or control unit) - Check whether the voltage from control unit A1 is in relay K28 (when necessary, change the control unit).

Note! If the fault cannot be found, try to find it by carrying out all tests in the test mode FII.

Fault function levels, AC 5 and 5.2

In the fault function leves the different faults cause different protective functions to the tractor. For instance in the function level 2 the tractor driving is possible but the use of the PTO is prohibited. In the fault function level 4 the tractor driving is prevented until the fault has been repaired.

The number of the fault function levels is 4 pcs. Greater digit means a great priority and vice versa. The fault function level is active, until the current is switched off. If two faults with the priority of 3 have been found simultaneously, the fault function level is always 4 (for instance if two DPS proportional valves are in short circuit simultaneously).

Fault function level 1 ("fault code")

Only a fault code in question in the display. With the tractor can be driven, but DPS can have malfunctions.

Fault function level 2 ("PTO protection")

The fault code in the display. The PTO is disengaged

immediately and a driver can activate it after the current is switched off and on. The tractor can still be driven.

Fault function level 3 ("home driving")

The fault code in question in the display. Shuttle automatics are not in function and the PTO stops. Driving direction can be engaged only with clutch pedal depressed.

The control unit reads shuttle parameters from the table for greatest temperatures. Control unit connects all faulty sole-noid outputs unenergised. DPS is locked. Before driving the tractor, the control unit clears up which one of the DPS speeds can be engaged so that the faulty solenoid output is unenergised. If the speed in question is not the speed which is now engaged, the speed is changed automatically.

Fault function level 4 ("immediate downdrive")

The control unit connects all proportional valves unenergised. Only a fault code in the display, not other information. The tractor cannot be driven, before the fault has been repaired. This is for protecting slipping clutches and engine overload-

¹⁾ The parking brake can be released with a tool which incl. in the tractor tool set (after this the tractor can be towed).


²⁾ If detector switch S60 does not function, it can temporarily be by-passed by connecting switch wires with an auxiliary wire (connector beside the seat holder). The switch must be changed and the auxiliary wire removed as soon as possible (safety).

	1.10.1999	Model	Code	Page
37. Autocontrol 5 / 5.2	1. 8. 2000	6250-8950	370	8


D. Fault tracing in test mode

1. Activating test mode, AC 5 and 5.2

Note! Before activating the test mode, possible pre-programming of the DPS speeds must be removed. The test mode is activated by pushing certain tractor switches in a correct order according to picture below:

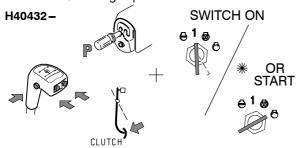

Number	Funktion mode	Symbol of mode
1	Fault code me- mory	F I (AC 5.2 only)
2	Test mode	FII
3	Setting mode	FIII

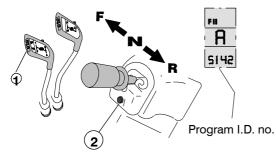

- step with the DPS push buttons (1) up or down and select the main mode symbol FII (test mode).
- after this confirm the selection by pushing the DPS preprogramming button (2)
- now symbol A starts to blink (2 Hz) in the middle display block.
- select module A (7 pcs modules. Only A is in use) by stepping again with the push buttons (1).
- confirm the selection by pushing the button (2) after which
 A remains without blinking in the display.
- the display is now in the test mode and the trouble shooting can be done

Note! When the desired module is confirmed, the parameter file identification number and the program version number start to blink in the lower block of the display (START LEVEL of test mode F II). The identification number can be seen in the two LH side segments and the version number in the two RH side segments.

With aid of the program identifying no. (see picture above) can be checked, which program versio or which parameter file is fitted on the tractor.

Note! In the test mode the DPS speed is always DPS1. The shuttle and PTO function normally, but the display functions are not shown. The DPS pre-programming cannot be done in the test mode. Also the DPS automatic functions are not in use.

IMPORTANT! Escaping from the test mode is done by switching off the current.

2. Fault tracing in the test mode F II.

It is possible in the test mode to check the electric function of various components (control unit input and output signals) by comparing actual values from the different components with the correct values in the tables which are shown in this instruction. Diagram below shows the test mode menu of AC 5, in which can be stepped up or down with the DPS push buttons (1):

TEST MODE MENU IN AC 5 (AC 5.2, see page 371/7):

*) Engine running

Cumbalia	Test point
Symbol in display	Test point
F7	Direction information (rpm) *)
F6	PTO speed (rpm) *)
F5	Shuttle output speed (rpm) *)
F4	Shuttle output speed (rpm) *)
F3	Reserve
F2	Driving speed *)
F1	Engine speed *)
A4	Clutch pedal position %
A3	Gas pedal position *) %
A2	Gearbox temperature
A1	Outdoor temperature
d16	Parking brake
d15	PTO standby button
d14	Seat direction (only TwinTrac)
d13	PTO-speed 2 (lever in rear position)
d12	PTO-speed 1 (lever in front position)
d11	DPS pre-programming button (under shuttle lever)
d10	Direction R (rearwards)
d09	Direction F (forwards)
d08	DPS auto/man
d07	DPS auto1/auto 2
d06	Clutch pedal limit switch
d05	Driver detection (in seat) 1)
d04	PTO start
d03	HiShift buttons
d02	DPS push button, down
d01	DPS push button, up
e.g. 5142	START LEVEL Program version nummer
P1	DPS solenoid 1 (clutch C1) *)
P2	DPS solenoid 2 (clutch C2) *)
P3	DPS solenoid 3 (clutch C3) *)
P4	F clutch solenoidi (forwards) *)
P5	R clutch solenoid (rearwards) *)
b	Counter functions

1) See the next page.

Note! From ser. no. J38343 incl. there are 12 pcs counter symbols in the test mode menu below symbol P5, see pa-

	1_8-2000	Model	Code	Page
37. Autocontrol 5	1. 9. 2002	6250-8950	370	9

1) If detector switch S60 does not function, it can temporarily be by – passed by connecting switch wires with an auxiliary wire (connector beside the seat holder). The switch must be changed and the auxiliary wire removed as soon as possible (safety).

Example:

If e.g. one step up is stepped from the start level by using the push buttons (1), in the three LH side segments of the lower display symbol ${\bf d01}$ starts to blink with frequency of two hertz. This symbol indicates which digital input is being tested (${\bf d01} = {\sf DPS}$ push button up, see table ${\bf a}$ on the next page).

When the button in question has been selected, it can be confirmed for testing by pushing the DPS pre-programming button (2), at which time the symbol stops blinking. In the RH side segment can be seen the mode of the switch (0 or 1) depending whether the button is depressed or not.

When the button in question has been tested, move to the other point in the menu by pressing the DPS pre-programming button (2), after which the symbol starts to blink and the menu can be moved with the DPS push buttons (1). The selection is confirmed again with the pre-programming button (2) (symbol does not blink) and the switch in question can be tested.

Symbols in instruction

- d01...d16, A1...A4, F1...F7 are symbols for the AC 5 control unit input signals (from switches, position sensors, temperature sensors and rotation speed sensors).
- P1...P5 are symbols for the AC 5 control unit output signals (control of the proportional valves).
- A1A1...A1A5 are names of the control unit connectors (on the AC 5 control unit).

For example: A1A3/2 means pin no 2 in the control unit connector A1A3 (gearbox oil temperature)

- S28, S29..., B6, B7... are symbols of the switches and sensors in the wiring diagram.
- Y2, Y4... are symbols of the proportional valves in the wiring diagram.

E. Checking I.D. number of AC5 programs

Programs of AC5

Note! Programming instruction of AC5 control unit, see page **370–24B**.

In the tractor production the **AC5** control unit **A1** is equipped with a program, which consists of a main program and a parameter file.

Since in the control unit A1 have been used many different main programs and parameter files, these different programs and files have I.D. numbers for identifying.

The I.D. number, which can be seen in the **AC5** – display (in test mode **FII**), shows the main program version and parameter file I.D. number. The two first digits show the parameter file I.D. number and two last digits the main program version number.

E.g. I.D nummer 5142:

51 = parameter file I.D. number, **42** = main program version number.

Main program version numbers:

Version	Fitted in production, ser. nos.
38	-H40431 (pre-series)
40	H40432- pre-series, (in series H49112-)
41	J01401- (about)
43	J38343-
42	J39116-
42 or 60	J45136- *
50, 52	Used in service and in spare part units (up to
	tractors -J38342)
53	Is used now in Service and in Spare Parts to
	tractors ser. no. H49112-J38342.
60	J47542-
62	K02116- (used also in service and in spare parts from J38343 incl.
63, 66	Is not fitted in production.
64	Is not fitted in production
	(fitted in Spare Parts units).
65	Is used now in Service and in Spare Parts to
	tractors ser. no. J38343-K41106.

^{*} The tractor has either version 42 or 60, must be checked in tractor display in the test mode.

Parameter file I.D. numbers:

I.D.num- bers	PTO speeds
10	1000
17	1000 / 540E
51	540 / 1000
57	540 / 540E
71	540E / 1000E (8350Hi)

Additionally, in service and in spare parts units the following I.D. numbers have been used with effect from program versions 42 (43) incl.. In these versions all PTO types have not an own parameter file but the PTO ratios must be installed into the control unit (see page 370–19A). The I.D. number increases, when the parameter file is further developed.

E.g. with main program versions **53** and **65** is used a parameter file, which has I.D. numbers 23 and 33.

I.D. number	Tractor model
2129	models 6250Hi-8150Hi, 8450Hi-8950Hi
3139	model 8350Hi (low revs)

	1.8-2000	Model	Code	Page
37. Autocontrol 5	1. 9. 2002	6250-8950	370	9A

I.D. numbers of programs used in Production, in Spare Parts and in Service (AC 5 only):

Note! Sorted according to the main program version. Beside the I.D. numbers there is information, with which can be concluded whether the tractor has a correct program.

Tractor chassis numbers in brackets show how old tractor the program is and which program can be fitted. I.D. numbers can be seen in the tractor display. In the PC monitor the numbers change places, e.g. **5162** –> **6251**.

IMPORTANT! Only the newest programs can be used in Service and Spare Parts (versions **53** and **65**).

Note! If an I.D number of a tractor cannot be found in this list, ask Tractor Service.

Main program no. 38 (these must not be on field).

These must be replaced with program version 53.

These must not be used in Service.

 10 38 1)
 PTO 1000

 17 38 1)
 PTO 1000/540E

 51 38 1)
 PTO 540/1000

 57 38 1)
 PTO 540/540E

71 38 1) PTO 540E/1000E (8350Hi)

Main program no. 40 (these must not be on field).

These must be replaced with program version 53.

These must no more be used in Service.

10 40 ¹⁾ PTO 1000 17 40 ¹⁾ PTO 1000/540E 51 40 ¹⁾ PTO 540/1000 57 40 ¹⁾ PTO 540/540E

71 40 1) PTO 540E/1000E (8350Hi)

Main program no. 41 (H49112-J38342).

These can be replaced with program version <u>53</u>. These must no more be used in Service.

 10 41
 PTO 1000

 17 41
 PTO 1000/540E

 51 41
 PTO 540/1000

 57 41
 PTO 540/540E

71 41 PTO 540E/1000E (8350Hi)

Main program no. 42 (J38343-J47541).

These can be replaced with program version <u>65</u>. These must no more be used in Service.

 10 42 2)
 PTO 1000

 17 42 2)
 PTO 1000/540E

 51 42 2)
 PTO 540/1000

 57 42 2)
 PTO 540/540E

71 42 ²⁾ PTO 540E/1000E (8350Hi)
Numbers used only by Service and Spare Parts:

21 42 ²⁾ 6250Hi – 8950Hi (Ei 8350Hi)

31 42 ²⁾ 8350Hi

Main program no. 43 (J38343-J47541).

These can be replaced with program version <u>65</u>.

Thes must no more be used in Service.

 10 43 2)
 PTO 1000

 17 43 2)
 PTO 1000/540E

 51 43 2)
 PTO 540/1000

 57 43 2)
 PTO 540/540E

71 43 ²⁾ PTO 540E/1000E (8350Hi)

Main program no. 50.

Numbers used only by Service and Spare Parts.

These can be replaced with program version 53.

These must no more be used in Service. **22 50** ¹⁾ 6250Hi –8950Hi (Ei 8350Hi)

32 50 1) 8350Hi

Main program no. 52 (-J38342).

Numbers used only by Service and Spare Parts.

Fits to tractors, if the end of the control unit ser. no. is at least 00400 or greater.

These can be replaced with program version 53.

These must no more be used in Service

20 52 ¹⁾ 6250Hi – 8950Hi (Ei 8350Hi) **23 52** 6250Hi – 8950Hi (Ei 8350Hi)

30 52 ¹⁾ 8350Hi **33 52** 8350Hi

Main program no. 53 (H49112-J38342).

Numbers used only by Service and Spare Parts.

Fits to tractors, if the end of the control unit ser. no. is at least **00400** or greater.

These must be used in service

These programs are in disk 340 422 60.

23 53 6250Hi – 8950Hi (Ei 8350Hi)

33 53 8350Hi

- A new program must be input into the control unit in connection with service (main program version 53).
- 2) If a tractor has the reverse drive controls, a new program must be input (main program version 65). Affects function of the clutch pedal and AutoDPS when the seat is turned rearwards.

Note! If <u>in the test mode **FII**</u> the I.D. number is **9953** or **9965** after programming or after control unit change, the parameter file has not been input. Input correct parameter file according to instr. on page **370–24B**.

Note! If the clutch pedal has malfunctions or the tractor has malfunctions (e. g. fault codes P101...P109), the transmission has jammed or if tractors transmission has not disengaged complety with clutch pedal, with HiShift button or with shuttle lever, then must a new program be input (main program version **53** or **65** and parameter file). Programming instructions on page **370–24B**.

	1.8-2000	Model	Code	Page
37. Autocontrol 5	1. 9. 2002	6250-8950	370	9B

Main program no. 60 (J38343-K02115).

These can be replaced with program version <u>65</u>. These must no more be used in Service.

 10 60
 PTO 1000

 17 60
 PTO 1000/540E

 51 60
 PTO 540/1000

 57 60
 PTO 540/540E

71 60 PTO 540E/1000E (8350Hi)

Numbers used only by Service and Spare Parts. **22 60** 3 6250Hi – 8950Hi (Ei 8350Hi)

32 60 ³⁾ 8350Hi

Main program no. 62 (J38343-K41106).

These can be replaced with program version <u>65</u>. These must no more be used in Service.

 10 62
 PTO 1000

 17 62
 PTO 1000/540E

 51 62
 PTO 540/1000

 57 62
 PTO 540/540E

71 62 PTO 540E/1000E (8350Hi)

Numbers used only by Service and Spare Parts. **20 62** 3 6250Hi – 8950Hi (Ei 8350Hi)

6250Hi-8950Hi (Ei 8350Hi)

30 62 ³⁾ 8350Hi **33 62** 8350Hi

23 62

Main program no. 63 (J38343-K41106).

Used only in service in some tractors.

These must be replaced with program version <u>65</u>. These must not be used in Service .

23 63 3) 6250Hi – 8950Hi (Ei 8350Hi)

33 63 ³⁾ 8350Hi

Main program no. 64 (J38343-K41106).

Numbers used only by Service and Spare Parts. These can be replaced with program version <u>65</u>. These must no more be used in Service.

23 64 6250Hi-8950Hi (Ei 8350Hi)

33 64 8350Hi

Main program no. 65 (J38343-K41106).

Numbers used only by Service and Spare Parts.

These must be used in service

These programs are in disk 340 422 60. **23 65** 6250Hi – 8950Hi (Ei 8350Hi)

33 65 8350Hi

Main program no. 66 (J38343-K41106).

Used only in service in some tractors.

These must be replaced with program version 65.

These must not be used in Service.

23 66 3) 6250Hi – 8950Hi (Ei 8350Hi)

33 66 ³⁾ 8350Hi

- A new program must be input into the control unit in connection with service (main program version 53).
- 2) If a tractor has the reverse drive controls, a new program must be input (main program version 65). Affects function of the clutch pedal and AutoDPS when the seat is turned rearwards.
- A new program must be input (main program version 65).

Note! If <u>in the test mode **FII** the I.D. number is **9953** or **9965** after programming or after control unit change, the parameter file has not been input. Input correct parameter file according to instr. on page **370–24B**.</u>

Note! If the clutch pedal has malfunctions or the tractor has malfunctions (e. g. fault codes P101...P109), the transmission has jammed or if tractors transmission has not disengaged complety with clutch pedal, with HiShift button or with shuttle lever, then must a new program be input (main program version 53 or 65 and parameter file). Programming instructions on page 370–24B.

	1, 10.1999	Model	Code	Page
37. Autocontrol 5	1. 9. 2002	6250-8950	370	9C

F. Functional differences of program versions, comparison, AC 5 only

HiTech -PROGRAMS

DIFFERENCES BETWEEN MAIN PROGRAM VERSIONS:

VERSION 41	VERSIONS 42, 43, 50, 52, 60, 62				
** GENERAL **					
	Reverse drive controls can be fitted as an option.				
	PTO start -/stop push buttons can be fitted in rear mudguards (option).				
Parking brake is not connected to AC5 –control unit.	AC5 –unit controls the parking brake.				
** A	C5 -PROGRAMS **				
Five different parameter files for all PTO types (in production and in service).	Five different parameter files in tractor production. Only two different parameter files are needed in service (PTO ratios can be set with indexes).				
*	* FUNCTIONS **				
PTO rocker switch in the cab.	PTO rocker switch in cab and push button in rear mudguards (option). Operating instructions, see Operator's Manual.				
Seat indicator delay is 4 seconds.	Seat indicator delay is 6 seconds.				
Parking brake can be applied under speed of 4 km/h .	Parking brake can be applied under speed of 2 km/h (4 km/h in versions 50 and 52).				
VERSION 41	VERSIONS 42, 43, 50, 52, 60, 62				
Pre-programmed DPS-speeds engages: - when driver moves shuttle lever to F- or R- position (without clutch pedal) - or when driver presses the HiShift -button (with or without shuttle lever)	Pre-programmed DPS-speeds engages: - when driver moves the shuttle lever to F- or R- position (with or without the clutch pedal) - or when driver moves the shuttle lever to F- or R- position and simultaneously presses the HiShift-button (the gear is engaged after the button is released)				
The DPS-pre-programming and AutoDPS can be engaged simultaneously => unnecessary gear shifts in the driving direction change.	When AutoDPS is in function, the DPS-pre-programmed speeds are by-passed temporarily. The pre-programmed speeds are activated, when AutoDPS is disengaged.				
When AutoDPS is in function, the use of the DPS push buttons can disturb the gear change when stopping driving.	When the tractor is stopped, AutoDPS engages always gear no. 1 although the DPS push buttons are pressed simultaneously.				
	AutoDPS gear shift delay has been shortened. Also some points in gear shift diagrams have been modified.				
PTO symbol is visible in AC5 –display, when the PTO shaft rotates over 45 r/min .	PTO symbol is visible in AC5 –display, when the PTO shaft rotates over 150 r/min.				


	1, 10, 1999	Model	Code	Page
37. Autocontrol 5	1. 9. 2002	6250-8950	370	9D

VERSION 41	VERSIONS 42, 43, 50, 52, 60, 62			
** TEST – AND SETTING MODE **				
In the service mode there are two modes: - test mode FII (for service man) - setting mode FIII (for srvice man)	In the service mode there are three modes: - test mode FII (for serviceman and driver) - setting mode FIII (for serviceman) - driver setting mode FIII > three settings (A: tyre dimension, F: °C/°F, S: km/h / miles/h)			
Setting of DPS initial pressures cannot be seen as a pressure change in the setting mode. However, affects the function of the DPS.	Setting of DPS initial pressures can be seen as a pressure change in the setting mode.			
In the test mode the temperature sensors (A1, A2) show "L9" (= low), when the temperature is below -9°C.	In the test mode the temperature sensors (A1, A2) show "LO" (= low), when the temperature is below -9°C.			
Counters are nor in use.	12 counters, which gather information, how many times and how many minutes certain functions have been in use:			
**	FAULT CODES **			
Fault code P101 causes fault code F321 => fault function level 4 => tractor stops.	Program has been developed. Fault code P101 does not cause other fault codes.			
	Fault code d225 appears, if the clutch pedal position is below 2% (0-1%) and pedal limit switch S9 is not yet switched on.			
VERSION 41	VERSIONS 42, 43, 50, 52, 60, 62			
** INT	ERNAL FUNCTIONS**			
When the PTO is started, pressure rises always according to a certain curve (program).	When the PTO is started, pressure rises always according to a certain curve (program), but the PTO acceleration (sensor B7) is followed at certain intervals and when necessary pressure is raised.			
	Versions 50 and 60: - Clutch pedal function precised - Function of DPS automatic gear change (AutoDPS) has been ensured when using reverse drive controls (TwinTrac)			
	Versions 52 and 62: - Clutch pedal function precised			

_	1, 8>2000	Model	Code	Page
37. Autocontrol 5	1. 9. 2002	6250-8950	370	10

G. Testing various switches and buttons (d01-d16) in the test mode in AC 5

NOTE! In AC 5.2 there are more test points, see page 371/8.

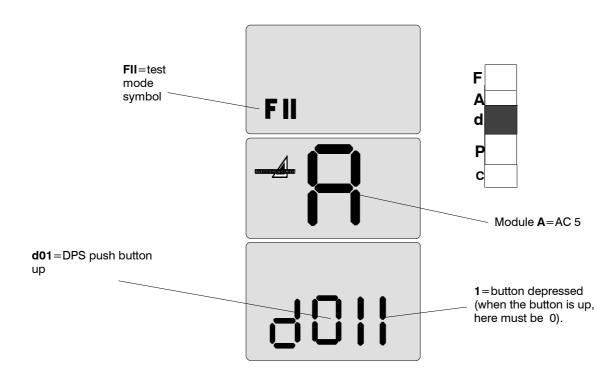

INPUT	DESCRIPTION	1 in display	0 in display
d01 (S23), (S1W) 1)	DPS-push button up	button down	button up
d02 (S23), (SiW) 1)	DPS-push button down	button down	button up
d03 (S45)	HiShift buttons (2 pcs, try both buttons)	button down	button up
d04 (S25) (S1A, S2A) 2)	PTO start switch	Start position	switch up
d05 (S60)	Detection of driver (in driver's seat)	Driver on seat	not seat signal
d06 (S9) (S2W) 1)	Clutch pedal limit switch	pedal down	pedal up
d07 (S47)	DPS automatic speed change switch	Auto-pos. 1	Auto-pos. 2
d08 (S47)	DPS auto/manual	Auto 1 or auto 2	Manual
d09 (S40) (S40) 1)	Direction F	Selected	not selected
d10 (S41), (S41) 1)	Direction R	Selected	Not selected
d11 (S51) (S51) 1)	DPS-pre-programming button (under shuttle lever)	button down	button up
d12 (S28)	PTO-lever in front position	selected	not selected
d13 (S29)	PTO-lever in rear position	selected	Not selected
d14 (-) (S3W) 1)	Driver's seat direction (TwinTrac only)	backwards	forwards
d15 (S25)	PTO rocking switch	Start position	Switch up
d16 (S15) (S15) 1)	Hand brake	applied	not applied

If the value in the display is not 0, althought it should be according to the table above, the switch can be damaged or in short circuit. Check, change the switch. Check the switch wires.

NOTE! If a switch (e.g. DPS push button) is damaged, it can be difficult to move into the test mode. AC 5 display shows, however, fault codes, if certain switches are out of order.

⁻ If the value in the display is not 1, althought it should be according to the table above, the switch can be damaged/wires broken/poor contacts in connectors. Change the damaged switch. Check the switch wirings.


¹⁾ The latter switch is for the reverse drive controls (option) (TwinTrac). When checking these switches the seat must be turned rearwards.

²⁾ The PTO rear push buttons S1A and S2A (option) are placed on the rear mudguards.

	1 8: 2000	Model	Code	Page
37. Autocontrol 5	1. 9. 2002	6250-8950	370	11

H. Testing temperature sensors and position sensors (A1-A4) in the test mode in AC 5

NOTE! Corresponding tests in AC 5.2, see page 371/9.

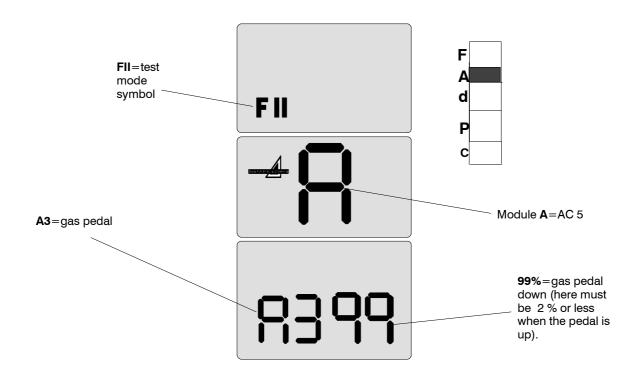

SYMBOL	NAME	DESCRIPTION	
A1 (B17)	Outdoor temperature (xx °C or F)	Compare the value with the ambient outdoor temperature. If the values are different or not visible, check the sensor wires and sensor itself, see instr E on page 370/23 . If the temperature is below -9° C, shows the display in place of temperature "L9" (Program versions 38, 40, 41) or "LO" (Versions 42, 43, 50, 60)	
A2 (B14)	Gearbox oil temperaturte (xx °C)	Compare the reading with the actual gearbox temperature. If the values are different or not visible, check the wires and the sensor, see instr. E on page 370/23 . If the temperature is below -9° C, shows the display in place of temperature "L9" (Program versions 38, 40, 41) or "LO" (Versions 42, 43, 50, 60)	
A3 (B15) 1)	Accelerator pedal position (xx %)	When the pedal is fully up, the value should be smaller than 2. When the pedal is down, the value should be greater than 95. Check also that the value changes evenly when the pedal is moved (in the middle of the pedal stroke, the value should be about 50). If the values deviate from corret values, see instr. G on page 370/24.	
A4 (B16), (B1W) 2)	Clutch pedal position (xx %)	When the pedal is fully up, the value should be greater than 97 . With the pedal at the bottom, the value should be smaller than 2 . Also check, that the value changes evenly when the pedal is moved (in the middle of the pedal travel, the value should be about 50). If the values deviate from the above given values, see instr. F on page 370/23 . Check that the display reading is 38 in point, where the pedal limit switch switches on (click).	

¹⁾The gas pedal of the reverse drive controls (TwinTrac, option) controls the same position sensor as the front gas pedal. If the rear gas pedal value is not within the given limits, the rear gas pedal cable must be adjusted so that the fuel injection pump adjusting lever can move the whole stroke.


²⁾ The latter switch is for the reverse drive controls (option) (TwinTrac). When checking these switches the seat must be turned rearwards.

	1 8: 2000	Model	Code	Page
37. Autocontrol 5	1. 9. 2002	6250-8950	370	12

I. Testing RPM-sensors (F1-F7) in the test mode in AC 5

NOTE! Corresponding tests in AC 5.2, see page 371/9A.

Note! If the display shows e.g. F1 51, it means the engine rpm sensor frequency of 5100 Hz (value x100=Hertz number).

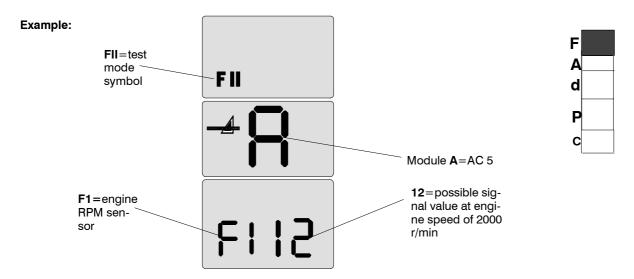

INPUT	NAME	VALUES	DESCRIPTION
F1 (B11)	Engine rpm sensor	1000 r/min=5,7-6,3 1500 r/min=8-10 2000 r/min=11-13	Set the engine revs to 1000 r/min and compare the value with the given values in the LH side column. Raise the revs to 1500 and 2000 r/min and compare the reading. If one of the values is not within the given limits, check the sensor, see instr. D on page 370/22 .
F2 (B6)	Gearbox speed sensor	1000 r/min=0,6-0,8 (50 km/h) 1500 r/min=1,1-1,3 (50 km/h) 2000 r/min=1,4-1,8 (50 km/h) 1000 r/min=0,5-0,7 (40 km/h) 1500 r/min=0,8-1,1 (40 km/h) 2000 r/min=1,1-1,5 (40 km/h)	Set the engine revs to 1000 r/min, engage gear M1 and drive the tractor forwards. Compare the reading with the given value. Test also at 1500 and 2000 rpm engine revs. If the values differ, see instr. D sivulla 370/22 .
F3	Reserve		
F4 (B12)	Shuttle output speed (upper sen- sor)	1000 r/min=1,8-2,1 (F) 1500 r/min=2,9-3,1 (F) 2000 r/min=3,8-4,2 (F)	Set the gears in neutral. Set the engine revs to 1000 r/min. Engage forward direction (F) and compare the value with the given value. Make the same check also in the reverse direction (R). Raise the engine revs to 1500
F5 (B13)	Shuttle output speed (lower sensor)	1000 r/min=1,9-2,2 (R) 1500 r/min=3,0-3,2 (R) 2000 r/min=3,9-4,3 (R)	and 2000 r/min and measure again in both directions. Compare the reading with the given values. If one of the values deviates, carry out a comparing measurement, check the sensor according to instr. D on page 370/22 .
F6 (B7)	PTO speed sensor	540=1,7-2,0 540E=2,2-2,5 1000=3,0-3,3 540E=2,2-2,5 (8350Hi) 1000E=3,7-3,9 (8350Hi)	Engage PTO. Set the engine revs to 1000 r/min. Compare the values with the given values. If the values deviate, check the sensor acording to instr. D on page 370/22 .
F7 (B12, B13)	Direction information	F=1 R=2	Set the gears in neutral. Set the engine revs to 800 r/min. Engage the forward direction (F) and raise slowly the engine revs up to max. The reading must be 1 and must remain the same during the whole test. Engage reverse direction (R) and repeat the same measurement. The reading must be 2 during the whole measurement. If one of the direction readings does not function (value is faulty or it changes when engine revs varie), but F4 and F5 values are correct, the AC 5/5.2 control unit A1 may be damaged and should be changed.

NOTE! If the measured values deviate from the above given values, check first the driver detection switch and its wiring in the seat.


	1.8-2000	Model	Code	Page
37. Autocontrol 5	1. 9. 2002	6250-8950	370	13

J. Testing proportional valves (P1-P6) in the test mode in AC 5

NOTE! Corresponding tests in AC 5.2, see page 371/9B.

Note! When the proportional valves are tested, all solenoid outputs are connected automatically unenergised. **Note!** The PTO proportional valve cannot be tested in the test mode in AC 5, but the solenoid is checked by measuring the resistance value.

Hint! E.g. value P4 1.8 means, that the forward direction proportional valve takes max. current of 1,8 A (in the test mode).

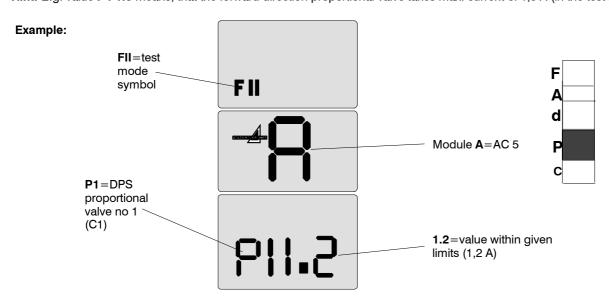

OUTPUT	NAME	VALUE (activated)	DESCRIPTION
P1 (Y4)	DPS-solenoid Y4 (C1).		Activate the test mode and start the engine. Set the engine speed to about 1000 rpm.
P2 (Y6)	DPS-solenoid Y6 (C2).	1,1 – 1,9 *	
			Proportional valve is activated by stepping the desired
P3 (Y17)	DPS-solenoid Y17 (C3).	1,1-2,2	solenoid and by pushing the pre-programming button. The display reading should be between the limi-
P4 (Y11)	Forwards solenoid Y11.	(program versions 53, 65)	ting values.
P5 (Y12)	Rearwards solenoid Y12.		If HI=short circuit or valve takes too high current.If LO=wire damage
P6 (Y2)	PTO solenoid Y2		In AC 5: Cannot be tested in test mode. Measure resistance, see page 370/21.

^{*} Although the current value is between the limiting values, can fault codes P101...P109 appear. In that case the AC5 – control unit must be re-programmed with a new main program file (versions 53 or 65) and the suitable parameter file (see page 370/24G). Newest program versions allow a little higher current values, because the higher current taken by a cold solenoid could cause a fault code.

Measure also the supply voltage of the control unit while the engine is running (1500 rpm). Correct value is 12 V-14,8 V.

- If the solenoid resistance was faulty, the solenoid is damaged and should be changed. When the proportional valve or the solenoid is changed, the valve indexes must be checked (see page 370–24D).

If above mentioned points are OK, faulty current value can be caused by a defect AC5 / 5.2 control unit A1.

Note! Resistance measures and diode checks, see instr. 4C on page 370/21.

Important! Be careful not to mix up the proportional valves and normal solenoid valves during repair work.

WARNING! The proportional valves have a pin for a manual use, which **MUST NOT** be manipulated: the tractor may suddenly start to move, or the pin can become trapped and can cause later damage to e.g. multi-disc clutches. That is why it must always be checked after the repair work (before engine start), that the proportional valve spools are in the outer positions i.e. almost flush with the valve body (if not, remove the valve and press the spool so that the "manual pins" rises).

⁻ If one of the values in the diplay deviates from the given values, measure the solenoid resistance on the connector X13 pins or direct on the valve pins. Measure so that the pins do not slacken (see instr. C on page 370/21). If the resistance is correct, but the display reading is faulty, the fault lies in the wires.




	1.8-2000	Model	Code	Page
37. Autocontrol 5	1. 9. 2002	6250-8950	370	13A

K. Counter functions, J38343-, (program versions 42-), AC 5

NOTE! Corresponding tests in AC 5.2, see page 371/9C.

With effect from ser. no. **J38343** there are 12 pcs counters in the test mode menu (see page **370/8**). The counter symbols are placed below the symbols for the proportional valves, see table below:

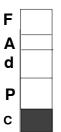

Note! The counters has not been connected in all control units, since the function has been under testing. Due to this the counters do not increase in all tractors. This is not a fault, and does not cause a change of the control unit if the control unit does not have another fault.

Symbole in display	Test point
b	Number of engagements of F-clutch
F	Time in minutes how long time the F-clutch has been engaged (pressurised)
(r) T	Number of engagements of R-clutch
Α	Time in minutes how long time the R-clutch has been engaged (pressurised)
С	Number of engagements of DPS1 ratio
U	Time in minutes how long time the DPS 1 clutch has been engaged (pressurised)
J	Number of engagements of DPS2 ratio
Р	Time in minutes how long time the DPS 2 clutch has been engaged (pressurised)
E	Number of engagements of DPS3 ratio
d	Time in minutes how long time the DPS 3 clutch has been engaged (pressurised)
Н	Number of engine starts
L	Time in hours how long time the ACV control unit has been active.

The counters are accessible after activating the test mode and by stepping in the menu with the aid of the DPS push buttons.

Note! When the current is switced on with the ignition switch, the default ratio is DPS1. The value in counter H increases with one digit every time the engine revs rise over 400 r/min. Counter L shows the total running hours of the control unit. If the counter reading is smaller than tractor running hours, a new control unit has been fitted later on the tractor.

Note! Reading counters is happened without a separate confirmation. The counters cannot be zeroed in service. If the control unit is reprogrammed, the counter values remain in the control unit memory. In the spare part control unit the counters have been zeroed.

The greatest value of the hour recorders is 9999 after which the counters are zeroed. Counters are switched on always when current is switched on in the control unit. The readings of the counters are shown shortened as follows:


- the LH side display segment shows the counter symbol
- $\boldsymbol{-}$ the two intermediate segments show the two first significant digits of the reading
- the RH side segment shows the number of zeroes.

E.g. b 23 3 means that driving direction forwards has been engaged 23000 times.

Last	Number of	
digit	zeroes	
0	_	
1	0	
2	00	
3	000 (thousands)	
4	0000	
5	00000	
6	000000 (millions)	
Time recerder rec	diago (E`A II Dáll) ara	

Time recorder readings (F, A, U, P, d, L) are also shown in the same way.

Example:

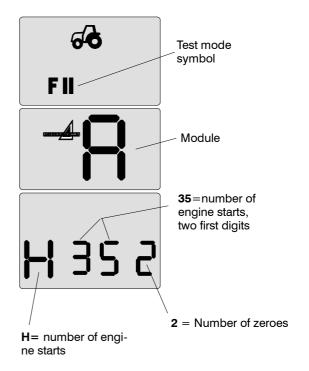

i.e. H = 3500 times.

Note! The counters can be used in connection with maintenance or repair works, when e.g. estimating life time of various components or clutch wear etc.


	1_70.1999	Model	Code	Page
37. Autocontrol 5 / 5.2	1. 8. 2000	6250-8950	370	14

3. Settings


IMPORTANT! Always before settings, the AC 5 / 5.2 must be tested in the test mode and it must be sure that the tractor electrical system (battery, fuses etc) and low pressure circuit of the hydraulic system are in order. When carrying out settings the gearbox oil must be in the normal operating temperature (+30...+60 °C) and the engine in the normal operating temperature. Otherwice the calibrations do not succeed. Remove possible DPS pre-programmed speeds. Before changing the setting values, note down the original values).

A. Activating setting mode, AC 5 and AC 5.2

Note! The setting mode is activated by using certain tractor buttons in a correct order as fol-

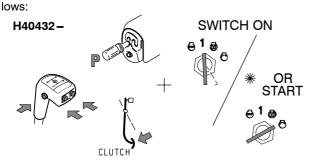

Number	Main mode	Symbol of main mode
1	Fault code memory	F I (AC 5.2 only)
2	Test mode	FII
3	Setting mode	FIII

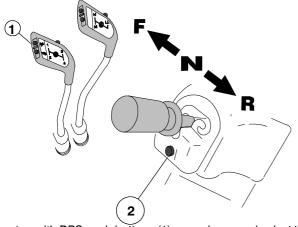

- step with DPS push buttons (1) up or down and select the main mode symbol FIII (setting mode).
- after this confirm the selection by pushing the DPS preprogramming button (2)
- now symbol A starts to blink (2 Hz) in the middle display block.
- select module A (7 pcs modules. A only in use) by stepping again with push buttons (1).
- confirm the selection by pushing button (2) after which A stops blinking in the display.
- the diplay is now in the setting mode and various settings can be done

NOTE! When the module A was confirmed, number 1 (calibrating of gas pedal) started to blink in the LH side of the lower display block in AC5. 1 is the first point in the setting mode menu. In AC 5.2 text CAL starts to blink.

Menu of setting mode F III in AC 5 (AC 5.2: see page 371/10):


Symbol	Description
L	PTO ratio 2 (lever in rear position) (in program version 42-)
Р	PTO ratio 1 (lever in front position), (in program version 42–).
S	Driving speed unit selection: km/h or miles/h
F	Outdoor temp. unit selection: °C or °F.
Α	Setting driving speed parameters 3)
9	DPS3 (clutch C3) initial pressure setting. 1) *)
8	DPS2 (clutch C2) initial pressure setting. 1) *)
7	DPS1 (clutch C1) initial pressure setting. 1) *)
6	Initial pressure setting mode of R clutch. 2) *)
5	Initial pressure setting mode of F clutch. 2) *)
4	Resetting of the prefilling time of R clutch.
3	Resetting of the prefilling time of F clutch.
2	Clutch pedal calibrating mode.
1	Gas pedal calibrating mode. *)

- 1) Change of initial pressure is not visible in pressure value (but it affects the function of the DPS) (in program version 42–).
- 2) Before the initial pressure settings the resetting of the prefilling times must be done.
- 3) Same as for AD-instrument, see page 331/6.
- *) Engine must be in running.

Note! In the setting mode menu stepping can be done with the DPS push buttons (1) up and down (symbol is blinking) and the selection is confirmed with the DPS pre—programming button (2) (symbole stops to blink or index numbers are visible and blinking). After that the setting/calibrating procedure can be done. Moving to the other point is done by pushing the DPS pre—programming button (2), after which the symbols start again to blink and a new point can be stepped in the setting mode menu. The confirmation is then carried out again with the pre—programming button etc.

Note! Escaping from the setting mode is done by switching off the current.

Note! After the setting mode has been activated, all solenoid outputs are unenergised.

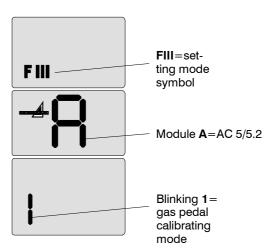

If you think that the gas and clutch pedal calibrations are

https://tractormariualzocom/em first.

	1 8: 2000	Model	Code	Page
37. Autocontrol 5 / 5.2	1. 9. 2002	6250-8950	370	15

B. Gas pedal calibration in AC 5 and 5.2

Gas pedal is calibrated, if:

DPS has malfunctions

Test mode indicated (table b on page 370/10), that the gas pedal function is not within the given limits


Fault code A313 appeared in the display.

 Fuel injection pump position sensor has been changed
 According to the maintenance program (also check that change in links between pump and sensor does not affect the function of the system)

- fuel injection pump has been changed or adjusted

Important! Before calibration, check the pedal sensor voltages in AC 5, see page 370/24. Before activating the gas pedal calibration, the engine revs must be at the low idling speed and in the normal operating temperature (over +30 C). Also the transmission must be in the normal operating temperature.

- 1. Activate the setting mode according to instr. A on page 370/14.
- 2. Select in the setting mode menu number 1 with the DPS push buttons (in the speed gear lever knob) and confirm it with the DPS pre-programming button (see page 370/14)

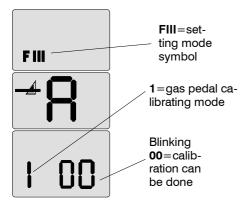

- When the gas pedal calibration has been selected and confirmed (1 is visible in the LH side segment), digits 00 start to blink in the two RH side segments (2 Hz). This indicates that the calibrating can be done.
- Set the mechanical gears in neutral (engine at low idling). Raise the engine revs evenly and gently with the throttle lever up to max. revs during about 10 seconds, however all the time the revs must go up. When the max. revs have been reached, wait about 3 seconds and press the HiShift button. At which time the control unit reads values in the calibrating points and saves them in a memory. Lower to the low idling speed. After the successful calibration digits

 1 appear in the two RH side segments. If the calibration is not successful, began the calibration again and raise once again the revs slower during 12-15 seconds with the hand gas lever. When you approach max. revs can the depressing of the pedal be slowed a bit

Note! If the calibration failed (00 without blinking in the two RH side segments), the values are not saved and the earlier values remain in power. In this case the calibration must be repated. The calibrating mode is left by switching off current.

If the calibration is not successful after several attempts or DPS has malfunctions, (specially low rews models 6750 and 8350). Do the calibration with the computer, instr. on page 370/19B

If the calibration failed, so:

- check the pump position sensor, see instr. G on page 370/24 (AC 5) or on page 371/14 (AC 5.2).
- check the position sensor wires
- check function of the engine speed sensor B11. See page 370/12.
- If the sensor and its wires are OK, the fault may lie in the control unit and it must be changed.
- check engine speeds: low idling speed must be under 1000 rpm and max speed over 1800 rpm.

IMPORTANT! Escape from this mode by switching off current.


C. Calibrating clutch pedal, AC 5 and 5.2

The clutch pedal is calibrated if:

- test mode indicated that the pedal function is not within the given limits
- Fault code A314, A315 or d225 (front controls) or A351, A128 or d254 (reverse drive controls) appeared in the display. - pedal position sensor has been changed.

IMPORTANT! Before calibration, check the pedal sensor voltages in AC 5, see page 370/23. When selecting the clutch pedal calibration, the pedal must be in the upper position.

- 1. Activate the setting mode according to instr. A on page 370/14.
- 2. Select in the setting mode menu number 2 with the DPS push buttons (in the speed gear lever knob) and confirm it with the DPS pre-programming button (see page 370/14)

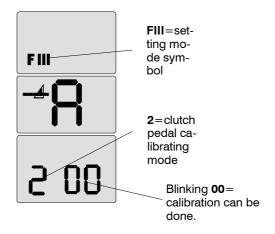

- 3. After the clutch pedal calibration has been selected and confirmed (2 is visible in the LH side segment), two digits 00 start to blink in the two RH side segments (2 Hz). This indicates that the calibration can be done.
- 4. Depress the clutch pedal gently and evenly to the bottom and keep the pedal in bottom for a while, at which time the control unit reads values in the calibrating points and saves them in memory. After the successfully calibration digits 01 appear in the two RH side digits.

Note! If the calibration failed (01 did not appear), the values are not saved. Old values remain in the memory and the calibration must be repeated.

If the calibration failed, so:

- check the clutch pedal potentiometer, see instr. F on page 370/23.
- check the pedal limit switch function and adjustment.
- Check the wires of these components
- If these are OK, the fault may lie in the control unit.

IMPORTANT! Escape from this mode by switching off current.


NOTE! Calibrate in the same way the rear clutch pedal of the optional reverse drive control (TwinTrac).

D. Checking pressures in shuttle clutches in AC 5 and 5.2


See also the setting orders in instr. 370-24D.

Note! If the shuttle has malfunctions or if the shuttle has been repaired or the proportional valves have been changed, the function of the control system must be checked. These tests ensure, that the pressure in the tractor low pressure circuit is high enough and that the F/R proportional valves are functioning.

Note! Ensure that the transmission oil temperature is between +30°C...+60°C before work.

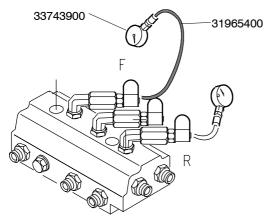

- 1. Measure pressure in the tractor low pressure circuit according to instr. 911.
- Connect a pressure gauge of 25 bar onto the F-direction pressure—test point (second point from the right, see also picture on page 440/25).
- 3. Activate the setting mode according to instr. **A** on page **370/14**.
- 4. Step with the DPS push buttons (in the speed gear lever knob) and select point 5 in the setting mode menu (see page 370/14 (AC 5) or page 371/10 (AC 5.2)) (F-clutch initial pressure calibration) (blinking).

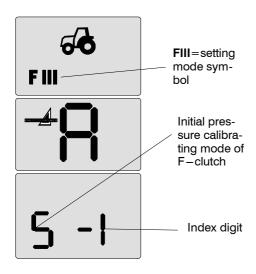

5. Press the DPS pre-programming button, at which time certain **initial pressure index** (between -9...+9) starts to blink in the three RH side segments.

Note! The factory setting of the index is normally **-3...+3**.


6. Press again the pre-programming button, at which time the index digit stops blinking and read off the pressure gauge reading, which should be **1,8-2,8 bar** (AC 5) or about **3,5 bar** (AC 5.2).

Note! The pressure value can be read after about ten seconds, during which the pressure becomes even (in the beginning possible pressure peak is not observed).

- 7. If the measured pressure value is different, change the index. This is carried out so that after the pressure measurement the blinking (5) is activated again with the DPS pre—selection button, and the blinking index digit is changed by stepping with the DPS push buttons.
- 8. After the index has been changed, press again the DPS pre-selection button and read off again the pressure gauge reading.

Note! If the pressure is too low, increase the index one step at a time and vice versa and check the pressure again. If the index is smaller than **-4** or greater than **+4**, the following points must be checked:

- Low pressure circuit of the tractor (instr. 911-1)
- Condition of the valve coil, see page 370/13.
- Cleanliness of the valve
- Valve seals. Change the valve if necessary.

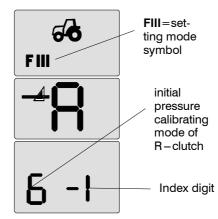

- 9. Repeate the same also with the R-direction pressure—test point (the LH side test-point on the valve block). In this case the function number **6** of the setting mode menu must be activated (R-clutch initial pressure calibration).
- 10. Escape from the setting mode by switching off current.
- 11. Engage a mechanical gear and range gear lever in the neutral. Start the engine and engage the forward—driving direction (F). See the pressure rise of the F—clutch in the pressure gauge. The pressure must stay in level, which is max. 0,05 MPa (0,5 bar) below the pressure in the low pressure circuit. e.g. 18,0 bar —> 17,5 bar (measured in point 1). If the pressure is lower, it is possible that there is a leakage in the system (e.g. o—ring damaged).
- 12. Measure the reverse-drive direction (R) in the same way
- 13. Check the DPS-pressures in the same way (instr. 3E).
- 14. Set the indexes according to instr. 370/24D.
- Test—run the tractor according to instr. on page 370/24E.

	1.10.1999	Model	Code	Page
37. Autocontrol 5 / 5.2	1. 8. 2000	6250-8950	370	17

E. Checking DPS clutch pressures in AC 5 and 5.2


See also the setting orders on page 370/24D.

Note! If the DPS has malfunctions or if the DPS has been repaired or the proportional valves have been changed, the function of the control system must be checked. These tests ensure, that the pressure in the tractor low pressure circuit is high enough and that the DPS proportional valves C1/C2/C3 are functioning.


Note! Ensure that the transmission oil temperature is between **+30°C...+60°C** before work.

Note! The change of initial pressure index is not visible in the pressure value (but affect the function of the DPS) (in program versions 38, 40, 41). (Can be seen in other versions)

- 1. Measure pressure in the tractor low pressure circuit according to instr. 911.
- 2. Activate the setting mode (see page 340/14).
- 3. Step with the DPS push buttons (in the speed gear lever knob) and select no 7 (DPS1, clutch C1) (AC 5.2: no 10) in the setting mode menu and confirm this selection with the DPS pre-programming button.

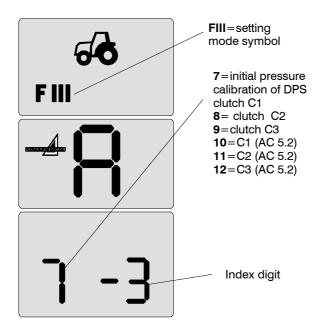

4. When the initial pressure calibrating mode has been selected and confirmed, number **7** (AC 5.2: **10**) can be seen in the left and index digit is blinking in the right.

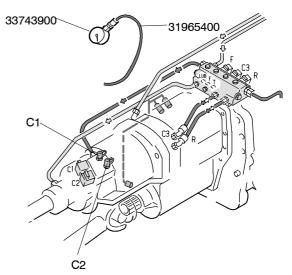

5. Connect a pressure gauge of **25 bar** onto the C1 clutch pressure—test point (in the right), press again the DPS pre—programming button (index stops to blink) and read off the pressure gauge reading, which should be **1,8–2,8 bar**.

Note! The pressure value can be read after ten seconds, during which the pressure becomes even (in the beginning possible pressure peak is not observed).

- 6. When the C1 clutch pressure has been checked, repeat the same procedures also with the C2 and C3 clutches. At this time the blinking 7 is changed with the DPS push buttons to 8 (and 9) and confirmed with the preprogramming button.
- 8 (AC 5.2: 11) (DPS2, clutch C2). Initial pressure value 1,8-2,8 bar.
- 9 (AC 5.2: 12) (DPS3, clutch C3). Initial pressure value
 1,8-2,8 bar (AC 5) and little higher in AC 5.2.

Note! It is important that all DPS three proportional valves are checked.

- 7. Escape from this mode by switching off current.
- 8. Move the speed gear and range gear levers to the neutral. Start the engine and change the DPS-speed with the push buttons. See the pressure rise in the pressure gauge. The pressure must remain in the level, which is max. 0,05 MPa (0,5 bar) below the pressure in the low pressure circuit, e.g. 18,0 bar ->17,5 bar (measured in point 1). If the presure is lower, there can be a leakage in the system (e.g. o-ring damaged).
- 9. Check the DPS-pressures in the same way (instr. 370/3D).
- 10. Set the indexes according to instructions on page 370/24D.
- 11. Test-run the tractor according to instruction on page 370/24E.

	1.10.1999	Model	Code	Page
37. Autocontrol 5 / 5.2	1. 8. 2000	6250-8950	370	18

G. Resetting prefilling time of shuttle clutches, AC 5 and 5.2

See also working orders in instr. 370/24D)

Note! This resetting must always be done **before** the calibration of the initial pressures. Adjust the initial pressure index of the F- and R-clutches to smaller than -3 (see instr. D) before resetting the prefilling times.


Note! The resetting is done by changing the prefilling index. As a procedure this is done like the initial pressure calibration by stepping with DPS push buttons and by confirming with the DPS pre-selection button.

NOTE! If the shuttle engagement causes so called "double jerk" in the beginning of the engagement and the function has a great delay, so:

- decreasing the index reduces the jerk and increases the delay
- increasing the index increases the jerk and reduces the delay.

Testdrive the tractor and carry out, if needed, the resetting procedure (note down the original index value). Test-run the tractor after resetting.

- 1. Check that the transmission oil temperature is $+30^{\circ}$ C... $+60^{\circ}$ C. Activate the setting mode (see page 340/14).
- 2. Step with the DPS push buttons (in the speed gear lever knob) and select no 3 in the setting mode menu and confirm this selection with the DPS pre-programming button.

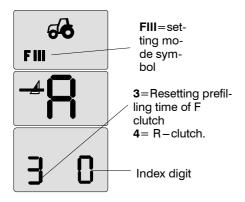

- 3. When this mode has been selected and confirmed, number 3 is shown (not blinking) in the left and the index digit is blinking in the right. The factory setting is 0.
- 4. Change the prefilling index (when it is blinking) one step at a time with the DPS push buttons and confirm it with the preprogramming button (blinking stops). After this, test the engagement of the shuttle many times. Change the index when necessary.
- 5. Carry out this same also for the R-clutch. Now number 4 is selected in the setting mode menu.


Note! If the index for the F- or R-clutches must be over +4 or smaller than -4, it is possible, that the clutch in question is worn-out or the clutch piston or valve is stuck.

H. Resetting driving speed parameters, AC 5 and 5.2

Note! Driving speed parameter means the pulse parameter (pulses/m) of sensor **F2** (gearbox speed sensor).

By changing this parameter value the driving speed display can be adjusted so that it shows the correct value according to the tractor tyres and transmission type. This procedure is made in the factory for all new tractors. If tyres of different dimensions are fitted later on the tractor, the parameters can be reset according to this instruction.

- 1. Activate the test mode according to instr. **A** on page **370/14** (if not activated eralier).
- 2. Select symbol **A** (blinking) in the test mode menu by stepping with DPS push buttons (in the speed gear lever knob), and confirm the selection by pushing the DPS preprogramming button, at which time symbol A stops blinking and the present parameter value is visible (blinking) in the three RH side segments.

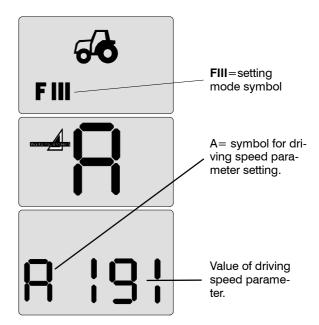

3. The blinking parameter value can be changed by using the DPS push buttons in the speed gear lever knob.

Note! The parameters according to the tyres and transmission types are the same as for AD-instrument, see table on page **331/6**.


- 4. When the desired parameter value is in the display, it is confirmed by pushing the DPS preprogramming button.
- 5. If the confirmation succeeds, the parameter value in question remains in the display without blinking.

Note! Escape from the setting mode by switching off the current with the ignition switch.

I. Changing temperature unit of outdoor temperature display, AC 5 and 5.2

The outdoor temperature unit can be changed between \mathbf{F}° or ${}^{\circ}\mathbf{C}$.

1. Activate the setting mode according to instr. **A** on page **370/14**).

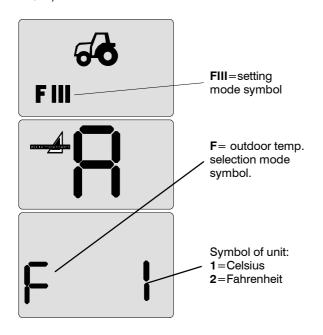

2. Step with the DPS push buttons (in the speed gear lever knob) in the setting mode menu and select symbol **F**, which is blinking (choosing temperature unit), and confirm the selection by pushing the DPS preprogramming button, at which time the symbol F stops to blink and present unit symbol (1 or 2) can be seen in the diplay:

The factory setting is Celsius units.

3. Select the desired temperature unit by pushing the DPS push buttons and confirm the selection by pushing the DPS preprogramming button. After this the outdoor temperature is shown either in Celsius or Fahrenheit units.


Note! With the formula below the Celsius – units can be changed into Fahrenheit – units.

$$t_F = \frac{9}{5} \times t_C + 32$$

J. Changing driving speed unit, AC 5 and 5.2

The driving speed unit can be either km/h or miles/h.

1. Activate the setting mode according to instr. A on page **370/14**).

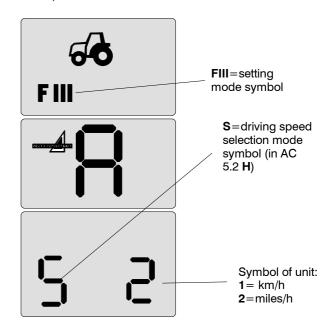

2. Step with the DPS push buttons (in the speed gear lever knob) in the setting mode menu and select symbol \mathbf{S} , which is blinking (choosing driving speed unit), and confirm the selection by pushing the DPS preprogramming button, at which time the symbol \mathbf{S} stops to blink and present unit symbol (1 or 2) can be seen in the diplay:


1=km/h. 2=miles/h.

The factory setting is km/h units.

3. Select the desired speed unit by pushing the DPS push buttons and confirm the selection by pushing the DPS preprogramming button. After this the driving speed is shown either in km/h or miles/h.


Note! 1 km/h=0,6214 miles/h


Note! If the selected driving speed unit is miles/h, symbol km/h is not shown at all in the diplay.

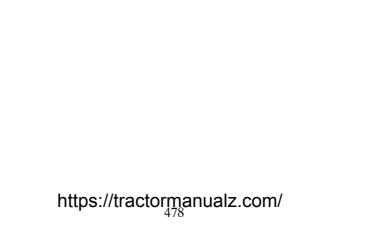

	1.8-2000	Model	Code	Page
37. Autocontrol 5 / 5.2	1. 9. 2002	6250-8950	370	19A

 K. Setting PTO parameters (ratios), in program versions 42—, AC 5 and 5.2 PTO index values shall always be checked and set after programming or assembling the control unit.

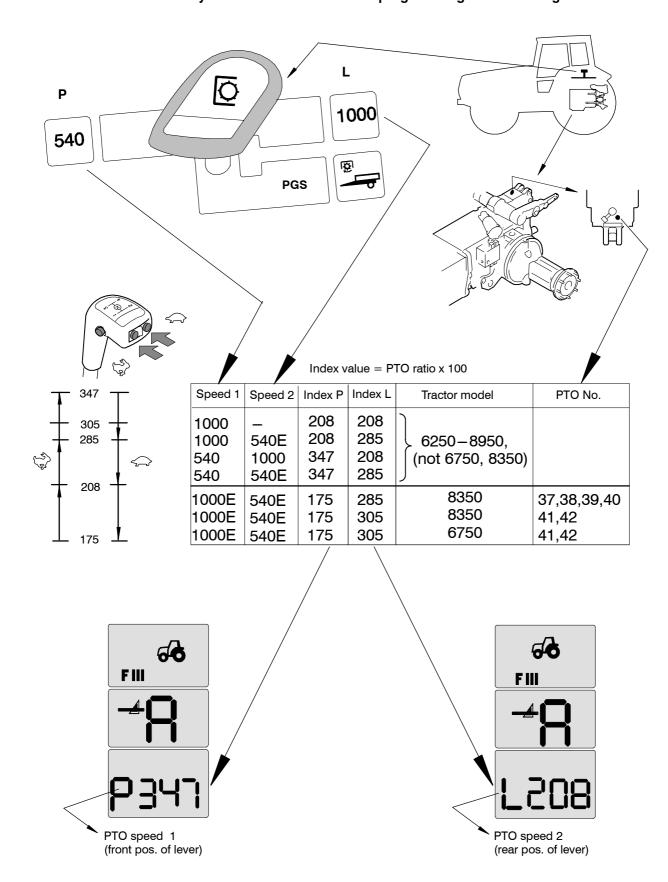




		Malli	Koodi	Sivu
37. Autocontrol 5 / 5.2	1. 9. 2002	6250-8950	370	19B


L. Check of the gas pedal sensor calibration with the computer, AC 5 and 5.2

The check with the computer, if:

- Calibration has not succeeded.
- Calibration is correct but DPS has malfunctions (specially low revs models 6750 and 8350).
- 1. Switch the power of the tractor off. Connect a programming cable to the PC and to the connector **X43**.

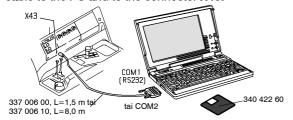

- 2. Turn the PC's power on and start Windows. Insert an AC5 programming diskette to the PC's disk drive A:> and choose "VALT_TRM95_COM1" and start the program according to instr. B.2 on page 370/24B).
- **3.** Switch the power of the tractor on. Text " **RESET** " or "**Loader 0.4**" appears if the communication is OK. In case of malfunction try once more.
- **4.** The computer is now ready to receive information about the calibration. Do the calibration normally according the following instructions.
- 5. Activate the setting mode FIII according to instr. A on page 370/14.
- **6.** Select in the setting mode symbol **1** (gas pedal calibration) with the DPS push buttons (in the speed gear lever knob) and confirm it with the DPS pre-programming button (see page **370/14**)

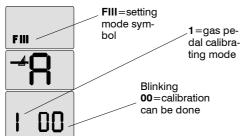

- **7.** When the gas pedal calibration has been selected and confirmed (1 is visible in the LH side segment), digits **00** start to blink in the two RH side segments (2 Hz). This indicates that the calibrating can be done.
- 8. Set the mechanical gears in neutral (engine at low idling). Raise the engine revs evenly and gently with the throttle lever up to max. revs taking about 10 seconds, however all the time the revs must increase. When the max. revs have been reached, wait about 3 seconds and press the HiShift button. At which time the control unit reads values in the calibrating points and saves them in to memory. Lower the low idling speed. After the successful calibration digits 01 appear in the two RH side segments. If the calibration is not successful, start the calibration again and raise the revs slower once again during 12–15 seconds with the hand throttle lever.

NOTE! If the calibration has failed (**00** without blinking in the two RH side segments), the values are not saved but the earlier values remain valid. In this case the calibration must be repeated.

IMPORTANT! The calibrating mode is left by switching the current off.

9. After calibration is finished the calibration values will appear on the laptop's screen automatically, see **Table 1**. Scroll the text on the screen if all values are not shown from the top. On

- 10. From the values can be seen all the pedal position values for the control unit and the motor values in rpm. Selected values of the calibration are below all values. Both all values and selected values must be correct. If they are correct, an information "Erroro" appears, then the calibration is done correctly, see Table 1.
- 11. If the calibration has not been done correctly information "Error" appears and amount of the errors, see Table 2. This can happen if all or selected pedal values do not increase evenly. This means that if the value is decreasing or there are the same value twice, the calibration has failed.
- 12. In table 3 is an example in which calibration appears to be correct, because of the information " Error 0". But in the last row, the value of the engine's revs is lower than the earlier value. This can cause DPS malfunctions. Do the calibration again.

NOTE! Check always that pedal and engine values increase evenly, although the information "**Error 0**" appears. It is possible, that the computer does not find faults.

13. Do the gas pedal calibration again and make sure that revs are rising evenly (without stop) during calibration. Other possible faults listed in stage **G** and in page **370/24**.

Other possible laults listed in stage & and in page of 0/24.				
TABLE 1 Loader v0.4 4Mb- Samples	TABLE 2 Loader v0.4 4Mb- Samples	TABLE 3 Loader v0.4 4Mb- Samples		
Pedal Motor 311 878 rpm 341 960 rpm 356 1045 rpm 368 1125 rpm 377 1208 rpm 414 1378 rpm 434 1465 rpm 451 1558 rpm 451 1558 rpm 464 1641 rpm 473 1728 rpm 488 1817 rpm 530 1916 rpm 551 1996 rpm 551 1996 rpm 563 2078 rpm 572 2161 rpm 580 2245 rpm 609 2335 rpm	Pedal Motor 312 869 rpm 327 950 rpm 344 1031 rpm 354 1115 rpm 371 1196 rpm 385 1279 rpm 401 1363 rpm 416 1444 rpm 433 1525 rpm 465 1691 rpm 480 1777 rpm 499 1863 rpm 512 1944 rpm 497 1863 rpm 514 1952 rpm 534 2046 rpm 551 2127 rpm 567 2208 rpm	pedal motor 233 851 rpm 249 934 rpm 267 1016 rpm 291 1104 rpm 335 1271 rpm 358 1360 rpm 383 1448 rpm 405 1529 rpm 431 1610 rpm 455 1697 rpm 477 1785 rpm 502 1868 rpm 527 1954 rpm 528 2035 rpm 530 2001 rpm		
Selected pedal motor 311 878 rpm 368 1125 rpm 389 1290 rpm 434 1465 rpm 464 1641 rpm 488 1817 rpm 551 1996 rpm 572 2161 rpm 609 2335 rpm	Selected Pedal Motor 312 869 rpm 354 1115 rpm 385 1279 rpm 416 1444 rpm 447 1605 rpm 499 1863 rpm 497 1863 rpm 534 2046 rpm 567 2208 rpm	Selected pedal motor 233 851 rpm 267 1016 rpm 313 1187 rpm 358 1360 rpm 405 1529 rpm 455 1697 rpm 502 1868 rpm 528 2035 rpm 530 2001 rpm		
Error 0 Error 1 Error 0 pedal: gas pedal position motor: engine speed				

If "PEDAL" -values do not increase evenly.

- Check the sensor function in all measuring areas (e.g. with oscilloscope FLUKE 123)
- Check, that the gas pedal is pressed evenly during the whole calibration in the same direction.

If " MOTOR " -values do not increase evenly.

- Check, that the gas pedal is pressed evenly during the whole calibration in the same direction. (the pressing can be slowed a little towards the end).
- Check the function of the engine speed sensor **B11** in all measuring areas.

the top of table is the text, " pedal motor "
https://tractormanualz.com/

	1.8.2000	Model	Code	Page
37. Autocontrol 5 / 5.2	1. 9. 2002	6250-8950	370	20

4. Checking AC 5 / 5.2 components

A. Control unit and display:

If the control unit is damaged, the conditions of other components do not affect the function of AC 5. In case of fault check that the unit connectors have not poor contacts by disconnecting them and reconnecting.

Note! If the control unit must be changed, the tractor model and ser. no. must be told to the factory. Also must be told, if the tractor has a turbine clutch (HiTrol). Fitting the control unit to tractor, see page **370/24A**.

The control unit has not a battery, but its memory is so designed that the programs remain in it, although should the tractor battery be removed. If necessary, voltage measurements can be done on the sides of the unit connectors (without detaching the connectors). Three different units have been used (33373000 and 33373010 in AC 5 and 33373020 in AC 5.2.

The diplay unit cannot be repaired but it is changed as a complete unit. If the diplay does not function, check first that the connector is correctly connected to the diplay unit. If the display has malfunctions, check that connector A1A2 of the control unit is correctly in place and that there is nothing extra between the connector parts. Check also the display unit supply voltage, fuse 24 (tractors J38343-)

B. Switches:

Note! The switches and their wires can be checked in the test mode FII, see table **a** on page **370/10** (AC 5) or page **371/8** (AC 5.2). Then the switch in question is activated and in the diplay can be seen the mode (0/1) of the switch, at which time the condition of the switch and its wires can be verified.


If needed, the faulty switch is changed and wires are checked/repaired.


The fault codes can show faults in different switches. Fault codes, see page **370/6** (AC 5) or page **371/5** and **6** (AC 5.2).

Note! If the switches and wires seem to be OK, but a malfunction exists, the fault may lie in the control unit.

Note! The shuttle lever/hand brake lever is a special switch. When the lever is moved, the magnet in the inner end of the lever moves onto the corresponding reed relay and the desired function is engaged. The DPS pre-programming button is similar to the DPS and HiShift push buttons. The reverse drive controls (TwinTrac) have the corresponding switches).

Note! Check the function of the lever with a multi-meter or in the test-mode **FII** in connection with repairs.

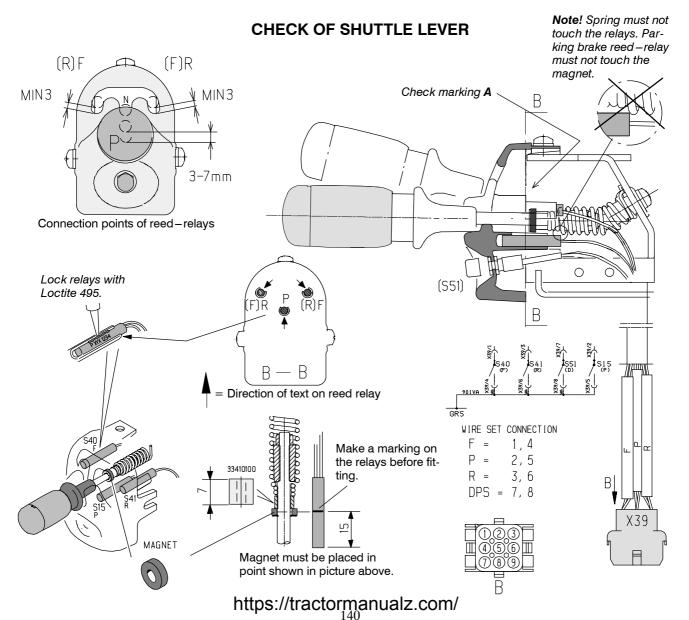

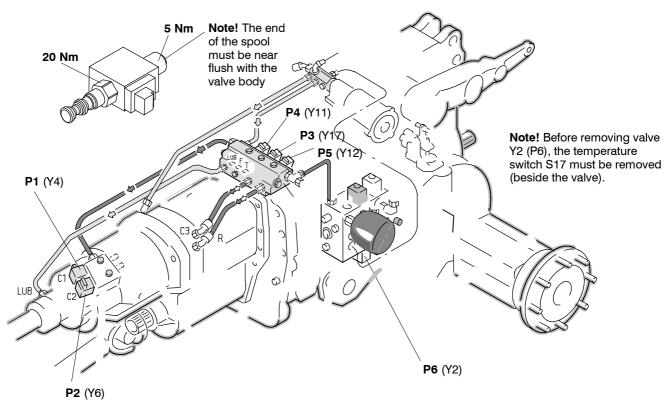

C. Proportional valves, AC 5 and 5.2

Note! The unit self-diagnostics show a fault code, if one of the proportional valves is faulty, see table on page **370/6** (AC 5) or page **371/5** (AC 5.2) (PTO proportional valve is not diagnosed in AC 5). After this the valve can be tested in the test mode. FII, see table **d** on page **370/13**.

- 1. All six proportional valves are similar:
- P1 = DPS foremost clutch C1 prop. valve Y4
- P2=DPS middle clutch C2 prop. valve Y6
- P3=DPS rearmost clutch C3 prop. valve Y17
- P4=forward drive (F) proportional valve Y11
- P5=reverse dirve (R) proportional valve Y12
- P6=PTO proportional valve (not diagnosted in AC 5) Y2
- 2. When the proportional valve is energised, it is magnetic and clutch in question is pressurised.
- P1 is energised, when DPS speeds I or II are selected
- P2 is energised, when DPS speeds I or III are selected
- P3 is energised, when DPS speeds II or III are selected
- P4 is energised when forward drive is engaged

PINS (X13)	SOLENOID	RESISTANCE (+10+30 °C)
2<>5 4<>5 7<>5 11<>5 12<>5 13<>5	Y2 (PTO) Y4 (C1) Y6 (C2) Y17 (C3) Y11 (F) Y12 (R)	7-9 ohms



- P5 is energised when reverse drive is engaged
- **P6** is energised when the PTO is engaged.
- 3. The resistance of the proportional valves is measured from connector X13 pins. Correct value is **7–9 ohms** (+10°C...+30°C).
- 4. If the resistance is incorrect, the valve solenoid is changed. After this the valve indexes must be set, see instr. on page 370/24D.
- 5. If the resistance is correct, but in the circuit there are malfunctions, check the valve wires and connectos. If these are OK, perform the calibration of the initial pressure. Also the diodes must be checked in AC 5 according to table below (in AC 5.2 the diodes are placed in the control unit A1).

Note! One possible and common fault is impurities in the valves. This can cause faults which are very difficult to find. If you doubt this fault, change the proportional valve or try to clean it.

6. If the valve and its wires seem to be OK, but malfunctions exist, the fault can lie in the control unit.

Note! During repair check (before engine start) that the valve spool end is nearly flush with the valve body.

Diode test with multimeter, AC 5 only.

SOLENOID	DIODE HOU- SING (V1, V4)	PINS (V1 , V4)
Y2	V1	2<>5
Y4	V1	9<>8
Y6	V1	7<>8
Y17	V4	9<>8
Y11	V4	7<>8
Y12	V4	3<>6

V1, V4 3 2 1 6 5 4 9 8 7

https://tractormanualz.com/

1. 10. 1999


6250-8950

Model

Code 370

Page 22

1.8.2000 (**F1**) B11 ACTIVE (HALL) SENSORS

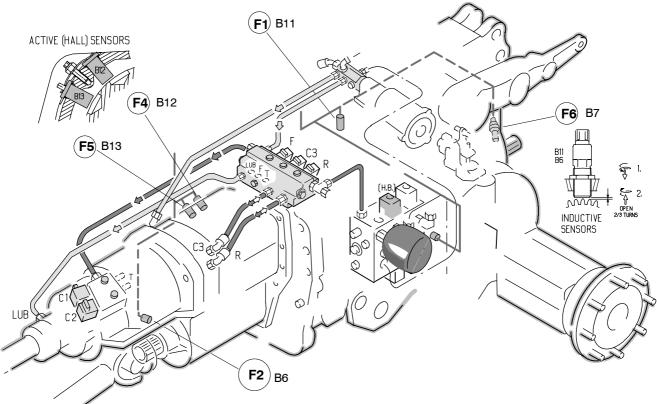

D. Rotation speed sensors, AC 5 and 5.2

Note! If you doubt that one speed sensor is faulty, carry out the checking of frequency outputs, see table c on page 370/12.

The fault codes can show possible faults in the rotation speed sensors. Fault code list, see page 370/6 (AC 5) or pages 371/5 and 6 (AC 5.2).

F1 = engine speed sensor B11

F2=gearbox speed sensor B6

F4=shuttle speed sensor B12 (upper), order no on wire.

F5=shuttle speed sensor B13 (lower), not order no.

F6=PTO speed sensor B7


1. If in the test mode one sensor functioned faulty, measure the resistance of the sensor. The resistance can be measured from the wire loom connector X13. If the resistance is infinitive, it should be measured from the sensor pins so that possible breaks can be verified.


2. The resistance of the shuttle sensors F4 and F5 cannot be measured. These sensors are tested in the test mode FII. Check first sensor fuse (F22, AC 5 only) and measure sensor supply voltage (=battery voltage) in connector X28 (see table below)


Note! The gearbox speed sensor is accessible after splitting the tractor frame. The other sensors are accessible without splitting the tractor. The engine speed sensor is situating under the cab on the gearbox. The shuttle speed sensors are accessible from under the cab on the RH side of the tractor when a cover is removed.

- 3. If the sensor resistance is correct, check the sensor wires and connectors. If the resistance was incorrect, the sensor is changed.
- 4. Fitting and adjustment of sensors F1, F2 and F6 is done in the same way as for corresponding sensors on the AC IV unit, see pages 351/2-3.
- 5. The shuttle sensors F4 and F5 cannot be adjusted, but they are pushed into place and locked with a locking plate. Note! The sensors must be fitted correctly: F4 up (marked), and F5 down. Check the sensors in the test mode, point F7.
- 6. If the wires and sensors are OK, but malfunctions exist, it is possible that the control unit is faulty.

RESISTANCE MEASUREMENTS

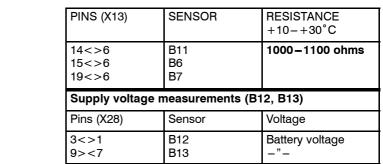

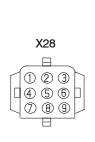


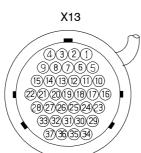

37. Autocontrol 5 1. 10. 1999 | Model | Code | Page | 1. 8. 2000 | 6250 - 8950 | 370 | 23

E. Temperature sensors in AC 5 (AC 5.2, see page 371/13).

1. Gearbox oil temperature sensor B14

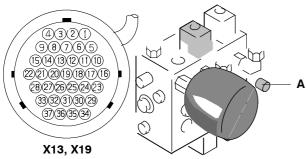

Note! The sensor is situating on the servo valve block on the LH side of the gearbox.

- 1. If this sensor or its wires have malfunctions, the self-diagnostics show the following codes:
- A311 (value over+150°C, unpossible).
- A312 (value below 50°C, unpossible).
- Check the sensor in the test mode FII, see table b on page 370/11. Compare the reading with the actual oil temperature.
- 3. If the tempearture reading is incorrect or it is lacking, then check the sensor and its wires. Measure the resistance of the sensor from connector X13 pins 10 and 6:

Resistance values (±1 %):

- $-1600 \Omega (\pm 0^{\circ}C)$
- $-2000 \Omega (+25^{\circ}C)$
- $-3300 \Omega (+100 ^{\circ}C)$
- 4. Change the faulty sensor.

Note! If this sensor is faulty, malfunctions can occur in the transmission multi-disc clutches (delays or jerks).

Note! If the temperature sensor seems to be OK, but malfunctions occur, the control unit can be faulty.

2. Outdoor temperature sensor B17.

This sensor is similar as the gearbox oil temperature sensor and it is placed in the front part of the tractor on the bracket for signal horn.


- 1. If the outdoor temperature reading is faulty or is lacking, check the sensor in the test mode FII, see table ${\bf b}$ on page ${\bf 370/11}$.
- 2. Compare the test reading with the ambient outdoor temperature. If no outdoor temperature value is visible, check the sensor and its wires .
- 3. If the reading is incorrect, check the sensor fitting and measure its resistancefrom connector X19 pins 26 and 37. Replace the faulty sensor.

Resistance values:

- $1600 \Omega (\pm 0^{\circ}C)$
- $-2000 \Omega (+25^{\circ}C)$
- 3300 Ω (+100°C)

Note! The function of this temperaure sensor does not affect the technical function of AC 5.

F. Clutch pedal position sensor B16 in AC 5 (AC 5.2, see page 371/13).

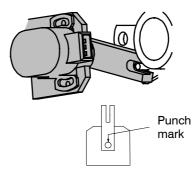

Note! The position sensor informs the control unit the position of the clutch pedal, so that the control unit can control the clutches.

If the position sensor has malfunctions, the self-diagnosis shows the following fault codes:

- fault code A314 (signal not within given limits).
- fault code A315 (pedal calibration faulty or pedal limit switch S9 wrongly adjusted) (switch S2W in the reverse drive controls (option)).
- 1. Check the function of the position sensor in the test mode (table **b** on page **370/11**). If the function is not within the given limits, check the sensor mounting and wires. Check also the fitting of the lever on the sensor spindle.
- 2. Check the adjustment of the limit switch S9 in the test mode: in the switch on point the display must show 03...08 (when lifting the pedal). When needed, adjust the position of the limit switch so that it switches on (click) just a little before the pedal extreme position. Recheck in the test mode.
- 3. Measure, if necessary, the position sensor voltages. Check the voltages always before calibrating the pedal. Connect ETV 894 100 between the sensor and its connector (see picture on the next page). If ETV is not available, measure the supply voltage in the wire loom connector (see picture on the next page). Signal voltage can be measured from control unit A1 connector A1A3/7—A1A3/8 (see page 370/25).
- measure the supply voltage (+7,7...8,3 V) between pins 1 and 3.
- measure signal voltage between pins 1 (ground) and 2 (signal). Ensure that the voltage value changes evenly when moving the position sensor lever. Adjust the sensor position if needed. If the position sensor is faulty, fit a new one and carry out the pedal calibration. Adjust the position of the sensor.

Clutch pedal	Pedal up	Pedal in bottom
Signal voltage	1,5 -3,0 V	5,3-6,0 V

Note! When necessary, the gas pedal sensor B15 can be temporarily used as a spare part (similar sensor, remove the lever). After that the DPS automatic gear change does not function. Try to adjust the pedal "bottom" value to 5,7–5,8 V and then check that the "upper" position value is within given limits.

4. Carry out the pedal calibration according to instruction $\, {f C} \,$ on page 370/15.

Note! If the sensor and its wires seem to be OK, but malfunctions occur, the fault may lie in the control unit A1. Secure the screw, which fasten the arm to the sensor spindle with Loctite 222.

	1_8-2000	Model	Code	Page
37. Autocontrol 5 / 5.2	1. 9. 2002	6250-8950	370	24

G. Gas pedal (fuel injection pump) position sensor B15 in AC 5 (AC 5.2, see page 371/14).

Note! If this sensor is faulty, there occur malfunctions in the DPS automatic speed change (auto1, auto2). Also a faulty engine speed sensor can cause this kind of malfunctions.

If the position sensor has malfunctions, the self-diagnosis shows the fault code **A313**.

- 1. Check in the test mode FII (table **b** on page **370/11**), whether the pedal values are between the given limits. If the function is incorrect, check the position sensor bearings (no clearance) fitting and wires and wear of the pump pin. Also check the sensor. Also check the connector X1A (in engine compartment).
- 2. Measure, if needed, the position sensor voltages. Check the voltages always before calibrating the pedal. Connect ETV 894 100 between the sensor and its connector (see picture below). If ETV is not available, measure the supply voltage in the wire loom connector (see picture on the next page). Signal voltage can be measured from control unit A1 connector A1A3/4—A1A3/5 (see page 370/25). The voltages can also be measured in connector X1A.
- measure the supply voltage (7,7...8,3 V) between pins 1 and 3.
- measure signal voltage between pins 1 (ground) and 2 (signal). Ensure that the voltage value changes evenly when moving the position sensor lever. Adjust the sensor position if necessary. If the position sensor is faulty, fit a new one in the correct way (punch mark on shaft towards lever) and perform the calibration of the pedal. Adjust the position of the sensor. Fasten the sensor in point, in which the sensor shaft is in the same line with the pump lever shaft (see point A in picture below).


Gas pedal	Pedal up	Pedal in bottom
Signal voltage	5,7-5,8 V	1,5-4,0 V

Adjust the pedal "upper" value and check then that the pedal "bottom" position value is within the given limits. Secure the screw, which fasten the arm to the sensor spindle with Loctite 222.

3. Perform the pedal calibration according to instr. **B** on page **370/15**. If the calibration failed, turn the sensor into a little different position and try again the calibration. When needed, try the test with a new sensor.

Only on model **8950** can the sensor be fitted in different way with fitning set no. **345 60 300** (see fitting instruction **39.25**)

Note! The calibration of the gas pedal must be done according to the periodical maintenance program.

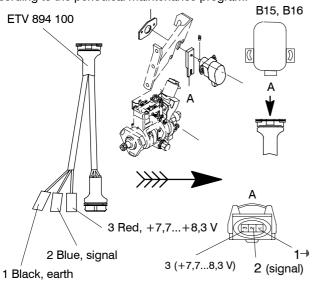

H. Detection of driver in AC 5 and 5.2

Purpose of the switch S60

In AC 5 / 5.2 is used for safety reasons so called driver detection system. The detection switch prevents unintentional engagement of the PowerShuttle in the situations, in which the driver does not sit on the seat.

Function

The switch in question has been connected to AC 5/5.2 control unit pin d05. When the driver is sitting on the seat (weight must be over 30 kg), the switch contacts are closed and d05 is activated (GND control). The function of the switch can be seen in table **a** on page **370/10** (AC 5) or on page **371/8** (AC 5.2). When the driver leaves the seat, the switch contacts open (delay 6 seconds. 4 sec. in program versions 38, 40, 41 and in AC 5.2 30 sec. if the clutch pedal is depressed).

Function in different situations

When the driver engages the PowerShuttle direction, the AC 5 control unit checks the signal from the seat. If there is not a signal (driver does not sit on the seat), the direction arrow in the AC 5 display starts to blink and the direction is not engaged. After this the direction can be engaged just when the shuttle lever is moved to the parking brake position, the seat signal is activated (driver sits on the seat) and the direction is re—engaged.


If the direction has been engaged (or is being engaged) and the seat signal disapperas (e.g. driver stands up from the seat), a counter is started. The counter damps possible disturbing information, which can appear e.g. when driving on an uneven ground. If the seat signal remains floating (driver does not sit on the seat) over 6 seconds (4 sec. in program versions 38, 40, 41 and in AC 5.2 30 sec. if the clutch pedal is depressed), the Shuttle is disengaged and the direction arrow starts to blink. After this the direction can be engaged just when the shuttle lever is moved into the parking brake position, the seat signal is activated and the Shuttle direction is engaged again.

Checking function of the sensor

- in the test mode FII (digital input d05)
- with ohmmeter in the wire loom connector (beside the seat base). The switch is normally open, but closes, when driver sits on the seat

Changing the sensor


- remove the seat upholstery
- detach the sensor from its holder by pulling it
- remove the sensor together with wire
- pass a new sensor wire and press the sensor into its holder.
- refit the upholstery. Connect the connector. Check the function.

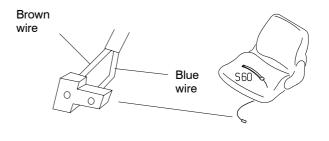

	1.8.2000	Modell	Code	Page
37. Autocontrol 5 / 5.2	1. 9. 2002	6250-8950	370	24A

5. Working orders, AC 5 and 5.2

A. Fitting AC 5 / 5.2 control unit on the tractor

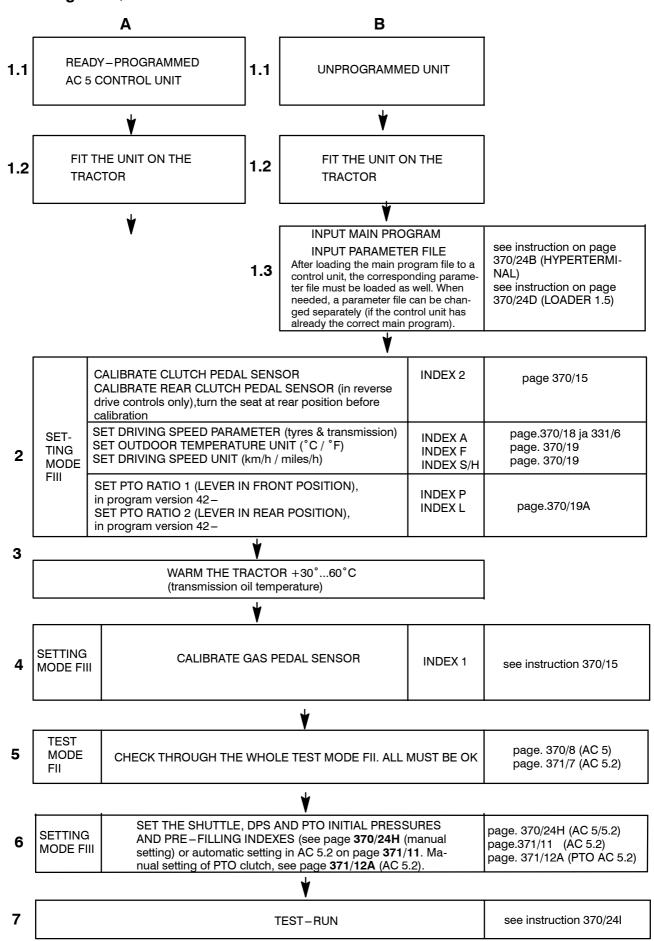

B. Programming of AC5 and AC5.2 control unit by means of HYPERTERMINAL —loading program.

The PC used must have "HYPERTERMINAL" – terminal program. Installing can be done with the MS – WINDOWS – program disk. Please note the PC must have Adobe Acrobat 4.0 or later version to view these files. If needed contact your program supplier.

Programming quick instruction (perfect instructions below).

Used main program and parameter files are in tables on page 370/24G.

- B.1 Connect the computer to the unit according to the pictures 1 or 2 (in points 1-3).
- B.2 Start the HyperTerminal program and switch power on (in points 4-5).
- B.3 Delete the old main program by typing command REM_MEM and load a new main program (in points 6–9).
- B.4 Disconnect and connect communication once more (in points 10).
- B.5 Delete old parameter file by typing command LOAD_PAR and load new parameter file (in points 11–15).
- B.6 See the check code by typing command PROC_VER? and compare check code on page 370/24G with the table (in points 16–19).
- B.7 Carry out settings and test-drive (see page 370/24A diagram).

NOTE: After loading the main program file to a control unit, the corresponding parameter file must be loaded <u>as well.</u> When needed, a parameter file can be changed separately (if the control unit has already the correct main program).

After programming the check code 1 must be same as in the table.

B.1 Connections

Removed control unit (see picture 1):

- 1. Connect the cable of the programming unit (part no. **340 425 00**) to the PC's serial communication port COM 1 (or to COM 2).
- 2. Connect an AC5.2 control unit A1 to the connections of the programming unit.
- **3.** Connect the power supply. Switch power off (on/off switch). Go to point **4.**

Control unit that has been assembled to tractor (see picture 2):

- 1. Switch power of the tractor off.
- 2. Connect a programming cable (part no. 337 006 00 or 337 006 10) to the PC's serial communication port COM 1 (or to COM2).
- **3.** Connect the cable to the connector **X43** (at the right side panel).Go to point **4.**

B.2 Starting of the program

- 4. Turn the PC's power on and start Windows 95 or 98. Insert an AC5 programming diskette (diskettes part. no. page 370/24G) to the PC's disk drive A: > choose " My computer " > choose " 3½ floppy (A:) " > choose file " VALT_TRM95_COM1" or " VALT_RM95_COM 2" depending on which COM—port of the computer the cable is connected to (double click) > program " Hyper Terminal" starts > wait until the program has started.
- **5.** Switch the programming unit power on (or tractor power on) => text (AC5: **RESET**) or (AC5.2: **Loader v0.4 4Mb**)

appears, it means that communication is OK. In case of malfuntion try once more (switch off > switch on).

NOTE! If the transmission between the computer and the control unit fails text RESET begins to appear continuously. Press the button s (lower case) many times until a text "Software download, Enter password?" appears > press the backspace button (< -) ten times > write the password 5533710 > press Enter > the control unit start to wait loading a file "Send download file" > send the program file (see position 8).

B.3 Deleting main program and loading the new one

NOTE! If the control unit has not been programmed earlier it is not necessary to perform stage no. **6** (the control unit performs it by itself and goes to stage no.**7**).

- **6.** Write **REM_MEM** ("Caps Lock" off, use "shift" key) > **enter**
- Appears: FLASH ERASE. * * * * * * (the memory of control unit is cleared) > after a few seconds appears: * * OK * * SEND DOWNLOAD FILE.

7a From ser. no **J38343** incl. Switch off the tractor current with the ignition switch and switch on again >tractors display is emptied.

- 8. Choose "Transfer " > " Send text file "
- 9. Go to point "Files of type" > choose "All files (*.*)" > go to point "Look in" > choose directory "Programs" > choose with double click a suitable program version (with help of the page 370/24G) > transferring data begins (the process can't be seen in PC's display) wait 3...5 minutes. Windows 2000: wait 15...25 minutes. > when the process is ready text (AC5: RESET) or (AC5.2: Loader v0.4 4Mb) appears (and display in tractor begins to work) (=OK)

B.4 Reconnect the communication

10. Choose "Call" > " Disconnect " > " Call " > " connect ". Go to point B.5 Deleting and loading of the parameter file.

07. Auto control 5/5 0	1.8.2900	Modell	Code	Page
37. Autocontrol 5/5.2	1. 9. 2002	6250-8950	370	24C

B.5 Deleting and loading of the para-

meter file (If necessary a parameter file can be deleted and copied separately without deleting the program file).

- 11. Switch programming unit power off (or switch the tractor power off) > switch power on > appears text (AC5: RESET) or (AC5.2: Loader v0.4 4Mb) (=OK)
- 12. Write LOAD_PAR ("Caps Lock" off, use "Shift" key) > enter > OK (old parameters are cleared in memory)
- 13. Choose "Transfer" > "Send text file"
- 14. Go to point "Files of type " > choose "All files (*.*) " > go to point "Look in " > choose directory "3½-levyke A: " > choose directory "Parameters ".
- **15.** Choose a parameter file by means of table (page **370/24G**). double click > appears text (AC5: **RESET**) or (AC5.2: **OK Loader v0.4 4Mb**) (=OK)).

NOTE! If in connection with inputting parameter file the following information appears "parameters are cleared!!!! card will not work until set!!!", carry out again points 12...15 (type LOAD_PAR>enter...).

NOTE! If loading of the parameter file has not succeeded, turn the power off for 30 seconds and carry out points 12...15 once more.

B.6 Programming inspection

16. Write **PROC_VER?** > **enter** > a number with four marks appears in PC's display, this clarifies what files are situated in the control unit program file and parameter file (see page **370/24G**). Check that the number with four marks correspond to the right control unit part no. and tractor type. If necessary copy parameters once more (stages 11...16).

NOTE! The two last numbers of the check code 1 cannot be **99** (e.g. 53**99**). Then the control unit is missing parameter file.

- 17. Choose " Call " > " disconnect "
- **18.** Switch programming unit power off (or switch tractor power off).


New control unit: Fill in an adhesive label (part no and file names and tractor model, see table 1) > fasten it on the control unit in the right position (see picture 1).

19. Disconnect the programming cable from the control unit (or from tractor).

NOTE! Exit from the "Hyper Terminal" program, if the control units you are not going to be programmed.

B.7 Settings and test-drive

20. Carry out settings and test—run the tractor according to instr. at page **370/24A**.

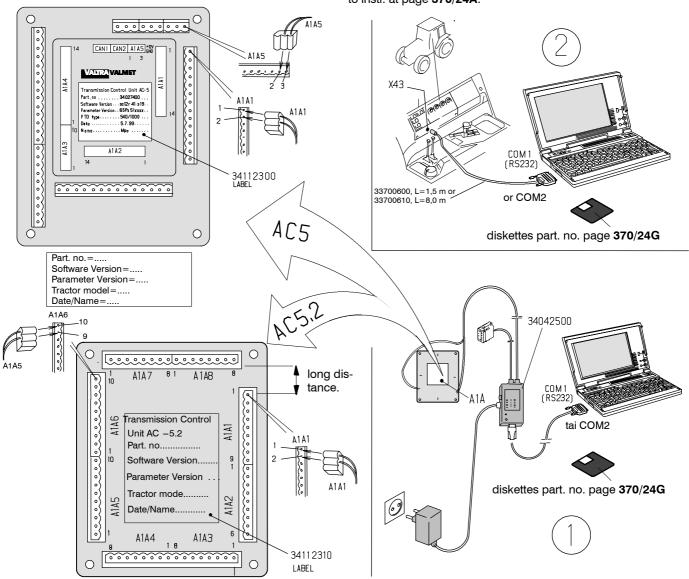

C. Programming of AC5 and AC5.2 control unit by means of LOADER 1.5 loading program.

Programming can also be done as before (by means of HyperTerminal in MS Windows, see the service manual page no. 371/24B). Instructions are also included in the disk (Service Manual pages), Please note the PC must have Adobe Acrobat 4.0 or later version to view these files. If needed contact your program supplier.

Programming quick instruction (perfect instructions below).

Used main program and parameter files are in tables on page 370/24G.

- C.1 Connect the computer to the unit according to the pictures 1 or 2 (in points 1-3).
- C.2 Start the Loader 1.5 program (in point 4).
- C.3 Load main program to the unit by clicking "SOFTWARE" (in points 5-6).
- C.4 Load parameter file to the unit by clicking "PARAMETERS" (in point 7).
- C.5 See the check code by clicking "Version" and compare check code on page 370/24G with the table (in points 8-10).
- C.6 Carry out settings and test-drive (see page 370/24A diagram).

NOTE: After loading the main program file to a control unit, the corresponding parameter file must be loaded <u>as well</u>. When needed, a parameter file can be changed separately (if the control unit has already the correct main program).

After programming the check code 1 must be same as in the table.

C.1 Connections

Removed control unit (see picture 1)

- 1. Connect the cable of the programming unit (part no. **340 425 00**) to the PC's serial communication port COM 1 (or to COM 2).
- 2. Connect an AC5 control unit or AC5.2 control unit to the connections of the programming unit. Please see the drawings on pages 370–24E.
- **3.** Connect the power supply. Switch power off (on/off switch). Go to point **4.**

The control unit is situated in the tractor (see picture 2).

1. Switch the power of the tractor off.

- 2. Connect a programming cable (part no. 337 006 00 or 337 006 10) to PC's serial communication port COM 1 (or to COM 2).
- **3.** Connect the cable to the connector **X43** (at the right side panel). Go to point **4.**

C.2 Starting the Loader 1.5 program


4. Turn PC's power on and start Windows. Insert a program diskette (diskettes part. no. page 370/24G) to PC's drive A: > choose " My computer" > choose " 3½ floppy (A:) " > choose file " Loader 1.5" (double-click) > program Loader 1.5 starts.

C.3 Loading the main program

- **5.** Go to point "**Port**" and choose the port where the cable is connected (COM 1/COM 2).
- 6. Click the button SOFTWARE > click the button "Browse" > choose directory "Programs" (double-click) > choose a suitable program file (double-click) > the chosen file appears in the window "File" > click the button "Begin Download" > turn the power on (programming unit or the ignition switch) > there appears text in the white window explaining what the status is > after a while a blue bar at the lower part of the window begins to grow: it shows how much of the program has been loaded (the point "Time left" shows estimated time left) > when the loading process is successful the text "Download complete!" appears in the white window.

Go to point: C.4 Loading the parameter file.

NOTE! On page **370/24F** there are tips for error situations, if the main program loading has not succeeded.

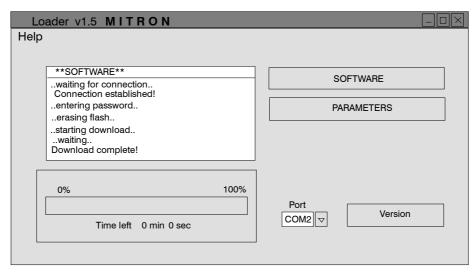

		Modell	Code	Page
37. Autocontrol 5/5.2	1. 9. 2002	6250-8950	370	24E

C.4 Loading the parameter file (Do this always after loading a program file!)

7. Click the button PARAMETERS > click the button "Browse" > choose directory "Parameters" (click the yellow button where there is an arrow up and choose directory Parameters by double—clicking) > choose a parameter file (double—click) > the chosen file appears in the window "File" > click the button "Begin download" > a loading process begins and a blue bar at the lower part of the window begins to grow > when the loading process is successful the text "Parameter download successful!" appears in the white window.

NOTE! On page **370/24F** there are tips for error situations, if the parameter file loading has not succeeded.


C.5 Checking and markings

8. Click the button "**Version**" > after a few seconds the program identification number e.g. 86 17 can be seen in the white window (check **code 1**) > confirm that the check code corresponds to the tractor model (see page **370/24G**).

- **9.** Turn the power off (switch off program unit or ignition switch) > if the more control units are not going to be programmed, exit from the Loader program by clicking **X button** (at the upper right corner of the window). Disconnect the programming cable from the connector **X43**.
- If an unfixed control unit is being programmed, <u>let the connectors of the programming unit be connected in the control unit</u> (fastening of the label in right position is easier).
- **10.** New control unit: Fill out an adhesive label (part no and file names and tractor model) > fasten it on the control unit in right position (see picture 1) > disconnect the cables from the control unit.

C.6 Settings after programming (after fixing the control unit in the tractor)

11. Carry out settings and test—drive according to the instructions at page **370/24A**.

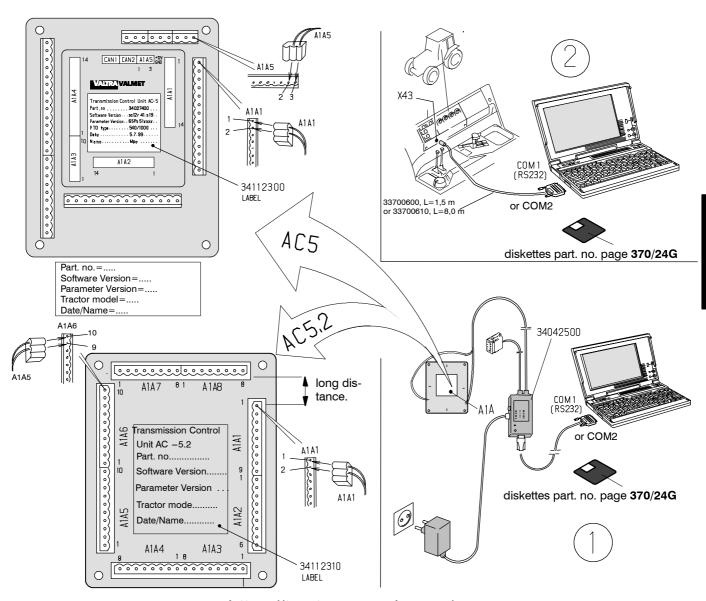

		Modell	Code	Page
37. Autocontrol 5/5.2	1. 9. 2002	6250-8950	370	24F

Tips for error situations

When loading the main program

1. The loading process does not start or program execution stops (there is no more text after text " waiting for connection.. ":

Click the button " Cancel " > the loading process stops (text " Download cancelled " appears) > check that the right communication port at point " Port " has been chosen (it must be the same port where the cable to the PC has been connected) > check that the power has been turned on (at programming unit or by ignition switch) > check that the cables to the right connectors of the control unit have been connected (connector positions are different on AC5 control unit 333 730 10 and on AC5.2 control unit 333 730 20 and 333 730 30).

2. The loading process of a main program is almost ready but the process does not become complete, text " waiting" stays at the window for a long time. (however the main program is usually already loaded):

Press the button " **PARAMETERS** " > load the parameter files. If the parameter file can be loaded successfully, press the "**Version**" button > If the software check code is right the control unit has been programmed completely.

3. Error message " Download failed ":

Loading a file to the control unit has failed. This can appear if the power supply for the control unit is not OK all the time, or the communication between the PC and the control unit does not work properly > check that the programming cable/unit is OK > check also that the control unit has power supply (a fuse in the programming unit). > Try to load a program once more.

4. Message " Download end ":

Loading a file to the control unit has failed > Try to load once more > If the same message " **Download end** " appears every time, try to load a parameter file > Check the software check code by pressing the button " **Version** " > If the check code is OK the control unit has been programmed properly

5. It is not possible to program a control unit or to check the version number:

Exit from the Loader 1.5 program > try to program the control unit by means of the HyperTerminal program, see the instructions at page 370/24B.

When loading a parameter file

1. Error message "!Error! Cannot start download " when loading a parameter file:


Downloading of a parameter file did not start > turn the power off for 10 seconds and turn the power on again > Try to send the parameter file again.

(Repeat turning of the power off if needed and hold the power off for a minimum of 30 seconds.)

If the problems persists, load the main program file and the parameter file once more.

2. The software check code does not appear by pressing the "Version button":

Wait for a while > press the "Version" button again. If the check code does not appear turn the power off for 3-5 seconds > Press the "Version" button again > If the check code does not appear load the program file once more.

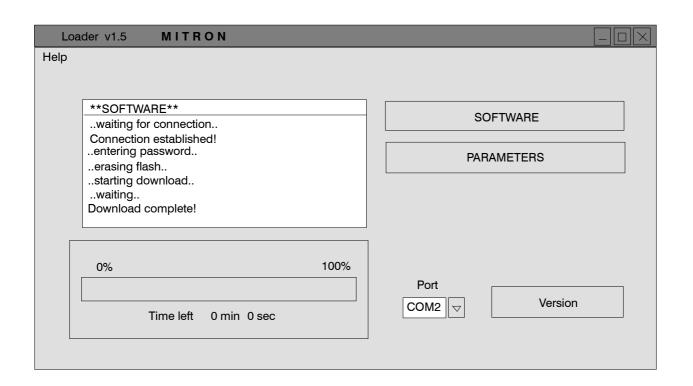

		Modell	Code	Page
37. Autocontrol 5/5.2	1. 9. 2002	6250-8950	370	24G

D. Main program and parameter files tables of AC5 and AC5.2 -control units

Autocontrol 5


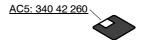


TABLE 1: Control unit part numbers and file names, versions **53** and **65**. These parameter files and check codes are used in Service and in Spare Parts. The program disk part no is 340 422 60.

For trac- tors no.	Suitability tractor models	Control unit part no.	Program file- name ³)	Parameter file name ³)	Check code 1 1)	Check code 2 ²)
		333 730 10	Not prog- rammed	Not programmed		
-J38342	6250, 6350, 6550, 6650, 6850, 8050, 8150, 8450,8550, 8950	340 272 30	AC5V 53 .s19	6250_8950_5365.txt	53 23	23 53
-J38342	8350	340 276 30	AC5V 53 .s19	8350_5365.txt	53 33	33 53
J38343 -K41106	6250, 6350, 6550, 6650, 6850, 8050, 8150, 8450, 8550, 8950	341 573 30	AC5V 65 .s19	6250_8950_5365.txt	65 23	23 65
J38343 -K41106	8350	341 574 30	AC5V 65 .s19	8350_5365.txt	65 33	33 65

³) The files can be copied into the control units which have number **333 73 010** and the ser. no. end is **00400** or greater.

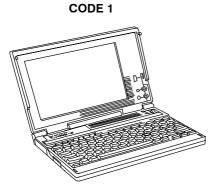

1) Check code 1 is visible in the PC display by typing command **PROC_VER?** (HYPERTERMINAL) or by clicking "**Version**" (LOADER 1.5)



²) Check code 2 is visible in the tractor display (in the test mode **FII**)

Autocontrol 5.2

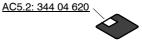


TABLE 1: Control unit part numbers and file names, version **86.** In Service, these parameter files and check codes are used in Spare Parts and in production. The program disk part no is 344 046 20.

For trac- tors no.	Suitability tractor models	Control unit part no.	Program file- name ³)	Parameter file name ³)	Check code 1 1)	Check code 2 ²)
-		333 730 20 333 730 30	Not program- med	Not programmed	-	-
K41107-	6250, 6350, 6550, 6650, 6850	344 038 20	AC5V86.s19	6250_6850_86.txt	86 17	17 86
K41107-	6250, 6350, 6550, 6650, 6850 + HiTrol	344 039 20	AC5V 86 .s19	6250_6850_HT_86.txt	86 27	27 86
K41107-	6750	347 884 20	AC5V86.s19	6750_86.txt	86 67	67 86
K41107-	8050, 8150	344 041 20	AC5V86.s19	8050_8150_86.txt	86 37	37 86
K41107-	8350	344 043 20	AC5V86.s19	8350_86.txt	86 47	47 86
K41107-	8450, 8550, 8950	344 044 20	AC5V86.s19	8450_8950_86.txt	86 57	57 86
K41107-	X100, X110, X120	344 038 20	AC5V 86 .s19	X100_X120_86.txt	86 17	17 86

³⁾ The files can be copied into the control units which have number 333 73 020 or 333 73 030.

	1.8-2000	Model	Code	Page
37. Autocontrol 5	1. 9. 2002	6250-8950	370	24H

E. Manual setting of indexes for DPS and shuttle in AC 5 and 5.2

NOTE! When needed, manual setting can be done in the AC5.2, if automatic calibrating cannot give a correct value.

- 1. Drive the tractor warm, transmission temperature +30°C...+65°C.
- 2. Shuttle in P-position, gear H1, with accelerator lever 1200-1500 r/min.

Note! It is unnecessary to stop the engine after the index setting. Enough is that the tractor current is switched off and then immediately on, so that the tractor can be driven. In the same way not to stop the engine it can be moved to the setting mode FIII. In this case must simultanious be pressed switches, which activate the test mode.

3. Shuttle pre-filling	time indexes	
Setting mode FIII H1 1200 – 1500 r/min	Set the F-clutch initial pressure index to: -6 Set the R-clutch initial pressure index to: -6	Index 5 Index 6
	Set the F-clutch pre-filling time index to: -3 Set the R-clutch pre-filling time index to: -3	Index 3 Index 4
	Make starting drivings forwards with the shuttle lever. Increase pre-filling index one step by turns $(-3, -2, -1, 0, +1, +2, +3, +4)$ until the jerk is disturbing. Diminish the index $1-2$ steps. Check that in the starting driving there is a clear but small jerk.	Index 3
	Set the R-clutch pre-filling index in the same way	Index 4



4. Shuttle initial pres	ssure indexes	
Setting mode FIII H1 1200 – 1500 r/min	Increase F-direction initial pressure index one step by turns $(-4, -3, -2, -1, 0, +1, +2, +3, +4)$ and make starting drivings with the shuttle lever. Index is suitable, when the tractor accelerates evenly and there is not delay or break in the traction.	Index 5
	Set the R-direction initial pressure index in the same way	Index 6
Test mode FII H1 1200 – 1500 1/min	Start the engine and activate the test mode FII and find point A4. Depress the clutch pedal and switch on the forward driving (F). Raise the pedal slowly and watch the display and observe in which pedal position the tractor starts to move (%-value).	
	Switch on the R-direction. When starting driving rearwards the %-value must be about 10 %-units greater that when starting driving forwards. E.g. in forward driving 20/rearward driving 30. If the forward driving value is the same or greater that the rearward driving value, recheck the initial pressure indexes. NOTE! In the AC 5.2 can the pedal engaging point be adjusted with a separate index (see page 371/10).	



5. DPS initial pressure indexes						
Setting mode FIII H1 1200 – 1500 r/min	Check the function of the DPS in different situations: different driving speeds, in traction, without traction, in engine braking. — If the traction breaks when engaging the speed, increase the index. — If the engagement is too sharp, decrease the index					
		The function of DPS and indexes				
	switching the quick-shift gear	Closing clutch (during shifting).	Pressurized clutches (after shifting).	Index no:		
	1 - > 2 2 -> 3 3 -> 2 2 -> 1	C3 C2 C1 C2	C1 + C3 C2 + C3 C1 + C3 C1 + C2	Index 9 Index 8 Index 7 Index 8		

6. Carry out a test-run (see instruction 370-24E)

	1_8-2000	Model	Code	Page
37. Autocontrol 5 / 5.2	1. 9. 2002	6250-8950	370	241

D. Test-run, AC 5 and 5.2

HiTech -tractors shall be test-run always after repair works and, when necessary, also in connection with fault tracing:

Before the test-run:

- If the tractor has been repaired, carry out all points in the test mode; all functions must be OK before the test-run.
- If the fuel injection pump or its linkage has been repaired or adjusted, calibrate the gas pedal position sensor B15
- If one of the DPS or shuttle proportional valves has been changed, the resetting of the shuttle and the DPS pre-filling time and initial pressure indexes must be done.
- If a new AC 5 / 5.2 control unit (A1) has been fitted or it is reprogrammed, carry out the following settings in the setting mode FIII:
- driving speed parameter, temperature and driving speed units
- calibration of the clutch pedal and gas pedal sensors
- resetting of the pre-filling times and initial pressure indexes of shuttle, DPS and PTO.

Test-run, general:

- test-run the tractor on a safe place, not IN TRAFFIC
- observe the display unit during the test-run; if a fault code appears, repair the fault and carry out a new test-run
- if a minor fault appears during the test-run, the control unit shows a fault code in the display; often driving can be continued but clutch pedal must be used when starting driving and when the driving direction is changed.
- If a serious fault appears during the test-run, the control unit prevents driving or using PTO to protect the transmission against break-downs
- Check, that the HiTech display shows near the same driving speed as the AD – instrumentFunction of the safety systems:

Safety system

- Start prevention: try to start the engine with shuttle lever in positions F-R-N-P (clutch pedal depressed); the engine is allowed to start only in P-position (parking brake applied), and the engine is not allowed to start, if the clutch pedal is in the upper position
- Driver detection (in the seat): stand up from the seat, after 7...10 seconds engage direction F (speed gear engaged, clutch pedal up); The tractor is not allowed to move, and the direction arrow in the display starts to blink, (to continue driving: sit on the seat, move the shuttle lever to pos. P and engage after that the driving direction). AC 5.2: the delay of the seat switch is 30 sec, if the clutch pedal has been depressed.
- Emergency brake system: switch off current with the ignition switch (driving speed max. 2 km/h for the safety); the parking brake must engage after a while.

Function of the parking brake (HiBrake):

- Drive below 4 km/h (below 2 km/h in program versions 42, 43, 60, 62), apply parking brake: parking brake must engage after a while
- Drive at a speed of 5...6 km/h, apply parking brake; the parking brake must engage just when the driving speed has dropped below 4 km/h (below 2 km/h in program versions 42, 43, 60 and 62).
- $-\,$ The parking brake must disengage (engine running) in the shuttle lever positions N-F-R Function of HiShift function:

Function of HiShift

- -Start driving (several times) by using the HiShift button, the tractor must start to move with even acceleration (not jerks or long delay)
- Drive ahead over 10 km/h, change gears 1-2-3-4 by using HiShift buttons (without clutch pedal); traction must again continue when the HiShift button is released.

Function of the clutch pedal:

- Start driving slowly with the clutch pedal: traction must engage evenly without a sharp jerk
- Start driving faster with the clutch pedal : the tractor must start to move without delay.
- Start to move by allowing the pedal rise fast to the top position (slip foot to one side on the pedal). In this case the automatics take care of a smooth start.

Function of the reverse shuttle:

- When the engine is running (shuttle lever in pos. P) engage gear H1
- Move the lever to pos. N; the shuttle must further be in neutral
- Start driving forwards by moving lever to pos. F (without clutch pedal); repeat many times
- Start driving rearwards by moving lever to pos. R, repeat many times
- Compare starts with the shuttle lever and the HiShift button. They must function with the same speed.
- Drive below 10 km/h forwards, move then the lever to R-position (hand gas lever 1200...1500 rpm); the driving direction change must start immediately (shuttle brakes) and the R-direction must engage smoothly but fast, when the tractor is almost stopped
- Drive over 10 km/h forwards, move then the lever to R-position (hand gas lever 1200...1500 rpm); the driving direction change must start at a speed of about 10 km/h.

Function of DPS, manual mode:

- Turn the DPS rocker switch to "man" –position (front edge depressed), change during driving DPS speeds with buttons in the gear lever knobs, use also engine revs between 1700...2000 rpm; the speeds should engage without sharp jerks and without any long delay
- Change quickly with double-click 1=>3 and 3=>1; although the display does not show the speed 2, the DPS speed must change via speed 2.
- Turn the DPS rocker switch to pos. "Auto1" (AUTO 1 in display); test by driving in M-range that the DPS changes speed when the loading varies (use an implement if necessary), Auto1 -program tries to keep the engine revs high
- Turn the DPS switch to pos. "Auto2" (AUTO 2 in display); drive with range gear H and ensure that the DPS changes speed when the driving speed varies, Auto 2 allows larger engine rev variations than Auto1. In AC 5.2 the AUTO 2 functions with fixed revs and is adjustable, see page 371/4.
- Turn the DPS-switch to pos. "man", pre-program the DPS speeds F II / R III, carry out driving direction changes (without the clutch pedal); the correct, pre-programmed DPS speed should engage in both driving directions.

	1.8-2000	Model	Code	Page
37. Autocontrol 5 / 5.2	1. 9. 2002	6250-8950	370	24J

Function of PTO (use implement, if needed, as a load):

 Select with the lever PTO speed 1 (front position of the lever), start the PTO, PTO symbol must light up in the display, keep engine revs at about 1800 rpm for about 30 seconds.

Note the changed PTO starting custom in program version 42– (starting at least 3 seconds). Also check possible rear push buttons for PTO (option)

Try the same with PTO speed 2 (lever in the rear position)
 NOTE! In AC 5.2 there are as option the PTO start/stop buttons on the rear mudguards, which have 3 sec. engaging delay.

4WD automatics (AC 5.2 only)

The automatics are activated, if the value of index **U** (in the setting mode menu) is 1 (=factory value).

- turn the 4WD rocker switch into OFF position (left side down). When starting driving and when changing driving direction the 4WD must be engaged for a while. The 4WD must be engaged also when using HiShift buttons, if the driving speed is below 10 km/h. The 4WD must be disengaged at least when the driving speed exceeds 10 km/h.

Automatic traction control (AC 5.2 only)

 let the engine idle and switch on the AutoTraction control with the "Nauto" switch (right edge down).

Symbol N starts to flash in the display. Engage gear H1 and switch on the driving direction.

Raise the engine revs with the gas pedal over 1020 r/min, at which time the tractor must start to move softly (do not use the clutch pedal). The traction must be disengaged, when the brakes are depressed while the driving speed is below 10 km/h, the traction must also be disengaged, if the gas pedal is released and the engine speed lowers under 970 r/min.


The traction control is switched off by stopping the tractor and by moving the shuttle lever into position P.

Checking fault code memory (AC 5.20nly)

Check after the test-run if there are fault codes in the memory . If so, repair the faults and empty the fault code memory by pushing the DPS pre-programming button over 4 seconds (see page 371/6)

	1_70.1999	Model	Code	Page
37. Autocontrol 5	1. 8. 2000	6250-8950	370	25

6. Others

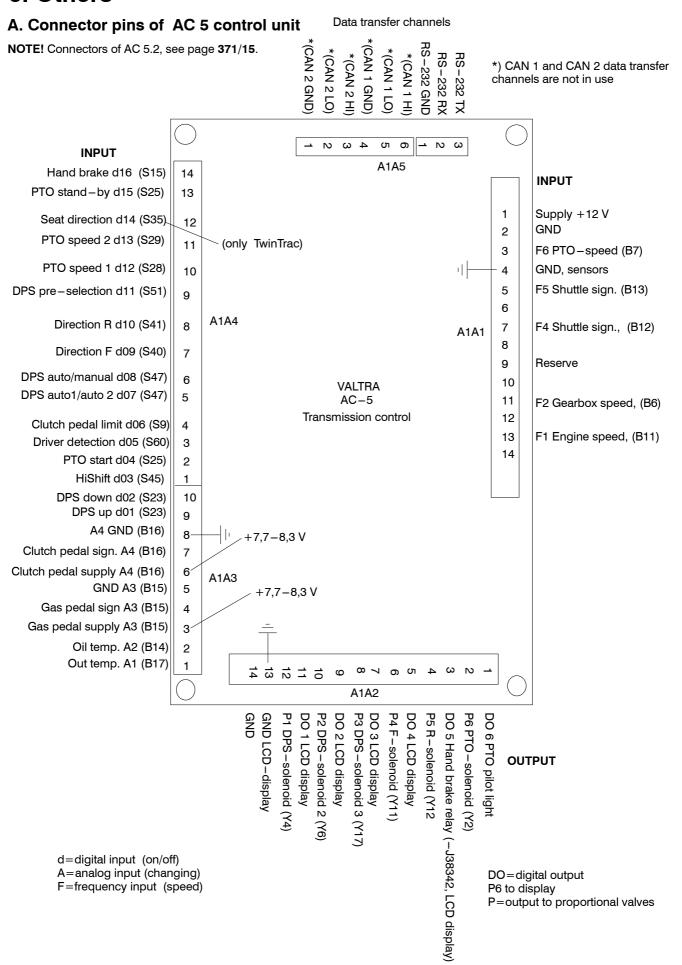


1. 8. 2000

Model C


Code **370** Page **26**

Wiring diagram AC5 1

-J38342 (AC 5).

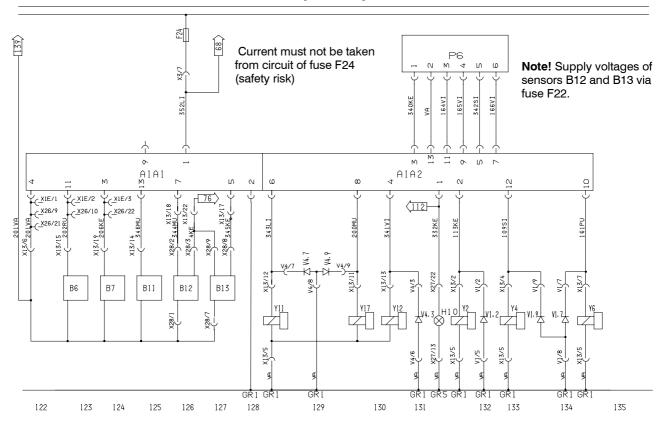

Wiring diagram AC5 2

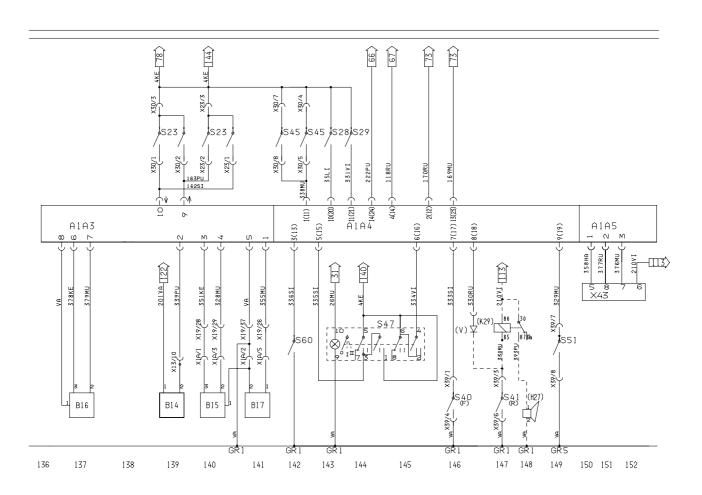


1. 8. 2000

Model **6250-8950**


Code **370**

Page **26A**

Wiring diagram AC5 1 **J38343-K41106 (AC 5)**

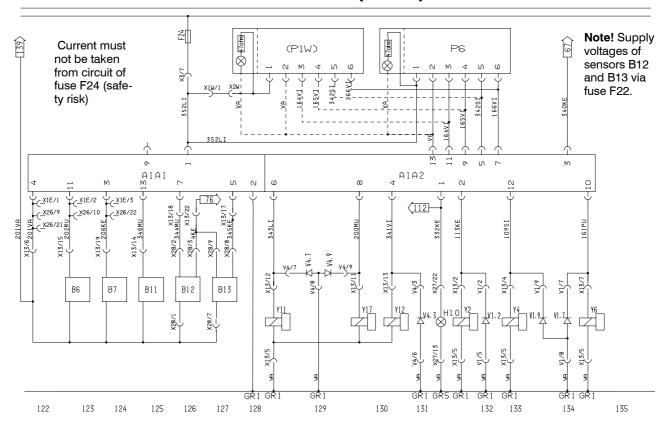

Wiring diagram AC5 2

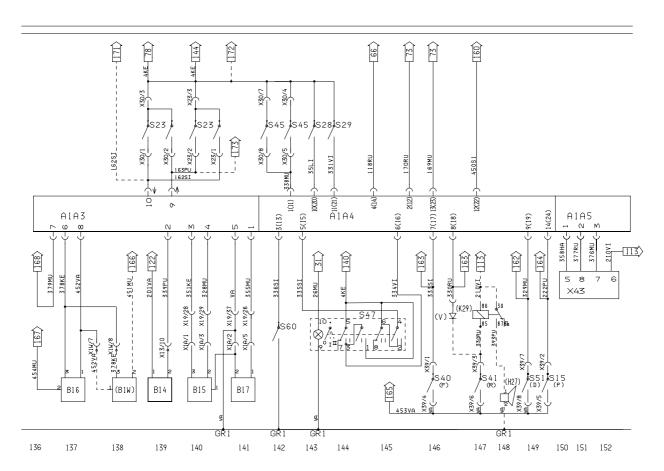





B. Wiring diagrams AC5

(The diagrams also under code 310). Position of connectors, see pages 310/6C och 6D.

A. Control unit A1 connector A1A1

F24: AC5 fuse in the fuse box

B6: Gearbox speed sensor B7: PTO speed sensor B11: Engine speed sensor B12: Shuttle speed sensor B13: Shuttle speed sensor

Position of connectors:

X13: Connector for transmission (37 pins) on the support plate in the lever console.

X28: Connector for shuttle sensors (9 pins) in the lever console

X26: White connector (26 pins) in the rear face of the combination instrument.

X1E: Connector (9 pins) for ACD power lift speed sensors on the support plate in the lever console (also connector X2E).

GR1: earth point in the rear part of the lever console

B. Control unit connector A1A2

P6: AC5 display unit H10: PTO ind. light

Y11: Proportional valve, forward driving (F)

Y17: DPS proportional valve (C3)

Y12: Proportional valve, rearward driving (R)

Y2: PTO proportional valve (PTO) Y4: DPS proportional valve (C1) Y6: DPS proportional valve (C2)

Position of connectors:

X13: Connector for transmission (37 pins) on the support plate in the lever console.

X27: Blue connector (26 pins) in the rear face of the combination instrument.

V1: diode box for solenoid valves Y1, Y2, Y3, Y4 and Y6 on the support plate in the lever console.

V4: diode box for solenoid valves Y11, Y12 and Y17 on the support plate in the lever console.

GR1: earth point in the rear part of the lever console

GR5: earth poin in the cab front wall

C. Control unit connector A1A3

B16: Clutch pedal position sensor

B14: Gearbox temperature sensor

B15: Gas pedal pisition sensor

B17: Outdoor temperature sensor

S23: DPS push buttons up/down

Position of connectors:

X13: Connector for transmission (37 pins) on the support plate in the lever console.

X19: Connector (37 pins) on the cab front wall on the RH side.

X1A: Connector (9 pins) for the engine sensors in the front part of the engine compartment near the thermostat housing.

X23: Connector for DPS push buttons in the lower part of the gear levers

X30: Connector (9 pins) for gear lever push buttons in the lower end of the levers.

GR1: earth point in the rear part of the lever console

D. Control unit connnectors A1A4 and A1A5

S45: HiShift push buttons in the gear lever knobs

S28: PTO switch at the PTO lever (540)

S29: PTO switch at the PTO lever (1000, 540E)

S47: Auto1/Auto2//Man switch for the DPS

S40: Reed relay, forward driving (F) (in the shuttle lever) S41: Reed relay, rearward driving (R) (in the shuttle lever)

S51: DPS pre-programming button

S60: Seat safety switch (detection of driver)

H27: Back buzzer

K29: Relay for the back buzzer

Position of connectors:

X30: Connector (9 pins) for the gear lever push buttons in the lower end of the levers.

X39: Connector (9 pins) for the shuttle lever at the steering wheel under the dashboard.


X43: RS-232 connector on the lever console

GR1: earth point in the rear part of the lever console

GR5: earth point in the cab front wall


	1, 10, 1999	Model	Code	Page
37. Autocontrol 5	1. 8. 2000	6250-8950	370	28

C. Control diagrams, AC 5. Note! Control diagrams of AC 5.2, see page 371/18-22.

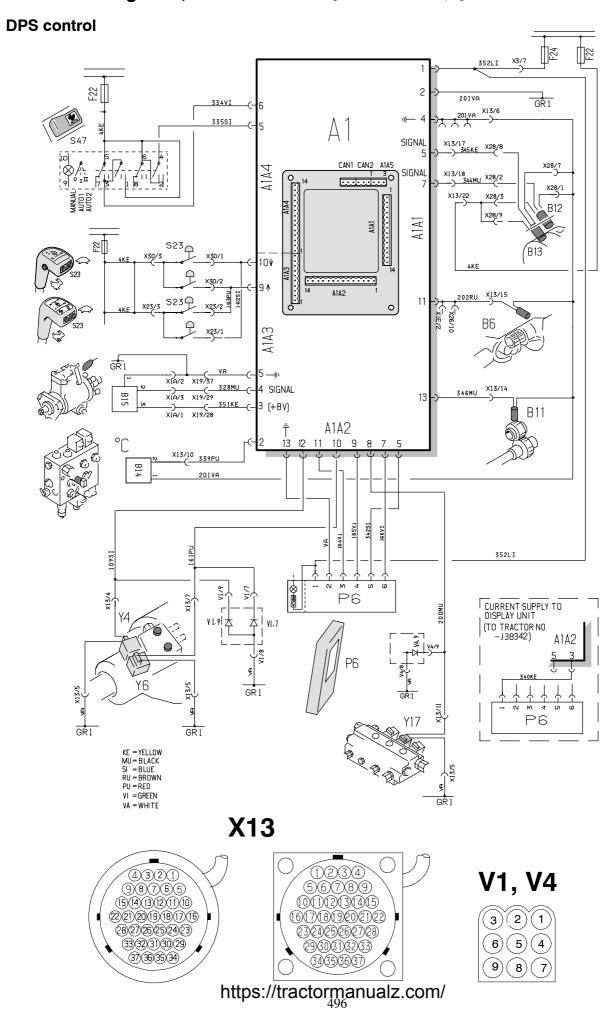


Control of shuttle, AC 5


AC5(-K41106): SHUTTLE CONTROL, WIRING

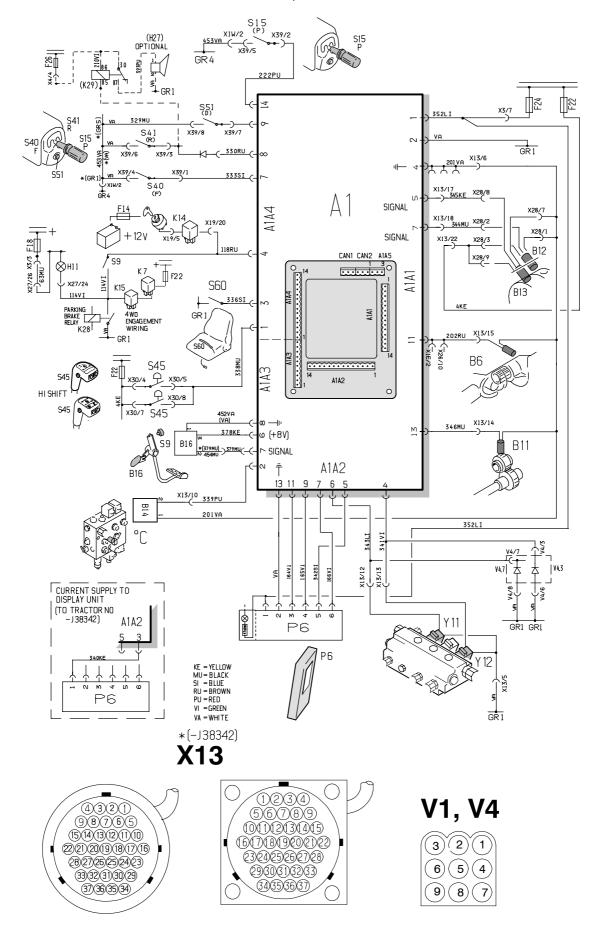



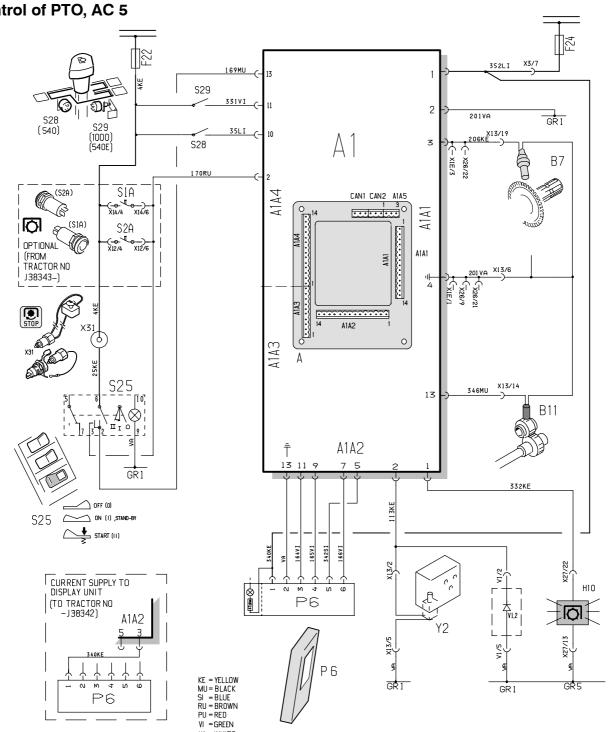


X13

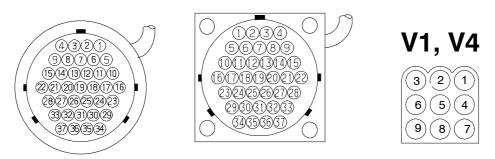


	1. 10. 1999	Model	Code	Page
37. Autocontrol 5	1. 8. 2000	6250-8950	370	31

Control of parking brake and engine starting, -J38342, AC 5

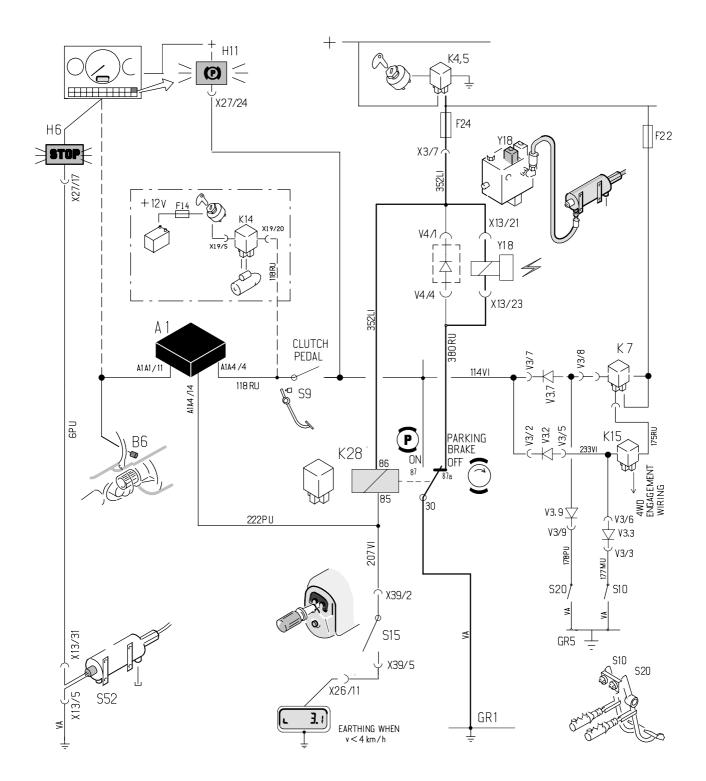


	1.10.1999	Model	Code	Page
37. Autocontrol 5	1. 8. 2000	6250-8950	370	32


Control of parking brake and engine starting, J38343-K41106, AC 5

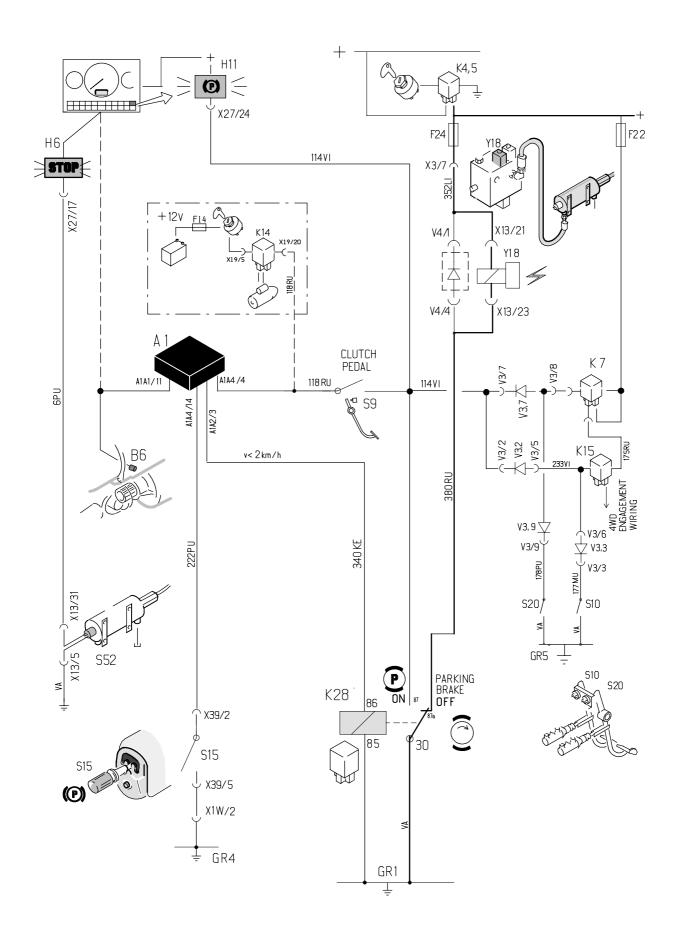

37. Autocontrol 5

 1.8.2000 Model Code Page
1.8.2000 6250-8950 370 33

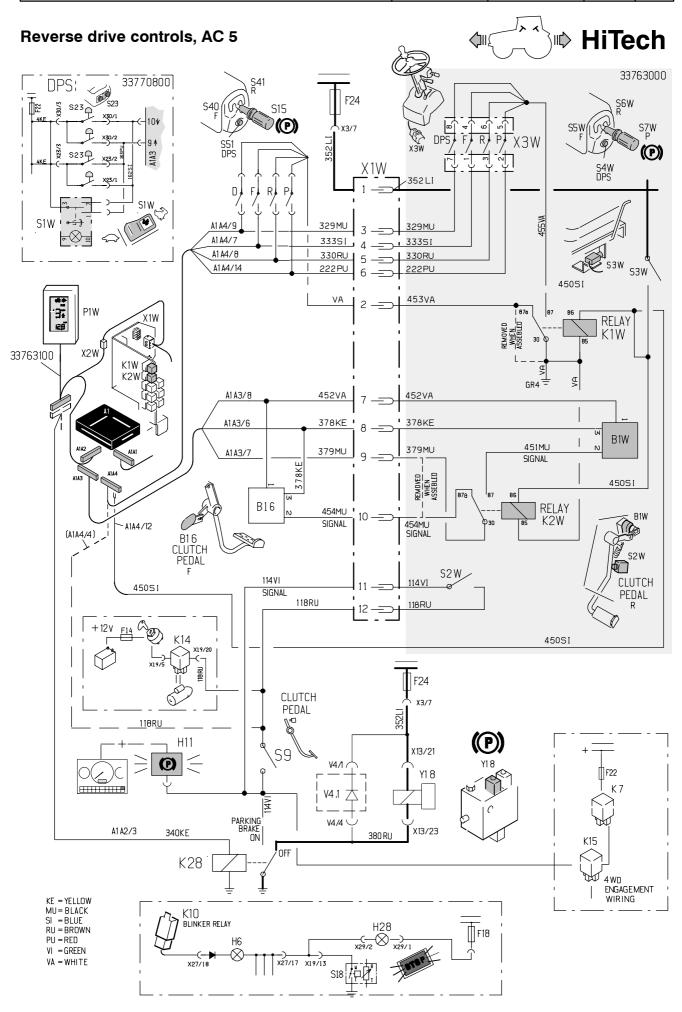





37. Autocontrol 5.2 (K41107-) 1. 8. 2000 | Model | Code | Page | 1. 9. 2002 | 6250-8950 | 371 | 1

Contents

Note! Under code 371 are shown only AC 5.2 instructions, which differ much from AC 5. Under code 370 are given necessary references to this code.

1. General:

A. New functions of AC 5.2 B. AutoTraction on/off C. DPS—gear, new automatic functions D. Fault codes in AC 5.2 E. Fault code memory F. Working orders G. Checking ID number of program	3 4 5 6 6A
2. Tests:	
A. Test mode menu B. Table to check different switches C. Table to check temperature sensors and pedal position sensors D. Table to check revolution speed sensors E. Table to check proportional valves F. Counter functions	8 9 9A 9B
3. Settings:	
A. Setting mode menu B. Setting clutch pedal ratio index C. Automatic setting of shuttle, DPS and PTO clutch indexes D. Manual setting of PTO clutch indexes E. Setting 4WD automatics F. Setting pre-filling indexes of DPS clutches	10 11 12 12A
4. Components:	
A. Reconditioning temperature sensors B. Reconditioning clutch pedal position sensors C. Reconditioning clutch pedal limit switch D. Reconditioning gas pedal position sensor	13 14
5. Others:	
A. Connectors of AC 5.2 control unit A1 B. Wiring diagrams of AC 5.2 C. Control diagrams	16

	1.8.2000	Model	Code	Page
37. Autocontrol 5.2 (K41107-)	1. 9. 2002	6250-8950	371	2

1. Autocontrol 5.2, general

Note! AC 5.2 replaces the AC 5 system in 6250Hi – 8950Hi tractors from ser. no. **K41107** incl.

A. Additional functions in AC 5.2

a) Automatic traction control (Autotraction ON/ OFF)

See page 371/3.

b) Fault codes

Fault codes have a fault code memory (in fault code mode FI), in which can be checked and deleted from display. The memory stores three latest fault codes and running hours of the codes (control unit running hours).

New fault codes have been added in the system, see pages 371/5 and 6.

c) Automatic speed change of DPS

AutoDPS Auto2 function has been changes so that it functions in fixed speed change revs and driver can set easily the revs, see page 371/4.

d) Speed Matching

When using the HiShift button the control unit adapts the DPS speed so that it is suitable for driving situation when the mechanical gear has been changed, see page 371/4 or when traction is disengaged and re-engaged with clutch pedal, with HiShift or with the shuttle lever.

e) Automatic calibrations

The automatic calibration is activated in setting mode FIII, and it calibrates the initial pressures and pre-filling times of the shuttle clutches, for DPS and PTO clutches only the initial pressures, see page 371/11. The calibrations can also be done manually, see page 370/24D. Manual calibration of PTO clutch, see page 371/12.

f. Calibrations of clutch and gas pedals and pedal position sensors

The activating point of the clutch pedal limit switch has been changed to zero point of the pedal position. Now the activating point of the switch is not necessary to adjust so excatly as earlier.

The pedal calibrations have been changed so that the control unit accepts more unaccurate signal voltages for the position sensors. Calibrations, see page **370/15**.

The position sensors are different and they have been fastened so that no adjustment is needed, see pages 371/13 and 14.

With the aid of the clutch pedal ratio index the pedal engaging point can be adjusted separately in F- and R-directions in the setting mode FIII, see page **371/10**.

g) Reverse drive controls (TwinTrac)

The reverse drive controls have separate digital inputs in the control unit A1. The position of the seat (d14) determines which one of digital inputs the control unit uses.

h) Seat switch

The activating delay is normally 6 seconds, but 30 seconds, if the clutch pedal has been depressed, see page 370/24.

i) PTO start

The PTO start push buttons in the mudguards (option) have separate digital inputs in the control unit. The PTO rocker switch in the cab functions without delay and the push button in the mudguard has delay of 3 sec.

j) Zero-point offset of the shuttle outputs (program versions 80...85)

Into the shuttle clutch, which is unpressurised, is fed an oil pressure of 0,1...0,5 bar, so that no air can enter into the oil passages. This happens if either of the driving directions is engaged.

Note! The pistons in the shuttle have been made smaller and the spring force has been increased. The emptying valve has been removed from the piston for reverse driving, see page **440/19A**. In connection with this shuttle the AC 5.2 programs must always be used.

NOTE! Initial pressures of the shuttle clutches have been raised up to about 3,5 bar (earlier about 2 bar).

k) Other modifications

With the aid of output P7 the control unit switches on and off the auxiliary relay K52 of the starter.

Control unit output P8 controls the 4WD automatics (relay K27).

The control unit changes no more DPS speed in driving speed of 65 km/h but gives only a fault code.

NOTE! AC 5.2 has a new control unit, which can be used also in the earlier manufactured tractors with AC 5, but a different programs must be used.

AC 5.2 has only one main program there are several parameter files according to the tractor model and engine power.

In the DPS-gear the spring force of clutch C3 has been increased. Also oil way modifications have been done, see page **440/15C**.


Parking brake! A non-return valve from ser. no. K50440 incl. has been fitted in the low pressure circuit, which together with program modification retards the pressure drop in cases, in which engine stops during running (e.g. fuel runs out). A modification has been made in AC 5.2 program, which disengages all multi-disc clutches if tractor's engine stops when the driving speed is over 5 km/h. In this case the parking brake cylinder starts to brake after 15–30 seconds when the tractor has been already stopped.

The function of output DO5 has been changed inverse. Earlier this output was parking brake on. Now parking brake off. The control unit controls direct the valve and no more via an auxiliary relay.

	$\overline{}$	Model	Code	Page
37. Autocontrol 5.2 (K41107 –)	1. 8. 2000	6250-8950	371	3

B. Automatic traction control

An extra rocker switch (Autotraction ON/OFF) has been fitted in the cab. This switch switches on/off an automatic function, in which either driving directions (traction) (F, R) can be engaged and disengaged automatically by using the gas pedal or the brake pedals depending on the engine revs and driving speed.

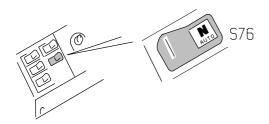

1. The function can be switched on, when:

- tractor is stationary (i.e. gerabox speed is zero)
- engine revs lower than 1000 rpm.
- rocker switch is turned into position ON
- gas pedal calibration has been done correctly

Note! After engine stop the function must be restarted with the rocker switch.

When the function has been switched on and the shuttle lever is in the neutral position, the system is in the stand – by mode and symbol N is blinking in the display. The seat switch functions normally during the autotraction control.

2. Automatic traction disengagement happens, when:

A. the function is switched on, driving direction F or R is engaged and the tractor is driven with. Now the automatics observe signal from brake switches (S10, S20). When the brake pedal/pedals are depressed and the driving speed is below 10 km/h, the traction is disengaged automaticallly,

or

B. the function is switched on, driving direction F or R is engaged and when the engine revs drop below 970 rpm. If the gas pedal is almost in the upper position, the selected driving direction is disengaged automatically.

If the above given terms (A or B) come true, the selected driving direction is disengaged automatically and symbol N is blinking in the display.

3. Automatic traction engagement happens, when:

- function is activated and either driving directions (F or R) is engaged
- brake pedals are not depressed
- engine revs greater than 1020 r/min
- the gas pedal is depressed sufficiently.

The following items affect the autotraction control:

- position of rocker switch (Autotraction on/off), d23
- engine revs, F1.
- gearbox speed (driving speed), F2
- brake pedal switches, S10, S20, d24
- gas pedal position, A3.
- clutch pedal position (front/rear), A5/A7.
- position of shuttle lever (front/rear), d9, d10/d18, d19.
- direction (F, R), F4 and F5.
- parking brake (front/rear), d16/d22

Note! If the traction control is switced off with the rocker switch during driving, the selected driving direction is disengaged into the neutral position and symbol N in the display is blinking. After this the control unit does engage neither direction until the parking brake is activated (driving speed below 2 km/h) and the driving direction is reselected.

FAULT TRACING:

- If the AutoTraction has malfunctions, check in the test mode FII the sensors and switches and wires which affect the function of the system. Also check the calibration of the gas pedal.
- check the gas pedal signal voltage in the test mode FII, specially when the pedal is up (page 371/9).
- Calibrate the gas pedal and check in the test mode, that the position % is zero when the pedal is up.
- check the gas pedal position sensor lever and its fastening on the spindle.
- check, that the engine revs drop clearly below 950 rpm, when the gas cable is released.

NOTE! When driving with the reverse drive controls (Twin/Trac), the use of the brake pedal does not disengage the traction but the traction must be disengaged otherwise (the rear brake pedal has not a brake light switch, so the control unit cannot get information, when the pedal is depressed.

C. Automatic speed change of DPS (AutoDPS)

1. Auto2 - function

AutoDPS Auto2 function has been changed so that the automatic gear change occurs at adjusted engine revs. The limit revs can be adjusted as follows:

- ensure that the shuttle lever is in the neutral position
- switch on Auto2 with the rocker switch
- press for one second DPS-preprogramming button

After this the present change – down limit revs are blinking in the display and the black arrow downwards is blinking.

The blinking revs can be stepped with DPS push buttons at intervals of 50 rpm in both directions. The limit revs for the change-down can be altered between 900-2300 rpm.

After the change-down limit revs are correctly set, press the DPS-preprogramming button after which the limit revs for change-up starts to blink in the display and the black arrow upwards is flashing. Also these revs can be stepped at intervals of 50 rpm.

The limit revs for change – up can be adjusted between 1000 – 2400 rpm and it must be at least 100 rpm bigger than the change – down revs.

When the change – up limit revs are correctly set, press the DPS – preprogramming button after which the set revs function as limit revs in the Auto2 function.

The adjusted limit revs remain in the memory although the current is switched off. Factory values of the limit revs are 1400 and 2100 in normal tractors and 1100 and 1700 in low rev tractors.

Note! While the limit revs setting mode is activated, the control unit does engage neither driving direction (R or F). If the driving direction is tried to engage during setting, the indication arrow of the direction in question is flashing, but the direction is not engaged. After this the direction can not be engaged until the setting is completed and the parking brake is engaged. After the parking brake has been engaged, the control unit is in the normal function.

The following digital inputs affect the function:

d01 = DPS - push button up

d02=DPS-push button down

d07=AutoDPS rocker switch Auto1 and Auto 2

d08=DPS auto/manual

d09=Direction F (forward driving selected)

d10=Direction R (rearwards driving selected)

d11=DPS-preprogramming button

d16=parking brake

The following frequency input:

F1 = engine rotation speed sensor

The switches and sensors can be checked in the test mode **FII**

If the input signals are OK, but malfunctions appear, the fault can lie in the control unit of AC 5.2.

2. Speed Matching of DPS

The Speed Matching is one part of the AutoDPS function. With the aid of the speed matching the DPS speed is changed automatically to a best suitable speed in connection with the mechanical gear change.

The function is active, when:

- AutoDPS is switched on (auto1 or auto2) and
- tractor is in motion and
- either driving directions is on.

When these terms come true, the speed matching is activated and it remains on until one of the following terms comes thrue:

- AutoDPS is switched off (Man position) or
- tractor is stopped

When the speed matching is activated, the control unit observes whether one of the following terms comes thrue:

- HiShift-button is pressed or
- clutch pedal is depressed or
- selected driving direction (F or R) is switched off

If one of the above given terms comes thrue, the control unit measures immediately the input frenquency from sensors F4/F5 (F4 in the beginning), and with the aid of these inputs the control unit calculates the comparison values.

When the driving direction is switched on again (HIShift button is released, clutch pedal is released or driving direction is reselected), the control unit measures the frequency from sensors F4/F5 at this moment (F4 in the end).

This measured frequency is compared with the comparison values and the control unit is carried out an automatic DPS speed change (the automatic speed change can be one or two step up or down), if the measured frequency is above or below the calculated limit values.

The control unit changes first the DPS speed and after this engages the traction (shuttle). If there is no need to change the DPS speed, the traction engages immediately.

Note! During the automatic speed change can happen that it is not possible to change two steps up or down (e.g DPS speed II is selected and the speed matching should be two steps upwards). In this case the speed matching is one step up.

The following digital inputs affect the function:

d03=HiShift-button

d06=Clutch pedal limit switch

d07=AutoDPS rocker switch Auto1 and Auto 2

d08=DPS auto/manual

d09=Direction F (forward driving selected)

d10=Direction R (rearward driving selected)

The following frequency inputs:

F2=gearbox speed (driving speed)

F4=reverse shuttle speed (upper sensor)

F5=reverse shuttle speed (lower sensor)

The switches and sensors can be checked in the test mode **FII**.

If the input signals are OK, but malfunctions appear, the fault could be in the control unit of AC 5.2.

	1.8.2900	Model	Code	Page
37. Autocontrol 5.2 (K41107-)	1. 9. 2002	6250-8950	371	5

D. Fault codes in AC 5.2

Note! Concerning AC 5.2 fault code structure, see page 370/5 (AC 5). Note! Concerning AC 5.2 fault function levels, see page 370/7 (AC 5).

Fault co- de	Control unit pin	Fault identification	Fault functi- on le- vel	Tests	Repairs, settings
P101	A1A4/6	Proportional valve P1 (Y4) of DPS takes current which exceeds or goes below the given limits. Short circuit or wire damage (C1).	3		
P103	A1A4/4	Proportional valve P2 (Y6) of DPS takes current which exceeds or goes below the given limits. Short circuit or wire damage (C2).	3	See table	See instr.
P105	A1A4/2	Proportional valve P3 (Y17) of DPS takes current which exceeds or goes below the given limits. Short circuit or wire damage (C3).	3	E on pa- ge	C on pa- ge
P107	A1A3/8	Forward drive proportional valve P4 (Y11) takes current which exceeds or goes below the given limits. Short circuit or wire damage (F).	3	371/9B.	370/21.
P109	A1A3/6	Reverse drive proportional valve P5 (Y12) takes current which exceeds or goes below the given limits. Short circuit or wire damage (R).	3		
P125	A1A3/4	PTO proportional valve P6 (Y2) takes current which exceeds or goes below the given limits. Short circuit or wire damage	2		
P131	A1A3/2	Proportional output P7, which controls the starter interlock relay K52, takes current which exceeds or goes below the given limits. Short circuit or wire damage. Check the alternator.	1		
P132	A1A3/1	Proportional output P8, which controls the 4WD relay K27, takes current which exceeds or goes below the given limits. Short circuit or wire damage (FET status error).	1		
A128	A1A5/3	Supply voltage of clutch and gas pedal position sensors is not within given	3		
A311	A1A5/6 A1A5/2	limits (4,55,5 VDC). Probably wires in short citrcuit. Gearbox oil temperature value (sensor B14) impossible (over +150°C). Faulty sensor or its wiring	3		See instr.
A312	A1A5/2	Gearbox oil temperature value (sensor B14) impossible (below –50°C). Faulty sensor or its wiring.	3	See table C on pa-	A and B on page 371/13
A313	A1A5/4	Signal from gas pedal position sensor B15 below 0,4 VDC or over 4,4 VDC. Sensor wrongly fitted or wire damages.	3	ge 371/9 .	and instr. D on pa-
A314	A1A5/7	Signal from front clutch pedal position sensor B16 below 0,3 VDC or over 4,7 VDC. Sensor wrongly fitted or wire damages.	3		ge 371/14
A326	A1A1/1 A1A1/2	Control unit supply voltage not within limits 10,517,0 VDC. Battery damaged or poor contacts or short circuit in wires. Check the alternator. Low battery voltage causes the oil pressure drop and damages the multidisc clutches of the tractor shuttle and DPS.	3		
A351	A1A7/1	Signal from rear clutch pedal position sensor B1W below 0,3 VDC or over 4,7 VDC. Sensor wrongly fitted or sensor/wire damages. This fault code appears only when the seat is turned backwards.	3	See table C on pa- ge 371/9.	See instr. B on pa- ge 371/13.
d116	A1A5/9 A1A5/10	DPS up-down push buttons (S23) are active simultaneously. Push buttons in the lever knobs may be in short circuit. The fault code can also appear, when the service modes (FI-FIII) are activated.	1		
d117	A1A8/1 A1A8/2	Forward (S40) and reverse drive direction (S41) are active simultaneously. Shuttle lever switches may be in short circuit.	4		
d118	A1A8/4 A1A8/5	Both PTO speeds are engaged simultaneously. PTO lever switches (S28/S29) may be in short circuit.	2		
d123	A1A8/8 A1A8/1 A1A8/2	Front parking brake and one or both shuttle directions engaged simultaneously. Shuttle lever switches may be in short circuit. No function, if the seat has been turned rearwards.	4	See table B on pa-	See table B on pa-
d127	A1A8/8	Digital output, which controls the parking brake solenoid (Y18), is not within given limits. Probably solenoid in short circuit or wire damages.	3	ge 371/8 .	ge 370/20 .
d129	A1A8/3 A1A2/5	DPS-pre-programming buttons S51 and S4W in front and reverse drive controls active simultaneously. Front and rear push buttons in short circuit or buttons have been stuck.	1		
d130	A1A7/4 A1A2/9	PTO start switches (S25, S1A, S2A) in the cab and in the rear mudguard are simultaneously active. Probably short circuit or switches have been stuck.	2		
d152	A1A2/8 A1A2/7	In the reverse drive controls F and R directions active simultaniously. Shuttle lever switches probably in short circuit. This fault code appears only when the seat is turned backwards.	4		
d133	A1A7/6 A1A2/6	Front and rear clutch pedal limit switches S9 and S2W active simultaneously . Probably short circuit in the switches or switches have been stuck.	3		

37. Autocontrol 5.2 (K41107-)

1. 9. 2002

Model C 6250-8950

Code **371**

6

Page

Fault co- de	Control unit pin	Fault identification	Fault functi- on le- vel	Tests	Repairs, settings
d153	A1A2/3 A1A2/8 A1A2/7	In the reverse drive controls parking brake and one direction (F or R) active simultaniously. Rear shuttle lever switches probably in short circuit. This fault code appears only when the seat is turned backwards.	4		
d215	A1A7/6 A1A5/7	Front clutch pedal position > 50 % and d06 is active (d06=pedal limit switch S9). Check the limit switch and its adjustment.	4	See table B on pa-	See instr. B on pa-
d254	A1A2/6 A1A7/1	Rear clutch pedal position > 50 % and d20 is active (d20=pedal limit switch S2W). Check the limit switch and its adjustment. This fault code appears only when the seat is turned backwards.	4	ge 371/8 .	ge 370/20 .
F320	A1A1/7 A1A1/5	Shuttle speed sensors (B12/B13) give different frequency. Difference over 30 %. One of the sensor possible faulty.	3	0	
F321	A1A2/4	Engine rpm lower than what the shuttle sensors (B12/B13) indicate, when one sole- noid is fully active. Engine rpm sensor B11 may be faulty.	3	See table D on pa- ge	See instr. D on pa-
F324	A1A1/7 A1A1/5	Driving speed over 10 km/h and direction information in the control unit is changing. Shuttle sensors B12 or B13 may be faulti or wire problems.	1	371/9A	ge 370/22
L419	A1A1/3	Full pressure has been connected to the PTO clutch over 3 seconds, but the PTO shaft rotation speed is lower than it should be. PTO-clutch may slip. It is possible that the PTO rpm sensor B7 is faulty. Check in the test mode PTO lever switches S28 and S29. Check that the switches have not been faulty connected (can be seen in the test mode). Ensure that the PTO speed parameters P and L are correctly set.	2	See table D on pa- ge 371/9A. See table B on pa- ge 371/8.	See instr. D on page 370/22. See instr. B on page 370/20.
L422	A1A1/7 A1A1/5 A1A2/4	One shuttle direction is engaged and full control has been active over 3 seconds. Shuttle rotation speed is lower than engine speed in relation to the DPS ratio. One multi-disc clutch in the DPS or in the Shuttle can slip or one proportional valve (Y4,Y6,Y17,Y11,Y12) can be trapped. This fault code also appears, if both shuttle sensors (B12,B13) do not give a signal, when engine revs are over 1600 rpm (check the fuse F22). This fault code is activated at engine speeds over 1000 rpm and in HiTrol tractors at engine speeds over 1800 rpm. This fault code can also appear, if the turbine clutch has too much slip (e.g. too little oil in the turbine clutch).	4	See table E on pa- ge 371/9B.	See instr. C on page 370/21. See instr. D on page 370/22
L334	A1A2/2	Driving speed over 65 km/h measured by gearbox speed sensor B6 frequency input. 4WD propeller shaft can be damaged.	1		
L335	A1A2/4	Engine revs over 2800 rpm, measured by sensor B11 frequency input.	1		

E. Fault code memory (AC 5.2 only)

The fault code memory functions in all tractors, which have main program version 81 or later. In version 80 the fault code memory has malfunctions.

For fault codes have been made a memory where can be checked and removed appeared fault codes. The memory stores three latest fault codes and their running hours (according to the control unit hour counter "L", not an exact value).

The fault code memory **FI** can be activated in the same way as the test mode **FII**, see page 370/8.

Number	Mode	Mode symbol
1	Fault code memory (AC 5.2)	FI
2	Test mode	FII
3	Setting mode	FIII

When the fault code memory has been activated, the display shows in the lower part of the display the fault codes stored in the memory. The fault codes are visible in a correct order so that after the activation there is an oldest code in the display. This fault code is visible two seconds and after this is shown the running hours of the code. The running hours are shown also two seconds.

If there are many codes in the memory, a line is shown one second between each codes. Then the next code and the running hours are shown. When all codes and running hours have been shown, the first code appears again in the display. The codes are shown until the current is switched off or the DPS pre-programming button is pressed over 4 seconds.

- if there is no codes in the memory, the line is blinking in the lower part of the display.
- the fault code memory can be emptied by pressing the DPS pre-programming button over 4 seconds, after which the codes disappear and the line starts to blink.

Purchased From T.J.M Manuals					
		\searrow	Model	Code	Page
37. Autocontrol 5.2 (K41107-)		1. 8. 2000	6250-8950	371	6A

F. Working order

Setting indexes of transmission (AC 5.2)

1. Warm the transmission up to +30°C...+60°C

Note! If the tractor has HiTrol turbine clutch, carry out stall-test before automatic calibrations (see pagr 411-7).

2. AutoCalibration of shuttle clutches and PTO clutch:				
Setting mode FIII M4 (40 kph)	- Calibrate the forward clutch F - Calibrate the reverse clutch R - Calibrate the PTO clutch	CAL 1 CAL 2 CAL 6		
M3 (50 kph, 8350Hi) 1700–1800 rpm	(Autocalibration sets the initial pressure and pre-filling time indexes for the shuttle, initial pressure index for the PTO)			

3. Make a test-drive

4. If the shuttle does not function properly make the AutoCalibration once more		
Setting mode FIII M4 (40 kph) M3 (50 kph, 8350Hi) 1700–1800 rpm	- Calibrate the clutch that does not function properly - Check that you have the right main gear selected - Check that the tractor stays at a flat surface	
	Make a test drive (the shuttle) If the function is not good enough set the indexes manually (you can start from the indexes that the AutoCalibration has saved into memory)	

5. Make a test-drive

-Test the function of DPS (shift DPS speeds 1-2-3-2-1 at different situations like accelerating and motor braking)

6. If the DPS does not	6. If the DPS does not function properly make the AutoCalibration of DPS clutches:		
	Set the indexes no. 7, 8, 9 and 12 to zero, since the AutoCalibration does not set the DPS pre-filling time indexes 7, 8 and 9 and the DPS clutch C3 initial pressure index 12.		
Setting mode FIII M4 (40 kph) M3 (50 kph, 8350Hi) 1700–1800 rpm	 calibrate DPS clutch C1 calibrate DPS clutch C2 The clutch C3 can't be calibrated automatically 	CAL 3 CAL 4	
	 Make a test drive (the DPS) If the DPS does not function properly set the indexes manually Problems when shifting 1 > 2, Set indexes of the clutch C3 1) Problems when shifting 2 > 3, Set indexes of the clutch C2 1) Problems in shifting 3 > 2, Set indexes of the clutch C1 1) Problems in shifting 2 > 1, Set indexes of the clutch C2 1) 	Indexes 9, 12 Indexes 8, 11 Indexes 7, 10 Indexes 8, 11	

7. Test the start of PTO (with an implement if possible).

- If the PTO start is not good enough set the PTO indexes manually
- 1) Set first the pre-filling index to zero, since the correct index value is normally near zero. In addition, the effect of the pre-filling index is not very big, since the piston free movement is short. After that is changed clutch initial pressure index upwards or downwards:
- if traction disengages for a while during speed change, increase initial pressure index.
- if there is a "double jerk" in the beginning of engagement, reduce the initial pressure index.

NOTE! The effect of the index change can be verified, when the speed change upwards is done in heavy loading.

	1.8.2000	Model	Code	Page
37. Autocontrol 5.2 (K41107-)	1. 9. 2002	6250-8950	371	6B

G. Checking ID number of program, AC 5.2:

PROGRAMS OF AC 5.2

Note! Programming instruction for AC5.2, see page 370–24

In tractor production a program has input in the control unit A1, which consists of a main program and a parameter file. Both the main programs and the parameter files are of different types, and that is why they have ID numbers. In the tractor display (in the test mode FII) can be seen the program ID number, which shows the main program version and the parameter file ID number. The two first digits mean the parameter file ID number and the two last digits the main program version number.

E.g. ID number 3181:

31 = parameter file number, **81** = main program version number.

Main program version number:

Version	Used in production
80 1)	K41107 – K42439
81 ²⁾	K42440 -K45217
82	K45218-K50336
83	K50337-L27205
83	L27206-L36305 (parameter files changed)
84	L36306-L44126
85	Is not fitted in production.
86	L44127-

- Version 80 has also be used in the pre-series, tractors K25332, K25414, K26316, K26440, K34507, K35307.
- Version 81 has been input in factory in some tractors before no. K42440.

Parameter file ID numbers:

The parameter files have not been divided according to the PTO type as in **AC 5**, but according to the tractor model. The PTO ratios must be set in the setting mode **FIII**, see page 370–19A.

For all main program versions have been done own parameter files. If the parameter files are developed, the ID number increases one digit, e.g. 11 = > 12. In this way different generations can be distinguished.

ID number	Used in tractor models:
11, 16, 17	6250Hi – 6850Hi, X100 – X120
21, 26, 27	6250Hi – 6850Hi <u>HiTrol</u>
31, 36, 37	8050Hi – 8150Hi
41, 46, 47	8350Hi
51, 56, 57	8450Hi – 8950Hi

ID NUMBERS USED IN PRODUCTION, IN SPARE PARTS AND IN SERVICE

Divided according to the main program version. Beside the ID number there is information, which shows whether the tractor has a correct program.

Note. If the ID number in the tractor display cannot be found in this list, contact Valtra Tractor Service. In some tractors there can be special programs.

Main program version 80.

These must be replaced with main program version <u>86</u>. These must no more be used in Service

11 80 ³⁾	6250Hi-6850Hi, X100-X120
21 80 ³⁾	6250Hi – 6850Hi <u>HiTrol</u>
31 80 ³⁾	8050Hi-8150Hi
41 80 ³⁾	8350Hi
51 80 ³⁾	8450Hi-8950Hi

Main program version 81

These must be replaced with main program version <u>86.</u>
These must no more be used in Service

111000	made no i	HOLO DO GOOG III GOLVIGO
11 81	3)	6250Hi-6850Hi, X100-X120
21 81	3)	6250Hi-6850Hi <u>HiTrol</u>
31 81	3)	8050Hi-8150Hi
41 81	3)	8350Hi
51 81	3)	8450Hi-8950Hi

Main program version 82:

These must be replaced with main program version <u>86.</u> These must no more be used in Service

11 82	3)	6250HI-6850HI, X100-X120
21 82	3)	6250Hi-6850Hi <u>HiTrol</u>
31 82	3)	8050Hi-8150Hi
41 82	3)	8350Hi
51 82	3)	8450Hi-8950Hi

3) If the clutch pedal has malfunctions or the tractor has malfunctions (e. g. fault codes P101...P109), the transmission has jammed or if tractors transmission has not disengaged complety with clutch pedal, with HiShift button or with shuttle lever, then must a new program be input (main program version 86 and parameter file). Programming instructions on page 370–24B. A new program must be input in the control unit (main program version 86). In version 86. the faults which are found in versions 80–85, have been corrected and the function has been improved.

37. Autocontrol 5.2 (K41107-)

1 8. 2000 1. 9. 2002

Model 6250 – 8950

Code

Page 6C

50-8950 371

Main program version 83.

Can be fitted from K41107 ->

These can be replaced with program version 86.

These must no more be used in Service.

11 83 ⁴⁾ 6250Hi – 6850Hi, X100 – X120

21 83 ⁴⁾ 6250Hi – 6850Hi <u>HiTrol</u>

31 83 ⁴⁾ 8050Hi-8150Hi

41 83 ⁴⁾ 8350Hi

51 83 ⁴⁾ 8450Hi – 8950Hi

Main program version 83 (parameter files changed).

Can be fitted from K41107 ->

These can be replaced with program version 86.

These must no more be used in Service.

16 83 ⁴⁾ 6250Hi – 6850Hi, X100 – X120

26 83 ⁴⁾ 6250Hi – 6850Hi <u>HiTrol</u>

36 83 ⁴⁾ 8050Hi-8150Hi

46 83 ⁴⁾ 8350Hi

56 83 ⁴⁾ 8450Hi – 8950Hi

Main program version 84.

Can be fitted from K41107 ->

These can be replaced with program version 86.

These must no more be used in Service.

16 84 ⁴⁾ 6250Hi – 6850Hi, X100 – X120

26 84 ⁴⁾ 6250Hi – 6850Hi <u>HiTrol</u>

66 84 ⁴⁾ 6750Hi

36 84 ⁴⁾ 8050Hi – 8150Hi

46 84 ⁴⁾ 8350Hi

56 84 ⁴⁾ 8450Hi – 8950Hi

Main program version 85 (Is not fitted in production).

Can be fitted from K41107 ->

These can be replaced with program version 86.

These must no more be used in Service.

16 85 4) 6250Hi – 6850Hi, X100 – X120

26 85 ⁴⁾ 6250Hi – 6850Hi <u>HiTrol</u>

66 85 ⁴⁾ 6750Hi

36 85 ⁴⁾ 8050Hi-8150Hi

46 85 ⁴⁾ 8350Hi

56 85 ⁴⁾ 8450Hi-8950Hi

4) If the clutch pedal has malfunctions or the tractor has malfunctions (e. g. fault codes P101...P109), the transmission has jammed or if tractors transmission has not disengaged complety with clutch pedal, with HiShift button or with shuttle lever, then must a new program be input (main program version 86 and parameter file). Programming instructions on page 370–24B. A new program must be input in the control unit (main program version 86). In version 86. the faults which are found in versions 80–85, have been corrected and the function has been improved.

Main program version 86.

Can be fitted from K41107 ->

These must be used in service.

These programs are in disk 344 046 20.

17 86 6250Hi – 6850Hi, X100 – X120 **27 86** 6250Hi – 6850Hi <u>HiTrol</u>

67 86 6750Hi

37 86 8050Hi-8150Hi

47 86 8350Hi

57 86 8450Hi – 8950Hi

In Service and In Spare Parts can be used only the newest programs (version 86).

NOTE! After loading the main program file to a control unit, the corresponding parameter file must be loaded from the same diskette as the main program file and it must correspond with the tractor model.

Note! If in the test mode **FII** the I.D. number is **9986** after programming or after control unit change, the parameter file has not been input. Input correct parameter file according to instr. on page **370–24B**.



		Model	Code	Page
37. Autocontrol 5.2 (K41107-)	1. 8. 2000	6250-8950	371	7

2. Tests

Note! The correct electric signals from sensors and switches have been shown in the tables on pages **371/8–9C**.

A. Test mode FII menu in AC 5.2

Note! Activating the test mode, see page 370/8

Note! Activ	vating the test mode, see page 370/8 .
F 7	Shuttle rotation direction *)
F6	PTO revs *)
F5	Shuttle rotation speed (lower sensor) *)
F4	Shuttle rotation speed (upper sensor) *)
F3	Reserve
F2	Driving speed *)
F1	Engine revs *)
A8	Rear clutch pedal pos. sensor signal, V
A7	Rear clutch pedal position %
A6	Front clutch pedal pos. sensor signal, V
A5	Front clutch pedal position %
A4	Gas pedal pos. sensor signal, V *)
А3	Gas pedal positon % *)
A2	Gearbox oil temperature
A1	Outdoor temperature
d24	Brake pedal position (brake light switches)
d23	AutoTraction switch (N-Auto)
d22	Parking brake, reverse drive controls
d21	DPS pre-programmming button, reverse drive controls
d20	Clutch pedal limit switch, reverse drive controls
d19	Direction R, lever , reverse drive controls
d18	Direction F , lever, reverse drive controls
d17	PTO-start, button on rear mudguard
d16	Parking brake, front controls
d15	PTO stand – by switch
d14	Seat direction (TwinTrac only)
d13	PTO-speed 2 (lever in rear position)
d12	PTO-speed 1 (lever in front position)
d11	DPS pre-programming button, front controls
d10	Direction R, lever, front controls
d09	Direction F, lever, front controls
d08	DPS auto/man
d07	DPS auto1/auto2
d06	Clutch pedal limit switch, front controls
d05	Seat switch 1)

d04	PTO-start switch in cab		
d03	HiShift-buttons		
d02	DPS-button, down		
d01	DPS-button, up		
99 99	Parameter number and program number. Start level.		
P1	DPS-prop. valve 1 (clutch C1) current *)		
P2	DPS-prop. valve 2 (C2) ottama virta *)		
P3	DPS-propo 3 (kytkin C3) ottama virta*)		
P4	Shuttle prop. valve (forwards) current *)		
P5	Shuttle prop. valve (rearwards) current*)		
P6	PTO prop. valve current *)		
b	Counter: informs how many times F-direction has been engaged.		
F	Counter: informs how many hours F-direction has been engaged.		
r	Counter: informs how many times R-direction has been engaged.		
Α	Counter: informs how many hours R-direction has been engaged.		
С	Counter: informs how many times DPS1 (C1) has been engaged.		
U	Counter: informs how many hours DPS1 (C1) has been engaged.		
J	Counter: informs how many times DPS2 (C2) has been engaged.		
Р	Counter: informs how many hours DPS2 (C2) has been engaged.		
E	Counter: informs how many times DPS3 (C3) has been engaged.		
d	Counter: informs how many hours DPS3 (C3) has been engaged.		
Н	Counter: informs how many times the engine has been started.		
L	Counter: informs how many hours AC 5.2 control unit has been energised.		


*) Engine must be run

1) If detector switch S60 does not function, it can temporarily be by—passed by connecting switch wires with an auxiliary wire (connector beside the seat holder). The switch must be changed and the auxiliary wire removed as soon as possible (safety).

		Model	Code	Page
37. Autocontrol 5.2 (K41107-)	1. 8. 2000	6250-8950	371	8

B. Table to check various switches (d01-d24) in the test mode in AC 5.2

Activate the test mode **FII** (see page 370/8) and select with the DPS bush buttons the correct test point and confirm the selection with the DPS push button, after which the selected point can be checked. When the checking has been done, press again the DPS pre-programming button, after which a new test point can be selected with DPS push buttons etc.

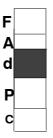

DIGITAL INPUT	NAME	IN DISPLAY 1	IN DISPLAY 0
d01 (S23)	DPS push buttons, up	Button depressed	Button up
d02 (S23)	DPS push buttons, down	Button depressed	Button up
d03 (S45)	HiShift button (test both buttons)	Button depressed	Button up
d04 (S25)	PTO-start, in cab	PTO switch in START – position	Disengaged
d05 (S60)	Seat switch	Driver sits on the seat	No signal
d06 (S9)	Front clutch pedal limit switch	Pedal in bottom	Pedal up
d07 (S47)	DPS automatic gear change switch	Auto-position 1	Auto-position 2
d08 (S47)	DPS auto/manual	Auto 1 or 2 on	DPS manual mode (man)
d09 (S40)	Direction F, front controls	F-direction selected	Direction disengaged
d10 (S41)	Direction R, front controls	R-direction selected	Direction disengaged
d11 (S51)	DPS pre-programming button (under shuttle lever), front controls	Button depressed. Visible only for a while.	Button up
d12 (S28)	PTO-speed 1 (lever in front position)	Speed selected	Speed disengaged
d13 (S29)	PTO-speed 2 (lever in rear position)	Speed selected	Speed disengaged
d14 (S3W)	Seat direction (TwinTrac only)	Seat rearwards	Seat forwards
d15 (S25)	PTO rocker switch	On, PTO-start	Disengaged
d16 (S15)	Parking brake, front controls	Parking brake applied	Parking brake disengaged
d17 (S1A, S2A)	PTO-start button on rear mudguard	Button depressed	Button up
d18 (S40)	Direction F, reverse drive controls (TwinT-rac only) *)	F-direction selected	Direction disengaged
d19 (S41)	Direction R, reverse drive controls (TwinT-rac only) *)	R-direction selected	Direction disengaged
d20 (S2W)	Rear clutch pedal limit switch (TwinTrac) *)	Pedal in bottom	Pedal up
d21 (S51)	DPS pre-programming button (TwinTrac) *)	Button depressed. Visibly only for a while.	Button up
d22 (S15)	Parking brake, rear (TwinTrac) *)	Parking brake applied	Parking brake disengaged
d23 (S76)	AutoTraction switch	AutoTraction on	AutoTraction off
d24 (S10, S20)	Brake pedal position (brake light switches). Check both front pedals separately. Possible rear brake pedal has not the switch.	Pedal in bottom	Pedal up

^{*)} Seat must be turned rearwards.


If the value in the display is not 0, althought it should be according to the table above, the switch can be damaged or in short circuit. Check, change the switch. Check the switch wires.

⁻ If the value in the display is not 1, althought it should be according to the table above, the switch can be damaged/wires broken/poor contacts in connectors. Change the damaged switch. Check the switch wirings.

C. Table to check the temperature sensors and position sensors (A1 – A8) in the test mode in AC 5.2

Activate the test mode **FII** (see page 370/8) and select with the DPS push buttons a wanted test point and confirm the selection with the DPS pre—programming button, after which the required point can be checked. When the test has been done, press again the DPS pre—programming button, after which can be selected an other test point with DPS push buttons etc.

Example:

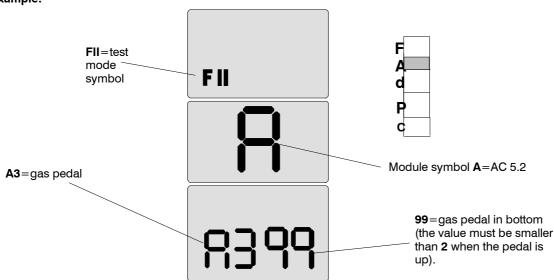

DIGITAL INPUT	NAME	DESCRIPTION
A1 (B17)	Outdoor temperature (xx °C or xx°F)	Compare the value with the ambient outdoor temperature. If the values are different or not visible, check the sensor wires and sensor itself, see instr $\bf A$ on page $\bf 371/13$. If the temperature is below -9° C, the display shows "LO".
A2 (B14)	Gearbox oil temperature (xx °C)	Compare the reading with the actual gearbox temperature. If the values are different or not visible, check the wires and the sensor, see instr. A on page 371/13 . If the temperature is below -9° C, the display shows "LO".
A3 (B15) 1)	Gas pedal position (xx %) *)	When the pedal is fully up, the value should be smaller than 2. When the pedal is in bottom, the value should be greater than 99. Check also that the value changes evenly when the pedal is moved (in the middle of the pedal stroke, the value should be about 50). If the values deviate from corret values, see instr. D on page 371/14.
A4 (B15) 1)	Gas pedal pos. sensor signal, Volts.	Gas pedal fully up, signal between 2,04,7 V. Pedal in bottom, signal between 0,33,0 V.
A5 (B16)	Front clutch pedal position (xx %) *)	When the pedal is fully up, the value should be greater than 97 . With the pedal at the bottom, the value should be smaller than 2 . Also check, that the value changes evenly when the pedal is moved (in the middle of the pedal travel, the value should be about 50). If the values deviate from the above given values, see instr. B on page 371/13 .
A6 (B16)	Front clutch pedal pos. sensor signal, Volts.	Clutch pedal in bottom, signal between 2,5-4,7 V. Front clutch pedal fully up, signal between 0,3-2,4 V.
A7 (B1W)	Rear clutch pedal position (xx %) *)	When the pedal is fully up, the value should be greater than 97 . With the pedal at the bottom, the value should be smaller than 2 . Also check, that the value changes evenly when the pedal is moved (in the middle of the pedal travel, the value should be about 50). If the values deviate from the above given values, see instr. B on page 371/13 .
A8 (B1W)	Rear clutch pedal pos. sensor signal, Volts.	Clutch pedal in bottom, signal between 2,5-4,7 V. Rear clutch pedal fully up, signal between 0,3-2,4 V.

Note! Compare signals from the temperature sensors and position sensors with values in the table above. If the signal from one sensor is not correct, carry out the required repairs, see e.g. pages 371/13 and 14.


¹⁾ The gas pedal of reverse drive controls (TwinTrac, option) affect the same sensor as the front pedal. If the rear pedal signal value is not within given limits, the rear pedal wire must be adjusted so that the fuel injection adjusting lever moves the hole stroke.

^{*)} The pedal position sensor must be calibrated before checking %-values.

	1.8-2000	Model	Code	Page
37. Autocontrol 5.2 (K41107-)	1. 9. 2002	6250-8950	371	9A

D. Testing RPM-sensors (F1-F7) in the test mode in AC 5.2

Note! If the display shows e.g. F1 51, it means the engine rpm sensor frequency of 5100 Hz (value x100=Hertz number).

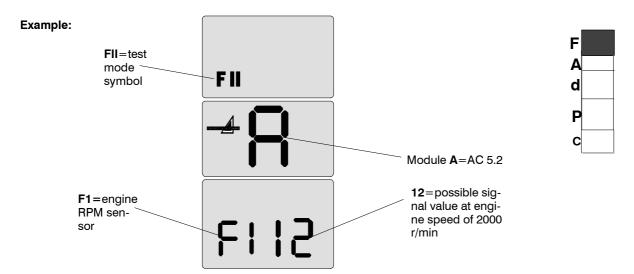

INPUT	NAME	VALUES	DESCRIPTION
F1 (B11)	Engine rpm sensor	1000 r/min=5,7-6,3 1500 r/min=8-10 2000 r/min=11-13	Set the engine revs to 1000 r/min and compare the value with the given values in the LH side column. Raise the revs to 1500 and 2000 r/min and compare the reading. If one of the values is not within the given limits, check the sensor, see instr. D on page 370/22 .
F2 (B6)	Gearbox speed sensor	1000 r/min=0,6-0,8 (50 km/h) 1500 r/min=1,1-1,3 (50 km/h) 2000 r/min=1,4-1,8 (50 km/h) 1000 r/min=0,5-0,7 (40 km/h) 1500 r/min=0,8-1,1 (40 km/h) 2000 r/min=1,1-1,5 (40 km/h)	Set the engine revs to 1000 r/min, engage gear M1 and drive the tractor forwards. Compare the reading with the given value. Test also at 1500 and 2000 rpm engine revs. If the values differ, see instr. D sivulla 370/22 .
F3	Reserve		
F4 (B12)	Shuttle output speed (upper sen- sor)	1000 r/min=1,8-2,1 (F) 1500 r/min=2,9-3,1 (F) 2000 r/min=3,8-4,2 (F)	Set the gears in neutral. Set the engine revs to 1000 r/min. Engage forward direction (F) and compare the value with the given value. Make the same check also in the reverse direction (R). Raise the engine revs to 1500
F5 (B13)	Shuttle output speed (lower sen- sor)	1000 r/min=1,9-2,2 (R) 1500 r/min=3,0-3,2 (R) 2000 r/min=3,9-4,3 (R)	and 2000 r/min and measure again in both directions. Compare the reading with the given values. If one of the values deviates, carry out a comparing measurement, check the sensor according to instr. D on page 370/22 .
F6 (B7)	PTO speed sensor	540=1,7-2,0 540E=2,2-2,5 1000=3,0-3,3 540E=2,2-2,5 (8350Hi) 1000E=3,7-3,9 (8350Hi)	Engage PTO. Set the engine revs to 1000 r/min. Compare the values with the given values. If the values deviate, check the sensor acording to instr. D on page 370/22 .
F7	Direction informa- tion	F=1 R=2	Set the gears in neutral. Set the engine revs to 800 r/min. Engage the forward direction (F) and raise slowly the
(B12, B13)	HOIT	2	engine revs up to max. The reading must be 1 and must remain the same during the whole test. Engage reverse direction (R) and repeat the same measurement. The reading must be 2 during the whole measurement. If one of the direction readings does not function (value is faulty or it changes when engine revs varie), but F4 and F5 values are correct, the AC 5/5.2 control unit A1 may be damaged and should be changed.


NOTE! If the measured values deviate from the above given values, check first the driver detection switch and its wiring in the seat.

	1, 8, 2000	Model	Code	Page
37. Autocontrol 5.2 (K41107–)	1. 9. 2002	6250-8950	371	9B

E. Testing proportional valves (P1-P5) in the test mode in AC 5.2

Note! When the proportional valves are tested, all solenoid outputs are connected automatically unenergised.

Hint! E.g. value P4 1.8 means, that the forward direction proportional valve takes max. current of 1.8 A (in the test mode).

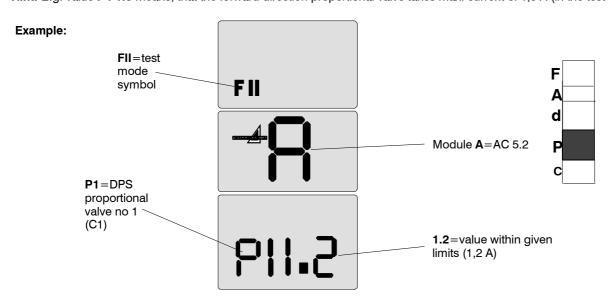

OUTPUT	NAME	VALUE (activated)	DESCRIPTION
P1 (Y4)	DPS-solenoid Y4 (C1).		Activate the test mode and start the engine. Set the engine speed to about 1000 rpm.
P2 (Y6)	DPS-solenoid Y6 (C2).	1,1-1,9 * (program versions	
P3 (Y17)	DPS-solenoid Y17 (C3).	80, 81, 82)	Proportional valve is activated by stepping the desired solenoid and by pushing the pre-programming but-
P4 (Y11)	Forwards solenoid Y11.	1,1-2,2 (program versions	ton. The display reading should be between the limiting values.
P5 (Y12)	Rearwards solenoid Y12.	83, 84, 85, 86)	- If HI=short circuit or valve takes too high current.
P6 (Y2)	PTO solenoid Y2		- If LO=wire damage

^{*} Although the current value is between the limiting values, can fault codes P101...P109 appear. In that case the AC5 – control unit must be re-programmed with a new main program file (versions 86) and the suitable parameter file (see page 370/24G). Newest program versions 83...86 allow a little higher current values, because the higher current taken by a cold solenoid could cause a fault code.

Measure also the supply voltage of the control unit while the engine is running (1500 rpm). Correct value is 12 V – 14,8 V. – If the solenoid resistance was faulty, the solenoid is damaged and should be changed. When the proportional valve or the solenoid is changed, the valve indexes must be checked (see page 370 – 24D).

If above mentioned points are OK, faulty current value can be caused by a defect AC5.2 control unit A1.

Note! Resistance measures and diode checks, see instr. 4C on page 370/21.

Important! Be careful not to mix up the proportional valves and normal solenoid valves during repair work.


WARNING! The proportional valves have a pin for a manual use, which **MUST NOT** be manipulated: the tractor may suddenly start to move, or the pin can become trapped and can cause later damage to e.g. multi-disc clutches. That is why it must always be checked after the repair work (before engine start), that the proportional valve spools are in the outer positions i.e. almost flush with the valve body (if not, remove the valve and press the spool so that the "manual pins" rises).

⁻ If one of the values in the diplay deviates from the given values, measure the solenoid resistance on the connector X13 pins or direct on the valve pins. Check that the pins are not loose (see instr. C on page 370/21). If the resistance is correct, but the display reading is faulty, the fault lies in the wires.

	1.8.2000	Model	Code	Page
37. Autocontrol 5.2 (K41107-)	1. 9. 2002	6250-8950	371	9C

F. Counter functions in AC 5.2

There are 12 pcs counters in the test mode menu (see page 371/7). The counter symbols are placed below the symbols for the proportional valves, see table below:

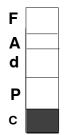

NOTE! The counters does not function in all units. This is not a fault, which could cause the replacement of the unit.

Symbole in display	Test point
b	Number of engagements of F-clutch
F	Time in hours how long time the F-clutch has been engaged (pressurised)
(r)	Number of engagements of R-clutch
Α	Time in hours how long time the R – clutch has been engaged (pressurised)
С	Number of engagements of DPS1 ratio
U	Time in hours how long time the DPS 1 clutch has been engaged (pressurised)
J	Number of engagements of DPS2 ratio
Р	Time in hours how long time the DPS 2 clutch has been engaged (pressurised)
Е	Number of engagements of DPS3 ratio
d	Time in hours how long time the DPS 3 clutch has been engaged (pressurised)
Н	Number of engine starts
L	Time in hours how long time the ACV control unit has been active.

The counters are accessible after activating the test mode and by stepping in the menu with the aid of the DPS push buttons.

Note! When the current is switced on with the ignition switch, the default ratio is DPS1. The value in counter H increases with one digit every time the engine revs rise over 400 r/min. Counter L shows the total running hours of the control unit. If the counter reading is smaller than tractor running hours, a new control unit has been fitted later on the tractor.

Note! Reading counters is happened without a separate confirmation. The counters cannot be zeroed in service. If the control unit is reprogrammed, the counter values remain in the control unit memory. In the spare part control unit the counters have been zeroed.

The greatest value of the hour recorders is 9999 after which the counters are zeroed. Counters are switched on always when current is switched on in the control unit. The readings of the counters are shown shortened as follows:


- the LH side display segment shows the counter symbol
- the two intermediate segments show the two first significant digits of the reading
- the RH side segment shows the number of zeroes.

E.g. b 23 3 means that driving direction forwards has been engaged 23000 times.

Last	Number of
digit	zeroes
0	_
1	0
2	00
3	000 (thousands)
4	0000
5	00000
6	000000 (millions)

Time recorder readings (F, A, U, P, d, L) are also shown in the same way.

Example:

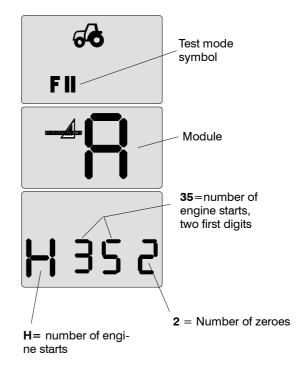

i.e. H = 3500 times.

Note! The counters can be used in connection with maintenance or repair works, when e.g. estimating life time of various components or clutch wear etc.

	1_8-2000	Model	Code	Page
37. Autocontrol 5.2 (K41107-)	1. 9. 2002	6250-8950	371	10

3. Settings

Note! Different setting procedures have been shown on pages **370/15–19A**. If the settings of AC 5 and 5.2 differ from each others, the settings of AC 5.2 have been shown under code 371.

A. Setting mode FIII menu in AC 5.2

Note! Activating the setting mode menu, see page 370/14.

PTO ratio 2 (lever in rear position) PTO ratio 1 (lever in front position) H Choocing speed unit, km/h or miles/h F Choocing temperature unit °C or °F A Setting driving speed parameters 2) U 4WD automatics (on/off), on=1, off=0 16 Clutch pedal ratio index, rearards 15 Clutch pedal ratio index, forwards 14 Manual setting of PTO clutch initial pressure 1) 13 Manual setting of PTO clutch pre-filling time 12 Manual setting of DPS3 (clutch C3) initial pressure 1) 11 Manual setting of DPS2 (clutch C2) initial pressure 1) 10 Manual setting of DPS1 (clutch C1) initial pressure 1) 9 (Manual setting of DPS3 (clutch C3) pre-filling time) 3) 8 (Manual setting of DPS2 (clutch C2) pre-filling time) 3) 7 (Manual setting of DPS1 (clutch C1) pre-filling time) 3) 6 Manual setting of DPS1 (clutch C1) pre-filling time) 3) 6 Manual setting of F-clutch initial pressure 1). 4 Manual setting of F-clutch pre-filling time. 3 Manual setting of F-clutch pre-filling time. 2 Clutch pedal calibration. 1 Gas pedal calibration. CAL START LEVEL CAL 1 Automatic calibration of F-direction (Y11). CAL 2 Automatic calibration of DPS clutch C2 (Y6).	L	DTO ratio 0 (layer in rear position)
H Choocing speed unit, km/h or miles/h F Choocing temperature unit °C or °F A Setting driving speed parameters 2) U 4WD automatics (on/off), on=1, off=0 16 Clutch pedal ratio index, rearards 15 Clutch pedal ratio index, forwards 14 Manual setting of PTO clutch initial pressure 1) 13 Manual setting of PTO clutch pre-filling time 12 Manual setting of DPS3 (clutch C3) initial pressure 1) 11 Manual setting of DPS2 (clutch C2) initial pressure 1) 10 Manual setting of DPS1 (clutch C1) initial pressure 1) 9 (Manual setting of DPS3 (clutch C3) pre-filling time) 3) 8 (Manual setting of DPS2 (clutch C2) pre-filling time) 3) 7 (Manual setting of DPS1 (clutch C1) pre-filling time) 3) 6 Manual setting of DPS1 (clutch C1) pre-filling time) 3) 6 Manual setting of F-clutch initial pressure 1). 5 Manual setting of F-clutch initial pressure 1). 4 Manual setting of F-clutch pre-filling time. 2 Clutch pedal calibration. 1 Gas pedal calibration. CAL START LEVEL CAL 1 Automatic calibration of F-direction (Y11). CAL 2 Automatic calibration of DPS clutch C1 (Y4). CAL 4 Automatic calibration of DPS clutch C2	_	PTO ratio 2 (lever in rear position)
A Setting driving speed parameters 2) U 4WD automatics (on/off), on=1, off=0 16 Clutch pedal ratio index, rearards 15 Clutch pedal ratio index, forwards 14 Manual setting of PTO clutch initial pressure 1) 13 Manual setting of PTO clutch pre-filling time 12 Manual setting of DPS3 (clutch C3) initial pressure 1) 11 Manual setting of DPS2 (clutch C2) initial pressure 1) 10 Manual setting of DPS1 (clutch C1) initial pressure 1) 9 (Manual setting of DPS3 (clutch C3) pre-filling time) 3) 8 (Manual setting of DPS2 (clutch C2) pre-filling time) 3) 7 (Manual setting of DPS1 (clutch C1) pre-filling time) 3) 6 Manual setting of DPS1 (clutch C1) pre-filling time) 3) 6 Manual setting of PFS1 (clutch C1) pre-filling time) 3 6 Manual setting of F-clutch initial pressure 1). 5 Manual setting of F-clutch pre-filling time. 2 Clutch pedal calibration. 1 Gas pedal calibration. CAL START LEVEL CAL 1 Automatic calibration of F-direction (Y11). CAL 2 Automatic calibration of DPS clutch C1 (Y4). CAL 4 Automatic calibration of DPS clutch C2		` '
A Setting driving speed parameters 2) U 4WD automatics (on/off), on=1, off=0 16 Clutch pedal ratio index, rearards 15 Clutch pedal ratio index, forwards 14 Manual setting of PTO clutch initial pressure 1) 13 Manual setting of DPS3 (clutch C3) initial pressure 1) 14 Manual setting of DPS2 (clutch C2) initial pressure 1) 15 Manual setting of DPS1 (clutch C1) initial pressure 1) 16 Manual setting of DPS1 (clutch C1) initial pressure 1) 9 (Manual setting of DPS3 (clutch C3) prefilling time) 3) 8 (Manual setting of DPS2 (clutch C2) prefilling time) 3) 7 (Manual setting of DPS1 (clutch C1) prefilling time) 3) 6 Manual setting of DPS1 (clutch C1) prefilling time) 3) 6 Manual setting of F-clutch initial pressure 1). 5 Manual setting of F-clutch pre-filling time. 3 Manual setting of F-clutch pre-filling time. 2 Clutch pedal calibration. 1 Gas pedal calibration. CAL START LEVEL CAL 1 Automatic calibration of F-direction (Y11). CAL 2 Automatic calibration of DPS clutch C1 (Y4). CAL 4 Automatic calibration of DPS clutch C2		
WD automatics (on/off), on=1, off=0 16 Clutch pedal ratio index, rearards 15 Clutch pedal ratio index, forwards 14 Manual setting of PTO clutch initial pressure 1) 13 Manual setting of PTO clutch pre-filling time 12 Manual setting of DPS3 (clutch C3) initial pressure 1) 11 Manual setting of DPS2 (clutch C2) initial pressure 1) 10 Manual setting of DPS1 (clutch C1) initial pressure 1) 9 (Manual setting of DPS3 (clutch C3) pre-filling time) 3) 8 (Manual setting of DPS2 (clutch C2) pre-filling time) 3) 7 (Manual setting of DPS1 (clutch C1) pre-filling time) 3) 6 Manual setting of PS1 (clutch C1) pre-filling time) 3) 6 Manual setting of R-clutch initial pressure 1). 5 Manual setting of F-clutch initial pressure 1). 4 Manual setting of F-clutch pre-filling time. 3 Manual setting of F-clutch pre-filling time. 2 Clutch pedal calibration. CAL START LEVEL CAL 1 Automatic calibration of F-direction (Y11). CAL 2 Automatic calibration of DPS clutch C1 (Y4). CAL 4 Automatic calibration of DPS clutch C2	F	Choocing temperature unit °C or °F
Clutch pedal ratio index, rearards Clutch pedal ratio index, forwards Manual setting of PTO clutch initial pressure 1) Manual setting of DPS3 (clutch C3) initial pressure 1) Manual setting of DPS2 (clutch C2) initial pressure 1) Manual setting of DPS1 (clutch C1) initial pressure 1) Manual setting of DPS3 (clutch C3) prefilling time (Manual setting of DPS3 (clutch C3) prefilling time) 3) (Manual setting of DPS3 (clutch C3) prefilling time) 3) (Manual setting of DPS2 (clutch C2) prefilling time) 3) Manual setting of DPS1 (clutch C1) prefilling time) 3) Manual setting of DPS1 (clutch C1) prefilling time) 3) Manual setting of R-clutch initial pressure 1). Manual setting of F-clutch initial pressure 1). Manual setting of F-clutch prefilling time. Clutch pedal calibration. CAL START LEVEL CAL 1 Automatic calibration of F-direction (Y11). CAL 2 Automatic calibration of DPS clutch C1 (Y4). CAL 4 Automatic calibration of DPS clutch C2	Α	Setting driving speed parameters 2)
Clutch pedal ratio index, forwards Manual setting of PTO clutch initial pressure 1) Manual setting of PTO clutch pre-filling time Manual setting of DPS3 (clutch C3) initial pressure 1) Manual setting of DPS2 (clutch C2) initial pressure 1) Manual setting of DPS1 (clutch C1) initial pressure 1) Manual setting of DPS3 (clutch C3) pre-filling time) 3) (Manual setting of DPS2 (clutch C2) pre-filling time) 3) (Manual setting of DPS2 (clutch C2) pre-filling time) 3) Manual setting of DPS1 (clutch C1) pre-filling time) 3) Manual setting of R-clutch initial pressure 1). Manual setting of F-clutch initial pressure 1). Manual setting of F-clutch pre-filling time. Clutch pedal calibration. Call Start Level Call Automatic calibration of F-direction (Y11). Call Automatic calibration of DPS clutch C1 (Y4). Call Automatic calibration of DPS clutch C2	U	4WD automatics (on/off), on=1, off=0
Manual setting of PTO clutch initial pressure 1) Manual setting of PTO clutch pre-filling time Manual setting of DPS3 (clutch C3) initial pressure 1) Manual setting of DPS2 (clutch C2) initial pressure 1) Manual setting of DPS1 (clutch C1) initial pressure 1) Manual setting of DPS3 (clutch C3) pre-filling time) 3) Manual setting of DPS2 (clutch C2) pre-filling time) 3) Manual setting of DPS1 (clutch C1) pre-filling time) 3) Manual setting of DPS1 (clutch C1) pre-filling time) 3) Manual setting of R-clutch initial pressure 1). Manual setting of F-clutch initial pressure 1). Manual setting of F-clutch pre-filling time. Clutch pedal calibration. CAL START LEVEL CAL 1 Automatic calibration of F-direction (Y11). CAL 2 Automatic calibration of DPS clutch C1 (Y4). CAL 4 Automatic calibration of DPS clutch C2	16	Clutch pedal ratio index, rearards
re 1) Manual setting of PTO clutch pre-filling time Manual setting of DPS3 (clutch C3) initial pressure 1) Manual setting of DPS2 (clutch C2) initial pressure 1) Manual setting of DPS1 (clutch C1) initial pressure 1) Manual setting of DPS3 (clutch C3) pre-filling time) 3) Manual setting of DPS2 (clutch C2) pre-filling time) 3) Manual setting of DPS1 (clutch C1) pre-filling time) 3) Manual setting of DPS1 (clutch C1) pre-filling time) 3) Manual setting of R-clutch initial pressure 1). Manual setting of F-clutch initial pressure 1). Manual setting of F-clutch pre-filling time. Clutch pedal calibration. CAL START LEVEL CAL 1 Automatic calibration of F-direction (Y11). CAL 2 Automatic calibration of DPS clutch C1 (Y4). CAL 4 Automatic calibration of DPS clutch C2	15	Clutch pedal ratio index, forwards
time Manual setting of DPS3 (clutch C3) initial pressure 1) Manual setting of DPS2 (clutch C2) initial pressure 1) Manual setting of DPS1 (clutch C1) initial pressure 1) (Manual setting of DPS3 (clutch C3) prefilling time) 3) (Manual setting of DPS2 (clutch C2) prefilling time) 3) (Manual setting of DPS1 (clutch C1) prefilling time) 3) Manual setting of DPS1 (clutch C1) prefilling time) 3) Manual setting of R-clutch initial pressure 1). Manual setting of F-clutch initial pressure 1). Manual setting of F-clutch prefilling time. Cultch pedal calibration. Cal Start Level Cal Automatic calibration of F-direction (Y11). Cal Automatic calibration of DPS clutch C1 (Y4). Cal Automatic calibration of DPS clutch C2	14	
pressure 1) Manual setting of DPS2 (clutch C2) initial pressure 1) Manual setting of DPS1 (clutch C1) initial pressure 1) (Manual setting of DPS3 (clutch C3) prefilling time) 3) (Manual setting of DPS2 (clutch C2) prefilling time) 3) (Manual setting of DPS1 (clutch C1) prefilling time) 3) Manual setting of R-clutch initial pressure 1). Manual setting of F-clutch initial pressure 1). Manual setting of F-clutch prefilling time. Manual setting of F-clutch prefilling time. Clutch pedal calibration. CAL START LEVEL CAL 1 Automatic calibration of F-direction (Y11). CAL 2 Automatic calibration of DPS clutch C1 (Y4). CAL 4 Automatic calibration of DPS clutch C2	13	
pressure 1) Manual setting of DPS1 (clutch C1) initial pressure 1) (Manual setting of DPS3 (clutch C3) pre—filling time) 3) (Manual setting of DPS2 (clutch C2) pre—filling time) 3) (Manual setting of DPS1 (clutch C1) pre—filling time) 3) Manual setting of R—clutch initial pressure 1). Manual setting of F—clutch initial pressure 1). Manual setting of R—clutch pre—filling time. Manual setting of F—clutch pre—filling time. Clutch pedal calibration. CAL START LEVEL CAL 1 Automatic calibration of F—direction (Y11). CAL 2 Automatic calibration of DPS clutch C1 (Y4). CAL 4 Automatic calibration of DPS clutch C2	12	
pressure 1) (Manual setting of DPS3 (clutch C3) pre—filling time) 3) (Manual setting of DPS2 (clutch C2) pre—filling time) 3) (Manual setting of DPS1 (clutch C1) pre—filling time) 3) Manual setting of R—clutch initial pressure 1). Manual setting of F—clutch initial pressure 1). Manual setting of R—clutch pre—filling time. Manual setting of F—clutch pre—filling time. Clutch pedal calibration. Gas pedal calibration. CAL START LEVEL CAL 1 Automatic calibration of F—direction (Y11). CAL 2 Automatic calibration of DPS clutch C1 (Y4). CAL 4 Automatic calibration of DPS clutch C2	11	, ,
filling time) 3) (Manual setting of DPS2 (clutch C2) pre—filling time) 3) (Manual setting of DPS1 (clutch C1) pre—filling time) 3) Manual setting of R—clutch initial pressure 1). Manual setting of F—clutch initial pressure 1). Manual setting of R—clutch pre—filling time. Manual setting of F—clutch pre—filling time. Clutch pedal calibration. CAL START LEVEL CAL 1 Automatic calibration of F—direction (Y11). CAL 2 Automatic calibration of DPS clutch C1 (Y4). CAL 4 Automatic calibration of DPS clutch C2	10	` ,
filling time) 3) (Manual setting of DPS1 (clutch C1) pre—filling time) 3) Manual setting of R—clutch initial pressure 1). Manual setting of F—clutch initial pressure 1). Manual setting of R—clutch pre—filling time. Manual setting of F—clutch pre—filling time. Clutch pedal calibration. CAL START LEVEL CAL 1 Automatic calibration of F—direction (Y11). CAL 2 Automatic calibration of DPS clutch C1 (Y4). CAL 4 Automatic calibration of DPS clutch C2	9	
filling time) 3) 6	8	
1). Manual setting of F-clutch initial pressure 1). Manual setting of R-clutch pre-filling time. Manual setting of F-clutch pre-filling time. Clutch pedal calibration. CAL START LEVEL CAL 1 Automatic calibration of F-direction (Y11). CAL 2 Automatic calibration of DPS clutch C1 (Y4). CAL 4 Automatic calibration of DPS clutch C2	7	
1). 4 Manual setting of R-clutch pre-filling time. 3 Manual setting of F-clutch pre-filling time. 2 Clutch pedal calibration. 1 Gas pedal calibration. CAL START LEVEL CAL 1 Automatic calibration of F-direction (Y11). CAL 2 Automatic calibration of R-direction (Y12). CAL 3 Automatic calibration of DPS clutch C1 (Y4). CAL 4 Automatic calibration of DPS clutch C2	6	
me. Manual setting of F-clutch pre-filling time. Clutch pedal calibration. Gas pedal calibration. CAL START LEVEL CAL 1 Automatic calibration of F-direction (Y11). CAL 2 Automatic calibration of R-direction (Y12). CAL 3 Automatic calibration of DPS clutch C1 (Y4). CAL 4 Automatic calibration of DPS clutch C2	5	<u> </u>
me. Clutch pedal calibration. Gas pedal calibration. CAL START LEVEL CAL 1 Automatic calibration of F-direction (Y11). CAL 2 Automatic calibration of R-direction (Y12). CAL 3 Automatic calibration of DPS clutch C1 (Y4). CAL 4 Automatic calibration of DPS clutch C2	4	, ,
1 Gas pedal calibration. CAL START LEVEL CAL 1 Automatic calibration of F-direction (Y11). CAL 2 Automatic calibration of R-direction (Y12). CAL 3 Automatic calibration of DPS clutch C1 (Y4). CAL 4 Automatic calibration of DPS clutch C2	3	
CAL START LEVEL CAL 1 Automatic calibration of F-direction (Y11). CAL 2 Automatic calibration of R-direction (Y12). CAL 3 Automatic calibration of DPS clutch C1 (Y4). CAL 4 Automatic calibration of DPS clutch C2	2	Clutch pedal calibration.
CAL 1 Automatic calibration of F-direction (Y11). CAL 2 Automatic calibration of R-direction (Y12). CAL 3 Automatic calibration of DPS clutch C1 (Y4). CAL 4 Automatic calibration of DPS clutch C2	1	Gas pedal calibration.
CAL 2 Automatic calibration of R-direction (Y12). CAL 3 Automatic calibration of DPS clutch C1 (Y4). CAL 4 Automatic calibration of DPS clutch C2	CAL	START LEVEL
CAL 3 Automatic calibration of DPS clutch C1 (Y4). CAL 4 Automatic calibration of DPS clutch C2	CAL 1	Automatic calibration of F-direction (Y11).
(Y4). CAL 4 Automatic calibration of DPS clutch C2	CALO	Automatic calibration of R-direction (Y12).
	CAL 2	· · · · · ·


	Automatic calibration of DPS clutch C3 (Y17) (not in use).
CAL 6	PTO automatic calibration

- 1) Before setting the initial pressures, the pre-filling times must be set.
- 2) Parameters are the same as codes for AD-instrument, see page 331/6.
- 3) Normally the pre-filling indexes 7, 8 and 9 can be zero, since their effect is minor due to the piston short free movement.

B. Setting clutch pedal ratio index

Note! This setting procedure is only in AC 5.2. With this setting the clutch pedal can be adjusted so that it engages exact in the same point in forward and rearward direction. Increasing the index one step increases all clutch pedal control values one percent and vice versa. I.e. when increasing the index the clutch pedal engages deeper and vice versa. The factory sets the indexes to 0. When both indexes are 0, the clutch slips and engages little earlier when driving rearwards.

1. Activate the setting mode, see page **370/14**. Step in the menu with DPS push buttons and select either point **15** (ratio index forwards) or **16** (rearwards).

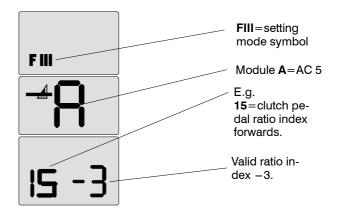

- 2. When the selection has been done, press the DPS preprogramming button, after which the selected point is shown without blinking and the valid and blinking ratio index can be seen in the right.
- 3. The blinking index can be increased or decreased with the DPS push buttons in the speed gear lever knob.
- 4. The index can be between -5....+5. When there is a correct index value in the display, press the DPS pre-programming button. After a successful setting the correct index value (without blinking) is shown in the display.
- 5. The setting mode can be left by switching off current.
- 6. Check the function of the clutch pedal by making startings forwards and rearwards with slipping. Change the index when necessary.



37. Autocontrol 5.2 (K41107–) 1. 9. 2002 | Model | Code | Page | 1. 9. 2002 | 6250–8950 | 371 | 11

C. Automatic calibrations of shuttle, DPS and PTO clutches (Shuttle: setting pre-filling and initial pressure indexes.

DPS and PTO: - only setting of initial pressure indexes)

Note! The automatic calibrations only in AC 5.2. These clutches can also be calibrated manually:

- manual calibration of shuttle and DPS clutches, see page 370/24H
- manual calibration of PTO clutch, see page 371/12A.

In the automatic calibration the whole control line is calibrated:

- Multi-disc clutch
- Proportional valve
- Control unit output

Note! An implement or trailer must not be connected to the tractor during the automatic calibration.

Before calibration the following points must be observed:


- 1. The clutch pedal must be calibrated first.
- 2. Warm the engine up to a normal running temperature and warm the gearbox oil to an operating temperature (+30...+60° C). Check the temperature in the test mode FII, point A2 (Agrodata instrumentation panel shows only temperature over +40°C).


Note! If the tractor has a turbine clutch (HiTrol), check the Stall revs before the calibrations (page 411/7).


- **3.** Drive the tractor on **a level** ground, preferably on asphalt, on tarmac or on hard gravel, where there is space forwards and backwards for some meters (during calibration the tractor moves some centimeters forwards and backwards and stops itself). The calibration fails if done on a field. The calibration must not be done indoors or on slanting ground.
- 4. Disengage the differential lock, 4WD and PTO.
- **5.** Check that the working hydraulics are in the free circulation phase (levers to the neutral position N). Turn the front wheel straight ahead.
- **6.** If the PTO clutch is to be calibrated, move the PTO lever to the front position. The PTO calibration is done without a load on the PTO shaft.


Caution! If the PTO clutch is calibrated, the PTO shaft starts to run automatically during the calibration procedure and also stops by itself.

- 7. Turn the current off and on in order to obtain the test mode.
- **8.** Move the shuttle lever to the neutral position N. Remove possible pre-programming of the DPS speeds by pressing the pre-programming button more than 2 seconds when the shuttle lever is in the neutral position N.
- **9.** Turn the current off for the starting of the automatic calibration.
- 10. Activate the setting mode FIII, see page 370/14. Confirm FIII, confirm A, then " CAL" begins to blink and the start phase of the setting mode appears.

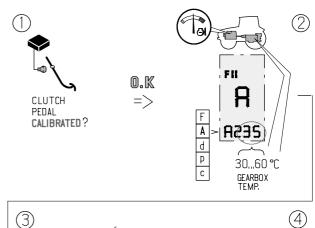


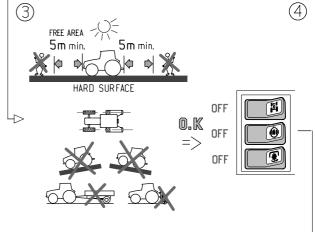

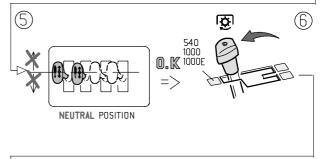

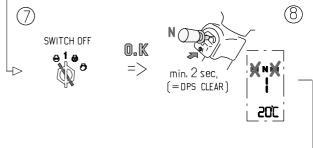



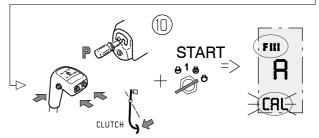

37. Autocontrol 5.2 (K41107-)

1. 8. 2000 1. 9. 2002

6250-8950

Model

Code **371**

Page 11A

- 11. Move the shuttle lever to the neutral position N. Engage a mechanical gear: In 40 km/h models gear M4 and in 50 km/h models (also 6750 and 8350Hi models) gear M3.
- 12. Adjust the engine revs with the hand throttle to 1700-1800 r/min.
- 13. If the clutch pedal is depressed, lift it up.
- **14.** Step with the DPS push buttons in the menu from starting level (CAL, blinking) downwards and select desired function:
- **CAL 1** = Calibration of F-clutch (Y11).
- CAL 2 = Calibration of R-clutch (Y12)
- CAL 3 = Calibration of DPS-clutch (Y4)
- CAL 4 = Calibration of DPS-clutch C2 (Y6)
- CAL 5 = Calibration of DPS-clutch (Y17), NOT IN USE
- CAL 6 = Calibration of PTO clutch (Y2).
- **15.** Confirm desired blinking calibration point (e.g. CAL 1) with DPS pre-programming button, after which there is text CAL without blinking in the display lower row (during the whole calibration). After this the calibration proceeds automatically and stops either to an **interruption code** or to a successful calibration. When the calibration has been successfully completed, e.g. text CAL1 starts to blink in the display (the calibration symbol of the clutch, which has been calibrated is blinking). After this can be stepped to another calibration point etc. A calibration of a clutch takes about 1...1,5 minutes.

NOTE!

- Wait during the whole calibration procedure and do not touch the controls. During the automatic calibration DPS speed 1 is engaged automatically.
- The calibration can be interrupted by depressing the clutch pedal (or by getting up from the seat). The calibrating mode can be left by switching off the current.
- With an aid of the interruption code the control unit informs that the calibration has failed and the reason.


Interruption codes:

	•
C 00	The seat switch does not recognize a driver or clutch pedal has been depressed during calibration.
C 02	Parking brake applied, engine revs wrong, gearbox temperatute wrong, mechanical gear is not engaged or tractor on a slanting ground.
C 03	Initial pressure calibration does not find a correct value in spite of many attempts. The tractor starts to move too sharply. Ensure, that the tractor is on the level ground and that the correct mechanical gear has been engaged.
C 04	Clutch which is calibrated does not transmit enough high torque. E.g. piston or valve trapped, pressure of low pressure circuit is too low, leaks etc.
C 05	Calculated initial pressure index is not within given limits (limits $-9+9$).
C 06	Calculated pre-filling index is not within given limits (e.g. clutch piston does not move freely or clutch worn out) (limits $-9+9$)
C 07	The pre-filling time calibration does not find a correct value in spite of many attempts.


Note! If the automatic calibration does not succeed, try to calibrate the clutch manually (see page 370/24H). If a very small or large index must be used (below -6 or over +6), the fault can lie in the mechanical parts or in the hydraulics.

The calibration can also fail, if the fault lies in:

- Control unit
- Wiring looms
- Battery (voltage too low)
- Proportional valves
- Low pressure circuit of hydraulics (18 bar)
- Mechanical parts (clutch pack etc)
- Clutch return springs faulty or wrong number of springs.

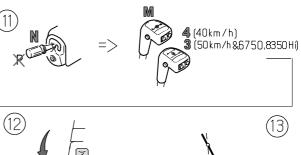



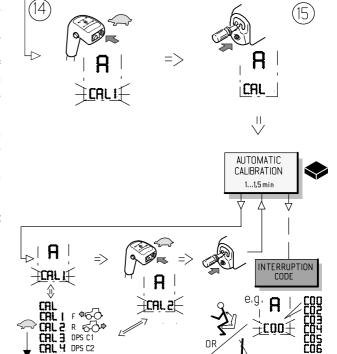

CAL 5 DPS C3 (NOT IN USE)
CAL 6 PTO

37. Autocontrol 5.2 (K41107-) 1. 9. 2002 | Model | Code | Page | 1. 9. 2002 | 6250-8950 | 371 | 12

D. Manual calibration of PTO clutch

(=index settings)

The PTO clutch indexes can be changed if you want to affect the PTO engagement phase e.g. due to excessive delay.

Note! In the setting mode menu point 13=manual setting of PTO clutch pre-filling time and point 14= manual setting of PTO initial pressure. The indexes can be altered between -9...+9.

Important! The PTO indexes are set in the same way as the shuttle indexes (e.g. 3 and 5 for F-clutch) and they affect similar:

- setting pre-filling times of the shuttle, see page 370/24D and 370/18.
- setting initial pressures of the shuttle, see page 370/24D and 370/16.

First is set index 13 and then 14. The effect of the indexes cannot be seen, if an implement is not connected to the PTO. In addition, rotational torque of an implement affects the PTO engagement.


Big implement (e.g. a big baler):

 index values can be altered much, affects slowly when observing visually.


Small implement (e.g. hay turner):

index change small, affects quickly when observing visually.

- 1. Connect an implement to the PTO.
- 2. Warm the engine to a normal running temperature and gearbox oil to an operating temperature (+30°...+60° C). Apply parking brake.
- 3. Adjust engine revs to about 1200 r/min.
- 4. Move the PTO lever to the engaging position.
- 5. Check how the PTO engagement happens with the present index values. Start/stop of the PTO can be done with the rocker switch in the cab. Change the enagement procedure as follows:
- 6. Activate the setting mode (see page 330/14).

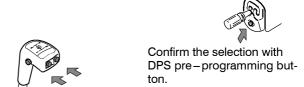

Step in the setting mode menu with DPS push buttons.

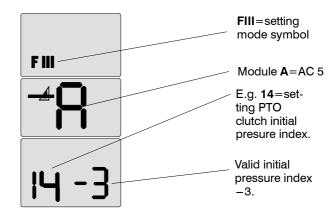

- 7. First set the PTO initial pressure index to -3 (point 14) and then the pre-filling index to -6 (point 13). Increase the pre-filling index **13** on step at a time (-6, -5, -4, -3, -2, -1, 0, 1, 2, 3, 4, 5, 6), and test the PTO engagement after every index change until a clear jerk can be seen in the beginning of the engagement. Decrease then the index two steps.
- Again check that the jerk disappeared in the beginning of the engagement.

Note! If the pre-filling index must be set below -6 or over +6, the PTO clutch is worn out or the piston does not move freely.

- 9. Increase then the initial pressure index **14** one step at a time (-3, -2, -1, 0, 1, 2, 3) and test the engagement after every index change until the implement acceleration occurs in the correct way during engagement.
- 10. The setting mode can be left by switching off current with the ignition switch.

37. Autocontrol 5.2 (K41107–)	1.8:2000	Model	Code	Page
	1. 9. 2002	6250-8950	371	12A

E. Setting 4WD automatics (AC 5.2 only)

In the setting mode there is point U, in which can be selected either automatic function on or off (on=1, off=0).

When the 4WD automatics is on (on=1), the 4WD is engaged for a moment in the drive direction change/start, which reduces wheel slip on a slippery ground. After the drive direction change/start the 4WD is disengaged automatically.

This function can be switched off by selecting $\bf 0$ in the setting mode menu in point $\bf U$ (0=off). Selection is made normally with the DPS push buttons and the selection is confirmed with the DPS pre-programming button.

F. Resetting pre-filling indexes for DPS clutches

If in connection with DPS gear change there occurs a "double jerk" or traction disengages for a while, check/set the DPS clutch pre-filling indexes.

However, first must be set automatically initial pressure indexes for DPS clutches C1 and C2 (see page 371/11).

Set all DPS pre-filling indexes first to 0 (index nos 7, 8 and 9). Also set clutch C3 initial pressure index to 0 (index no. 12), since the automatic calibration does not do this.

Check the function of the DPS.


- If in the beginning of the gear change there is the "double jerk", decrease the pre-filling index of the clutch in question to -2 and check the function after that. Decrease the index value more, if needed. Particularly in the gear change between speeds 1 > 2 there can easily be a double jerk, if the indexes are incorrectly set.
- If the traction disengages for a while during speed change, increase the pre-filling index of the clutch in question to e.g.
 +2 and check the function. Increase more, if necessary.
 Sometimes the initial pressure indexes must be adjusted.
- If speed change between 1 > 2 is bad, set clutch C3 indexes.
- If speed change between 2 > 3 is bad, set clutch C2 indexes
- If speed change between 3 > 2 is bad, set clutch C1 indexes.
- If speed change between 2 > 1 is bad, set clutch C2 indexes.

		Model	Code	Page
37. Autocontrol 5.2 (K41107-)	1. 8. 2000	6250-8950	371	13

4. Components

A. Reconditioning temperature sensors

1. Gearbox oil temperature sensor B14

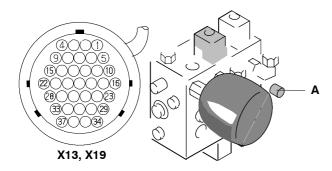

Note! Sensor B14 (A) is placed on the servo valve block on the LH side of the gearbox (see also page **440/24**).

- 1. If this sensor has problems, the self diagnosis shows the following fault codes:
- A311 (temperature over +150°C, impossible).
- A312 (temperature below 50°C, impossible).
- Check then the sensor in the test mode, see table C on page 371/9. Compare the temperature in display to the actual temperature in the gearbox.
- 3. If the temperature reading in the display is clearly wrong or it missis, check the sensor and its wiring. When needed, measure the sensor resistance in connector X13 pins 10 and 6. If the resistance was infinite, check the resistance in the sensor pins:

Resistance values of the sensor (± 1 %):

- $-1600 \Omega (\pm 0^{\circ}C)$
- 2000 Ω (+25°C)
- 3300 Ω (+100°C)
- 4. Change a faulty sensor. Fix wirings.

Note! If this sensor is defective, it can cause engaging problems in various multi-disc clutches (delays and jerks).

Note! If the sensor and its wires seem to be OK, but malfunctions exist, the fault can lie in the control unit of the A 5.2.

2. Outdoor temperature B17

This sensor is placed in the front part of the tractor behind the front grille on the signal horn bracket.

- 1. If you doubt, that the sensor is damaged, test it in the test mode, see table **C** on page **371/9**.
- 2. Compare the diplay reading to the ambient temperature. If the outdoor temperature does not appear at all or it is clearly wrong, check the sensor and its wires.

3. Check the sensor mounting. Check the sensor resistance by measuring it in connector X19 pins 26 and 37. If the resistance was infinite, check connector X1A pins 2 and 5. Change faulty temperature sensor.

Resistance values of the sensor $(\pm 1 \%)$:

- $-1600 \Omega (\pm 0^{\circ}C)$
- 2000 Ω (+25°C)
- $-3300 \Omega (+100^{\circ}C)$

Note! The outdoor temperature sensor does not affect the function of the AC 5.2 unit.

B. Clutch pedal position sensor B16 and B1W (TwinTrac), reconditioning

Note! In the AC 5.2 the clutch pedal position sensor has been fastened so that its position cannot be adjusted.

Note! In the reverse drive controls (TwinTrac, option) there is similar clutch pedal position sensor B1W, which should be tested and calibrated separately.

- 1. If the position sensors have problems, the self diagnosis can show the following fault codes:
- fault code A128: Reference voltage of clutch pedal (and gas pedal) sensor is not within given limits (4,5-5,5 VDC).
 Eventually short circuit in wires
- fault code A314: Signal from the front clutch pedal sensor B16 is not within given limits. Sensor faulty fastened or sensor/wires defective. Battery voltage too low.
- fault code A351: Signal from rear clutch pedal sensor
 B1W faulty. Sensor faulty fastened or sensor/wires defective. This fault code appears only when the seat is turned rearwards. Battery voltage too low.
- 2. Check the function of the sensors in the test mode (see table $\bf C$ on page 371/9). If the function is not within given limit values, check the mounting of the position sensor and its wires. Also check the sensor lever fitting on the sensor spindle. If the signal voltage is missing or it is not in limits check the supply voltage $(4,75-5,25\ V)$ and signal voltage by means of measuring cable ETV 894510 (see picture on page 371-14).

Clutch pedal, Up front / rear		In bottom		
Signal voltage	0,3-2,4 V	2,5-4,7 V		

- 3. If You doubt poor contacts in wires/connectors, disconnect and then reconnect the front sensor B16 connector and make the same to the control unit connector A1A5.
- 4. In the same way, check the rear pedal sensor B1W connector and connector S1W pins 7 and 9 and connector A1A5 on the control unit.

Note! If the wires are be OK, but malfunctions occur, the sensor can be damaged or the fault can lie in the control unit A1 of AC 5.2. Defective sensor or control unit must be changed.

4. When the fault has been repaired, calibrate the clutch pedal sensors, see page **370/15** instr. **C**. The both pedals are calibrated in the same way but when calibrating the rear pedal, the drive's seat must be turned rearwards.

	1.8.2000	Model	Code	Page
37. Autocontrol 5.2 (K41107-)	1. 9. 2002	6250-8950	371	14

C. Front clutch pedal limit switch S9 and rear pedal switch S2W, reconditioning

Note! The limit switches' activating point has been changed into zero point of the clutch pedal posiiton in AC 5.2. That is why the switch activating point is not necessary to adjust accurately. The limit switch must be adjusted so that it functions near the pedal lower position, but the functioning is never the less surely (e.g. 1cm pedal movement).

- 1. If the limit switches have malfunctions, the self diagnosis shows the following fault codes:
- d133: The front and rear pedal limit switches active simultaneouly. Switches possible damaged or short circuit in wires.
- d215: The front pedal position greater than 50 % and kimit switch S9 active simultaneously. Switch damaged or short circuit in wires.
- d254: Rear pedal position greater than 50 % and limit switch S2W active simultaneously. Switch damaged or short circuit in wires (this fault code appears only when the seat is turned rearwards).
- 2. Then check the limit switch position and wires. The limit switch function can be checked in the test mode, see table **B** on page **371/8**.
- 3. If You doubt poor contacts, check the wire connections on the switch S9. Also check the control unit connector A1A7 and earth point GR5.
- 4. Check the rear pedal switch S2W wires on it. Check earth point GR1 and connector A1A2 of the control unit.

Note! If the wires seem to be OK, and the switch functions when testing it with finger, but still malfunctions occur, the switch can be defective or control unit of AC 5.2 can be damaged. Then change the components in question.

D. Gas pedal (fuel injection pump) position sensor B15, reconditioning


Note! In AC 5.2 system the gas pedal position sensor is fastened so that its position cannot be adjusted.

Note! If the gas pedal position sensor has malfunctions, it affects the automatic or manual functions of DPS (auto1, auto2, Speed Matching, AutoTraction etc). Defective engine rotation speed sensor can also cause these malfunctions in DPS.

Note! The rear gas pedal (TwinTrac) has been connected with a cable to the front gas pedal. When necessary, the cable must be adjusted.

The self diagnosis shows the following fault codes, when the gas pedal position sensor has malfunctions:

- A128: Reference voltage of the gas pedal (and clutch pedal) position sensor is not within given limits (4,5-5,5 VDC)). Eventually wires in short circuit.
- A313: Signal from the gas pedal sensor under 0,4 or over 4,4 VDC. Sensor wrongly fastened or wire damages. Battery voltage can be too low.
- 1. Check in the test mode (table $\bf C$ on page $\bf 371/9$), whether the sensor values are within the given limits (point A4 in the table). If the function is defective, check the sensor fitting and wires. Also check the sensor pin bearings (no clearance) and pin wear (and fuel injection pump pin wear). If the signal voltage is missing or it is not in limits, check the supply voltage $(4,75-5,25~\rm V)$ and signal voltage by means of measuring cable ETV 894510.

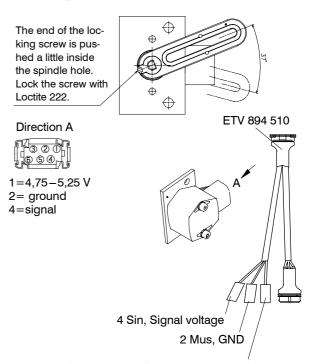

1 Pun, supply voltage +4,75...+5,25V

Accelerator pe- dal	Up	In bottom
Signal voltage	2,0-4,7 V	0,3-3,0 V


- 2. If You think poor contacts, check the sensor connector and wires. Check connector X1A pins 1, 2 and 3 and connector X19 pins 28, 29 and 37. Also check the control unit connector A1A5.
- 3. If the sensor fitting and its wires seem to be OK, but still malfunctions appear, the sensor itself can be damaged or the control unit A1. Change a damaged part.
- 4. After the fault has been repaired, carry out gas pedal calibration according to instr. **B** on page **370/15.** If the rear clutch pedal has malfunctions, adjust the pedal cable.

Note! The gas pedal position sensor must be calibrated after the first **500 running hours** and later at intervals of **1000** running hours.

		Model	Code	Page
37. Autocontrol 5.2 (K41107-)	1. 8. 2000	6250-8950	371	15

5. Others

A. AC 5.2 control unit, connectors:

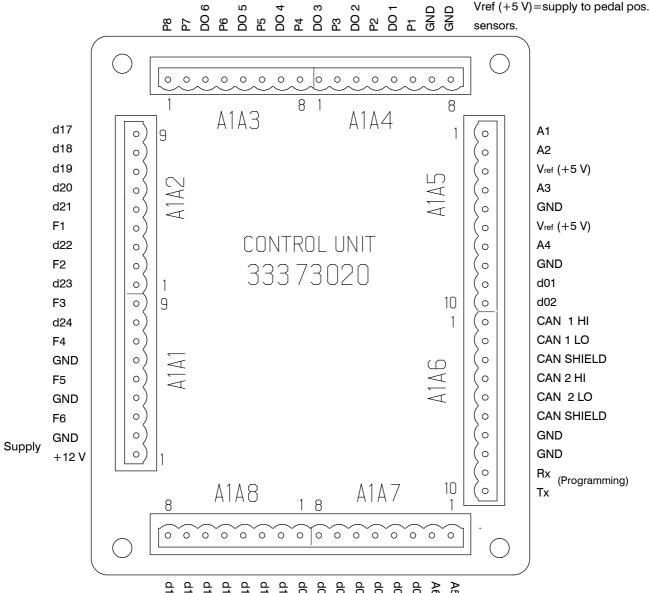

d10 d11 d12 d13 d08 d06 d07

ANALOG INPUTS:

A1=outdoor temp (B17) A2=oil temp (B14) A3=Gas pedal, signal (B15) A4=front clutch pedal, signal (B16) A5=rear clutch pedal, signal (B1W) A6=reserve **FREQUENCY INPUTS:** F1 = engine speed (B11) F2=gearbox speed (B6) F3=reserve F4=shuttle speed 1 (B12) F5=shuttle speed 2 (B13) F6=PTO speed (B7) **DIGITAL OUTPUTS:** DO 1=LCD display DO 2=LCD display DO 3=LCD display DO 4=LCD display DO 5=parking brake


DO 6=PTO pilot light (H10)


OUTPUTS TO PROPORTIONAL VALVES: P1=DPS solenoid 1 (Y4) P2=DPS solenoid 2 (Y6) P3=DPS solenoid 3 (Y17) P4=F-solenoid (Y11) P5=R-solenoid (Y12) P6=PTO-solenoid (Y2) P7=starter interlock (K52) P8=4WD automatics **DATA TRANSFERRING CHANNELS:** CAN 1 HI *) CAN 1 LO *) CAN SHIELD *) CAN 2 HI *) CAN 2 LO *) CAN SHIELD *) **GND** RS-232 Rx

Tx

07.4.1	1 8:2000	Model	Code	Page
37. Autocontrol 5.2 (K41107-)	1. 9. 2002	6250-8950	371	16

B. AC 5.2, Wiring diagram

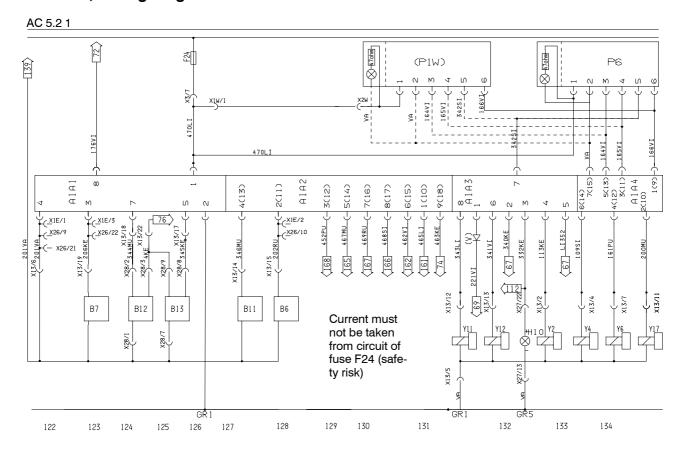

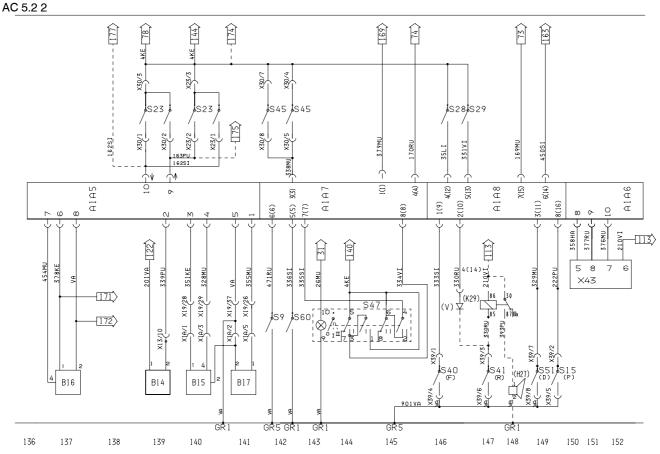

37. Autocontrol 5.2 (K41107-) 1. 8. 2000 Model Code Page 17

Wiring diagram AC 5.2

(The diagrams also under code 310). Position of connectors, see pages 310/6C och 6D.

A. Control unit connector A1A1

F24: AC5.2 fuse in the fuse box

GR1: earth point in the rear part of the lever console

B7: PTO speed sensor

B12: Shuttle speed sensor, upper B13: Shuttle speed sensor, lower

Position of connectors:

X13: Connector for transmission (37 pins) on the support plate in the lever console.

X28: Connector for shuttle sensors (9 pins) in the lever console

X26: White connector (26 pins) in the rear face of the combination instrument.

X1E: Connector (9 pins) for ACD power lift speed sensors on the support plate in the lever console (also connector X2E).

X3: Connector in fuse box

B. Control unit connector A1A2

B6: Gearbox speed sensor B11: Engine speed sensor

Position of connectors:

X13: Connector for transmission (37 pins) on the support plate in the lever console.

X26: White connector (26 pins) in the rear face of the combination instrument.

X1E: Connector (9 pins) for ACD power lift speed sensors on the support plate in the lever console (also connector X2E)

C. Control unit connector A1A3

Y11: Proportional valve, forward driving (F) Y12: Proportional valve, rearward driving (R)

Y2: PTO proportional valve (PTO)

H10: PTO ind. light

GR1: earth point in the rear part of the lever console

GR5: earth poin in the cab front wall P6: AC 5.2 diplay, front controls

(P1W): AC 5.2 display, reverse drive controls (TwinTrac)

Position of connectors:

X13: Connector for transmission (37 pins) on the support plate in the lever console.

X27: Blue connector (26 pins) in the rear face of the combination instrument.

D. Control unit connector A1A4

Y4: DPS proportional valve (C1) Y6: DPS proportional valve (C2) Y17: DPS proportional valve (C3) P6: AC 5.2 display, front controls

(P1W): AC 5.2 display, reverse drive controls (TwinTrac)

Position of connectors:

X13: Connector for transmission (37 pins) on the support plate in the lever console.

E. Control unit connector A1A5

B14: Gearbox temperature sensor

B15: Gas pedal pisition sensor

B16: Clutch pedal position sensor

B17: Outdoor temperature sensor

S23: DPS push buttons up/down

GR1: earth point in the rear part of the lever console

Position of connectors:

X13: Connector for transmission (37 pins) on the support plate in the lever console.

X19: Connector (37 pins) on the cab front wall on the RH side.

X1A: Connector (9 pins) for the engine sensors in the front part of the engine compartment near the thermostat housing.

X23: Connector for DPS push buttons in the lower part of the gear levers

X30: Connector (9 pins) for gear lever push buttons in the lower end of the levers.

F. Control unit connector A1A6

X43: RS-232 connector on the lever console

G. Control unit connector A1A7

S9: Starter interlock switch at clutch pedal

S60: Safety switch in driver's seat

S47: Switch, DPS, man/auto

S45: Switches for HiShift

GR1: earth point in the rear part of the lever console

GR5: earth poin in the cab front wall

Position of connectors:

X30: Connector (9 pins) for the gear lever push buttons in the lower end of the levers.

H. Control unit connector A1A8

S40: Reed relay, forward driving (F).

S41: Reed relay, reverse driving (R).

S51: Push button, DPS, pre-programming

S15: Reed relay, parking brake (P)

S28: Switch, PTO 540.

S29: Switch, PTO 1000/540E

H27: Back buzzer

K29: Relay, back buzzer

GR5: earth poin in the cab front wall


Position of connectors:

X39: Connector (9 pins) for the shuttle lever at the steering wheel under the dashboard.

	$\overline{}$	Model	Code	Page
37. Autocontrol 5.2 (K41107 –)	1. 8. 2000	6250-8950	371	18


C. Control diagrams

Control of DPS, AC 5.2

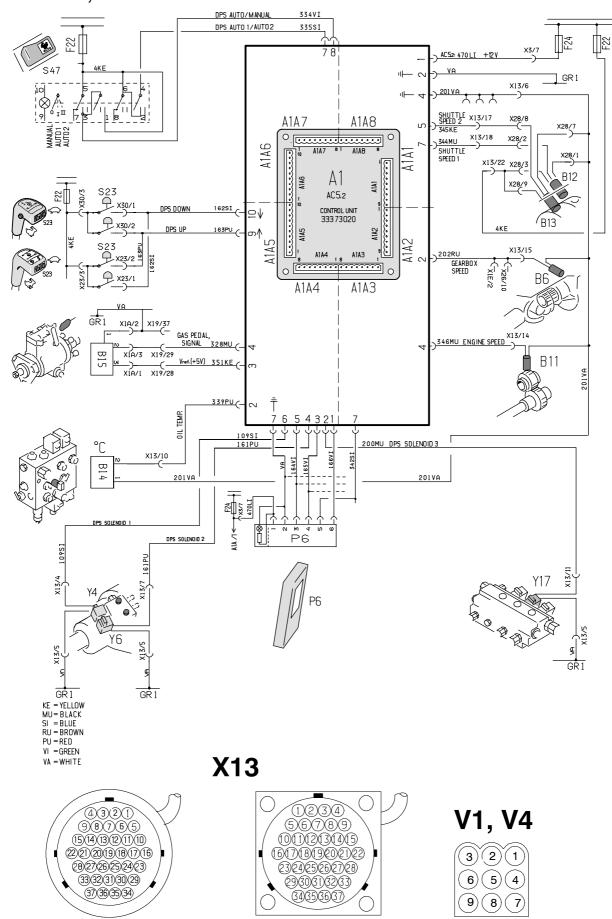


	$\overline{}$	Model	Code	Page
37. Autocontrol 5.2 (K41107-)	1. 9. 2002	6250-8950	371	19

Control of HiTech shuttle, AC 5.2

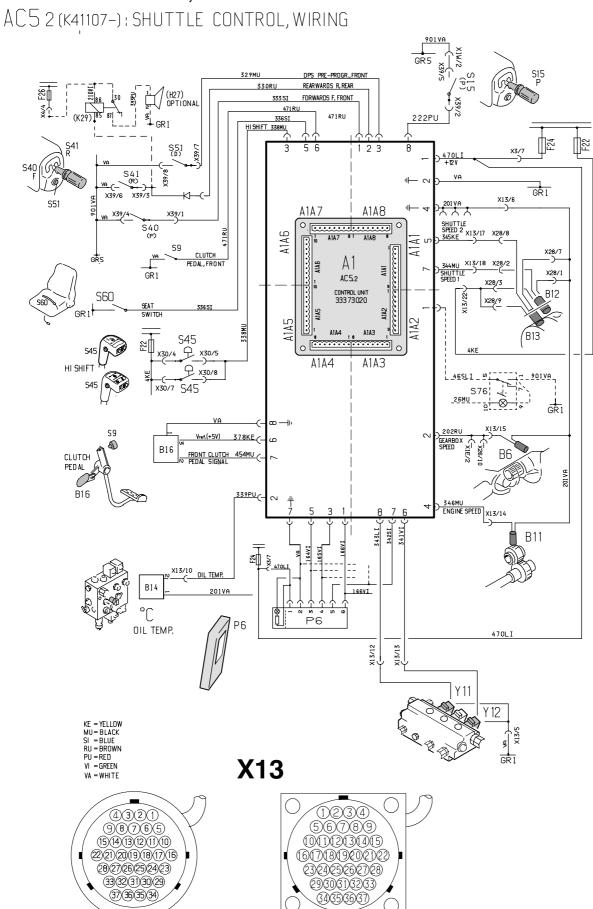




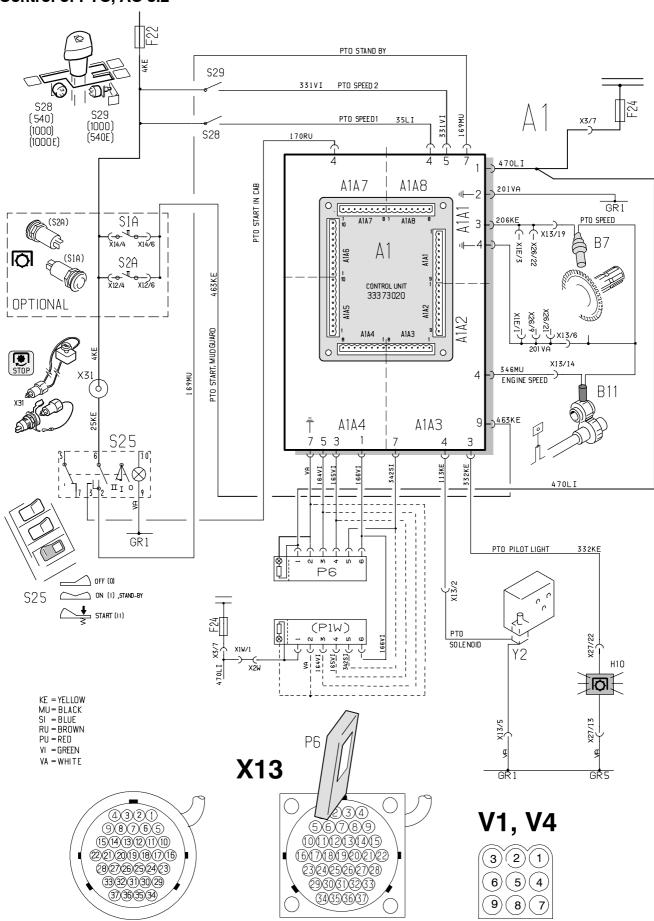

	1.8:2000	Model	Code	Page
37. Autocontrol 5.2 (K41107-)	1. 9. 2002	6250-8950	371	21


Control of parking brake, AC 5.2

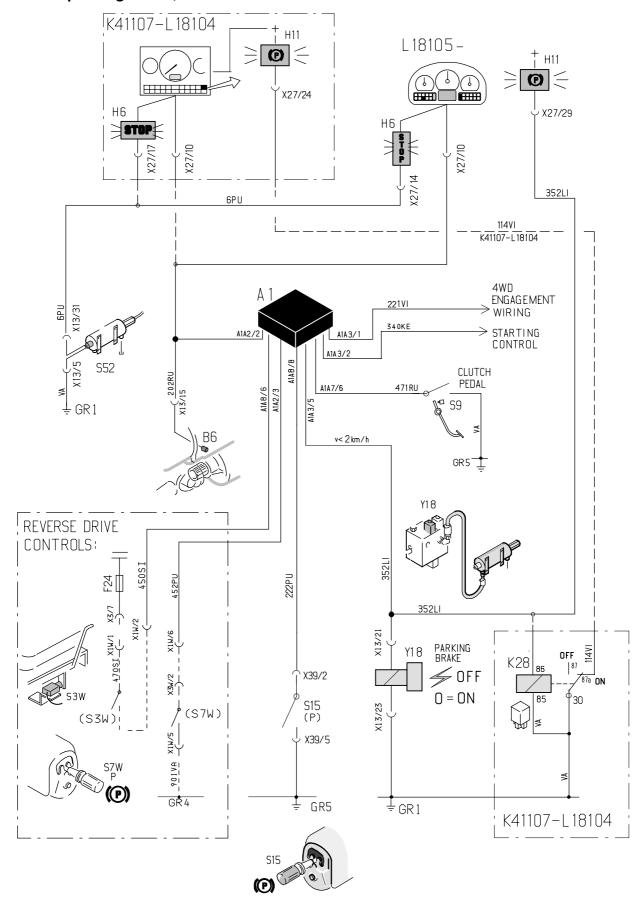

		Model	Code	Page
37. Autocontrol 5.2 (K41107 –)	1. 8. 2000	6250-8950	371	22


Starting control, AC 5.2

AC5,2(K41107_): STARTING CONTROL

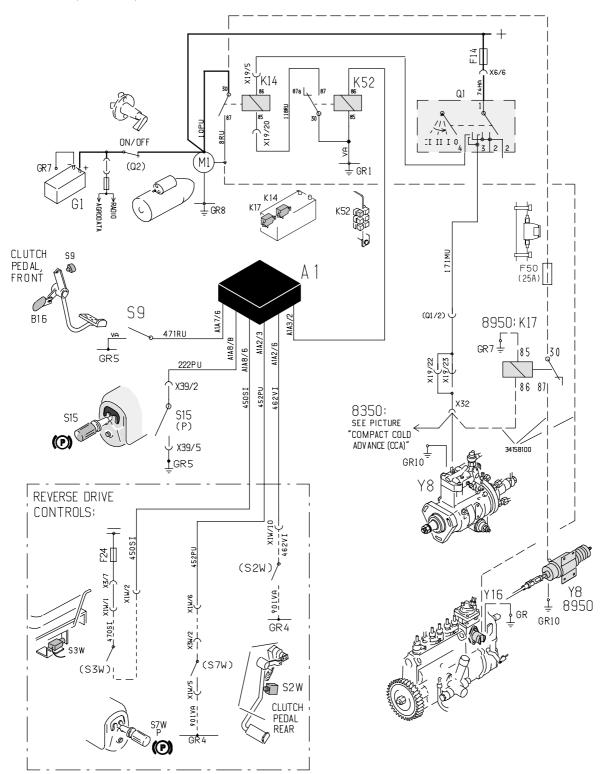


37. Autocontrol 5.2 (K41107-)	1, 8, 2000	Model	Code	Page
	1. 9. 2002	6250-8950	371	23

Control of 4WD, AC 5.2

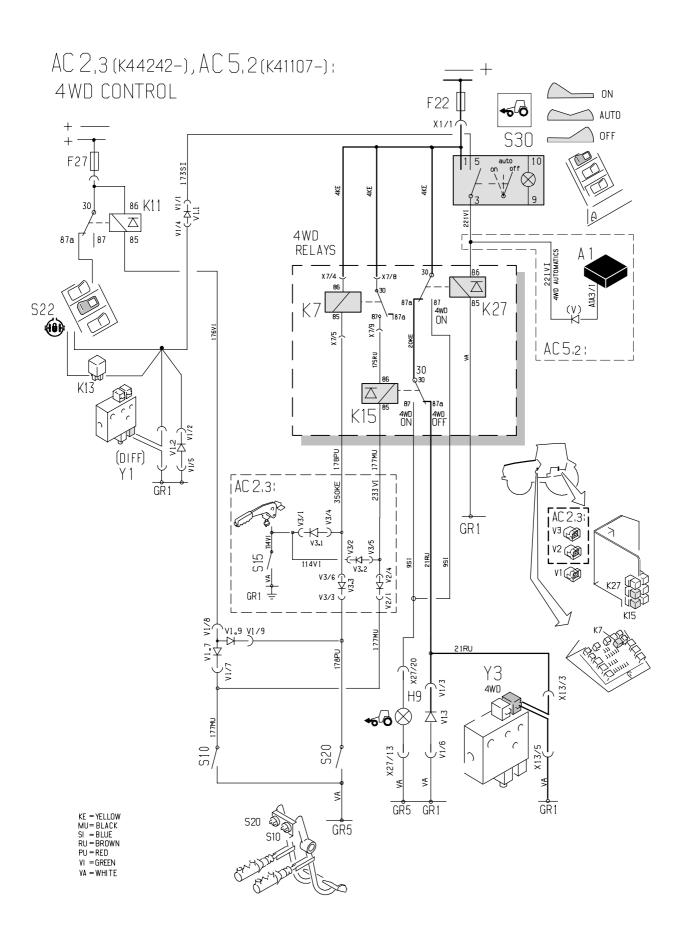

37. Autocontrol 5.2 (K41107-)

1. 8.2600 | Model | Code | Page |
1. 9. 2002 | 6250-8950 | 371 | 24

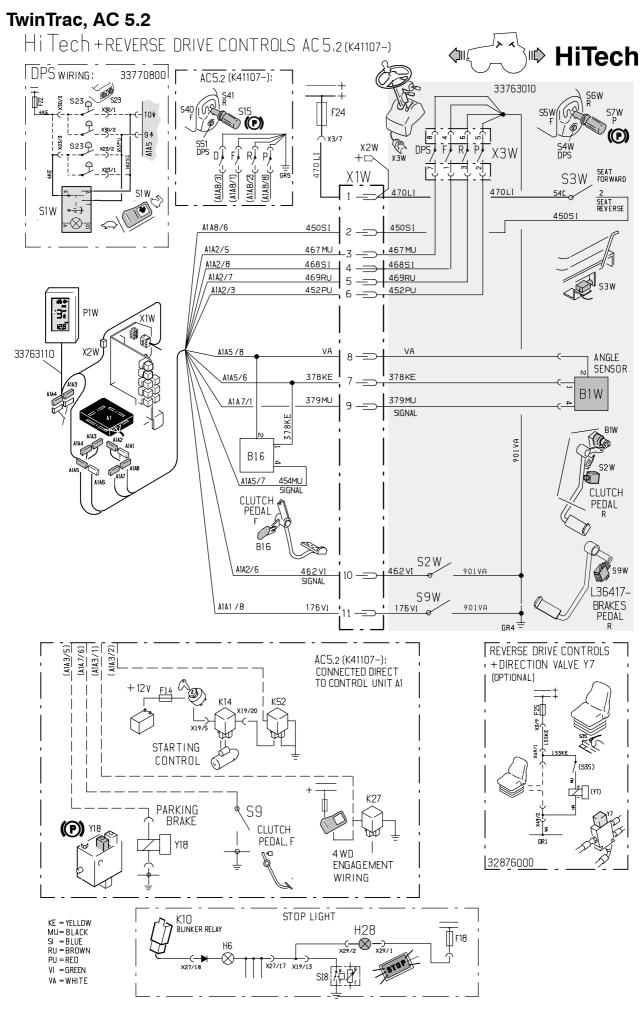


https://tractormanualz.com/

37. Autocontrol 5.2 (K41107-)	1.8-2900	Model	Code	Page
	1. 9. 2002	6250-8950	371	25

AutoTraction


HiTech

AC5,2(K41107-): AUTOTRACTION

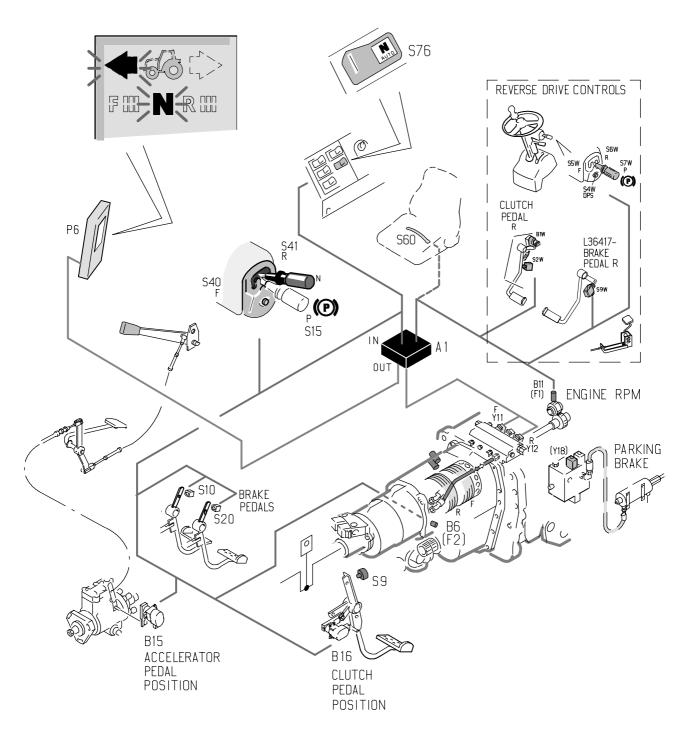

Model

AC 5.2 FRONT PTO, WIRING (4-cyl, models, K41107 - L18104)

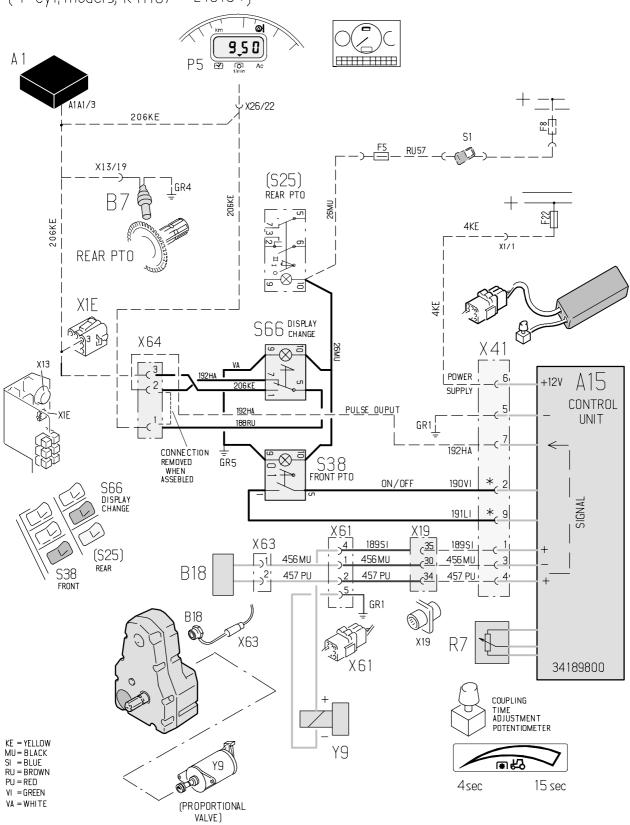

- _____ MANUFACTURER'S WIRE LOOM
- ---- ENGINE WIRE LOOM
- WIRE LOOM OF THE SET
 - * TO BE CONNECTED WHEN ASSEMBLED

1. 9. 2002


6250-6850

Model

Code **371**

Page **27**

AC 5.2 FRONT PTO, WIRING (4-cyl, models, (L18105-)

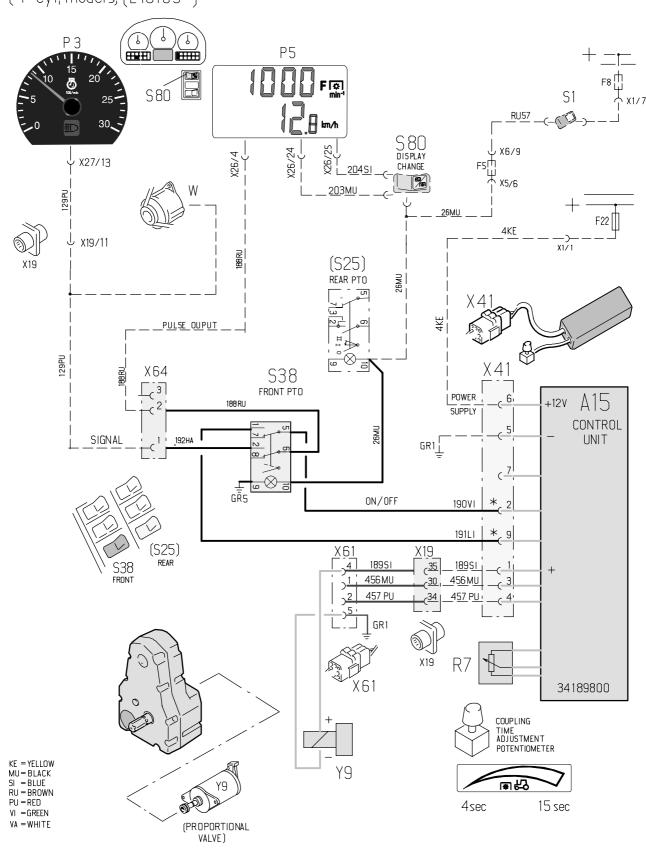

MANUFACTURER'S WIRE LOOM

⁻⁻⁻⁻ ENGINE WIRE LOOM

WIRE LOOM OF THE SET

^{*} TO BE CONNECTED WHEN ASSEMBLED


1. 9. 2002

Model **8050 – 8950**

Code **371** Page 28

AC 5.2 FRONT PTO, WIRING

(6-cyl, models, (L18105-)

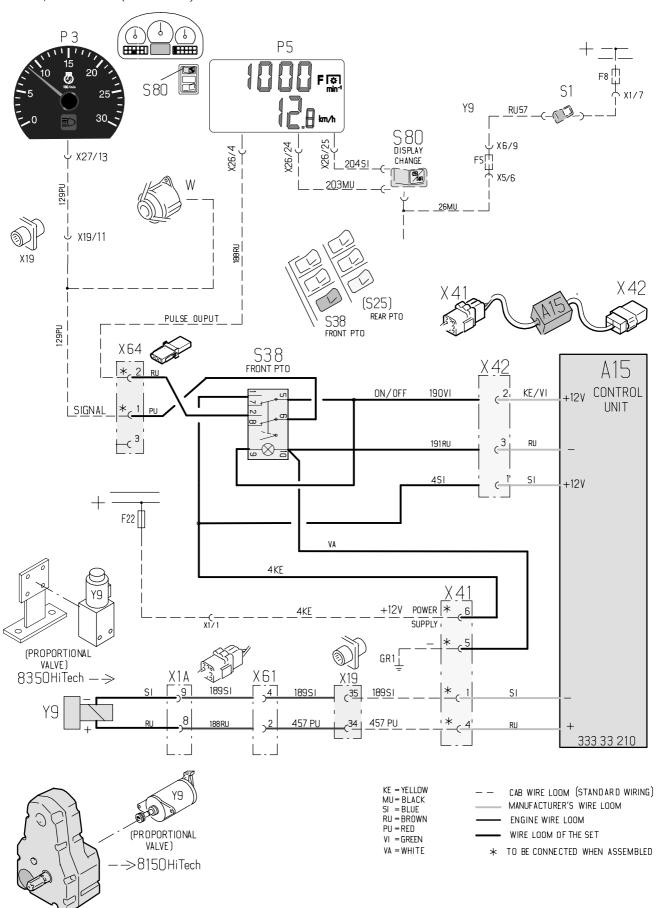

REAR WINDOW WIPER AND WASHER	13.08.1993	Model	No	Page
FITTING INSTRUCTION	09.04.1998	6000-8750	39.1	1(4)

Rear window wiper and washer 31611700.

Fitting wiper motor:

- There are ready made holes for the wiper motor in the rear window (point A).
- Remove the protective plugs, clean the window and glue sticker 32534400 on the fastening point on the inner side.
- Fasten the wiper motor according to picture A.
- Connect the motor to connector M5 which is placed in the wire loom for the cab. The connector can be found by opening a little the roof rear linings.

To tractor no 660794:

- Remove the instrument panel cover by unscrewing four cross-head screws and the starter switch nut.
 Remove the cover and fit rocker switch 30943900.
- Connect existing connector "S32" (wire no 13, 120, 122 and 123) to the rocker switch and wires no 26 and earth lead (white) to the indicating lamp holder (picture C).

From tractor no 660795:

 Remove the lever console longer switch panel. Cut a hole on the panel (marked) for the switch frame (picture D).

Fasten the switch S32 in the upper hole (covers on the lower holes).

Seek connector "S32" under the panel. If necessary, remove the lever console side panel. Connect connector to the switch (picture C) and fit the frame.

- Switch on the wiper for a while and observe the extreme stopping points of the wiper.
- Fasten the wiper arm and the blade.


Fitting washer:


- The washer reservoir bracket is attached under the fixing screws of the LH side rear mudguard (picture B).
- Take supply voltage for the pump from existing connector X18 in the wire loom 32275900.
- Connect the wire loom and a water hose to the reservoir pump and fit the reservoir.
- Drill a hole ø 12 mm for the lead in rubber of the water hose (see picture B).
- Pass the hose according to the picture, glue hose fasteners (2 pcs) to the edge of the corner box and fasten the hose to the blade with fastener 30637400. Fit and direct the nozzle.


Function:


 The wiper functions by pushing the rocker switch to position I and washer by pushing continually the switch.

REAR WINDOW WIPER AND WASHER	13.08.1993	Model	No	Page
FITTING INSTRUCTION	09.04.1998	6000-8750	39.1	2(4)

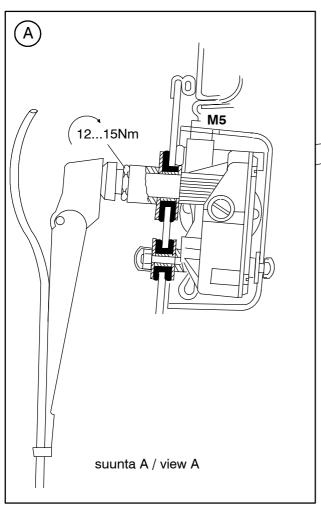


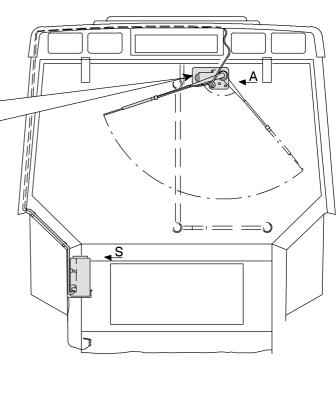


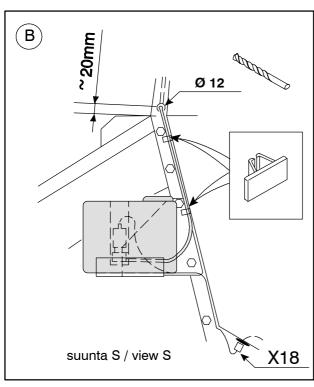

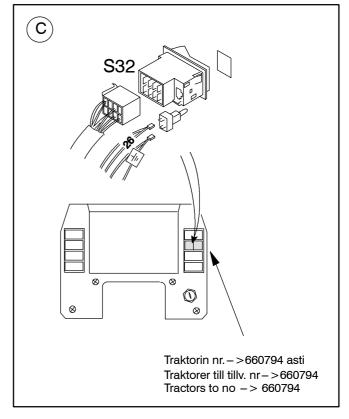

REAR WINDOW WIPER AND WASHER	13.08.1993	Model	No	Page
FITTING INSTRUCTION	09.04.1998	6000-8750	39.1	3(4)

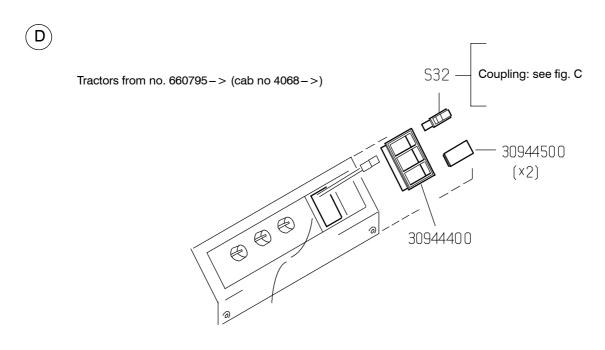

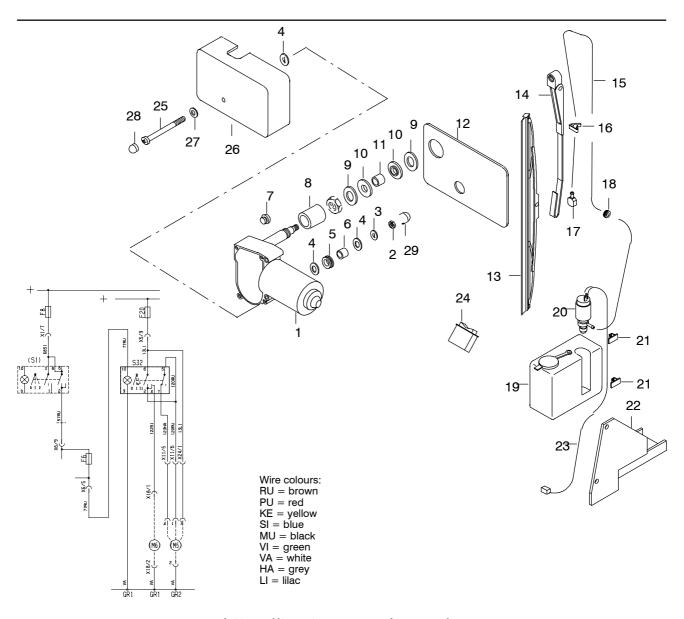

REAR WINDOW WIPER AND WASHER	13.08.1993	Model	No	Page
FITTING INSTRUCTION	09.04.1998	6000-8750	39.1	4(4)

	1	31611700	Takalasin pyyhin	Brakrutetorkare	Rear window wiper	Rückscheibewasche	r
1	1	32275700	.Moottori	Motor	Engine	Motor	
2	1	JB8903	.Mutteri	Mutter	Nut	Mutter	
3	1	JD0406	.Aluslevy	Bricka	Washer	Scheibe	
4	3	32241000	.Aluslevy	Bricka	Washer	Scheibe	
5	1	30314000	.Läpivientikumi	Gummigenomföring	Rubber inlet	Durchführ.gummi	
6	1	32060900	.Holkki	Hylsa	Sleeve	Hülse	
7	1	32249100	.Kumi	Gummi	Rubber	Gummi	
8	1	32237100	.Holkki	Hylsa	Sleeve	Hülse	
9	2	32240900	.Aluslevy	Bricka	Washer	Scheibe	
10	2	32275600	.Kumi	Gummi	Rubber	Gummi	
11	1	32237200	.Holkki	Hylsa	Sleeve	Hülse	
12	1	32534400	.Tarra	Dekal	Sticker	Aufkleber	
13	1	30302100	.Sulka	Blad	Blade	Feder	
14	1	32275500	.Varsi	Arm	Arm	Arm	
15	1	32546800	.Letku	Slang	Hose	Schlauch	
16		30637400	.Kiinnitin	Fästdon	Fastener	Halter	
17	1	30240800	.Suutin	Munstycke	Nozzle	Düse	
18	1	30145500	.Läpivientikumi	Gummigenomföring	Rubber inlet	Durchführ.gummi	
19	1	30184500	.Säiliö	Behållare	Container	Behälter	
	1	31960600	Korkki	Lock	Сар	Deckel	
20	1	30240700	.Moottori	Motor	Engine	Motor	
21	2	30324000	.Kiinnitin	Fästdon	Fastener	Halter	
22	1	32276000	.Teline	Konsol	Bracket	Gestell	
23	1	32275900	.Johdinsarja	Ledningssats	Wiring set	Verkabelung	
24	1	30943900	.Keinukytkin	Vippströmbrytare	Switch	Schaukelschalter	
25	1	HD9168	.Ruuvi	Skruv	Screw	Schraube	
	1	30944800	.Linssi	Lins	Lens	Linse	
	1	30944600	.Lampunpidin	Lampfattning	Bulb socket	Lampenfuß	
26	1	32773000	.Suoja	Skydd	Cover	Schutz	
27	1	32667000	.Aluslevy	Bricka	Washer	Scheibe	
28	1	32604400	.Suoja	Skydd	Cover	Schutz	
29	1	31631800	.Suoja	Skydd	Cover	Schutz	
_	1	30944400	.Paneeli	Panel	Panel	Panel	:
-	2	30944500	. Peitelevy	Täckplatta	Covering plate	Deckplatte	:

Traktorin numerosta 660795 – > Fr.o.m. traktor nr. 660795 – > From tractor no 660795 – >

PTO EMERGENCY STOP, FITTING INSTR.		Model	Code	Page
	15.04.1994	6000-8400	39	1(3)

PTO emergency stop 32916400

— With this mounting kit the PTO emergency stop can be fitted also on earlier Mezzo tractors (standard on ACII, IV Mezzo tractors). At the same time, the PTO switch is changed to the 3—position switch and the new switch is fitted on the side panel.

The PTO does not start any more when the engine is started.

PTO stops when the plug is removed from the socket. Also an electric stop switch can be connected to the plug (switch is not delivered with the mounting kit).

FITTING:

- Disconnect the battery earth cable. Remove the cab lever console side panel. Detach the longer switch panel section on the console.
- Disconnect connector S25 (3 pins) in the console in front of the PTO lever and connect inplace connector "S25" in the wiring loom 12.
 Detach the switch in the PTO lever knob and remove it together with its wires. Place plug 11 inplace of the switch.
- Drill a Ø 5,5 mm through the vertical gutter under the panel. Fasten to the hole wiring loom 12 relay holder with screw 1,2 and fit relay 10.
- Rocking switch 3 is fitted on the AUTOCONTROL -panel (see picture). If there is already extra switches on the panel (e.g. rear window wiper). fit the new switch onto a free reserve place. Otherwise, make on the panel 49x78 mm opening for a switch frame 4 (place for opening has been marked on the rear face of the panel). Place cover plates 5 onto the other openings.
- Make a Ø 19 mm hole on the RH side of the lower rear window above the PTO cable. Fit into the hole emergency socket 6 (wire no 35 (lilac) to the middle pin and wire no 25 (yellow) to the outer pin) and fit the emergency plug fixing plate 7.

Fasten sticker **8** beside the hole. Fit the plug **9** into the socket, plug fastener is fitted to the hole on the plate.

 Connect the battery earth cable.
 Check the function of the emergency stop. How to use the emergency stop, see the following page.

PTO EMERGENCY STOP, FITTING INSTR.		Model	Code	Page
	15.04.1994	6000-8400	39	2(3)

The power take off switch has 3 positions:

The **front side** pressed down = **off** position. The switch in the **middle** = **on** position.

Rear side pressed down, spring return is the starting position.

By pressing the rear side down the PTO is engaged. By pressing the front side of the switch down the PTO is disengaged.

The PTO is only disengaged temporarily with this switch. The indicator light on the instrument panel is still illuminated showing that the lever is engaged. Always disengage the PTO by moving the PTO lever to the middle position e.g. when leaving the tractor cab by moving the lever to the middle position.

- The PTO can be temporarily disengaged by pushing the PTO lever outwards (not when using ground speed PTO). The PTO should be started with switch.
- The emergency stop outside the tractor can be connected to operate in two different ways:

Method 1. Connect a rope from the operating position on the implement to the stop plug.


Method 2. Connect a longer loop of cable to the plug and have an emergency switch fitted in the loop close to the operator.

 After an emergency stop or stopping the tractor engine the PTO will only start by pressing the switch in the <u>starting position</u>.

	1	32916400	PTO-hätäpysäytys	Nödstopp, PTO	Emerg. stop,PTO	Notstop, Zapfw	elle
1	1	HD8005	.Ruuvi	Skruv	Screw	Schraube	M05X12
2	1	JB8902	.Mutteri	Mutter	Nut	Mutter	N M5
3	1	30943900	.Keinukytkin	Vippströmbrytare	Rocker switch	Schalter	3- Pos.
	1	32887200	.Symbolilinssi	Symbollins	Lens	Linse	PTO
	1	30944600	.Lampunpidin	Lampfattning	Bulb socket	Lampenfuß	
4	1	30944400	.Asennuspaneeli	Panel	Panel	Panel	
5	2	30944500	.Peitelevy	Täckplatta	Covering plate	Deckplatte	
6	1	32207200	.Pistorasia	Stickdosa	Plug socket	Steckdose	
7	1	32891500	.Levy	Platta	Plate	Platte	
8	1	32893700	.Tarra	Dekal	Sticker	Aufkleber	
9	1	32893900	.Oikosulkupistoke	Stickkontakt	Contact plug	Steckkontakt	
	1	32893800	Haka	Hake	Hook	Haken	
10	1	32906800	.Vaihtorele	Relä	Relay	Relais	With diode
11	1	32908100	.Tulppa	Täckplatta	Covering plate	Deckplatte	
12	1	32916300	.Johdinsarja	Ledningsats	Wiring set	Verkabelung	

PTO EMERGENCY STOP, FITTING INSTR.

Model Code Page 15.04.1994 6000-8400 39 3(3)

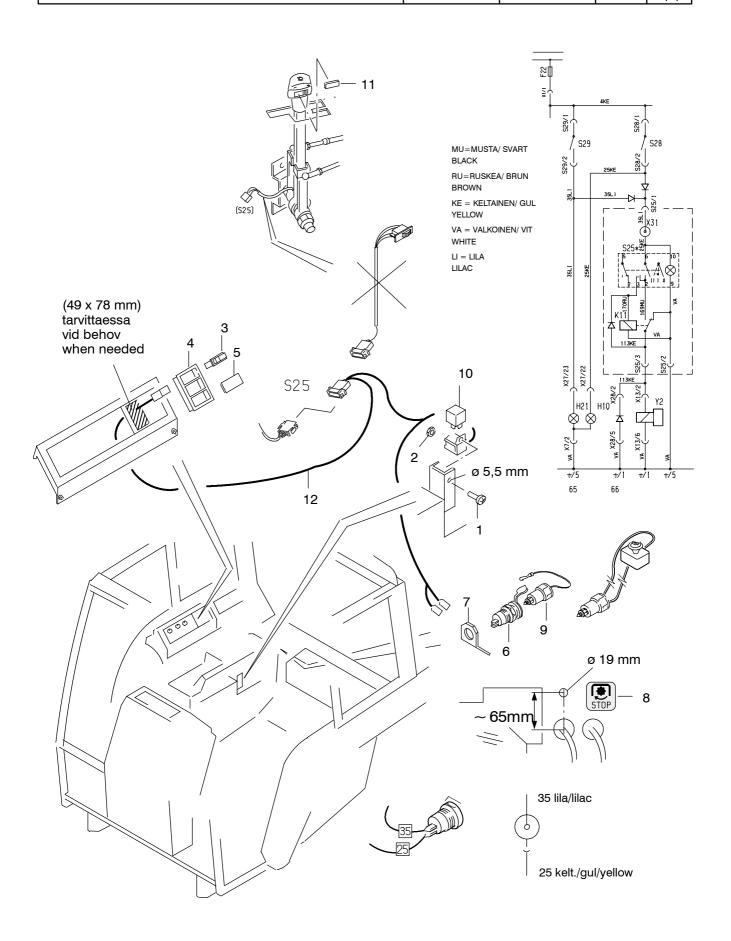

	Malli/Modell	Koodi /Kod	Sivu /Sida

Electric stop / control stop, fitting instruction	11.04.4996	Model 6000 —	Code	Page
	14.06.2001	8950Hi	39.11	1(6)

Electric stop + control stop (A+B) .	33036300
A) Electric stop of engine	32914200
B) Control stop	33005600
	33005610

D Note! Tractors with starter switch **816450** (not current supply to the other devices during starting): the electric stop requires a new starter switch (**32553200**, as standard from March –94), **SHOULD BE ORDERED SEPARATELY**

The starter switches can be recognized in switch connectors.

- D Note! 3- and 4-cyl. motors with in-line injection pump: some models with air conditioner must have an extra belt pulley (32889100) for air conditioning compressor belt. SHOULD BE ORDERED SEPARATELY. (see picture A5)
- The fuel injection pump is moved into the starting position when the starter switch is switched to position 1. The engine stops when the starter switch is turned to position 0.

A) FITTING (pages 1-3):

- Remove the engine hood side plates. Disconnect the battery earth cable.
- Remove the earlier stop control cable and fit the cover plate, picture A1.

Change the cable lead – in rubber on the cab front wall into the plug **14** (picture **A2**).

Up to ser. no **662342**: The lead—in rubber is not necessary to change (an extra wire is drawn through the rubber hole).

Tractors with starter switch 816450:
 Remove an earlier starter switch. Connect the cab wiring loom to the new starter switch (32553200) according to picture A3.

Tractors up to ser. no. **662342** (not AC II): Make a wire (cross section 2,5 mm², length 4 m, fit suitable connectors to the wire ends). Connect the one end of the wire to the starter switch pole 2 and pass the other end through the lead—in rubber hole into the engine compartment (see picture **A4**)

- Tractors with starter switch 32553200 (current supply also during glowing and starting):
 It is unnecessary to change the starter switch.
- Tractors equipped with air conditioner (3 and 4 – cyl.):

Fasten the extra belt pulley together with parts **95–105**, see picture **A5**.

Electric stop / control stop, fitting instruction	11.01.1996	Model 6000 —	Code	Page
	14.06.2001	8950Hi	39.11	2(6)

- Remove the control rod protective cap and the seal in the front part of the injection pump.
 Apply locking fluid (Loctite 242) onto the screw 4 and fit the screw and an o-ring onto the end of the control rod.
 - Apply locking fluid also onto the solenoid **5** threads and screw in the solenoid.
- Connect the wiring loom 1 wire no 171 (black) to the solenoid connector "-".
 - Bind the wire loom onto the solenoid using a plastic slip.
 - Fasten the wire loom earth shoe (white wire) under the injection pump fixing bolt.
- Find the wiring loom to the engine temperature sensor (beside the thermostat). In the wiring loom protective tube there is wire no 171 (black), connect it to wiring loom 1 corresponding wire.
 Up to ser. no. 662342: connect the earlier made wire end to the wire no 171 (Black) in the wiring loom 1.
- Connect the battery. Check the function.

	1	32914200	Sähköpysäytin	Elstopp	Elecric stop	Elektrische stop
1	1	32914300	.Johdinsarja	Ledningssats	Wiring set	Verkabelung
2	3	SA1900	.Johdinside	Buntband	Wiring band	Leitungsklemme
3	1	KH4934	.O-rengas	O-ring	O-ring	O-ring
4	1	32914500	.Ruuvi	Skruv	Screw	Schraube
5	1	32914400	.Solenoidi	Solenoid	Solenoid	Magnetspule
6	1	JD0408	.Aluslaatta	Bricka	Washer	Scheibe
7	1	HA9229	.Ruuvi	Skruv	Screw	Schraube
9	1	32604400	.Kupu	Корр	Cup	Kuppel
10	1	HD9024	.Ruuvi	Skruv	Screw	Schraube
11	1	32667000	.Pohja	Botten	Bottom	Boden
12	1	625515	.Aluslaatta	Bricka	Washer	Scheibe
13	1	JB8903	.Mutteri	Mutter	Nut	Mutter
(14)	1	597660	.Tulppa	Plugg	Plug	Stopfen

TRACTORS WITH IGNITION SWITCH 816450 (see the text):

_	1	32553200	Virtalukko	Tändlås	lanition switch	Zündschloß

WITH AIR CONDITIONER:


	1	32889100	Välipyörä koott.	Mellanhjul kmpl.	Intermed, wheel assy	y Zw.rad kompl.
95	1	32889210	.Välipyörä	Mellanhjul	Intermediate wheel	Zwischenrad
	1	KG1020	.Varmistinrengas	Låsring	Circlip	Sicherungring
	1	LA1803	.Laakeri	Lager	Bearing	Lager
	1	KG3052	.Varmistinrengas	Låsring	Circlip	Sicherungring
	1	32889620	.Akseli	Axel	Shaft	Achse
100	1	32884600	.Levy	Platta	Plate	Platte
101	1	HA6344	.Ruuvi	Skruv	Screw	Schraube
102	1	JD9105	.Aluslaatta	Bricka	Washer	Scheibe
103	1	HA6325	.Ruuvi	Skruv	Screw	Schraube
104	1	JD0408	.Aluslaatta	Bricka	Washer	Scheibe
105	1	JB9927	.Mutteri	Mutter	Nut	Mutter

Electric stop / control stop, fitting instruction

Model 11,01,1996 14.06.2001

6000-8950Hi Code Page

3(6) 39.11

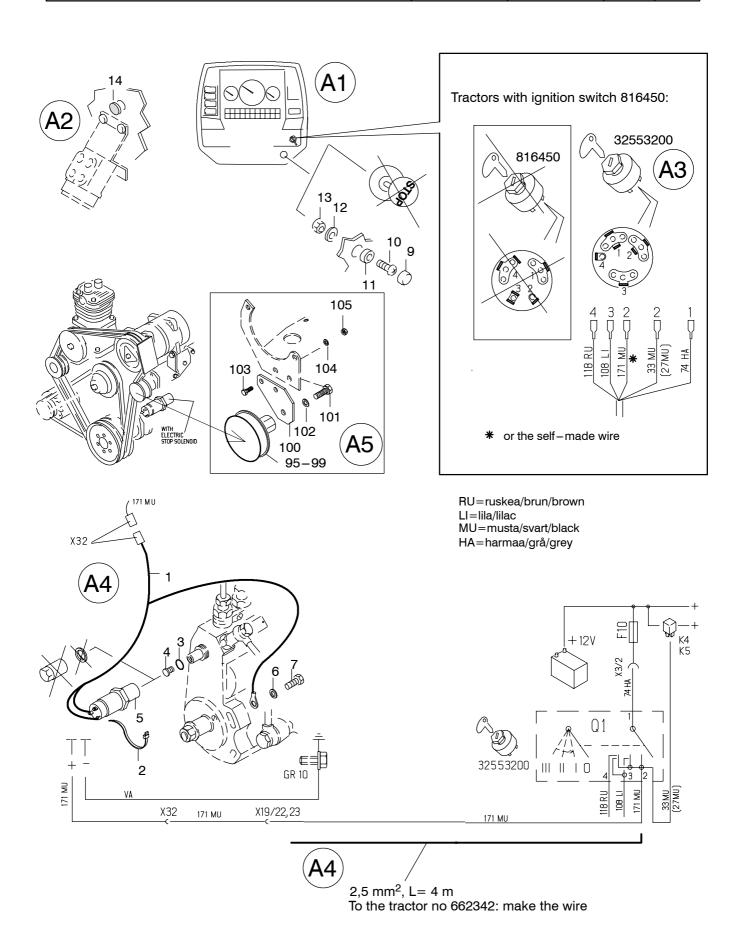

Electric stop / control stop, fitting instruction	11,01,1996	Model	Code	Page
		6000—		
	14.06.2001	8950Hi	39.11	4(6)

This instruction concerns tractors with effect from ser. no. **662343**-> (ACII).

Note! The system requires the new starter switch no. 32553200 (as standard from March –94) and the electric stop of the engine.

- When a tractor drives an implement (e.g. compressor, pump etc.) without driver's control, the control stop stops the engine when:
 - engine oil pressure lowers
 - gearbox oil pressure lowers
 - gearbox oil temperature rises
 - engine coolant temperature rises

(warning light comes on normally). If the control stop is not needed, it can be switched off with a "Control Stop" switch (S36) in the instrument panel).

NOTE! The engine starts only when the Control Stop is switched off with the switch.

B) FITTING (pages 4-6):

- Disconnect the battery earth wire. Open the lever console side panel.
- Find connector X29 in the rear part of the lever console
 - Connect to this connector the corresponding connector in wire loom **4**.
- -Only HiTech-models with reverse drive controls: Fitting as above mentioned, furthermore connect the branched connector (X29, wire no 6 red) and connector wire no 15 (brown) to the stop-warning light (see picture B1).
- Fit the relay holder 7 onto the lever console relay bracket (to the left side and down). Fasten the holder with the same securing screw as the opposite relay has been fastened. Fit the relay
- Pass the wire loom together with other wires under the floor mat towards the instrument panel.Refit the lever console side panel.
- -Tractors with old model instrumentation to no L17306 (-L18104 HiTech): Fit the cable which goes to the switch (S36) together with the cable to the ignition switch with cable ties.
- Pass the wire loom 4 to run up along the cab front wall into the steering wheel console. Fasten the wire loom with tape onto the other wires.

Electric stop / control stop, fitting instruction	11.01.1996	Model 6000 —	Code	Page
	14.06.2001	8950Hi	39.11	5(6)

- Tractors with new instrumentation to no L17307 (L18105-HiTech): Remove the front panel of the wheel box. Thead the cable for switch (S36) to run up along the cab wall of wheel box right side into switch panel (see picture B2).
- Detach the starter switch and the dash board cover. Disconnect wire no 171 (black) from the starter switch pin 2, and connect it to the corresponding connector in the wire loom 4. Connect the wire loom 4 wire no 217 (green) to the starter switch pin 2 (see picture B3).
- Tractors with old model instrumentation to no L17306 (-18104 HiTech): Remove the lower switch plastic cover on the RH side of the dash board.
- Tractors with new model instrumentation to no L17307 (L18105-HiTech): Remove the uppermost switch plastic cover on the right side of the cab side beam.
- Fit the switch 1 and connect the wire loom 4 wires to the switch (see picture).
 Connect the white earth wire of the wire loom with a connector to the white earth wire which can be found in the wire loom. The wire is in connector S6 (see picture B4).
- -Tractors to no F50121: Disconnect from the hazard warning flasher switch (S7) wire no 87 (lilac) which has been connected to switch pin no 5 and connect it to the connector side end of wire 2 equipped with a diode.
 Connect the wire no 2 other end to the switch pin no 5 (see picture B5).
- Refit all detached parts. Check the function by earthing the oil pressure sensor connector to the engine block (switch S36 in ON position). The connector is placed on the RH side of the engine.


	1	33005600	Valvonta pysäytysl.	Kontrollstopp	Control stop	Kontrollestop	-L17306(-L18104 HiTech)
	1	33005610	Valvonta pysäytysl.	Kontrollstopp	Control stop	Kontrollestop	L17307 – (L18105 – HiTech)
1	1	31877500	Keinukytkin	Vippströmbrytare	Switch	Kippschalter	2-act.
	1	31712100	Linssi	Lins	Lens	Linse	-L17306(-L18104 HiTech)
	1	34397400	Linssi	Lins	Lens	Linse	L17307 - (L18105 - HiTech)
2	1	33005900	Diodi	Diod	Diode	Diode	-F50121
3	1	SA1527	Liitinkotelo	Skarvhus	Connector	Steckdose	
4	1	33005700	Johdinsarja	Ledningssats	Wiring set	Verkabelung	-L17306(-L18104 HiTech)
4A	1	34610300	Johdinsarja	Ledningssats	Wiring set	Verkabelung	L17307 - (L18105 - HiTech)
5	1	SA1530	Liitinkotelo	Skarvhus	Connector	Steckdose	8 pole
6	1	SA1527	Liitinkotelo	Skarvhus	Connector	Steckdose	1 pole
7	1	SA1793	Releenkanta	Reläfäste	Relaymounting	Relaissockel	
8	1	SA1550	Liitinkotelo	Skarvhus	Connector	Steckdose	2 pole
9	1	32906800	Rele	Relä	Relay	Relais	
10	1	SA1520	Liitin	Anslutning	Connection	Anschluß	
11	1	HD8005	Ruuvi	Skruv	Screw	Schraube	
12	1	JD0405	Aluslevy	Bricka	Washer	Scheibe	
13	1	JB8902	Mutteri	Mutter	Nut	Mutter	
					_		

Electric stop / control stop, fitting instruction

11.01.4996 14.06.2001 Model 6000-8950Hi

Code Page

39.11 6(6)

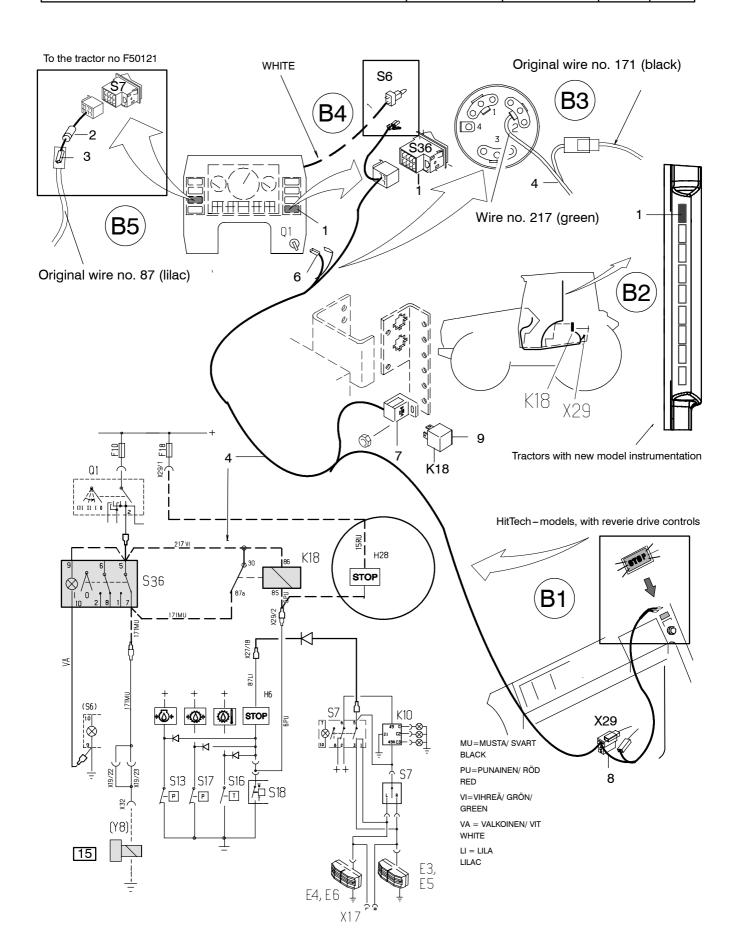

DPS-CONTROL UNIT +SIGNAL LIGHTS, FITTING		Model	Code	Page
DI 0-00NITIOE ONIT TOTAL ELATITO, TITTING		6600,8100		
	20.06.1994	8400	39	1(3)

- Delta Power Shift-control unit .. 32949000 (the unit is a standard equipment on DPS tractors from ser. no 662343-> (AC II).
- Delta Powershift control unit facilitates the use of the extra buttons to control the DPS.
 (control of the DPS solenoid valves happens via the control unit and not direct.

The mounting kit incl. also the DPS signal light panel+buzzer (gives a sound if the engine is stopped without applying the hand brake).

FITTING:

- Disconnect the battery earth lead.
 Bend the floor mat at the control levers and remove the linings in the lower part of the levers.
 Disconnect the connectors of wires into the speed gear lever and remove the earlier wire+rocker switch from the lever knob.
 Remove the speed gear lever knob.
- Place the lens 20 onto the knob 19. Fit the wire loom 15 push buttons 17 into the frame 18. (order: the red wire rearmost, the connectors one on the other) and fit them into the knob 19. Pass the wire loom through the lever. Fit the knob, be careful not to damage the wires.

Connect the wire loom lower end connectors to the connector "S23" half **16** (is delivered with wiring loom **8**, order: see figure).

- Fasten the control unit 13 under the bolts of the gear lever bracket.
- Connect the control unit connector "A10" to the corresponding connector in the wiring loom 8.
 Connect the connector X30 to the corresponding connector in the wiring loom 8 (wire no 4, yellow).
 Connect connector "X23" to the corresponding connector in the wiring loom 8.
 Connect the push button connector "S23" to the corresponding connector in the wiring loom 8.
 (Possible extra push buttons are connected to the connector "S23: ").
- Detach the dashboard upper panel. Cut off the neck between two holes for extra switches in the RH side upper corner of the panel.
 Remove the protective cover behind the fuse box.
- Pass the wire loom 8 connectors A9, X21, and wire no 167 along the floor cable flute into the steering wheel console. Fix the wire loom with tape in suitable points.

Model	Code	Page
→ 6600,8100		
4 8400	39	2(3)
		6600,8100

- Fasten the circuit card 4 with its parts (1-7) into place.
 - Connect the wiring loom **8** connector "A9" to the circuit card

Fasten the cover

- Find the fuse box connector X4. Connect the wire loom 8 supply wire no167 (red) to the connector pin no 5. Fasten the wire with tape onto the wiring loom.
- Connect connector "X21" to the corresponding connector beside the fuse box.
- Connect the battery and check the function of the buttons, signal lights and the buzzer.
 (When the current is switched on, the DPS control unit engages the lowest ratio and one signal lights is on. When the rear button is pressed, the ratio changes up and 2. and 3. signal lights come on etc.).


The buzzer gives a sound (sounds about 2-2.5 min also after the ignition switch off), when the engine is stopped but the hand brake is not applied.


	1	32949000	DPS ohjain ja valot	DPS kontrollenhet och ind.ljus	DPS controller and ind.lights	DPS Steuerung und Lichte
1	1	32845200	.Tarra	Dekal	Sticker Plate Sleeve Circuit card, small Washer Support Nut	Aufkleber
2	1	32845100	.Levy	Platta		Platte
3	2	32848800	.Holkki	Hylsa		Hülse
4	1	32845300	.Piirilevy, pieni	Kretskort, litet		Kreiskarte, klein
5	2	JD0404	.Aluslaatta	Bricka		Scheibe
6	1	32848300	.Tuki	Stöd		Stütze
7	2	JB1104	.Mutteri	Mutter		Mutter
8	1	32861300	.Johdin	Ledning	Wire	Leitung
(16)	2	SA1786	Liitinkotelo	Skarvhus	Connector	Steckdose
13	1	32861200	.Ohjain	Styrning	Guide	Führung
15	1	32862600	.Johdin	Ledning	Wire	Leitung
17	2	32908300	.Painokytkin	Tryckknapp	Push button	Druckschalter
18	1	32908200	.Kehys	Ram	Frame	Rahmen
19	1	32471310	.Nuppi	Knopp	Knob	Knopf
20	1	32522400	.Linssi	Lins	Lens	Linse
21	2	HE6984	.Ruuvi	Skruv	Screw	Schraube
22	2	JB1105	.Mutteri	Mutter	Nut	Mutter

Model 6600,8100 20.06.1994 8400 39

Page

 3(3)

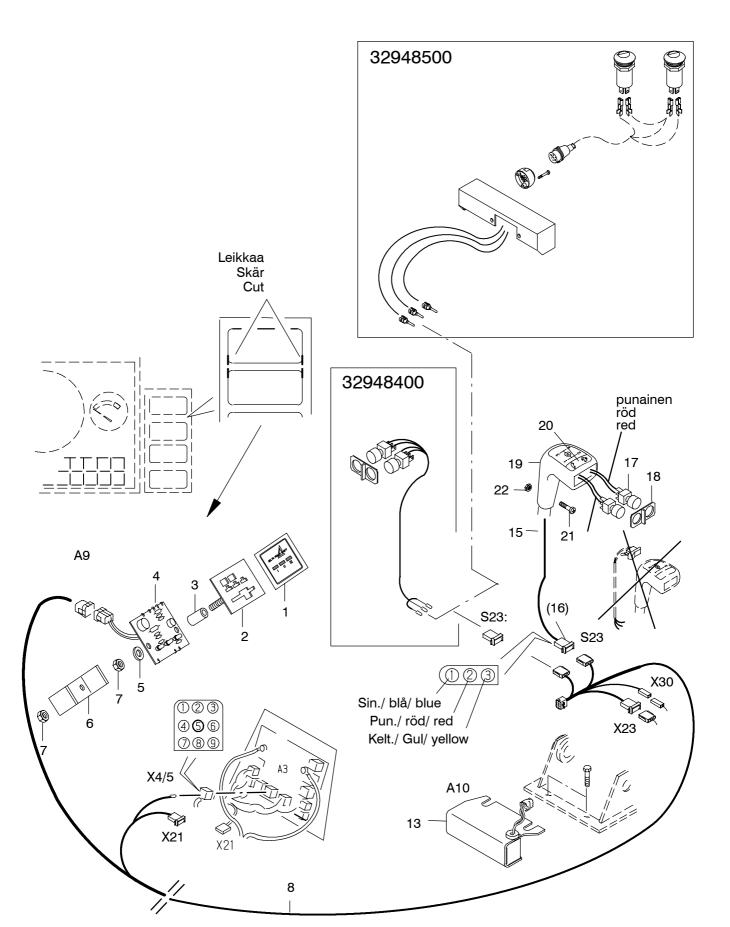



DPS- EXTRA BUTTONS, FITTING		Model	Code	Page
	20.06.1994	6000-8400	39	1(3)

- Delta Powershift—extra buttons ... 32948400 (Suit only on tractors which have bush buttons for DPS control).
- These extra buttons can be fitted e.g. in the reverse shuttle lever. This improves tractor control specially when doing loading work.
- With these control buttons the DPS ratio can be changed on the implement.
- FITTING (extra buttons, 32948400, e.g. into the reverse shuttle lever):
- Remove the reverse shuttle lever knob. Bend the floor mar aside at the levers and detach the linings in the lever lower part.
- Fit the wiring loom 15 push buttons 17 onto the frame 18 (order: the red wire is rearmost, the connectors one on the other) and fit them into the knob 19. Pass the wiring loom through the reverse shuttle lever. Fasten the knob, be careful not to damage the wires).
- Find the connector "X23" in the lower part of the levers and pull off the connector one half.
 Connect the wiring loom 15 lower end connectors to the connector half (order: see picture) and connect the connector.
- FITTING (extra buttons on implement), 32948500):
- If the socket bracket in the rear of the tractor has only one part, it should be changed to bracket 23.
 The trailer socket is moved to the middle part of a new bracket (do not disconnect the wires).
- Make three wires (1,5 mm², lengths 2 m), colour of which should be blue, red and yellow).

Connect connectors 27 to one end of the wires and connect them to the cab wiring loom connector "X23" in the lower part of the levers (or to extra wiring loom connector "S23: ", if this fitting is done at the same time with the control unit), connections, see picture.

DPS- EXTRA BUTTONS, FITTING		Model	Code	Page
	20.06.1994	6000-8400	39	2(3)

 Draw the wires along the cab RH side corner (together with the other wires) to the rear part of the lever console and inside the rear horizontal beam to the socket bracket 23. Fasten the wires with tape.

Connect the wires to socket **24** according to the figure. Fasten the socket.

- Make a wire between the socket and push buttons on the implement.
 - For this you need a rubber cable, cross section 3 $\times 1,5$ mm², measure a suitable length.
- To the push button ends of the wires is fitted connectors 28, and a contact plug 26 to the other end.


Check that the positions of the wires in the plug 26 correspond the positions of the wires in the socket 24.


- pin 4, to buttonb ,change down (blue)
- pin 6, supply to both buttons. (green or brown)
- pin 7 to button y, change up (black)

Fit the push buttons **29** on the implement (Note! The lower parts of the buttons must be protected from water, e.g. in a suitable box), and connect the wires.

	1	32948400	Lisäkytkimet, DPS	Extra strömbr.,DPS	Extra switches, DPS	Zusätzliche Schalter, DPS
15	1	32862600	.Johdin	Ledning	Wire	Leitung
17 18	2	32908300 32908200	.Painokytkin .Kehys	Tryckknapp Ram	Push button Frame	Druckschalter Rahmen
23 24	1 1 1	32948500 32236700 31720300	Lisäkytkytk., DPS työkone .Kannatin .Pistorasia	Extra strömbr.,DPS redskap Hållare Stickdosa	Extra switches, DPS implement Support Plug socket	Zusätzliche Schalter, DPS Anbaugerät Halter Steckdose
	1	32236700	työkone .Kannatin	redskap Hållare	implement Support	Anbaugerät Halter

DPS- EXTRA BUTTONS, FITTING		Model	Code	Page
	20.06.1994	6000-8400	39	3(3)

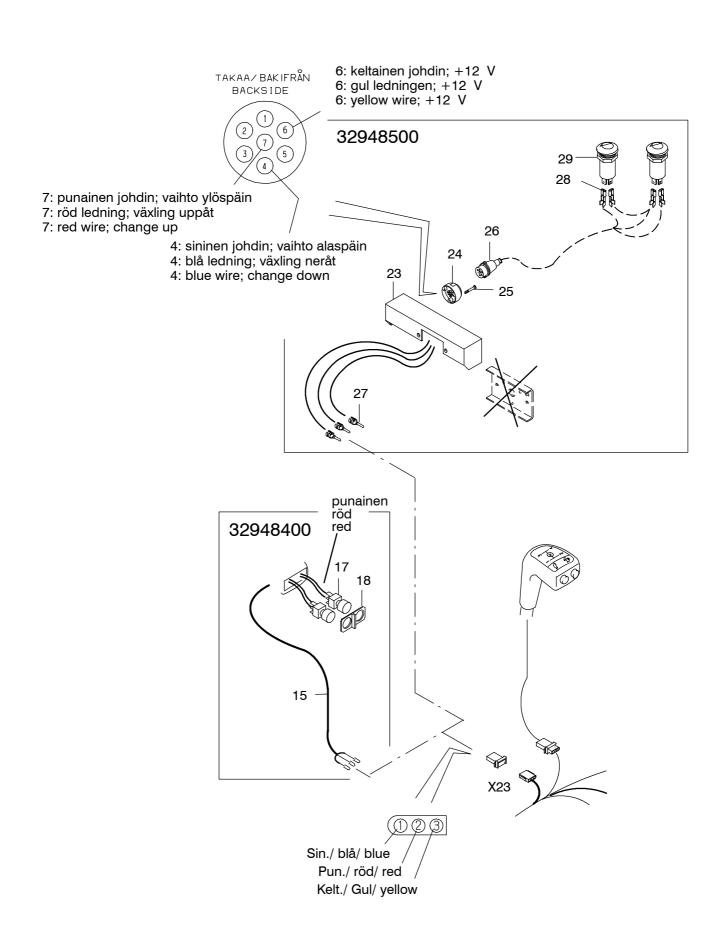

 

REAR FOG LIGHT, FITTING INSTRUCTION HINTERNEBELLICHT, MONTAGEANLEITUNG

16.09.1994

Model/Modell

Code

39

Page /Seite 1 (2)

1994 | 6000-8400

Rear fog light 32914100

 Mounting kit includes a switch, signal light, fog light and a wire loom with necessary fitting parts.
 This instruction concerns tractors with effect from ser. no 662343 – (AC II).

FITTING:

- Disconnect the battery earth lead.
- Fit relay K3 into the fuse box. Fasten switch 1 onto the instrument panel. Connect the wire loom connector+fog light wires to the switch 1 (S26)
- Connect the wire loom 2 wire equipped with a cable shoe under the earth screw in the front wall
- Disconnect wire no 78 (blue) from fuse box connector X2 pin 3. Use a suitable tool of tube type.
 Connect the wire to the connector X1 pin 2.
- Connect the wire loom 2 wire no 78 (blue) to the connector X2 pin 3 and the other end of the wire to the connector X3 pin no 4.
- Disconnect wire no 64 (yellow) from connector X4 pin 6 and connect the wire to the wire loom 2 connector X33 pin 1 (female).
- Connect the wire loom 2 wire nr 64 (yellow) from connector X33 to the connector X4 pin 6..
- Disconnect wires (2 pcs) nos 26 (black) from connector X5 pin 6 and connect them to connector X33 pin 3 (female).
- Connect wire loom 2 wire no 26 (black) to the connector X5 pin 6 and wire no 176 (red) to the connector X1 pin 9.
- Fasten the fog light onto the new bracket 6.
 Detach the implement socket and remove the earlier bracket.
- Connect the fog light wires to the socket so that a black—white wire comes to the socket pin 31 (earth) together with an existing white wire.
 The blue—yellow wire is connected to the socket pin 54g (earlier permanent current) together with an existing blue wire no 78.
- Fasten the implement socket onto the bracket 6 and the bracket onto the tractor.
- Connect the battery earth lead and check the function of the system. The rear fog light lights simultaneously with the dipped beams.

Hinternebellicht 32914100

Dieser Satz enthalten Wippenchalter, Zeichenlicht, Lampe und Verkabelung mit Montageartikeln. Diesen Instruktion ist passend für Traktor ab Nummer 662343- (ACII).

MONTAGE:

- Klemmen Sie das Minuskabel der Batterie ab.
- Montieren Sie das Relais K3 in die Elektrozentrale. Befestigen Sie den Wippenschalter 1 am Armaturenbrett. Verbinden Sie den Stecker des Kabelbaums + Nebellichtverkabelung mit dem Wippenschalter 1 (S26).
- Befestigen Sie den Kabel des Kabelbaums 2, der mit Kabelschuh ausgerüstet ist, unter dem Masseanschluss an der Frontwand.
- Machen Sie den Kabel Nummer 78 (blau) los von dem Stecker X2 der Eletrozentrale, Anschluß Nr. 3. Wenden Sie ein passendes Rohrwerkzeug an. Versetzen Sie den Kabel zum Stecker X1, Anschluß Nr. 2.
- Verbinden Sie der Kabel Nr. 78 (blau) des Kabelbaums 2 mit der Steckdose X2, Anschluß Nr 3, und verbinden Sie das andere Ende der Leitung mit der Stecker X3, Anschluß Nr 4.
- Lösen Sie den Kabel Nr. 64 (gelb) von dem Stecker X4, Anschluß Nr. 6 und versetzen Sie den Kabel zum Stecker X33 des Kabelbaums 2, Anschluß (Weibchen) Nr. 1.
- Verbinden Sie den Kabel Nr. 64 (gelb) von der Steckdose X33 des Kabelbaums 2 mit dem Anschluß Nr 6 des Steckers X4.
- Machen Sie den Kabel (2St) Nr. 26 (schwarz) an dem Stecker X5 Anschluß Nr. 6 los, und verbinden Sie diese Kabel mit dem Stecker X33 (Weibchen) Anschluß Nr 3.
- Verbinden Sie den Kabel Nr. 26 (schwarz) des Kabelbaums 2 mit dem Stecker X5, Anschluß Nr. 6 und den Kabel Nr.179 (rot) mit dem Stecker X1, Anschluß Nr 9.
- Befestigen Sie das Hinternebellicht an den neuen Halter 6. Lösen Sie die Hintersteckdose und nehmen Sie den alten Halter weg.
- Verbinden Sie die Kabel des Hinternebellichts mit der Anhängersteckdose so, daß schwarz/ weißer Kabel (Erdung) in den Steckdose-Anschluß Nr. 31 kommt, zusammen mit dem da schon befindlichen weissen Kabel.
 Verbinden Sie den blau/gelben Kabel des Hinternebellichts mit dem Anschluß Nr 54g der Anhängersteckdose (früherer kontinuierlicher Strom), zusammen mit dem da schon befindlichen blauen Kabel Nr.78.
- Befestigen Sie die Anhängersteckdose an dem Halter 6, und den Halter am Traktor.
- Klemmen Sie die Batterie an und überprüfen Sie die Funktion (das Hinternebellicht leuchtet, wenn das Abblendlicht eingeschaltet ist).

REAR FOG LIGHT, FITTING INSTRUCTION HINTERNEBELLICHT, MONTAGEANLEITUNG

16.09.1994

Model/Modell

6000-8400

Code

39

Page /Seite (2)

	1	32914100	Sumuvalo
1	1	30944200	.Keinukytkin
	1	30944600	.Lampunpidin
	1	32862400	.Linssi
2	1	32914900	.Johdinsarja
(3	1	SA1530	Liitinkotelo
(4	1	SA1786	Liitinkotelo
(1	SA1787	Liitinkotelo
5	1	32906800	.Rele
6	1	32904000	.Kannatin
7	1	75017200	.Sumuvalaisin
(8	1	SH2647	Lamppu


Dimljus
Vippströmbrytare
Lampfattning
Lins
Ledningssats
Skarvhus
Skarvhus
Skarvhus
Relä
Hållare
Dimstrålkastare

Lampa

Fog light
Switch
Bulb socket
Lens
Wiring set
Connector housing
Connector housing
Connector housing
Relay
Support
Fog lamp
Bulb

Nebellicht Schaukelschalter Lampenfuß Linse Verkabelung Steckdose) Steckdose) Steckdose) Relais Halter Nebelscheinwerfer

Lampe)

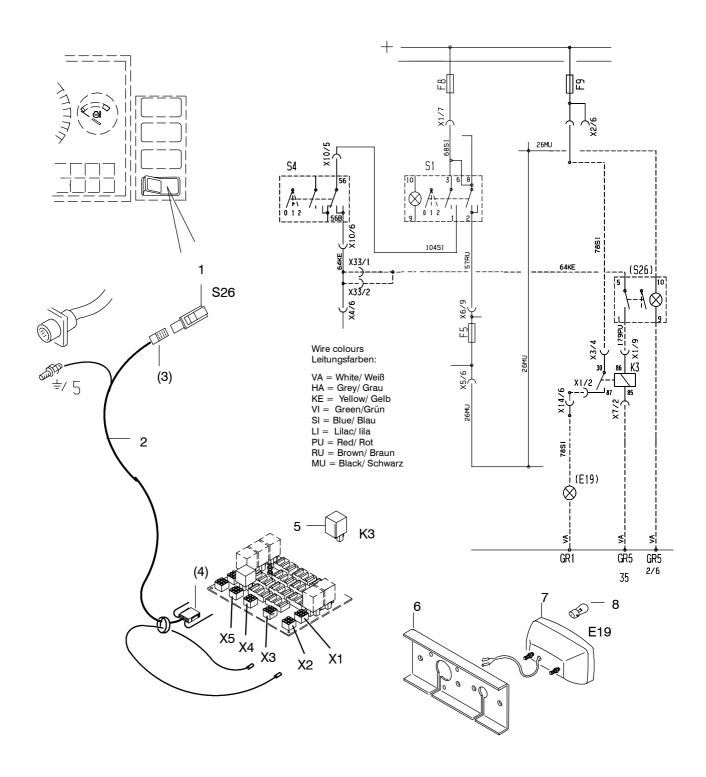


CABIN HEATER, FITTING INSTRUCTION		Model	Code	Page
	23.12.1994	6000-8400	39	1(2)

Cab heater socket 32634800

(Note! requires an engine heater). The mounting kit includes the socket, wires and a branch connector (to engine heater supply wire) with necessary fitting details.

FITTING:

- Remove the LH side engine side plate.
- Make lead—in holes according to the picture through the intermediate frame protective shield and through the cab front wall. Fit bracket 5 into position in holes on the battery shelf and fasten the branch connector 1 onto the bracket. Fasten socket 2 under the instrument panel and pass the wire to the branch connector. Disconnect the supply wire from the engine heater, and connect it to the branch connector. Connect the wire from the connector to the engine heater.
- Drill for the cab heater 8 fastening holes and fit the heater.

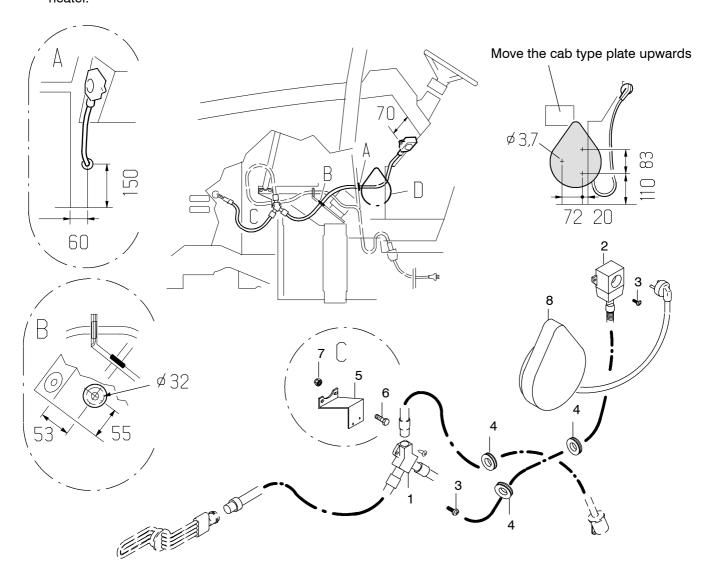

					_
CABIN HEATER, FITTING INSTRUCTION	$\geq \leq$	Model	Code	Page	
	23.12.1994	6000-8400	39	2(2)	

	1	32634800	Sisät. lämm. pistor. Asennussarja	Kontaktdosa för hytt Monteringssats	tv.Socket for cab heater, fitting set	Stecker f. Innenheizung Einbausatz
1 2 3 4 5 6 7	1 1 1 1 1 4 3 1 2 2	32635000 32635000 32634900 HN6735 30145900 32630400 HA6322 JB8904	.AsennussarjaJohdinJohdinHaarakappalePistorasia .Ruuvi .Läpivientirengas .Kannatin .Ruuvi .Mutteri	Monteringssats Ledning Ledning Grenstycke Stickdosa Skruv Genomföringsring Hållare Skruv Mutter	Fitting set Wire Wire Branching Plug socket Screw Inlet ring Support Screw Nut	Einbausatz Leitung Leitung Zweigstück Steckdose Schraube Durchführungsring Halter Schraube Mutter
8	1	32630300	Sisätilan lämmitin	Hyttvärmare	Cabin heater	Innenheizung

BACK BUZZER (AC2), fitting instruction 23 12.1994 | Model | Code | Page | 09.03.2000 | 6000-8750 | 39.16 | 1(2)

Back buzzer (not HiTech) 33039300

 The buzzer alarms always when the reverse gear is engaged (current switched on). The warning sound is discontinuous.

FITTING:

- Remove the lever console side panel in the cab.
- Fasten the buzzer 1 under the rear mudguard fixing bolt. Open the lead in cover in the bottom of the lever console so much that the buzzer wire can be pushed into the console. Connect the wire loom 2 connector (H17) to the buzzer connector (1a+1b).
- Fasten wire loom 2 cable shoe under the nut of the lead—in cover. Pass the wire loom together with other wires along the lever console lower edge to the lower part of the gear levers.
- Fasten switch 6 onto support 5 (washers 7 on both sides of the support).
 - Unscrew a screw lever bracket screw on the driver's seat side of the bracket and fasten the support under the screw.
 - Adjust the switch so that it functions when the reverse gear is engaged (if the support cannot be adjusted enough, change places of the washers between the switch and the support).
- Connect the wire 2 loom to the switch pin.

Tractors ->668102: Connect the wire **2A** to the another switch pin and pass wire no 210 (green) with other wires under the floor mat into the steering wheel console. Fasten the wire on the tractor wire loom e.g. with tape.

Disconnect the fuse box connector X4. Connect the wire loom connector to pin no 4 of the connector X4.

- Tractors 668103->: Connect the connector S27 (green wires no 210) in the cab harness to the another pin of the switch.
- Rebuild the tractor. Check the function of the buzzer.

	1	33039300	Per.summeri.	Backsummer	Back buzzer	R.fahrsummer	Avertisseur arrière
1	1	33006300	.Per.summeri	Backsummer	Back buzzer	R.fahrsummer	Avertisseur arrière
2	1	33044600	.Johdinsarja	Ledningssats	Wiring set	Verkabelung	Jeu de câbles
3	1	SA1509	.Liitinkotelo	Skarvhus	Connector	Steckdose	Raccord
4	1	SA1518	.Liitin	Anslutning	Connection	Anschluß	Raccord
5	1	33039100	.Kannatin	Hållare	Support	Halter	Support
6	1	31355810	.Rajakytkin	Gränsbrytare	Limit switch	Grenzschalter	Interrupteur limitation
7	2	JD0412	.Aluslevy	Bricka	Washer	Scheibe	Rondelle
8	1	JB0981	.Mutteri	Mutter	Nut	Mutter	Ecrou

BACK BUZZER (AC2), fitting instruction


23 12.1994 09.03.2000

Model

Model

Page

6000-8750 **39.16** 2(2)

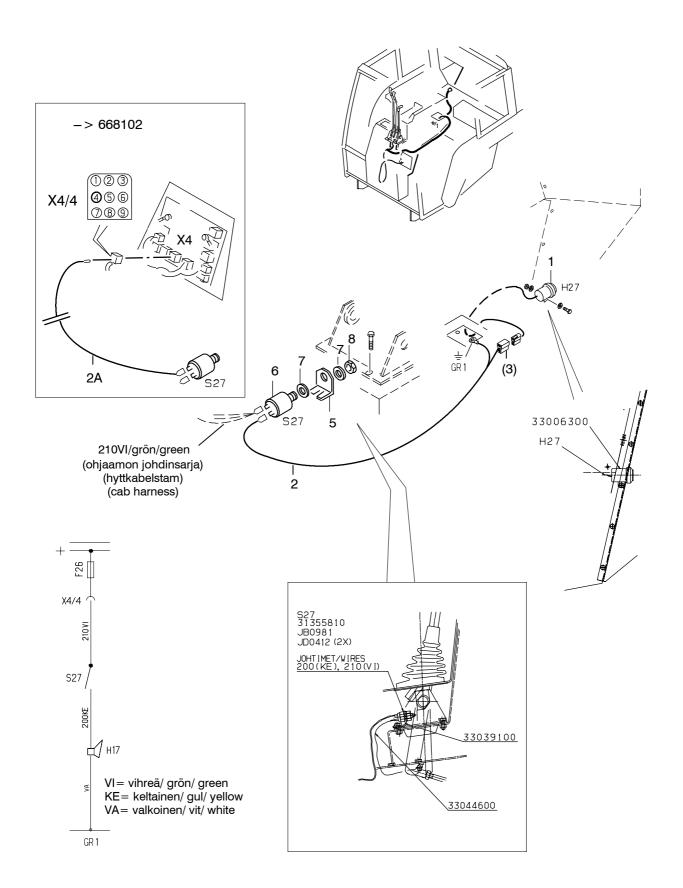

FORCED LOWERING SWITCH, FITTING INSTRUCTION

20.02.1995

Model

Code

Page

6000-8400 | 39

1(2)

Forced lowering switch 33009700

– When this switch is depressed, the working depth adjustment is overridden and an implement lowerst quickly into ground (according to the lowering speed switch position). When the switch is released, the lower links find the position determined by the position control potentiometer.

FITTING INSTRUCTION:

- Remove the lever console side panel.
 Remove the upper panels (2 pcs) and unscrew the lever console cover panel securing screws.
- Remove auxiliary valve lever knob symbol lenses and unscrew the knob securing screws. Remove the knobs and remove the lever protective rubbers. Remove the knob of the PTO control lever. Disconnect the connectors and remove the cover panel.
- Make a hole through the cover panel for switch 6, according to the picture so that the forced lowering switch and the lift/lower switch (S10E) are as near each other as possible.
 File the end edges of the switch opening a little

File the end edges of the switch opening a little thinner so that the switch is kept in position. (point A). Fit the switch.

 Connect the wire loom connector 3 to the position control potentiometer. Connect connector 2 to switch 6

Connect the wire loom wires no 5 (no 15 and earth) to the bulp of the lift/lower switch.

Fit the upper panel and the cover panels into position. Connect connectors. Connect connector 4 to the cab wire loom connector "R1E".
 Connect the lift/lower switch wires (no 15 and earth) back to the connectors of the lift/lower

switch illumination wires.

 Test the function of the switch. The forced lowering switch functions only when the lift/lower switch is in the lowering position.

FORCED LOWERING SWITCH,
FITTING INSTRUCTION




Model

Code

Page

6000-8400 39



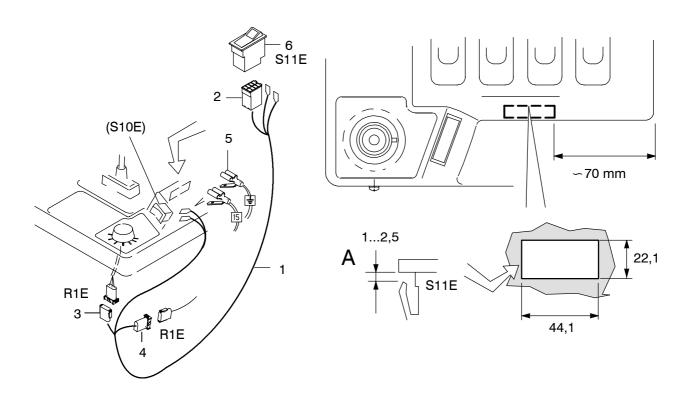

	1	33009700	Pakkolasku, nostov.	Tvångssänkning,lyftarm.	Forced lowering,liftarm	Zwangsenkung,Hebearm EH
1 (2 (3 (4 (5	1 1 1 1	33009600 SA1530 SA1786 SA1787 SA1520	.Johdinsarja Liitinkotelo Liitinkotelo Liitinkotelo Liitin	Ledningssats Skarvhus Skarvhus Skarvhus Anslutning	Wiring set Connector Connector Connector Connection	Verkabelung Steckdose) Steckdose) Steckdose) Anschluß)
6	1 1 1	33009500 33009800 30944600	.Keinukytkin .Linssi .Lampunpidin	Vippströmbrytare Lins Lampfattning	Switch Lens Bulb socket	Schaukelschalter Linse Lampenfuß

FIELDMASTER, fitting instruction

12.08.1998

Model

No

Page

6000-8750 **39.18** 1(10)

Fieldmaster

33378000

FieldMaster is a combined performance monitor which can monitor both tractor and implement functions.

FieldMaster monitors the following tractor functions:

- driving speed, km/h,
- wheel slip (radar is required))
- PTO shaft rotating speed, rpm
- distance travelled, km
- area, ha
- time functions (clock, elapsed time, remaining time aso).

FieldMaster can monitor the following implement functions:

- sprayers (I/hour, I/ha, litres, alarm functions, automatic proportioning aso)
- fertilizers (kg, kg/ha, kg/hour, rpm, alarm functions aso)
- drills (kg/ha, seed amount in kilos, driving paths aso)
- balers (pcs, kg, rpm, alarm functions aso)
- slurry spreaders (ton/ha, tons, rpm aso)
- other implements (e.g. cultivated area)

Options:

- radar (slip, ground speed etc.)
- writer (output of work etc.). The writer is connected with a cable to the display unit.
- readiness for the global location system with an aid of a satellite (GPS)

The follow-up of different functions on an implement requires, that the implement has sensors which have been connected to the FM via a socket in the rear of the tractor.

On an implement there can be e.g. rpm sensors, position sensors, wheel sensors, flow meters, weight cells, manometers, actuators/position potentiometers, level sensors etc.

FITTING (sensor):

- Disconnect the battery earth cable.

FIELDMASTER, fitting instruction	> <	Model	No	Page
-	12.08.1998	6000-8750	39.18	2(10)

 Tractors without Agrodata – equipment (both sensors are lacking) or ACD – power lift (PTO sensor is lacking):

Fasten the gearbox and/or PTO speed sensors.

Gearbox speed sensor **B6** is placed at the front end of the propeller shaft (gearbox):

(If the gearbox sensor is wanted to fit to its original place on the housing of the 4WD clutch, the tractot must be split between gearbox—fuel tanl).

Remove the propeller shaft. Unscrew the foremost shaft nut (let the rearmost nut be in place), and fasten the bracket under the drive flange of the 4WD.

- PTO sensor B7: Remove the plug and clean the sensor threads on the tractor. Find with a dial gauge through the sensor hole a shortest distance between the sensor and the impulse disc.
- B6, B7: Apply Loctite 572 on the threads of a new sensor and screw it in by hand, until it touches the gearwheel/impulse disc and open it then 1/4 of a turn (B7: do not use force, since the impulse disc is springy).
- B6, B7: Lock the sensor with the locking nut and connect wire loom 7 to the sensor
 Connect connectors to the sensor and protect pins with grease UC1913 (vaseline spray HHS 2000, Würth).
- B6, B7: Bend the wire on the sensor and fasten it to the sensor with a binder (prevents disconnecting of the wires in draft). Fasten the wire also with the securing plate under the nut.
- Connect the sensor wire loom (ready—made on tractors with AD—insatrument).
 Tractors with ACD power lift: the wire loom is connected only to the PTO sensor.

FIELDMASTER, fitting instruction	>	Model	No	Page
_	12.08.1998	6000-8750	39.18	3(10)

FITTING (other parts):

panel, and fit the panel.

- Remove the lever console side panel. Detach in the upper part the AC power lift control panels (2 pcs).
 - Slacken the whole lever console fixing screws.
- Make threaded holes M5 (2 pcs, drill Ø 4,2) on the rear face of the side pillar, and see picture A.
- Open the side pillar linings in the front part of the pillar and pass the display unit wire under the linings into the lever console. Fasten the diplay unit.
- Pass the wire loom 8 adapter 1 wires to the lower part of the smaller control panel.
 Connect the connectors to the adapter, see picture B.
 Fasten the adapter to the rear side of the control
- Place the wire loom 8 into the lever console.
 Connect to the wire loom to the diplay unit connector ("A16")
- Connect the wire loom supply wire X55 to the corresponding wire in the lever console (nr 17, black).
- Pass wires to the rear socket 7 along the cab rear beam and push them out of the beam to the rear of the tractor.
 - Fit a new socket bracket 6 in place of the earlier one.
 - Connect the wires to the socket, see picture C. Fasten the rear socket..
- Tractors with Agrodata instrument: Open the connector "X34" in the lever console and connect the wire loom 8 correnspondent connectors "X34" and "X34*" between the detached connectors. Wire loom connectors "X39" and "X1E" are not used.

FIELDMASTER, fitting instruction	><	Model	No	Page	
	12.08.1998	6000-8750	39.18	4(10)	

 Tractors without earlier sensors (B7 ja B6):
 Slacken the lead—in hole cover in the bottom of the lever console and pass the sensor connectors into the cab.


Connect the sensor wire loom **9** connector "X1E" with the corr. connector of the wire loom. Wire loom connectors "X34" and "X39" are not connected.


Tractors with ACD power lift (without PTO sensor B7):

Connect the wire loom **9** connector "X34 * " with the connector "X34" in the lever console. Other connectors are not connected.

- Fasten the earth wire with the cable shoe under eart point GR4 in the bottom of the lever console (tyre side point).
- If the tractor has a radar, the radar wires are connected to the free half of connector X48, see picture D:
 - wire 1 (white) to pin 1
 - wire 305 (lilac) to pin 2
 - wire 15 (brown) to pin 3
 - In addition, wire loom 8 wire no. 305 (lilac) must be connected to the pin 5 of connector "X1E"
- Connect connector "X7C" to the corr. connector in the lever console.
- Wire loom 8 connectors X1L and X45 are not connected.

Connector X47 is intended to use for the optional GPS system (LH-AGRO).

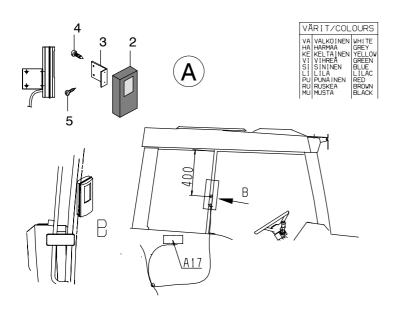

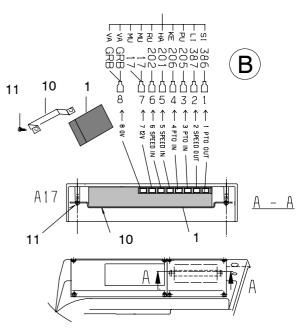


Model


No


Page

12.08.1998 6000-8750

39.18 5(10)

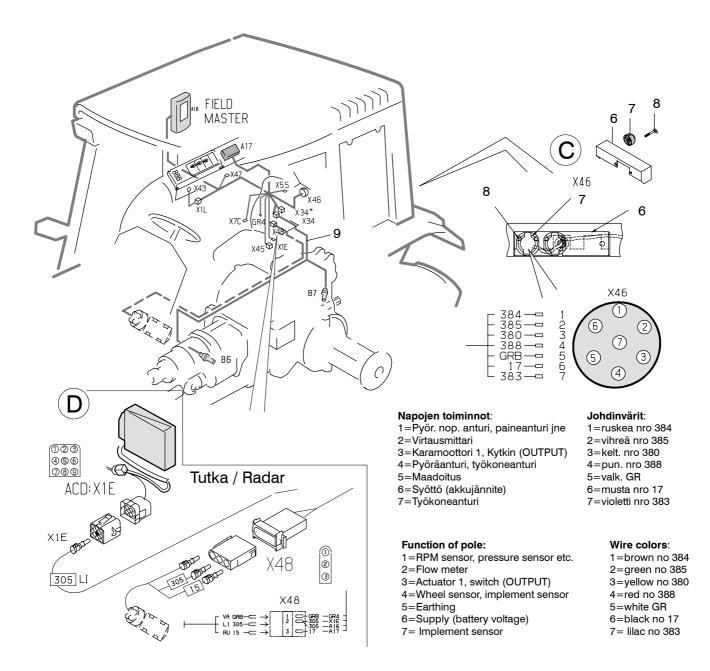

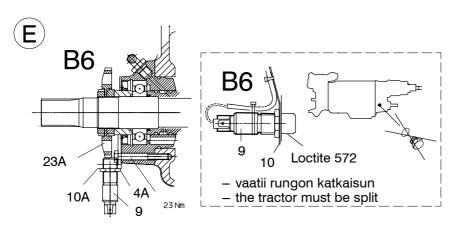

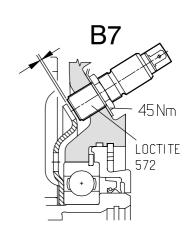


Model

No

Page

6000-8750 **39.18** 6(10)



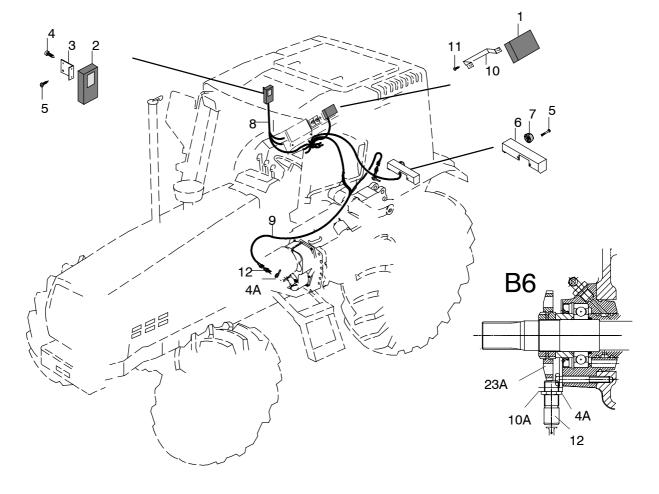

	1	33378000	Fieldmaster	Fieldmaster	Fieldmaster	Fieldmaster	Assy
1	1	33359600	.Adapteri	Adapter	Adapter	Adapter	
2	1	33378100	.Näyttölaite	Teckenförster	Display unit	Bildschirm	
3	1	33378200	.Teline	Konsol	Bracket	Gestell	
4	2	HD9025	.Ruuvi	Skruv	Screw	Schraube	
5	5	HD9042	.Ruuvi	Skruv	Screw	Schraube	
6	1	32236700	.Kannatin	Hållare	Support	Halter	
7	1	31720300	.Pistorasia	Stickdosa	Plug socket	Steckdose	
8	1	33369500	.Johdinsarja	Ledningssats	Wiring set	Verkabelung	
9	1	33012100	.Johdinsarja	Ledningssats	Wiring set	Verkabelung	
10	1	33483900	.Kiinnityslevy	Fästplåt	Mounting plate	Befestigungsplatte	
11	2	HN6612	.Ruuvi	Skruv	Screw	Schraube	
12	2	31702400	. Anturi	Givare	Sensor	Sensor	
4A	1	32844920	Levy	Platta	Plate	Platte	
23A	1	32844810	Hammaspyörä	Kugghjul	Gear	Zahnrad	
10A	2	32619100	Kiinnitin	Fästdon	Fastener	Halter	

FIELDMASTER, fitting instruction

12.08.1998

Model

No

6000-8750 **39.18** 7(10)

Page

(radar is an optional equipment)

Note! If the tractor wheels or FieldMaster display unit are changed, the calibration must be done.

A. Calibrating gearbox speed sensor and radar

1. Switch on current to the tractor and wait until the main menu appears in the display. In the main menu there are shown different symbols for tractor, implement, area and time functions.

IMPORTANT! If the language in the display is e.g danish or other difficult language, it can be changed by going either with arrow buttons or with NÆSTE SIDE button to another page, on which there can be found selection SYSTEM. By pressing button VÆLG can be moved to page, on which there is TEST INPUT, TEST OUTPUT, SPROG etc. By moving the highlighted are onto the text SPROG (=language) and by pushing VÆLG button can be moved to the language menu, in which can be selected english by moving the highlighted area onto the ENG-LISH and by pushing VÆLG button. Now the language has been changed and it is in power until it is rechanged.

- 2. Press the yellow arrow button until you see a menu in which there are alternative implements such as SPRAYER, FERTILIZER DISTRIBUTOR, DRILL, BALER, SLURRY SPREADER and OTHER IMPLEMENTS. If there is SYSTEM in the menu, the unit shows page 2 and the implements are situating in page 1, change page with NEXT PAGE—command.
- 3. Choice one implement (e.g. sprayer) with SELECT-command. The unit shows one sprayer type, which must be accepted with ACCEPT-command. After this the sprayer symbol appears in the display. In addition, in the display there are the following commands: OPERATION, ENCODE and DATA/
- 4. Choice ENCODE and a new menu appears, in which you can move from one row to another by using the arrow buttons. The small arrows in the upper or lower edge of the display indicate that more menus can be found in the next page, to which you can get either with NEXT PAGE-command or by scanning with the arrow buttons.
- 5. When you find selection SPEED SENSOR, press it and immediately after that press CALIB/CALC alternative.
- 6. A new menu appears in the display, in which there is a heading WHEEL TRACTOR and as a subheading text NO OF PULSES and DRIVE 100 M (i.e, number of pulses and an instruction to drive with the tractor 100 meters) and a subselection CALIB./CALC.

- 7. Drive the tractor to a place, where is ready—made markings of startpoint and endpoint of a distance of 100 meters. Drive the tractor onto the startpoint and press the CALIB—button, at which time the counter of the gearbox speed sensor is zeroed.
- 8. Drive straight ahead 100 meters on the marked course. During driving the display starts to show flashing text CALC. WHEEL, which indicates that the FieldMaster has received enough impulses on the distance of 100 meters.
- Stop driving at the endpoint marking and press
 CALC.WHEEL-button, at which time the impulse counter is stopped and a new number of the impulses (calibrating value) is input.

Note! If the tractor is equipped with a radar, it is calibrated in the same way as the speed sensor. The calibration of the radar is started from ENCODE-selection under which there is command RADAR. After this the calibrating procedure is the same as for the gearbox speed sensor.

FIELDMASTER, fitting instruction	> <	Model	No	Page
_	12.08.1998	6000-8750	39.18	8(10)

B. Changing display language


Note! In this instruction is supposed, that the valid language is english.

- 1. When the display shows the main menu, press NEXT PAGE button, until you find selection SYSTEM.
- 2. Press the SELECT-button, and you will see a page, which has selections TEST INPUT, TEST OUTPUT, LANGUAGE etc..
- 3. Move the highlighted area onto the LANGUAGE and press SELECT-button, after which the display shows the language menu. Move the highlighted area onto the desired language and press the SELECT-button.
- 4. A new display language is valid.

C. Others

Before the FieldMaster is able to show for example flow amount or area, the flow meter must be calibrated and working width of an implement must be input. In the same way must be calibrated extreme positions of possible position potentiometer. When necessary, possible weight measuring cell or manometer must also be calibrated. In addition, an amount of magnets for a measuring sensor affects the measurement.

FIELDMASTER, fitting instruction	$\geq <$	Model	No	Page
	12.08.1998	6000-8750	39.18	9(10)

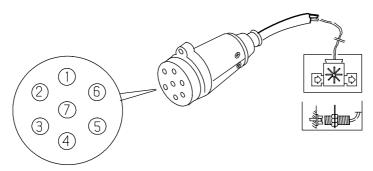

Poles have been numbered on the plug casing. The tables below show how the implement sensors are connected to the plug.

Sprayer					
Sensor	Wire color	Plug pin			
	blue	5			
Flow meter	brown	2			
	black	6			
Wheel sensor	blue	4			
	brown	5			
Implement sensor	blue	7			
	brown	5			
Pressure sensor	blue	6			
	brown	5			
	black	1			

Fertilizer distributor				
Sensor	Wire color	Plug pin		
RPM sensor 1	blue	6		
	brown	5		
	black	1		
RPM sensor 2 or weight module	blue	6		
	brown	5		
	black	2		
Wheel sensor	blue	4		
	brown	5		
Implement sensor	blue	7		
	brown	5		

12.08.1998

Model

No Page

6000-8750 **39.18**10(10)

	Drill			
Sensor	Wire color	Plug pin		
RPM sensor on drill shaft	blue	1		
(2 wires)	brown	5		
RPM sensor on drill shaft	blue	6		
(3 wires)	brown	5		
	black	1		
RPM semsor on switch	blue	2		
	brown	5		
Drill boot sensor	sininen	6		
	ruskea	5		
	musta	4		
Implement sensor	sininen	7		
	ruskea	5		

	Baler					
Sensor	Wire color	Plug pin				
Piece counter	blue	1				
	brown	5				
RPM semsor 3 or weight module	blue	6				
	brown	5				
	black	2				
RPM sensor 2	blue	6				
	brown	5				
	black	4				
RPM sensor 1	blue	6				
	brown	5				
	black	7				

	Slurry spreader					
Sensor	Wire color	Plug pin				
RPM sensor 1	blue	6				
	brown	5				
	black	1				
Flow meter	+12 V	6				
	0 V	5				
	Signal	2				
Wheel sensor	blue	4				
	brown	5				
Implement sensor	blue	7				
	brown	5				

SIGMA-POWER, CONNECTORS	23.0 6. 1997	Model	Code	Page
	04.09.1997	8750	39	1(2)

The earlier connectors can be changed into new ones, which have rubber seals.

FITTING:

- Disconnect the battery earth cable.
- Find connector "B4" (in engine compartment on the LH side).

Change the connector and pins according to picture A (the wires are connected to the pins by pressing with pliers).

The earlier connector pin "1" (rounded edge) corresponds to the new connector letter "A" a.s.o. Numbers/letters have been marked on the connectors.

Find connector "A13" behind the engine.
 Change the connector and pins according to picture B.

Fit the control unit side connector half wires into the new connector so that the numberings correcponds to each orhers (numbers are visible in the rear end of the connector; on the earlier connector pin no 1 is at the notch on the connector housing).

NOTE! the earlier connector pins no 1,4,7 and 12 (2 wires): cut the wires to the connector and peel their ends.


Make an auxiliary wire with length of 150 mm (Ø 1,5 mm). Connect with an extension sleeve SA1580 the above mentioned two wires and the auxiliary wire together, and press with pliers the wires . Warm the shrink plastic round the sleeve so that the connection becomes tight.

Push the connection inside the wire loom protective tube.

The empty holes no 8 and 10 on the wire loom (33026200) side connector half are plugged with plugs **9**.

- Check the function of the system.

1,1A	1	33434000	Liitinkotelopari	Skarvhuspar	Connector, pair	3-nap/ pole
1	1	SA1583	Liitinkotelo	Skarvhuspar	Connector, pair	3-nap/ pole, naaras/female
1A	1	SA1584	Liitinkotelo	Skarvhuspar	Connector, pair	3-nap/ pole, uros/male
2	1	_	.Tiivistekumi	Tätning	Seal	Dichtung
3	3	SA1587	.Liitin, uros	Anslutning	Connector pin	male
зА	3	SA1588	.Liitin, naaras	Anslutning	Connector pin	female
4	1	_	.Lukituskappale	Låsstycke	Locking piece	for female connector
4A	1	_	.Lukituskappale	Låsstycke	Locking piece	for male connector
5,5A	1	33433900	Liitinkotelopari	Skarvhuspar	Connector, pair	12-nap/ pole
5	1	SA1585	Liitinkotelo	Skarvhuspar	Connector, pair	12-nap/ pole, naaras/female
5A	1	SA1586	Liitinkotelo	Skarvhuspar	Connector, pair	12-nap/ pole, uros/male
6	1	_	.Tiivistekumi	Tätning	Seal	Dichtung
7	10	SA1587	.Liitin, uros	Anslutning	Connector pin	male
7A	10	SA1588	.Liitin, naaras	Anslutning	Connector pin	female
8	1		.Lukituskappale	Låsstycke	Locking piece	for female connector
8A	1		.Lukituskappale	Låsstycke	Locking piece	for male connector
9	2		.Tulppa	Plugg	Plug	
10	4	SA1580	Jatkoholkki	Hylsa	Sleeve	

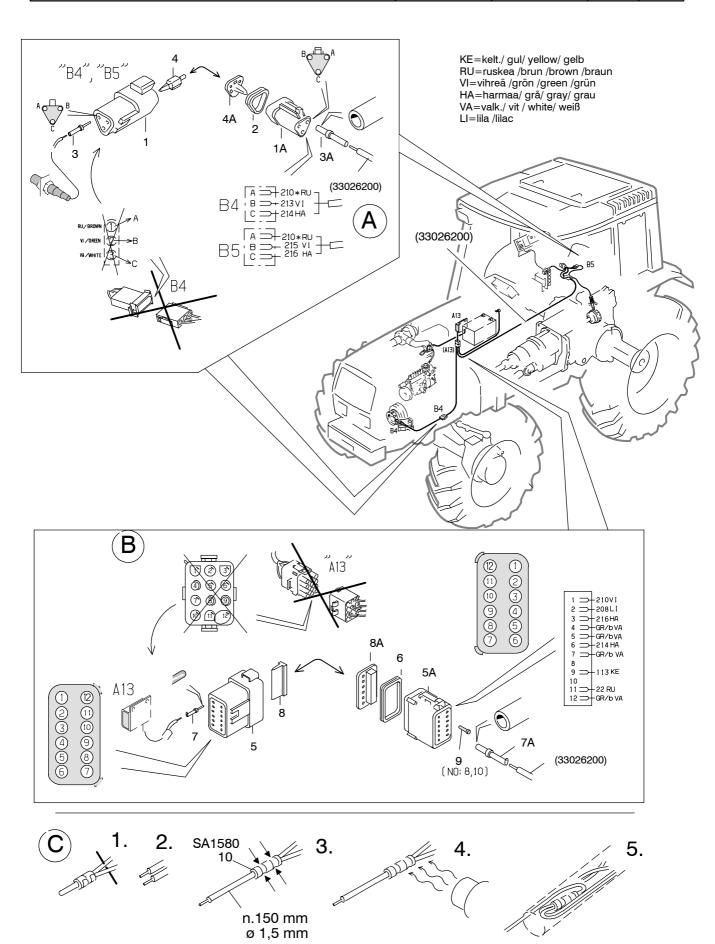

RAISED HEADLIGHTS, FITTING INSTRUCTION 04.72.1995 | Model | No Page | 09.04.1998 | 6000-8750 | **39.2** | 1(4)

- The raised headlights are needed when the tractor has a front mounted implement (e.g. front loader) which hampers visibility of the standard headlights. The upper headlights are attached to the cab roof front edge (in addition, the standard headlights are fitted on the tractor). Driver can choose with a switch which one of lights he wants to use. When the parking lights are switched on, also in-built parking lights light in the upper headlights.
- Fitting instruction:
- Detach the working lights from their attachments in the front edge of the roof. Remove the covering (1) and the roof.
- Open a little the inner roof so that the wiring loom (24) can be passed into the roof side through the hole in the side pillar and push the wire connector ends (E25, E23 and E24, E26) out of the roof front corners.
- Connect the wiring loom wires nos 77 (2 pcs brown) between the roof panel light (E16) supply wire (earlier tractors: no 26 black wire) and the lamp base.
- Connect the earth connector to the earth point /2.
- Disconnect the working light connectors and change places for working lights (the LH side light to the right and the RH side light to the left).
- Check all connections and fit the roof.
- Fasten the support (2) to the fastening lugs.
- Carefully clean the upper corners of the windscreen. The stickers' (15) round corners should be turned downwards towards the driver's seat. Mark the places for the stickers: The visible edges of the stickers should be about 10 mm outer than the corresponding edges of the covering (1). Fasten the stickers onto the windscreen.
- Mark places for new fixing holes (6 pcs) on the roof and use the covering (1) as a pattern. Drill ø4 mm holes. Seal the earlier holes with e.g. silicone based sealant.
- Fasten the number plate back plate to the covering (1) in the reverse direction so that it does not stand in the working light way.
- Fasten the covering (1) into place. There are rubber washers (28) between the covering and the outer roof.
- Assemble the headlights (parts 18, 20, 21 and 22, 26) and fasten them onto the frames (11), see picture.
 Connect the wiring loom to the bulbs and fasten the assembled frames onto the covering
- Fasten the working lights (TOP-marking upwards).

RAISED HEADLIGHTS, FITTING INSTRUCTION

04.12.1995

Model

No

Page

6000-8750 39.2

39.2 2(4)

 Draw the wiring loom in cab inside the side pillar linings and under the mudquard linings and further in the cable channel under the floor mat into the steering wheel console.

-Seek the connector X3 of the fuse box. If one wire (black, no 52) is fitted in the connector pole 1, modifications are unnecessary (the modifications have been done from the cab no 3645->). If two wires are fitted in the pole 1, the following procedures must be done:

Cut off the thicker wire (1,5 mm²) beside the connector. Procure about 0,5 m wire of the same thickness and connect it to the other end of the cut wire with connector SA 1553. Squeeze the plastic covering round the connector by warming it.

Tape the wire onto the side of the wiring loom behind the steering wheel column and draw it to the RH side of the fusebox.

Disconnect wire no 53 black from the fusebox connector X7 pole no 7. Use a small screwdriver to release the connector locking claws. Remove the earlier connector from the wire and connect this wire + the wire which was done to the new connector SA 1776. Connect the connector back to the connector X4 pole no 7.


- Connect the wiring loom (24) between the connector X4 (see picture).
- Fit the switch (25) and connect it to the wiring loom ("S33").
- Check the function of the raised headlights. Adjust the lights (see picture).

	1	32817000	Yläajovalot	Över färdljus	Upper head lights	Obere Scheinwerfer	
	1	33423000	Yläajovalot	Över färdljus	Upper head lights		For Left - hand traffic
1	1	32814200	.Suojus	Skydd	Shield	Schutz	
2	1	32816400	.Tuki	Stöd	Support	Stütze	
3	6	JD0408	.Aluslaatta	Bricka	Washer	Scheibe	
4	4	HA6323	.Ruuvi	Skruv	Screw	Schraube	
5	2	625510	.Aluslaatta	Bricka	Washer	Scheibe	
6	4	JB1108	.Mutteri	Mutter	Nut	Mutter	
7	4	31990000	.Lukituslevy	Låsbricka	Lock washer	Sicherungsscheibe	
8	4	31990500	.Kitkalevy	Friktionplatta	Friction plate	Reibungsplatte	
9	2	32816500	.Kiinnitin	Fästdon	Fastener	Halter	
10	4	JB8904	.Mutteri	Mutter	Nut	Mutter	
11	2	32816300	.Kehys	Ram	Frame	Rahmen	
12	8	JC9002	.Mutteri	Mutter	Nut	Mutter	
13	8	JD0405	.Aluslaatta	Bricka	Washer	Scheibe	
14	8	HN6804	.Ruuvi	Skruv	Screw	Schraube	
15	1	32817100	.Tarra	Dekal	Sticker	Aufkleber	assy
16	2	625510	.Aluslaatta	Bricka	Washer	Scheibe	-
17	2	HA6323	.Ruuvi	Skruv	Screw	Schraube	
18	2	31547310	.Ajovalaisin	Strålkastare	Head light	Scheinwerfer	For Right-hand traffic
	2	31590100	.Ajovalaisin	Strålkastare	Head light	Scheinwerfer	For Left – hand traffic
18A	2	32745300	Tiiviste	Tätning	Gasket	Dichtung	
19	6	32547600	Ruuvi	Skruv	Screw	Schraube	
20	2	SH2663	Lamppu	Lampa	Bulb	Lampe	
21	2	601610	Suojus	Skydd	Shield	Schutz	
22	2	32571100	Lampunpidin	Lampfattning	Bulb socket	Lampenfuß	
23	6	601640	.Jousi	Fjäder	Spring	Feder	
24	1	32816800	.Johdinsarja	Ledningssats	Wiring set	Verkabelung	
25	1	31877500	.Keinukytkin	Vippströmbrytare	Switch	Schaukelschalter	
	1	32816900	.Linssi	Lins	Lens	Linse	
	1	30944600	.Lampunpidin	Lampfattning	Bulb socket	Lampenfuß	+ lamppu /+ bulb
				https://tract	ormanualz c	om/	

https://tractormanualz.com/

RAISED HEADLIGHTS, FITTING INSRUCTION	04.12.1995	Model	No	Page	
	09.04.1998	6000-8750	39.2	3(4)	

26	2	SH2664	.Lamppu	Lampa	Bulb	Lampe	
27	6	HN6804	.Ruuvi	Skruv	Screw	Schraube	
28	6	32643900	.Kumilaatta	Gummibricka	Rubber washer	Gummischeibe	
	1	SA1776	.Liitin	Anslutning	Connection	Anschluß	
	1	SA1553	.Liitin	Anslutning	Connection	Anschluß	
_	1	_	Johdin 0.5 m	Ledning, 0.5 m	Wire, 0.5 m	Kabel	

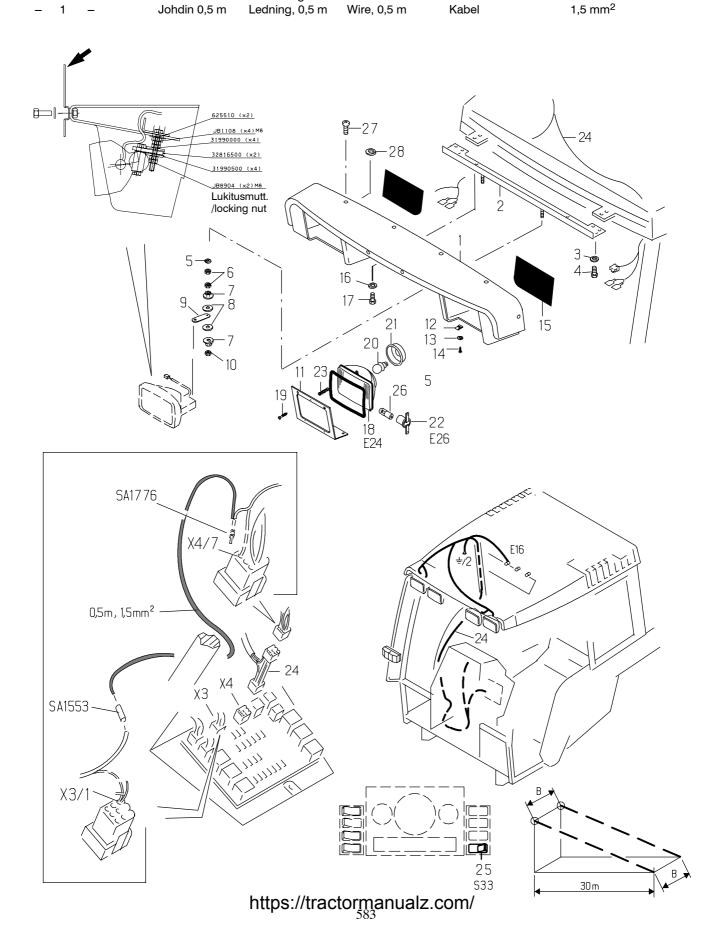

04.72.1995
09.04.1998


Model

No

Page

6000-8750 **39.2**

39.2 4(4)

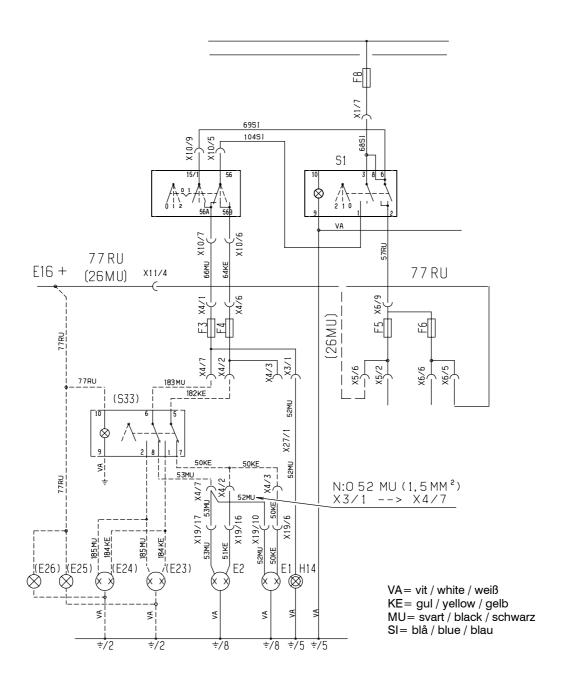

AGRODATA- INSTRUMENT PANEL	06.08.1997	Model	Code	Page
FITTING INSTRUCTION	26.07.1999	6000-8750	39.20	1(8)

Agrodata instrument panel A 33039000

FITTING THE SENSORS:

Models 6000-8400 (these tractors don't have ACD- electrohydraulic lift as standard):
 Gearbox speed sensor B6 is fitted to the 4WD drive shaft front end (gearbox).
 If the sensor location on the 4WD clutch housing is desired, the tractor has to be splitted at the gearbox.

Tractors 8450 – 8750: the sensor B6 (location on the 4WD housing) and the harness **7** are installed.


- Sensor B6: remove the propeller shaft. Remove the front shaft nut (do not touch the other one), and fasten the support under the 4WD flange screws.
- Sensor B7: Remove the plug and clean the threads. Find with a dial gauge the shortest distance between the sensor and the impulse disc through the sensor hole.
- B6, B7: Apply Loctite 572 onto the sensor threads and turn it against the gear wheel / impulse disc and then unscrew it 1/4 of a turn (B7: do not screw too hard because the disc can spring).
- B6, B7: Lock the sensor with the nut and connect wire harness 7.
- B6, B7: Connect the wires to the sensor and protect with grease UC1913 (vaseline spray HHS 2000, Würth).
- B6, B7: Fold the wire on the sensor and fasten it with a plastic cable tie. Fasten the wire to the lock washer.
- Temperature sensor B3: remove the plug and fit the sensor (+ o-ring) instead. Connect the wires to the sensor and protect with grease UC1913.
- Fasten removed parts.


FITTING THE PARTS IN THE CAB:


- Disconnect the battery earth lead. Remove the instrument panel. Remove the lever console side panel.
- Connect the wires to the new instrument panel.
 Connect the connector "X25" to the wiring harness 2. Fit the new instrument panel.
- Draw the wire loom 2 together with other cables along the floor into the lower end of the lever housing and furthermore at the rear part of the cab into the side console Bind the cable together with the other cables.

AGRODATA – INSTRUMENT PANEL	06.08.1997	Model	Code	Page
FITTING INSTRUCTION	26.07.1999	6000-8750	39.20	2(8)


- Draw the connector "X34" of the sensor wiring loom through the opening at the bottom of the side panel. Connect the connector to the wiring loom 2. Connect also the connector "X1E" to the wiring harness 2.
 (The connector "X39" of the wiring loom 7 remains unconnected).
- Take the switch S11E (forced lowering switch) apart from the panel and connect the auxiliary wires of the wiring loom 2 to the switch S37, and fit the switch again (see picture).
 (The connectors of the wiring loom 2 "H25", "H26", "GR5" and "X36" remain unconnected).
- Carry out a calibrating (see pages 6-7/7) and a test drive and ensure that Agrodata – unit functions.

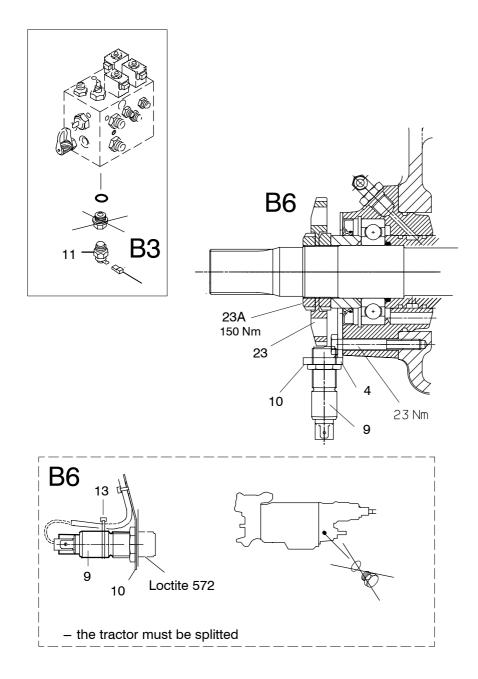

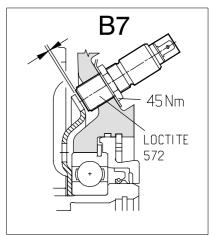

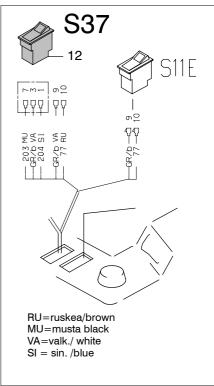


AGRODATA – INSTRUMENT PANEL	06.08.1997	Model	Code	Page
FITTING INSTRUCTION	26.07.1999	6000-8750	39.20	3(8)

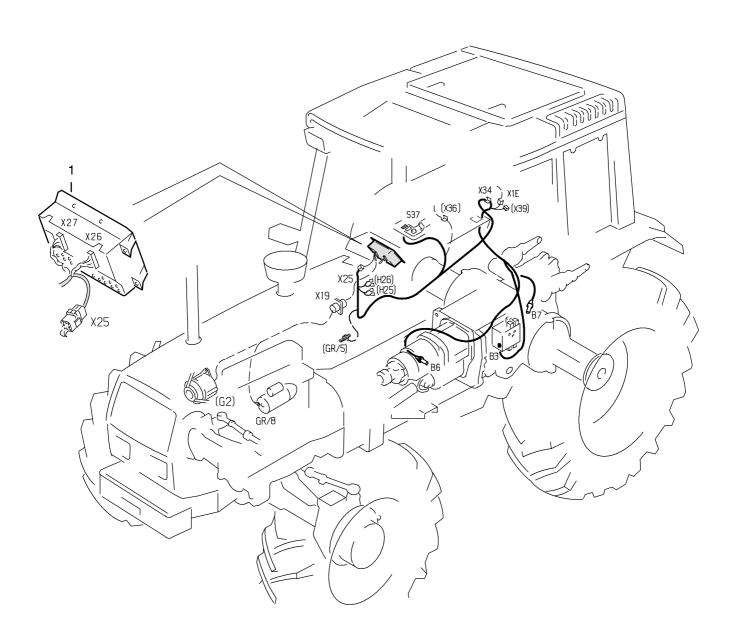

AGRODATA- INSTRUMENT PANEL	06.08.1997	Model	Code	Page
FITTING INSTRUCTION	26.07.1999	6000-8750	39.20	4(8)


		A 33039000	Agrodata – mittaristo	Agrodata – Instrument	Agrodata – Instrument	Agrodata – Instrument	
1 2	1	33011810 33012010	.Mittaristo .Johdinsarja	Instrument Ledningssats	Instrument Wiring set	Instrument Verkabelung	
3	2	SA1774	Liitinkotelo	Skarvhus	Connector	Steckdose	9-pole
5	1	SA1786	Liitinkotelo	Skarvhus	Connector	Steckdose	3-pole
4	1	32844920	.Levy	Platta	Plate	Platte	•
7	1	33012100	.Johdinsarja	Ledningssats	Wiring set	Verkabelung	EI/ NO 8450-8750
8	1	SA1775	Liitinkotelo	Skarvhus	Connector	Steckdose	9-pole
9	2	31702400	.Anturi	Givare	Sensor	Geber	
10	2	32619100	.Kiinnitin	Fästdon	Fastener	Halter	
11	1	33047100	.Lämpötila-anturi	Temperatursgivare	Temperature sensor	Temperaturfühler	
12	1	32276400	.Keinukytkin	Vippströmbrytare	Switch	Schaukelschalter	3-act
	1	33384600	.Linssi	Lins	Lens	Linse	
	1	30944600	.Lampunpidin +Lamppu	Lampfattning Lampa	Bulb socket Bulb	Lampenfuß Lampe	
13	2	SA1900	.Johdinside	Buntband	Wiring band	Leitungsklemme	
23	1	32844810	.Hammaspyörä	Kugghjul	Gear	Zahnrad	
23A	1	LB3013	. Mutteri	Mutter	Nut	Mutter	

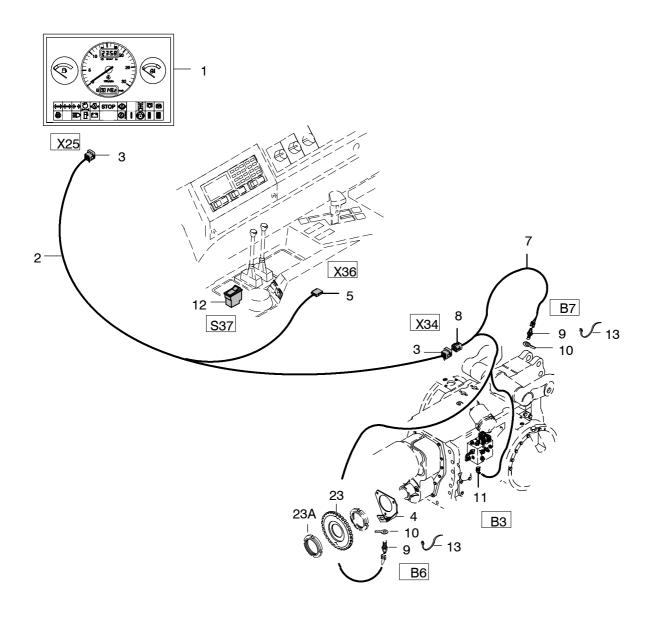


AGRODATA – INSTRUMENT PANEL	06.08.1997	Model	Code	Page
FITTING INSTRUCTION	26.07.1999	6000-8750	39.20	5(8)

Calibrating the instrument for different tyres:

- 1. Remove the switch ${\bf C}$ by prying it carefully. Do not disconnect the wires.
- 2. Switch on current with the ignition switch.

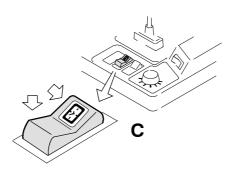

—3. Connect the switch pins 1 and 7 with an auxiliary wire and press at the same time the switch front edge for over 3 seconds. "P" appears in the lower display and the valid code number (e.g. P243). The first digit is flashing. Remove the wire.

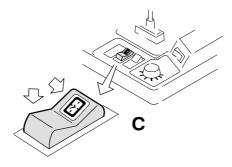

- 4. Adjust the hundreds by pressing the switch rear edge.
- When the hundreds are correctly adjusted, press the switch front edge and tens start to flash.
- Adjust the tens by pressing the rear edge and then press the front edge, at which time single units start to flash.
- 7. Adjust the ones by pressing the rear edge.
- 8. Finally press the front edge for over 2 seconds. Calibrating has been carried out and running hours appear in the lower display (read the note below). Fit the switch.

Note! In the beginning of the production (the first 20 tractors), the switch pins 1 and 7 must be once again connected with auxiliary wire and after that the switch front edge is pressed over 2 seconds.

Note! The code number value can vary between P100—P299. When pressing the switch rear edge, the code value changes from a smaller value to greater one. The code numbers and corresponding tyres are listed in the table on the next page.

AGRODATA – INSTRUMENT PANEL	06.08.1997	Model	Code	Page
FITTING INSTRUCTION	26.07.1999	6000-8750	39.20	6(8)

 Code numbers with different tyre sizes and transmission types (sensor located on the front end of the 4WD drive shaft):

Mezzo			DPS300]	CP8300			DPS460 & 0	28 66 0
Rengas	r dyn	T300/40	T300740	T#56/36	TA50/40	T450/50	T450/40	T450i50
13 6-3P8N	740	145	.48		144	147	144	144
13 6Fc39/8M	740,	1 0 É	145	145	164	197	140	144
13 5R-39-8M	740	145	146	145	144	147	144	144
16 9-34/8N	765	145	145	.44	143	146	143	143
16 9R-34/8M	746	145	145		1430	146	145	143
16 9R-34/8N	765	145	145	144	143	146	143	143
16 9-34/14 IND	746	145	145	· 44	14.7	146	143	143
16 9R-34-8M	7.55	145	145	144	142	146	143	143
14 9R-35-8M	765	142		. 46	145	142	179	140
14 9R-38/8N	785	142	.41	.aD	143	143	139	140
14 9R-38-8M	765	142	'41	140	140	142	139:	140
600/86R-34/M	766	141	:41	.39	139	141	138	139
18 4-34/8N	770	141	141	135	:39	141	138	139
18 4-,449N	270	141	141	.39	139	141	136	139
18 4R-24-6N	776	141	141	'39	139	141	138	139
18 4R-34.6M	270	141	141	.3∌	139	19:	138	139
18 4-34/14FOR	775		141 1	'3F	133	10.1	138	139
18 4-34/14 ND	270	141	141	:3∌	139	141	138	139
18 4-34/14FQR	775	141	141	139	139	12.1	138	131
18.4R-24/8W	776	141	141	.3∌	133	741	138	139
18 4R-34-8GY	270	141	141	. 23	(39	141	138	119
18 4R-J4-8W	776	141	141	139	139	141	138	139
18 4-54/14FOR	770	141	141	.33	133	141	138	139
18 4-344ND	776	14:	141	'39	139	141	138	139
520/70R-04	724	128	138	.33	133	138	130	136
540/55R-38'M	791	137	187	135	135	137	134	135
16 9R-22/9M	755	136	123	135	134	137	134	134
16 9-7-38-6N	795	136	135	135	134	137	134	134
16.9R 28/8M	755	136	176	135	13a	- 37	134	134
16 9R-28/BM	795	136	135	135	134	137	134	134
DS 9R 38/9N	75.5	136	1.35	135	132	- 37	134	134
16 9R-78/8GY	79,5	130	136	135	134	147	1.14	134
620775R-307M	900	135	125	غزا	132	:35	130	134
E20/75R-3G/M	A07	135	135	134	134	138	103	134
490/70R 38	805	135	124	133.	133	135	132	133
18 4R 38/8M	370	135	199	13/0	130	132	130	130
18 4R-38/9GY	800	132	192	130	133	1.23	136	130
18 4R 38/14M	920	172	172	130	137	132	130	1,50
18 4-78114Ft)R	820	132	132	130	130	132	130	130
18 4-38-14IND	870	132	122	130	130	132	130	130
18 43-384/	820	132	17.2	1(9)	1371	132	130	1.00
18 4-(8 ⁱ Fí	820	132	.35	120	133	132	130	130
603/65R-38/M	8.70	121	130	129	129	131	128	129
620/70R-36	837	129	129	128	128	153	127	124
2018R 0WM	<i>055</i>	127	107	165	105	127	124	125
20 6R-28/8M	855	127	127	125	125	127	174	126
20 8H-38/8M	855	127	127	125	125	127	124	125
652:65R38M	967	125	125	123	123:	125	123	. 53
580/70R-38	875	124	124	122	122		122	122

AGRODATA - INSTRUMENT PANEL	06.08.1997	Model	Code	Page
FITTING INSTRUCTION	26.07.1999	6000-8750	39.20	7(8)

 Code numbers with different tyre sizes and transmission types (sensor located on the gearbox housing):

			DPS300	DPS300			DPS460,65	50
Rear wheel	r dyn	T300/40	T300/40	T450/30	T450/40	T450/50	T450/40	T450/50
13.6-38/8N	740	190	180	227	197	181	216	197
13.6R-38/8M	740	190	180	227	197	181	216	197
14.9R - 38/8M	765	184	174	219	191	175	209	191
14.9R – 38/8N	765	184	174	219	191	175	209	191
16.9-34/8N	745	189	179	225	196	180	214	196
16.9R-34/8M	745	189	179	225	196	180	214	196
16.9R-34/8N	745	189	179	225	196	180	214	196
16.9R-38/8M	795	177	168	211	184	168	201	184
16.9R-38/8N	795	177	168	211	184	168	201	184
18.4-34/8N	770	183	173	218	190	174	207	190
18.4-34/8N	770	183	173	218	190	174	207	190
18.4R – 34/8N	770	183	173	218	190	174	207	190
18.4R – 34/8M	770	183	173	218	190	174	207	190
16.9R-38/8M	795	177	168	211	184	168	201	184
18.4-34/14FOR	770	183	173	218	190	174	207	190
18.4R – 38/8M	820	172	163	204	178	163	195	178
620/75R-30/M	800	176	167	210	182	167	199	182
620/75R-30/M	800	176	167	210	182	167	199	182
16.9-34/14IND	745	189	179	225	196	180	214	196
18.4-34/14IND	770	183	173	218	190	174	207	190
18.4-34/14FOR	770	183	173	218	190	174	207	190
18.4R – 34/8M	770	183	173	218	190	174	207	190
18.4R – 34/8GY	770	183	173	218	190	174	207	190
13.6R-38/8M	740	190	180	227	197	181	216	197
14.9R – 38/8M	765	184	174	219	191	175	209	191
16.9R-38/8M	795	177	168	211	184	168	201	184
16.9R – 34/8M	745	189	179	225	196	180	214	196
540/65R-38/M	791	178	169	212	185	169	202	185
18.4R – 34/8M	770	183	173	218	190	174	207	190
600/65R-38/M	830	170	161	202	176	161	192	176
600/65R-34/M	768	183	174	218	190	174	208	190
16.9R-38/8N	795	177	168	211	184	168	201	184
16.9R-38/8GY	795	177	168	211	184	168	201	184
18.4R-38/8GY	820	172	163	204	178	163	195	178
18.4R – 38/14M	820	172	163	204	178	163	195	178
18.4-38/14FOR	820	172	163	204	178	163	195	178
20.8R-38/M	855	165	156	196	171	157	187	171
18.4-38/14IND	820	172	163	204	178	163	195	178
18.4R-38/M	820	172	163	204	178	163	195	178
18.4-34/14FOR	770	183	173	218	190	174	207	190
18.4-34/IND	770	183	173	218	190	174	207	190
18.4-38/FI	820	172	163	204	178	163	195	178
20.8R-38/8M	855	165	156	196	171	157	187	171
20.8R-38/8M	855	165	156	196	171	157	187	171
650/65R38M	867	163	154	193	168	154	184	168
					0			

AGRODATA – INSTRUMENT PANEL	06.08.1997	Model	Code	Page
FITTING INSTRUCTION	26.07.1999	6000-8750	39.20	8(8)

520/70R-34	784	180	170	214	186	171	203	186
540/65R-38/M	791	178	169	212	185	169	202	185
480/70R-38	805	175	166	208	181	166	198	181
520/70R-38	837	168	159	200	174	160	191	174
520/70R-38	837	168	159	200	174	160	191	174

 Note! If a tractor has tyres which are not listed on the previous table, the code number can passably be calculated as follows:

$$X = \begin{array}{c} & Y \times V \\ \hline & \\ V_{max} \end{array} \quad \text{in which}$$

X= correct code number

Y=actual code number in AD-instrument

V= tractor's constructional speed (30, 40 or 50 km/h)

 $\mathbf{V}_{\text{max}} \!\!=\! \! \text{tractor's max driving speed which is shown by}$

AD-instrument.

Example:

In AD-instrument there is an actual code number 170 Tractor's constructional speed is 40 km/h AD-instrument shows the tractor max. driving speed of 38 km/h

$$X = \frac{170 \times 40}{38} = 179$$

DPS CONTROL UNIT, fitting instruction		Model	Code	Page
	18.06.1997	6000-8400	39	1(3)

The earlier type control unit no 32861200 (tractors up to no 668102), will be replaced with a new unit no 33027100 and with an extra wire loom. The kit incl. also new fastening parts.

In connection with the unit change, the following functions are added:


- sound signal for applied hand brake
- sound signal for head lights


FITTING:


- Disconnect the battery earth lead.
- Remove the dash board plate round the instruments.
 - Push the connector end "A9" of the wire loom 33031100 into the steering wheel console from lower part upwards.
- Part the connector "A9" halves of the display unit and connect the wire loom 33031100 corresponding connector between the connector halves.
- Release the floor mat in the cab RH side front part and the lower end protection of the gear levers.
 - Remove the earlier control unit (32861200). Remove the power lift switch panel. Unscrew the panel housing bottom nut. Loosen the door seal at the rear mudguard.
- Draw the wire loom 33031100 together with other cables along the floor into the lower end of the lever housing. Bind the cable together with the other cables.
- Connect the connector "A10" (in the cab wire loom to the loosened control unit) onto the new wire loom.
- Draw the new wire loom under the mudguard upholstery into the power lift switch panel housing (a hole for wires is ready—made).
- Fasten parts 29–36 onto the switch panel.
 Connect connector "(A10)" to the control unit circuit card and refit the cover. Fasten other removed parts.
- Check the function of the DPS and the sound signals of the hand brake and head lights:
 - * Alarm buzzer starts to alarm continuously, if the engine is stopped and the parking brake is not applied.
 - * If the engine is started without releasing the hand brake, the buzzer alarms brokenly.
 - * If the head lights are on after the current is switched off, the buzzer alarms brokenly.

DPS CONTROL UNIT, fitting	><	Model	Code	Page
	18.06.1997	6000-8400	39	2(3)

	1	33464200	Asennussarja	Ditsättn. sats	Fitting kit	Einbausatz
29	1	33027100 33031100	.Ohjain .Johdinsarja	Styrning Ledningssats	Guide Wiring set	Führung Verkabelung
30 31 32 33 34 35 36	1 4 4 4 4 4 8	33030500 JD0405 HN6807 HD8002 JD0404 JB8901 32518100	.Kannatin .Aluslaatta .Ruuvi .Ruuvi .Aluslaatta .Mutteri .Rengas	Hållare Bricka Skruv Skruv Bricka Mutter Ring	Support Washer Screw Screw Washer Nut Ring	Halter Scheibe Schraube Schraube Scheibe Mutter Ring

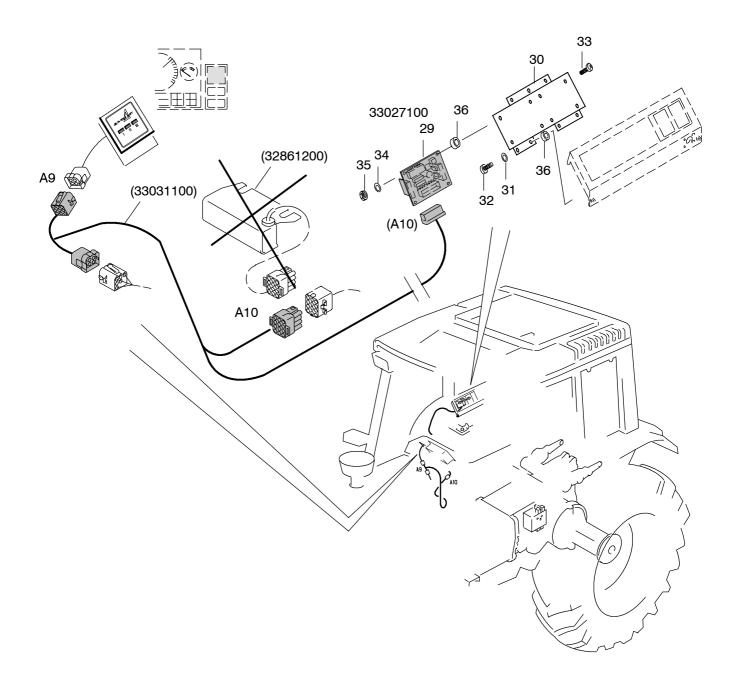

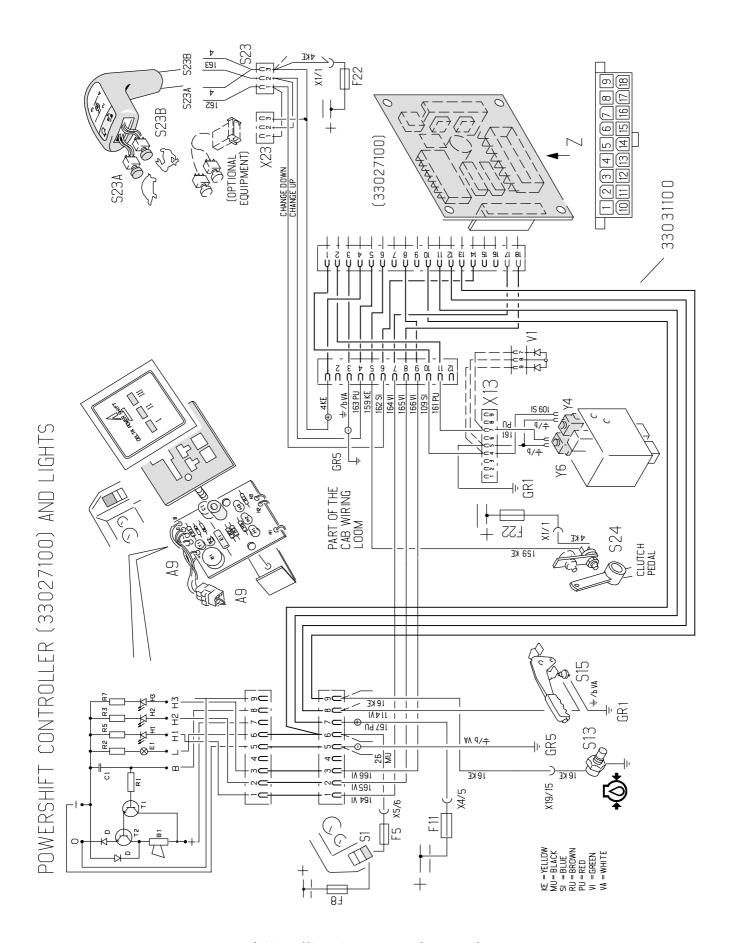

 

SPEEDOMETER AND CLOCK	10.06.1994	Model	No	Page
FITTING INSTRUCTION	14.04.1998	6000-8400	39.3	1(4)

Speedometer and clock 32635700

Fitting:

- Speedometer and clock are fitted in their casing on the instrument panel.
- Detach the instrument panel, fit the casing and mark places for holes and lead – in points for wires
- Drill holes (ø 5mm, 2 pcs) for fixing screws and a hole ø 32mm for wires (connector, 9 pins).
- Fasten the casing with screws 3 (2 pcs) and fasten the display unit into the casing.
- Detach the RH side threshold moulding and the side panel. Draw the wire loom 4 backwards under the floor mat.
- Carry out wire connections according to the picture:
 - wire no 1 (red) to connector X2 pin 2. Connector is placed in the fuse box.
 - wire no 2 (yellow) to connector X3 pin 7. Connector is placed in the fuse box.
 - earth wire under the earth screw 5.
- Fit the wheel sensor bracket 6 under the nut of the LH side check link. Nut is fitted under the rear axle housing. Fit the sensor and connect wires to the 3-pin connector. Blue wire to pin 1 and brown to pin 3.
- Change two rear wheel attaching bolts with bolts fitted with magnet (bolts which fitted 180° opposite each other). Yellow dot on magnets against the sensor. Secure screws with Loctite 242.
- Adjust distance between sensor and magnet to 1–5mm.

	1	32635700	пор.тіт. ја кено	Hastig.m.+klocka	S.meter+clock	lacnometer+Unr	
1 2	1	32663710 32663500	.Näyttölaite .Kotelo	Teckenförster Hus	Display unit	Bildschirm Gehäuse	
3	2	HD4313	.Ruuvi	Skruv	Housing Screw	SchraubeVis	(M6x12)
4	1	32663600	.Johdin	Ledning	Wire	Leitung	
5	1	31703200	.Anturi	Givare	Sensor	Geber	
6	1	31703300	.Kannatin	Hållare	Support	Halter	
7	2	HE6958	.Ruuvi	Skruv	Screw	SchraubeVis	
8	2	31720500	.Magneetti	Magnet	Magnet	Magnet	
9	2	31720600	.Aluslaatta	Bricka	Washer	Scheibe	
10	2	32249200	.Ruuvi	Skruv	Screw	SchraubeVis	

SPEEDOMETER AND CLOCK	10.06.1994	Model	No	Page
FITTING INSTRUCTION	14.04.1998	6000-8400	39.3	2(4)

INSTALLING AND CHECKING:

I Setting speedometer

- 1. Push the function key beside the display until the display shows the driving speed.
- 2. The driving speed should be zero (0).
- 3. Push the key about 6 seconds, then release it.
- 4. To make the display smaller:
 - -Push the key once. By pushing the key **immediatel**y, the display shows the wheel circumference adjusting value which reduces at every push.

To make the display greater:

-Push the key once and wait about 6 seconds. By pushing after, the adjusting value increases at every push.

Adjust the circumference value according to the tyre size shown in table below by pushing the key.

5. After the adjustment, the display shows automatically the driving speed and the adjusting value is in the memory. Note that the driving speed must be in the display, when the adjustment is started. The value direction can neither be changed during the adjustment.

Setting speedometer has also to be done when changing different size tyres or if it is wanted to adjust the speedometer more exact for worn tyres.

Tyre size	Value	
13.6-38/8 13.6R-38/8 14.9R-38/8 16.9-34/8 16.9R-34/10 16.9R-34/14 16.9R-38/8	211 211 218 213 213 212 213 227	Table 1. The wheel circumference value which is input into the speedometer can be calculated as follows: Rolling circumference x 0,91 number of magnets (2)
18.4-34/8 18.4R-34/8 18.4-34/10 18.4-34/14 18.4R-38/8 18.4-38/14 18.4R-38/14 20.8R-38/8 23.1R30 540/65R-38/M 600/65R-34/M 600/65R-38/M 620/75R-30/M 650/65R-38/M	220 220 220 220 234 234 234 244 225 226 219 237 228 248	If tyre specifications are not available, you can measure the wheel circumference as follows: - Mark a mark on the tyre and on the ground. - Drive the tractor forward until the wheel has made 5 revolutions. - Make a second mark on the ground. - Measure the distance between the two marks and divide this distance by 5. The result is the effective circumference of the wheel.

SPEEDOMETER AND CLOCK	10.06:1994	Model	No	Page
FITTING INSTRUCTION	14.04.1998	6000-8400	39.3	3(4)

II Setting time

- 1. Push the function key beside the display until the time is shown.
- 2. The time is shown from 1 to 12.
- 3. Push the key about 6 seconds, release it.
- 4. To make the display time less:
 - -Push shortly the key once. By pushing the key immediately the display shows the time which reduces at every push.


To make the display time greater:

- -Push shortly the key once and wait about 6 seconds. By pushing after, the time increases at every push. Adjust correct time by pushing the key.
- After adjustment the colon starts to flash and the correct value is in the memory. Note that the time must be in the display before starting the setting. Neither the direction can be changed during the adjustment.

III Functional check

- 1. Push the time into the display.
- 2. Start driving with gear M1 and at engine revs 1500 RPM.
- The speed value must appear in the display. Check that the speed reading correspond to the theoretic driving speed.
- 4. Push the speedometer key while driving after which the time must appear in the display. Press once again the same key after which the speed reading returns to the display.
- 5. Stop the tractor and after 8 seconds the speed reading must be zero.

SPEEDOMETER AND CLOCK	10.06:1994	Model	No	Page
FITTING INSTRUCTION	14.04.1998	6000-8400	39.3	4(4)

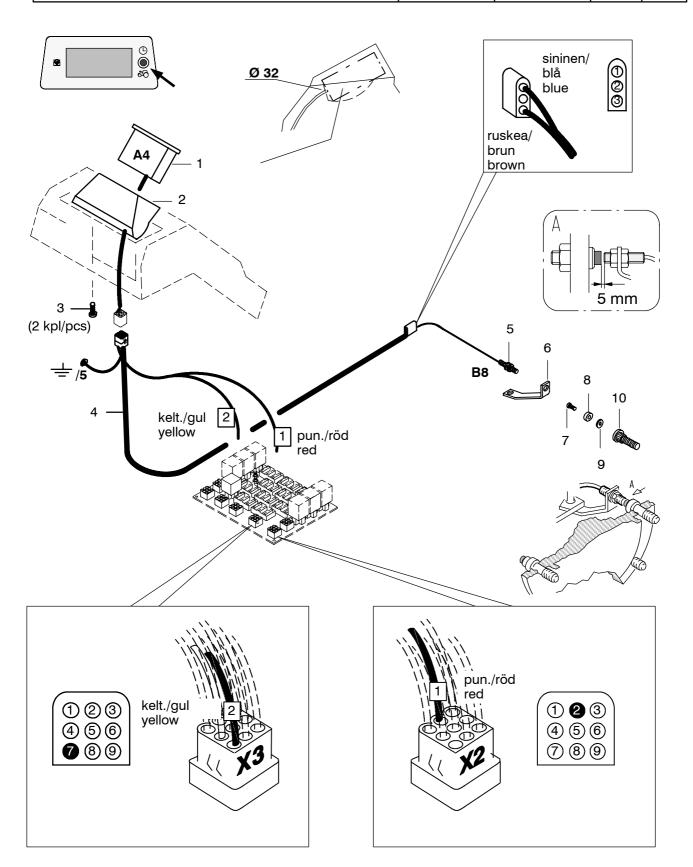

ROTATING WARNING LIGHT	08.12.1995	Model	No	Page	
FITTING INSTRUCTION	14.04.1998	6000-8750	39.4	1(3)	

The light is fitted on the handle on the cab LH side front corner according to the picture.

Fitting:

- Fasten the light bracket using fasteners 6 (4pcs) and screws 7 (see picture).
- Connect the supply and earth wire no 9 to the light (picture A). Push the plastic shield of the wire through the hole on the tube 4.
 Connect the other end of the wire to connector X22 in the cab wire loom. Connector is placed in the LH side front corner under the visor (picture B).
- Up to the cab no 470 the supply wire (no 117 red) can be found by opening a little the rear roof edge in the middle. The wire is connected with an existing lead to the direction indicator. Place the wire under the LH side edge seal of the roof.
- Fit the rotating warning light into the socket 3 and tighten the wing nut.


Instrument panel:

- Open the panel cover by unscrewing 4 st cross head screws and the ignition switch nut.
- Remove the covering and fit the rocker switch 12.
- Connect existing connector S6 in the wire loom (wires no 117 and 79) to the rocker switch and wires no 26 and the earth wire (white) to the indicating lamp holder (picture C).

ROTATING WARNING LIGHT	08.12.1995	Model	No	Page
FITTING INSTRUCTION	14.04.1998	6000-8750	39.4	2(3)

	1	31687000	Kattovilkku	Roterande varn.ljus	Rotating warn. light	Drehwarnblinker	
	1	31983500	Kattovilkku	Roterande varn.ljus	Rotating warn. light	Drehwarnblinker	
	1	32952400	Kattovilkku	Roterande varn.ljus	Rotating warn. light	Drehwarnblinker	
	1	33361200	Kattovilkku	Roterande varn.ljus	Rotating warn. light	Drehwarnblinker	CAD(blue)
1	1	32641800	.Vilkkuvalo	Blinkljus	Flash light	Blinkerlicht	flexible arm(orange)
	1	SH2662	Lamppu	Lampa	Bulb	Lampe	(orange)
	1	33361100	.Vilkkuvalo	Blinkljus	Flash light	Blinkerlicht	flexible arm CAD
	1	SH2662	Lamppu	Lampa	Bulb	Lampe	(blue)
2	1	31085100	.Suojakumi	Skyddsgummi	Shield rubber	Schutzgummi	
3	1	31085200	.Pistorasia	Stickdosa	Plug socket	Steckdose	
4	1	30354510	.Putki	Rör	Pipe	Rohr	
5	1	31686920	.Tuki	Stöd	Support	Stütze	Left
5	1	32955800	.Tuki	Stöd	Support	Stütze	Right GB
6	4	32635910	.Kiinnitin	Fästdon	Fastener	Halter	riigiii GD
7	4	HC9605	.Ruuvi	Skruv	Screw	Schraube	
8	1	30354800	.Ruuvi	Skruv	Screw	Schraube	
9	1	31690700	Johdin	Ledning	Wire	Leitung	
9A	1	SA1550	Liitinkotelo	Skarvhus	Connector	Steckdose	
3/	1	32949600	.Johdin	Ledning	Wire	LeitungLS	
9A	1	SA1550	Liitinkotelo	Skarvhus	Connector	Steckdose	
10	1	JD9201	.Aluslaatta	Bricka	Washer	Scheibe	
11	1	HD9025	.Ruuvi	Skruv	Screw	Schraube	
12	1	30944200	.Kytkin	Strömställare	Switch	Schalter	
12	1	31690810	.Linssi	Lins	Lens	Linse	
	1	30944600	.Lampunpidin	Lampfattning	Bulb socket	Lampenfuß	
		00044000	+Lamppu	Lampa	Bulb	Lampe	
13	1	SA9102	.Side	Band	Band	Binde	
10	'	CASTOL	.oldc	Dana	Dana	Biride	
16	2	32949900	.Levy	Platta	Plate	Platte	LS
17	2	JB8903	.Mutteri	Mutter	Nut	Mutter	LS
18	2	JD0406	.Aluslaatta	Bricka	Washer	Scheibe	LS
19	2	HA9224	.Ruuvi	Skruv	Screw	Schraube	LS
20	1	32998000	Johdin	Ledning	Wire	Leitung	
			(Kattovilkku	Roterande varn.ljus	Rotating warn. light	Drehwarnblinker	Left+Right)

ROTATING WARNING LIGHT	08.12.1995	Model	No	Page
FITTING INSTRUCTION	14.04.1998	6000-8750	39.4	3(3)

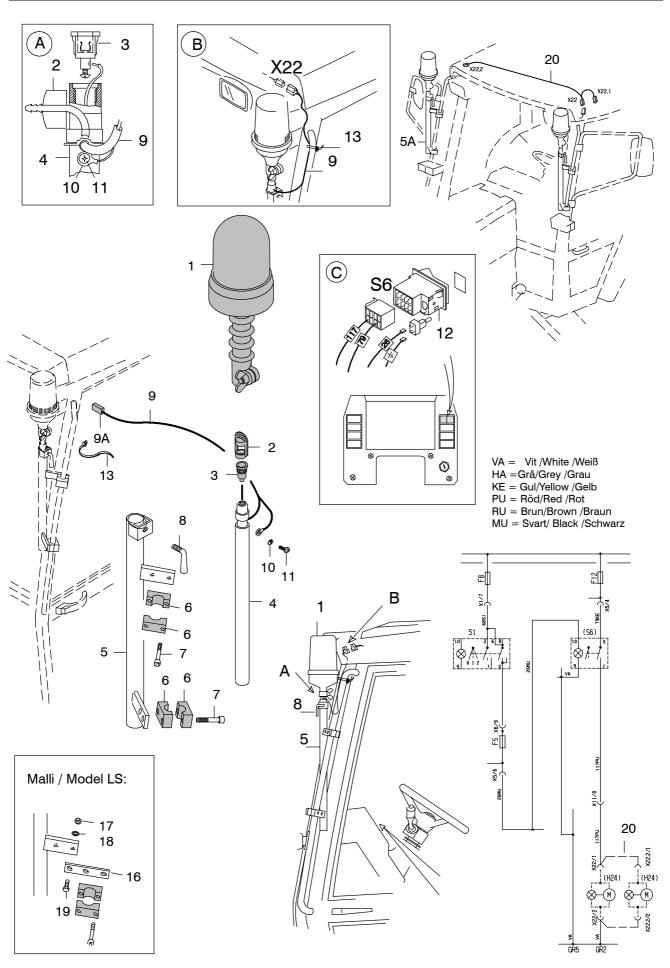

https://tractormanualz.com/

1		

RADIO, FITTING INSTRUCTION	05.09:1994	Model	No	Page
	01.06.1998	6000-8750	39.5	1 (3)

Radio/cassette		
(CLARION ARB-1370E)	32830540

Radio is fitted into the console in the roof (PT94–cabs: on the right side of the roof) and loudspeakers into the rear part of the cab roof (see pictures).

Fitting:

 The loudspeakers and the antenna and their wires must be fitted before fitting the radio.

Cabs to the end of the year 1993:

Remove knobs and switches from the roof panel and remove the panel (8 pcs cross – head screws). **PT94 – cabs**: remove with e.g a hack saw the shield for opening.

Loudspeakers (picture A, B, C):

 Cabs to the end of the year 1993: Cut holes in the roof lining in points for loudspeakers. Hole diameter is about 104 mm.

PT94- cabs: Remove the protective net.

- Draw loudspeaker wires between the roof lining and the outer roof plate using a suitable wire.
- Connect wires in a correct way, and + wires to the correct pins and fasten the loudspeakers using screws and spring washers 8.

Antenna (picture B):

- Unscrew two fixing screws of the front hinge of the RH side side window. Fit two washers 6 (If not fitted) and the antenna bracket 5 under the screws and retighten the screws.
- Fasten the antenna and pass the wire between the roof and the edge seal, cut the seal if needed (on later tractors there is a ready—made hole for the antenna wire). Slacken, if needed, the roof fixing screws.

Radio (picture C):

- Cabs to the end of the year 1993: Open the radio space on the panel plate and fasten the plate 2.
- PT94 cabs: The mounting plate for the radio has been mounted in the factory.
- Fit the bracket +radio into the housing according to the radio instruction book (note locking forks of the radio bracket).
- Connect radio supply and earth wires to the connector A2 in the RH side upper corner of the cab (connector exists in the cab wire loom).
 Connect the loadspeaker and antenna wires and fasten the radio.

RADIO, FITTING INSTRUCTION	05.09.1994	Model	No	Page
	01.06.1998	6000-8750	39.5	2 (3)


	1	32830540	Radio	Radio	Radio	Radio	Radio/Cassette
1	1	31955040	.Radio	Radio	Radio	Radio	CLARION ARB1370E
2		32603100	.Kiinnityslevy	Fästplatta	Mounting plate	Befestigungsplatte	:
4	1	30368100	.Antenni	Antenn	Antenna	Antenne	
5	1	32477800	.Jalusta	Stativ	Stand	Sockel	
6	2	JD0406	.Aluslaatta	Bricka	Washer	Scheibe	
7	2	31680600	.Kaiutin	Högtalare	Loud speaker	Lautsprecher	
8	8	JC9003	.Mutteri	Mutter	Nut	Mutter	
15	1	32803100	.Adapteri	Adapter	Adapter	Adapter	
16	1	32803000	.Johdinsarja	ledningssats	Wiring set	Kabel	


Ohjaamot vuoden 1993 loppuun asti Hytter ända till slutet av år 1993 Cabs to the end of year 1993

Ohjaamot vuoden 1993 loppuun asti: Hytter till slutet av år 1993: **B** Cabs to the end of year 1993: R <u>- מממממממ</u> 7000000-(02) \bigcirc VÄR I T/COLOURS VA VALKOINEN WHITE HA HARMAA GREY KE KELTAINEN YELLOW VI VIHREÄ GREEN SI SININEN BLUE LI LILA LILAC PU PUNAINEN RED RU RUSKEA BROWN MU MUSTA BLACK 8 (8X) GR7

RADIO, FITTING INSTRUCTION	05.09.1994	Model		No
	01.06.1008	6000	9750	30 E

 3(3)

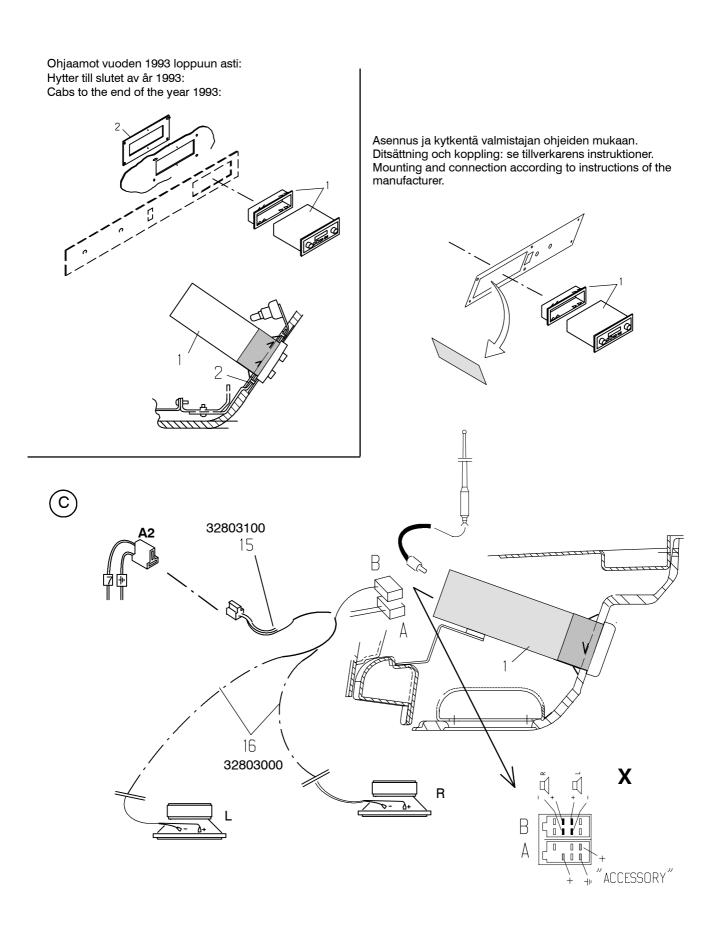



AGRODATA, FITTING INSTRUCTION AGRODATA, MONTAGEANLEITUNG

08.06.1993 15.04.1998

Model/Modell

6000-8750

No/Nr.

39.6

Page /Seite 1(4)

Valmet Agrodata 31774600. Sensor for PTO revs 32775300

Agrodata gives useful information when working on a field. Agrodata consists of an electronic unit and a sensor on the LH side rear wheel (picture A). There is a socket at the rear of the tractor to which can be connected sensors on an implement, e.g. flow meter or piece counter.

Agrodata measures the following units:

1. Working time

5. Liquid amount

2. Area

6. (Revs, PTO)*

3. Speed

7. Number of items

4. Flow

8. Distance travelled

Agrodata has been connected to the fuse F17 (permanent current).

Note! If arch welding is carried out on the tractor, disconnect the battery earth cable.

FITTING AGRODATA:

- Disconnect the battery earth lead. Open the lever console side panel and the switch panels at the upper part of the console.
- Cut a marked hole in the shorter switch panel for electronic unit 1, and fasten the unit to the panel with screws 3 and a support plate 2.
- Cut an opening in the longer panel for switch frame 16. Fit the frame. Fasten rocker switches 5 and 4 to the upper holes. Fasten lens "RPM" on the upper switch and "Km/h" on the lower switch
- Note that the panels change places, the short panel + eletronic unit comes foremost.
 Connect wires 2-8 and 19 of the wire loom 18 to the electronic unit rear side according to picture B
 - Connect the wire loom connector S46 to the upper switch and S50 to the lower switch.
- Pass the wire loom other parts down to the lever console. Fasten the panels.

Valmet Agrodata 31774600. Zapfwellensensor 32775300

Die Agrodata besteht aus einer elektronischen Einheit, einem Sensor am Hinterrad (Bild A) und, je nach Ausrüstung, einem Zapfwellendrehzahlgeber. Am Traktor befindet sich hinten eine Steckdose, an die am Gerät befingliche Geber, wie Durchflußmesser oder Zähler angeschlossen werden können.

Die Agrodata zeigt die folgenden Werte an:

1. Arbeitszeit

5. Flüssigkeitsmenge

2. Fläche

6. Zapfwellendrehzahl*

3. Geschwindigkeit

7. Stúckzahl

4. Durchfluß

8. Zurückgelegte Strecke


*Zusatzausrüstung, siehe Seite 4/4.

Die Agrodata wird an die Sicherung F17 (Dauerversorgung) angeschlossen.

Achtung! Bei Schweißarbeiten am Traktor das Minuskabel der Batterie abklemmen.

EINBAU DER AGRODATA:

- Minuskabel der Batterie abklemmen. Seitliche Abdeckung des Gangschaltunggehäuses und oberen Instrumentenbretter entfernen.
- Vorbereitete Öffnung für die Anzeigeeinheit 1 im kürzeren Instrumentenbrett ausschneiden und Einheit mit Schrauben 3 und Stützblech 2 befestigen.
- Vorbereitete Öffnung für die Halterung 16 der Schalter im längeren Instrumentenbrett ausschneiden. Halterung befestigen. Kippschalter 4 und 5 in die obersten Öffnungen links nach Abbildung einbauen. Schildchen "RPM" im oberen und "km/h" im unteren Schalter befestigen.
- Die Instrumentenbretter tauschen beim Wiedereinbau ihren Platz: das kürzere mit der Agrodataeinheit kommt nach vorn. Die Leitungen 2–8 und 19 des Kabelsatzes 18 der Agrodata nach Bild B ansließen. Kabelschuh S49 an den oberen und Kabelschuh S50 an den unteren Schalter anschließen.
- Übrige Kabel nach unten in das Ganghebelgehäuse ziehen und Abdeckungen befestigen.

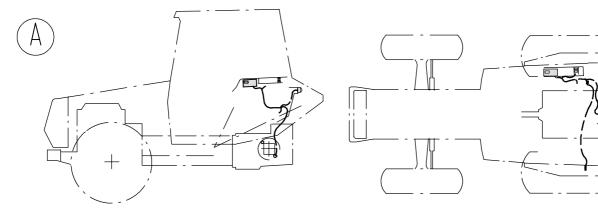

^{*}optional, see page 4/4.

A	GRODATA,	FITTING INSTRUCTION
A	GRODATA,	MONTAGEANLEITUNG

08.00.1993 15.04.1998

Model/Modell

6000 - 8750

No/Nr. **39.6** Page /Seite 2(4)

- Fasten the support iron 11 under the nut of the check link attachment (240 Nm) and change two opposite LH side rear wheel bolts into measuring bolts (12-15). Adjust distance between the magnet and the bolts to about 5 mm. Note! The yellow dot on the magnet should be turned against the bolt. Use locking fluid Loctite 242 on the threads.
- Pass the sensor wire along the cab rear side structure. Slacken the cover in the lever console bottom and draw the sensor wire into the lever console.
- Connect in the console the sensor wire connector to the connector X54 of the wire loom 18 (see picture B).
 Connect the wire loom earth cable shoe /4 under the earth nut (/4) in the lever console bottom.
 Connect the wire loom connector X55 to the cab wire loom (rear floor) corresponding connector (wire nr 17, black).
- Draw the wire loom wires for the rear socket (7, X53) from the lever console (in the upper rear part of the consol there is a fastener for the wire loom) along the beam under the rear window.
 Remove the rubber plug on the beam and push the wires out through the hole.
- Change the trailer socket bracket into bracket 6.
 Fasten the tractor's own socket into the middle hole of the bracket (do not disconnect the wires).
- Connect wires to the Agrodata socket 7 (X53, see page 3 (rear view of socket)). Fasten the socket onto the bracket 6. Connect the battery cable.
- Read the Operator's Manual of Agrodata and input certain start values into the Agrodata.
 Check the function of the Agrodata (concerning possible malfunctions, see Service Manual). The wiring of implements has been shown in picture C.

- Befestigungsteil 11 an der Konsole des linken Seitenbegrenzers unter den Muttern der Befestigungsschelle befestigen und zwei gegenüberliegende Radbolzen gegen Meßbolzen (12–15) auswechseln Luftspalt auf ca. 5 mm einstellen. Magnete so einbauen, daß die gelbe Kennzeichnung sichtbar ist. Sicherung der Schrauben mit Loctite 242.
- Kabel des Gebers im hinteren Teil der Kabine verlegen. Deckel auf dem Boden des Schaltgestängegehäuses entfernen und Kabel in das Gehäuse einziehen.
- Geberleitung an Kabelschuh X54 des Kabelsatzes 18 anschließen (Abb. B).
 Erdungschuh /4 des Kabelsatzes an Erdungsschraube /4 am Boden des Schaltgestängegehäuse befestigen. Kabelschuh X55 an Anschluß des Kabelsatzes der Kabine (Kabel 17, schwartz) ansließen.
- Die zur Steckdose führenden (7, X53) Leitungen des Kabelsatzes aus dem Schaltgestängegehäuse herausführen (Kabelbefestigung im Gehäuse hinten – oben). Kabel entlang dem Balken unter der Heckscheibe führen, Gummidekkel im Balken entfernen und Kabel durchführen.
- Halter der Anhängersteckdose gegen Halter 6 austauschen. Anhängersteckdose in der mittleren Öffnung ohne Abklemmen der Kabel befestigen.
- Zur Agrodata Steckdose 7 (X53) kommende Kabel an die betreffenden Anschlüsse nach Abbildung anschließen (Ansicht der Steckdose von hinten). Steckdose an Halter 6 befestigen. Batterie anschließen.
- Bedienungsanleitung des Traktors durchsehen, Grunddaten eingeben und Funktion prüfen (bei Störungen Werkstattshandbuch hinzusiehen).
 Verkabelung der Geber der Arbeitsgeräte nach Abbildung C.

	1	31774600	Agrodata	Agrodata	Agrodata	Agrodata	
1	1	31702600	.Näyttölaite	Teckenförster	Display unit	Bildschirm	
2	1	32552100	.Tukilevy	Stödskiva	Support plate	Stützplatte	
3	6	HN9031	.Ruuvi	Skruv	Screw	Schraube	
4	1	31682100	.Keinukytkin	Vippströmbrytare	Switch	Schaukelschalter	
	1	31707900	.Linssi	Lins	Lens	Linse	Km/h
5	1	31682100	.Keinukytkin	Vippströmbrytare	Switch	Schaukelschalter	
	1	31707800	.Linssi	Lins	Lens	Linse	RPM
6	1	32236700	.Kannatin	Hållare	Support	Halter	
7	1	31720300	.Pistorasia	Stickdosa	Plug socket	Steckdose	
8	3	HD9042	.Ruuvi	Skruv	Screw	Schraube	
9	1	31702900	.Pistoke	Stickkontakt	Contact plug	Steckkontakt	
10	1	31703200	.Anturi	Givare	Sensor	Geber	
11	1	31703300	.Kannatin	Hållare	Support	Halter	
12	2	HE6958	.Ruuvi	Skruv	Screw	Schraube	
13	2	31720500	.Magneetti	Magnet	Magnet	Magnet	
14	2	31720600	.Aluslaatta	Bricka	Washer	Scheibe	
15	2	32249200	.Ruuvi	Skruv	Screw	Schraube	
16	1	30944400	.Paneeli	Panel	Panel	Paneel	
17	1	30944500	.Peitelevy	Täckplatta	Covering plate	Deckplatte	
18	1	32213500	.Johdinsarja	Ledningssats	Wiring set	Verkabelung	
			-		-	_	

AGRODATA, FITTING INSTRUCTION AGRODATA, MONTAGEANLEITUNG

08.08.1993 15.04.1998


Model/Modell

6000 - 8750

No/Nr.

39.6

Page /Seite 3(4)

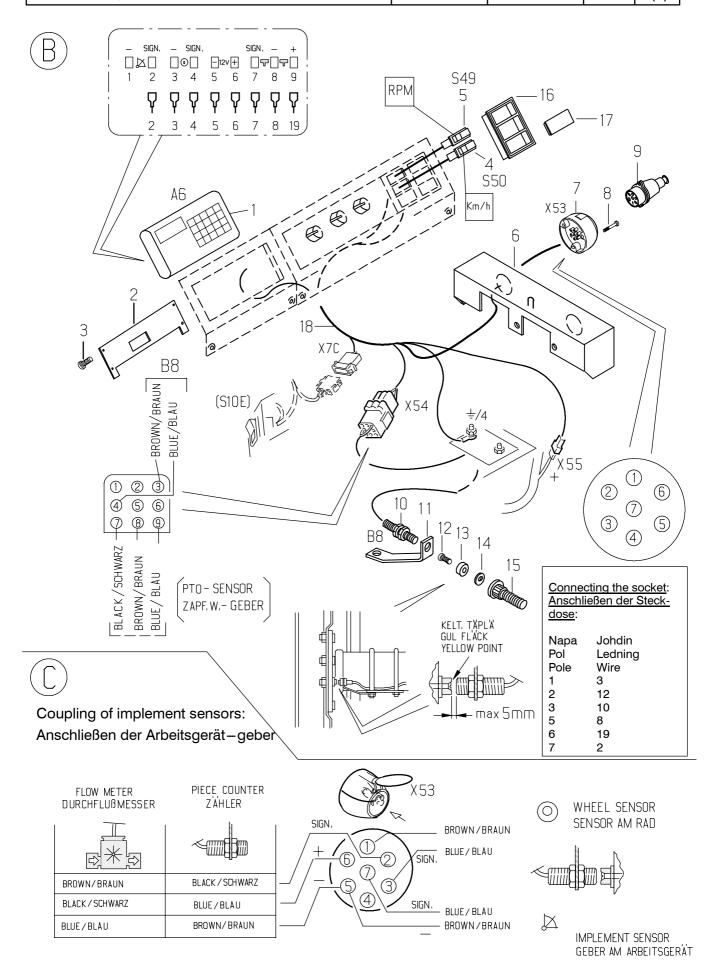

PTO REVS SENSOR, FITTING INSTRUCTION
MONTAGEANI FITUNG DES ZAPEWELLENGEBERS

08.06.1993
15.04.1998

Model/Modell

No/Nr.

Page /Seite 4(4)

6000-8750 **39.6**


Sensor for PTO revs 32775300

- This sensor is used as an optional equipment for Agrodata. Then the switch S49 (see picture B) selects PTO revs display or revs on an implement (if the implement has a revolution speed sensor).
- After fitting the sensor it must remain a free radial space of 62 mm measured from the end of the PTO shaft. (SFS-4572 standard: R 83 mm).
 That is why all transmission shafts cannot be used together with the PTO speed sensor.

FITTING:

- Fasten the magnet 6 at the base of the PTO shaft (ø 35mm type) (fixing screw on magnet).
- Fasten the wire loom to the fastener with plastic tie 5.
 - Fasten the fastener 4 to the threaded hole at the rear side of the PTO housing (remove the protective plug). Fit between the fastener and housing two washers. Direct the fastener towards the shaft center point and tighten the screw.
- Fit the sensor 3 so that the distance between the sensor and the magnet becomes 3-4 mm.
 Pass the wire through the cab rear side lead in point and connect wires to connector X54 poles 7, 8 and 9, see picture B.

1	1	HA6356	Ruuvi	Skruv
2	1	JD0416	Aluslaatta	Bricka
3	1	31703000	.Anturi	Givare
4	1	32775200	Kannatin	Hållare
5	2	SA1900	Side	Band
6	1	32775100	Magneetti	Magnet
7	1	32775400	Suojakuppi	Skyddskopp

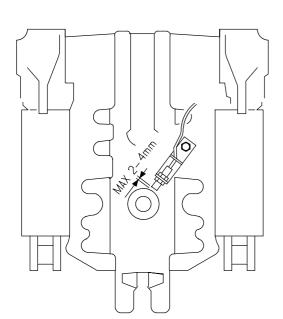


Zapfwellendrehzahlgeber ... 32775300

- Dieser Geber ist eine Zusatzausrüstung der Agrodata. Man kann dabei durch Betätigung des Schalters S49 (Abb. B) entweder die Zapfwellendrehzahl oder die Drehzahl des Arbeitsgerätes anzeigen (wenn dieses mit einem Drehzahlgeber ausgestattet ist)
- Nach Montage des Drehzahlgebers hat der Freiraum um das Ende der Zapfwelle einen Radius von 62 mm (SFS-4572 Standard: 83 mm).
 Aus diesem Grunde können bei eingebautem Drehlzahlgeber nicht alle Gelenkwellentypen verwendet werden.

– EINBAU:

- Magnet 6 auf Zapfwelle montieren (paßt nur für 35 mm – Zapfwelle). Befestigungsschraube im Magneten.
- Kabel 5 am Geberhalter 4 befestigen. Halter 4 mit Schraube 1 und zwei untergelegten Scheiben 2 am Zapfwellengehäuse befestigen. Halter zur Wellenmitte ausrichten und Schraube anziehen
- Geber 3 einbauen und Luftspalt auf 3–4 mm einstellen. Kabel durch Durchführung im hinteren Teil der Kabine ziehen und an Naben 7,8 und 9 der Verbindung X54 (Abb. B) anschlißen.

Screw	Schraube
Washer	Scheibe
Sensor	Geber
Support	Halter
Band	Band
Magnet	Magnet
Shield cup	Schutz

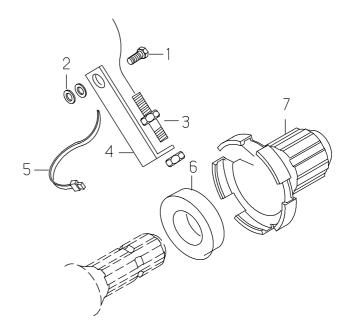

MAIN CURRENT SWITCH, fitting instruction	16.08.1993	Model	Code	Page
	21.03.2000	6000-8950	39.7	1(4)

x) 6800: -F03311, 50-series:-F10105, 6000-8400: -F17108, xx) : -G24513

With aid of the main switch, current to all tractor can be switched off (except the fuse F2-> radio, speedometer) e.g. when you leave the tractor. This prevents possible fire risk caused by short circuits in the electic system.

The switch lever can be removed, if needed.

FITTING:


- Remove the engine hood side plates. Disconnect the battery earth lead.
- 32599000: Fit the fastener 2 to the holes on the battery holder (drill holes if needed). Fasten the main current switch 6 (note the nut caps 8).
- Disconnect the starter motor +lead and push protective tube 1 onto the cable. Connect the lead to the main switch. Connect the lead 5 to the starter motor and to the main switch. Check that the leads do not rub the other tractor parts. Connect the battery earth lead.
- Drill a Ø 37 mm hole through the side plate (see fig.), if not made earlier. Paint the hole edges.
 Fasten the switch lever strap 9 under the nut of the side plate attachment. Fasten the sticker 7 (see fig.).
- 32599010: Fit the fastener 2A to the holes on the battery holder. Fasten the main current switch 6.
- Disconnect the starter motor +lead and connect the lead to the main switch. Connect the lead 5 to the starter motor and to the main switch.
 Check that the leads do not rub the other tractor parts. Connect the battery earth lead.
- Drill a Ø 37 mm hole through the side plate (see fig.), if not made earlier. Paint the hole edges.
 Fasten the switch lever strap 9 under the nut of the side plate attachment (6-cyl. + visco: drill a hole Ø 7mm) Fasten the sticker 7 (see fig.).
- 32599020: Fit the fastener 2 under the engine fastening screws (tightening torque 90Nm, M10).
 Fasten the main current switch 7 (+ strap 9).
- Disconnect the starter motor +lead and connect the lead to the main switch. Connect the lead 6 to the starter motor and to the main switch. Check that the leads do not rub the other tractor parts. Connect the battery earth lead.
- Fasten the sticker 5 (see fig.).

MAIN CURRENT SWITCH, fitting instruction	16.08.1993	Model	Code	Page
	21.03.2000	6000-8950	39.7	2(4)

- 33348700: Fit the fastener 2C to the holes on the side plate holder. Fasten the main current switch 7 (+ strap 9).
- Disconnect the starter motor +lead and connect the lead to the main switch.
 Connect the lead 6 to the starter motor and to the main switch. Check that the leads do not rub the other tractor parts. Connect the battery earth lead.
- Fasten the sticker 5 to the lower side plate (see fig.).

	1	32599000	Päävirtakytkin	H.strömbrytare	Main switch	H.stromschalter	Interr. principal	- F17108 6000-8750
1 2 3	1 1 4	32588500 32507300 HA6322	.Suojus .Teline .Ruuvi	Skydd Konsol Skruv	Shield Bracket Screw	Schutz Gestell Schraube	Protection Support Vis	-F17108
4 5 6 7	4 1 1 1	JB8904 32613900 32587800 32592620	.Mutteri .Johdin .Päävirtakytkin .Tarra	Mutter Ledning H.strömbrytare Dekal	Nut Wire Main switch Sticker	Mutter Leitung H.stromschalter Aufkleber	Ecrou Fil électrique Interr. principal Autocollant	L=850
8 9 15	2 1 1	32692400 32670300 HD9030	.Suoja .Hihna .Ruuvi	Skydd Rem Skruv	Cover Belt Screw	Schutz Riemen Schraube	Couvercle Courroie Vis	
	1	32599010	Päävirtakytkin	H.strömbrytare	Main switch	H.stromschalter	Interr. principal	F17109-G24513
2A 3 3A	1 2 2	33165700 HA6323 HA6322	.Teline .Ruuvi .Ruuvi	Konsol Skruv Skruv	Bracket Screw Screw	Gestell Schraube Schraube	Support Vis Vis	F17109-
5 6 7 8 9 11 12	1 1 1 2 1 2 4	32613900 32587800 32592620 32692400 32670300 JB8904 JD0408	.Johdin .Päävirtakytkin .Tarra .Suoja .Hihna .Mutteri .Aluslevy	Ledning H.strömbrytare Dekal Skydd Rem Mutter Bricka	Wire Main switch Sticker Cover Belt Nut Washer	Leitung H.stromschalter Aufkleber Schutz Riemen Mutter Scheibe	Fil électrique Interr. principal Autocollant Couvercle Courroie Ecrou Rondelle	L=850
14	2 1	JD0406 HD9030	.Aluslevy .Ruuvi	Bricka Skruv	Washer Screw	Scheibe Schraube	Rondelle Vis	Visco Visco
16	1	30234000 JB8903	.Läpiv.rengas .Mutteri	Genomf.ring Mutter	Inlet ring Nut	Durchf.sring Mutter	Anneau d'entrée Ecrou	Visco
10	1	32599020	Päävirtakytkin	H.strömbrytare	Main switch	H.stromschalter		6000-6800, 4-cyl.
2B	1	33337100	.Teline	Konsol	Bracket	Gestell	Support	6250Hi – 6850Hi 6200 – 6800
5 6 7 9 10 12	1 1 1 2 2	32592620 33337600 32587800 32670300 JD0406 HA6313	.Tarra .Kaapeli .Päävirtakytkin .Hihna .Aluslevy .Ruuvi	Dekal Kabel H.strömbrytare Rem Bricka Skruv	Sticker Cable Main switch Belt Washer Screw	Aufkleber Kabel H.stromschalter Riemen Scheibe Schraube	Autocollant Câble Interr. principal Courroie Rondelle Vis	L=310
	1	33348700	Päävirtakytkin	H.strömbrytare	Main switch	H.stromschalter	Interr. principal	6900-8750, G24514— 8050Hi—8950Hi
2C 3 4 5	1 4 2 1	33346400 HA6322 JB8904 32592620	.Pidin .Ruuvi .Mutteri .Tarra	Klämma Skruv Mutter Dekal	Clamp Screw Nut Sticker	Klammer Schraube Mutter Aufkleber	Agrafe Vis Ecrou Autocollant	6900 – 8750
6 7 9 10 12	1 1 1 4 2	33337600 32587800 32670300 JD0408 HA6313	.Kaapeli .Päävirtakytkin .Hihna .Aluslevy .Ruuvi	Kabel H.strömbrytare Rem Bricka Skruv	Cable Main switch Belt Washer Screw	Kabel H.stromschalter Riemen Scheibe Schraube	Câble	L=310

MAIN CURRENT SWITCH, fitting instruction	16.98.1993	Model	Code
	21 03 2000	6000 8050	20.7

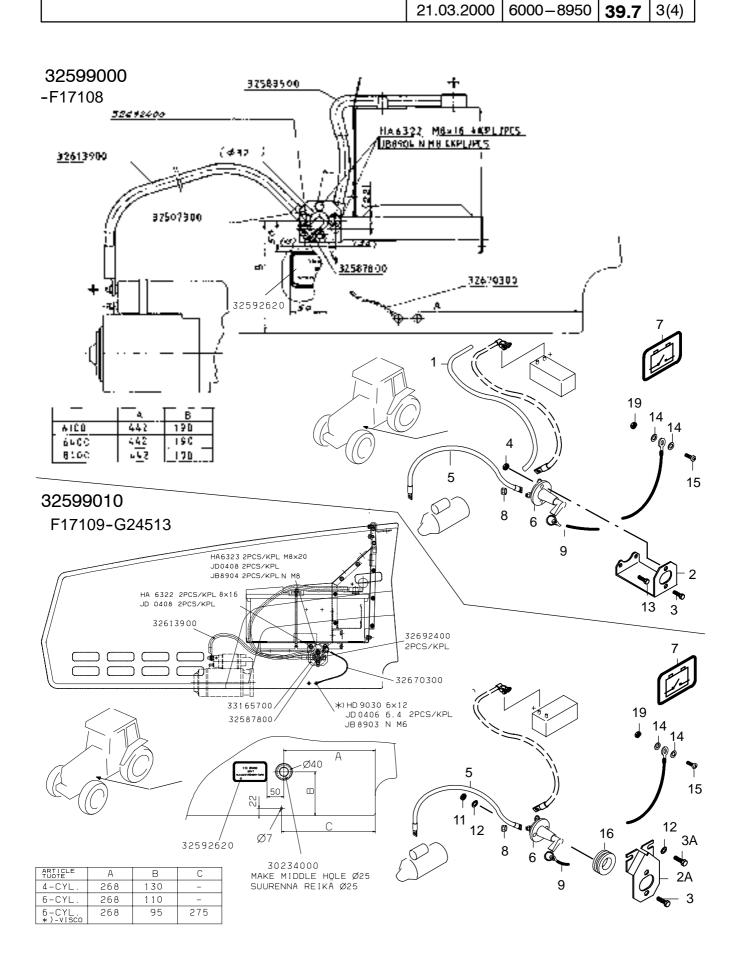


Model

Code

Page

4(4)

21.03.2000 6000-8950

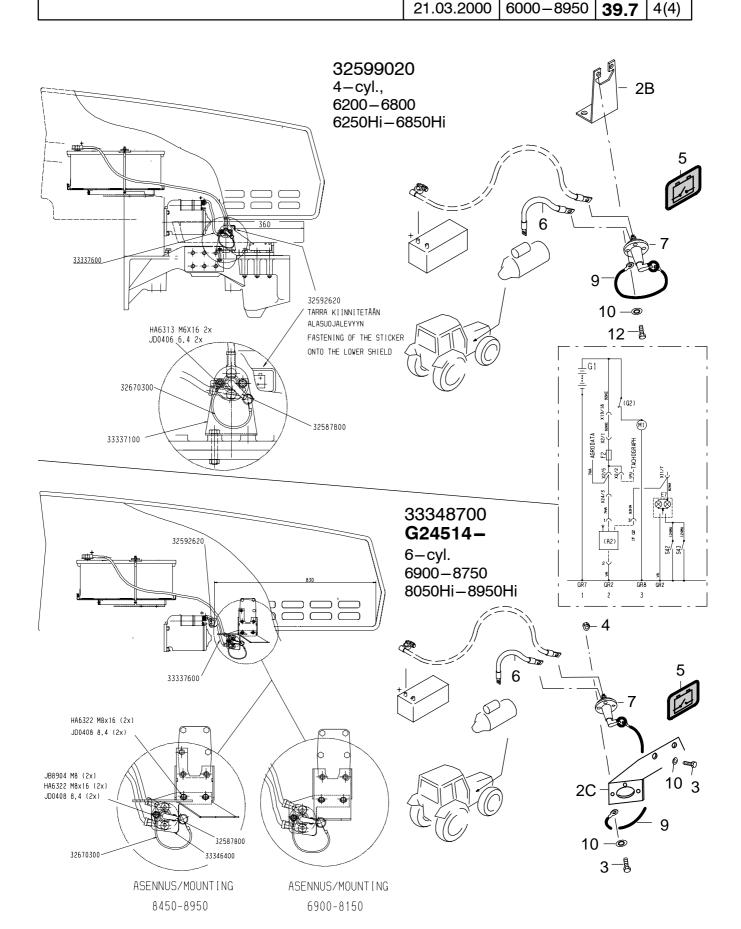

CIGARETTE LIGHTER AND ASH TRAY,		Model	Code	Page
FITTING INSTRUCTION	23.06.1993	6000-8400	39	1(2)

Cigarette lighter and ash tray 32569000

The cigarette lighter is supplied with permanent current via fuse F29. When the parking lights are switched on, also the cigarette lighter has an illumination.

FITTING:


Ash tray 1 is fitted either on the sump on the side panel (if any) or ash tray 7 is fastened with screws on the side panel (see picture).

Fit the cigarette lighter **2** onto the upper hole in the side panel rear part:

- Disconnect the battery earth cable. Remove the lever console side wall and the rearmost cover plate on the side panel. Drill a Ø 28 hole at the upper marking ring.
- Pass the wiring loom connector R4 out of the drilled hole and push rest of wires into the lever console. Connect the connector to the lighter (see picture) and fasten the lighter (fit first the lighter outer ring and after that the lighter).

Connect the earth cable shoe under the screw for the wire lead—in hole in the lever console bottom. Connect connector X16 to the corresponding connector in the cab wiring loom.

Reassemble the tractor and check the function of the cigarette lighter.

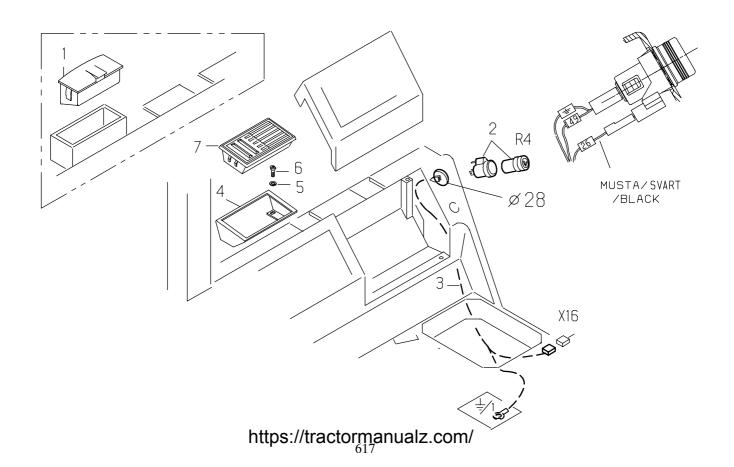

CIGARETTE LIGHTER AND ASH TRAY		Model	Code	Page
FITTING INSTRUCTION	23.06.1993	6000-8400	39	2(2)

2 3 4 5 6 7	1 1 1 1 2 2	32569000 32595300 32615700 32746300 JD0406 HD9030 32746600	Tup.syt+tuhkakTupakansytytin .Johdin .Teline .Aluslevy .Ruuvi .Tuhkakuppi	Tändare + askkopp Tändare Ledning Konsol Bricka Skruv Askkopp	Lighter + ash tray Lighter Wire Bracket Washer Screw Ashtray	Zünder+ asher Zünder Leitung Gestell Scheibe Schraube Ascher
(1	1	32595400	Tuhkakuppi	Askkopp	Ashtray	Ascher)

IMPLEMENT CONTROL SYSTEM	28.07.1993	Model	Code	Page
FITTING INSTRUCTION	08.12.1995	6000-8400	39	1(5)

Implement control system 32669500.

 With this system it is possible to use the electric operational devices of the implements directly from the tractor cab (Standard SFS 5673).

The operational devices that are controlled by the system are most often spindle motors or magnetic valves. The system can be adapted to different chop forage harvesters, plant protection sprayers, snow slings, fertilizer spreaders, balers etc.

The system consists of (fig. 2):

- A) Control unit in the tractor cab.
- B) Wiring set for the control currents, 9-pole contact box inside the cab, and 7-pole implement contact box on the cab rear wall.
- The control unit is individual for each implement, and when connecting a new implement to the rear contact box it is most often also necessary to take a new control unit. The control functions transmitted over the poles 1 to 7 of the implement control box depend on the control unit (the figure 2 shows the outputs of the currents of control unit 32264000 for various control knob positions).

The control unit 32264000 contains 2 pieces of 3-position rocker switches (32276400) and one 2-position (on/off) switch (30944200).

In the place of the last—mentioned, also a 3 position switch can easily be mounted (when mounting the switch, the connection X3T is disconnected and wires 3 and 2 are connected to the pole of the switch, fig. 2).

The control unit has also place reservations for two additional switches.

- The cab contact box (AMP 1-480672-0): The current comes to pole 1 of the contact box through relay K1T controlled by the ignition switch (a 15 A fuse in connection of the relay). Pole No. 3 is grounded.
- Implement contact box X3T (ISO 3732) is similar to trailer light contact box, except that its centre pole is different, to avoid contacting errors.

IMPLEMENT CONTROL SYSTEM	28.07.1993	Model	Code	Page
FITTING INSTRUCTION	08.12.1995	6000-8400	39	2(5)

FITTING:

- Disconnect the battery earth cable. Remove the lever console side panel.
- Drill holes Ø 9 mm (2 pcs) in the RH side side pillar, see picture. Fasten support 2, housing 13 and control unit 1.
- Holder 5 is fitted on the driver's right in the rear wall of the cavity on the lever console.
 Fit the holder into place and mark places for the fixing holes (2 pcs). Drill holes Ø 3 mm.
 Make a 35 x 35 m hole in the middle of the holes for lead in of the wires.
- Push the wiring loom 11 connector "X1T" under the lever console and further through the holder 5 so that the connector is locked in place. Fasten the holder 5 onto the panel.
 Connect the cable from the control unit to the con-
- Detach the socket support in the rear of the tractor.
 Move the socket to a new support 7 (do not disconnect the wires).
- Pass wires to the implement socket 8 ("X3T") inside the beam below the rear window. Pass the wires out of the LH side lead—in hole.
- Fasten the socket 8 onto the bracket 7 at the LH side fastening point.
 Connect wires to the socket, see picture. Fasten the bracket into place.
- Connect the wiring loom 11 connector equipped with an earth shoe under the earth screw in lever console bottom (driver' seat side) (lead—in hole cover fixing screw).
- Draw the wiring loom 11 front end together with other wires along the lever console edge and further along the cable channel under the floor mat into the steering wheel console.
 - Fasten the wire with a clip to the main wiring loom.
- Remove the interval wiper K9 holder fixing screw and fasten inplace a holder of relay 12 ("K1T") in the wiring loom.
 - Connect the interval wiper holder to the relay 12 holder. Push the relays into the holders.

On the latest models the relay "K1T" is fastened in the LH side lower edge of the electric centre protective plastic. There is a fixing screw fitted.

IMPLEMENT CONTROL SYSTEM	28.07:1993	Model	Code	Page
FITTING INSTRUCTION	08.12.1995	6000-8400	39	3(5)


 Connect the wire no 10 (black) to the electric centre connector X5 pin 8.

Connect the wire no 9 which has a cable shoe under the nut of the electric centre supply wire.

 Connect the battery earth cable and check the function of the unit.


	1	32669500	Työkoneohjaus	Kontrollenh. redskap	Arbeitg.steuerung	
1	1	32264000	.Ohjausyksikkö	Kontrollenhet	Control unit	Steuereinheit
2	1	32669400	.Kannatin	Hållare	Support	Halter
3	2	HA8326	.Ruuvi	Skruv	Screw	Schraube
4	2	JB8904	.Mutteri	Mutter	Nut	Mutter
5	1	32213400	.Pidin	Klämma	Clamp	Klammer
6	2	HN6612	.Ruuvi	Skruv	Screw	Schraube
7	1	32236700	.Kannatin	Hållare	Support	Halter
8	1	31720300	.Pistorasia	Stickdosa	Plug socket	Steckdose
9	3	HD9042	.Ruuvi	Skruv	Screw	Schraube
10	1	JB8904	.Mutteri	Mutter	Nut	Mutter
11	1	32669600	.Johdin	Ledning	Wire	Leitung
12	1	32249300	.Rele	Relä	Relay	Relais
13	1	32080200	.Kotelo	Hus	Housing	Gehäuse
14	1	JD0408	.Aluslaatta	Bricka	Washer	Scheibe
15	1	JB8904	.Mutteri	Mutter	Nut	Mutter

IMPLEMENT CONTROL SYSTEM	28.07.1993	Model	Code	Page
FITTING INSTRUCTION	08.12.1995	6000-8400	39	4(5)

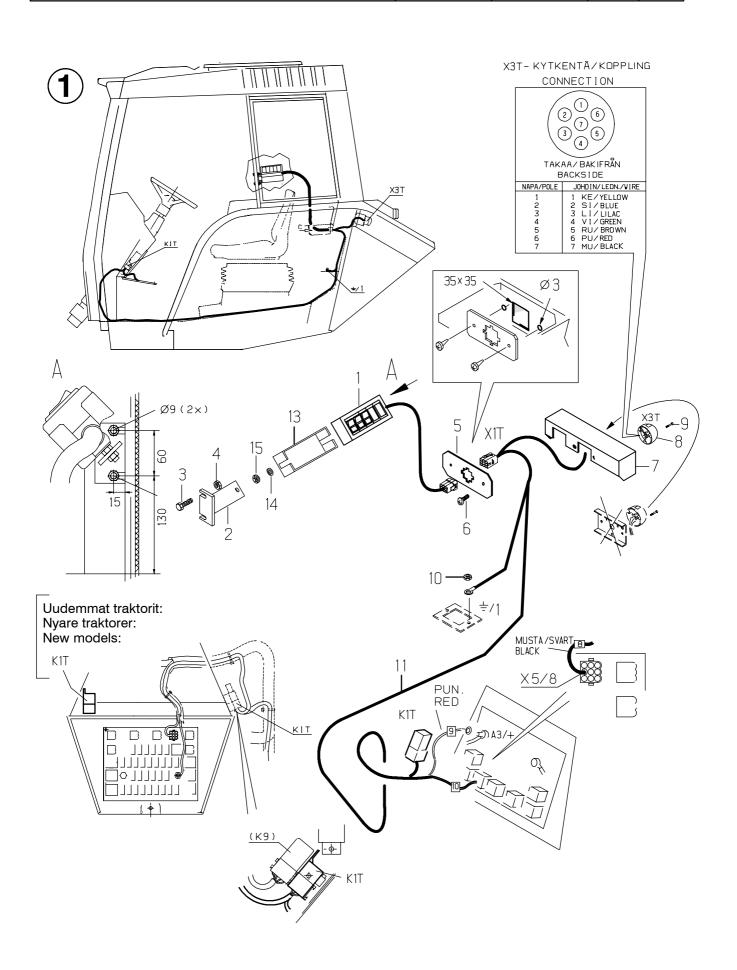

IMPLEMENT CONTROL SYSTEM	28.07.1993	Model	Code
FITTING INSTRUCTION	08.12.1995	6000-8400	39

5(5)

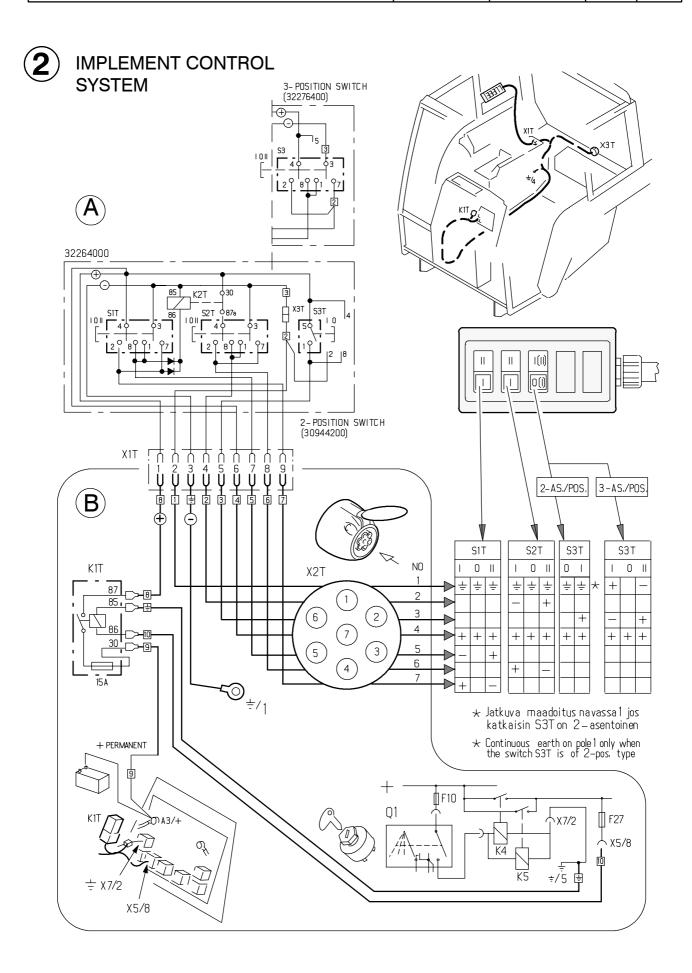

		Malli/Modell	Koodi /Kod	Sivu /Sida
--	--	--------------	---------------	---------------

IMPLEMENT CONTROL SYSTEM	28.07.1993	Model	Code	Page
FITTING INSTRUCTION	08.12.1995	6000-8400	39	1(5)

Implement control system 32669500.

 With this system it is possible to use the electric operational devices of the implements directly from the tractor cab (Standard SFS 5673).

The operational devices that are controlled by the system are most often spindle motors or magnetic valves. The system can be adapted to different chop forage harvesters, plant protection sprayers, snow slings, fertilizer spreaders, balers etc.

The system consists of (fig. 2):

- A) Control unit in the tractor cab.
- B) Wiring set for the control currents, 9-pole contact box inside the cab, and 7-pole implement contact box on the cab rear wall.
- The control unit is individual for each implement, and when connecting a new implement to the rear contact box it is most often also necessary to take a new control unit. The control functions transmitted over the poles 1 to 7 of the implement control box depend on the control unit (the figure 2 shows the outputs of the currents of control unit 32264000 for various control knob positions).

The control unit 32264000 contains 2 pieces of 3-position rocker switches (32276400) and one 2-position (on/off) switch (30944200).

In the place of the last—mentioned, also a 3 position switch can easily be mounted (when mounting the switch, the connection X3T is disconnected and wires 3 and 2 are connected to the pole of the switch, fig. 2).

The control unit has also place reservations for two additional switches.

- The cab contact box (AMP 1-480672-0): The current comes to pole 1 of the contact box through relay K1T controlled by the ignition switch (a 15 A fuse in connection of the relay). Pole No. 3 is grounded.
- Implement contact box X3T (ISO 3732) is similar to trailer light contact box, except that its centre pole is different, to avoid contacting errors.

IMPLEMENT CONTROL SYSTEM	28.07.1993	Model	Code	Page
FITTING INSTRUCTION	08.12.1995	6000-8400	39	2(5)

FITTING:

- Disconnect the battery earth cable. Remove the lever console side panel.
- Drill holes Ø 9 mm (2 pcs) in the RH side side pillar, see picture. Fasten support 2, housing 13 and control unit 1.
- Holder 5 is fitted on the driver's right in the rear wall of the cavity on the lever console.
 Fit the holder into place and mark places for the fixing holes (2 pcs). Drill holes Ø 3 mm.
 Make a 35 x 35 m hole in the middle of the holes for lead in of the wires.
- Push the wiring loom 11 connector "X1T" under the lever console and further through the holder 5 so that the connector is locked in place. Fasten the holder 5 onto the panel.
 Connect the cable from the control unit to the connector.
- Detach the socket support in the rear of the tractor.
 Move the socket to a new support 7 (do not disconnect the wires).
- Pass wires to the implement socket 8 ("X3T") inside the beam below the rear window. Pass the wires out of the LH side lead in hole.
- Fasten the socket 8 onto the bracket 7 at the LH side fastening point.
 Connect wires to the socket, see picture. Fasten the bracket into place.
- Connect the wiring loom 11 connector equipped with an earth shoe under the earth screw in lever console bottom (driver' seat side) (lead-in hole cover fixing screw).
- Draw the wiring loom 11 front end together with other wires along the lever console edge and further along the cable channel under the floor mat into the steering wheel console.
 - Fasten the wire with a clip to the main wiring loom.
- Remove the interval wiper K9 holder fixing screw and fasten inplace a holder of relay 12 ("K1T") in the wiring loom.
 - Connect the interval wiper holder to the relay **12** holder. Push the relays into the holders.

On the latest models the relay "K1T" is fastened in the LH side lower edge of the electric centre protective plastic. There is a fixing screw fitted.

IMPLEMENT CONTROL SYSTEM	28.07.1993	Model	Code	Page
FITTING INSTRUCTION	08.12.1995	6000-8400	39	3(5)

 Connect the wire no 10 (black) to the electric centre connector X5 pin 8.


Connect the wire no 9 which has a cable shoe under the nut of the electric centre supply wire.

 Connect the battery earth cable and check the function of the unit.

	1	32669500	Työkoneohjaus	Kontrollenh. redskap	Arbeitg.steuerung	
1	1	32264000	.Ohjausyksikkö	Kontrollenhet	Control unit	Steuereinheit
2	1	32669400	.Kannatin	Hållare	Support	Halter
3	2	HA8326	.Ruuvi	Skruv	Screw	Schraube
4	2	JB8904	.Mutteri	Mutter	Nut	Mutter
5	1	32213400	.Pidin	Klämma	Clamp	Klammer
6	2	HN6612	.Ruuvi	Skruv	Screw	Schraube
7	1	32236700	.Kannatin	Hållare	Support	Halter
8	1	31720300	.Pistorasia	Stickdosa	Plug socket	Steckdose
9	3	HD9042	.Ruuvi	Skruv	Screw	Schraube
10	1	JB8904	.Mutteri	Mutter	Nut	Mutter
11	1	32669600	.Johdin	Ledning	Wire	Leitung
12	1	32249300	.Rele	Relä	Relay	Relais
13	1	32080200	.Kotelo	Hus	Housing	Gehäuse
14	1	JD0408	.Aluslaatta	Bricka	Washer	Scheibe
15	1	JB8904	.Mutteri	Mutter	Nut	Mutter

IMPLEMENT CONTROL SYSTEM	28.07.1993	Model	Code	
FITTING INSTRUCTION	08.12.1995	6000-8400	39	

4(5)

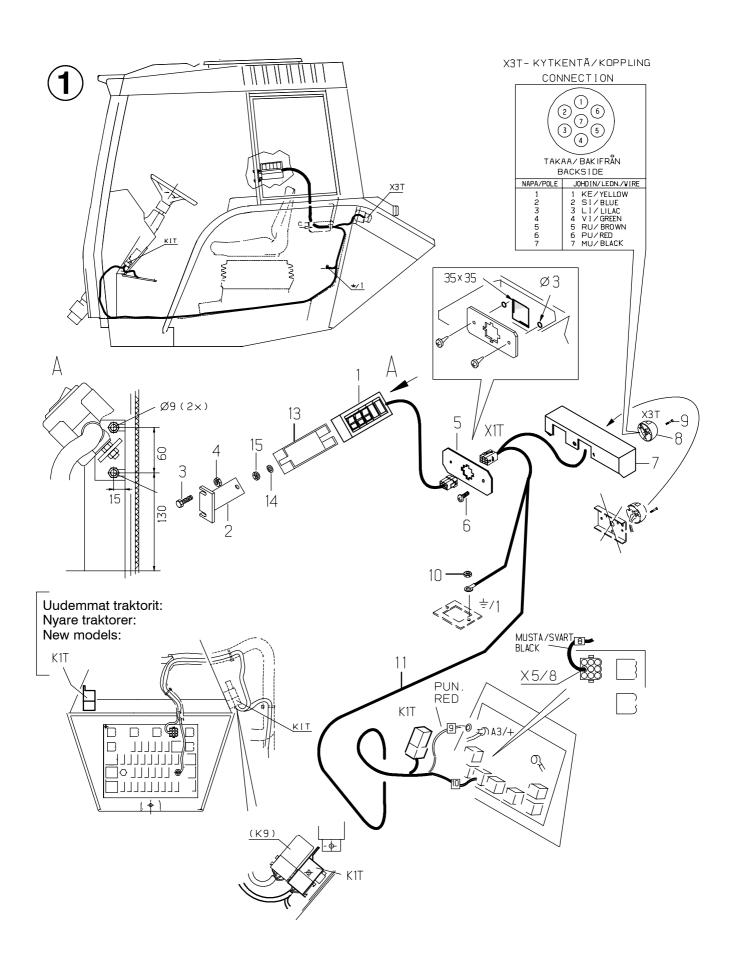


IMPLEMENT CONTROL SYSTEM	28.07.1993	Model
FITTING INSTRUCTION	08.12.1995	6000-8400

5(5)

Code


39

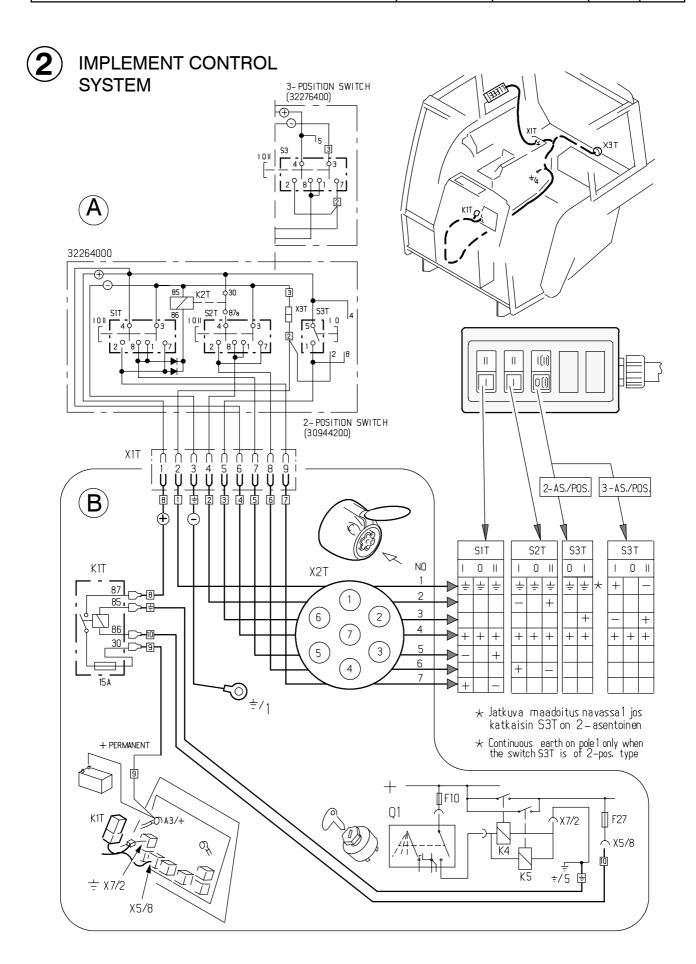

Malli/Modell Koodi /Sivu /Sida

40. Power transmission

41.	Clutch Turbine clutch HiShift
42.	Gearbox
44.	Quick-shift gear, DPS Reverse shuttle 4WD clutch
45.	Final drives
	Final drives Power take-off

 



44 Clutch	15 5. 1996	Model	Code	Page	l
41. Clutch	1. 4. 1997	6000-8750	410	1	

Contents

General (Op. no. 410): Technical data Special tools Clutch, description Fluid coupling (Hi-Trol) Release mechanism of cable type, 659478- Hydraulic type release mechanism, 668103- HiShift	2 3 6 8 9
Repair instructions (Op. no. 411)	
1. Changing disc/release bearing: A. Splitting tractor at clutch B. Changing clutch/disc C. Changing release bearing D. Assembling tractor at clutch	2 2
2. Checks and adjustments: A. Adjusting clutch pedal free travel up to ser. no. 659477 B. Checking the clutch disc and clutch assembly	4
3. Hydraulic coupling (Hi – Trol) A. Checking function of hydraulic coupling B. Stall – test Transfluid – coupling, repair instruction	7
4. Adjusting and repair instruction for cable type release mechanism, 659478 –	10
5. Adjusting and repair instruction for hydraulic type release mechanism, 668103 –	11
6. HiShift	12

Technical data

Single dry-disc clutch of cup spring type, mechanically operated. The clutch assembly is the same on all 6000-8400 tractors. On the tractors with Hi-Trol, the clutch disc has no vibration damping springs.

Manufacturer	F&S
Clutch disc diameter	330 mm
Clutch disc diameter, latest 8200 – 8400 (transmission 460) and 8050 – 8750	
Linings on 6000 – 8100	
Linings on earlier 8400	
Linings on latest 8200 – 8400 (transmission 460) and 8050 – 8750 (ø 350)	organic (asbestos-free)
Releasing force	max. 2950 N
Clutch pressure against flywheel	about 11200 N

Tightening torques

Clutch-flywheel	23 Nm
Pump shaft drive flange-flywheel	46 Nm
Release bearing tube guide sleeve – fuel tank, – 659477	46 Nm
Engine – fuel tank	80 Nm
Flange joint, propeller shaft	35 Nm

Adjustments

Clutch pedal free travel, -659477	20-25 mm
Clutch pedal free travel with cable type release mechanism, 659478	15-20 mm
Clutch lever travel (at wing nut), -659477	10-15 mm
Distance, wing nut-adjuster stop (new disc), -659477	50-55 mm
Distance between cable nut and cab front wall with pedal travel 15-20 mm, 659478	3 mm
With cable type release mechanism, the release lever holt is tightened first fully home	

and then it is unscrewed:
- 3/4 a turn, -662263

- 1/4 a turn, 662264-.

41. Clutch	8. 17. 1990	Model	Code	Page
41. Oluton	1. 4. 1997	6000-8750	410	2

Special tools

Α

Part no Description


ETV 891900 Sleeve for fitting clutch release bearing (Clutch 505 – 905)
ETV 892380 Sleeve for removing clutch release bearing (Clutch 505 – 905)

ETV 893790 Centring tool for clutch disc (Clutch 505 – 905)

Locally prepared tools

ET 893470 Support roller for splitting tractor (Frame and Wheels 505–905)

ET 893480 Support plate (2 pcs) (Frame and Wheels 505-905)

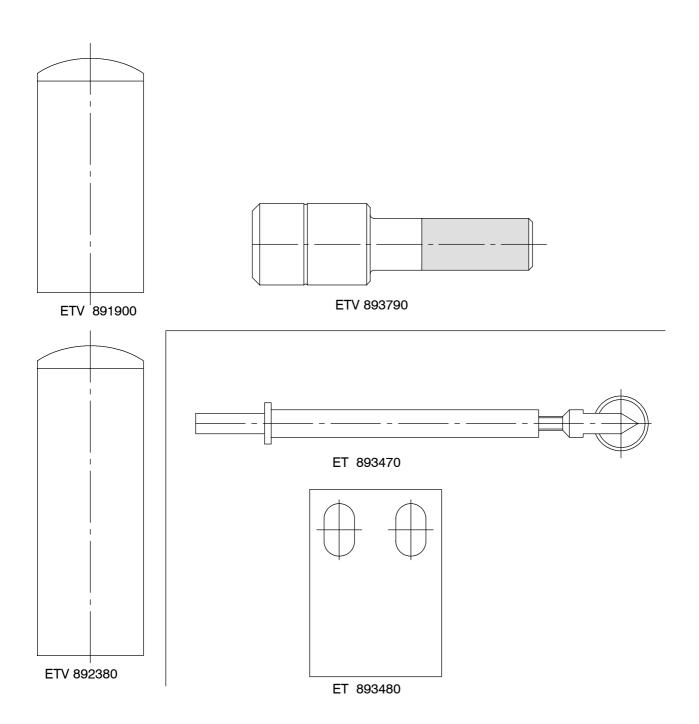

41. Clutch	15. 5. 19 93	Model	Code	Page
111 0141011	1. 11. 1998	6000-8750	410	3

Clutch, description

Important! Construction of clutch release mechanism from ser. no. **659478**, see page **410/8**.

Models 6100-8100 are provided with a single dry-disc clutch of the cup spring type. The clutch is operated mechanically. The disc is provided with damping springs (not on Hi-Trol models). Clutch disc diameter is 330 mm and it has organic linings (asbestos-free) (8400 has ceramic linings).

The clutch transmits power from the flywheel through a tubular shaft (clutch shaft) to the input shaft of the quick—shift gear (or reverse shuttle), and further to the gearbox. The clutch shaft front end is supported with a bearing. The clutch shaft front end splines are engaged with the disc hub splines. The clutch shaft rear end is connected to the gearbox input shaft with a coupling sleeve.

The release bearing is fitted at the end of a tube, the rear end of which is controlled by the clutch lever. At the front end the tube is supported in a guide sleeve

Pedal travel is adjusted by means of the wing nut on the link rod. Disc wear is indicated by the distance between the wing nut and the adjuster stop.

The pump drive shaft, which is driven by the drive flange on the flywheel, runs inside the clutch shaft.

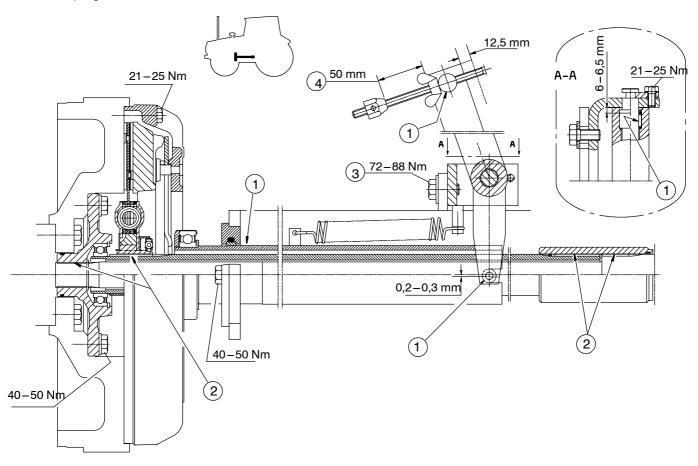


Figure 1. Clutch with release mechanism up to ser. no. 659477.

- 1. Universal grease
- 2. Pressure resistant grease
- 3. Screw for adjusting position of release fork: 0,2-0,3 mm below the centre line.

Thus the position of the release bearing is correct when the tube is in the front position

4. When changing the clutch disc the distance between the wing nut and adjuster stop is set to 50 mm.

NOTE! On HiTech tractors, which have a Powershift Shuttle, there is not a clutch assembly on the flywheel, but only a drive disc, see page **410/4A**.

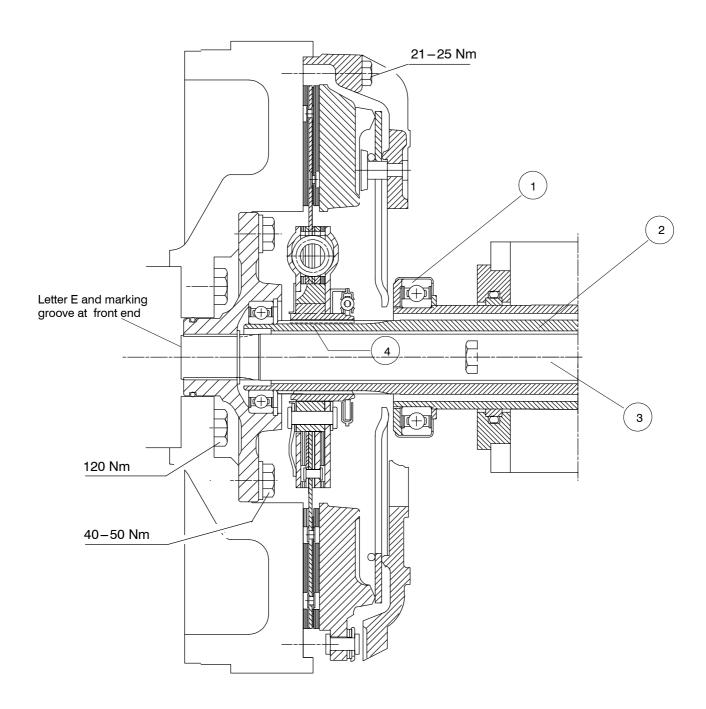


Figure 2. Clutch assembly

- 1. Clutch release bearing
- 2. Clutch shaft
- 3. Pump drive shaft
- 4. Pressure resistant grease on splines

Note! The circlip at the pump drive shaft front end has been removed. The new drive shaft is fitted so that the end which has a groove must be turned to the engine side. Pump drive shafts for tractors 8200 – 8400 have also letter E at the front end of the shaft. Spare part shafts have both the groove and the letter. If you fit a new pump drive shaft onto the earlier tractors, check if there is a cavity (reliever) at the rear end of the crankshaft. If it is there, use a metal plate to prevent the pump drive shaft from moving too much forwards.


Note! On transmission 650 the pump drive shaft diameter is 30 mm. On other transmissions (300, 460) 28 mm. On transmission 650 the hollow clutch shaft is shorter on machines, which have a reinforced DPS—gear.

Model 6250-8950 Code 410

Page 4A


TORSIONAL DAMPER

HiTech

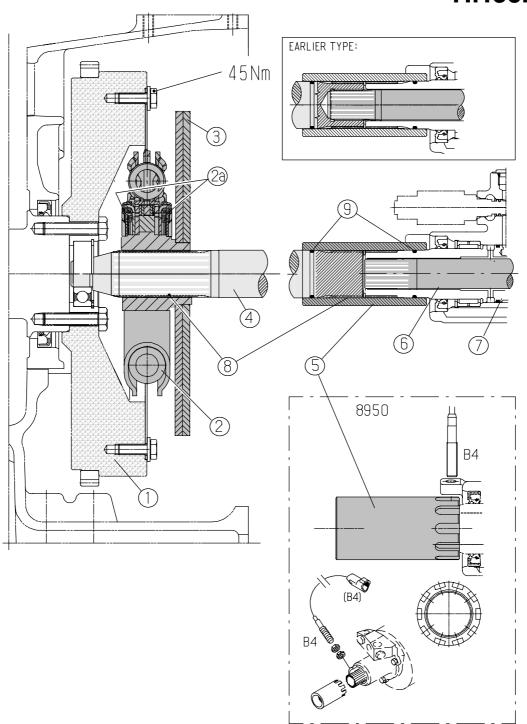


Picture 2A. Drive disc on flywheel on HiTech tractors.

 - 1. Flywheel (different on HiTech tractors)
- 2. Disc damping springs
- 3. Plates which increase mass
- 4. Closed drive shaft (earlier a hollow clutch shafti)
- 5. Coupling sleeve between drive shaft DPS input shaft. Sealed with o rings.
- 6. Pump/PTO drive shaft
- 7. DPS input shaft
- 8. EP grease on splines9. O-rings
- B4: SigmaPower sensor.



41. Clutch	8. 17: 1990	Model	Code	Page
41. Glaten	15. 4. 1995	6000-8750	410	5

Clutch servo

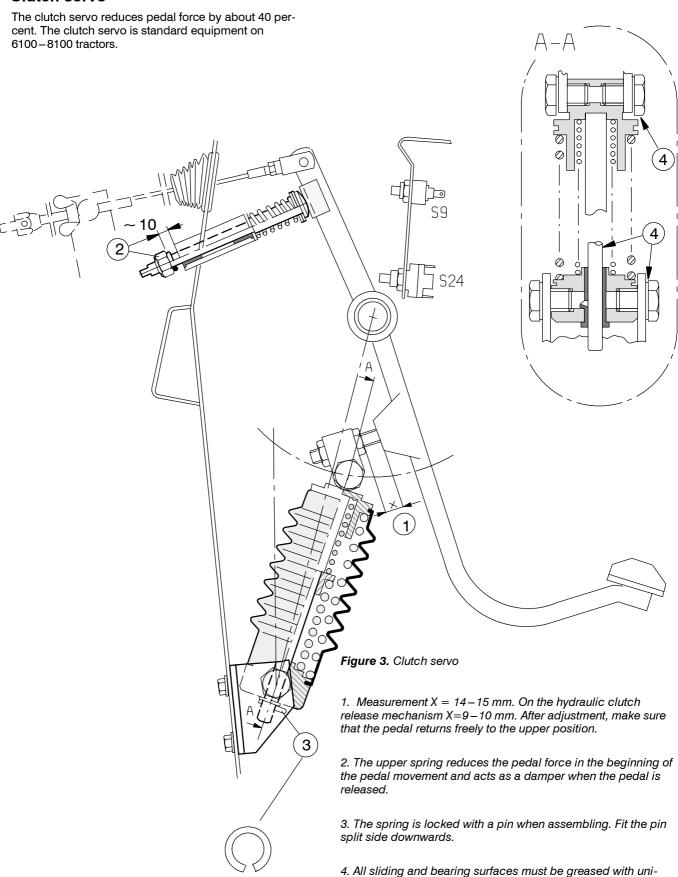


versal grease when fitting the clutch servo.

S9 = Safety circuit breaker (when starting)

S24 = Switch for disengaging the quick-shift gear

41. Clutch	15-8.1992	Model	Code	Page
41. Oldton	1. 1. 1995	6000-8750	410	6

Hydraulic coupling Voith (-658205 and 666066-)

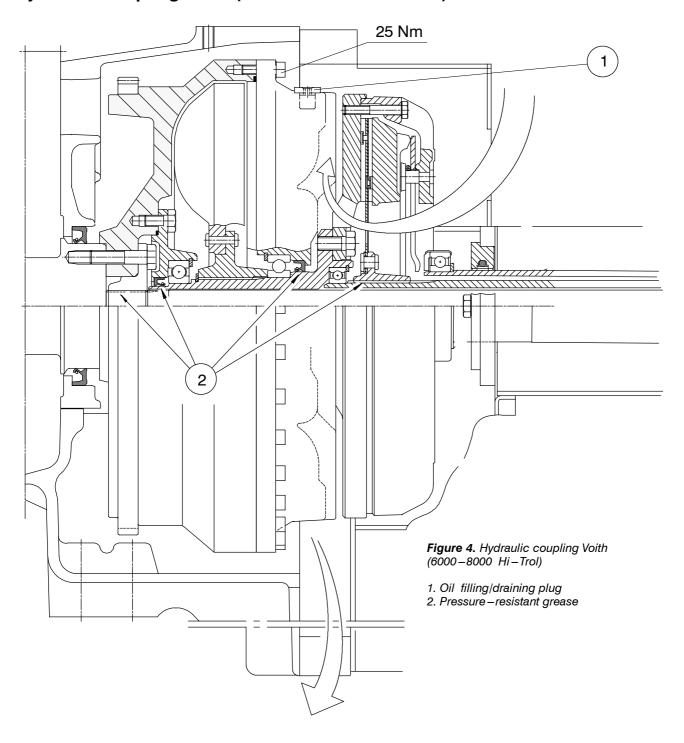

Valmet 6000 – 8000 Hi – Trol – models are equipped with a hydraulic coupling between the flywheel and the clutch. The mechanical clutch (except the disc) and its adjusting values are the same as on models without the hydraulic coupling (see figure 1).

The hydraulic coupling is maintenance—free. It is not even necessary to check the oil level.


Oil quality in hydraulic coupling, see page 130/4. Oil volume in hydraulic coupling, see page 130/4.

Hydraulic coupling type: Voith 390 TD-VA (-658205) or

Voith TD-FVA1 (666066-)

Diameter: 433 mm Slip at max. power: 2 %

Hydraulic coupling Transfluid (658206-666065)

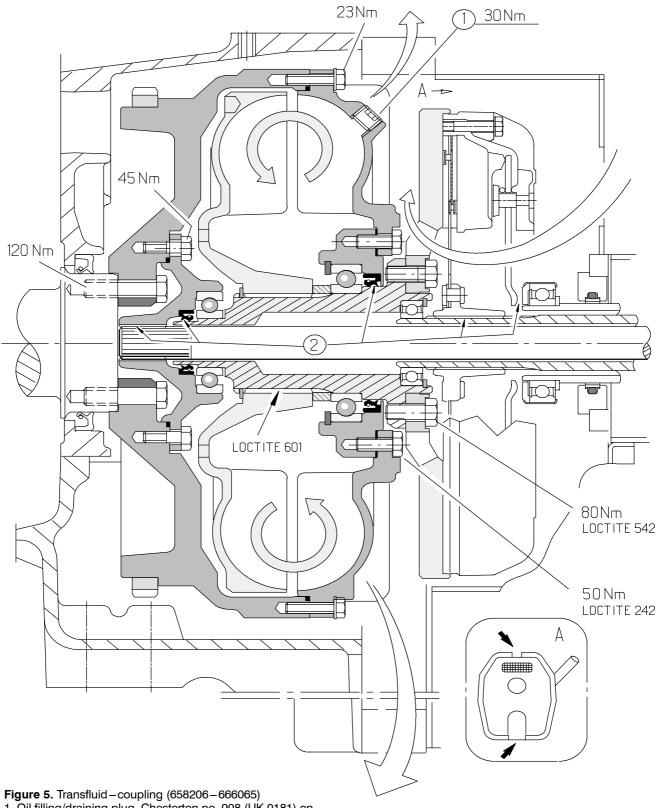

1. Oil filling/draining plug. Chesterton no. 908 (UK 0181) on threads.

2. EP grease


With effect from tractor ser. no 658206 up to ser. no 666065 tractors 6000-8000 have a hydraulic coupling of Transfluid make

Oil quality and volumes in the hydraulic coupling, see page 130/4.



		Model	Code	Page
41. Clutch	4 40 4000	6250Hi-	410	7A
	1. 10. 1999	6650Hi		

Hydraulic coupling on 6250Hi-6650Hi

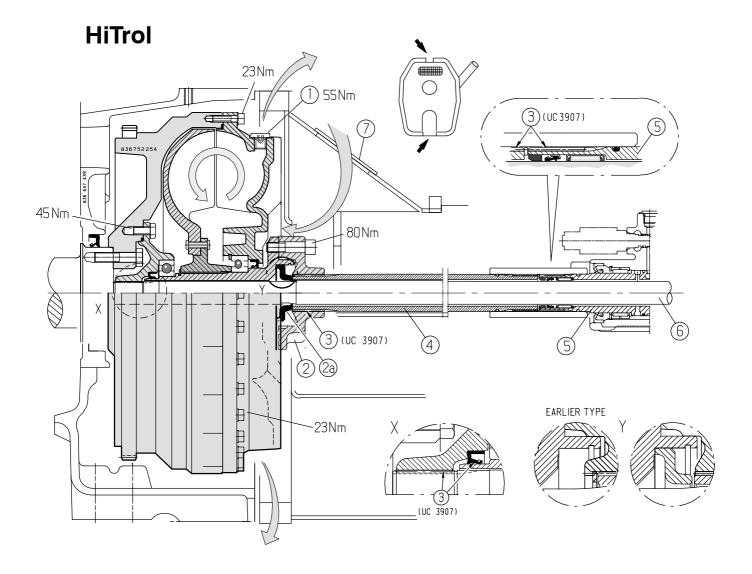


Picture 5a. Hydraulic coupling fitting (Voith TD-FVA1) in 6250Hi-6650Hi tractors (this fluid coupling is the same Voith as used earlier, see page **410/6**).

Oil volumes in the fluid couplings, see page 130/4. Test values and repairs, see page 411/7.

- 1. Oil filling/checking plug. Emptying and filling can be done without removing the coupling from the tractor. NOTE! When emptying the coupling, 0,2 litres oil remain in the coupling, which must be observed during filling.
- 2. New hub flange on HiTech models
- 3. EP-grease
- 4. The clutch shaft is modified (different length, front bearing point removed)
- 5. In the DPS input shaft (new part) there is a space for guide ring (protects seal when the long PTO shaft is fitted), seal and needle bearing (as in DPS 650).
- 6. The long PTO shaft is modified (hardened at the needle bearing and the seal)
- 7. Metal net. In place of the net there is a plate on tractors which do not have the fluid coupling).


	15. 8. ¶993	Model	Code	Page
41. Clutch	1. 1. 1994	6000-8750	410	8

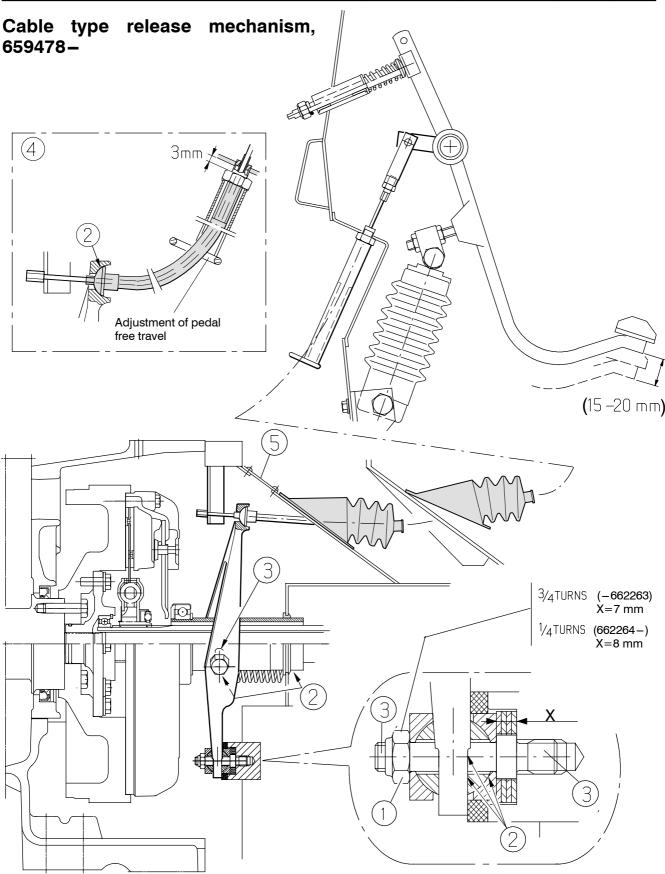

- 1 Tighten the nut first fully home and unscrew it then 3/4 a turn (-662263) or 1/4 a turn (662264-).
- 5. There is an opening through which the cable clutch side end can be detached and the cable can be changed, if needed, without splitting the tractor.

- 2. Universal grease
- 3. Loctite 242
- 4. Pedal free travel is adjusted by adjusting the distance between the cab wall and the nut to 3 mm. https://tractormanualz.com/

Hydraulic type clutch release mechanism, E44315-

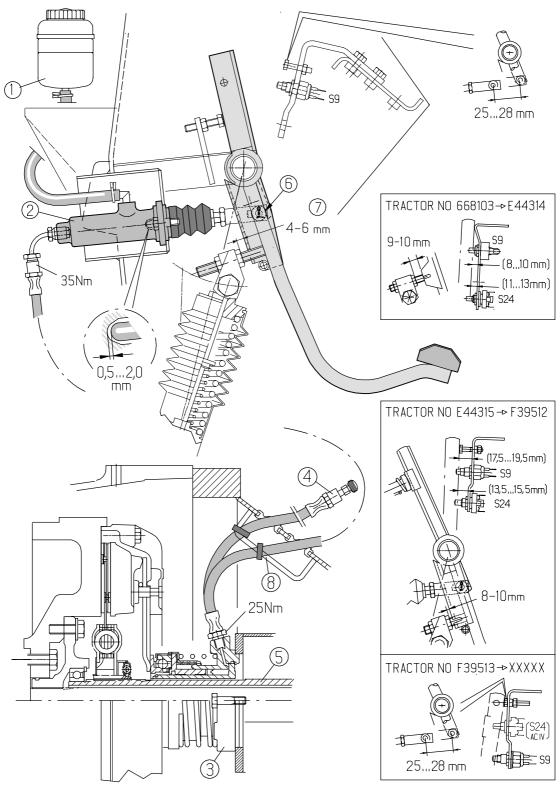


Picture 7. Clutch release mechanism

- 1. Reservoir (volume 2 dm³). Brake fluid SAE J1703.
- 2. Master cylinder.
- 3. Release bearing slave cylinder (F&S).4. Bleeding nipple. The system can also be filled through this hose
- 5. Clutch shaft. The shaft is thinner at the slave cylinder
- 6. Universal grease
- 7. Adjusting value of clutch pedal power assistance

Note! From tractor ser. no. F39513

incl. the switch S24 has been removed and the safety switch S9 has been moved to the support lower hole. On E-models there is further switch S24 and it is fitted to the support upper hole.

41. Clutch Model Code Page 6000-8750 410 10

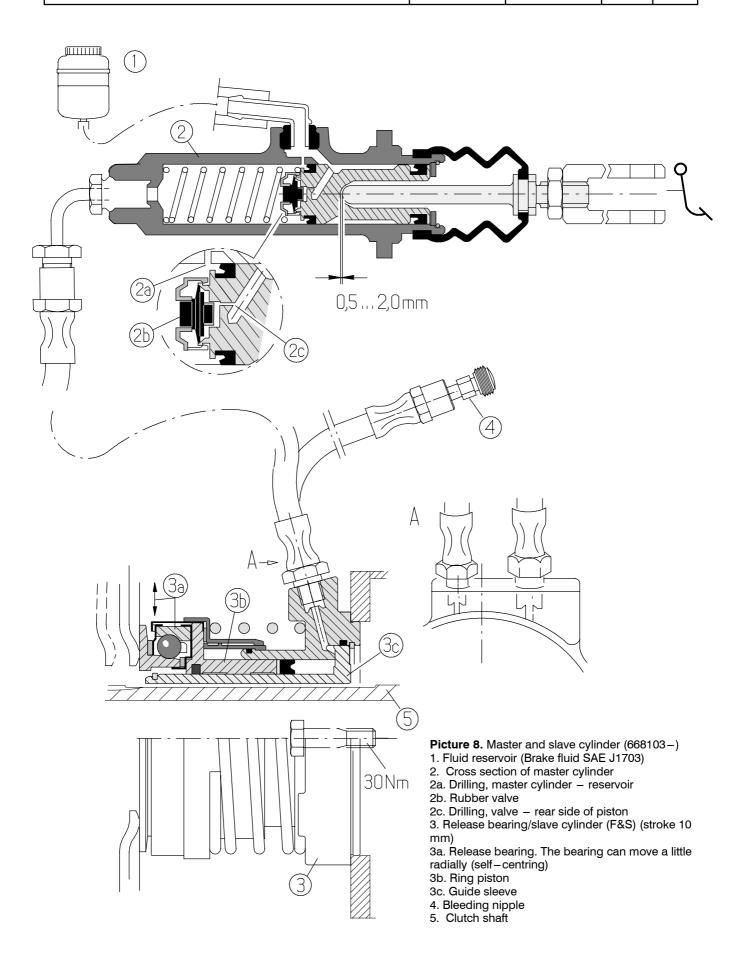


		Model	Code	Page
41. Clutch	1. 4. 1997	6000-8750	410	11

HiShift, description

Repair instructions, see pages 411/12-14.

HiShift (option) controls the clutch pedal electro—hydraulically and it is unnecessary to depress the clutch pedal with the foot. HiShift includes a hydraulic block attached to the cab front wall with aid of the bracket, a new clutch pedal, a new clutch fluid reservoir and electric parts.

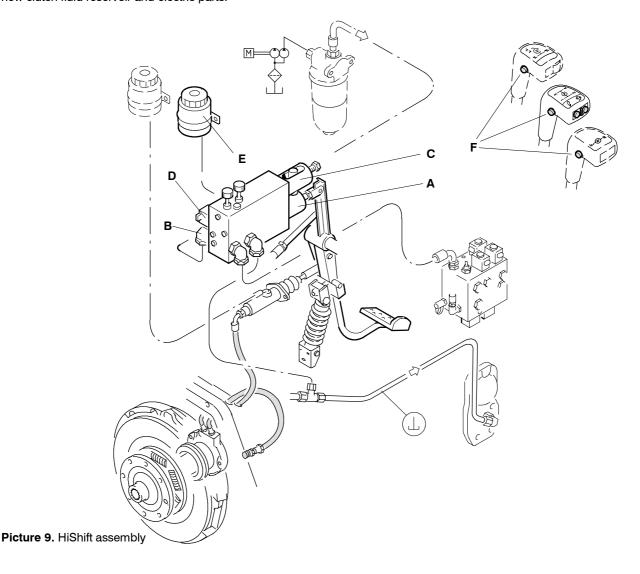

Function of the hydraulic part

The working cylinder piston (A) pushes the clutch pedal down (working pressure from the low pressure circuit). The working pressure is controlled with the solenoid valve (B, Y14), which in turn is controlled with aid of the push buttons (F) in the gear lever knobs.

When the solenoid valve (B) is energised (one of the buttons is depressed), the hydraulic pressure pushes the pedal down. When the button is released (solenoid unenergised), the permanent hydraulic pressure on the piston rod side forces the piston to move inwards and the clutch pedal returns to the upper position.


Function of the damping part

The damping cylinder has been connected to the clutch fluid reservoir (E) by a hose.

When the working cylinder piston (A) releases the clutch, it pulls the damping cylinder piston (C) mechanically out by the pin and the damping cylinder is filled with clutch fluid via the filling valve.

When the working cylinder solenoid valve is unenergised (push button is released), the working cylinder piston (pedal) rises first quickly the extent of the oblong hole in the damping piston and then slower, because the return flow of the clutch fluid into the reservoir is restricted.

The damping cylinder restriction can be changed by the solenoid valve (D, Y15) so that when the driving speed is less than 4 km/h, the solenoid is energised and the clutch pedal rises up slower. With speeds over 4 km/h the solenoid is unenergised and the pedal rises faster. When the shuttle lever button is used, the pedal always rises slower regardless of the tractor driving speed.

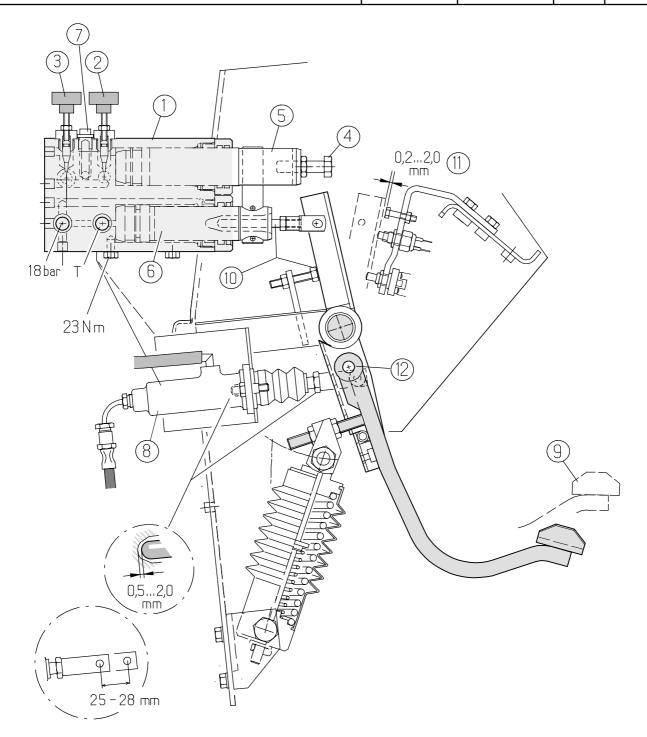

Picture 10. HiShift hydraulic block and clutch pedal

- 1. HiShift hydraulic block
- 2. Adjustable restriction for clutch pedal rising speed
- 3. Adjustable restriction for clutch pedal rising speed
- 4. Adjusting screw for adjusting position of knee point (knee point is a point, where clutch starts to slip and engage when it rises from lowest position upwards)
- 5. Damping piston
- 6. Main hydraulic piston
- 7. Damping cylinder filling valve
- 8. Clutch master cylinder
- 9. Clutch pedal
- 10. In the upper position the pedal should rest against the stop and working cylinder piston (6) push rod must be free. Push rod clearance to the piston hole edges should be at least 1 mm in the whole pedal travel.
- 11. When piston (6) is fully pushed out, clearance to the stopper should be **0,2-2 mm**.

12. All sliding and bearing surfaces should be greased with universal grease in connection with repair works.

Others

Normal foot control of the pedal is always possible, also simultaneously. The clutch pedal has a hinge for safety.

The clutch master cylinder and the clutch release mechanism are the same as earlier.

Note! HiShift can be retrofitted also on earlier manufactured tractors, although they do not have the Agrodata – instrument.

HiShift hydraulic block fixing bolts are tightened to 23 Nm. The bolts must not be tightened too hard.




41. Clutch	15. 5. 1993	Model	Code	Page
41. Clutch	15. 5. 1996	6000-8750	411	1


1. Changing disc/release bearing (Op. no. 411)

Note! Instructions below are for a tractor with a hydraulic coupling (Hi-Trol). For tractors without hydraulic coupling the same instructions applies. On E-models it is necessary to disconnect the sensor wires when splitting the tractor.

A. Splitting tractor at clutch

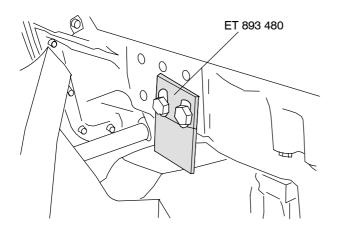


1. Fit support plates ET 893 480 on both sides to prevent pivoting. Remove all engine casing plates.

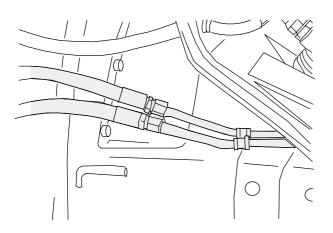


- 2. Remove the stop control cable wire from the injection pump. Disconnect the oil cooler hoses on the left hand side of the tractor.
- 3. Disconnect the fuel hoses from the tank (on right hand side). Disconnect the fuel gauge wires (fold sound insulation plate to one side when disconnecting the wires).

Important! With effect from tractor ser. no. **659478** the clutch release mechanism has been changed to a cable type. Then disconnect the cable front end from the release lever through the access hole on the frame.


Note! On some tractors, there is a linkage type clutch release mechanism inplace of the cable type mechanism. This linkage has been fittind in the field by using a replacement kit. From tractor serial number **668103** the tractors have a hydraulic type release mechanism.

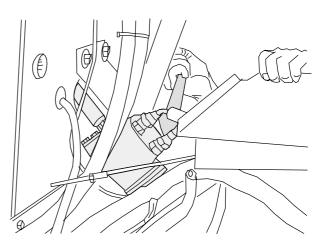

- 4. Disconnect the steering cylinder oil hoses from the steering valve (mark hoses for easier refitting).
- 5. Disconnect the heater hoses from the cab front wall and from the pipe to the coolant pump.

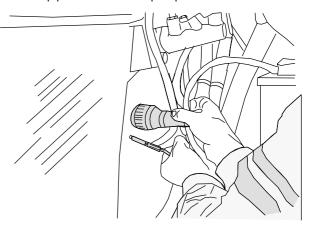

6. Disconnect the throttle control cable and the socket from the cab front wall on the right hand side. Disconnect the cab earth lead from the front wall and disconnect the cable to the starter motor.

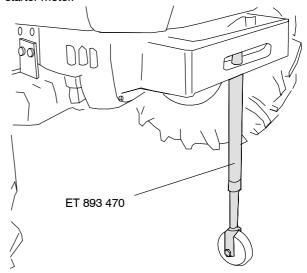

7. Fit support ET 893 470 under the front ballast weight bracket. Fit a support (with rollers) under the front frame rear edge.


Note! Six-cylinder engine (8000 and 8100) is rear-heavy. Other engines are almost balanced and must be supported at both ends.

41. Clutch	15 5: 19 93	Model	Code	Page
41. Glaton	1. 4. 1997	6000-8750	411	2

8. Remove the propeller shaft guard under the tractor and disconnect the front flange joint of the propeller shaft.

Important! On tractors with Delta Powershift, the front flange joint is unnecessary to disconnect, since the rear end of the propeller shaft has a splined sleeve joint.

9. Unscrew the bolted frame joint at the clutch. Disconnect the windscreen washer hose and the cable connector.

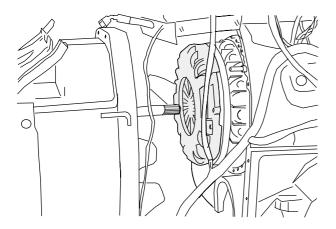


- 10. Carefully push the front frame apart from the middle frame about 40 cm.
- 11. Tap the clutch shaft backwards until its front end loosens from the bearing. Push the pump drive shaft backwards until its rear end splines engage.

Note! This is done to prevent damage to the seal inside the hollow input shaft.


B. Changing clutch/disc

1. Split the tractor at the clutch (see instr. A).

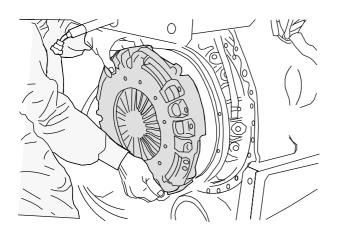


- 2. Unscrew the clutch fixing bolts evenly and remove the clutch assembly/disc.
- 3. Check the condition of the clutch shaft front end bearing. Check also splines on the pump drive flange on the flywheel.

Note! On the hydraulic coupling models the coupling must be detached before checking the pump drive flange.

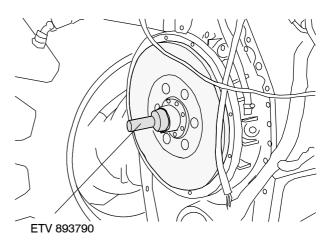


4. Fit centring tool ETV 893 790 and place the disc onto the centring tool (disc hub longer side rearwards).

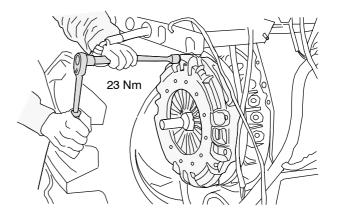

- 5. Fit the clutch assembly and tighten it evenly to a torque of 23 Nm. Remove the centring tool.
- 6. Assemble the tractor (see instr D). Adjust the pedal free travel (see instr 2A).


C. Changing release bearing

1. Split the tractor at clutch (see instr A).

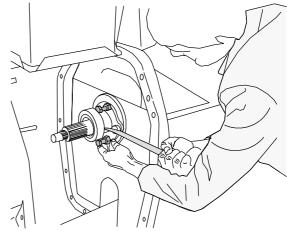

2. Prise out the bearing/tube and place 40 mm long bolts between the bearing and guide sleeve.

Important! Changing the release bearing with effect from https://tractormanualz.com/

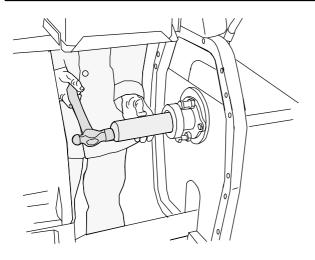


3. Knock in the tube with ETV 892 380 and remove the bearing. Fit a new bearing with ETV 891 900

Note! Check that the bearing comes up against the spacer ring.


Note! Check also the sliding ring inside the tube guide sleeve.

4. Assemble the tractor frame at the clutch (see instr. D).

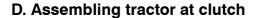


1. Push the pump drive shaft backwards fully home. Push the clutch shaft backwards until it engages into the coupling sleeve. **Important!** The pump drive shaft should be fitted in the correct way. The end which has a marking groove (and letter E) should be turned to the engine side.

Important! Guide the rear end of the propeller shaft onto the 4WD output shaft front end splines (659478–).

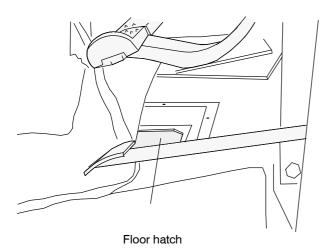


Note! If necessary, guide the coupling sleeve through the floor hatch. Grease splines with pressure—resistant grease.

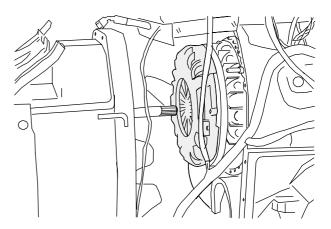

- 1. Push the units together so that the shafts engage. If necessary, rotate the flywheel so that the splines engage.
- 2. Tighten the bolts to correct torque.
- 3. Connect the oil cooler hoses on the left hand side. Connect the fuel hoses and the fuel gauge wires (on the right hand side).
- 4. Connect the cab earth lead to the cab front wall. Connect the hoses to the steering valve according to the marks. Connect the starter motor cable.

Important! With effect from tractor ser. no. 659478, connect the release cable front end to the lever upper end, work through the access hole on the frame.

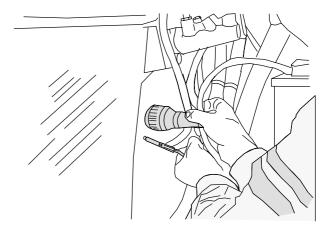

- 5. Fit the throttle cable and the socket to the front wall on the right hand side.
- 6. Connect the windscreen washer hose and cable connector. Connect the heater hoses.
- 7. Connect the stop control to the injection pump.
- 8. Adjust the clutch (see instr 2A). Remove all supports. Fit the engine hood plates.
- 9. Connect the propeller shaft front flange joint. Fit the guard under the tractor.


Note! Fit the floor hatch if opened.

41. Clutch	8, 17: 1990	Model	Code	Page
41. Oluton	15. 5. 1993	6000-8750	411	4

2. Checks and adjustments


A. Adjusting clutch pedal free travel up to tractor ser. no. 659477

Important! Adjusting the free travel with effect from tractor ser. no. **659478**, see page **411/10**.

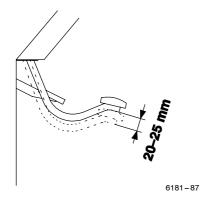

1. Pedal free travel should be $20-25\,\mathrm{mm}$, when the clutch is correctly adjusted.

2. Remove the left hand side plate of the engine compartment.

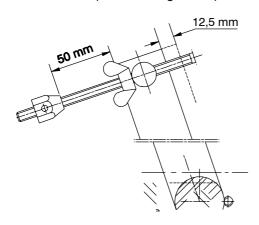


3. Adjust the free travel of 10–15 mm to the upper end of the clutch lever by screwing the wing nut. Now the pedal free travel should be 20–25 mm.

4. If a new disc is fitted, adjust the distance between the adjuster stop and the wing nut to 50-55 mm.


Note! If the free travel can no longer be adjusted (the adjuster stop touches the nut), the clutch disc must be changed.

B. Checking clutch disc and clutch assembly

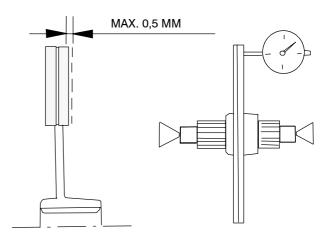

Checking axial throw of clutch disc


Mount the disc between the chuck and tailstock on a lathe. Rotate the disc and measure the axial throw at its outer edge. Also measure the taper ("dishing") of the disc. If the throw or taper is greater than 0,5 mm, change the disc.

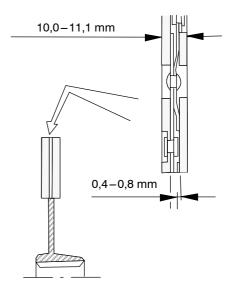

Checking thickness of clutch disc


Thickness, new disc (unloaded) 10,0-11,1 mm. Axial resilience 0,4-0,8 mm

44 Obstala		Model	Code	Page
41. Clutch	8. 11. 1990	6000-8750	411	5

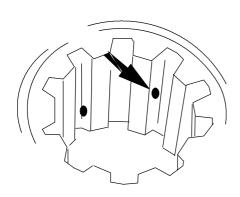

Checking movement of pressure plate


1. Place the clutch in fixture ETV 892 570 with 10 mm spacers. Secure with at least four bolts.

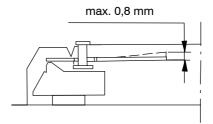

min 1,9 mm


Clutch disc splines

Coat the splines in the centre of the clutch disc with pressure – resistant grease to safeguard the axial movement of the disc on the clutch shaft.

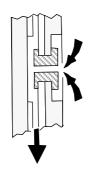

Clutch disc rivets

Rivets have a small hole for free air flow. If these holes become clogged (e.g. dust), it can cause sticking of the disc.

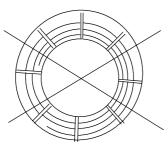


Organic linings are made by winding asbestos—free band. For that reason radial grooves must not be made on the linings because thus bands can cut off. This can cause the linings to loosen.

Friction surfaces must be clean. A small amount of grease on the linings can cause vibrations and the disc can stick.


- 2. Apply the clutch 3-4 times so that the cup spring "beds down".
- 3. Check the height difference between the fingers of the cup spring: this must not exceed 0,8 mm. If it is greater, the clutch must be changed.
- 4. Press the cup spring fingers down by 10 mm and measure the distance between the spacers and pressure plate. The clearance must be at least 1, 90 mm. Check at several points. If the clearance is lower the clutch must be changed.


41. Clutch	8.11.1990	Model	Code	Page
	1. 4. 1997	6000-8750	411	6

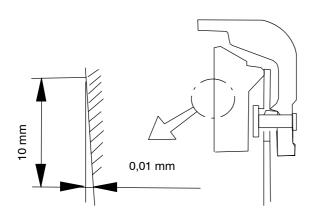

Checking concavity of pressure plate

A new pressure plate is flat to slightly concave, max. 0,01/10 mm: convexity, i.e. the reverse state, must not occur. The reason for the concave surface is to allow engagement to start at the outer edge of the lining where the disc is least sensitive to slipping. A grooved or otherwise deformed clutch must be changed.

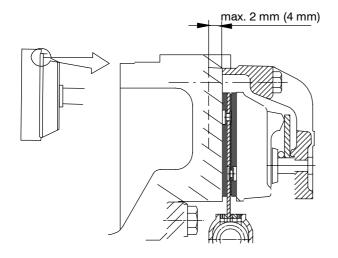

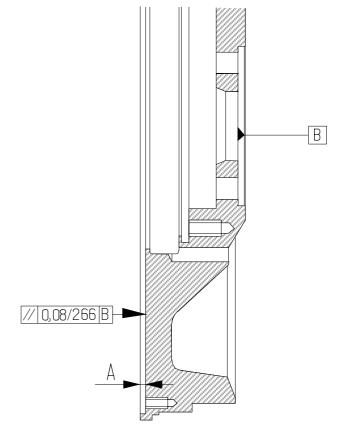

Important! When machining the flywheel, it is important to observe that the clutch surface and the flywheel fixing surface are parallel.

Measurement A on a new flywheel is 6 ± 0.3 mm, and max allowable value is 10 ± 0.3 mm.

Machining flywheel

The flywheel can be machined 2 mm without any further action. For additional machining the holes for the clutch attaching bolts must also be deepened. The maximum machining of the flywheel is 4 mm.

41. Clutch	1.4.1997	Model	Code	Page	1
41. Oluton	1. 11. 1998	6000-8750	411	7	

3. Hydraulic coupling (Hi-Trol)

Note! See figure 4 on page 410/6 (Voith) or figure 5 on page 410/7 (Transfluid).

Hi-Trol-models have a hydraulic coupling between the flywheel and the mechanical clutch.

Removing hydraulic coupling Voith (-658205, 666066-):

- split the tractor at the clutch (see instr 411 1A)
- remove the mechanical clutch and its fixing plate
- drain the oil from the hydraulic coupling through the draining plug.
- unscrew the bolts on the outer sphere of the coupling. If necessary, use extractor screws (there are threaded holes for this purpose).

When fitting the hydraulic coupling the screws must be tightened evenly to 25 Nm.

Note! 0,2 litre oil remain in the later Voith coupling (666066–) when the coupling is emptied through the draining hole while the coupling is attached to the flywheel. The draining plug can be removed and fitted via the hole in the tractor frame when the plug is in the upper position. For instance oil checking and topping up is possible without splitting the tractor frame.

Reconditioning hydraulic coupling Transfluid (658206 – 666065), see pages 411/8 and 9.

Oil quality and oil volume in hydraulic couplings, see page 130/4.

A. Checking function of hydraulic coupling

Normally the hydraulic coupling does not need any maintenance or adjustments. If there is doubt that the coupling does not function properly, it can be checked as follows:

- 1.Warm up the engine to normal working temperature by driving the tractor about 15–30 min (not any stall-test)
- 2. Check the pulling power (crawling) of the coupling at engine idling speed (750 r/min). The pulling power of the coupling is determined so that when gear H1 is engaged the tractor is stationary when brake pedals are pressed lightly.

B. Stall-test

- apply the parking brake
- engage the highest gear H4
- declutch and move the hand throttle lever to max revs (front position) and check the resultant R.P. M. Max stall – test period is 10 seconds. The right value is 1100–1250 r/min (Voith) or 950–1250 r/min (6800: over 1200 r/min) (Transfluid).

Note! Do not repeat a new stall-test immediately after the previous test because this will cause overheating on the hydraulic coupling and also the stall value becomes faulty

The hydraulic coupling characteristics can be changed by changing oil level in the coupling. The coupling becomes softer when oil is reduced and vice versa. Too high stall value indicates that there is not enough oil in the hydraulic coupling.

41. Hydraulic coupling

15. 6: 1992 1. 1. 1995

6000-8750

Model


Code **411** Page 8

Hydraulic coupling (Transfluid)


(fitted on Valmet tractors from serial number **658206** up to serial number **666065**)

A. Disassembling hydraulic coupling

- Split the tractor at clutch (see instr. 411 1A). Remove the mechanical clutch. Do not detach yet the clutch attaching plate.
- 2. Unscrew the oil draining plug and drain the oil from the coupling into a suitable vessel.
- 3. Unscrew the bolted joint between flywheel-coupling on the coupling outer edge.

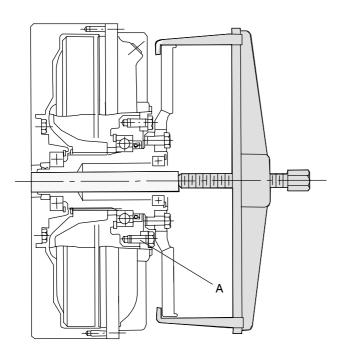


- 4. Detach the hydraulic coupling with an extractor according to the figure above. Position extractor legs behind the clutch attaching plate and place a suitable support bar inside the coupling.
- 5. Remove the large o-ring. Remove the attaching plate of the mechanical clutch. Unscrew the pump wheel bolts A (12 off).
- 6. Remove the pump wheel and the gasket from its flange. Release the turbine wheel circlip at the front end of the coupling hub.

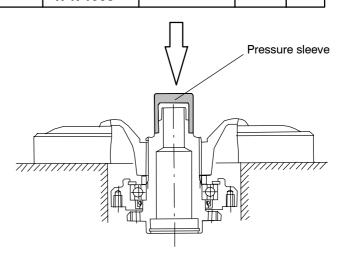

7. Place the turbine wheel on a support and press the hub out from the splines.

Note! On the splines there is locking fluid Loctite 601.

8. Remove the spacer ring in front of the bearing.

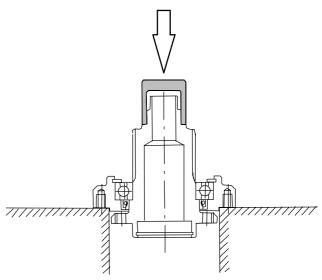


- 10. Remove the bearing circlip, bearing and the seal behind it.
- 11. Check the smaller bearing in the flywheel and change the oil seal in the flywheel. Change all rubber seals. Check also the ball bearing inside the hub rear end.
- 12. Clean all seal and bearing locations. Remove remaining locking fluid from the turbine wheel and hub splines.
- 13. Clean every parts thoroughly and change worn parts. Apply EP grease onto the rubber seals.


		Model	Code	Page
41. Hydraulic coupling	15. 6. 1992	6000-8750	411	9

B. Assembling hydraulic coupling


1. Grease lips and outer face of the seal with EP-grease.

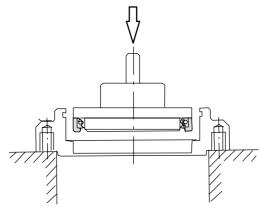

2. Fit the seal into the bearing housing fully home.

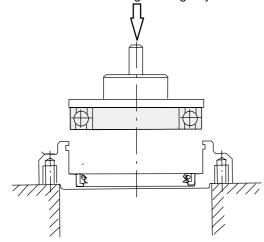

3. Fit the bearing and fit the bearing circlip.

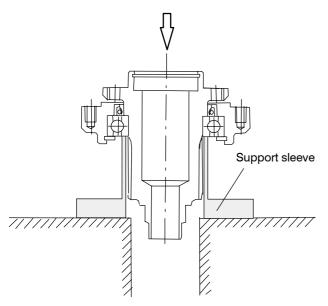


4. Support against the bearing inner race and press the hub into place fully home.

- 5. Fit the spacer ring in front of the bearing. Apply Loctite 601 to the hub splines. Fit the turbine wheel onto the hub splines fully home.
- 6. Remove possible excess Loctite. Fit the circplip in front of the turbine wheel.

Note! Wait about 15 minutes before continuing assembling.

- 7. Fit the gasket onto the hub flange and fit the pump wheel so that the holes align.
- 8. Apply Loctite 242 to the pump wheel bolts (12 off) and tighten them to **50 Nm**.
- 9. Grease and fit a new o-ring onto the pump wheel outer circle. Place the hydraulic coupling carefully onto the flywheel so that the coupling hub front end fits into the seal and bearing on the flywheel.

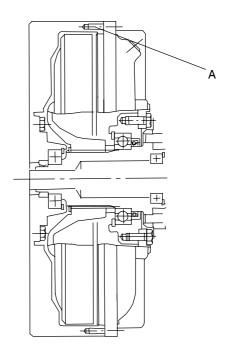


- 10. Tighten the hydraulic coupling fixing bolts (A) evenly to 23 Nm.
- 11. Fill the coupling with correct amount of correct oil (engine oil SAE 10W/30). Unscrew the filling plug. Make sure there is a seal ring on the plug.
- 12. Fit the attaching plate of the mechanical clutch (**80 Nm**, Loctite 542). Fit the clutch and assemble the tractor frame at clutch. (see instr. **411 1D**).

	1,1,1994	Model	Code	Page
41. Clutch	1. 1. 1995	6000-8750	411	10


4. Adjusting and repair instruction for clutch release mechanism of cable type, 659478—

Note! This new mechanism is fitted on all 6000-8400 tractors with effect from tractor ser. no. **659478**.

A. Adjusting clutch pedal free travel.

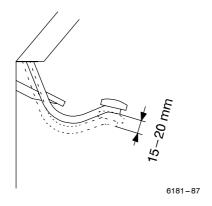

- 2. The free travel at the pedal should be **10–15 mm**. The free travel is difficult to verified by depressing the pedal.
- 3. If the free travel is not correct, adjust it with an adjusting sleeve at the cable lead in point in the cab front wall.

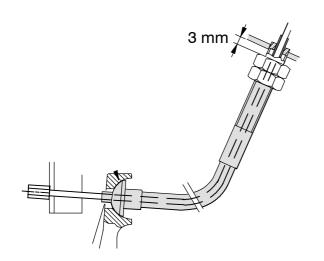

4. When the pedal is in the upper position, the distance between the cab wall and the adjusting sleeve should be 3 mm, which corresponds to the correct free movement.

Note! The distance is adjusted by turning the sleeve and by moving the cable until the free travel between the sleeve and the cab front wall is correct. If the pedal does not return to the upper position, it may be necessary to adjust the clutch servo, see page **410/5**.

B. Clutch repairs

The tractor frame is split and assembled according to instructions 411 1A and D. The clutch assembly is the same as earlier.

The release bearing cannot be removed as described in instr. **C** on page **411/3**. The easiest way to remove the bearing is to place a suitable drift against the bearing support tube and by pulling out the bearing with an extractor.

C. Changing release cable

The cable can be changed without splitting the tractor. There is an access hole on the tractor frame through which the clutch end of the cable can be disconnected from the upper end of the release lever. After changing the cable, the clutch pedal free travel should be adjusted.

Note! The clutch cable has been strengthened with effect from tractor ser. no. **665081.** The new cable is exchangeable with the earlier cable after renewing the adjusting nut. On Hi—Trol models the cable upper end fork should also be changed. The Spare Part Centre dispatches only the new cables. All earlier type cables should be returned to the tractor factory.

Check the function of the cable via the access hole.

If the cable does not function correctly, split the tractor at the clutch and check the position and alignment of the clutch lever and the cable support. The support groove must must be in line with the clutch lever, clutch shaft centre and clutch lever attachment centre line.

If necessary, remove the support and reweld it into place. Check the function of the clutch lever lower end ball joint. Assure that the cup springs are fitted correctly. Nut tightening: first fully home and upscrew it 3/4 or 1/4 turn (depending on the tractor ser no). Reassemble the tractor.

Check again the function of the cable. Test—drive the tractor and check the adjustment of the cable and readjust, if necessary $\frac{1}{2}$

	1-1.1995	Model	Code	Page
41. Clutch	15. 4. 1995	6000-8750	411	11

5. Hydraulic clutch release mechanism, 668103—.

A. Bleeding the clutch circuit

Note! The bleeding hose/nipple is placed on the LH side of the tractor frame.

This release mechansim does not normally require any adjustments. The clutch pedal free travel cannot be felt, since the release bearing is in the continuous contact with the clutch. If the clutch does not release, the system must be bled.


Note! Check that the reservoir is full of brake fluid before bleeding. Pump with the clutch pedal a few times, so that the system is under pressure.

- Depress the clutch pedal and at the same time open the bleeding nipple.
- When the pedal is down, close the nipple and allow the pedal to rise up.
- Continue in this way until no air bubbles come out of the nipple
- Check again liquid level in the reservoir and top up if necessary

Note! Do not allow the liquid to contact the tractor frame, since the brake fluid can damage the paint.

B. Adjusting the pedal free travel


The free travel cannot be felt, since the release bearing touches the clutch release fingers all the time. Normally the pedal does not need any adjustment.

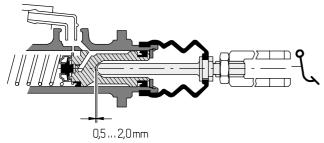

Adjust the distance between the master cylinder piston and the pedal push rod to 0,5-2,0 mm, when the pedal is in the upper position.

This clearance can be adjusted by slackening the clevis lock nut and by rotating the clevis.

C. Master cylinder

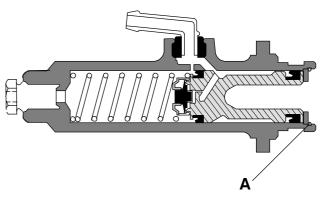


The master cylinder is attached with two bolts onto the cab front wall.

A seal kit is available for the cylinder. The seals, piston and the spring can be removed from the cylinder by removing the circlip A and the intermediate ring behind the circlip. Lubricate new seals with brake fluid. The seals must not be lubricated with oil, because oil damages them.

D. Slave cylinder/release bearing

Note! The tractor frame is split at the clutch as before according to instruction **A** on page **411/1**. Assemble the tractor frame according to instr. **D** on page **411/3**.

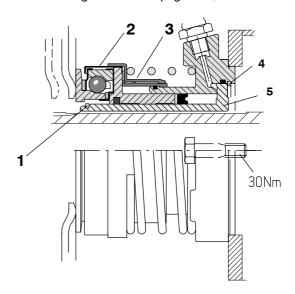

- 1. The slave cylinder unit is attached with three bolts onto the tractor frame. The pressure hose and the bleeding hose have different threads.
- The release bearing can be removed by releasing circlip
 Before removing the bearing, the locking sleeve 2 claws should be released from the flange.
- 3. The plastic covering 3 cannot be removed separately. The guide sleeve 5 loosens, when you remove the circlip 4.


Important! The slave cylinder seals must not be lubricated with mineral oil. The seals are lubricated with brake fluid. **Note!** When the clutch disc linings are worn, the slave cylinder shrinks correspondingly and the stroke of the cylinder remains the same (about 10 mm).

6. HiShift

A. Adjustment


Note! Adjustment has been done in the factory and HiShift does not normally require any adjustment. In connection with repair works the adjustment can be done according to this instruction.

Note! There is an access hole on the side of the steering wheel console, through which the adjusting screw can be turned.

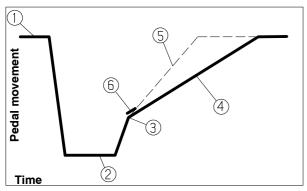

- 1. Pedal up
- 4. Driving speed < 4 km/h
- 2. Pedal down
- 5. Driving speed > 4 km/h
- 3. Knee point
- 6. Clutch slips and engages
- 1. Check the clutch fluid level. Raise the tractor on axle stands. Start the engine and use the HiShift several times so that air is removed from the system.
- 2. Close the cab side restriction spindle. The foremost restriction spindle should be open 2 turns.
- 3. Depress the clutch pedal by using the push button. Select e.g. gear F/M/1. Adjust engine revs to 800–1000 r/min (greater than 1500 r/min if the tractor has a fluid coupling, i.e. Hi—Trol models).
- 4. Release the button at which time the pedal rises up to the knee point (3), in which the working cylinder piston rests against the damping piston. Tractor wheels must not rotate.
- 5. Open the cab side restriction a little, at which time the pedal starts to rise slowly. The wheels must start to rotate before the pedal has risen **10 mm** (ideal value 5 mm) from the knee point.

Note! On account of possible small leakage of the restriction spindle the pedal can start to rise slowly before the restriction spindle is opened. The knee point (3) can, however, be observed from change of rising speed of the pedal.

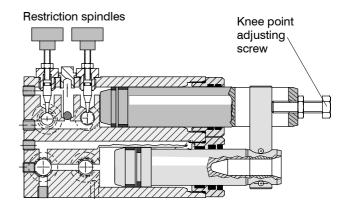

- If necessary, adjust the position of the knee point (adjusting screw at the end of the damping piston). Screw outwards=point rises and vice versa.
- 7. When the knee point has been adjusted, close the cab side restriction and then open it 1+1/4 turns. The foremost restriction should be open 2 turns (factory setting). Lock the restriction spindles.
- 8. In a test-drive with driving speeds under 4 km/h the pedal rises up slower (4) (restriction 1+1/4). With speeds over 4 km/h the pedal rises up faster (restriction (1+1/4)+(2)). When the shuttle lever button is used , the pedal always rises slower regardless of the driving speed.

Note! Tractor driver can adjust the Hi Shift between certain limits according to his own choice. However, the cab side restriction must always be open at least 1 turn, to prevent excess wear of the clutch disc.


9. Check the function of the clutch. Drive under and over 4 km/h and check that the engagement occurs softly. Ensure, that the pedal hinge functions. Check for leaks.

Fault tracing.

If the clutch pedal in paragraph 4 rises direct to the upper position:

- the cab side restriction spindle leaks.
- solenoid valve Y15 does not function or leaks.
- damping cylinder filling valve leaks.

	1.4.1997	Model	Code	Page
41. Clutch	1. 8. 2000	6000-8750	411	13

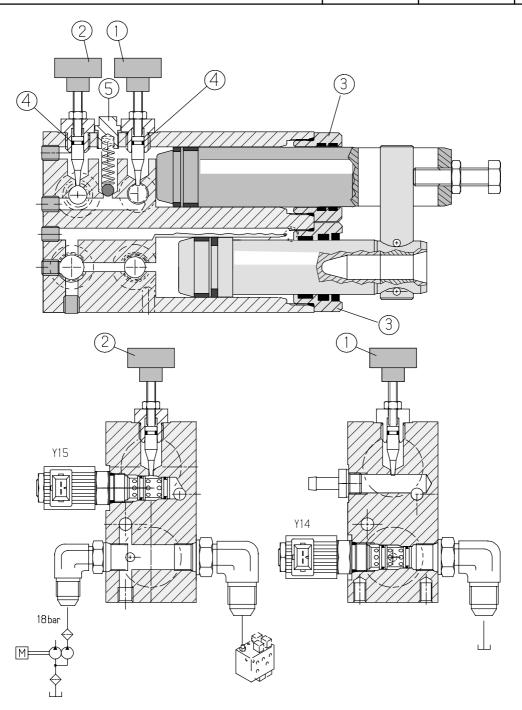

B. HiShift hydraulic block

Oil continuously circulates in the HiShift block from the tractor low pressure circuit and its pressure releases and engages the clutch. If the low pressure circuit has malfunctions, it affects the Hi Shift.

The damping part is not connected to the tractor hydraulic system, but its own circuit uses clutch fluid (=brake fluid). In connection with malfunctions, check the clutch fluid level in the reservoir, when the pedal is in the upper position.

Leaking piston seals can be changed after unscrewing seal flanges (3). The filling valve spring and ball can be removed by unscrewing plug (5) between the restrictions (1 and 2).

The restriction spindles have o-rings (4), which can be changed. Do not screw in the spindles too hard, otherwise the spindle tapered surfaces can damage. The restriction spindles have securing nuts.


Important! The seal rings of the damping cylinder solenoid valve Y15 are of different material to the seal rings of the solenoid valve Y14, and they must not be interchanged.

Note! Before fitting the solenoid, make sure that the circuit in question is brake fluid circuit. Remove o—rings on the new solenoid valve, wipe off oil on the new solenoid and lubricate new o—rings, which are delivered with the repair kit, with brake fluid and fit them (do not lubricate the o—rings with oil).

In connection with repair works the solenoid valve Y15 seal rings must not lubricate with oil but, if needed, with clutch fluid.

In connection with repairs, tighten the joint between the hydraulic block and the cab front wall to make watertight (e.g.Silicone 2650 black).

C. HiShift electric system

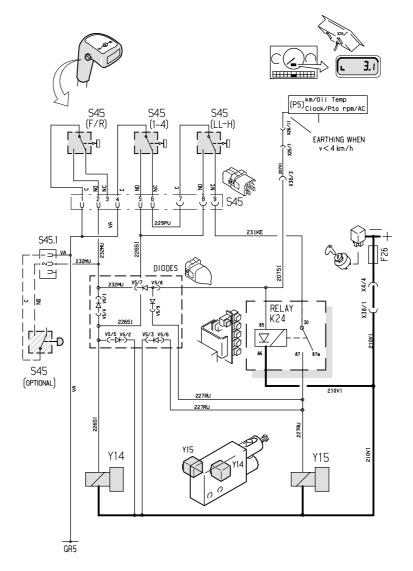

Note! When the buttons are pushed, the solenoid valve Y14 is grounded and it becomes energised and the clutch pedal is depressed. AD—instrument grounds via relay K24 the solenoid valve Y15, when driving speed is under 4 km/h, and the pedal rises up slower. When the shuttle lever button is used, the valve Y15 is always grounded regardless of the driving speed.

- -If the HiShift does not function:
- check fuse F26. If the fuse blows repeatedly, the fault can lie in diodes.
- check the resistance of the solenoid valves which should be 11 – 12 ohms.
- when 12 V is fed to the valve pins, the valves must become magnetic and the spindle must move (click).

If the fuse and the solenoid valves are OK, but the Hi Shift has malfunctions:

- measure whether there is a voltage of 12 V in the connector pins of $\,$ Y14 when the buttons are depressed. If not, the fault can lie in the valve wires or in the push buttons. Check//correct.

If the pedal rising speed has malfunctions:

- measure whether there is a voltage of 12 V in the connector pins of valve Y15 when the driving speed is under 4 km/h or the tractor is stationary. If not, the fault lies in relay K24 or in valve wires.
- when driving speed is over 4 km/h, the valve Y15 should be unenergised and the pedal rises up faster.

 If the pedal rises never slower when using all three buttons, the relay K24 is faulty.

If the pedal does not always rise slower when using the shuttle lever button

 check function of other buttons. If with the other buttons the Hi Shift functions correct, but not with the reverse shuttle lever button, the fault lies in the diodes.

Valve Y15 has been connected to the speed sensor B6 of the AD-instrument. If the instrument shows correct speed and travelling distance, the sensor B6 is in order. Otherwise the sensor should be checked/changed, see page 331/4.


Diode housing V5 is placed in the steering wheel console. In case of diode damages the whole housing should be changed.

Earthing point GR5 is under the dash board $\,$ (cab wire loom).

Relay K24 is situated in the lever console beside the relays for the AC II.

Note! The push button wires have been soldered to the buttons. As a spare part is dispatched wires together with the buttons. The wire lower ends have connectors

		Model	Code	Page
41. Clutch	1. 4. 1997	6000-8750	411	15

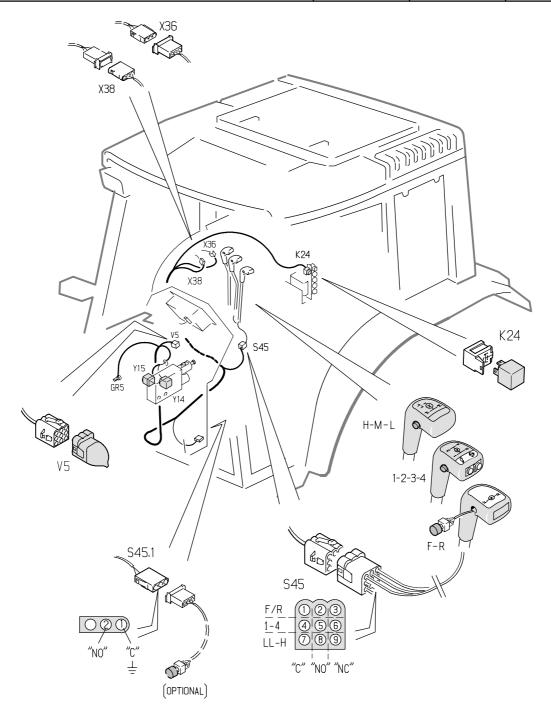

Positions of electrical components for HiShift.





	8. 17. 1990	Model	Code	Page
42. Gearbox	15. 5. 1993	60008750	420	1

Contents

General (Op. no. 420)	
Technical data	2
Special tools	
Gearbox, description	
Synchronization	
Differential	
Gear shift lever system	
Power transmission, servo and lubricating system	
Working order	23
Repair instructions	
Selector forks (Op. no 421)	
1. Adjusting selector forks:	
A. Removing gearbox side cover (selector cover)	
B. Adjusting selector forks	
C. Fitting gearbox side cover	2
2. Changing selector forks	2
Reconditioning gearbox (Op. no. 423) 1. Removing gearbox from tractor: A. Splitting tractor between gearbox-fuel tank	1
2. Disassembling gearbox:	
A. Removing differential	
B. Removing side cover	
C. Removing hydraulic pump	
D. Removing selector forks	
E. Removing shafts from gearbox	6
3. Checking gearbox	7
4. Assembling gearbox:	
A. Fitting shafts into the gearbox	
B. Fitting and adjusting selector forks	
C. Fitting 4WD clutch drum	
D. Fitting side cover	14
E. Fitting pump and suction pipes	
5. Fitting gearbox:	
A. Assembling tractor frame between gearbox-fuel tank	17
Reconditioning differential (Op. no. 424)	
Changing/reconditioning differential: A. Changing differential gears/diff. lock friction discs	1
/1. Onangina amononia (450/3/411). 1001/111011011 (1303	- 1

_	1, 1, 1995	Model	Code	Page
42. Gearbox	1. 8. 2000	6000-8950	420	2

Technical data

Number of gears (numbers in brackets refer to tractors with guick-shift gear) ((Delta Powershift)):

_	- forwards	12 (24) ((36))
_	- reverse	12 (24) ((36))

Oil

(common to transmission and hydraulics) Viscosity and quality grade: see page 130/4.

Oil volume: see page 130/4.

Warning lights for gearbox oil pressure and temperature. Oil cooler as standard.

Pressure lubrication for input shaft and bevel pinion shaft.

Differences between gearboxes on 6100-8400 tractors, which have a 2-speed quick-shift gear Transmission 30 km/h Transmission 40 km/h

Number of teeth	6100-6400 8000	6600, 8100 8400	6100-6400 8000	6600, 8100 8400
 bevel pinion shaft/crown wheel 	Z7/Z40	Z7/Z40	Z9/Z38	Z9/Z38
Gears for 4WD:				
 in front end of bevel pinion shaft 	Z34	Z28	Z39	Z33
 in front end of transmission shaft 	Z41	Z47	Z35	Z41
Differential				
 number of differential pinions 	2 pcs	4 pcs	2 pcs	4 pcs

Tractors with ground speed PTO; there is a coupling, selector fork and shaft for PTO in the gearbox. Transmission 50 km/h, see pictures on pages 420/8 and 9. Tractors with Delta Powershift, see the next page 420/2A.

Tightening torques

Gearbox

Gearbox	
Bevel pinion shaft ring nuts (+transmission shaft ring nut)	270 Nm
Input shaft front end cover Layshaft front end cover	21 – 25 Nm
Layshaft front end cover	21 – 25 Nm
Gearbox side cover screws	50 Nm
Differential	
Crown wheel fixing bolts	110 Nm
Differential bearing cover screws	40-50 Nm
Frame joints	
Gearbox – fuel tank:	
upper studslower hexagonal socket – head screws	270-330 Nm
- lower hexagonal socket-head screws	125 Nm
Gearbox – reverse shuttle	21 – 25 Nm
Gearbox – power take – off:	
– upper studs (8 pcs)	270-330 Nm
- lower studs (6 pcs)	72-88 Nm
Gearbox – brake housings	
Propeller shaft flange joints	35 Nm

Settings

Gearbox

Pinion shaft rolling resistance measured with torsion meter at front end of shaft	
(without differential)	1,7-2,3 Nm
Input shaft end float	0,025-0,075 mm
Layshaft end float	0,025-0,075 mm
Differential	

Differential bearing preload measured with torsion meter at front end of bevel pinion shaft

Sealing compounds and locking fluids used

Reverse shuttle—gearbox, sealing Hylosil RTV Grade 102 Black Power take—off—gearbox, sealing Hylosil RTV Grade 102 Black Brake housings—gearbox, sealing Hylosil RTV Grade 102 Black Side cover—gearbox, sealing Hylosil RTV Grade 102 Black Threads on selector fork rails (+transmission shaft ring nut), Loctite 242 Crown wheel fixing bolts, Loctite 273



Markings of gearboxes

With effect from tractor ser. no 662134 the gearboxes have been marked with letter codes. The purpose is to make recognizing of the gearboxes easier in connection with tyre changing, repair works and when fitting parts for the ground speed PTO. Concerning PTO unit markings, see page 460/2A. The gearboxes listed below are fitted on tractors which have a Delta Power Shift or the DPS can be retrofitted.

Transmission 300: 6000 - 6400 (-K41105), 8000 (-H12332) (DPS 300, gearbox 300, rear axles 300, PTO 300 (-G18213), PTO 450 (G18214-)). Transmission 550 replaces transmission 300 from ser. no. K41106 incl.

Letter	Туре		Number of gears	Ratio front/rear	Part no	Z	Z 4WD
A	40 km/h	DPS	36	1,332	32825210	Z8/42	Z32/37
	30 km/h	DPS	33	1,332	32825210	Z8/42	Z32/37
В	40 km/h	DPS, AVO	36	1,332	32825310	Z8/42	Z32/37
	30 km/h	DPS, AVO	33	1,332	32825310	Z8/42	Z32/37
С	40 km/h 30 km/h		12 11	1,334 1,334	32825410 32825410	Z9/38 Z9/38	Z42/39 Z42/39
D	40 km/h	AVO	12	1,334	32825510	Z9/38	Z42/39
	30 km/h	AVO	11	1,334	32825510	Z9/38	Z42/39
J	40 km/h	DPS	36	1,391	32825200	Z7/40	Z34/41
	30 km/h	DPS	33	1,391	32825200	Z7/40	Z34/41
K	40 km/h	DPS, AVO	36	1,391	32825300	Z7/40	Z34/41
	30 km/h	DPS, AVO	33	1,391	32825300	Z7/40	Z34/41
L	40 km/h 30 km/h		12 11	1,381 1,381	32825400 32825400	Z9/38 Z9/38	Z39/35 Z39/35
M	40 km/h	AVO	12	1,381	32825500	Z9/38	Z39/35
	30 km/h	AVO	11	1,381	32825500	Z9/38	Z39/35

Transmission 390: 6900 (-K36111), 8000 (H12333-K36111) (DPS 300, gearbox 390 (As transmission 300, but four diff. pinions in differential), rear axles 300, PTO 450).

AA	40 km/h	DPS	36	1,332	33394600	Z8/42	Z32/37	
ВА	40 km/h	DPS, AVO	36	1,332	33394700	Z8/42	Z32/37	
CA	40 km/h		12	1,334	33394800	Z9/38	Z42/39	
DA	40 km/h	AVO	12	1,334	33394900	Z9/38	Z42/39	
Transmiss	Transmission 450: 6600 – 6800 (–G01400), 8100 – 8400 (–668102) (DPS 300, gearbox 450, rear axles 450, PTO 450)							
E	40 km/h 30 km/h	DPS, AVO DPS, AVO	36 33	1,315 1,315	32779900 32779900	Z9/38 Z9/38	Z33/41 Z33/41	
F	40 km/h 30 km/h	DPS DPS	36 33	1,315 1,315	32824700 32824700	Z9/38 Z9/38	Z33/41 Z33/41	
G	30 km/h	DPS, AVO	36	1,317	32824800	Z7/40	Z28/47	
н	30 km/h	DPS	36	1,317	32824900	Z7/40	Z28/47	
1	50 km/h	DPS, AVO	24	1,337	32825000	Z11/37	Z38/37	
N	50 km/h	DPS	24	1,337	33094700	Z11/37	Z38/37	


DPS=Delta Power Shift

AVO=Ground speed PTO

Ratio front/rear=ratio between the front and rear axle. E.g. Front wheels rotate 1,332 turns/1 rear wheel turn. **Z**=number of teeth on pinion/crown wheel.

Z 4WD=number of teeth on the 4WD gear wheels in the gearbox.

Part no=spare part number of the complete gearbox.

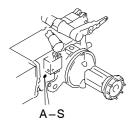

Note! Earlier the max. speeds of the transmissions (30 km/h and 40 km/h) were created by changing a number of teeth on the pinion/crown wheel. On the latest transmissions the max. speed is limited with a mechanical blocking device in the gearbox. The blocking device prevents engagement of the highest gear H4 in transmission 30 km/h.



Transmission 460: 8200, 8400 (668103-), 8050 and 8150 (-F32103) (DPS 460, gearbox 450, rear axles 450, PTO 450.

Letter	Туре		Number of gears	Ratio front/rear	Spare part number	Z	Z 4WD	
Р	40 km/h 30 km/h	DPS DPS	36 33	1,309 1,309	33094900 33094900	Z8/42 Z8/42	Z29/45 Z29/45	
0	40 km/h 30 km/h	DPS, AVO DPS, AVO	36 33	1,309 1,309	33094800 33094800	Z8/42 Z8/42	Z29/45 Z29/45	
s	50 km/h	DPS	36	1,315	33095100	Z9/38	Z33/41	
R	50 km/h	DPS, AVO	36	1,315	33095000	Z9/38	Z33/41	

Transmission 650: 8450-8750, 8050 and 8150 (F32104-), 6600 and 6800 (G01401-) 6250Hi-8950Hi (K36108-), 8350Hi-8950Hi (-L32105)

Transmission 550: 6200 – 6550Hi (J12242 –), **6200 – 6400** (K41106 –) (DPS 650, gearbox 650/550, rear axles 450/650, PTO 650).

Note! Transmission 550 is the same as 650, but 550 has only two differential pinions, 650 has four. The 4WD ratio is different.

Letter	Туре		Number of gears	Ratio front/rear (SIGE)	Ratio front/rear (CARRARO)	Spare part number	Z	Z 4WD
T (650)	40 km/h	DPS, AVO	36	1,309		33086100	Z8/42	Z29/45
U (650)	40 km/h	DPS	36	1,309		33086200	Z8/42	Z29/45
V (650)	50 km/h	DPS, AVO	36	1,315		33086300	Z9/38	Z33/41
Y (650)	50 km/h	DPS	36	1,315		33086400	Z9/38	Z33/41
EA (650 Hi)	40 km/h	DPS, AVO	36	1,309	1,320	33511900	Z8/42	Z29/45
FA (650 Hi)	40 km/h	DPS	36	1,309	1,320	33512000	Z8/42	Z29/45
GA (650 Hi)	50 km/h	DPS, AVO	36	1,315	1,326	33512100	Z9/38	Z33/41
HA (650 Hi)	50 km/h	DPS	36	1,315	1,326	33512200	Z9/38	Z33/41
IA (650 Hi)	40 km/h *)	DPS, AVO	36	1,315	1,326	33673200	Z9/38	Z33/41
JA (650 Hi)	40 km/h *)	DPS	36	1,315	1,326	33673300	Z9/38	Z33/41
KA (550 Hi)	40 km/h	DPS, AVO	36	1,339		33757600	Z8/42	Z29/44
LA (550 Hi)	40 km/h	DPS	36	1,339		33757700	Z8/42	Z29/4
MA (550)	40 km/h	DPS, AVO	36	1,339		34257500	Z8/42	Z29/44
NA (550)	40 km/h	DPS	36	1,339		34257600	Z8/42	Z29/44
OA (550)	40 km/h	AVO	12	1,337		34257700	Z11/37	Z38/37
PA (550)	40 km/h		12	1,337		34257800	Z11/37	Z38/37

DPS=Delta Power Shift

AVO=Ground speed PTO

Ratio front/rear = ratio between the front and rear axle. E.g. Front wheels rotate 1,332 turns/1 rear wheel turn.

Z=number of teeth on pinion/crown wheel.

Z 4WD=number of teeth on the 4WD gear wheels in the gearbox.

Part no=spare part number of the complete gearbox.

*) Low revs tractor

The

T-PA

The letter has been stamped on the LH side of the gearbox.

		Model	Code	Page
42. Gearbox	1. 9. 2002	8350 8950Hi	420	2C

Transmission 700: 8350Hi - 8950Hi (L32106-)


(DPS 650, gearbox 700, rear axle 700)

Letter	Туре		No. of gears	Gear ratio front/rear	Part no.	Z	Z 4WD
RA (700 Hi)	40 km/h	DPS, AVO	36	1,327	34469700	Z9/38	Z29/45
SA (700 Hi)	40 km/h	DPS	36	1,327	34469800	Z9/38	Z29/45
TA (700 Hi)	50 km/h	DPS, AVO	36	1,321	34469900	Z11/37	Z33/41
UA (700 Hi)	50 km/h	DPS	36	1,321	34470000	Z11/37	Z33/41
VA (700 Hi)	40 km/h *)	DPS, AVO	36	1,321	34470100	Z11/37	Z33/41
YA (700 Hi)	40 km/h *)	DPS	36	1,321	34470200	Z11/37	Z33/41


DPS=Delta Power Shift

AVO=Ground speed PTO
Gear ratio front/rear=ratio between the front and rear axle. E.g. Front wheels rotate 1,327 turns/1 rear wheel turn.
Z=number of teeth on pinion/crown wheel.
Z 4WD=number of teeth on the 4WD gear wheels in the gearbox.
Part no=spare part number of the complete gearbox.

*) Low revs tractor

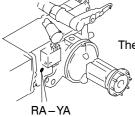


The letter has been stamped on the LH side of the gearbox.

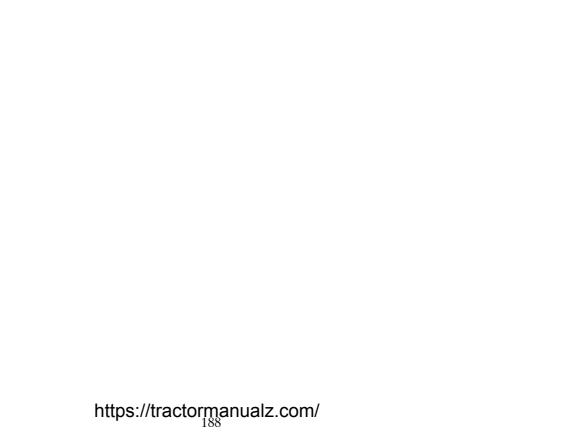


10.00 11.0	1, 1, 1995	Model	Code	Page
42. Gearbox	1. 4. 1997	6000-8750	420	3

Special tools

Order no	Description
ETV 890 220	Universal handle
ETV 891 870	Plate for fitting thrust bearing for differential side of gear (Gearbox 505 – 905)
ETV 892 230	Socket spanner for bevel pinion shaft ring nut (Gearbox 305 – 555)
ETV 894 190	Socket spanner for 4WD clutch drum nut
ETV 892 370	Sleeve for fitting input shaft front end bearing (Front axle 505-905)
	Sleeve for fitting bevel pinion shaft front end bearing
ETV 892 380	Sleeve for fitting input shaft rear end bearing (Gearbox 505-905)
ETV 893 300	Puller for differential bearings (Gearbox 505-905)
ETV 893 340	Plate for fitting bearing race, pinion shaft rear bearing (Gearbox 505-905)
ETV 893 400	Plate for fitting differential bearings (Gearbox 505-905)
ETV 894 050	Drift for fitting locking pins for selector forks
ETV 894 080	Drift for fitting selector fork rail for LL-range
ETV 894 120	Counter hold for puller ETV 893300.
Locally prepared	tools
ET 004 000	Droop tool for adjusting coloctor forks

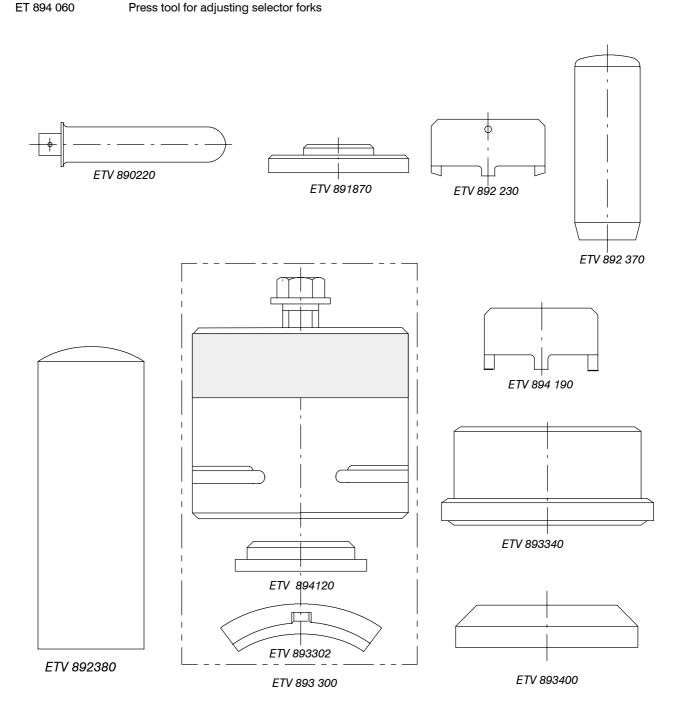

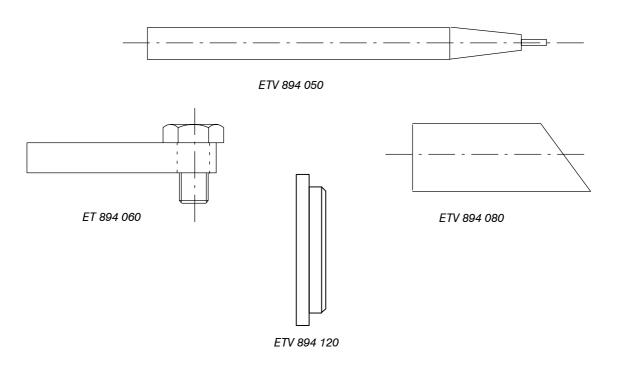

	8. 11-1990	Model	Code	Page
42 Gearbox	1. 1. 1995	6000-8750	420	5


Gearbox, description

Position of the gearbox is shown in the figure below. Reverse shuttle and quick—shift gear are attached to the front of the gearbox. Power take—off is attached to the rear end. Rear axles are attached to the both sides of the gearbox. Differential is fitted in the rear part of the gearbox housing.

The gearbox is operated mechanically with a speed gear lever and range gear lever on the right hand side of the driver's seat. Gearbox has three ranges (LL-M-H) and four speed gears. The reverse shuttle is operated with a separate lever.

The quick—shift gear doubles the number of speeds. The Delta Powershift gear triplicates the number of speeds.

The gearbox is fully synchronized (except LL-range). Gear wheels have helically cut teeth. Pressure lubrication. Separate reverse shuttle.

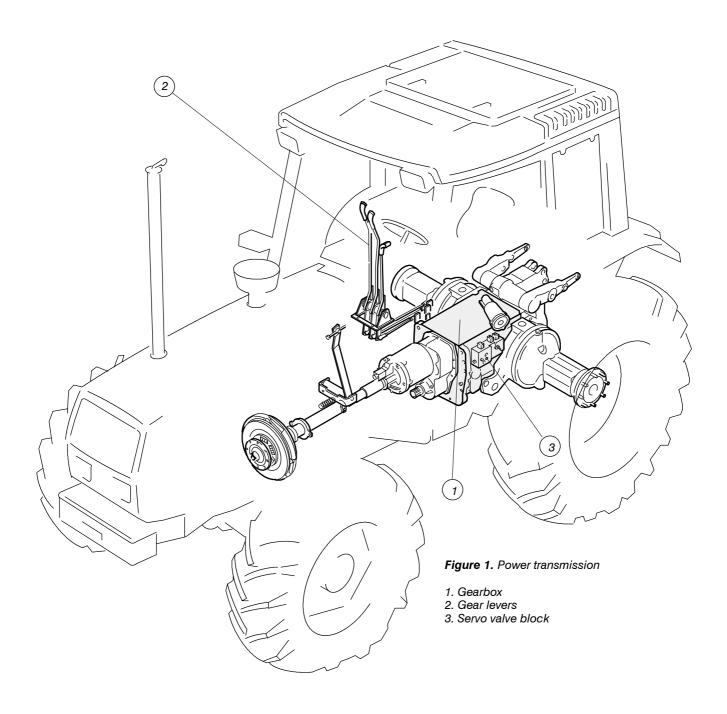

	8, 17-1990	Model	Code	Page
42 Gearbox	1. 1. 1995	6000-8750	420	6

Gearbox has four shafts (or five if ground speed PTO)

- input shaft (P)
- layshaft (S)
- bevel pinion shaft (M)
- transmission shaft (U)
- ground speed PTO shaft (AVO), optional

In the lower part of the gearbox there is fitted a transmission shaft (U), which transmits LL-range to the pinion shaft and power to the ground speed PTO shaft (optional). There is a 4WD gear and 4WD clutch drum fitted in the front end of the transmission shaft. Power to the 4WD clutch drum is transmitted from the gear at the front end of the pinion shaft.


Selector fork for the ground speed PTO is fitted on the pinion shaft (M). The ground speed PTO fork is operated with the PTO control lever.

Input shaft (P), layshaft (S) and pinion shaft (M) are supported in taper roller bearings, ground speed PTO shaft (AVO) and transmission shaft (U) in ball bearings.

Input shaft and pinion shaft have pressure lubrication. Other shafts are lubricated through splash lubrication.

In the rear end of the input shaft there is a pump driving mechanism which is powered by a long drive shaft from the flywheel. Input shaft front end splines engage to the reverse shuttle gear splines.

End float for the input shaft and layshaft is adjusted with shims in the front end of the shafts. Pinion shaft bearing preload is adjusted with spacer rings (2 pcs) at the front end of the shaft. Position of the pinion shaft is adjusted with shims under the shaft rear bearing outer race.

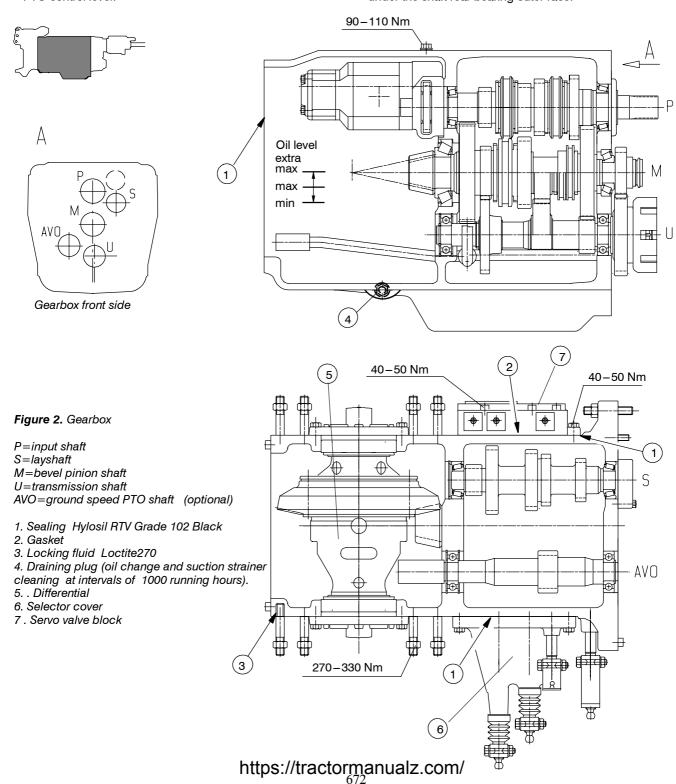

	15. 5. 19 96	Model	Code	Page
42 Gearbox	1. 8. 1998	6000-8750	420	7

Power routes in gearbox


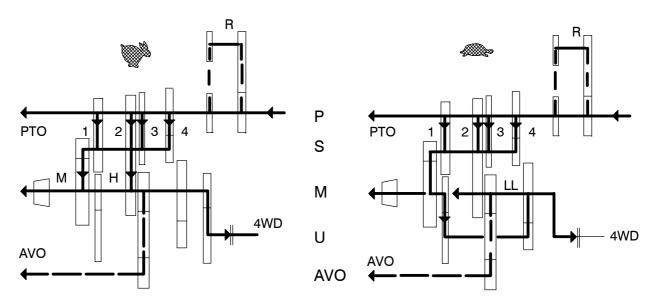


Figure 3. Power route in ranges H and M

Figure 4. Power route in range LL


Gearbox shafts

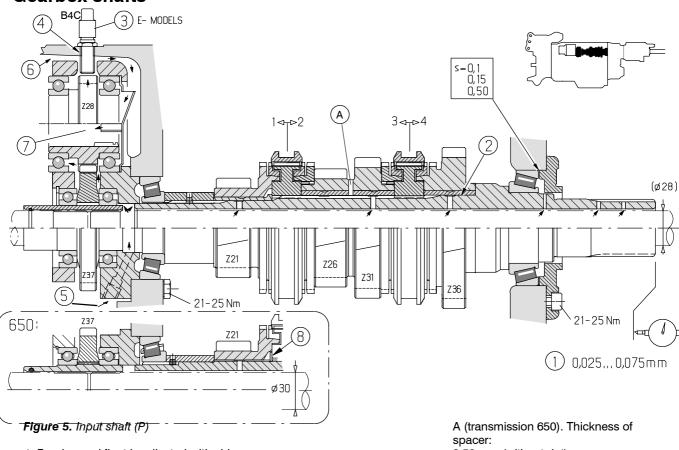

- 1. Bearing end float is adjusted with shims
- 2. Bushing is locked with Loctite 601
- 3. Engine speed sensor (only 6600E and 8100E)
- 4. Sensor threads are locked with Loctite 542 (only 6600E and 8100E)
- 5. Lubricating oil to the input shaft
- 6. Splash oiling from crown wheel
- 7.Lubricating oil to pump drive shaft splines

- 3,50 mm (without dot)
- 3,65 mm (1 dot)
- 3,80 mm (2 dots)
- 3,95 mm (3 dots)
- 4,10 mm (4 dots)


Note! In the 650 transmission the input shaft rearmost bearing is larger. Also the input shaft is different in the transmissions 300 and 460 due to the thicker pump drive shaft of the 650. In addition, gearwheel Z21 has been made broader. Spacer ring A has been added between gears Z26-Z31. Adjust the clearance beween circlip (8) and synchro hub to zero or as small as possible. https://tractormanualz.com/

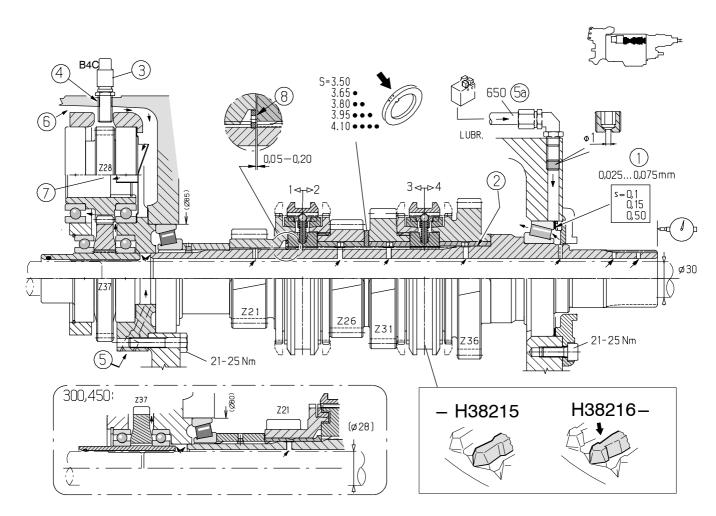

Picture 5A. Input shaft in transmission 650 from ser. no. H42416 incl. (not HiTech).


- 1. Bearing end float is adjusted with shims
- 2. Bushing is locked with Loctite 601
- 3. Engine speed sensor (CareTel, AC V)
- 4. Sensor threads are locked with Loctite 542
- 5. Lubricating oil to the input shaft
- 5a. Lubricating oil onto the input shaft front bearing
- 6. Splash oiling from crown wheel
- 7. Lubricating oil to pump drive shaft splines
- 8. Circlip. Play between circlip and synchronizing unit hub is adjusted to 0,05–0,20 mm with a spacer between gears Z26 and Z31.

	\searrow	Model	Code	Page
42 Gearbox	1. 11. 1998	6000-8750	420	7B

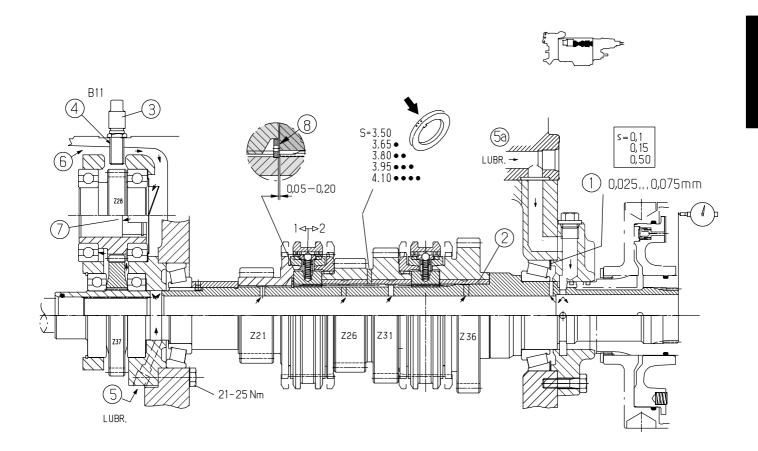

Kuva 5B. Input shaft in HiTech models (transmission 650).

- 1. Bearing end float is adjusted with shims
- 2. Bushing is locked with Loctite 601
- 3. Engine speed sensor (CareTel, AC V)
- 4. Sensor threads are locked with Loctite 542
- 5. Lubricating oil to the input shaft
- 5a. Lubricating oil onto the input shaft front bearing
- 6. Splash oiling from crown wheel
- 7. Lubricating oil to pump drive shaft splines
- 8. Circlip. Play between circlip and synchronizing unit hub is adjusted to 0,05 0,20 mm with a spacer between gears Z26 and Z31.

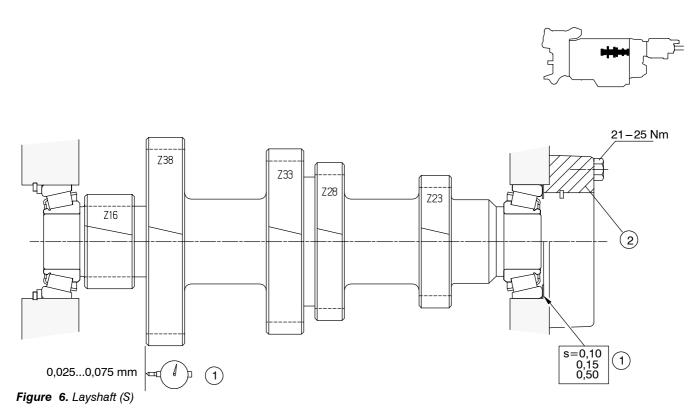

- 1. Bearing end float is adjusted with shims
- 2. Note the position of the bearing cover Layshaft gearwheels Z16 and Z38 have been made broader

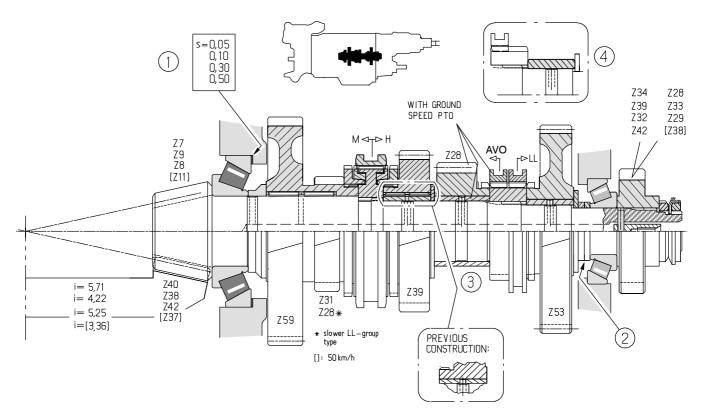


Figure 7. Bevel pinion shaft (M)

- Shims for adjusting position of the bevel pinion shaft
 Bearing preload is adjusted with spacer rings

- 3. Gear Z28 and AVO coupling only on tractors with ground speed PTO 4. If coupling sleeve LL and gear Z53 removed, there is a sleeve in place. **Note!** Figures in brackets = transmission 50 km/h.

Note! On latest shafts there is a needle bearing fitted inside gear Z39 (for range H). This must be observed during possible repair works.

42 Gearbox	15 5: 1993	Model 60008750	Code 420	Page 9
	15. 4. 1995	0000-0750	0	

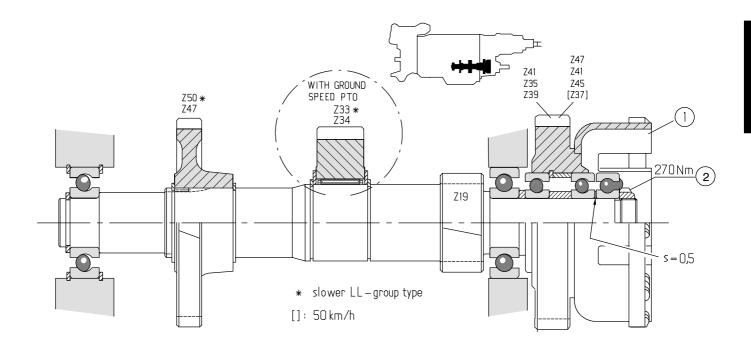


Figure 8. Transmission shaft (U)

1. 4WD clutch drum 2, Shaft nut (270 Nm)

Note! Gear Z34 only on tractors with ground speed PTO. Figures in brackets = transmission 50 km/h.

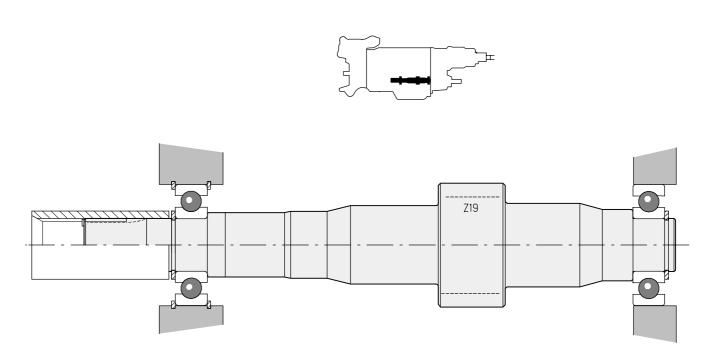


Figure 9. Ground speed PTO shaft (AVO) (optional)

Note! Gear wheel Z19 has been made wider on the latest shafts.

	15. 6. 19 92	Model	Code	Page
42 Gearbox	15. 5. 1993	6000-8750	420	10

Synchronization

Synchronizing cones

On input shaft (couplers for gears 1 – 2 and 3 – 4): Ø82 mm, steel

On bevel pinion shaft (coupler for ranges M and H): Ø90 mm, steel

The synchromesh units can be fitted either way. The synchromesh units on the input shaft are interchangeable and can be fitted either way. Measuring synchronizing cone wear and assembling the unit, see page **423/7**.

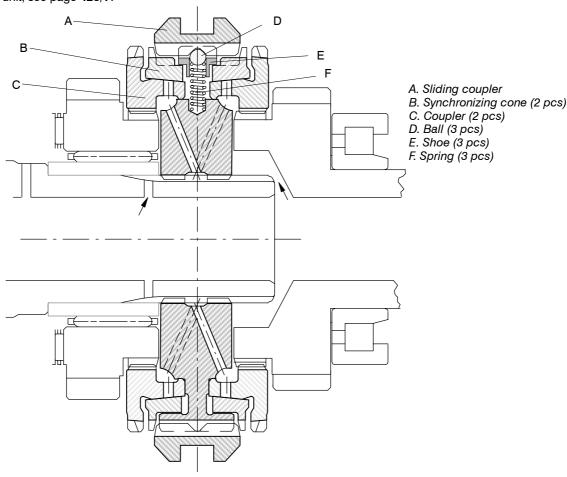


Figure 10. Synchromesh unit

Engagement

The axial movement of the sliding coupler (A) presses the synchronizing cone (B) against the male taper on the coupler (C) by means of the balls (D) and shoes (E). The different speeds of the components to be coupled together produces staggering of their relative positions, limited by stops, which in turn causes the chamfered teeth on the synchronizing cone (B) to press against the sliding coupler (A), thereby preventing any relative movement of this coupler. The pressure exerted by the sliding coupler (A) and the staggered position of the synchronizing cone (B) creates axial pressure between the tapered friction surfaces on the synchronizing cone (B) and the coupler (C) by means of the chamfers on the teeth. This axial pressure gradually reduces the difference in speeds in order to achieve synchronization.

Once, the speeds have been synchronized, the sliding coupler (A) continues to exert pressure against the synchronizing cone (B) and pushes it backwards until the teeth in coupler (A) are opposite gaps between the teeth on the synchronizing cone (B). At this point the resistance, which had so far prevented the sliding coupler (A) from moving, is overcome and the sliding coupler (A) engages silently with the teeth in the coupler (C)

Neutral position

The sliding coupler (A) is in the middle position. Balls (D) are pushed into the V shaped groove in the sliding coupler (A) by springs (F). The gears can turn freely on the shaft. The sliding coupler (A) is locked in this position by three balls (D) held by springs (F).

Differential

Note! The differential is the same as on Valmet 505 – 905 tractors.

The crown wheel and differential case are mounted in the gearbox housing on taper roller bearings. Bearing preload and tooth backlash between the pinion and the crown wheel are adjusted with threaded flanges.

On 6000 – 6400 and 8000 tractors, the differential has two differential pinions. Tractors 6600 – 6900 and 8050 – 8750 have four differential pinions in the differential. The side bevel gears and pinions in the differential case have plain bearings.

Differential lock

The differential lock is an electro—hydraulically controlled multi—disc clutch. The solenoid valve for the lock is placed on the servo valve block on the left hand side of the gearbox.

The low pressure pump supplies oil to the servo valve block via an external oil hose. A pressure—limiting valve on the servo valve block limits the diff. lock oil pressure to 1,8 MPa. Pressurised oil from the servo valve block to the diff. lock is conducted through a pipe inside the gearbox housing.

In the differential case cover there is a piston which presses the clutch discs together, thus connecting the differential bevel side gear to the differential casing.

The diff. lock can be engaged while driving. The differential lock disengages automatically, if the brake pedals (or one pedal) are pressed.

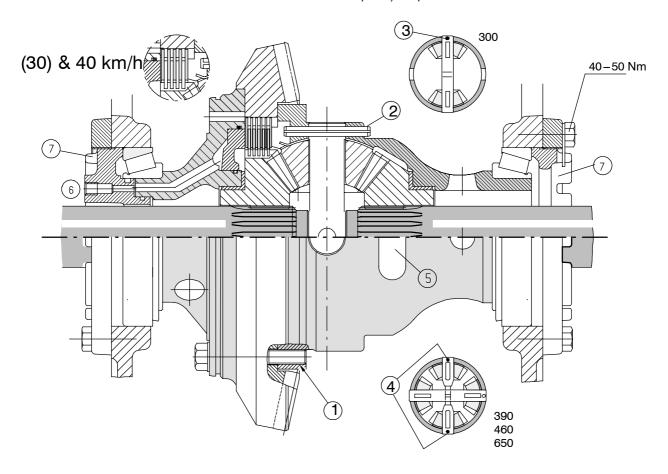


Figure 11. Cross-section of differential

- 1. Loctite 270 on the crown wheel bolt threads
- 2. Note the position of the tension pin
- 3. On models 6000 6400 and 8000, the differential pinion shaft is locked with a tension pin (2) (1 pc).
- 4. On models 6600 6900, 8050 8750, the shorter diff. pinion shafts are locked with tension pins (two pins are needed).
- 5. Oil hole for lubricating oil from the PTO unit lubricating oil pipe hole.
- 6. Pressurised oil to the differential lock
- 7. Threaded flanges for adjusting differential bearing preload and tooth backlash between pinion / crown wheel

Note! On the earlier tractors the differential lock has 5 friction discs and 4 steel discs. On the latest tractors there are 5 friction discs and 6 steel discs, which are thinner, since the disc location is the same. The new discs pack can be fitted into the earlier tractors without modifications. Max. thickness of the disc pack is 21,5 mm.


	15. 5. 19 96	Model	Code	Page
42 Gearbox	1. 4. 1997	6000-8750	420	12

Gear levers

The range gear lever (2) selects ranges LL, M or H. When selecting e.g. LL, the lever is moved first outwards and then forwards. The lever lower end first moves inwards and pushes via a cable the selector lever on the side cover outwards and it engages with a groove on the LL—range selector fork. When the range gear lever is then moved forwards, the lower part moves backwards and via shifter rods it turns the selector lever so that the LL—range engages.

In the same way the other ranges are engaged. The range gear lever is first moved towards the driver' seat whereat the selector lever on the side cover is pushed inwards and the lever inner end engages with a groove on the selector fork for ranges M and H (fork in foremost position=M. Fork in rearmost position=H).

The speed gear lever (1) engages gears 1 – 4. When selecting e.g. gear 1, the gear lever first is moved towards the driver's seat and then forwards. When moving towards the seat the selector lever on the side cover is moved inwards (by the cable) and it engages with a groove on the fork for gears 1 – 2. When the gear lever is then moved forwards, the selector lever is turned (by the shifter rod) so that gear 1 engages.

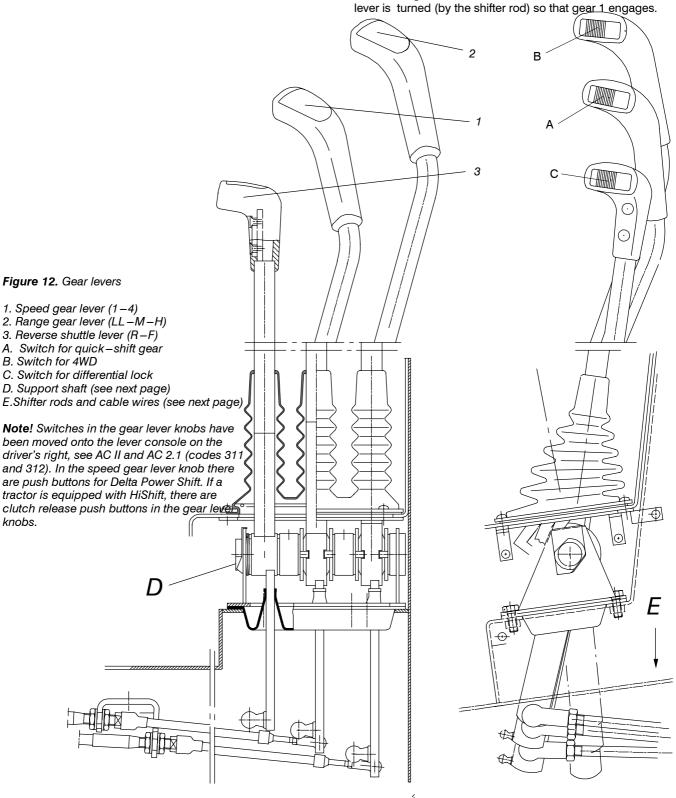

	1.9.1992	Model	Code	Page
42 Gearbox	1. 1. 1995	6000-8750	420	13

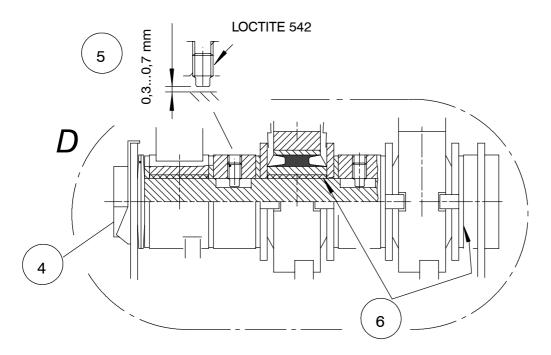


Figure 13. Gear lever support shaft (point D in figure 12)

Note! Rubber joints allow side movement for the speed and range gear levers

- 4. Force at the end of the reverse shuttle lever is adjusted to 10-20 Nm by tightening the shaft
- 5. Adjust distance to 0,3-0,7 mm by turning the pin
- 6. Universal grease

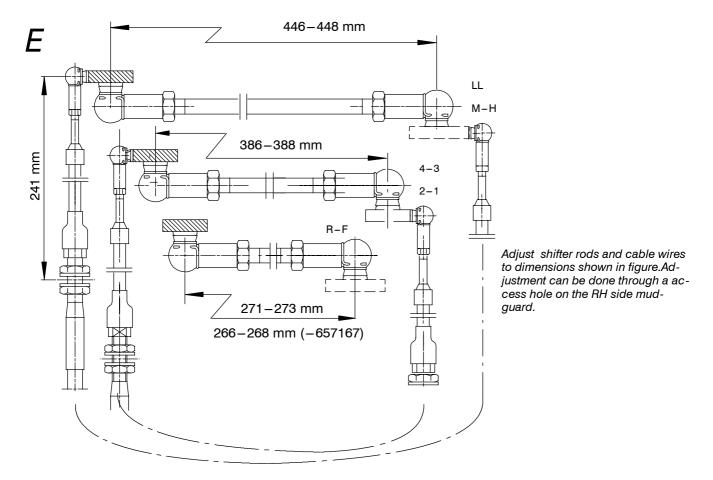


Figure 14. Shifter rods and cable wires for inwards/outwards movement of the selector levers (point E in figure 12). The gear lever must stand in the neutral position when adjusting measurement 241.


		Model	Code	Page
42 Gearbox	8. 11. 1990	6000-8750	420	14

Selector levers and side cover

Selector levers, which move the selector forks, are led into the gearbox through the side cover on the right side of the gearbox. Selector levers for speed and range gears can move also in—and outwards on the cover.

On the side cover there are fitted blocking pieces which prevent simultaneous engagement of two gears. At the outer end of the selector levers there are fitted shifter levers. Shifter rods and cable are attached to the shifter levers.

Also the selector lever for the ground speed PTO (optional) is led into the gearbox through the side cover (see section 46 Power take-off). Note! Reverse shuttle selector lever is placed in front of the side cover (see section 44).

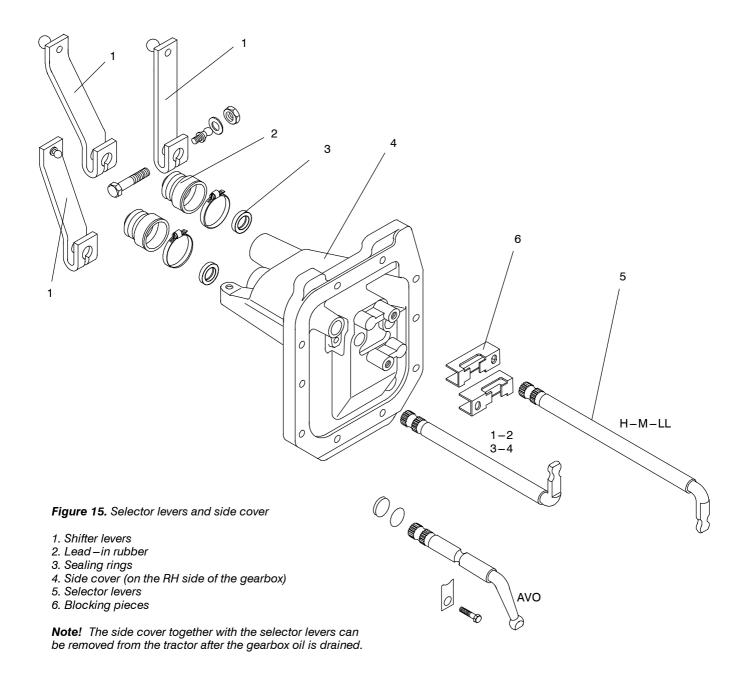

	8, 17, 1990	Model	Code	Page
42 Gearbox	1. 1. 1995	6000-8750	420	15

Selector forks and selector fork rails

Each selector fork for gears M-H, 1-2 and 3-4 are fitted on their own rail. The forks are attached to the rails with a locking pin. The selector lever round—shaped end engages with the groove on the selector fork.

There is an adjusting piece at the rear end of the rails. There are also locking balls and springs which engage with the adjusting piece grooves (3 pcs).

When the gears are in neutral, the grooves on forks M-H and LL should be opposite each other. In the same way in neutral position, the grooves on forks 1-2 and 3-4 should be opposite each other. This must be noted when adjusting the forks.

The rail for fork LL (and for the ground speed PTO fork) is attached to the gearbox housing with threads.

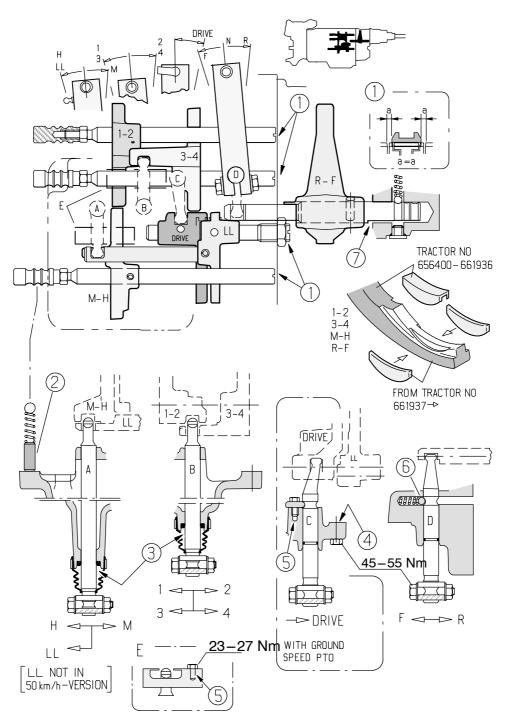


Figure 16. Selector forks and rails

- 2. Long pins into the two upper hole and short pin into the lowest hole
- 3. Universal grease
- 4. Hylosil sealing compound (UK 0067) between cover and gearbox
- 5. Loctite 242 (UK 0126).

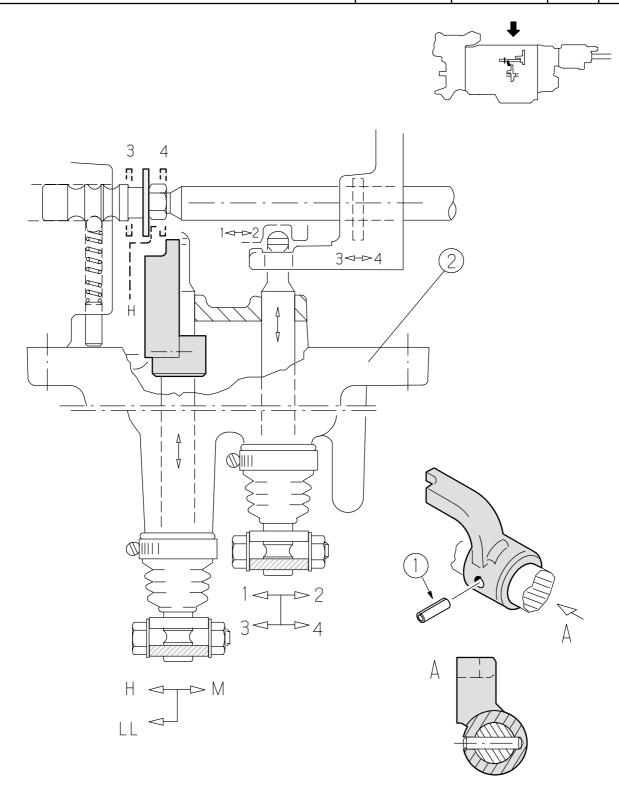


Figure 17. Blocking device for gear H4

- 1. The tension pin must be fitted with the split side either upwards or downwards.
- (N.B. The bore does not reach through the blocking device). 2. Gearbox RH side cover

On tractors intended for certain markets, the gearbox (type 40 km/h) is equipped with a blocking device for gear H4. The maximum speed is then about 30 km/h.

Function:

If the speed gear 4 has been engaged, and then the range gear lever is moved to the H position, the blocking device pushes (by means of a washer on the selector fork rail) the speed gear 4 out of mesh.

If, in turn, the range gear lever is in H- position, and the speed gear lever is moved to position 4, the device disengages the range H.

Model **6000-8100**

Code

420

Page **17**

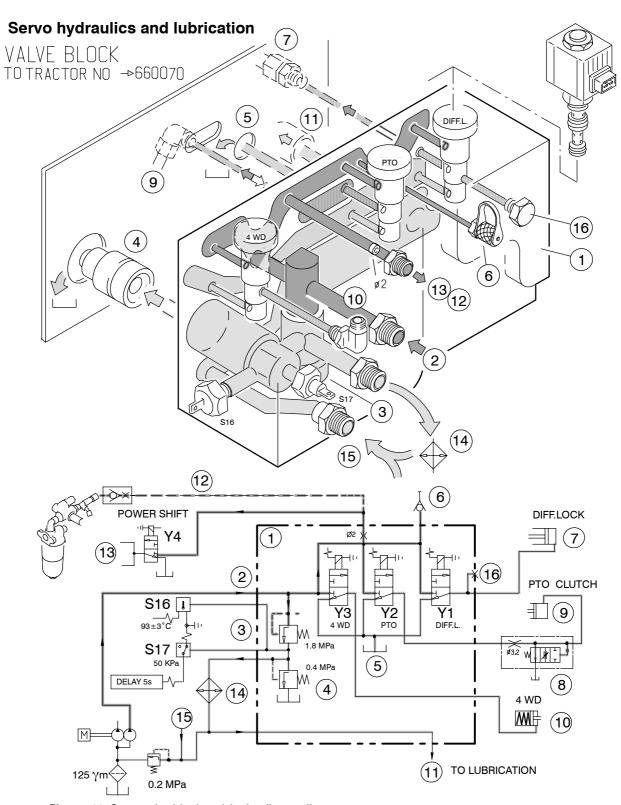


Figure 18. Servo valve block and hydraulics, earlier valve block, -660070.

- 1. Servo valve block
- 2. Oil supply from low pressure pump
- 3. Oil pressure and temperature sensors (S16, S17)
- 4. Safety valve for oil cooler (0,4 MPa)
- 5. Return oil to gearbox housing
- 6. Pressure test point (1,8 MPa)
- 7. Pressurised oil to diff. lock
- 8. Cushioning valve, PTO engagement
- 9. Pressurised oil to PTO clutch
- 10. Pressurised oil to 4WD clutch (external pipe)

- 11. To lubrication of transmission
- 12. Priority valve for steering (external pipe)
- 13.Power shift, quick-shift gear (external pipe)
- 14. Oil cooler
- 15. Return oil connection, working hydraulics
- 16. Diff. lock engaging pressure
- Y1) Solenoid valve, diff. lock
- Y2) Solenoid valve, PTO
- Y3) Solenoid valve, 4WD
- S16) Temperature sensor, gearbox temperature (90 96 °C)
- S17) Oil pressure sensor, gearbox lubrication (20-50 kPa)

	15 5. 1993	Model	Code	Page
42 Gearbox	1. 9. 2002	6000-8100	420	17A

Servo hydraulics and lubrication

The servo valve block is fitted on the LH side of the gearbox (see figures 17 and 19). The low pressure pump supplies oil to the servo valve block, which has a pressure—relief valve (1,8 MPa) and pressure—test point.

There are solenoid valves for 4WD, PTO and diff. lock on the servo valve block (solenoid valve for the quick—shift gear is fitted on the gear).


On the valve block there is a transmission oil temperature sensor (warning lights comes on at $+93^{\circ}\pm3^{\circ}$ C) and oil pressure sensor (warning light comes on at 20-50 kPa).

Connections to/from the valve block:

- inlet connection from pump (on front side)

- outlet connection to diff. lock (on rear side)
- outlet connection to 4WD clutch (on front side, external pipe)
- outlet connection to PTO clutch (on rear side)
- outlet connection to quick—shift gear (on front side, external pipe). From this connection has also been drawn a hose to the priority valve
- outlet/inlet connections to/from oil cooler (on front side).
 From the inlet connection has also been drawn a hose via pressure—limiting valve (0,2 MPa) to the pump suction side.
 outlet connection to lubrication of transmission (on rear
- outlet connection to lubrication of transmission (on rear side)

In addition, on the valve block there is a safety valve (0,4 MPa), which protects the oil cooler. The lubricating oil pressure—limiting valve (0,2 MPa) is fitted at the rear end of the suction strainer housing on the gearbox.

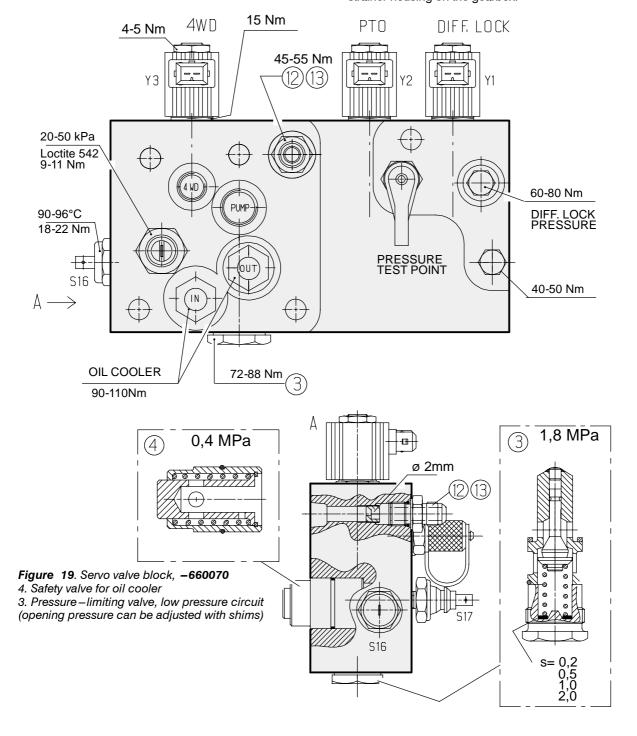



Model 6000-8750 Code

420

Page 17**B**


VALVE BLOCK (2-STEP QUICK-SHIFT GEAR)

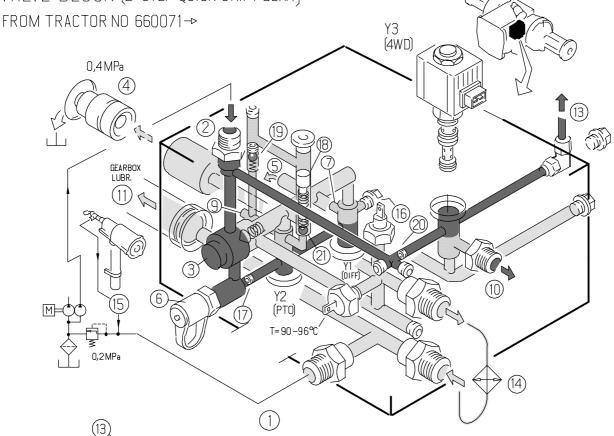

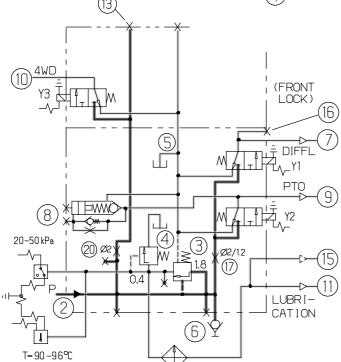

Picture 20. New servo valve block with effect from ser. no. 660071 on tractors which have 2-step quick-shift gear or are without quick-shift gear.

- 1. Servo valve block
- 2. Oil supply from low pressure pump
- 3. Pressure limiting valve, 1,8 1,9 MPa (18 19 bar)
- 4. Safety valve 0,4 MPa (4 bar) for oil cooler. Protects hydraulic system e.g. when oil is cold and thick.
- 5. Tank passage from solenoid valves
- 6. Pressure -test point (Valmet HPR, thread M16)
- 7. Pressure oil to differential lock.
- 8. Cushioning valve for PTO clutch, incl. parts 18, 19, 21.
- 9. Pressure oil to PTO clutch
- 10. Pressure oil to 4WD clutch
- 11. Oil to gearbox lubricating system, see picture on page 420/22.
- 13. Pressure oil to quick-shift gear. If not guick-shift gear, the passage is plugged.
- 14. Oil cooler
- 15. Connection to return side of working hydraulics.
- 16. Plug (readiness för front axle diff. lock)
- 17. Restriction ø 2 mm (-661797) or ø 1,2 mm (661798-) eliminates pressure drop when engaging PTO clutch or diff. lock. On the later valve blocks (665536 -) there is a separate passage from the pump pressure side to the diff. lock solenoid valve. There is restriction ø2 mm on this passage. In this way are separated functions of the diff. lock and the PTO.
- 18. Piston, PTO clutch cushioning valve
- 19. Valve ball, PTO clutch cushioning valve
- 20. Restriction Ø 2mm eliminates pressure drop when engaging 4WD or quick-shift gear clutch.
- 21. Valve ball, PTO clutch cushioning valve

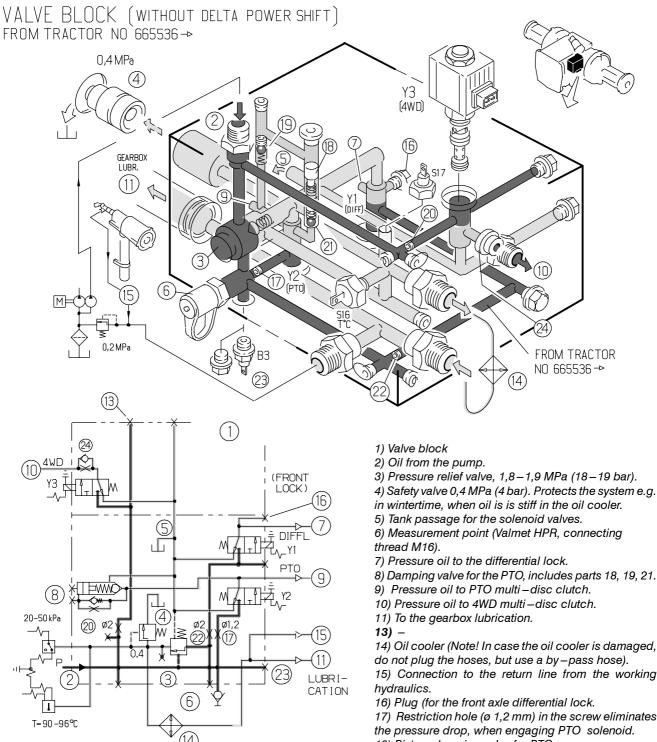

Picture 20A. For oil to the differential lock solenoid (Y1) has been drilled an own passage with effect from tractor serial number 665536 -> (at the same time the passage between the PTO solenoid (Y2) and solenoid (Y1) has been removed).

In this way is prevented the pressure drop of the PTO clutch when engaging simultaneously the differential lock.

- in wintertime, when oil is is stiff in the oil cooler.
- 8) Damping valve for the PTO, includes parts 18, 19, 21.

- 14) Oil cooler (Note! In case the oil cooler is damaged, do not plug the hoses, but use a by-pass hose).
- 15) Connection to the return line from the working
- 17) Restriction hole (ø 1,2 mm) in the screw eliminates the pressure drop, when engaging PTO solenoid.
- 18) Piston, damping valve for PTO.
- 19) Ball, damping valve for PTO.
- 20) Ø 2mm throttle eliminates the pressure drop, when engaging 4WD solenoid valve.
- 21) Ball valve, PTO damping system.
- 22) Ø 2mm restriction hole eliminates the press. drop, when engaging the differential lock.
- 23) Temperature sender unit for Agrodata display (optional equipment).
- 24) Restriction/counter valve (Ø 1,6 mm restriction hole) prevents the pressure drop in the system, when the 4WD has been disengaged, e.g. when braking. From tractor no 668118->.


6000-8750

Model

Code **420**

Page **19**

Later valve block 660071 - (on tractors without quick-shift gear or with 2-step quick-shift gear)

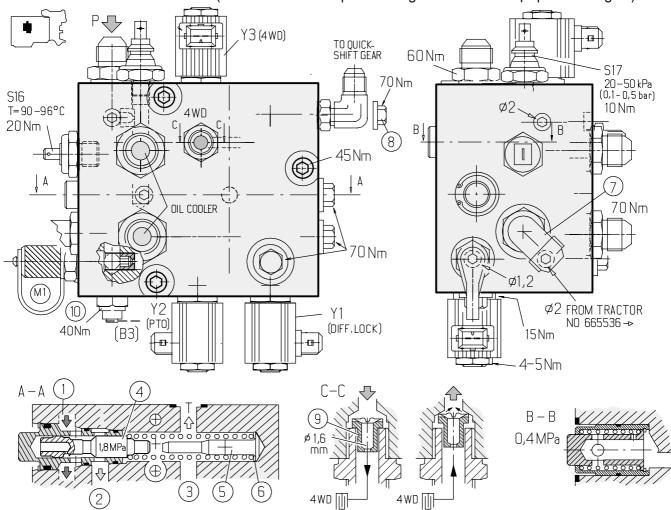

Picture 20B. Later servo valve block on tractors without quick—shift gear or with 2—step quick—shift gear, **660071**—.

Y1=Solenoid valve for diff. lock

Y2=Solenoid valve for PTO

Y3=Solenoid valve for 4WD

S16=transmission oil temperature sensor (warning light)

S17=transmission oil pressure sensor (warning light)

P=Pressure oil supply from low pressure pump

M1. Pressure - test point (clutch pressures)

- 1) Pressure oil to the valve block (flows further to solenoid valves).
- 2) To gearbox lubrication
- 3) Tank channel
- 4) Slide
- 5) Limiter
- 6) Fit shims, if needed
- 7) Connection with return line of the working hydraulics
- 8) Plugged when the quick-shift gear has not been mounted.
- 9) Restriction/counter valve (Ø 1,6 mm restriction hole) prevents the pressure drop in the DPS multi disc clutches, when the 4WD has been disengaged (the multi disc clutch is then pressurised), e.g. when braking. The valve has been mounted from tractor no 668118 >. The valve can be mounted afterwards.

Left picture (4WD disengaged):

Oil flows through the restriction \emptyset 1,6 mm to the 4WD multi-disc clutch.

Right picture (4WD engaged):

Oil returns from the 4WD multi – disc clutch without restriction (opening corresponds to a total hole of Ø 3,7 mm) to the tank.

10) Temperature sender unit for Agrodata – display (optional equipment).

 
Note! When the current is switched on to the solenoid valves, the nut at the end of the valves becomes magnetic which can be checked e.g. with a screwdriver. The 4WD clutch solenoid valve is energized when the 4WD is disengaged.

This new servo valve block has the same functions as the earlier valve block in figure 19. The build—up of the pressure—limiting valve is, however, different as well as the positions of various components. In addition, this new valve has an in—build cushioning valve for the PTO clutch (see section 46).

If the tractor has 3-step quick-shift gear (Delta Powershift), the tractor has this same valve block, but it has additionally two extra solenoid valves and one valve spool and necessary pipe connectors (see picture **20C** on next page).

Note! With effect from tractor ser. no. **665536** the valve block has been changed. The modified valve block can be fitted in place of the earlier block. When fitting the latest valve block, thicker "O" – rings (**KH 4070**) must be fitted between the gearbox and the valve block.

Important! If the valve block should be removed, push with a large screwdriver the lubricating oil pipe (see picture **23** point **2** on page **420/22**) towards the gearbox. Push the screwdriver through the oil cooler lower pipe connector. Otherwise the lubricating oil pipe lower end can loosen from the distribution pipe.





Model

420 6000-8750

Code

Page 19A

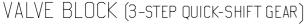

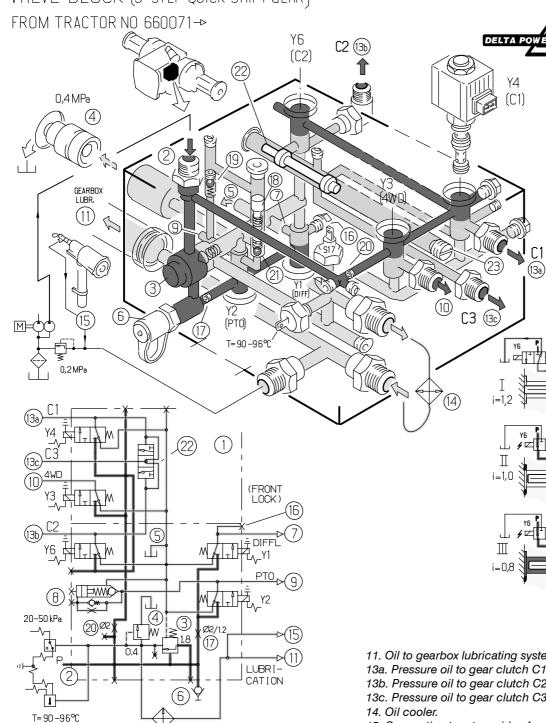


Picture 20C. Servo valve block with effect from ser. no. 660071 - on tractors which have Delta Powershift (3-step quick-shift gear).

(14)

- 1 . Servo valve block
- 2. Oil supply from pump
- 3. Pressure limiting valve, 1,8 1,9 MPa (18 19 bar)
- 4. Safety valve 0,4 MPa (4 bar). Protects oil cooler when hydraulic oil is cold and thick.
- 5. Tank passage from solenoid valves
- 6. Pressure test point (Valmet HPR, thread M16)
- 7. Pressure oil to differential lock.
- 8. PTO cushioning valve, incl. parts 18, 19, 21.
- 9. Pressure oil to PTO clutch
- 10. Pressure oil to 4WD clutch

- 11. Oil to gearbox lubricating system
- 13a. Pressure oil to gear clutch C1 (see section 44).
- 13b. Pressure oil to gear clutch C2 (see section 44).
- 13c. Pressure oil to gear clutch C3 (see section 44).
- 14. Oil cooler.
- 15. Connection to return side of working hydraulics.
- 16. Plug (readiness for front axle diff. lock)
- 17. Restriction ø 2 mm (-661797) or ø 1,2 mm (661798-) eliminates pressure drop when engaging PTO clutch or diff. lock. On the later valve blocks (665536 -) there is a separate passage from the pump pressure side to the diff. lock solenoid valve. There is restriction ø2 mm in this passage. In this way are separated functions of the diff. lock and the PTO.
- 18. Piston, PTO cushioning valve
- 19. Valve ball, PTO cushioning valve
- 20. Restriction Ø 2mm eliminates pressure drop when engaging 4WD or quick-shift gear (Delta Powershift)
- 21. Valve ball, PTO cushioning valve
- 22. Valve spool for engaging gear clutch C3.
- 23. End plug of valve spool (position marked with a punch mark).

Servo valve block on tractors which have 3-step quick-shift gear 660071-, (Delta Powershift)

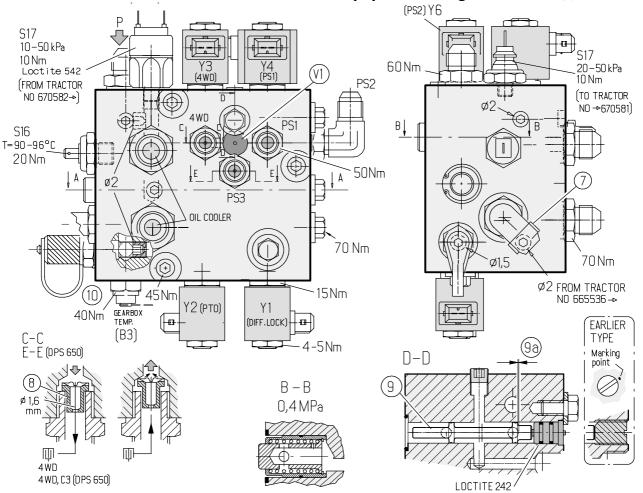

Picture 21. Servo valve block on tractors which have Delta Powershift, **660071** – (compare with picture 20 on previous page).

Y1=Solenoid valve for diff. lock

Y2=Solenoid valve for PTO

Y3=solenoid valve for 4WD

Y4=Solenoid valve for reduction gear

Y6=Solenoid valve for overdrive

S16=Transmission oil temperature sensor (warning light)

S17=Transmission oil pressure sensor (warning light)

Note! Sensor S17 in the picture above is fitted on the valve block up to ser. no. **670581**. From ser. no. **670582 incl.** there is a new sensor, which has two wires (earth and supply) and the pressure values are 10-50 kPa. Apply Loctite 542 to the threads of the sensor.

P=Oil supply from low pressure pump

V1=Valve spool for direct ratio of Delta Powershift

7= Pipe connector for connecting return oil side of working hydraulics

8) Restriction/counter valve (Ø 1,6 mm restriction hole). This valve is located in the 4WD pressure outlet, and in connection with 650 DPS, also in C3 multi – disc clutch pressure outlet.
9) Valve slide

9a) The adjustment of the valve slide has been done in the factory (grinding it so, that the clearance 9a and the corresponding clearance at the left boring comes true).

Normally there is no need of adjustment. The slide is available as spare part, when needed, adjustment by grinding.

Earlier model: The position of the adjusting screw is marked with a punch point.

New model: The adjusting screw has been replaced with a plug. in this way the possible faulty adjustments can be avoided.

In this servo valve block the pressure—limiting valve (section A—A) is the same as shown in figure **20B** on previous page. Also the oil cooler safety valve (section B—B) and the 4WD restriction/counter valve (section C—C) are the same.

The servo valve block above has parts which are needed for 3-step quick-shift gear (Delta Powershift). Otherwise the construction of this servo valve block corresponds to the valve block presented in picture **20B** on previous page.


Important! If repair work concerns the 3-step quick-shift gear (Delta Powershift), see section **44** page **440/13**.

Also this valve has the cushioning valve for the PTO clutch, see also section **46**.

Important! If the valve block should be removed, push with a large screwdriver the lubricating oil pipe (see picture **23** point **2** on page **420/22**) towards the gearbox. Push the screwdriver through the oil cooler lower pipe connector. Otherwise the lubricating oil pipe lower end can loosen from the distribution pipe.

Note! With effect from tractor ser. no. **665536** the valve block has been changed. The modified valve block can be fitted in place of the earlier block. When fitting the latest valve block, thicker "O" – rings (**KH 4070**) must be fitted between the gearbox and the valve block.

Note! The threaded plug (1) has been removed and has been replaced with a lockin plate which is fastened on the valve block with a screw. In this case the valve spool does not need any adjustment, but it is in the correct position when the locking plate is fitted.

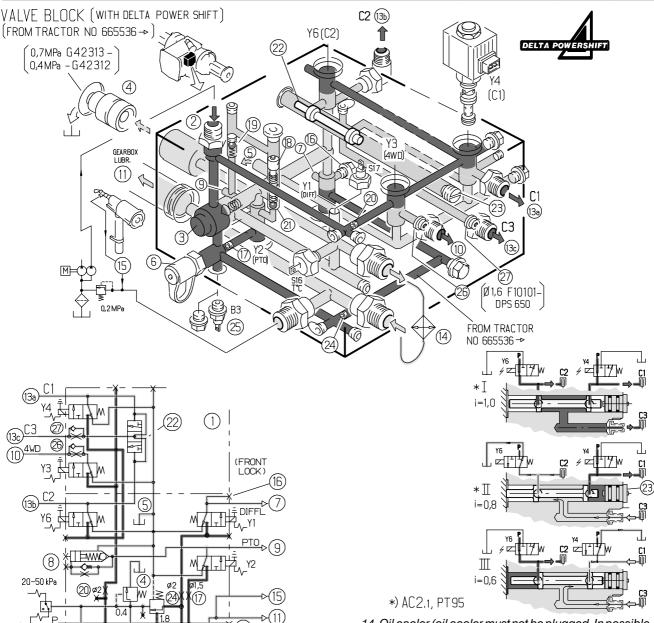

LUBRI-

CATION

Picture 21A. Servo valve block from ser. no **668103** incl on tractors which have a **mechanical** shuttle.

6

1 . Servo valve block

T=90-96°C


- 2. Oil supply from pump
- 3. Pressure limiting valve, 1,8–1,9 MPa (18–19 bar)
- 4. Safety valve 0,4 MPa (4 bar). Protects oil cooler when hydraulic oil is cold.
- 5. Tank passage from solenoid valves
- 6. Pressure test point (Valmet HPR, thread M16)
- 7. Pressure oil to differential lock.
- 8. PTO cushioning valve, incl. parts 18, 19, 21.
- 9. Pressure oil to PTO clutch
- 10. Pressure oil to 4WD clutch
- 11. Oil to gearbox lubricating system
- 13a. Pressure oil to gear clutch C1 (see section 44).
- 13b. Pressure oil to gear clutch C2 (see section 44).
- 13c. Pressure oil to gear clutch C3 (see section 44).

- 14. Oil cooler (oil cooler must not be plugged. In possible malfunctions, the cooler must be passed with hose)
- 15. Connection to return side of working hydraulics.
- 16. Plug (readiness for front axle diff. lock)
- 17. Restriction ø1,2 mm (661798-) and ø1,5 mm (G412131-). eliminates pressure drop when engaging PTO clutch.
- 18. Piston, PTO cushioning valve
- 19. Valve ball, PTO cushioning valve
- 20. Restriction Ø 2mm eliminates pressure drop when engaging 4WD or quick—shift gear (Delta Powershift)
- 21. Valve ball, PTO cushioning valve
- 22. Valve spool for engaging gear clutch C3.
- 23. End plug of valve spool (position marked with a punch mark).
- 24. Ø 2 mm restriction eliminates pressure drop when using differential lock.
- 25. Temperature sensor for Agrodata instrument (option)
- 26. Change over restriction ø2 mm. Prevents pressure drop in DPS clutches, when 4WD is disengaged (4WD clutch becomes pressurised) e.g. when braking.
- 27. DPS 650 **(F10101):** Restriction/counter valve (Ø 1,6 mm restriction hole) makes the pressure increasing slower in the multi disc clutch C3 (in other words, the opening of the planetary carrier), and in this way prevents the momentary neutral position of the Delta Powershift.

Model 6000-8750 Code 420

20B

Page

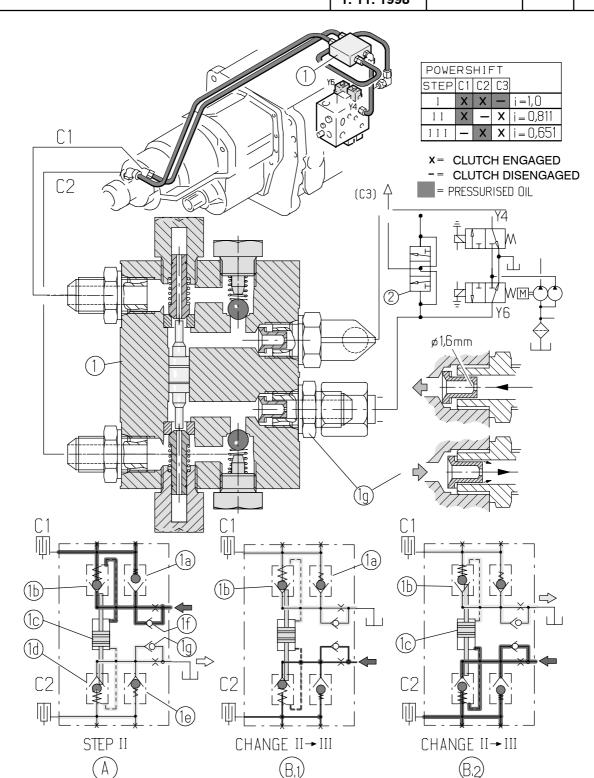

Picture 21B. Lock valve of Delta Powershift on tractors which have a mechanical shuttle.

1. Lock valve 1a,e) Non-return valve, 0,7 bar 1b,d) Non-return valve 1f,g) Change – over restriction (ø1,6 mm) 1c) Lock valve piston

In transmissions 460 and 650 the tractors have the above shown valve (not HiTech tractors). The valve is fitted between the DPS clutches C1 and C2 and the servo valve block.


The valve synchronises the engagement of clutches C1 and C2 so that pressure in one clutch drops just, when the DPS clutch is fully pressurised. The valve functions, when the DPS https://tractormanualz.com/

ratio is changed from the intermediate ratio (II) to the highest ratio III and vice versa.

Testing the valve

Select H-range gear and start to drive with revs of over 2000 rpm. Drive and depress brake pedals until the engine revs lower to about 1700-1800 rpm. Change DPS ratio from II to III and vice versa and follow the rev. counter reading. If engine revs rises much during gear change, the lock valve must be changed as a complete unit.

If engine overloads strongly during gear ratio change (from II to III or vice versa), the lock valve is faulty and should be changed. This overloading damages the DPS clutches.

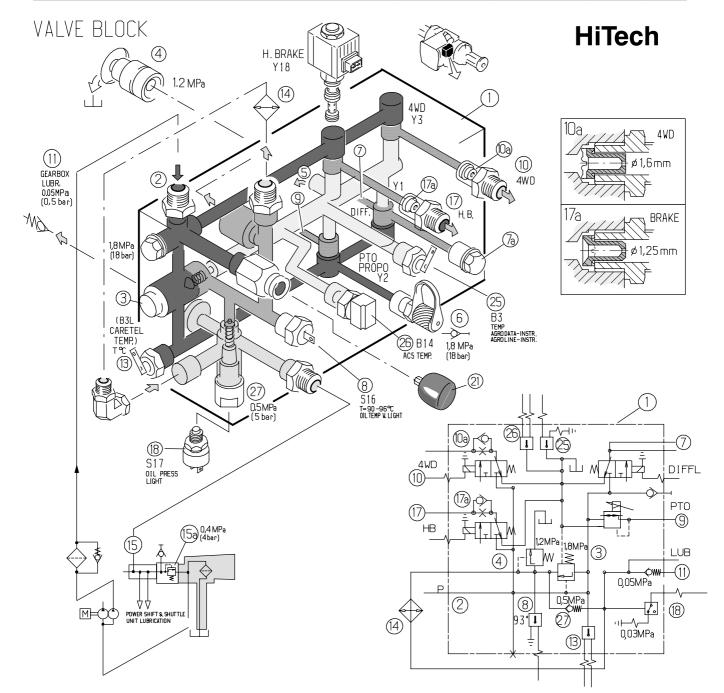

Picture 21C. Servo valve block on HiTech tractors (on the LH side of the gearbox)

Note! See also picture on page 440/24.

HiTech Shuttle has caused the following modifications in the servo valve block:

- PTO cushioning valve has been removed (PTO solenoid valve Y2 is proportional).
- The valve spindle of the DPS clutch C3 has been removed and C3 has its own proportional valve Y17 (is placed on a separate valve block on the gearbox).
- Valve Y4 (DPS clutch C1) and valve Y6 (DPS clutch C2) have been changed to proportional valves, and they are placed on the DPS housing. Hand brake solenoid valve Y18 (+valve 17a) has been added.
- DPS restrictions have been removed. A pressure accumulator has been fitted on the valve block (not in picture), which eliminates pressure drops during engaging/disengaging the multi-disc clutches.

Valves Y2 and Y1 have been connected with an oil channel. Oil cooler by – pass valve has been added. Safety valve limits max. pressure before the oil cooler to 0,7 MPa (was 0.4 MPa).

Pressure – limiting valve in the suction strainer housing is of 0,4 MPa (was 0,2 MPa).


By increasing the lubricating oil pressure and with a new by – pass of the oil cooler the oil amount, which flows direct into the tank, has been tried to minimized.

Pressure sensor **S17** has been placed under the block and it measures actual pressure after the oil cooler.

Behind plug 7a there is diff. lock clutch pressure.

Page

420 20D

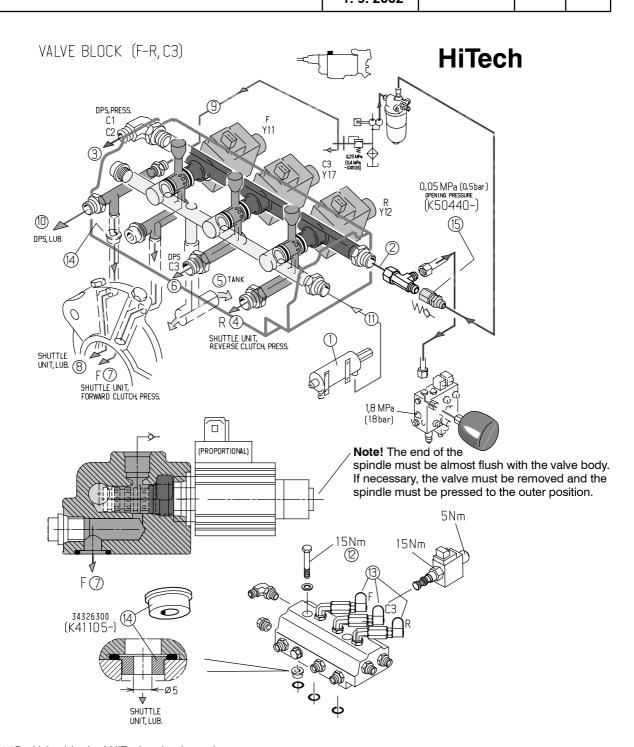

Picture 21D. Valve block of HiTech-shuttle on the gearbox housing

- 1. Valve block
- 2. Pressure oil, 1,8 MPa (18 bar), into the valve
- 3. Pressure oil into DPS clutches C1 and C2.
- 4. Pressure oil into the HiTech shuttle (rearward driving)
- 5. Tank passage (into the gearbox and shuttle housings).
- 6. Pressure oil into DPS clutch C3.
- 7. Pressure oil into the shuttle (forward driving)
- 8. Lubricating oil into the shuttle housing
- 9. Lubricating oil from filter distribution block
- 10. Lubricating oil into DPS
- 11. Tank passage from hand brake ram (leaks)
- 12. Tightening torque 15 Nm.

- Permatex Super 300 No 83 onto the threads
- 13. Proportional valve
- 14. Lubricating oil flow into the shuttle has been reduced with a restriction (diam. 5 mm, K41105-). This modification balances lubr. oil flow into the F- and R- clutches. In connection with this modification the DPS and shuttle lubr. oil flow has been improved.
- 15. A non-return valve From ser. no. K50440 incl. has been fitted to prevent oil pressure escape from pressure accumulator into the hydraulic pump and the brake valve.

This ensures that the parking brake is not engaged too fast after engine stop. Note! This happens only in case that the engine stops itself (e.g. fuel runs out) when the driving speed is over 5 km/h. Does not affect the normal function of the parking brake.

	\setminus	Model	Code	Page
42 Gearbox	15. 5. 1993	6000-8750	420	21

Lubricating system

Gearbox input shaft and bevel pinion shaft have pressure lubrication. The low pressure circuit supplies oil for lubrication. In addition, return oil from the hydraulic power lift is also delivered to the lubrication system (see hydraulic diagram in figure 17).

Lubricating oil pressure—limiting valve (0,2 MPa) is fitted at the rear end of the suction strainer housing on the gearbox.

Lubricating oil is delivered from the servo valve block via an s-shaped pipe to the distributor pipe on the bottom of the gearbox.

From the rear end of the distributor pipe has been drawn a lubricating pipe to the rear end of the input shaft (and to the hydraulic pump drive mechanism). Lubricating oil to the input shaft lubricating points is channelled in the space between the input shaft and the pump drive shaft.

From the front end of the distributor pipe has been drawn a pipe to the distributor piece in the front face of the reverse shuttle housing. From the distributor piece lubricating oil is conducted to the front end of the pinion shaft and via drillings to the different lubricating points.


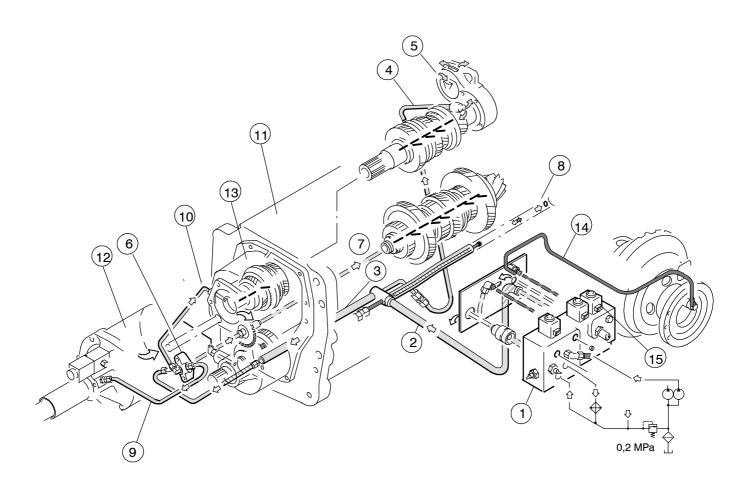


Figure 20. Lubricating system for power transmission on tractors without quick—shift gear or with 2—step quick—shift gear, **–660070**.

- 1. Servo valve block (-660070)
- 2. Lubricating oil feed pipe
- 3. Distributor pipe
- 4. Lubricating oil to input shaft
- 5. Hydraulic pump drive mechanism
- 6. Distributor piece in the front face of the reverse shuttle
- 7. Lubricating oil to bevel pinion shaft
- 8. Lubricating oil to PTO unit
- 9. Lubricating oil to quick-shift gear
- 10. Lubricating oil to reverse shuttle
- 11. Gearbox housing
- 12. Quick-shift gear
- 13. Reverse shuttle
- 14. Pressurised oil to diff. lock
- 15. Solenoid valve for diff. lock

42 Gearbox		Model	Code	Page
	15. 5. 1993	6000-8750	420	22

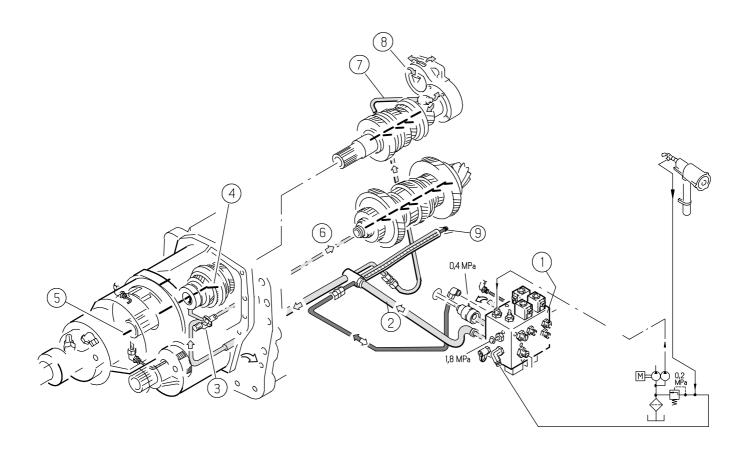

Picture 23. Lubricating system of power transmission on tractors which have 3-step quick-shift gear (Delta Powershift), 660071 -.

- 1. Servo valve block, 660071 -
- 2. Lubricating oil supply pipe
- 3. Distribution piece inside the reverse shuttle housing
- 4. Lubricatin oil of reverse shuttle
- 5. Lubricating oil of Delta Powershift
- 6. Lubricating oil to bevel pinion shaft
- 7. Lubricating oil to gearbox input shaft 8. Lubricating oil of pump drive mechanism
- 9. Lubricating oil to power take-off

23


269


In the table below is shown the working orders for certain gearbox repair work. Reconditioning selector forks, see code 421. Removing, reconditioning and fitting gearbox, see code 423.

Working order

					_				
Remove bevel pinion shaft and trans- mission shaft								10	
Remove ground speed PTO shaft (op- tional)							6	6	
Remove selector forks							8	8	
						5	9	9	
Remove Remove dif- final drives/ ferential brake hous- ings						4	2	2	
Remove F quick – shift f gear and re- it verse shuttle ii		4	4			7	4	4	
Raise cab Frear side can and split gractor be tween gearbox – fuel tank		,	7			3 (or raise the cab rear end, and splitting be- comes un- necessary)	°	3	
PTO unit						2	2	2	
Raise cab front side land split tractor between gearbox—fuel tank		ε	3						
Remove f side cover f t t t t t t t t t t t t t t t t t t	5	2	2	2			2	2	
Drain trans- F				-		-	-	T-	
	Adjusting selector forks for gears 1-2,3-4 and M-H	Adjusting selector forks for range LL and PTO (optional)	Changing selector forks	Changing selector levers		Reconditioning differential	Changing bevel pinion shaft/crown wheel	Changing syn- chronizing rings on input shaft	

Model

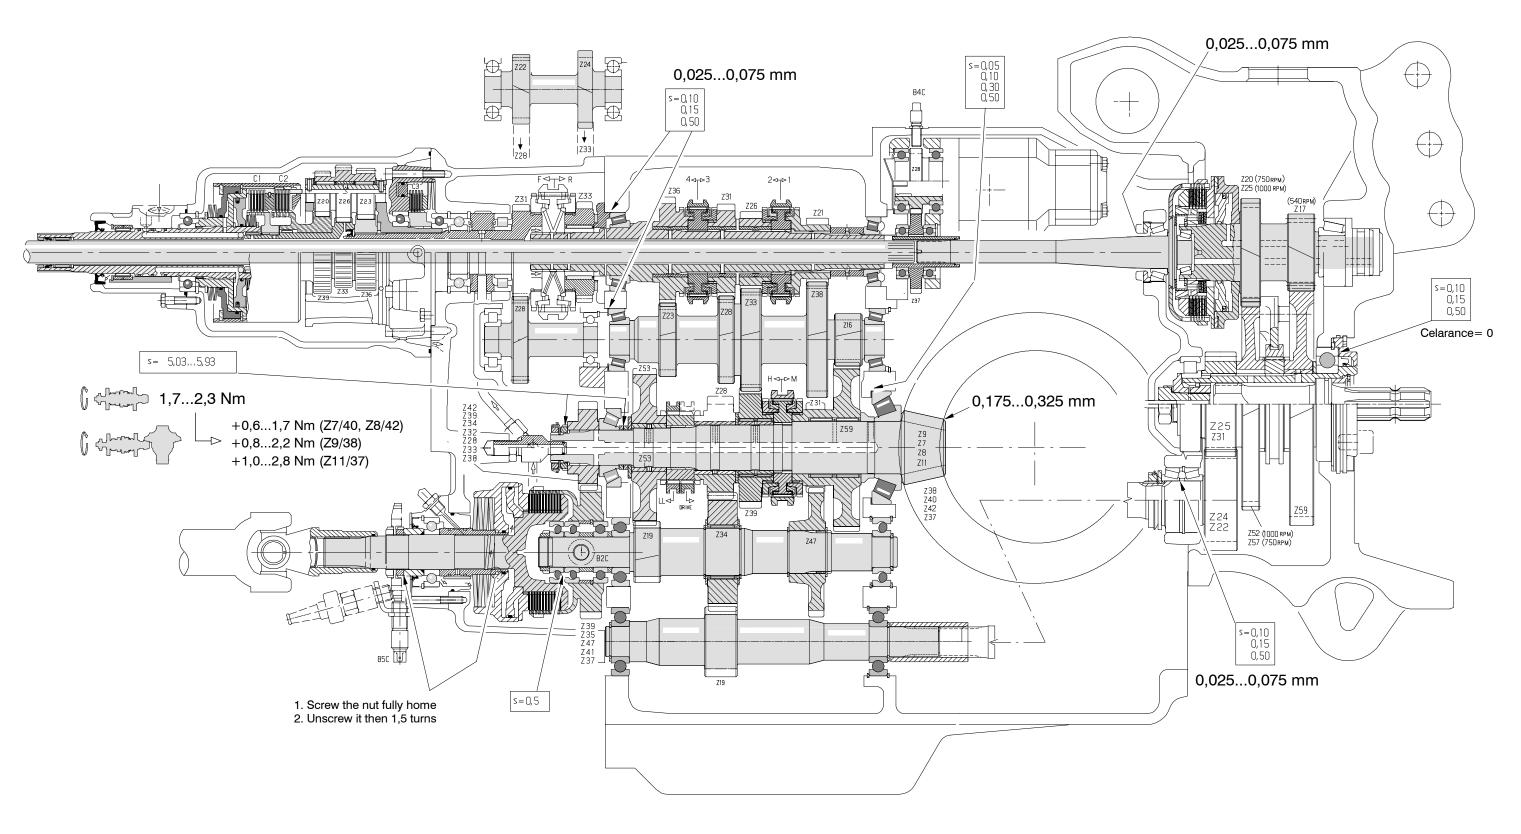

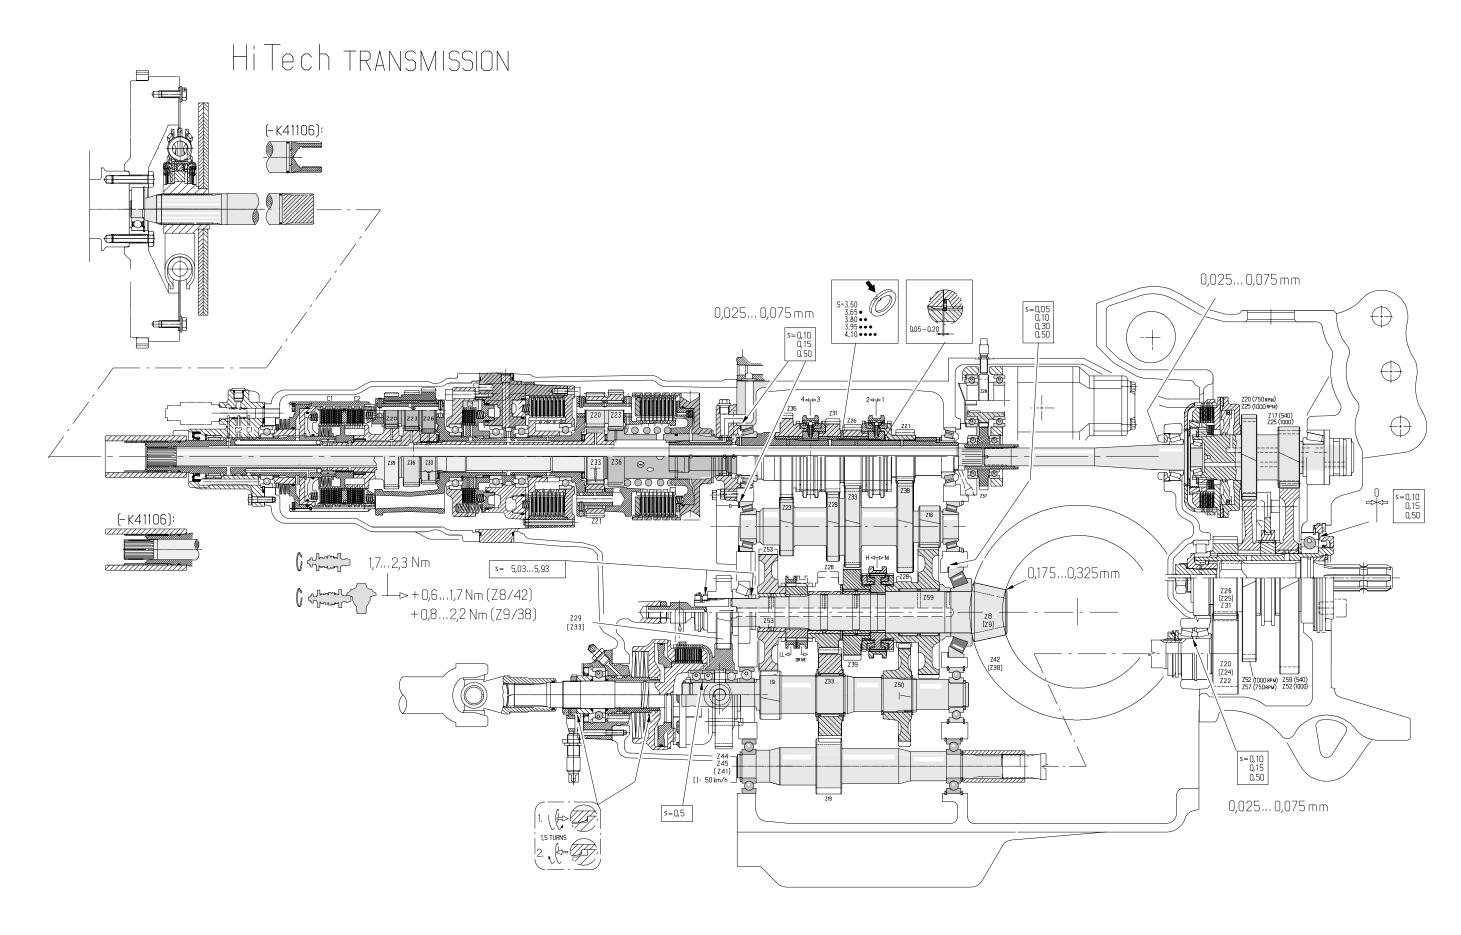

702



42. Gearbox		Model	Code	Page
	8. 11. 1990	6000-8750	421	1


Selector forks (Op. no. 421)

1. Adjusting selector forks

Note! If the gear change mechanism does not function properly (e.g. if selected gear does not stay in the engaged position), the selector forks can be adjusted as follows:


A. Removing side cover

1. Drain the oil from the gearbox. Remove the RH side rear wheel. Move the gear levers to the neutral position.

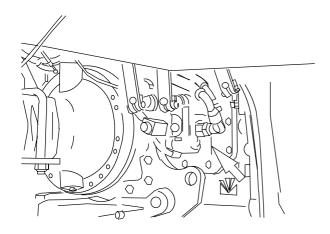

- 2. Disconnect oil hoses from the hydraulic power lift control valve. Disconnect the return oil hose from the side cover.
- 3. Disconnect the shifter rod rear ends and the cable wires from the shifter levers on the side cover.

Note! There is an access hole on the RH side mudguard.

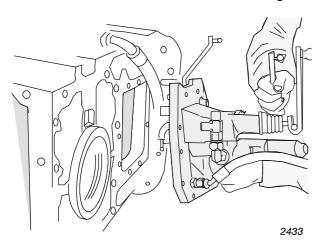


4. Unscrew the side cover bolts and remove the cover. At the same time the selector fork rail locking pins (3 pcs) are released.

B. Adjusting selector forks


5. Fit the locking balls, springs and pins into their holes.

Note! The longer pins into the two upper holes and the shortest pin into the lowest hole.

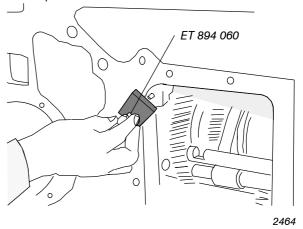


5. Press the upper pin (for gears 1-2) into its drilling with tool ET 894 060.

Sliding coupling in middle pos.

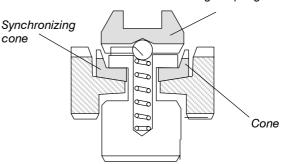

6. Move the selector fork (and rail) for gears 1 – 2 to the middle position. Adjust the fork to the middle position by screwing the adjusting piece at the rear end of the selector fork rail.

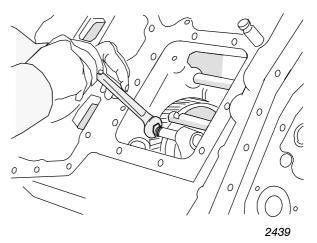

7. When the fork (and the sliding coupling) is in the middle position, push the selector rail/fork to the rear position (it is locked by the ball) and tighten the adjusting piece nut (prevent rotation of the adjusting piece while tightening).

	1.1.1995	Model	Code	Page
42 Gearbox	15. 5. 1996	6000-8750	421	2

- 8. Take the hold of the rail and move it. It must move loosely.
- 9. Then push the rail (together with the fork) to the front position. Move the rail again. It must move loosely.
- 10. Adjust if necessary and finally tighten the adjusting piece nut.
- 11. In the same way adjust the selector fork for gears 3-4.


Note! Selector fork for gears 3-4 is easiest to adjust by moving the fork so that the groove on it is opposite the groove on the fork for gears 1-2 when the gears are in neutral position.

- 12. Check the adjustment in the extreme positions, so that the rail/fork for gears 3–4 moves loosely in these positions.
- 13. Adjust the selector fork for range gears (H-M) in the middle position and check the adjustment in the extreme positions as above.
- 14. Move the fork for range LL (and fork for ground speed PTO, if fitted) to the neutral position and make sure that the groove on the M-H fork is exactly opposite the groove on the fork for range LL (gears in neutral).

Note! If the LL-fork has to be adjusted, the tractor frame must be split between the gearbox and fuel tank and the reverse shuttle housing must be detached. Thus the nut at the front end of the LL-fork rail can be opened and the rail can be turned.

C. Fitting the side cover

- 15. Make sure that the selector fork rail locking pins are in their holes
- 16. Move all selector forks to the neutral position. Apply sealing compound (e.g. Silastic) to the contact surface between the cover and the gearbox. Clean mating surfaces if necessary.

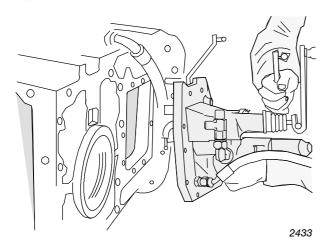

- 17. Fit the side cover (upper end first).
- 18 Tighten the bolts to 50 Nm.
- 19. Connect the oil hoses to the cover and to the control valve.
- 20. Connect the cables and the shifter rods to the shifter levers on the cover

21. Pour the oil into the gearbox.Test-drive the tractor and check that the gear change mechanism functions properly.

2. Changing selector forks

Note! See also the following instructions:

- instr. 423 2D (removing the selector forks)
- instr. **423 4B** (fitting and adjusting the selector forks)
- 1. Drain the oil from the gearbox.
- Split the tractor between the gearbox and the fuel tank; see instr. 441 1A (cab attached to the rear frame) or instr. 423 1A (cab attached to the front frame).
- Remove the quick—shift gear (see instr. 441 1B) and the reverse shuttle (see instr. 442 1A) from the gearbox front side.
- 4. Remove the gearbox side cover.
- 5. Remove the selector fork locking pins. Pull out the rails forwards and remove the forks through the side opening in the following order:
- fork for ranges M-H (remove first the LL/PTO-rail)
- fork for ground speed PTO (if fitted)
- fork for gears 3-4
- fork for range LL
- fork for gears 1-2
- 6. Fit the forks in the reverse order.

Note! The rail, fork and the locking pin for gears 1 – 2 must be fitted before other parts are fitted into the gearbox. In addition, the fork for ranges M – H must be fitted onto the sliding coupling before fitting the rail for range LL (and ground speed PTO (if fitted))

Sliding pieces on the selector forks

(see picture 16 on page 420/15).

With effect from tractor ser. no. **661937**, the selector forks and the plastic sliding pieces have been changed. In connection with possible repair works, new forks and sliding pieces must be fitted

Note! In connection with repairs the earlier forks and sliding pieces must be changed into new ones in spite of the condition of the earlier parts.

Forks 1–2, 3–4, M–H and F–R have each 4 pcs sliding pieces and they are all similar (spare part number 32888200, 16 pcs).

Fasten the sliding pieces on the forks with a little grease during fitting.

Also the later AVO and LL forks have sliding pieces.

Note! The reverse shuttle fork F-R is different on tractors which have a 2-speed quick-shift gear or the Delta Powershift. Changing the shuttle fork, see under code **442**.



	8, 11: 1990	Model	Code	Page	ĺ
42. Gearbox	1. 8. 1998	6000-8750	423	1	

Reconditioning gearbox (Op. no. 423)

1. Removing gearbox


Note! The gearbox is easiest to remove if it is possible to remove the cabin (removing and fitting cabin, see Op. 811 1A). In the instruction below the cabin, however is in place. In addition, on E-models the sensor wires must be disconnected

A. Splitting tractor between gearbox and fuel tank (cab attached to front frame)


1. Remove all engine hood plates.



- 2. Remove the propeller shaft guard and disconnect the propeller shaft rear end flange joint (on tractors with Delta Powershift, there is not a flange joint at the rear end of the propeller shaft).
- 3. Drain the oil in the transmission.
- 4. Release the lower end of the PTO control cable, lower end of the pick—up hitch release control and the joint at the lower end of the lewelling screw control rod (these att at the rear of the tractor).

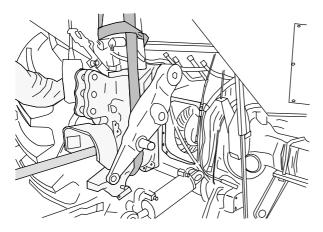


- 5. Remove the power take-off unit (see Op. 462 1A).
- 6. Unscrew the cab rear fastening bolts and raise the cab rear part about 6 cm. $\,$

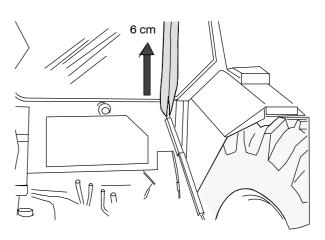


Note! Lifting rope can be fastened to the levelling screw control rod support according to the figure above.

7. Remove the RH side rear wheel and open the hatch on the RH side rear mudguard.

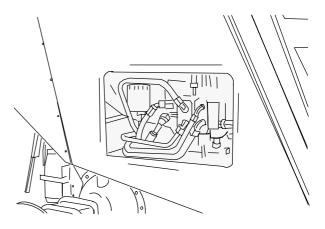

- 8. Disconnect the oil pipes from the rear and front sides of the valve blocks for the auxiliary hydraulics.
- 9. Unscrew the fixing bolts for the valve block bracket on the gearbox and lift the valve blocks upwards.

Note! The valve blocks can be fastened to the cab with wire. If necessary, extra valve blocks must be detached for easier opening of the bracket bolts.

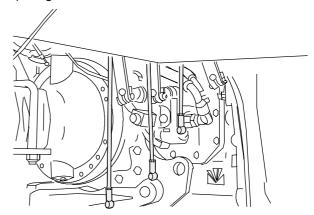


10. Disconnect the shifter rods from the lower ends of the gear levers. Disconnect the cable from the shifter levers and from the gear lever lower ends. Remove the gearbox housing breather filter by disconnecting its pipe through the mudguard opening.

42. Gearbox	8.11.1990	Model	Code	Page
	1. 8. 1998	6000-8750	423	2


11. Disconnect the control valve solenoid wires on the gearbox side cover. Disconnect oil hoses from the pressure filter.

Note! It is easier to disconnect and connect the hoses if the pressure filter is removed. Pressure filter is fitted under the cab floor on the RH side front corner.

12. Remove the hose clip (on RH side), which binds two hoses (one hose is connected to the pump side of the valve block set and another to the pump pressure connection).

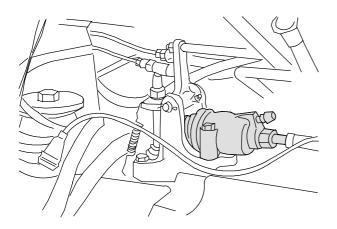


- 13. Remove the brake cylinder fixing bolts (at the rear of the tractor) and free the cylinders and support them to the cab floor. Release the parking brake cable from its mechanism.
- 14. Disconnect the hydraulic power lift sensor connectors in the lever console in the cab (remove console side panel). Remove also the lead in plate for the wires.
- 15. Disconnect the sensor wires from the servo valve block on the LH side of the gearbox. Disconnect hoses and pipes (on the LH side) which prevent splitting.
- 16. Disconnect the wires from the solenoid valves on the servo valve block (on LH side).
- 17. Fit the RH side rear wheel.

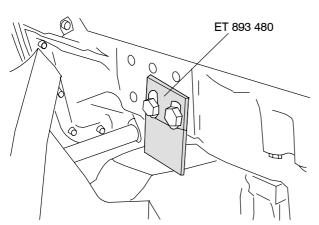


18. Fit supports ET 893480 on the front axle (on both sides) to prevent front axle oscillation.

19. Fit a steady trestle under the fuel tank. Fit a trestle fitted with castors under the gearbox front edge and under the towing hook.

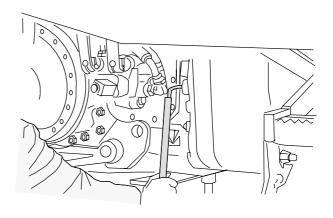


20. Open the bolted joint between gearbox-fuel tank (on RH side, disconnect the control valve hoses for easier work).

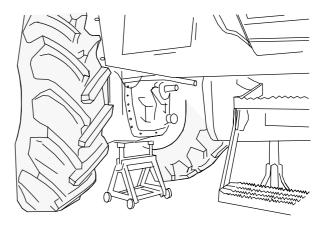

21. Part the tractor by pushing at the rear wheels. If the tractor has big rear wheels the rear mudguards should be removed.

Note! Make sure that every hydraulic pipes have been released. Disconnect the front end of the hose to the priority valve and remove the hose between the valve block set and the control valve of the hydraulic lift.

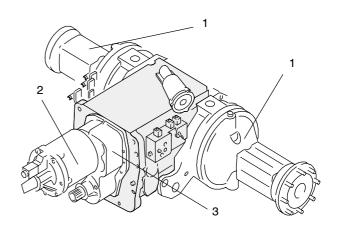

22. Remove the rear wheels, rear axles (1), quick shift gear (2) and reverse shuttle (3) from the transmission unit. Place the gearbox in the fitting stand.

N.B. Label all detached parts and pipes from the transmission unit for easier assembling.

2. Disassembling gearbox


In this instruction the gearbox has been removed from the tractor (see previous instr. 1A) and external pipes have been removed and also the following components:

- final drives together with brake housings
- 2-speed quick-shift gear or 3-speed DPS
- reverse shuttle
- 1. Place the gearbox in the fitting stand. Instruction below is shown in the correct working order. In addition, the gearbox below has been equipped with parts for optional ground speed PTO.


A. Removing differential

Note! Before removing, mark the position of the differential bearing flanges for easier assembling, See also instr. **424 1A**.

1. Detach the diff. lock pressure oil pipe from the LH side bearing flange and bend the pipe to one side.

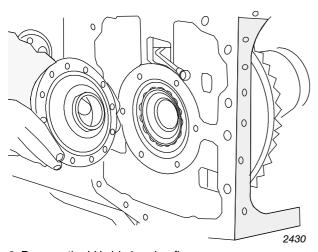


- 2. Remove the LH side bearing flange.
- 3. Press the differential to the left until the LH side bearing is pushed out from its location.
- 4. Fit a wooden wedge under the differential and place an other wedge between the gearbox housing and the differential so that it presses the differential to the right against the RH side bearing.

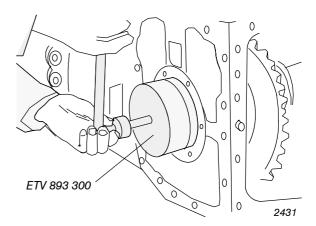

5. Remove the LH side bearing by using puller ETV 893300 with a counter hold ETV 894120 and claws ETV 893302.

Note! Make sure that the claws grip around the bearing race at diametrically opposed points.

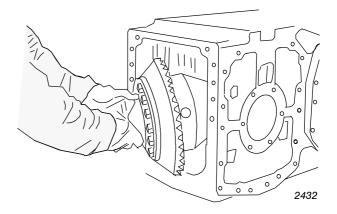


- 6. Remove the RH side bearing flange and the bearing outer race. Move the differential to the right and remove the differential from the gearbox housing (left side first).
- 7. Reconditioning differential, see Op. 424 1A.


B. Removing side cover.

Note! The side cover can also be detached from the tractor without removing the gearbox. Only the oil need to be drained from the gearbox.

		Model	Code	Page
42. Gearbox	8. 11. 1990	6000-8750	423	4

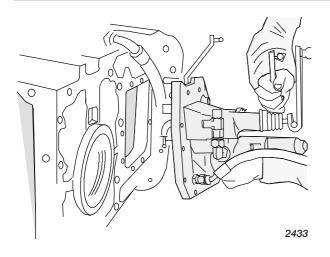


 Set all gears to neutral position. Unscrew the side cover bolts and remove. At the same time selector fork rail locking pins are released.

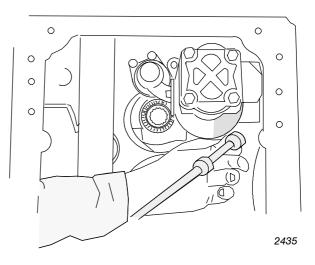

4. Unscrew pump fixing bolts and remove the pump.

C. Removing hydraulic pump

Note! The pump can also be detached from the tractor after removing the PTO unit (see section 90. Hydraulics).

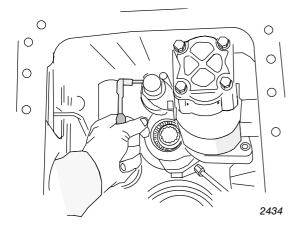


- Loosen the suction pipe clip (hexagonal socket head screw, 5 mm).
- 2. Detach the suction strainer housing on the gearbox and remove the long suction pipe and the curve pipe.
- 3. Remove also the pressure pipe connections on the gearbox (pipes have threads).


D. Removing selector forks

Note! If only selector forks have to be removed, then split the tractor between the gearbox and fuel tank and remove the reverse shuttle housing. Now the selector fork rails can be removed forwards and the forks can be removed through the side opening (see instr. on page **421/2**).


1. Remove the selector fork rails as follows:

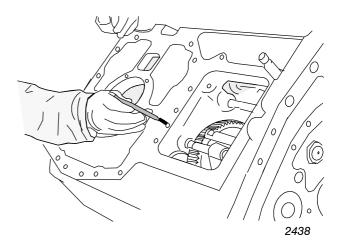


- remove pins, springs and balls (3 pcs) from their locations.

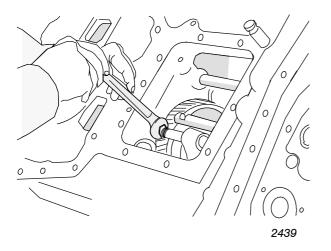

- loosen the rail locking nuts

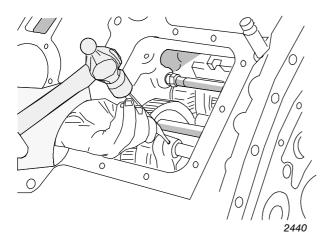


- engage gear 1. Tap out the locking pins for the forks for gears 1–2, 3–4 and M–H.

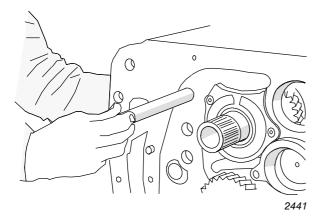

 unscrew the rails from their adjusting pieces at the rear ends and pull out the rails forwards.

2. Remove the circlip on the rail for gears AVO/LL (ground speed PTO/LL-range). Open the nut at the front end of the rail and remove the rail by turning it.

Note! Take care of the released balls and springs.

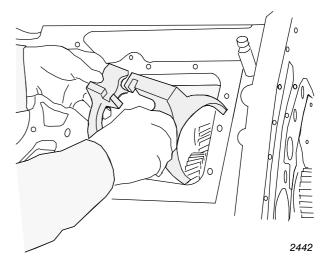

- 3. Remove the forks for gears 1-2 and 3-4 on the input shaft and remove also the sliding pieces.
- 4. Remove the forks for gears M-H, AVO and LL on the bevel pinion shaft. Remove also the sliding pieces on the M-H fork. Also the latest AVO and LL forks have sliding pieces.


6000--8750

Model


Code **423**

Page 6


E. Removing AVO-shaft, bevel pinion shaft, transmission shaft and input shaft

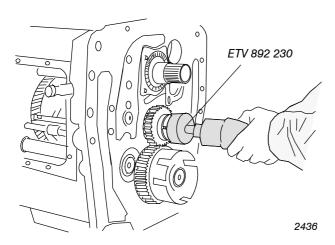


1. Bend aside the tab washer and unscrew the bevel pinion shaft nuts with ETV 892230. Remove the 4WD output gear at the front end of the bevel pinion shaft.

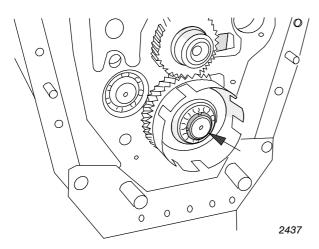


- 2. Unscrew the 4WD clutch drum nut with ETV 894190 and remove the drum.
- 3. Remove the circlip on the AVO shaft (ground speed PTO shaft, option).

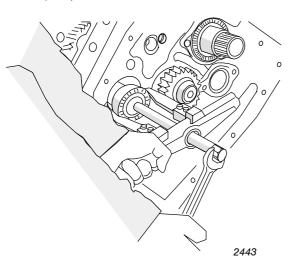


4. Tap the AVO – shaft forwards and remove the front bearing with a puller. Remove the rear bearing with a suitable drift.

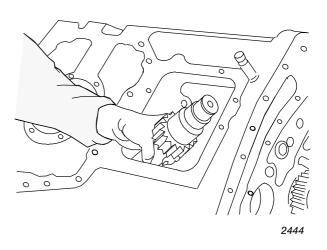

5. Remove the AVO-shaft through the side opening.

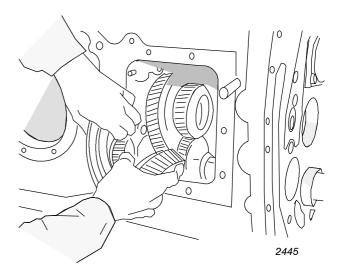


- 6. Remove the bevel pinion shaft rearwards. Remove the gears and synchronizing units through the side opening. Remove the bearings.
- 7. Remove the rear circlip on the transmission shaft and tap at the shaft rear end until the shaft loosens from its bearings.
- 8. Release the gear wheel circlip through the side opening.

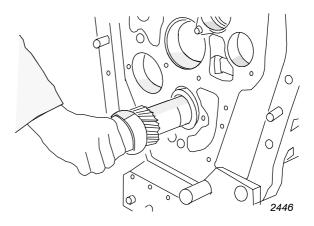


- pull out the transmission shaft forwards.
- remove gears, circlips, spacer rings and needle bearings through the side opening.
- 9. Remove front bearing covers at the front end of the layshaft and the input shaft. Pull the input shaft forwards until the front bearing outer race is detached.


	8. 11. 1990	Model	Code	Page
42. Gearbox	1. 8. 1998	6000-8750	423	7

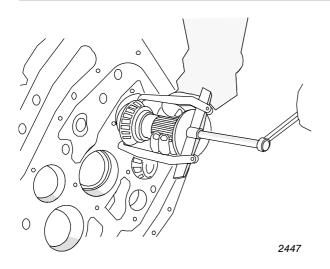

10. Remove the input shaft front end bearing. Support the shaft so that it is kept horizontal.

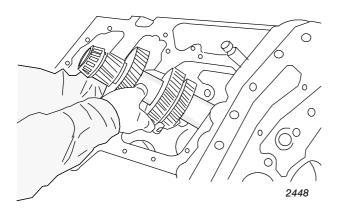

11. Remove first the layshaft from the housing.

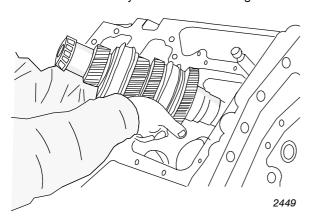

12. Then remove the input shaft.

Important! Before removing the layshaft and the input shaft, unscrew the lowest screw for the pump drive mechanism inside the gearbox housing. Also remove the servo valve block on the LH side of the gearbox, so that the S-shaped lubricating oil pipe is released.

13. Remove the pump drive mechanism, if needed. Fixing screws are inside the gearbox housing.

Note! Before detaching the pump drive mechanism, the suction strainer housing and the suction pipes have to be removed. Also the input shaft lubricating pipe must be removed.

14. Remove bearing outer races from their locations.

3. Checking disassembled gearbox

- 1. Check the condition of all gear wheels and bearings. Replace damaged parts with new ones. Lubricate all parts with oil.
- 2. Clean the gearbox housing and the lubricating pipes if necessary. Check the bearing locations.
- 3. Check the condition of the synchronizing units. The input shaft synchronizing units can be detached by removing the rear bearing with a puller.

Input shaft in transmission 650:

In transmission 650 there is a circlip behind the input shaft rearmost synchronizer. This circlip must be removed before removing the input shaft foremost parts (see picture 5 on page 420/7).

Also a spacer has been added between the input shaft gears Z31 and Z26, with which is adjusted the clearance between the circlip and the synchronizer hub to zero or as small as possible. The spacer has marking dots, which indicate the thickness of the spacer, see picture 5 on page 420/7.

Checking synchronizing ring wear:

- Place the coupler gear on a flat surface (tapered part upwards).
- Place the synchronizing ring correctly on the tapered part of the coupler and measure the clearance between the ring and the gear (i.e. how deep the ring is pressed).

Correct clearances:

Input shaft (1-2, 3-4) synchronizing rings (Ø 82)

- new 1,750-1,850 mm (min allowable clearance 0,7 mm) Pinion shaft synchronizing rings (M-H) (ø90 mm)

- new 1,700-2,250 mm (min allowable clearance 1,0 mm).

Assembling synchronizing units

- place the sliding coupler on a flat surface.
- put the springs and shoes onto the hub, press them inwards and place the hub into the sliding coupler so that the springs and shoes are kept in place.
- fit three balls (separately) onto the springs and press the ball inwards and push the parts inside the sliding coupler so that they are kept in place.
- when all three balls are in place, push the hub into the sliding coupler.

Note! The bevel pinion shaft and the crown wheel are replaced in pairs because they have been matched together.

4. Assembling gearbox

Note! In this instruction, assembling work is done in the correct working order. Before assembling, the lubricating oil pipes must be fitted.


A. Fitting layshaft, input shaft, transmission shaft, bevel pinion shaft and AVO-shaft

Note! Lubricate all parts with oil before fitting.

- 1. If the layshaft bearings are changed, warm up new bearings before fitting them onto the shaft or use a suitable fitting sleeve.
- 2. Fit the pump drive mechanism, if detached. Do not fit the lowest fixing screw. Fit the input shaft lubricating oil pipe.
- 3. Fit the layshaft rear bearing outer race into the location. Then fit the spacer ring (3 mm) and the circlip behind the race.
- 4. Fit the reverse shuttle selector lever (if removed) so that the round-shaped end points downwards. Grease the lever o-ring and fit it.

Adjusting position of bevel pinion shaft

The purpose of this adjustment is to determine the number of shims under the rear bearing outer race

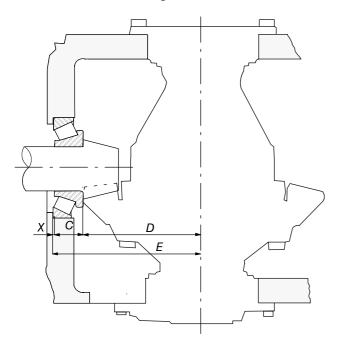


 $\mathbf{X} = \text{required shim thickness}$

C = thickness of rear bearing


D = measurement stamped into the end surface of the pinion shaft (the distance from the rear surface of the bearing to the centre of the differential bearing locations)

E = the distance from the bottom of the rear pinion bearing location to the centre of the differential bearing locations.


Note! $E = 193 \text{ mm} + \text{decimals stamped on the RH side of the gearbox housing (e.g. 95). However, if this decimals is between 0,00<math>-0$,20, then E=194 mm.

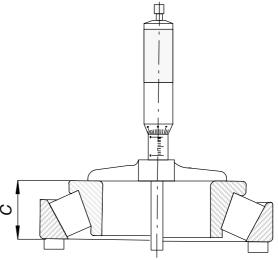

- Measure the thickness **C** of the rear bearing (e.g. 33,75) (rotate the bearing at least 20 times before measuring).

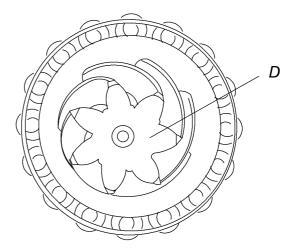

 Read value **D** stamped into the rear end of the pinion shaft (e.g. 159,70)

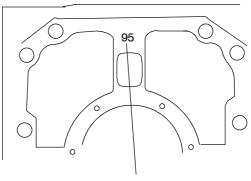


Decimal for value E

 Read decimals stamped on the RH side of the gearbox. The shims thickness can be determined by using the following formula:

X=E-(C+D)

E.G. X=193,95-(33,75+159,70)=0,5 mm.


40. O. a. la		Model	Code	Page
42. Gearbox	8. 11. 1990	6000-8750	423	9

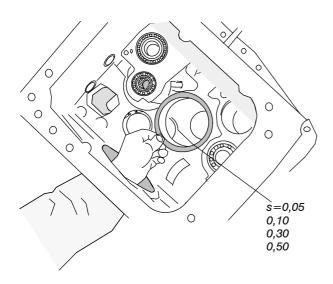

 $\boldsymbol{-}$ Set the required thickness (X) of shims into the bearing location.

Note! First fit the shims with three lugs (0,30 mm, order no 30486400).


- drive in the outer bearing race against the shims using ETV 893340.
- 5. Fit the transmisson shaft rear ball bearing with its circlip into its location.

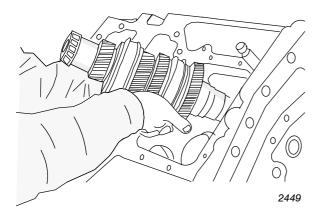


6. Place the assembled input shaft into the gearbox through the side opening.

Note! The input shaft front bearing is fitted after the input shaft and the layshaft are in place.

7. Fit the pump drive mechanism lowest bolt and tighten it to a correct torque. Fit the S-shaped lubricating oil pipe.

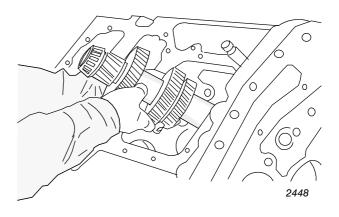


- 8. Fit the layshaft (the bearings are fitted on the shaft). Raise the input shaft for more space for layshaft.
- 9. Connect the S shaped lubricating oil feed pipe to the distributor pipe on the bottom of the gearbox and connect the other end to the hole on the gearbox wall (note o ring). Fit the servo valve block.
- 10. Fit the input shaft front bearing with ETV 892370. Fit the bearing outer race.

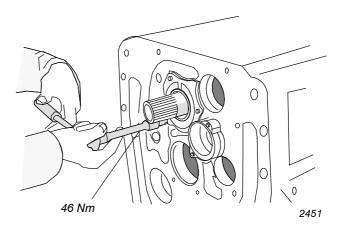

11. Fit shims in front of the input shaft front bearing (select shims so that the bearings have a definite clearance). Tighten the bearing cover.


Note! Try shims which were there before disassembling. Turn the input shaft 20-30 revolutions, in order to bed in the bearings.

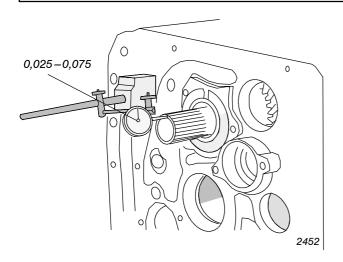

12. Measure the input shaft end float. It should be **0,025-0,075 mm**. Increase or decrease the shim thickness as necessary.

13. In the same way adjust the end float of the layshaft. End float should be **0,025-0,075 mm**.

Note! Turn the layshaft 20-30 revolutions in order to bed in the bearings before measuring. Fit the layshaft front end cover in the right way (the thin side up).

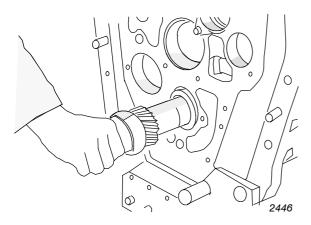


14. Fit the transmission shaft into the gearbox through the front bearing hole. **Note!** There must be the wide gear circlip, the spacer and needle bearings on the shaft.


- 15. Fit onto the shaft first the broad gear wheel, spacer ring, circlip and the narrow gear wheel.
- 16. Fit the circlips into their places. Tap at the shaft front end until the shaft is in place.

Note! It may be easier (lack of space) to fit first the bevel pinion shaft and after that the transmission shaft.


- 17. Fit the bevel pinion shaft rear bearing onto the shaft if removed (warm up the bearing before fitting).
- 18. Fit the pinion shaft gears and synchronizing units into the gearbox as follows:
- fit first the foremost gear and the rearmost gear
- then fit other parts using the pinion shaft as a support. Couplers for AVO and LL are kept in place by hand and the shaft is pushed through them.

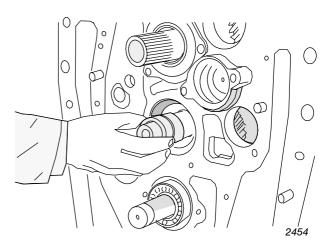

- Through the front bearing hole are fitted the bushing for the foremost gear, end plate and the earlier spacer rings (2 pcs).

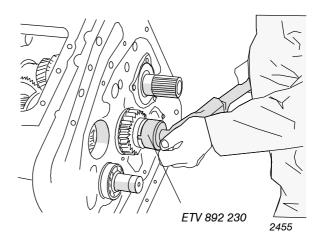

19. Fit the front bearing outer race into its location. Fit the front bearing with sleeve ETV 892370, fit the 4WD output gear and tighten the nut to a torque of **270 Nm** (ETV 892230).

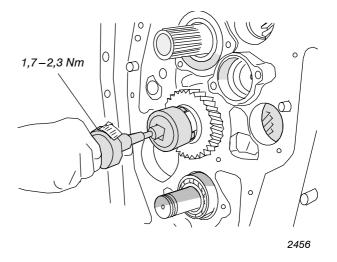


20. Measure the rolling resistance of the pinion shaft bearings with a torsion meter. Correct value is **1,7–2,3 Nm**. Increase or decrease the spacer ring thickness as necessary.

Note! 13 different thickness of spacer rings are available (thickness between 5,03-5,93 mm). Make sure that the shaft can rotate freely. Rotate the shaft 20-30 revolutions before measurement.


21. After adjustment, tighten the shaft nut to a correct torque and lock it with locking washer tabs.

40. Oceahan	15 . 5. 1996	Model	Code	Page	l
42. Gearbox	1. 4. 1997	6000-8750	423	11	

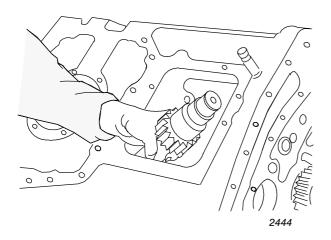


22. Fit the AVO – shaft into the gearbox through the side opening and carry out the following steps:

- Fit the front circlip of the rear bearing into its groove.
- Fit the rear bearing into place against the circlip.
- Fit the rear circlip of the rear bearing.
- Tap at the shaft front end until the shaft is fully home.
- Fit the front bearing.

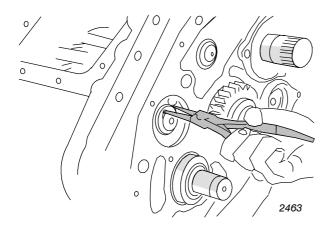


 Fit the front and rear bearing circlip into the grooves on the shaft.

B. Fitting selector forks

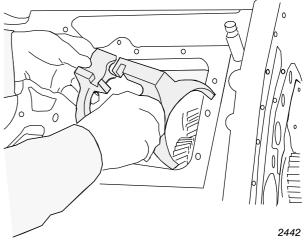


- 1. Fasten the sliding pieces on the forks with a little grease. Fit the forks for gears 1 2 and 3 4 onto the input shaft and support the forks in the upper position with a selector fork rail.
- 2. Fit the sliding pieces on the M-H fork and fit the fork onto the bevel pinion shaft.

Note! From tractor ser. no. **661937** the forks and the sliding pieces have been changed. In connection with repair works, the latest forks and sliding pieces must be fitted on the tractor in place of the earlier parts despite of the condition of the earlier parts. This concerns also the F-R fork.

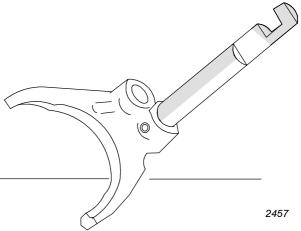


3. Fasten the rail to the LL-range fork if detached. **Note!** The groove on the shaft upwards. The locking pin is fitted with the split end to one side.

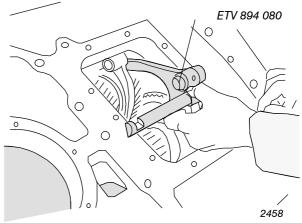


4. Fit the spring, ball and tool ETV 894080 into the LL-range fork. The tool holds the ball and spring in place. Fit the LL-range fork with its rail into the gearbox (latest LL forks have

5. Move the sliding coupling for the ground speed PTO to the rear position and the LL-range sliding coupler together with the fork to the front position. Fit the PTO – fork with the sliding pieces onto the sliding coupling beside the LL-fork.

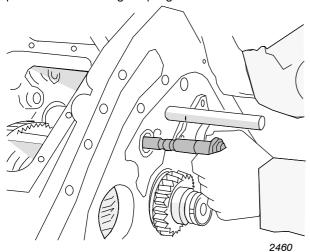

- 6. Push the PTO/LL-rail into the gearbox. Push the rail first through the LL-fork while the tool is pushed out.
- 7. Then fit the spring and ball into the PTO fork and the tool will press them into place. When the rail has pushed through both forks, remove the tool.

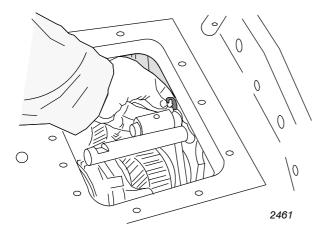


8. Turn the PTO/LL – rail until it is in place and fit the circlip onto the rail. Tighten the rail front end nut. Adjusting position of the rail, see instruction later.

Note! Loctite 242 onto the selector fork rail threads.

- 9. Put the adjusting pieces for rails (1-2), (3-4) and (M-H) into their places in the gearbox rear wall (all three adjusting pieces are similar).
- 10. Push the rails through the forks and turn the rails so that their rear ends engage with the threads on the adjusting pieces (the longest rail is for M-H fork. The two upper rails are similar).

Note! Fit locking nuts onto the rails before turning their rear ends into the adjusting pieces.

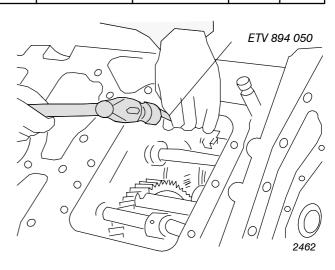


- 11. Engage gear 1 and fit the locking pin for fork for gears 1-2 (use tool ETV 894 050 when fitting the pins).
- 12. Similarly fit the locking pins for forks for gears 3-4 and M-H.

Note! The split side of the pins to one side.

Adjusting selector forks

13. Fit the balls, springs and the pins into their holes at the rail adjusting pieces.


Note! The shortest pin into the lowest hole.

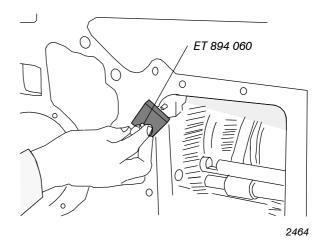


14. Use tool ET 894060 to press the pins separately into their borings when adjusting the forks.

	8, 11, 1990	Model	Code	Page
42. Gearbox	1. 1. 1995	6000-8750	423	13

Sliding coupler in middle position

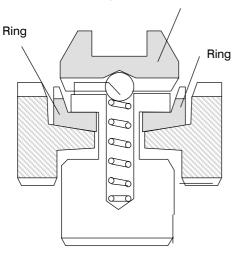

15. Move the sliding coupling for gears 1–2 to the neutral (middle position). Turn the rail rear end into or out of the adjusting piece until the sliding coupling is in the middle position.

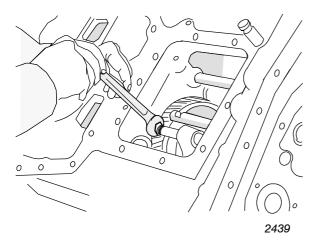


- 16. When the fork is in the middle position, move the rail to the rear position (the ball locks the rail) and tighten the adjusting nut (prevent rotating of the rail or the adjusting piece).
- 17. Take hold of the rail and move it. It must move loosely. Then move the rail to the front position and again move the rail. It must move loosely. Now the adjustment is correct.

18. In the same way adjust the fork for gears 3-4.

Note! Adjustment is easier to carry out when the fork for gears 3-4 is adjusted so that the groove on it is opposite the groove on the fork 1-2 (adjusted earlier) when the gears are in neutral

- 19. In the same way, adjust the fork for ranges H-M, first in the middle position and then check the adjustment in both extreme positions.
- 20. Move the forks for PTO and range LL to the neutral position. Turn the rail so that the groove on the LL-fork shaft is opposite the groove on the fork for ranges M-H (M-H fork in the middle position).
- 21. Check then that the forks for PRO and range LL move loosely when they are in the engaged position.
- 22. Make sure that the rail locking balls, springs and pins are in their borings.

C. Fitting 4WD clutch drum

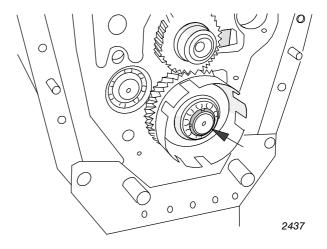


- 1. Fit the clutch drum and its bearings onto the front end of the transmission shaft according to the figure 8 on page 420/9.
- 2. Apply Loctite 242 to the shaft nut threads.
- 3. Tighten the nut with ETV 894190 to a torque of 270 Nm.

40. Coorbor	\searrow	Model	Code	Page
42. Gearbox	8. 11. 1990	6000-8750	423	14

D. Fitting side cover

 Move first all the gears (forks) to the neutral position. Apply sealing compound (e.g. Silastic) to the contact surface between the cover and the gearbox. Clean contact surfaces if needed.

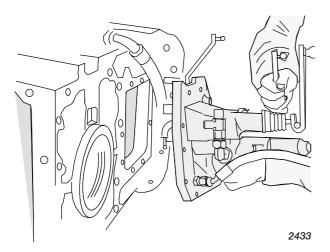

- 2. Turn a guide pin into one lower fixing bolt hole. Fit the cover with the upper side first.
- 3. Tighten the fixing bolts to a torque of 50 Nm.
- 4. Check the engagement of different gears while rotating the input shaft.


Note! Fit the splined sleeve onto the input shaft front end splines and attach a crank to the sleeve for easier rotating.

E. Fitting pump, suction pipes and suction strainer housing


Note! Oil pump and suction pipes can be fitted although the differential is in place.

Note! The input shaft lubricating pipe must be fitted before fitting the differential.

- 1. Fit the long suction pipe and the curved suction pipe through the holes on the gearbox housing and fasten the suction strainer housing onto the gearbox.
- 2. Place the hose clip onto the curved suction pipe (screw upwards.

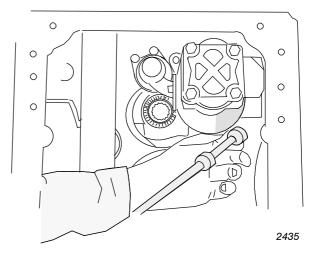

3. Fit the pump and turn it clockwise and tighten the fixing bolts to a correct torque (40-50 Nm).

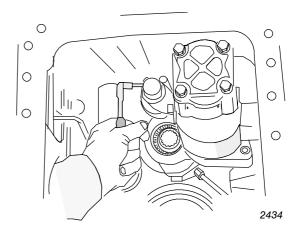


- 4. Tighten the hose clip to the correct torque (~ 6 Nm).
- 5. After the pump has been fitted, place the pressure pipes into their holes on the gearbox and screw them into the threads on the pump. Note also the sealing pieces, which have sealing rings.

Note! Apply Hylosil sealing compound between the gearbox and pressure pipe sealing pieces. Apply Loctite 542 to the sealing piece fixing bolts.

	8_11.1990	Model	Code	Page
42. Gearbox	1. 1. 1995	6000-8750	423	15


F. Fitting differential

- 1. Fit the differential RH side bearing onto the differential housing (if removed) (use tool ETV 893400). Place the differential case into the gearbox housing right side first.
- 2. Support the differential to the height of the bearing holes and fit the RH side bearing outer race and the bearing flange together with the threaded adjusting flange according to the marks. Fit then a wooden wedge so that it presses the differential to the right against the RH side bearing.

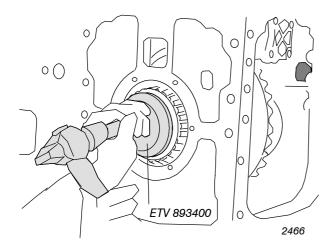

- 3. Fit the LH side bearing with tool ETV 893400.
- 4. Fit the bearing outer race.


Note! Tap the outer race as deep as possible for good centring.

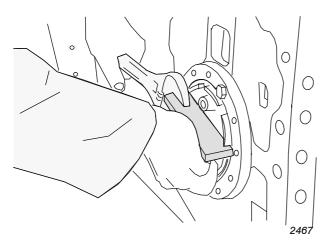

5. Fit the LH side bearing flange/adjusting flange according to the marks.


Note! The adjusting flange can be tightened with a piece of flat iron and with an adjustable spanner as shown in figure above.

6. Adjust the backlash between the crown wheel and the pinion by moving the differential sideways by means of the adjusting flanges. Ensure that there is no play in the bearings during the adjustment by turning both nuts equally in the same direction.

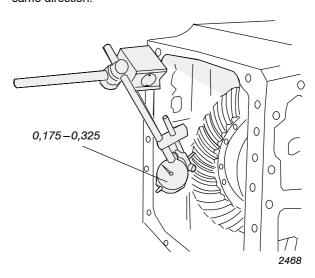

7. Measure the tooth backlash with a dial gauge with the stylus at right angles to the side of the tooth. The backlash should be **0,175–0,325 mm**.

Note! Try to adjust the backlash to the middle of the tolerance range or preferably near the min. value.

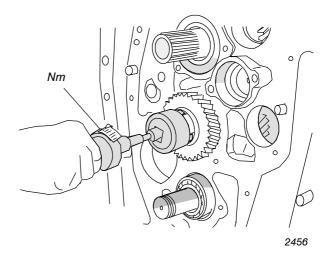

8. When the backlash is correct, tighten carefully the RH side adjusting flange until the differential bearing rolling resistance is correct. The rolling resistance is measured at the front end of the bevel pinion shaft. Thus the correct value is the bevel pinion shaft rolling resistance +:


+0,6-1,7 Nm (Z7/40, Z8/42) or

+0,8-2,2 Nm (Z9/38) or

+1,0-2,8 Nm (Z11/37)

In parentheses there is given the number of teeth of the pinion/crown wheel. Concerning different gearboxes, see pages 420/2 and 420/2A.

		Model	Code	Page
42. Gearbox	8. 11. 1990	6000-8750	423	16

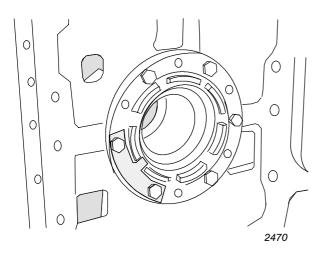

9. When the bearing preload is correct, lock the adjusting flanges with locking plates. Tighten the bearing flange screws.

10. Bend and connect the differential lock pipe on the LH side.


Note! The LH side adjusting flange can be in such a position that the diff. lock pipe connection is not at the pressure pipe. Then remove the bearing flange screws and turn the bearing and adjusting flanges together, until the connection is opposite the pressure pipe and can be connected. Then the bearing preload does not change.

	8, 11, 1990	Model	Code	Page
42. Gearbox	1. 1. 1995	6000-8750	423	17

5. Fitting gearbox

Note! If You have removed the cab, attach all transmission components and hoses to the tractor frame and after this fit the cab (fitting the cab, see section 80). In instruction below the cab, however, is in place.

A. Fitting gearbox

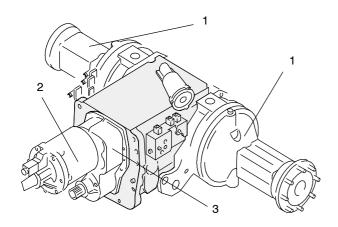


Note! Assemble the transmission unit as shown in the above figure. Attach every part, hoses and pipes, which were removed after splitting (**see Op. 1A**). Fit the rear wheels and support the transmission unit with trestles equipped with castors.


Note! Push the pump drive shaft into the gearbox input shaft and place the connecting sleeve onto the quick—shift gear/ DPS input shaft splines (or reverse shuttle splines).

Important! The pump drive shaft should be fitted in the correct way. The end with a marking groove (and letter E) should be turned to the engine side)


1. Push at the rear wheels and connect the gearbox to the fuel tank so that the guide pins and studs engage with their holes.

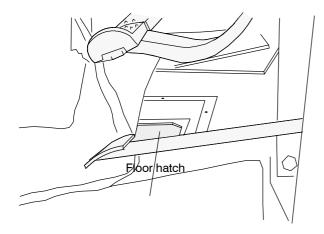

Note! Guide the connecting sleeve onto the clutch shaft through the floor hatch. Rotate the flywheel through the hole on the flywheel housing so that the pump drive shaft splines engage. Guide the propeller shaft rear end splines onto the gearbox 4WD output shaft on the tractors which have the Delta Powershift.

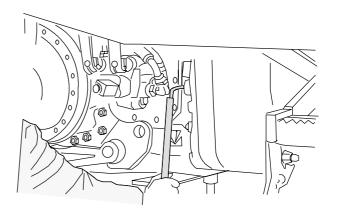


- 2. Tighten the bolted frame joint to the correct torque.
- 3. Remove the RH side rear wheel. Fasten the auxiliary hydraulic valve bracket onto the gearbox (work through the hole on the mudguard). Connect oil hoses to the end plate of the valve chest.
- 4. Connect the cables to the shifter levers and to the lower ends of the gear levers.
- 5. Connect the hoses of the hydraulic power lift control valve.
- 6. Connect the hoses to the pressure filter and attach the filter housing.

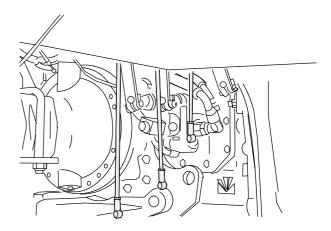


- 7. Connect the shifter rods to the lower ends of the gear levers. Connect electric wires to the control valve solenoids.
- 8. Connect the reverse shuttle lever lower end to the shifter lever.


		Model	Code	Page
42. Gearbox	8. 11. 1990	6000-8750	423	18

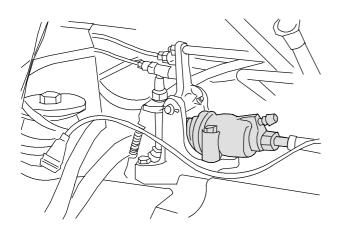

- 9. Fasten the brake cylinders. Connect the hand brake cable wire. Fit the breather filter (work through the mudguard opening).
- 10. Connect the hydraulic power lift sensor connectors in the lever console in the cab. Fit also the wire lead in plate.
- 11. Connect the solenoid valve connector on the rear LH side. Connect the sensor wires to the servo valve block on the LH side of the gearbox. Connect the oil pipes on the LH side of the gearbox.

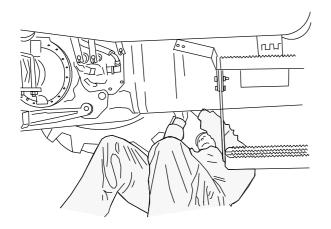

- 12. Connect the propeller shaft rear flange joint. Fit the guard. Fit the floor hatch and mat, if removed.
- 13. Lower the cab rear end and fasten the cab rear attachments.

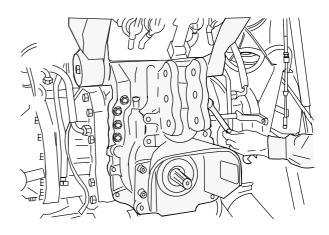

- 14. Fit the PTO unit (see instr. 462 1G).
- 15. Check that all hydraulic pipes have been fitted. Fit the hatch plate onto the mudguard opening and fit the rear wheel. Remove the support plates on the front axle. Remove trestles under the tractor.
- 16. Fit the engine hood plates. Fill the transmission with oil. Connect the pick-up hitch release control, levelling screw joint and the PTO control cable (at the rear of the tractor).
- 17. Test-drive the tractor and check for oil leaks.

Note! On E-models, ensure that the AC-III/IV unit sensor wires have been connected and check the function of the AC-III/IV unit.



	8.71.1990	Model	Code	Page
42. Gearbox	1. 8. 1998	6000-8750	424	1


1. Reconditioning differential (Op. no. 424)

Note! If reconditioning the differential only, then remove:


- PTO unit (see Op. no. 462 1A)
- final drives/brake housings
- differential (see Op. no. 423 2A)

Note! For detaching the brake housings, raise the cab or split the tractor between the gearbox and fuel tank according to Op. **423 1A**.

A. Changing the differential side bevel gear bearings and the differential lock discs

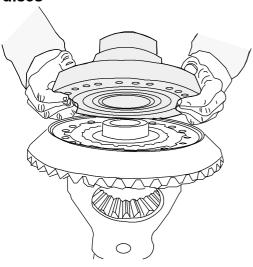

1. Remove the crown wheel attaching screws and remove the differential cover.

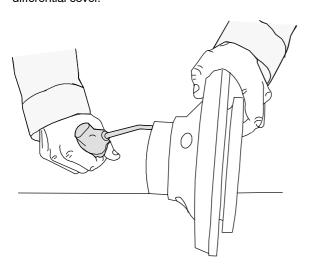


2. Press the piston for the differential lock out of the casing half using compressed air **but be careful**. Change the o-rings on the piston.

- 3. Change the bearing for the differential side gear. Remove the bearing using a drift and fit the new bearing using ETV 891870.
- 4. Lubricate the o-rings on the piston and push the piston into place.
- 5. Lift off the crown wheel. Remove the friction and steel discs and lift out the differential side gear.



6. Drive out the tubular pin (8 mm) locking the differential pinion shaft and tap out the shaft. Lift out the differential pinion and the right differential side gear.


Note! In the tractors which have higher engine outputs there are four differential pinions in the differential, at which time the short pinion shafts have been secured with tension pins.

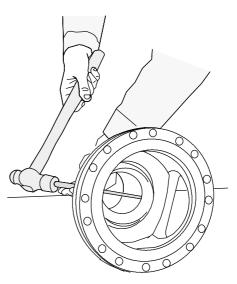

- 7. Remove the right side differential side gear using a hammer and a drift. Fit a new bearing using ETV 891870.
- 8. Lubricate the bearing and fit the right hand side differential side gear in position. Lubricate the differential pinions and place them in the differential casing. Drive the shaft for the differential pinions into place.
- 9. Fix the shaft in position with the tubular pin.


Note! On models 6600–6900 and 8050–8750 the shorter pinion shafts are locked with two tension pins.

	8_1 1. 1990	Model	Code	Page
42. Gearbox	1. 8. 1998	6000-8750	424	2

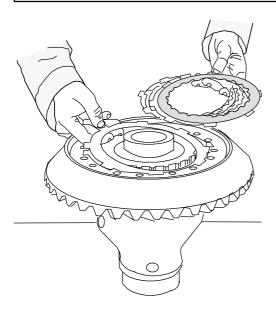

10. Position the crown wheel and the left hand side differential side gear. Position the friction and steel discs (An earlier disc pack: the first and the last disc of the disc pack is friction disc. Latest disc pack: the first and the last disc of the disc pack is a steel disc).

Note! Earlier there were five friction discs and four steel discs in the differential lock. In the latest differential lock there are five friction discs (internal splines) and six steel discs (lugs on outer circumference). New, thinner discs can be fitted into the older tractors without modifications. When changing the discs, change simultaneously the whole disc pack.

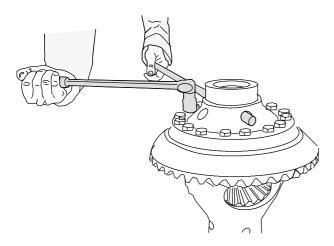

- 11. Position the left differential casing half. Apply locking fluid to the threads of the crown wheel attaching bolts and tighten the screws to a torque of **110 Nm**.
- 12. Fit the differential (see Op. 423 4F).
- 13. Fit final drives/brake housings.
- 14. Fit the PTO unit (see Op. 462 1G).



44. Quick-shift gear, reverse shuttle and 4WD clutch 15 5:1993 | Model | Code | Side | 1. 11. 1998 | 6000-8750 | 440 | 1

Contents

General (Op. no 440) Technical data Special tools 2-step quick-shift gear, description 3-step quick-shift gear Delta Powershift, description Mechanical reverse shuttle, description HiTech Shuttle, description 4WD clutch, description Servo valve blocks Working order Reconditioning 2-step quick-shift gear (Op. no. 441)	4 7 12 17 19A 20 22
1. Removing quick—shift gear: A. Splitting tractor between gearbox—fuel tank B. Detaching quick—shift gear from reverse shuttle 2. Fitting quick—shift gear: A. Attaching quick—shift gear to reverse shuttle B. Assembling tractor frame between gearbox—fuel tank 3. Reconditioning quick—shift gear: A. Changing quick shift gear oil seals B. Changing input shaft/disc assembly C. Changing needle bearing in planet pinions and planet carrier D. Fitting input shaft and disc assembly	2 3 3 5 5 7
E. Changing solenoid valve for quick—shift gear Reconditioning reverse shuttle (Op. no. 442) 1. Mechanical reverse shuttle: A. Removing reverse shuttle B. Changing reverse shuttle synchronizing unit/bearings	10
C. Fitting reverse shuttle 2. HiTech Shuttle Reconditioning 4WD clutch (Op. no. 443) A. Changing 4WD clutch friction discs/seals, 2-step quick-shift gear	3 4 1
B. Changing 4WD clutch friction discs/seals, 3-step quick-shift gear (Delta Powershift) C. Changing 4WD output shaft oil seal, 2-step quick-shift gear	4
1. Reconditioning Delta Powershift: A. Reconditioning planetary gear and its multi—disc clutch B. Reconditioning multi—disc clutches for reduction ratio and overdrive 2. Needle bearings	4
3. Changing seals in Delta Powershift: A. Changing oil rings of piston ring type B. Changing front oil seal of Delta Powershift C. Changing oil seal and needle bearing inside the input shaft front end	8 8
4. DPS in transmission 650	9



Model **6000-8750**

Code **440** Page 2

Technical data

2-step quick-shift gear

Reduction ratio: -Trac-Trol (reduction gear), 6100-6400 and 8000 - Overdrive, 6600 and 8100	
Multi-disc clutch: - number of friction discs - number of steel discs - number of pressure plates - clutch pressure (from low pressure circuit) Cup spring, small, convexity Cup spring, large, convexity	2+3 pcs 2 pcs 1,8 MPa 6,90-7,02 mm
Tightening torques:	
Quick-shift gear - reverse shuttle	45 Nm
Bolted joint between gearbox-fuel tank:	405 No.
- hexagonal socket-head screws	
- nuts on studs	
Flange joint on propeller shaft	
Cab attaching bolts	
Seal retainer on quick-shift gear input shaft	
Quick-shift gear cover bolts	23 Nm
Planet carrier screws	23 Nm
Solenoid valve fixing screws	2,5-3,5 Nm
Oil hoses to the steering valve	50 Nm
Front axle attaching bolts	380 Nm

3-step quick-shift gear Delta Powershift

Goar ratios transmission 200 (450):

Gear ratios, transmission 300 (450):	
- reduction ratio	
- direct ratio	i=1,0
- overdrive	i=0,803
Gear ratios, transmissions 460 and 650:	
- direct ratio	i=1
- overdrive	
- overdrive	
Powershift clutch pressures (from low pressure pump)	1,8 MPa
Multi-disc clutches:	
Foremost clutc C1:	
- number of friction discs, transmission 300/460/650	
- number of steel discs, transmission 300/460/650	6/7/9 pcs
Intermediate clutch C2:	
- number of friction discs, transmission 300/460/650	
- number of steel discs, transmission 300/460/650	6/5/7 pcs
Clutch C3 for planetary gear when mechanical shuttle:	4
- number of friction discs	•
- number of steel discs	5 pcs
Clutch C3 for planetary gear when HiTech Shuttle: – number of friction discs/steel discs	6/6 p.co
	•
Cup springs (2 pcs) in planetary gear clutch, convexity	
Cup springs (4 pcs) in clutch for overdrive, convexity	
oup springs (4 pcs) in dutor for overdrive, convexity	0,0 111111
Tightening torques	

Gear housing – reverse shuttle, 4 pcs23 NmPlanetary gear fastening flange – reverse shuttle, 6 pcs23 NmOil seal housing – gear housing, 3 pcs23 Nm

For other tightening torques, see values for 2-step quick-shift gear.

1>1995 1.11.1998

Model 6000-8750 Code Page 440

3

Mechanical reverse shuttle

Gear ratio:

- forwards 1:1

backwards 2,5 % faster

Synchronizing ring diam. ø 114 mm

Tightening torques

Sealing compound used:

On contact surface between reverse shuttle-gearbox, Hylosil RTV Silicone Grade 102 black

HiTech shuttle

Number of friction discs/steel discs/ring springs in both clutches	9/9/9 pcs
Axial play of input shaft	0,2-0,6 mm
Tightening torque of all shuttle bolts	23 Nm

4WD clutch on tractors without or with 2-step quick-shift gear

Number of friction discs	10 pcs
Number of steel discs	9 pcs
Cup springs (3 pcs), convexity	6,30 mm
Clutch pressure (from low pressure circuit)	1.8 MPa

Settings

Clutch pack clearance is adjusted by first tightening the output shaft nut and then unscrewing it one a turn.

4WD clutch on tractors with 3-step quick-shift gear Delta Powershift or without DPS

Number of friction discs	12 pcs
Number of steel discs	11 pcs
Cup springs (4 pcs), convexity	8,5 mm
Clutch pressure (from low pressure circuit)	1.8 MPa

Settings

Clutch pack clearance is adjusted by first tightening the output shaft nut and then unscrewing it one and a half turn.

8. 11. 1990 15. 5. 1993

Model **6000-8750** Code

440

4

Page

Special tools

44.1 2-step quick-shift gear

Α

Part no. Description

ETV 891 840 Sleeve for fitting seal on input shaft (Gearbox 505 – 905)


ETV 892 180 Drift for fitting needle bearing/sealing ring on input shaft (Gearbox 505–905) ET 893 480 Support plate for front end frame, 2 pcs (Frame and Wheels 505–905)

В

ETV 890 220 General handle

ETV 893 303 Plate for removing bearings for planet carrier (Quick-shift gear 505-905) ET 893 420 Sleeve for fitting bearings on planet carrier (Final drives 505-905)

Fitting bearings on front end of cylinder

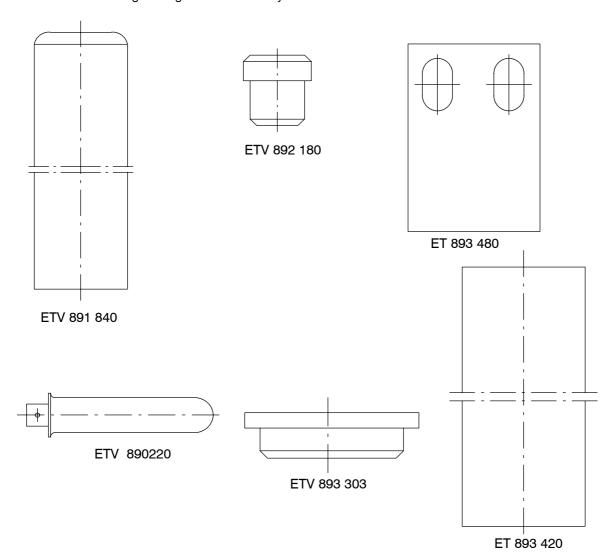


15 5. 1996 1. 11. 1998

Model **6000-8750**

Code **440** Page **5**

44.2 3-step quick-shift gear Delta Powershift

Description
Drift for fitting oil seal and needle bearing inside input shaft front end (see 2-step quick-shift gear)
Plate for fitting quick-shift gear front oil seal (front axle ZF on 305-665)
Support plate for front end frame, 2 pcs (see 2-step quick-shift gear)
Drift for fitting oil seal and needle bearing inside DPS input shaft front end (transmission 650)
Sleeve for fitting oil seal inside the middle sun gear (PTO 205-665)
Sleeve for fitting planetary carrier ball bearing (Hydraulic power lift 205-665)

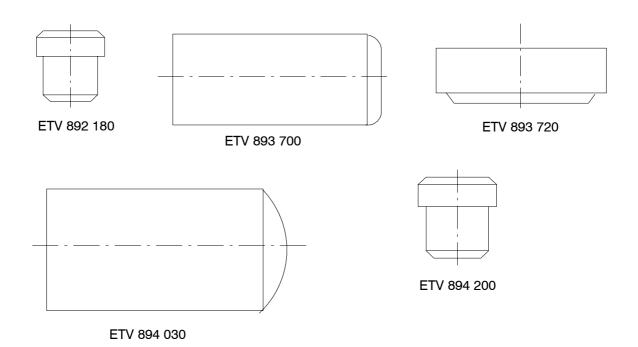

44.3 Mechanical reverse shuttle


Α

ETV 892 180 Drift for fitting needle bearing/sealing ring on input shaft (Gearbox 505–905).

Only on tractors without quick-shift gear.

ETV 894 200 Drift for fitting needle bearing/sealing ring inside reverse shuttle input shaft front end (transmission 650)

Only on tractors without DPS gear.

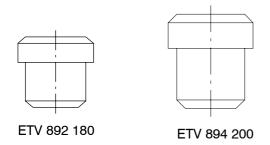

15	5 . 19 93	
1	11 1998	

Model **6000-8750**

Code

440

Page 6

44.4 4WD clutch/4WD output shaft

Α

ETV 893 260 ¹) Socket spanner for 4WD output shaft nut (Gearbox 505 – 905)


ETV 894 170 ²) Socket spanner for 4WD output shaft nut (new tool)


ETV 891 900 1) Sleeve for fitting 4WD output shaft sealing ring/bearing (Gearbox 505 – 905)


В

ETV 890 830 ¹) Sleeve for fitting 4WD clutch piston onto the output shaft (PTO 505 – 905)

²⁾ Tractors with 3 – step quick – shift gear Delta Powershift. The nut is the same as the nut at the front end of the bevel pinon shaft on 505 – 905 tractors. For this nut spanner ETV 893 440 is used. Spanner ETV 894 170 can be replaced by welding a sleeve onto the tool ETV 893 440.

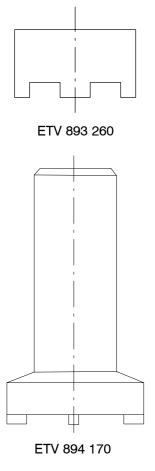


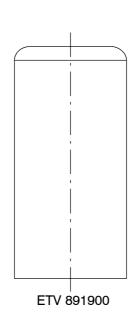

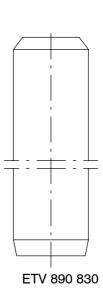

44.5. HiTech Shuttle


ETV 894 350 Compressing tool for F-clutch large coil spring

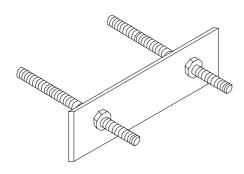

ETV 894 350

¹⁾ Tractors without quick-shift gear or with 2-step quick-shift gear

2-step quick-shift gear, description

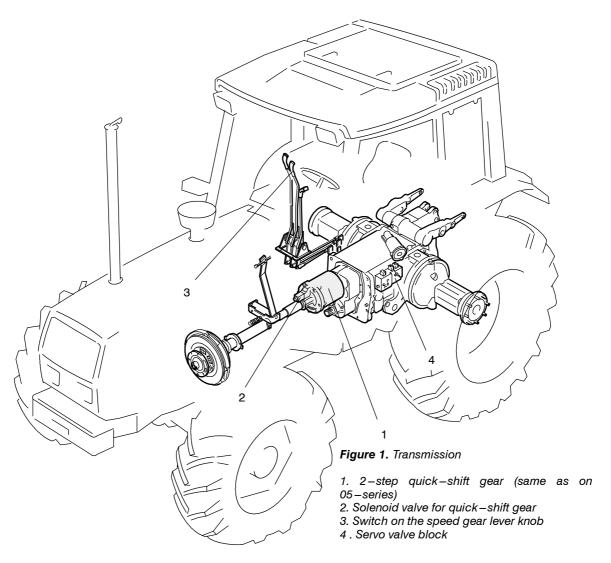

The quick—shift gear is fitted in front of the reverse shuttle. The quick—shift gear is connected to the clutch shaft by means of a coupling sleeve. The quick—shift gear can be either a reduction gear or an overdrive according to the tractor model.

Quick-shift gear is engaged and disengaged electro-hydraulically with a switch on the gear lever knob. The quick-shift gear can be engaged while driving without using the clutch pedal. The solenoid valve for quick-shift gear is fitted on the quick-shift gear cover.

Clutch pressure is directed to the quick—shift gear from the servo valve block on the LH side of the gearbox. The low pressure pump supplies oil to the valve block. Clutch pressure is 1,8 MPa which is limited by a pressure—relief valve on the servo valve block.

Quick-shift gear has pressure lubrication (see figure $\bf 3$ on page $\bf 440/10$).

To facilitate gear changing (reduction of the rotating mass), the quick—shift gear always moves to shifting position when the clutch pedal is pressed down.

8, 17, 1990 Model 15, 5, 1993 6000

6000-8750

Code **440** Page 8

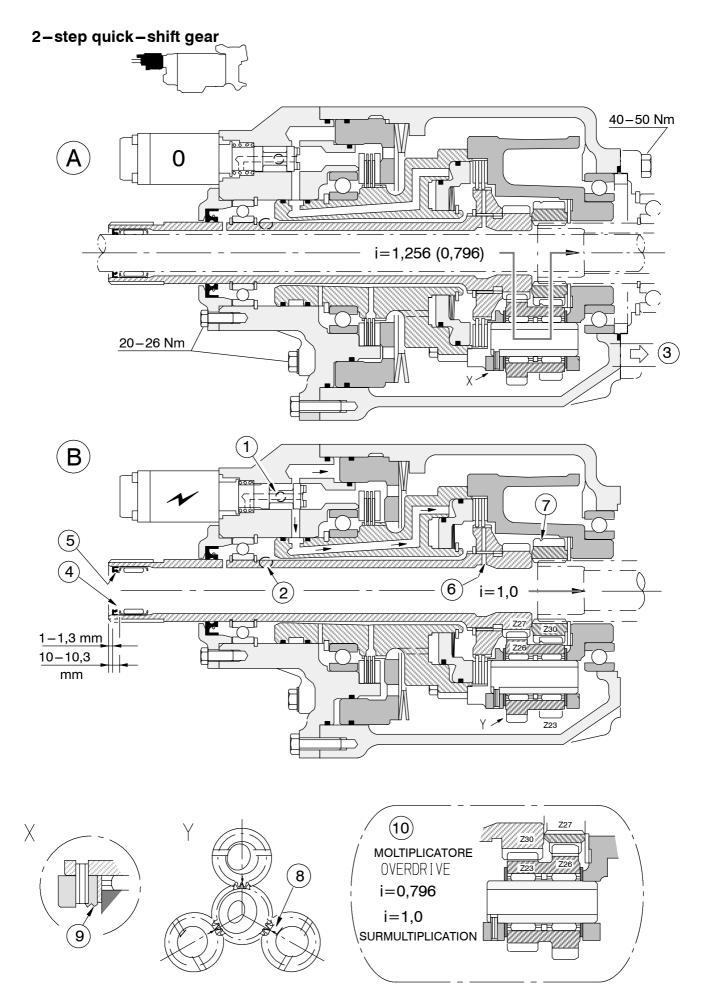


Figure 2

8. 11. 1990

Model **6000 – 8750**

440

Page 9

2-step quick-shift gear

Figure 2 A on previous page:

The pressure oil channel is closed (solenoid valve dead). The oil pressure does not act on the quick—shift gear. The lock—up clutch (rear) is disengaged and the clutch for shifting position (front) is applied.


The power is transmitted from the sun wheel on the end of the input shaft to the planet pinions and onwards to the output shaft, causing an alteration in the reduction ratio. The planet pinions rotate around their shafts. Ratio: i=1,256 (Overdrive i=0,796).

Figure 2 B on previous page:


Current is connected to the solenoid valve so that it opens pressure channel (1) to the quick—shift gear. The oil pressure applies the lock—up clutch so that the planet carrier and input shaft are connected together. At the same time the oil pressure releases the clutch for shifting position so that the planet carrier and gear rotate at the same speed as the input shaft. There is no alterations in the reduction ratio. The planet pinions do not rotate around their shafts. Ratio i=1,0.

- 1) Pressure oil (1,8 MPa)
- 2) Lubricating oil
- 3) Lubricating and leak off oil return to gearbox housing
- 4) Marking on bearing to face outwards.
- 5) To be packed with universal grease when fitting.
- 6) Holes to come in line with each other when fitting.
- 7) Note! Groove for fitting sun wheel.
- 8) Note! Arrows to point to centre of sun wheel when fitting.
- 9) Locating pin (fixed with centre punch pops).
- 10) At overdrive the planet pinions are turned in the other direction (number of teeth on sun wheel altered in a similar manner).

Note! If the reduction gear (Trac-Trol) is altered into overdrive version, the planet pinions must be turned and the input shaft with sun gear (front) must be changed. Also the other loose sun gear (rear) must be changed (number of teeth, see figure 2).

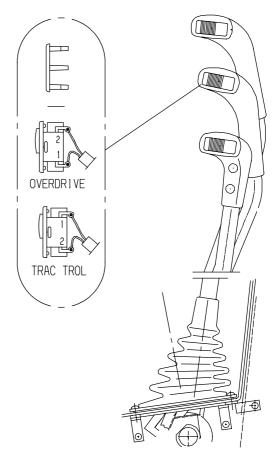

2-step quick-shift gear switch is placed on the speed gear lever knob. Figure above shows electric connection of the switch for Overdrive and for Trac-Trol. The switch must function so that the "tortoise" symbol has slower speed than the "hare" symbol.

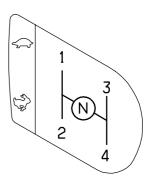

44.	Quick-shift	gear,	reverse	shuttle
	and 4WD clu	ıtch		

15 5. 1993 1. 11. 1998

Model **6000 – 8750**

Code **440**

10

Page

Lubricating system of 2-step quick-shift gear and mechanical shuttle

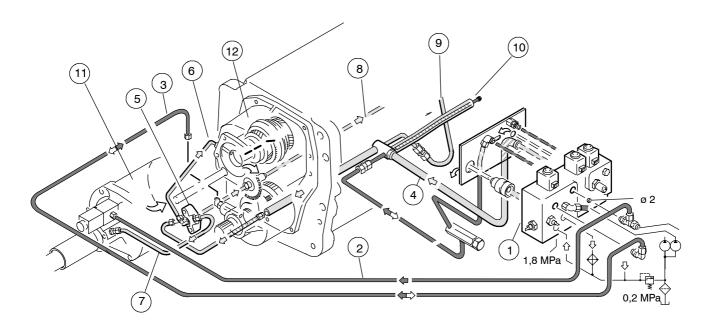


Figure 3. Lubricating and clutch pressures

- 1 . Servo valve block
- 2. Clutch pressure to quick-shift gear
- 3. Clutch pressure to 4WD clutch
- 4. Lubricating oil feed pipe
- 5. Lubricating oil distributor piece on the reverse shuttle front side
- 6. Lubricating oil pipe to reverse shuttle
- 7. Lubricating oil pipe to quick-shift gear
- 8. Lubricating oil to bevel pinion shaft
- 9. Lubricating oil to gearbox input shaft
- 10. Lubricating oil and clutch pressure to PTO
- 11. Quick-shift gear
- 12. Reverse shuttle

44. Quick-shift gear, reverse shuttle	8_11.1990	Model	Code	Page
and 4WD clutch	15. 5. 1993	6000-8750	440	11

44. Quick-shift gear, reverse shuttle	15. 5. 19 93	Model	Code	Page
and 4WD clutch	1. 1. 1994	6000-8750	440	12

3-step quick-shift gear (Delta Powershift), description

Note! The 3-step quick-shift gear Delta Powershift can be fitted on 6000-8400 tractors with effect from ser. no. **660071**.


The 3-step quick-shift gear (1) is fitted in front of the reverse shuttle and it is connected to the clutch shaft by means of a connecting sleeve.

The different speeds are engaged/disengaged electro—hydraulically with the rocker switch (3) (or with push buttons) in the speed gear lever knob. All speeds can be engaged/disengaged during driving without using the clutch pedal. The solenoid valves (2 pcs) are fitted on the servo valve block (2).

When the rocker switch (3) is operated the solenoid valves open or close and send pressure to the multi disc clutches.

The clutch pressure pipes are external pipes and they run from the valve block to the gear housing connectors.

When the clutch pedal is depressed (switch on the pedal), the current to the solenoids is switched off and then the gear is in the neutral position when the rotating masses are in minimum to facilitate an easier gear changing. This is the same when the current is switched off with the starter switch. When parking the tractor and the current is switched off, the parking brake must always be applied, since the engaged speed gear does not keep the tractor stationary.

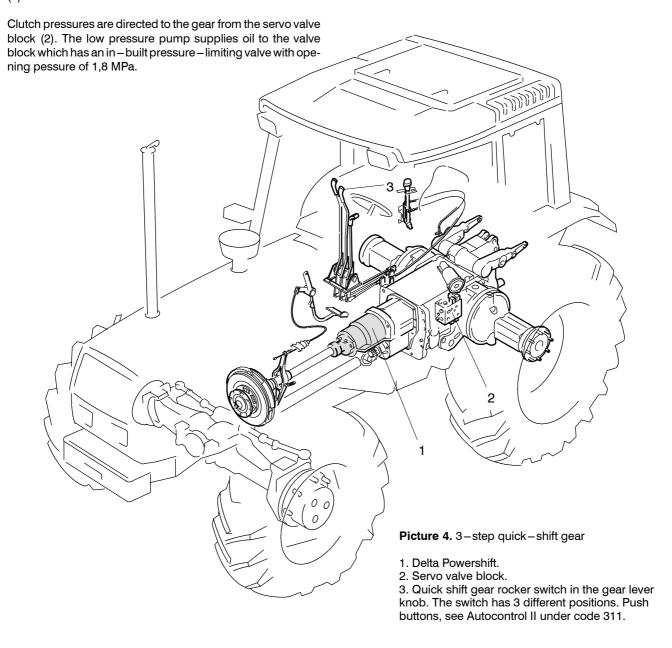


1. 17. 1998

Model 6000-8750 Code **440**

Page 13

Servo valve block with Delta Powershift and with mechanical shuttle (valve block with HiTech Shuttle, see page 440/24)

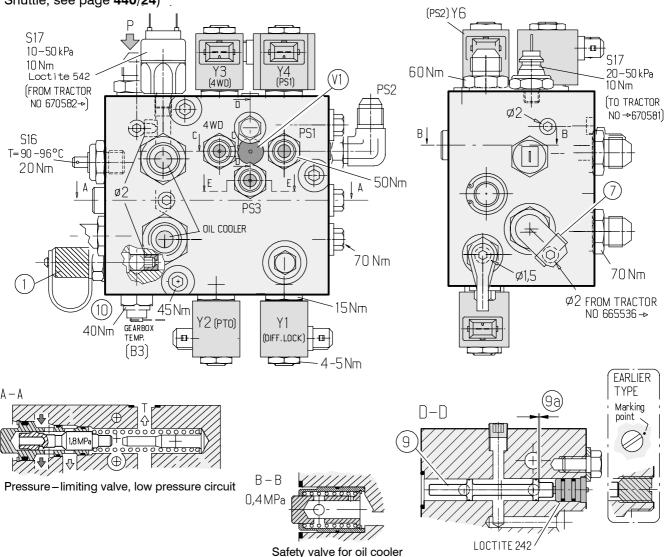

Picture 5. Valve block (on the LH side of the gearbox)

Y1=Solenoid valve of diff. lock.

Y2=Solenoid valve for PTO

Y3=Solenoid valve of front wheel drive

Y4=Solenoid valve for quick-shift gear foremost clutch (lowest ratio)

Y6=Solenoid valve for quick-shift gear middle clutch (intermediate ratio)

S16=Transmission oil temperature sensor (warning light) S17=Transmission oil pressure sensor (warning light). Modified, 670582—, see page 420/20.

P=Pressure oil inlet from the low pressure pump

1. Pressure – test point (Valmet HPR)

2. Oil inlet from the working hydraulic return oil

3. If plug 3 is to be removed, note its position by counting opening turns or measure the plug depth from the valve surface before removing the plug. Ensure that the punch mark is at the plug groove. A valve spool behing the plug (3) directs pressure oil to the planetary gear multi-disc clutch when both solenoid valves Y4 and Y6 are energized. Apply Loctite 242 onto the plug (3) threads. The plug (3) has been removed on the latest models and a locking plate has been fitted in place, see page 420/20.

The different ratios are engaged with push buttons in the speed gear lever knob:

I = lowest ratio

II = intermediate ratio

III= highest ratio


When the solenoid valve Y4 is energized, pressure oil affects the quick—shift gear foremost clutch C1.

When both solenoid valves Y4 and Y6 are energized. Pressure oil affects in all three multi disc clutches. When pressure oil does not affect the planetary carrier multi disc clutch, the planetary gear is locked by the clutch Belleville springs.

When the solenoid Y6 is energized, pressure oil affects the quick-shift gear clutch C2

Note! When the solenoid valve is energized, the nut at the end of the valve becomes magnetic which can be verified with e.g. a screwdriver. Concerning electric system of DPS, see section 31 code 310 (wiring diagrams), 311 (AC II) and 312 (AC 2.1)

Important! Concerning removal of the valve block, see page 420/20. With effect from ser. no. 668103, on 8200 and 8400 tractors (transmission 460) the DPS gear ratios have been changed, see pages 440/14–15. Transmission 650, see pages 440/15A and B.

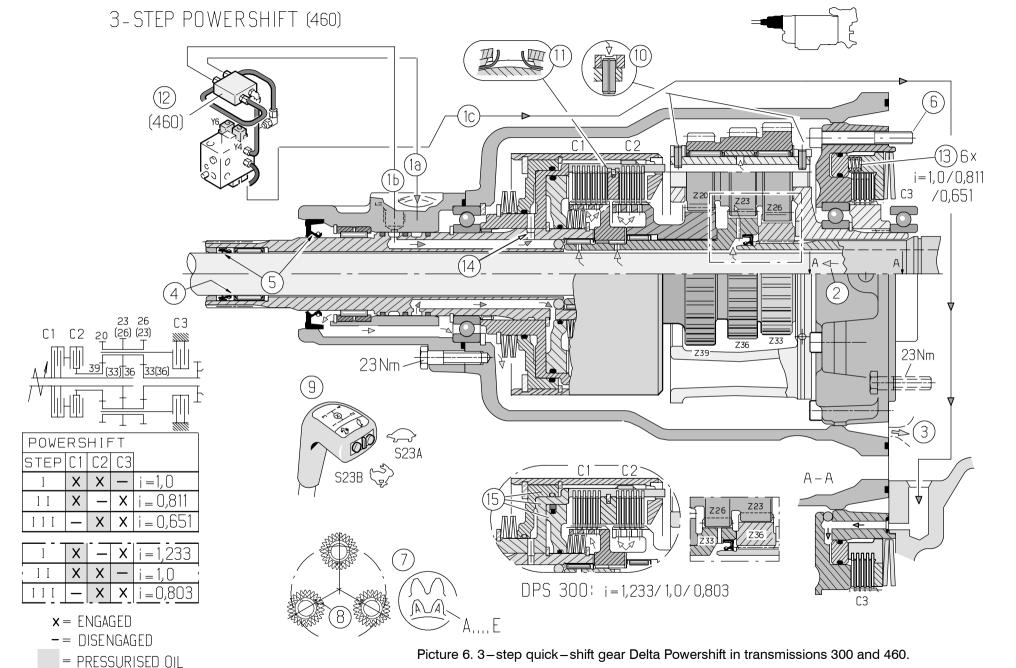

Quick-shift gear, and 4WD clutch

shuttle

1. 4.7997 1. 11. 1998

6000-8400

440

Page **14**

1.4.1997	
1. 11. 1998	1

Model 6000-8750 Code 440

Page

15

3-step quick-shift gear (Delta Powershift), transmissions 300, 460

Note! See picture 6 on previous page.

Delta Powershift is a 3-step quick-shift gear and it is of a planetary gear type. It has three multi-disc clutches, one for reduction ratio, one for overdrive ratio and one for the planetary gear carrier for a direct ratio. All clutches are controlled with aid of pressure oil from the low pressure pump. Solenoid valves are fitted on the servo valve block on the LH side of the gewarbox.

Gear ratios, transmission 300 (450):

- reduction ratio 1:1,233
- overdrive 1:0,803
- direct ratio 1:1

Gear ratios, transmissions 460 and 650

- direct ratio 1:1
- overdrive 1:0.811
- overdrive 1:0,651

When all three clutches are unpressurised (e.g. if current is switched off with the starter switch or if the clutch pedal is depressed), the unit is in the neutral position.


- 1a) Pressure oil to multi-disc clutch C1.
- 1b) Pressure oil to multi-disc clutch C2.
- 1c) Pressure oil to multi-disc clutch C3.
- 2. Lubricating oil.
- 3. Return of lubricating oil and leak oil into the gearbox hou-
- 4. Needle bearing number side (hardened side) outwards.
- 5. To be filled with universal grease when assembling.
- 6. When unscrewing planetary gear carrier attaching bolts, the planet gears can be in such a position that they prevent unbolting. In this case, pump up pressure with a hand pump into the clutch C3 after which the planetary gear carrier can be rotated to the other position.

Important! Apply locking fluid Loctite 243 to the threads of the planetary gear carrier bolts (6) in connection with repair works.

Tightening torque of the bolts (6):

- 8.8, 23 Nm (earlier)
- 10.9, 35 Nm (latest)

Tighten the bolts progressively. Picture below shows the correct tightening order.

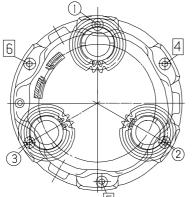

- 7. Planet gears are divided into classes (A-E). The letter marking is stamped on the side of each planet gear. The all three planet gears should have the same letter. Spare part planet gears are delivered as a ready-made kit which includes three planet gears with same letter markings.
- 8. The planet gear letter markings must point towards the sun gear midpoint when assembling the planetary gear.
- 9. The two push buttons of the 3-step quick-shift gear are fitted in the speed gear lever knob.
- 10. When the planetary carrier is locked, lubricating oil is allowed to flow through the tension pins into the planet gear shafts and further into the planet gears.

Note! The tension pins must be knocked a little deeper than the planetary carrier surface to facilitate free flow of lubricating oil.

- 11. There is a piano wire under the intermediate ring locking ring. See repair instructions for more detail.
- 12. Lock valve, see page 420/20B.
- 13 Springs (6 off), 8200-8400; 668103- (transmission 460).
- 14. Holes must align.

Modifications of Delta Powershift

At the beginning of the manufacture, the DPS was controlled with the 3-position rocker switch in the speed gear lever knob and there were no pilot lights at all.


From the beginning of 1994 (662343-) the DPS was controlled with two push buttons in the speed gear lever knob. In addition, there was a separate pilot light panel on the RH side of the instrument panel (see under code 311, AC II).

From the beginning of March 95 (668103 –), the pilot lights were moved into the dash board in connection with the other pilot and warning lights. At the same time, the DPS control unit was changed, see under code 312 (AC 2.1). In connection with ratio altering (transmission 460), a lock valve has been added onto the DPS piping, see page 420/20B. In addition, on 8200-8400 tractors (668103-, transmission 460) the planetary carrier clutch has six springs against the clutch piston (see picture on previous page and see also repair instructions under code 444).

From spring -96 the DPS gear has been reinforced in transmission 650, see pages 440/15A and 15B. Tractors 8450-8750 and 8050-8150 with effect from ser. no. F32104 have transmission 650. 6600-6800 have transmission 650 from tractor number G01401 incl.

In connection with HiTech Shuttle, the DPS gear was changed a little, see pages 15C and 15D.

https://tractormanualz.com/

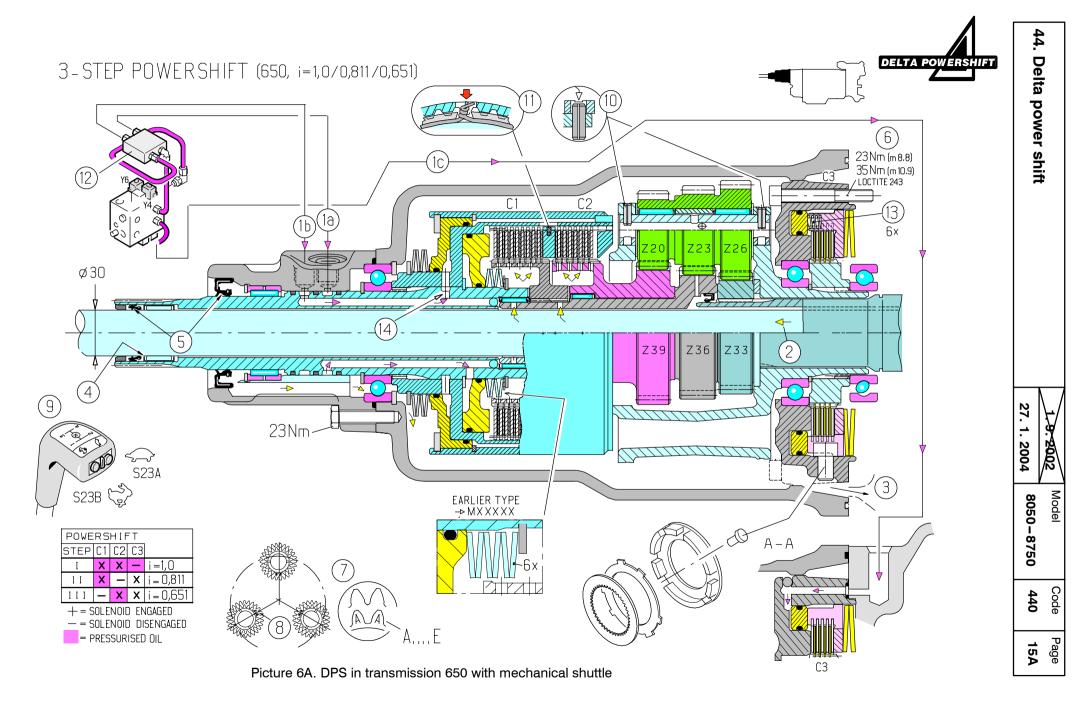

	1.4.1997	Model	Code	Page
44. Delta Power Shift	1. 11. 1998	8050-8750	440	15B

DPS in transmission 650 when mechanical shuttle

Note! Tractors 8450–8750 and 8050–8150 with effect from ser. no. F32104 have transmission 650. 6600–6800 have transmission 650 from tractor number G01401 incl.

In the 650 transmission the DPS has been reinforced and some dimensions have been changed. Basic construction and function is similar to the DPS in transmissions 300 and 460. The number of friction discs in the clutches have been increased in transmission 650, see page 440/2.

In the 650 transmission the pump drive shaft diameter (inside the gearbox input shaft and the hollow clutch shaft) has been increased due to the greater transmitted torque. This means that the needle bearing and the seal ring inside the shafts are also larger. In the 650 transmission these parts can be fitted with a new tool ETV 894 200.

Repair instructions, see pages 444/9-10.

11. There is a piano wire under the securing ring between clutches C1 and C 2 with effect from ser. no. F32509. The securing ring can be squeezed via holes in the clutch drum.

Note! Other reference numbers (in the picture on the previous page) are the same as in transmissions 300 and 460 on page 440/15.

Important! Apply locking fluid Loctite 243 to the threads of the planetary gear carrier bolts (6) in connection with repair works. Tightening torque of the bolts:

- 8.8, 23 Nm (earlier)
- 10.9, 35 Nm (latest)

Tighten the bolts progressively. Tightening order, see picture on page 440/15.

Code Model Page 1_8. 2000 44. DPS 440 15C 6250-8950 1. 9. 2002 (4) HiTech : 6x HiTech 2.0: 9x (K41107-) HiTech 46Nm (6) LOCTITE 243 × 233 236 239 \ll 8× 8× 3-STEP POWERSHIFT (650, 1=1,0/0,811/0,651) + SHUTTLE + = SOLENOID ENGAGED - = SOLENOID DISENGAGED = PRESSURISED OIL STEP C1 C2 ø30, EARLIER TYPE: (-K41106) 6 Hi-Trol: UC 3907

44 DDS	1.77.1998	Model	Code	Page
44. DPS	1. 8. 2000	8050-8750	440	15D

DPS on tractors with HiTech Shuttle

See picture 6C.

(HiTech: -K41106. HiTech 2.0: K41107-).

- 1. The rearmost planetary gear clutch (C3) of DPS has been modified in HiTech models so that pressure engages the clutch and it has an own solenoid valve. In connection with the mechanical shuttle clutch C3 has cup springs and pressure releases the disc pack. In addition, the number of the discs in the rearmost clutch is 6+6 pcs (HiTech Shuttle), or 4+5 pcs (mechanical shuttle).
- 2. In connection with HiTech Shuttle all three DPS clutches have their own solenoid valve and they are proportionally controlled for a progressive engagement. The proportional solenoid valves have been placed on two valve blocks on the tractor frame, see page 440/25.
- 3. The number of the cup springs in clutches C1 and C2 has been increased. Also coil springs have been fitted on the pistons of these two clutches of DPS.

Note! The electrical control of the DPS clutches and the calibration of clutch pressures have been described under code **370** (Autocontrol 5/5.2).

Modifications, HiTech 2.0 (K41107-):

The number of springs (4) has been increased from 6 to 9. The lubrication drillings at the clutch C3 have been reduced and drillings (3 off) to the planet gears have been added. Planet carrier front end (in front of gear wheel Z20) has been shaped so that it gathers oil and it is connected with aid of lubrication drillings to the planet gear axles. The clutches are delivered as a complete unit with correct thickness. Due to the manufacturing reasons the splines of the long PTO shaft has been moved into the DPS input shaft (NOTE! Different lengths of the shafts).

Note! The long PTO shaft cannot be removed forwards when the DPS is in place due to modifications in the front end of the shaft.

- 1a) Pressure oil (0-1,8 MPa) to multi-disc clutch C1.
- 1b) Pressure oil (0−1,8 MPa) to multi-disc clutch C2.
- 1c) Pressure oil (0-1,8 MPa) to multi-disc clutch C3.
- 2. Lubricating oil.
- 3. Return of lubricating oil and leak oil into the gearbox housing.
- 3a. Plug for manufacturing of DPS.
- 4. Clutch C3 return springs (6 pcs / 9 pcs) for piston.
- To be filled with universal grease when assembling.
- 6. Clutch housing fixing bolts (46 Nm). Loctite 243 on the threads.
- 7. Planet gears are divided into classes (A-E). The letter marking is stamped on the side of each planet gear. All three planet gears should have the same letter. Spare part planet gears are delivered as a ready-made kit which includes three planet gears with same letter markings.
- 8. The planet gear letter markings must point towards the sun gear midpoint when assembling the planetary gear.
- 9. The two push buttons of the 3-step quick-shift gear are fitted in the speed gear lever knob.
- 10. When the planetary carrier is locked, lubricating oil is allowed to flow through the tension pins into the planet gear shafts and further into the planet gears.

Note! The tension pins must be knocked a little deeper than the planetary carrier surface to facilitate free flow of lubricating oil.

- 11. There is a piano wire under the intermediate ring locking ring. See repair instructions for more details.
- 12. Distribution piece.
- 13 Springs (à 18 pcs) in the piston bores. The springs cushion the function of the clutches.
- 14. Holes must align (pressure line of clutch C2).

44. Quick-shift gear, reverse shuttle and 4WD clutch


15 **5: 19**93 1. 11. 1998

Model **6000-8750**

Code **440**

Page 16


Lubricating system of DPS and mechanical shuttle

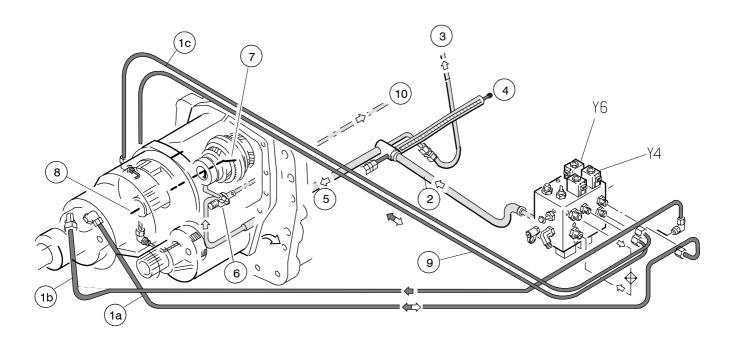

Picture 7. Lubricating and pressure oil pipes on tractors with Delta Powershift and with mechanical shuttle.

- 1a. Pressure oil pipe to multi-disc clutch for reduction ratio
- 1b. Pressure oil pipe to multi-disc clutch for overdrive ratio.
- 1c. Pressure oil pipe to multi-disc clutch for planetary carrier.
- 2. Feed pipe for lubricating oil
- 3. Lubricating oil to gearbox input shaft
- 4. Lubricating oil to PTO unit
- 5. Lubricating oil to the distribution piece inside the reverse shuttle housing
- 6. Distribution piece
- 7. Lubricating oil from distribution piece to reverse shuttle and quick shift gear.
- 8. Lubricating oil to quick-shift gear
- 9. Pressure oil to 4WD clutch in the lower part of the reverse shuttle housing.
- 10. Lubricating oil to bevel pinion shaft
- Y4 = Solenoid valve for reduction ratio
- Y6 = Solenoid valve for overdrive ratio

Lubricating and low pressure piping on HiTech tractors

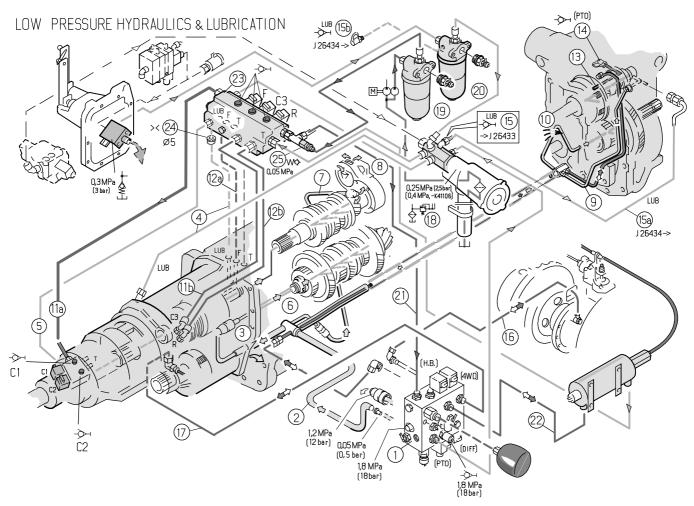

Picture 7A. Low pressure pipes on HiTech tractors.


- 1. Servo valve block (see pages 420/20C and 440/24):
- on the valve block there are solenoid valves for diff. lock, 4WD, PTO (proportional) and hand brake.
- oil cooler by pass valve (0,05 MPa) and oil cooler safety valve (1,2 MPa)
- pressure limiting valve of 1,8 MPa (clutch pressures).
- 2. Lubricating oil to gearbox.
- 3. Distribution piece (in which there is Ø 2mm restriction for the bevel pinion shaft lubrication).
- 4. Lubricating oil to shuttle
- 5. Lubricating oil to DPS
- 6. Lubricating oil to bevel pinion shaft
- 7. Lubricating oil to input shaft
- 8. Lubricating oil to pump drive mechanism
- 9. Lubricating oil to PTO clutch (+PTO)
- 10. Lubricating oil to PTO shaft (in the pipe there is \varnothing 1,5 mm hole for differential lubrication)
- 11a. Pressure oil to DPS solenoid valves P1/P2.

- 11b. Pressure oil to DPS clutch C3.
- 12a. Pressure oil to shuttle F-clutch
- 12b. Pressure oil to shuttle R-clutch
- 13. Pressure oil to PTO clutch
- 14. Test point, PTO clutch pressure (threads M14x1,5)
- 15. Test point (HPR), lubr. pressure.
- 16. Pressure oil to diff. lock
- 17. Pressure oil to 4WD clutch
- 18. Pressure-limiting valve (**0,4 MPa**) determines the lubrication pressure (0,25 MPa, K41107-).
- 19. Pressure filter of low pressure hydraulics
- 20. Return oil filter
- 21. Pressure oil from pump via filter into the valve block 1.
- 22. Pressure oil to hand brake ram
- 23. Valve block
- 24. Restriction, diam 5 mm
- 25. Non-return valve, 0,05 MPa (K50440-)

Model 6250 - 8950 Code 440

Page

16**B**

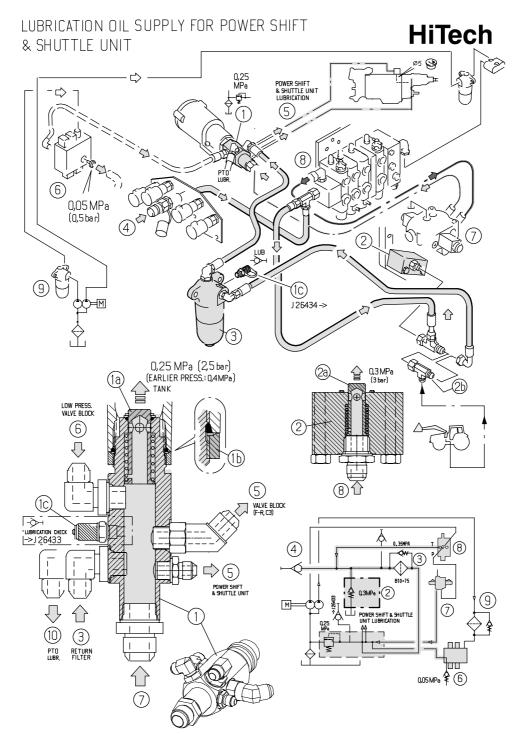

Picture 7B. Lubricating system in HiTech tractors

1. Distribution piece

1a. Valve 0,25 MPa (2,5 bar), ealier 0,4 MPa, determines the lubr. oil pressure. The pressure was earlier 0,4 MPa (-K41106). This modification improves the lubr. oil pressure. This pressure drop has been made so that the valve spool (1a) has been lenghtened about 4 mm. Valve spring is the same as in valve 2a

1b. Fixing nut of the distribution piece.

Observe, that the o-ring must remain in the thinned part of the distribution piece (not between threads).

- 1c) Test point, lubr. oil pressure. Fittend on the rearmost pressure filter, J26434 - .
- 2. Valve body
- 2a. Pressure limiting valve 0,3 MPa (3 bar) determines the max. pressure in return oil circuit.

- 2b. Return oil connection for front loader.
- 3. Return oil filter.
- 4. Return oil connection for auxiliary hydraulics.
- 5. Lubr. oil to DPS and shuttle. Oil flow into the shuttle has been reduced with a restriction (diam. 5 mm) (K41107-)
- 6. In the servo valve block, in the gearbox lubr. oil pipe, there is a valve of 0,05 MPa, which ensures lubr. oil to DPS and shuttle, if pressure drops below 0,05 MPa:n.
- 7. Oil from control valve (Bosch)
- 8. Oil from valve blocks
- 9. Pressure filtre in low pressure circuit
- 10. Lubr. oil pipe to the PTO clutch (J26434-).

44.	Quick-shift	gear,	reverse	shuttle
	and 4WD clu	ıtch		


15 5. 1993 1. 11. 1998

Model **6000 – 8750**

Code **440**

Page **17**

Mechanical reverse shuttle, description

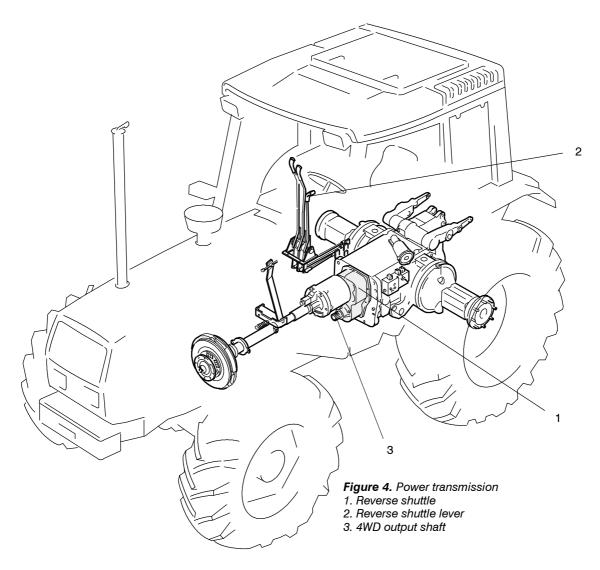

The reverse shuttle housing is attached to the gearbox front end. The reverse shuttle is controlled mechanically with a lever. In the reverse shuttle there is fitted a synchromesh unit.

When changing driving direction, the tractor must be stationary and the clutch pedal must be pressed.

The selector fork rail rear end is led into the gearbox through the gearbox front wall. The reverse shuttle lever lower end has been connected to the shifter lever, which turns the selector lever and the selector fork on the synchromesh unit moves.

The reverse shuttle has pressure lubrication (see figures on pages 440/10 and 440/16).

In the reverse shuttle housing lower part there is the 4WD clutch and 4WD output shaft. On E-models, there are two speed sensors on the reverse shuttle front end.

Important!

The picture above shows a transmission which has a 2-step quick-shift gear. If the tractor has a 3-step quick-shift gear (Delta Powershift), the reverse shuttle housing has a little different casting and additionally the input shaft length is different (see picture on page 440/19). In addition, in the reverse shuttle housing there is no impulse disc for E-models. The 4WD clutch and the 4WD output shaft have been reinforced in connection with the Delta Powershift (see picture on page 440/21). Also the selector fork rail has been reinforced. Otherwise the reverse shuttle is the same as earlier.

44. Quick-shift gear, reverse shuttle and 4WD clutch


15. **5. 199**3 1. 11. 1998

Model **6000-8750**

Code

440

Page 18

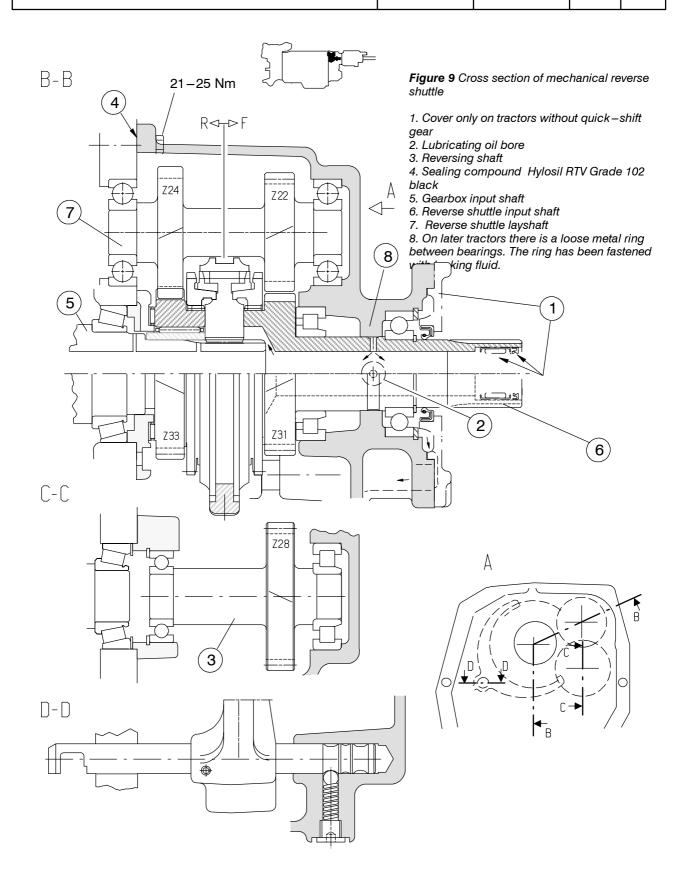

Forward driving

The synchromesh unit is in the front position (F). Gear Z31 has been engaged to the gearbox input shaft (5), and power is transmitted direct to the gearbox (transmission ratio 1:1).

Reversing


The synchromesh unit is in the rear position (R). Power is transmitted from the input shaft (6) via reversing shaft (3) to the layshaft (7). The layshaft rear gear (Z24) rotates the gear Z33 which has been engaged to the gearbox input shaft (5). (transmission ratio 2,5 % faster than in driving forward).

6000-8750

Model

Code **440**

Page **19**

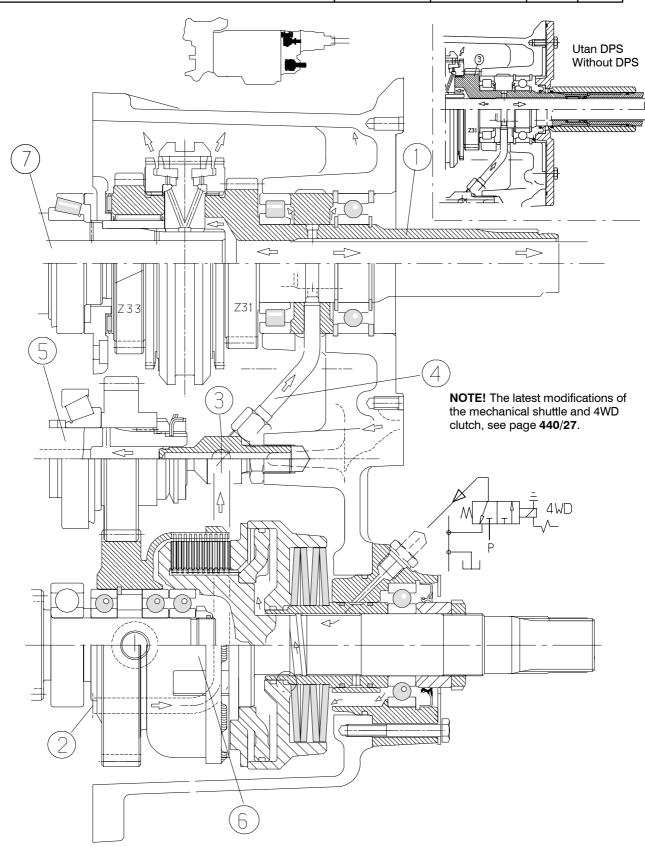

Picture 10. Mechanical reverse shuttle and 4WD clutch on tractors which have a 3-step quick-shift gear (Delta Powershift).


- 1. Reverse shuttle input shaft
- 2. Lubricating oil inlet
- 3. Lubricating oil distribution piece
- 4. Lubricating oil to reverse shuttle and quick-shift gear
- 5. Bevel pinion shaft front end
- 6. 4WD multi-disc clutch (see also page 440/21)
- 7. Gearbox input shaft

Note! On tractors with Delta Powershift, the revese shuttle layshaft and reversing shaft are the same as earlier, see previous page. Between the reverse shuttle input shaft bearings there is a loose metal ring and the ball bearing of the input shaft has circlips on both sides of the bearing.


Note! This shuttle and 4WD clutch is also on latest tractors which have not the Delta Power Shift. In this case, the shuttle input shaft is tightened with a flange which has an oil seal. Also inside the input shaft, there is a needle bearing and a seal for the pump (PTO) drive shaft.

44. HiTech shuttle	1 8.2000	Model	Code	Page
44. HITECH SHULLE	1. 9. 2002	6250-8950	440	19A

HiTech shuttle (HiTech: -K41106. HiTech 2.0: K41107-).

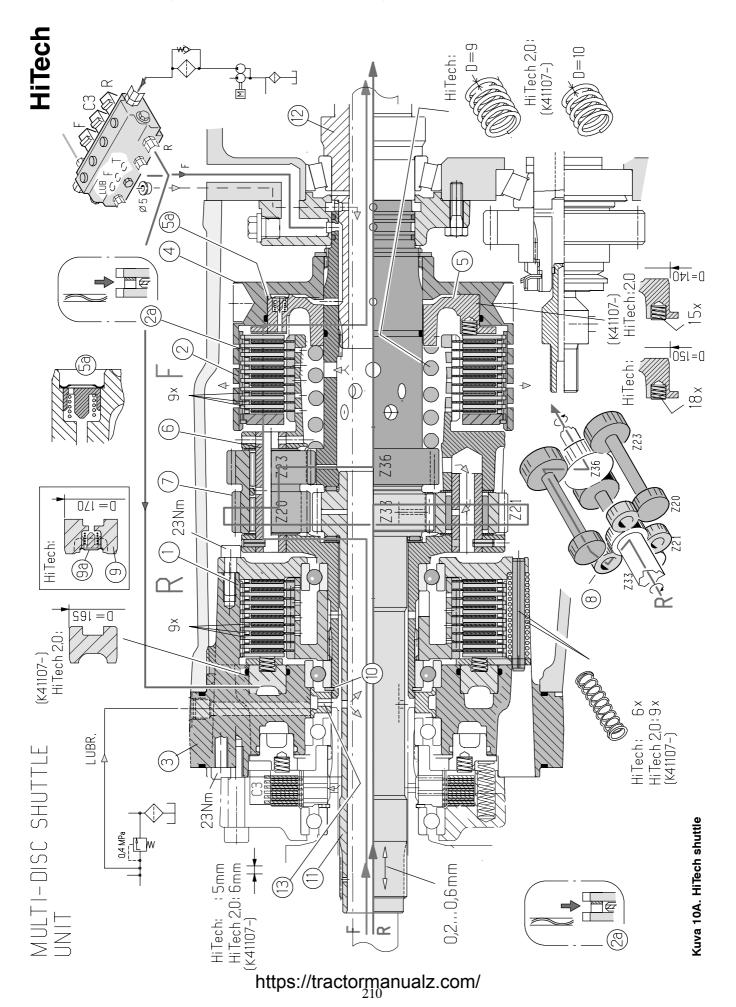

440 1

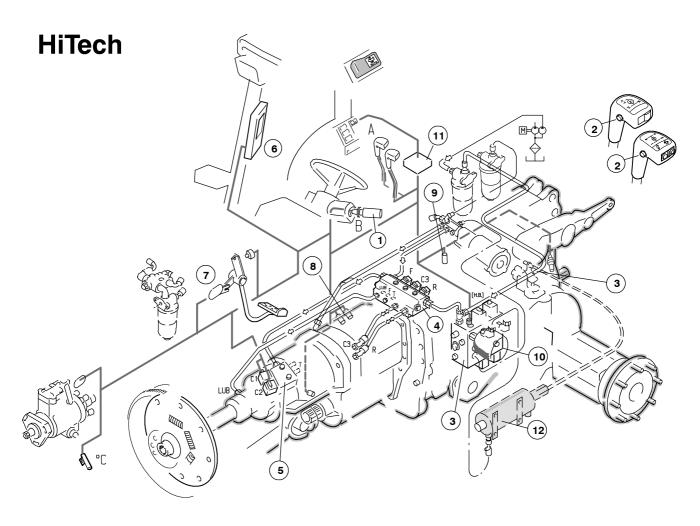

Picture 10B. HiTech Shuttle components

- 1. Shuttle lever / hand brake
- 2. In the gear lever knobs, there are push buttons for electrical disengagement of the Shuttle (comprare HiShift).
- 3. Pressure oil (1,8 MPa) from tractor low pressure circuit to the valve block on the LH side of the gearbox (see pages 420/20C and 440/24)
- Valve block on which there are proportional solenoid valves for F – and R – clutches of the shuttle, see page 440/25.
- 5. DPS valve block, see page 440/25.
- 6. Display unit, see code 370 (Autoconrol V) page 370/4.
- The shuttle can also be disengaged electrically with the clutch pedal. The pedal has a position sensor.
- 8. Shuttle rpm sensors (+rotation direction information)
- 9. Gearbox speed sensor (driving speed)
- 10. Pressure accumulator
- 11. Control unit
- 12. Hand brake ram

The construction of the HiTech shuttle is of a planetary type. Both F- and R-clutch disc packs are similar. When one of the clutches is under pressure (proportional valve in question energised), the direction in question is engaged. Power routes in the Shuttle, see picture **10A** (R=reverse drive, F=forward drive).

The change of the driving direction can be done without using the clutch pedal or push buttons and the tractor has not the conventional propulsion clutch on the flywheel. Automatics control the driving direction change and it is prevented if the driving speed exceeds 10 km/h.

The following modifications have been done on the tractors which are equipped with the HiTech Shuttle:

- casting modifications on the housings of the DPS and Shuttle.
- since the DPS is fastened to the shuttle, modifications have been done in the rear part of the DPS, see pages 15C and D.
- Main gearbox input shaft front end has modifications
- The shaft between flywheel DPS modified.
- The pressure and lubricating oil pipes and the various valve blocks have been arranged in the new way, see page 440/16A and B.
- New electrical control of the DPS and Shuttle, see code 370 (Autocontrol V).
- Drive plate in place of the propulsion clutch, see page 410/4A.

Note! Repair instruction of the HiTech Shuttle, see pages 442/4-11. The electric control of the DPS and Shuttle is described under code 370 (Autocontrol V). Various valve blocks in connection with the HiTech Shuttle, see pages 440/24 and 25.

In connection with the HiTech Shuttle, the hand brake control has been combined with the Shuttle lever (see page 521/2).

44. Quick-shift gear, reverse shuttle		Model	Code	Page
and 4WD clutch	15. 5. 1993	6000-8750	440	20

4WD clutch

The 4WD clutch is fitted in the lower part of the reverse shuttle housing. Power from the gearbox to the clutch is transmitted via a gear wheel at the bevel pinion shaft front end.

4WD is always engaged by cup springs, when the engine is stopped (pressurised oil does not act in the clutch).

When pressure oil is directed to the 4WD clutch, the multidisc clutch is released and power is not transmitted to the front wheels.

Front wheel drive is engaged and disengaged electro—hydraulically by means of a switch on the range gear lever knob. 4WD solenoid valve is placed on the servo valve block on the gearbox LH side.

Clutch pressure is directed to the 4WD clutch via an external pipe from the servo valve block. Low pressure pump supplies oil to the servo valve block. Clutch pressure is 1,8 MPa and is limited by a pressure—limiting valve on the servo valve block.

4WD output shaft has been connected to the propeller shaft with a flange joint or with a sleeve joint on tractors which have Delta Powershift

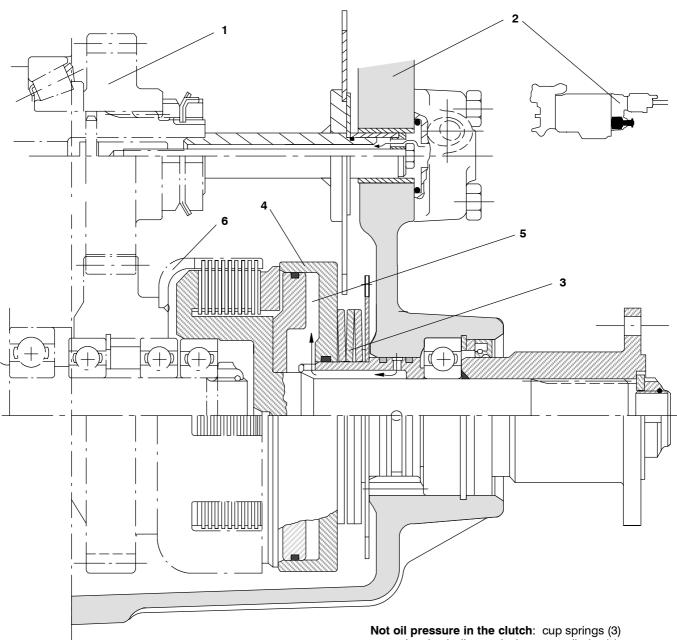


Figure 11. 4WD clutch on tractors equipped with a 2-step quick-shift gear or are without a quick-shift gear

- 1. Output gear at the front end of the bevel pinion shaft
- 2. Reverse shuttle housing
- 3. Cup springs
- 4. Press cylinder
- 5. Oil space
- 6. Clutch drum, which always rotates when the tractor moves. Clutch pack steel disc lugs are engaged with the grooves on the drum.

Not oil pressure in the clutch: cup springs (3) press the clutch disc pack via press cylinder (4) to the engaged position and power is transmitted to the front wheels.

Oil pressure in the clutch: Pressure oil acts in the oil space (5) and cylinder (4) moves against the cup springs (3) and the multi-disc pack is released. Power is not transmitted to the front wheels

Note! 4WD engages always when the brake pedals are pressed.

https://tractormanualz.com/

44. Quick-shift gear, reverse shuttle and 4WD clutch




Model **6000 – 8950**

Code **440**

0

Page **21**

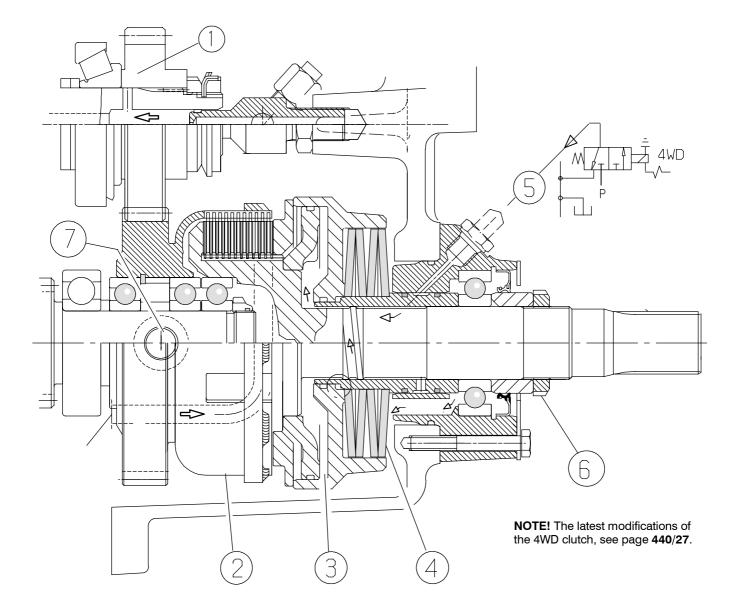

Picture 12. 4WD clutch on tractors which have Delta Powershift (reinforced clutch **660071** –).

- 1. Gear wheel for 4WD at the front end of the bevel pinion shaft. Number of teeth on 4WD gear wheels depends on the transmission type (30 km/h, 40 km/h or 50 km/h).
- 2. 4WD clutch drum.
- 3. Pressure oil space for disengaging the 4WD.
- 4.Cup springs which keep the clutch in engaged position when pressure oil does not act in space 3.
- 5. Pressure oil inlet from the servo valve block (valve block, see page 440/13).
- 6. The multi-disc clutch is adjusted by tightening the shaft nut first fully home and then unscrewing the nut one and a half turn.
- 7. Place for rotation speed sensor on E models (AC IV). The sensor must be removed before the reverse shuttle housing is detached.

The function of the clutch above is the same as earlier (see previous page).

In this clutch the propeller shaft rear end is connected to the 4WD output shaft with a sleeve joint. Additionally, in the clutch there are more clutch discs and also the cup springs are reinforced.

The 4WD clutch above is equipped with a separate seal/bearing housing which is bolted to the lower part of the reverse shuttle.


В

Model **6000-8750**

Code **440**

Page **22**



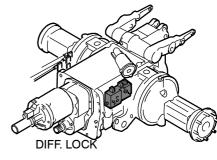

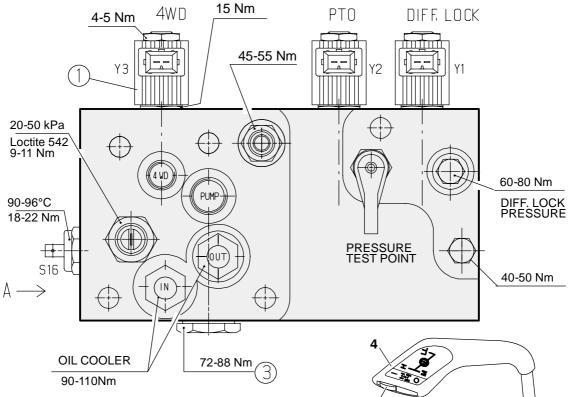


Figure 13. Servo valve block of earlier type, -660070.

- 1. Solenoid valve for 4WD
- 2. Pressure-test point
- 3. Pressure-limiting valve (1,8 MPa)
- 4. Range gear lever
- B. Switch for 4WD (on range gear lever knob)

Important! Tractors which are equipped with Delta Powershift, the servo valve block is different, see page 440/13. With effect from ser. no. 660071 all 6100-8400 tractors have a new valve block, see next page 440/23.

44. Quick-shift gear, reverse shuttle and 4WD clutch

1. 9. 2002


Model **6000-8750**

Code **440**

Page 23

VALVE BLOCK

(2-STEP QUICK-SHIFT GEAR, FROM TRACTOR NO 660071→ /WITHOUT DELTA POWER SHIFT)

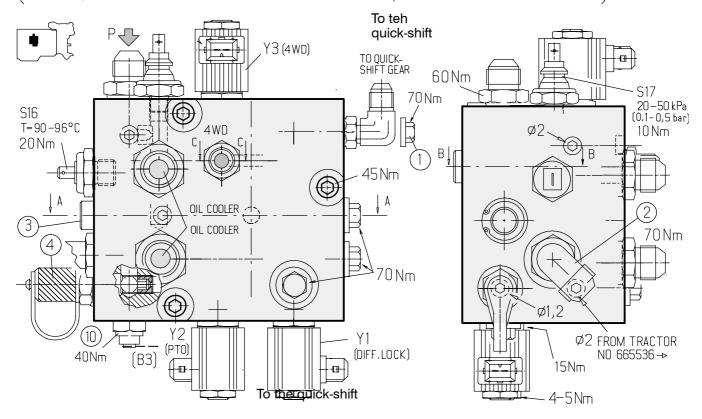

Picture 14. Later servo valve block, **660071** –, which is fitted on tractors with 2–step quick–shift gear or without quick–shift gear (and DPS), and with mechanical shuttle.

The valve block is placed on the LH side of the gearbox.

Y3 = Solenoid valve for 4WD

S16 = Transmission oi temperature sensor (warning light)

S17 = Transmission oil pressure sensor (warning light)


- 1. Connector is plugged on tractors without quick shift gear
- 2. Oil inlet from the working hydraulic return oil side.
- 3. Pressure-limiting valve
- 4. Pressure-test point, low pressure circuit.
- $P = Pressure \ oil \ inlet \ from \ the \ low \ pressure \ pump.$

The pressure—limiting valve (1,8 MPa) in the valve above is of different construction compared with the pressure—limiting valve in the previous valve block. The cross—section of the new pressure—limiting valve is shown on page **440/13**.

The valve block above has the same components as the valve block which is fitted on tractors with Delta Powershift, see page 440/13. However, the valve above has not solenoid valves for Delta Powershift and not even the valve spool for a direct ratio of Delta Powershift.

Model 6250-8950 Code 440

Page 24

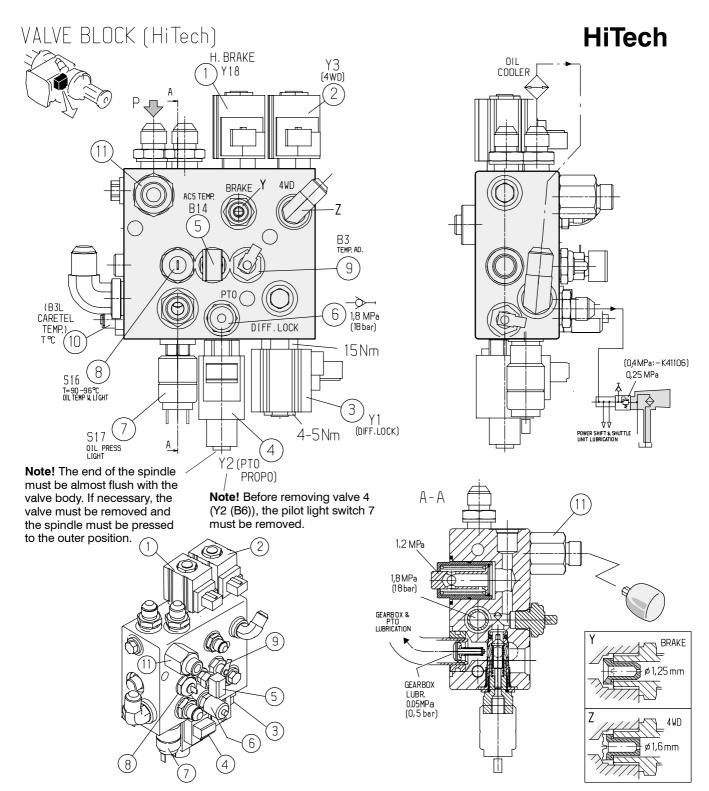

Picture 15. Servo valve block on HiTech tractors (on the LH side of the gearbox)

NOTE! Cross section of the valve, see page 420/20C.

- 1. Solenoid valve of hand brake (energised, when the hand brake is disengaged, see code 521).
- 2. 4WD solenoid valve (engaging logic, see code 314 (AC 2.3).
- 3. Solenoid valve of differential lock (engaging logic, see code 314 (AC 2.3).
- 4. Proportional valve Y2 (P6) of PTO (engaging logic, see code 314 (AC 2.3).
- 5. Temperature sensor of Autocontrol 5/5.2/6 (see code 370/371).
- 6. Pressure test point, low pressure circuit (1,8-1,9 MPa)
- 7. Indicator light sensor (S17), gearbox oil pressure
- 8. Indicator light sensor (S16), gearbox oil temperature
- 9. Oil temperature sensor (B3), AD-instrument
- 10. CareTel oil temperature sensor B3L.
- 11. Connection for pressure accumulator (not ill.).

 https://tractormanualz.com/


44. DPS, Power Shuttle 4WD clutch

1. 6. 1999 1. 10. 1999

Model **6250 – 8950**

Code **440**

Page **25**

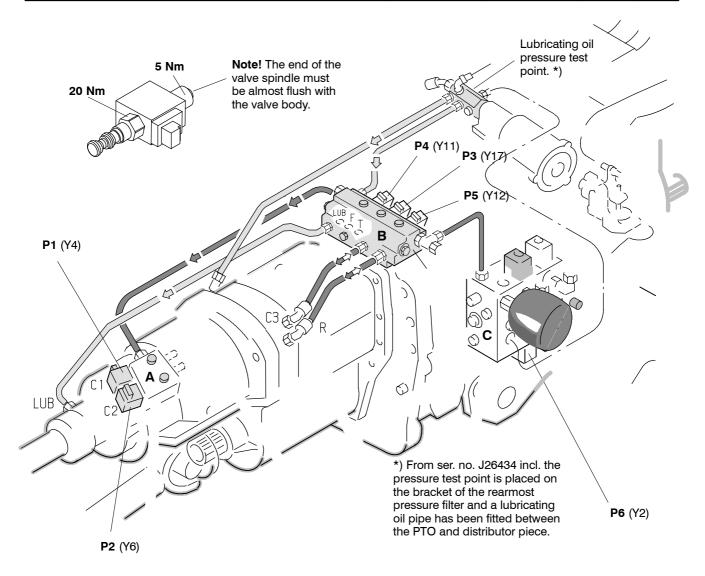

Picture 16. Valve blocks in connection with HiTech Shuttle

- A. DPS valve block
- B. Shuttle valve block
- C. Renewed servo valve block, see pages 440/24 and 420/20C.

Valve block A:

P1=Proportional solenoid valve of DPS foremost clutch C1 This valve is energised, when DPS ratios I or II have been connected (transmission 650). The pressure test point of this clutch is the LH side point on the block.

P2=Proportional solenoid valve of DPS middle clutch C2 This valve is energised, when DPS ratios I or III have been connected (transmission 650). The pressure test point of this clutch is the RH side point on the block.

Valve block B

P3=Proportional solenoid valve of DPS rearmost clutch C3 This valve is energised, when DPS ratios II or III have been connected (transmission 650). The middle pressure test point is for this clutch.

P4=proportional solenoid valve for forward clutch (F). Energised when the forward driving has been connected. The pressure test point is the RH side test point on the block.

P5=proportional solenoid valve for reverse clutch (R). Energised when the reverse driving has been connected. The pressure test point is the LH side point on the block.

P6=proportional solenoid valve for PTO.

Note! Concerning pressure tests and pressure calibrations, see under code **370** (Autocontrol V).

Note! The lubricating oil pressure can be measured in test point (HPR) on the rear part of the suction strainer housing. Valve block **B** is also shown on page **420/20D**.

44. Quick-shift gear, reverse shuttle		Model	Code	Page
and 4WD clutch	1. 11. 1998	6000-8750	440	26

Working order

Table below shows working orders for certain repair work. Detailed repair instructions can be found in instructions which start on next page.

	Drain trans- mission oil	Remove floor hatch	Split tractor between fuel tank-gearbox	Remove quick-shift gear	Remove reverse shuttle	Disassemble gearbox
Changing 2-step quick-shift gear solenoid valve.		1				
Changing solenoid valves/proportional valves for 3-step quick-shift gear.	Solenoid valves are placed on the separate valve blocks and oil draining is not necessary					
Changing 2-step and 3-step quick- shift gear front oil seals	1		2			
Changing oil seal inside the quick— shift gear input shaft front end	1		2			
Changing piston ring type oil seals in 3-step quick-shift gear	1		2 (in addition, disconnect oil pipes from gear housing and remove the seal housing in the front part of the gear housing.			
Reconditioning quick – shift gear	1		2	3		
Repairing mechanical reverse shuttle synchromesh unit	1		2	3	4	
Changing mechanical reverse shuttle selector fork	1		2	3	4	
Changing mechani- cal reverse shuttle selector lever	1		2	3	4	5
Reconditioning Hi- Tech Shuttle multi – disc clutches	1		2	3	4	
Reconditioning 4WD clutch	1		2	3	4	
Changing 4WD output shaft oil seal	1					

Note! The quick-shift gear/reverse shuttle can be removed in two different ways:

⁻ split the tractor between gearbox-fuel tank and roll the front frame away from the gearbox (cab is attached to the rear frame): see instruction 441 1A

⁻ split the tractor between gearbox – fuel tank and roll the rear frame away from the fuel tank (cab attached to the front frame): see instruction 423 1A.


1.8.2000

Model 6000-8950 Code Page

27

440


FORWARD-REVERSE SHUTTLE (not HiTech) &4WD CLUTCH

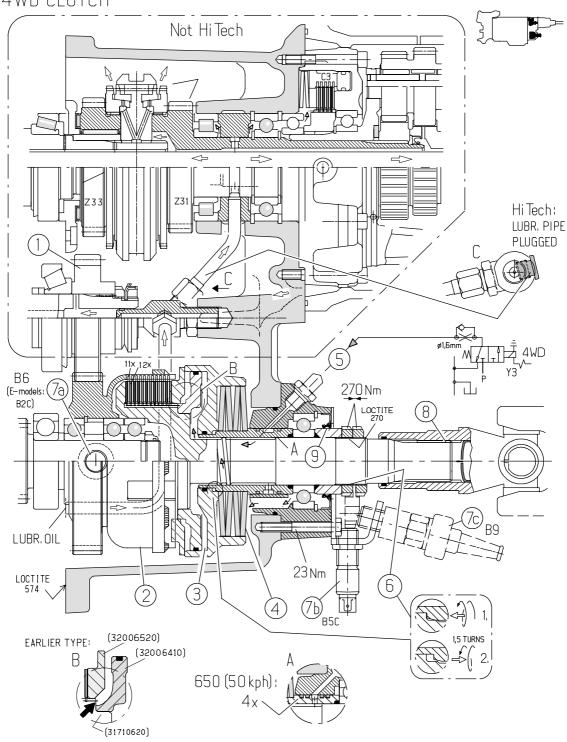

Picture 14. Mechanical shuttle (not HiTech) and 4WD clutch (also HiTech), latest modifications.

- 1.Gear wheel in the front end of the bevel pinion shaft
- 2. Clutch drum
- 3. Pressure cylinder
- 4. Cup springs
- 5. Pressure oil inlet port
- 6. Tighten the inner nut fully home and open it then **1,5 turn**. Outer nut is tightened to 270 Nm against the inner nut. Loctite 270 on the threads. Note! Prevent inner nut from rotating when tightening the outer nut.
- 7a, b. Speed sensors of gearbox anf front axle
- 7c.Tachograph (option)
- 8. EP grease on splines..
- 9. Universal grease

 Detail B: The shape of the flanges have been changed. With earlier shape the pressure flange could drop between the shaft and the flange due to the casting faults.






441. Quick-shift gear	8, 11, 1990	Model	Code	Page	
	15. 5. 1993	61008400	441	1	

Reconditioning quick—shift gear (Op. no. 441)


1. Removing quick-shift gear

A. Splitting tractor between gearbox—fuel tank (cab attached to the rear frame)

Note! Splitting can be done also according to instruction **423 1A.** In addition, on E-models the sensor wires must be disconnected.

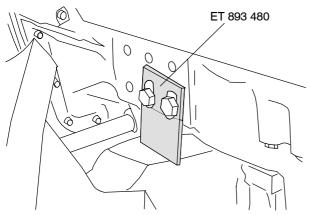

1. Fit support plates ET 893 480 (2 pcs) for preventing front axle oscillation (fixing bolts M20x35). Drain transmission oil.

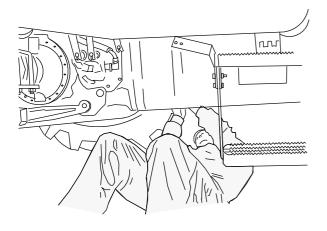


2. Remove all engine hood plates. Disconnect the battery earth cable. Remove the propeller shaft guard and disconnect the propeller shaft rear flange joint.


Note! On tractors with Delta Powershift the propeller shaft rear end has a sleeve joint and it disconnects when tractor is split

- 3. Disconnect the heater hoses from the cab front wall.
- 4. Disconnect the stop control from the injection pump. Detach clutch lever from the clutch adjusting rod or cable (-659477) or disconnect the release cable front end by working through the access hole on the frame (659478-)

Note! Measure the distance between the clutch adjuster stop and the wing nut for easier fitting (**–659477**).

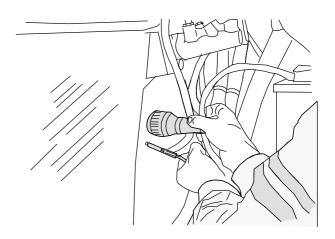

- 5. Disconnect the socket and the accelerator pedal cable wire from the cab front wall (on the RH side).
- 6. Disconnect the electric cable to the starter motor and disconnect the cab earth lead from the cab front wall.

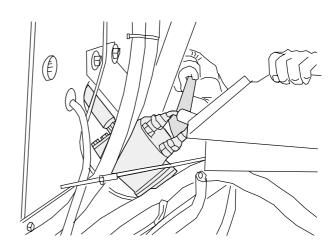


- 7. Mark the steering valve hoses for easier fitting and disconnect the hoses from the valve. Disconnect the windscreen washer hose and the cable connector.
- 8. Detach the plastic covers from the cab lower front edge. Unscrew the cab front fixing bolts and raise the cab front end about 5 cm.

Note! The lifting rope can be attached to the brake fluid reservoir bracket. Support the cab front end with trestles.


- 9. Disconnect the oil cooler pipes from the servo valve block on the gearbox LH side.
- 10. Disconnect the hoses and hose connections from the hydraulic lift control valve (on the RH side of the gearbox) for easier work. Disconnect the hoses from the pressure filter.

441. Quick-shift gear	8.11.1990	Model	Code	Page
	15. 5. 1993	6100-8400	441	2

11. Place trestles equipped with castors under the fuel tank. Support the gearbox under the front edge and also place support under the towing hook (rear frame is rear—heavy).

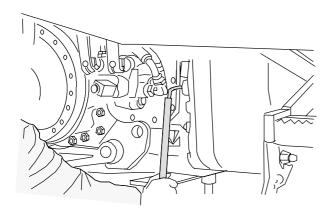

12. Unscrew the bolted joint between the gearbox and fuel tank.

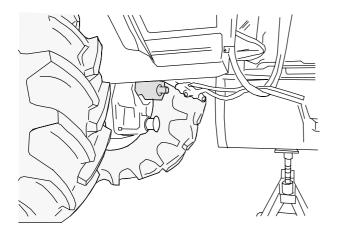


13. Roll the front frame apart from the gearbox.

Note! Pass the 2-step quick-shift gear solenoid wire so that it does not damage when the frame is split.

B. Detaching 2-step quick-shift gear from the reverse shuttle

Important! 3-step quick shift gear (Delta Powershift), see page **444/1**.

1. Disconnect the quick—shift gear solenoid wire connector. Carefully pull out the long pump drive shaft. Do not damage the seals.

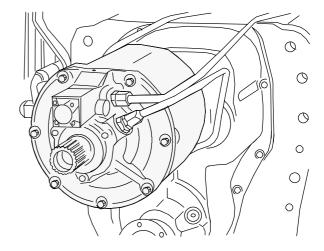

- 2. Disconnect the oil pipes from the quick-shift gear.
- 3. Unscrew the quick-shift gear fixing bolts and remove the quick-shift gear.
- 4. Remove the centring ring and o-rings between the quick-shift gear and the reverse shuttle.

441. Quick-shift gear	8_17.1990	Model	Code	Page
	15. 5. 1993	6100-8400	441	3

2. Fitting quick-shift gear


A. Attaching 2-step quick-shift gear to reverse shuttle

Important! 3-step quick shift gear (Delta Powershift), see under code 444.

1. Fit the centring ring, large o-ring and small o-ring round the oil bore between the quick-shift gear and the reverse shuttle.

Note! If necessary, o-rings can be fixed with a little grease.


- 2. Place the quick-shift gear onto the reverse shuttle input shaft.
- 3. Tighten the quick shift gear fixing bolts to a torque of **45** Nm.
- 4. Connect the oil pipes and the solenoid valve lead to the quick-shift gear.

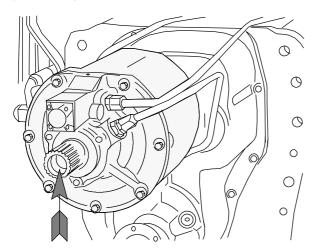

Note! Check and change, if necessary, the needle bearing and oil seal inside the input shaft front end. The seal can be fitted with drift ETV 892 180.


5. Carefully push the pump drive shaft through the input shaft fully home. Place the connecting sleeve onto the quick-shift gear input shaft.

B. Assembling tractor frame between gearbox-fuel tank.

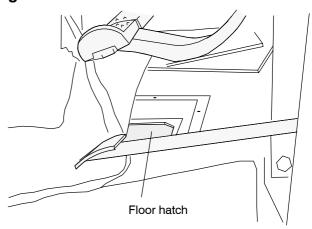

- 1. Open the floor hatch
- 2. Push the front frame against the gearbox and guide the connecting sleeve through the floor hatch.

Note! Rotate, if necessary, the flywheel for easier engagement of the pump drive shaft front end splines. Also guide the 2-step quick-shift gear solenoid valve wire into place.

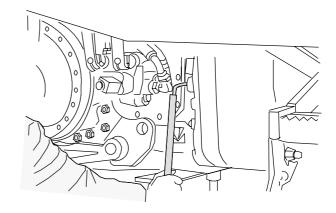

3. Push the frame parts against each other so that the guide pins and studs engage with their holes. Tighten the frame joint bolts (nuts onto studs **300 Nm**, hexagonal socket—head screws **125 Nm**). Remove the supports under the tractor.

Important! If the tractor has Delta Powershift, guide the propeller shaft rear end onto the 4WD output shaft splines.

- 4. Connect the hoses to the hydraulic lift control valve and also the hoses to the pressure filter (on the RH side).
- 5. Connect the oil cooler pipes to the servo valve block (on the LH side of the gearbox).

441. Quick-shift gear


8. 11. 1990 15. 5. 1993

Model **6100-8400**

Code

441


Page 4

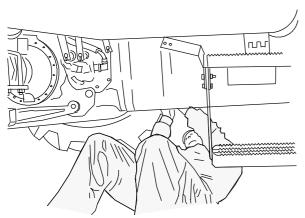

6. Connect the rear flange joint of the propeller shaft (**35 Nm**) (not Delta Powershift) and fit the guard plate.

Note! Tightening torque of the front axle attaching bolts is **380 Nm**.

- 7. Lower the cab front end and tighten the cab fixing bolts to **200 Nm**. Fit the plastic covers to the cab lower front edge on both sides.
- 8. Connect the hoses to the steering valve according to the marks. Fit the windscreen washer hose and cable connector.

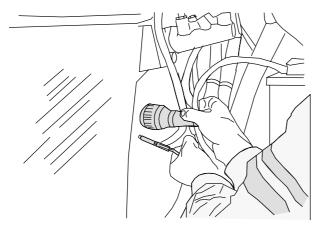

- 9. Connect the cable to the starter motor. Connect the socket and the accelerator pedal cable wire (on the RH side). Connect the cab earth lead to the cab front wall.
- 10. Fit the clutch lever/adjusting rod or cable according to the measurements (**-659477**) or connect the release cable front end through the access hole on the frame (**659478**–). Connect the stop control to the injection pump. Connect the cab heater hoses.
- 11. Remove the support plates on the front axle. Connect the battery earth cable. Fill the transmission with oil.
- 12. Fit the engine hood plates and test—drive the tractor. Adjust the clutch and make sure that the throttle control and stop control function properly. Check for leaks.
- 13. Make sure that the quick-shift gear functions properly.

Note! E-models: check that the sensor wires have been connected and that the AC-III unit functions.


3. Reconditioning 2-step quick-shift gear

Note! The 2-step quick-shift gear is the same as on Valmet 505-905 tractors. Tractors equipped with 3-step quick-shift gear Delta Powershift, see under code **444**.

A. Changing seals for input shaft

Note! Before changing the seals, split the tractor frame between the gearbox and fuel tank (see instr. 441 1 A or 423 1A).

1. Remove the seal retainer/bearing cover.

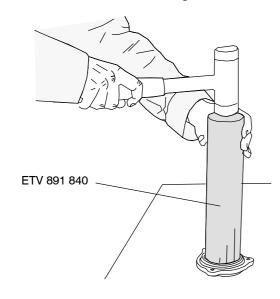

2. Remove the old seal from the retainer and drive in a new seal with ETV 891 840. Fit a new o-ring in the cover.

Note! Fit the support ring under the seal.

- 3. Wrap plastic foil round the splined joint on the quick-shift gear shaft and press on the cover with seals. Tighten the bolts to 23 Nm.
- Assemble the tractor frame between the gearbox and fuel tank (see instr. 441 2 B).

B. Changing input shaft/disc assembly


Note! The quick—shift gear has been detached from the tractor (see instr. 441 1 A and B).

- 1. Remove the seal cover.
- 2. Unscrew the quick-shift gear cover bolts. It lifts about 5 mm out of the housing under pressure from the cup springs.



3. Lift off the cover so that the input shaft complete with epicyclic gear and multi-disc clutch comes out with it.

Note! If the planet carrier does not loosen, turn the cover slightly so that the planet pinions enter the grooves in the walls of the housing.

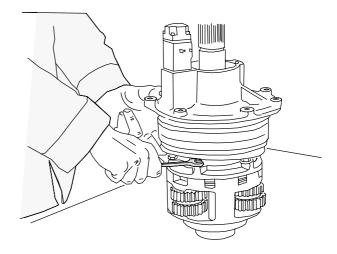


- 4. Place the quick shift gear on end so that the cover comes upwards. Separate the planet carrier and lift off the upper part.
- 5. Remove the discs.

6100-8400


Code **441**

6


Page

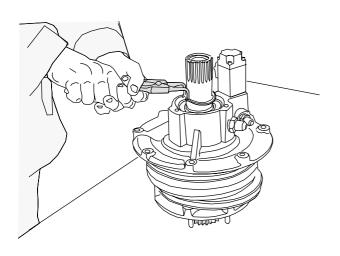


6. Remove the circlip for the front bearing. Take care not to damage the sealing surface on the shaft.

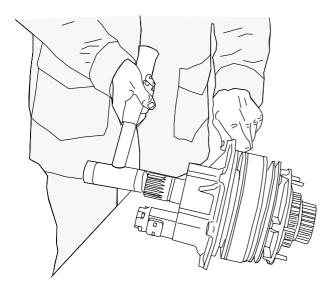

7. Knock the end of the shaft with a recoilless hammer so that the shaft comes out of the cover together with piston and front part of the planet carrier.

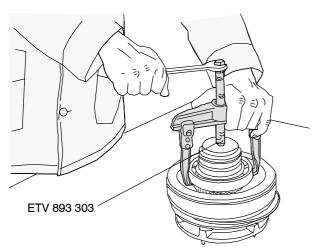

8. Remove the piston ring type seals and circlip which are fitted in front of the ball bearing. Pull off the bearing (Kukko 20-10).

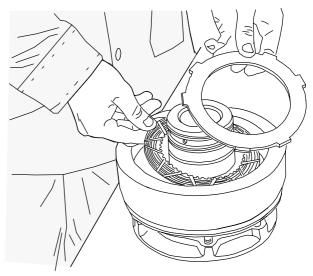


9. Remove the discs and pressure plates. Take out the piston.



10. Check the convexity of the cup springs. The measurement should be 13,7–14,3 mm. If the springs are outside these limits they must be changed.

11. The discs must be changed when the oil deflector grooves on the surface are worn down. The wear can be assessed by looking at the oil deflector grooves on the side of the planet carrier. If no grooves are visible it can be assumed that the discs are worn out and should be changed.

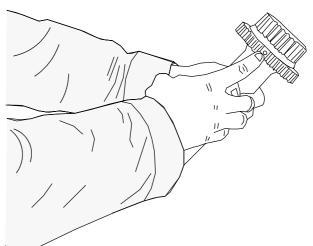


12. When changing the disc hub on the input shaft, check that the hole in the ring gear comes in line with the hole in the shaft. The hub is fitted on the shaft with the chamfered surface facing the gear wheel.


444 0 114 115 115 115		Model	Code	Page
441. Quick-shift gear	8. 11. 1990	6100-8400	441	7

C. Changing needle bearings in planet pinions and planet carrier


Note! In this instruction, the planet carrier has been detached (see previous instr. B points 1 – 5).

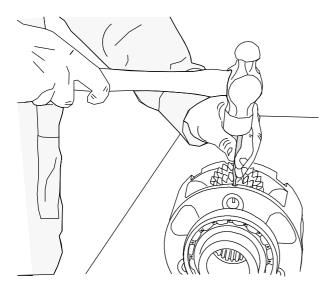


1. Knock in the locating pin for the planet pinion shafts. Push out the shaft and take off the pinion and spacer ring.

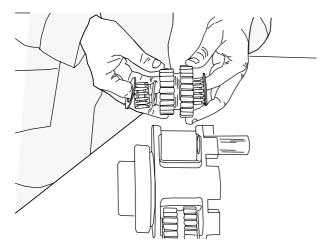

2. Oil the new bearings before fitting. Fit the bearing and spacer ring in each planet pinion.

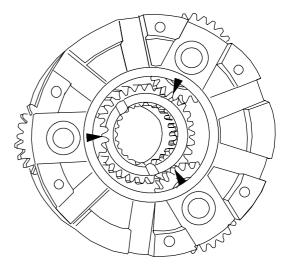

3. Check when fitting that the arrows on the planet pinions point towards the centre of the sun wheel. Push the shaft in the pinion and fix it with a locating pin. Fix the pin with a centre punch pop.

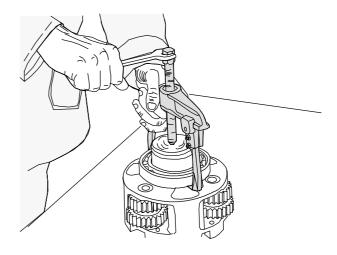

- 3. Pull off the rear bearing of the planet carrier (Kukko 20 100.
- 4. Fit a new bearing (ET 893 420).


Note! If the bearing in the end plate is to be changed, this is most easily done by pressing it out from inside. The new bearing is only fitted after the shaft has been fitted in the quick—shift gear.

5. Assemble the quick-shift gear (see next instr. D) and fit the quick-shift gear (see instr. 441 2 A and B).


		Model	Code	Page
441. Quick-shift gear	8. 11. 1990	6100-8400	441	8

D. Fitting input shaft and disc assembly


Note! Before fitting check the piston seal rings and change them if necessary..

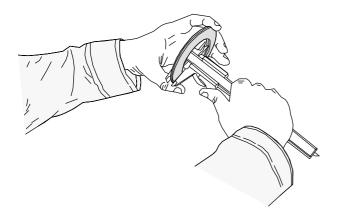

1. Fit the lock-up piston. Check the convexity of the cup springs, which should be **6,90-7,02** mm

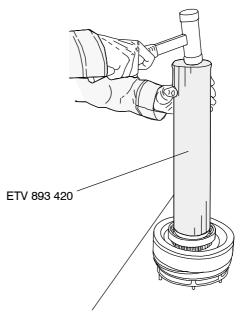



5. Drive on the front ball bearing with ET 893420. Lock the bearing with the circlip. Fit the piston rings.

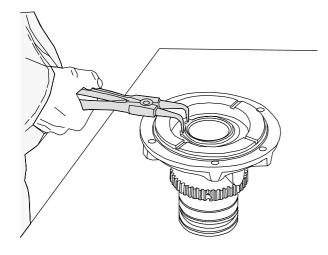

2. Fit the cup springs so that the outer peripheries come in line with each other. Lock the springs with the circlip.

3. Turn the planet carrier so that the newly fitted lock – up piston comes downwards and place the six bolts in their holes in the flange. Fit the two cup springs so that their inner peripheries come in line with each other. Fit the piston.

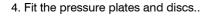

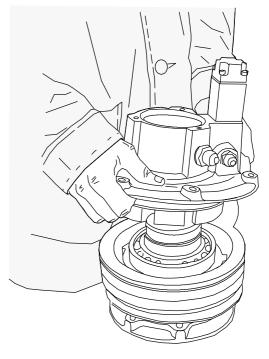

6. Guide the external teeth on the pressure plates and steel disc so that they come in line with each other. Fit the end plate and press on. Check that the teeth engage with the gaps in the end plate.


>	
8. 11.	1990

Model **6100-8400**


Code **441**


Page

9

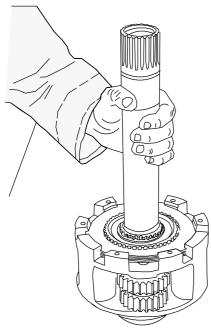


7. Place the lock—up discs on the planet carrier. Fit the input shaft together with the disc hub. Check that the hub on the shaft engages with the splined joint on the discs.

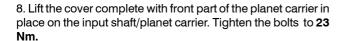

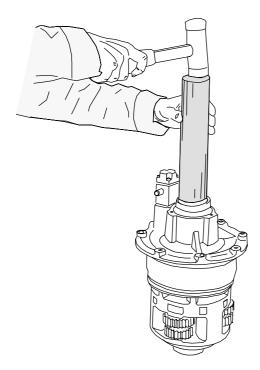

9. Fit the circlip behind the bearing on the input shaft. Drive in the bearing with ET 893 362. Fit the circlip in front of the bearing

10. Fit the new shaft seal. Wrap plastic foil over the splines on the shaft, oil the seal and fit the seal retainer. Tighten the bolts to ${\bf 23~Nm}$.

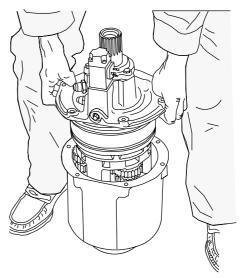


11. Lift the gear into the housing. Make sure that the cup springs come fully home (distance between the cover and housing contact surfaces should be 5 mm when the gear rests on the cup springs). If this distance is greater, check the position of the cup springs. Screw the cover bolts to 23 Nm. Do not use force.


12. Attach the quick-shift gear to the reverse shuttle (see instr. 441 2A) and assemble the tractor frame (see instr. 441 2 B or 423 5A).

441. Quick-shift gear		Model	Code	Page
	8. 11. 1990	6100-8400	441	10

E. Changing quick-shift gear solenoid valve

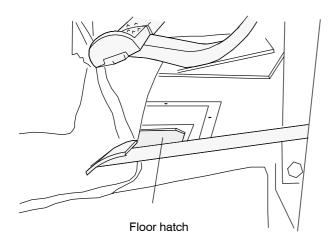

- 1. Remove the floor mat and the cover plates on the floor opening.
- 2. Detach the connector from the solenoid valve.

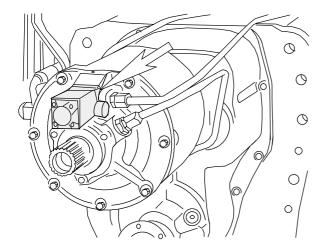

3. Unscrew the solenoid fixing screws and fit a new solenoid.

Note! Do not tighten the solenoid screws too hard. Correct torque is 2,5-3,5 Nm.

- 4. Connect the connector to the solenoid. Check the function of the quick-shift gear solenoid.
- 5. Fit the floor hatch and the floor mat.




442. Reverse shuttle	15. 5. 19 93	Model	Code	Page
	1. 1. 1995	6000-8750	442	1

Reconditioning reverse shuttle (Op. no. 442).

Note! In the instruction below a tractor is used which has no quick—shift gear. On these models, the reverse shuttle has a flange which is shown in the figures. In addition, on E—models there are two speed sensors on the front face of the reverse shuttle housing. Also impulse discs are only on reverse shuttle units which are fitted on E—models. Casting of the reverse shuttle housing is a little different on tractors with Delta Powershift.

A. Removing reverse shuttle


- 1. Split the tractor frame between the gearbox and fuel tank (see instr. **441 1 A** or instr. **423 1A**).
- 2. Detach the quick-shift gear, if fitted: 2-step quick-shift gear, see instr. **441 1B**. 3-step quick-shift gear, see instr. **444 1A** points **1-4**.
- 1. Disconnect the oil pipes from the reverse shuttle.

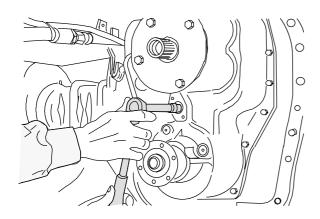


2. **2-step quick-shift gear**: Detach the oil distributor piece from the front side of the housing and unscrew the bolt behind the piece (otherwise the bolt prevents detaching of the housing)

Important! If the tractor has Delta Powershift, the oil distributor piece is fitted inside the reverse shuttle housing and it is unnecessary to remove it.

3. **On AC IV models:** Remove the gearbox speed sensor on the RH side of the reverse shuttle housing.

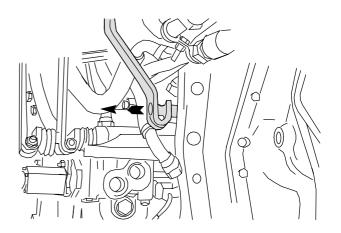

3. Pull out the reverse shuttle selector lever (on the RH side of the gearbox) until the lever inner end releases from the selector fork rail groove.

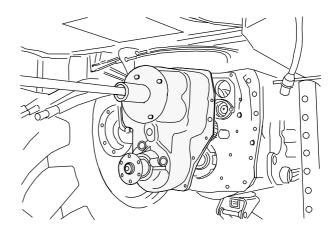


4. Support the reverse shuttle with a suitable lifting device and unscrew the reverse shuttle fixing bolts. Pull the housing straight out.


Note! Easiest way to remove the reverse shuttle is to use a lifting device which has a support bar that can be pushed through the reverse shuttle input shaft as in figure above.

442. Reverse shuttle	15. 5. 19 93	Model	Code	Page
	1. 1. 1995	6000-8750	442	2


B. Changing synchromesh unit/reverse shuttle bearings

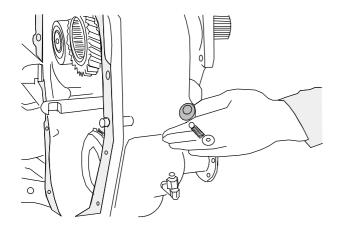

1. Unscrew the plug for the selector fork rail locking ball and spring and remove the spring and ball.

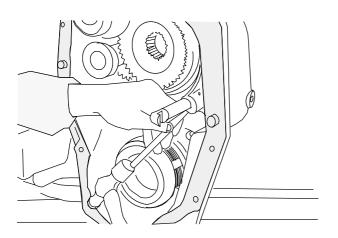


3. Tap out the selector fork locking pin. Pull out the selector fork rail (selector fork remains in place).

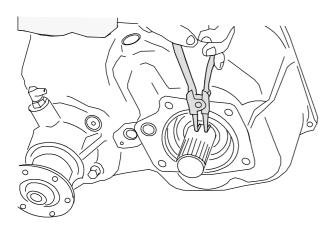

4. Remove the smaller circlip at the input shaft front end.

5. Knock at the input shaft front end and remove all three shafts from the housing. Remove also the selector fork sliding pieces.

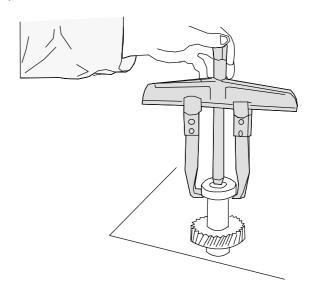

- 6. Change, if necessary, the layshaft and reversing shaft ball bearings.
- 7. If you change the reversing shaft roller bearing, its inner race can be removed from the shaft by warming it up.
- 8. Check the condition of the synchromesh unit and change worn parts.

Note! The synchromesh unit is assembled as follows:

- place the sliding coupler on a flat surface.
- fit springs and shoes onto the hub, press them inwards and place the hub into the sliding coupler, so deep that the parts are held in place.
- Fit separately three balls on the springs. Press the ball inwards and push the parts inside the sliding coupler so that the ball is held in place.
- -when all balls are in place, finally push the hub into the sliding coupler.

Note! Measure the synchronizing ring wear by putting the ring onto the tapered part of the coupling gear. Then measure, how deep the ring is pressed. Clearance between the ring and the gear on the new synchromesh unit is 1,65–2,20 mm. Min. allowable clearance is 1 mm.

9. Remove the circlip of the input shaft front ball bearing and remove the bearing.

Note! Fit a new bearing after the reverse shuttle housing has been attached to the gearbox.

Note! The reverse shuttle shafts can be fitted back into the housing, but the reverse shuttle is easier to fit if the shafts are fitted first onto the gearbox front side and after that the housing.


10. If you change the input shaft roller bearing, the inner race can be removed from the shaft by warming it up. Fit a new bearing fully home into its location on the housing .

Note! On the latest reverse shuttles, there is a loose metal ring between the input shaft bearings, see picture on page **440/18** point 8. See also picture on page **440/19**.

C. Fitting the reverse shuttle

1. Fasten the thrust bearing with universal grease to its place on the gearbox input shaft front bearing cover. In connection with the 2-step quick-shift gear, fasten the impulse disc (on E-models only) and its support tube into the reverse shuttle housing (o-ring fix the impulse disc but universal grease can be used if necessary).

Note! Before fitting the reverse shuttle, ensure that the gear-box layshaft front end cover has been fitted in the correct way (otherwise it prevents the reverse shuttle layshaft from entering fully home).

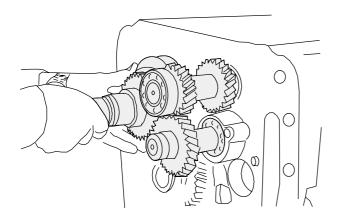


- 2. Fit the reverse shuttle shafts and the synchromesh unit onto the gearbox front side (see figure above).
- 3. Place the selector fork together with sliding pieces (sliding pieces can be fixed with universal grease on the fork during mounting) onto the sliding coupler and guide the selector fork rail through the hole on the gearbox front face. Fasten the fork to the rail with a locking pin. With effect from tractor ser. no. 661937 the selector fork and the sliding pieces have been modified. Fit the latest parts onto the reverse shuttle despite the condition of the earlier part. See also page 421/2.


Note! Fit the reverse shuttle input shaft roller bearing into its location on the housing. The foremost ball bearing is fitted after the housing is in place against the gearbox front side.

- 4. Make sure that the 4WD output shaft nut has been fully tightened and then unscrewed **one turn** (2-step quick-shift gear) or **one and a half turn** (Delta Powershift). Check that the lugs on the 4WD multi-disc clutch pack are accurately in line with each other.
- **5.** Apply sealing compound to the contact surface between the gearbox and the reverse shuttle housing.
- 6. Push the housing into place and turn the 4WD clutch so that the lugs on the discs engage with the grooves on the clutch drum.
- 6. Push the housing against the gearbox front side and screw four guide pins (M8, I=100 mm) into the holes for housing bolts.
- 7. Push the housing fully home (tap carefully with a copper bar, but do not use too much force). Remove the guide pins and tighten the reverse shuttle fixing bolts to **23 Nm**.

Note! Ensure that the impulse disc is correctly in place (E-models).

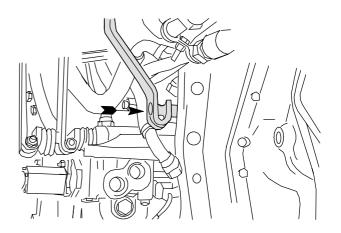

- 8. Fit the selector fork rail locking ball, spring and the plug. Push the selector lever inwards and check that it has engaged with the groove on the rail rear end.
- 9. Fit the input shaft ball bearing and its circlip. Fit the smaller circlip onto the shaft.

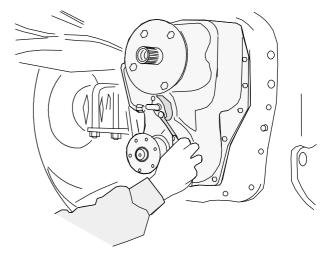

- 10. Tractors with 2-step quick-shift gear or without quick-shift gear: Screw the long bolt into place under the lubricating oil distributor piece and fit the distributor piece.
- 11. Connect the external pipes.
- 12. Attach the quick-shift gear to the reverse shuttle: 2-step quick-shift gear, see instr. **441 2 A**. 3-step quick-shift gear, see instr. **444 1A** points **19-26**.
- 13. Assemble the tractor frame (see instr. 441 2 B or 423 5A).


Note! On **AC IV** models, fit the gearbox speed sensor B2C onto the RH side of the shuttle housing, see page 351/3.

		Model	Code	Page
44. HiTech shuttle	1. 11. 1998	6250-8750	442	4

2. HiTech shuttle

A. Removing shuttle

- 1. Split the tractor frame between the gearbox and the fuel tank according to instr. **423 1A** (the rear part of the frame is pushed rearwards and cab is attached to the front frame).
- 2. Disconnect oil pipes from the DPS housing and the Shuttle front flange. Disconnet other parts, which prevent removing.

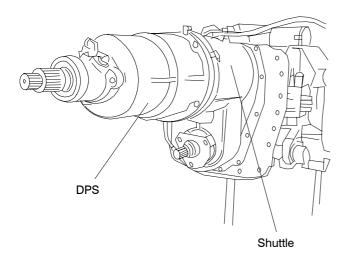


3. Unscrew the four DPS housing fixing bolts and pull out the housing. Take care of the housing large o-ring.


Note! The planetary carrier+rearmost clutch of the DPS remain on the Shuttle front face. Remove them now or just when the Shuttle has been removed.

Note! If the reparation work concerns only the frorward clutch of the shuttle, it is unnecessary to remove the DPS parts on the shuttle front face.

4. Unscrew two shuttle fixing bolts (M8, socket head). Bolts are placed in the recesses.

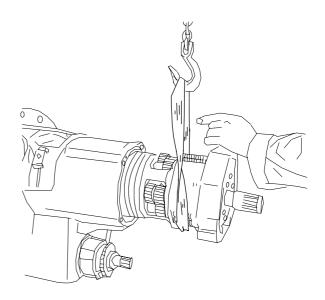

5. Wind a lifting rope round the shuttle flange, hold the shuttle in the horizontal position and pull it straight out of the housing along the shaft. Take care of the flange large o-ring.

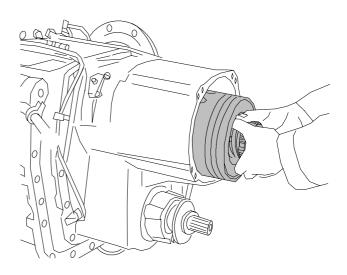


6. Take the shuttle rearmost clutch (F direction) out of the housing (it remains on the front end of the gearbox input shaft).

44. HiTech shuttle		Model 6250-8750	Code 442	Page 5
	1. 11. 1998	02500750	442	J

B. Fitting shuttle

Note! Before fitting the shuttle the DPS planetary carrier+rearmost clutch can be fastened onto the shuttle, or they can be fastened after the shuttle has been placed in the shuttle housing.


 Fit the shuttle large o – ring into its groove. It can be fastened temporarily with a little gearse. Fit the pump/PTO drive shaft.

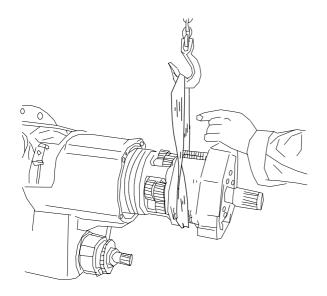

2. Wind a lifting rope round the shuttle flange. Position the shuttle horizontal on the shaft and push it straight into the housing so that the rearmost sun gear shaft is guided onto the gearbox input shaft.


Note! Blow, if needed, compressed air through the pressure pipe union into the shuttle foremost clutch so that the planetary carrier is locked and the rearmost sun gear shaft can be rotated with the shuttle input shaft, at which time the splines connect with the gearbox input shaft splines.

- 3. The final stage of the mounting must be done carefully so that the metallic sealing rings in the rear end of the shuttle are guided into the oil flange. Fit is accurate.
- 4. When the shuttle is in place, fasten it to the housing with two bolts (M8, socket head). Tightening torque is **23 Nm**.
- 5. Check, that the shuttle input shaft has an axial play of **0,2–0,6**.

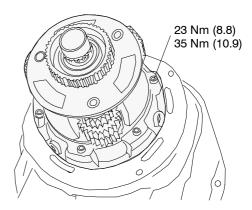

6. Fit the DPS ball bearing into the shuttle front face and fit the small spiral springs into the holes on the piston of the DPS rearmost clutch . Fasten the DPS planetary carrier+clutch pack onto the front face of the shuttle. Use locking fluid Loctite 243 on the bolt threads.

Note! Tightening order of the planetary carrier fixing bolts, see page **440/15**.

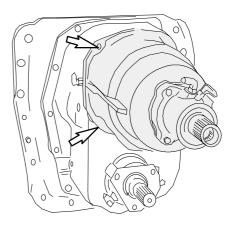

7. Place the DPS housing large o-ring into its groove. Fit the DPS housing. Tighten the bolts to **23 Nm**.


Note! Before fitting the DPS housing, push the foremost and middle sun gear shafts of the DPS into the clutch drum in the DPS housing. Concerning detailed instructions, see page **444/3**.

- 8. Reconnect all oil pipes to the shuttle and the DPS housing. Refit other removed parts.
- Assemble the tractor frame according to instr. 423 5A on page 423/17. Check the function of the shuttle and DPS. Check for leaks.


		Model	Code	Page
44. HiTech shuttle	1. 11. 1998	6250-8750	442	6

C. Reconditioning clutch for forward driving (rearmost clutch)

1. Split the tractor frame and remove the shuttle according to instr. A.

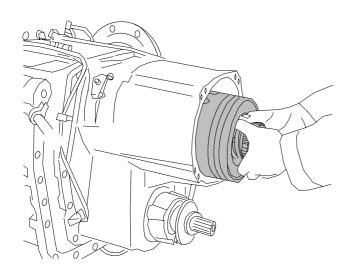


- 2. Take the rearmost clutch out of the housing.
- 3. Take care of the thrust bearing between the sun gears.

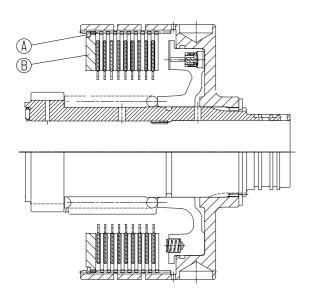


- 4. Compress the clutch disc pack and release the snap ring A and remove the support ring $\, B. \,$
- 5. Take the friction and steel discs and the spring rings out of the drum. Remove the small spiral springs in the piston housing.

Note! Dip the friction discs in oil before fitting and keep them in oil for a while. Change all small coil springs of the piston in connection with reparations.

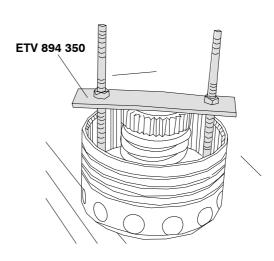

6. If you change the piston seals or the large spiral spring, screw ETV 894 350 into the threaded holes in the piston. Tighten the nuts of the ETV at which time the spring is shrunk (and the piston is pulled out of its location).

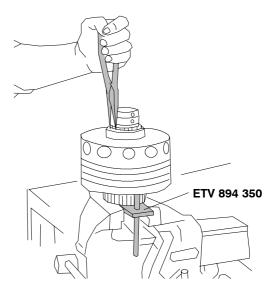


7. Remove the clutch drum snap ring.

6250-8750


Model

Code **442**


Page **7**

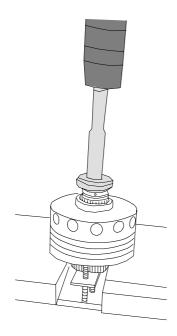

8. Remove the drum (press fit) by pressing it carefully with a hydraulic press.

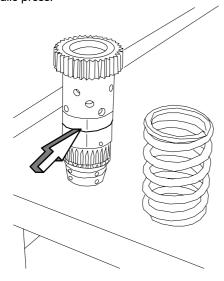


- 9. Unscrew ETV 894 350, at which time the piston loosens. Check/change the piston small o-ring round the sun gear shaft (arrow) and lubricate the o-ring with oil or grease.
- 10. Check that the large spring is OK. Ensure, that its length is within permissible dimensions.

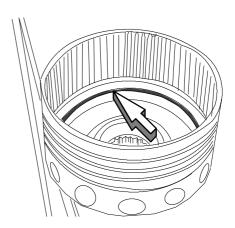

11. Change, if necessary, the piston large o-ring (arrow) and lubricate it with oil or grease.

Note! Check the function of the emptying valve. If the valve is disassembled, the valve circlip damages.

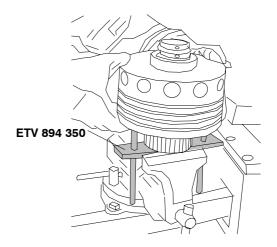


- 12. Place the large spring onto the sun gear shaft. Fit the piston and fasten ETV 894 350 and tighten it until the spring shrinks. Warm the drum a little (+80°C) and press it into place and fit the snap ring of the drum.
- 13. Remove ETV 894 350.


14. Position the small spiral springs into the borings in the piston.

Note! Change all small coil springs in connection with repair work. Dip all friction discs in oil a little while before fitting.

15. Fit by turns new friction and steel discs and the spring rings. A steel disc first against the piston springs and uppermost a friction disc (9 pcs steel discs and 9 pcs friction discs and 9 pcs spring rings). The spring rings are placed onto the outer circumference of the friction discs.

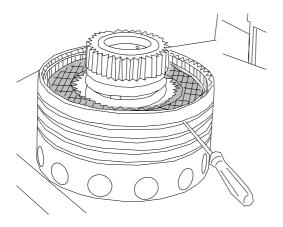


Note! Before fitting the two last friction discs and a steel disc, push for instance small screw drivers through holes on the side of the drum. Compress the disc pack and push the screw drivers so that they hold the discs pack compressed. Fit then the last three discs.

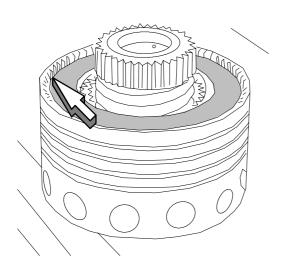

16. Place the support ring on the disc pack, press down the disc pack and fit the snap ring (arrow). Remove the screw drivers.

17. Check/change the metallic seal rings in the rear end of the sun gear shaft. Ensure, that the ring ends are locked together.

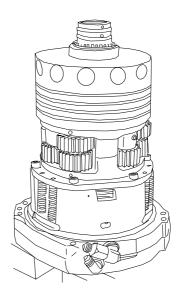

18. Place the F-direction clutch drum on the planetary carrier so that the sun gear is guided between the planetary gears.


Note! Ensure, that there is a thrust bearing between the sun gears.

19. Fit the shuttle into its housing and assemble the tractor according to instr. ${\bf B}.$


D. Reconditionig reverse drive clutch (foremost clutch)

Disassembling:


- 1. Split the tractor frame and remove the shuttle according to instr. **A**.
- 2. Remove the DPS planetary carrier+clutch pack on the front face of the shuttle. Take away small spiral springs in the borings of the DPS rearmost clutch piston.

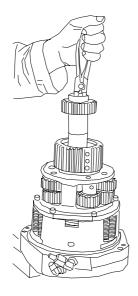


3. Remove the shuttle input shaft (foremost sun gear shaft). Take care of the shaft thrust bearing.

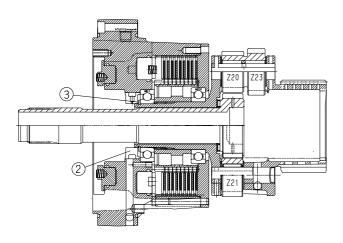

4. Remove the DPS planetary carrier rearmost ball bearing in front of the oil ring (2) (if not released earlier). Remove the oil ring (2) and the shuttle planetary carrier snap ring (3).

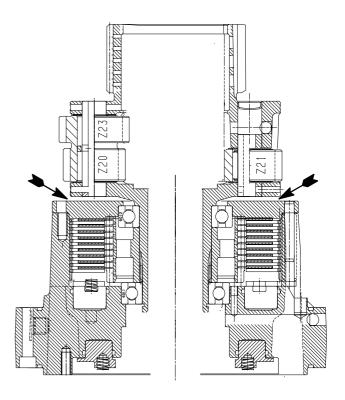



5. Lever with two fitting levers (arrows) and remove the planetary carrier of the shuttle.

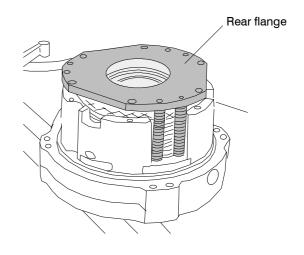


- 6. Unscrew the disc pack rear flange bolts after which the flange rises upwards with the aid of the springs. Remove the flange+springs+ball bearing.
- 7. Take the friction and steel discs and the spring rings out of the drum. Remove the disc pack hub.
- 8. Remove the support ring for the piston small spiral springs. Remove the springs. Remove the ball bearing.
- 9. If you change the piston seals, the piston can be forced out by blowing carefully compressed air through the pressure pipe union.

Model

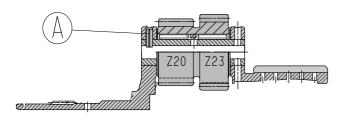


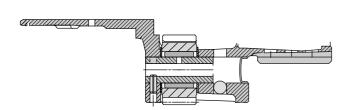

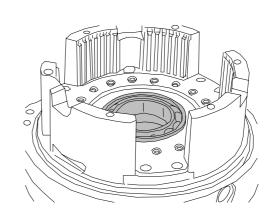

10. The planetary gears can be detached by tapping out the tension pin (A) and by pushing the gear axles to the left in the picture above. If you must change the planetary gears, change all three gears. New gears must be the same series according to the markings (e.g. A) on the gear teeth.

Assembling

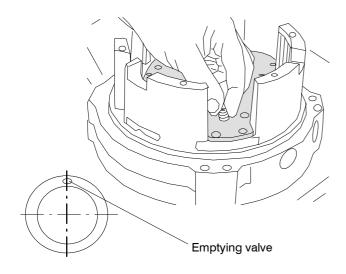


11. If you have removed the piston, push it down into its location. Place the spiral spring support plate onto the piston and fit the small spiral springs into their borings (picture).

Important! Position the piston into its location so that the emptying valve comes upwards (when the shuttle is fitted in tractor).

Note! Ensure, that a spring is not at the emptying valve (a spring can partly block a hole). Change all springs in connection with repair work.

The emptying valve of the R-clutch has been removed with effect from ser. no. **K41107** (AC 5.2, HiTech 2.0).

12. Fit the ball bearing (picture).

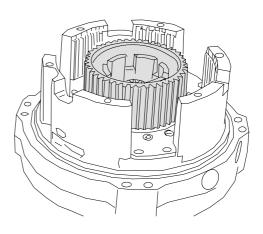


- 13. Fit the hub (picture). Dip the friction discs in oil a littlewhile before fitting.
- 14. Fit by turns new friction and steel discs and spring rings. A steel disc first against the piston springs and uppermost a friction disc (9 pcs steel discs, 9 pcs friction discs and 9 pcs spring rings). The spring rings are placed into the outer circumference of the friction discs.


Note! The discs and the spring rings are the same as in the clutch for the forward driving and a number of the discs is also the same.

Note! Dip all friction discs in oil before fitting.

442

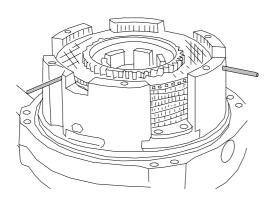


15. Before fitting the last steel disc, compress the disc pack and push $\,\varnothing\,3$ mm pins (e.g. drills) through the holes on the sides of the drum so that they hold the disc pack compressed.

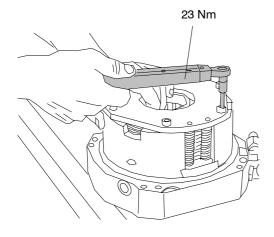


16. Fit the last discs and the spring rings. Place the rear flange together with the spiral springs and the ball bearing on the disc pack. Screw down the flange a little with two auxiliary bolts (M8x35) until the flange shoulder is a little below the edge of the drum. Remove the Ø 3 pins and tighten the flange bolts (M8x25) to a torque of **23 Nm**.


Note! When necessary, blow compressed air through the pressure pipe union into the clutch and check that the clutch is functioning correct. If everything is OK, the piston moves and presses the discs against the rear flange.

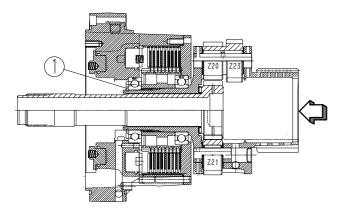


17. Press the planetary carrier into place and fit the snap ring (1). Fit the oil sleeve and the DPS ball bearing.

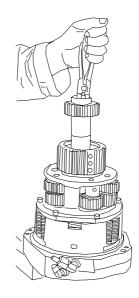


18. Turn the planet gears so that the markings on the teeth (e.g. A) point towards the centre of the sun gears. Fit then the shuttle input shaft together with its thrust bearing.

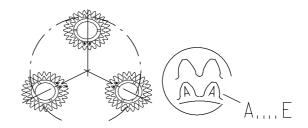

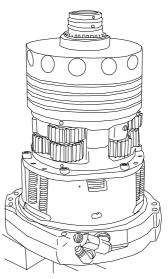

19. Place the rearmost clutch drum (F direction) on the planetary carrier so that the friction disc teeth engage with the splines on the hub. Ensure, that there is a thrust bearing between the sun gears.

 20. Fit the shuttle into the housing and reassemble the tractor according to instr. **B**.






	15. 6. 1992	Model	Code	Page	
443. 4WD clutch	15. 5. 1993	6000-8750	443	1	

Reconditioning 4WD clutch (Op. no. 443)

Note! In figures below an impulse disc can be seen which is only on E-models. Concerning tractors which have Delta Powershift, see page **443/3**.


A. Changing 4WD clutch discs/seals on tractors which have 2-step quick-shift gear

- Split the tractor between the gearbox-fuel tank (see instr. 441 1 A or instr. 423 1A).
- remove the quick-shift gear (see instr. 441 1 B)
- remove the reverse shuttle (see instr. 442 A)

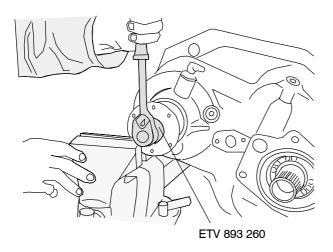


1. Fasten the 4WD output shaft flange to the vice. Unscrew the shaft nut with socket spanner $\,$ ETV 893 260.

Note! It is hard to open the nut because the cup springs press the nut.

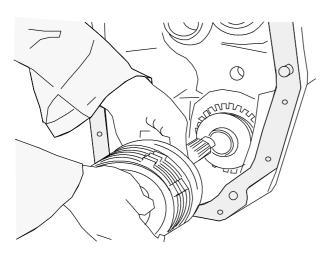

- 2. Remove the spacer ring, drive flange and o-ring. Tap at the shaft front end until it releases.
- 3. Remove the shaft front ball bearing from its location (remove first the oil seal, spacer ring and the circlip).

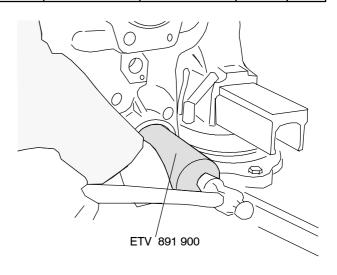


- 4. Fit a new bearing, circlip, spacer ring and oil seal into their locations (sleeve ETV 891 900 can be used). Grease the seal lips.
- 5. Detach the clutch cylinder and piston from the shaft by knocking the shaft front end against the table.

Note! The piston is a press fit.

6. Remove the pressure plate on the disc pack. Remove the friction and steel discs and fit new discs so that the steel disc lugs are in line with each other.


Note! The clutch discs are changed as a complete set. The friction disc has worn out, if the grooves on it have disappeared.

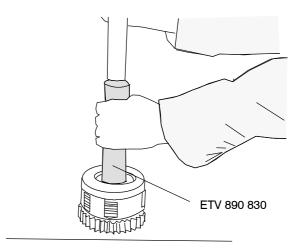

- 7. Fit the pressure plate onto the disc pack. Drive the piston onto the shaft with sleeve ETV 890 830.
- 8. Fit the cylinder onto the shaft. Before fitting it, check the piston and cylinder seals, and change them if necessary.

440 4000 - 1-4-1-	8. 11. 1990	Model	Code	Page
443. 4WD clutch	15. 5. 1993	6000-8750	443	2


- 9. Remove the cup springs and the impulse disc from the housing and pull out the oil sleeve.
- 10. Check the sealing rings on the oil sleeve and change them if necessary. Then fit the sleeve and the impulse disc.

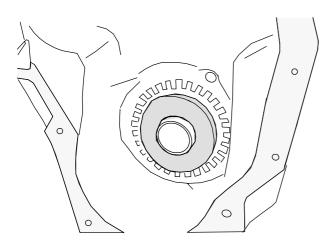

11. Fit the cup springs against the impulse disc.

Note! Fit the two foremost spring concave sides against each other and the rearmost spring concave side rearwards.

12. Knock the shaft/clutch assembly into the housing. Fit the o-ring, drive flange and the washer onto the shaft front end.

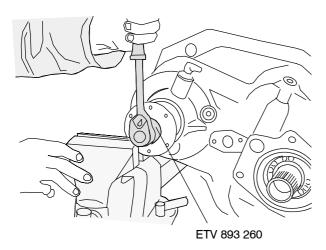


13. Tighten first the shaft nut with socket spanner ETV 893 260 fully home and umscrew the nut **one turn**. This sets the clutch clearance.

Note! Before tightening the nut, ensure that the clutch disc pack lugs are accurately in line with each other. It is useful to fit the clutch drum onto the disc pack when the nut is tightened.

- Fit the reverse shuttle (see instr. 442 C)
- Fit the 2-step quick-shift gear (see instr. 441 2 A)
- Assemble the tractor frame (see instr. 441 2 B or instr. 423
 A)

B. Reconditioning 4WD clutch on tractors with 3-step quick-shift gear (Delta Powershift)

Changing seals, see Op. D on the next page.

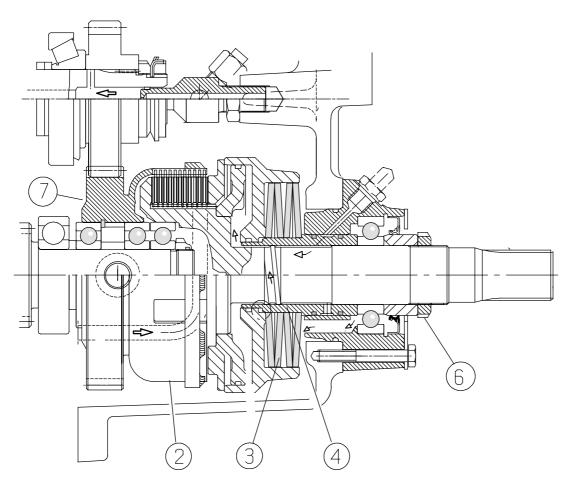


- 1. Split the tractor frame between gearbox fuel tank, see Op. 441 1A or 423 1A.
- 2. Remove the 3-step quick-shift gear from the reverse shuttle front face, see Op. 444 1A points 1-4.
- 3. Slacken the 4WD output shaft nut (6) using spanner ETV 894 170 before removing the reverse shuttle.
- 4. Detach the reverse shuttle from the gearbox front side according to instruction 442 A.
- 5. Unscrew the 4WD output shaft nut and tap at the shaft front end until the clutch/shaft loosen.
- 6. Remove the oil sleeve (4) from the shaft. Remove the cup springs (3) and the cylinder, piston and the pressure plate.
- 7. Change the clutch discs as a complete unit: 11 steel discs and 12 friction discs.
- 8. Assemble the clutch and change the piston seal if necessary. Push the oil sleeve into its place in the reverse shuttle housing and fit the cup springs according to the picture above.
- 9. Push the shaft/clutch into the housing through the ball bearing.

- 10. Remove the clutch drum/gear wheel on the front face of the gearbox and place the drum onto the clutch disc pack so that the steel disc lugs engage with the grooves on the drum.
- 11. Prevent the 4WD output shaft from rotating by placing a suitable block between the drum gear (7) and the wall of the reverse shuttle housing.
- 12. Tighten the shaft nut first fully home and then slacken it one and a half turn. The clutch pack has then a correct clearance.
- 13. Fit the clutch drum back to the gearbox front end.
- 13. Attach the reverse shuttle onto the gearbox front face, see Op. **442 C.**
- 14. Attach the 3-step quick-shift gear (Delta Powershift) onto the front face of the reverse shuttle, see Op. 444 1A points 19-26.
- 15. Assemble the tractor frame between gearbox-fueltank, see Op. 441 2B or 423 5A.

AAO AMD alistah	15. 5. 19 93	Model	Code	Page
443. 4WD clutch	1. 1. 1995	6000-8750	443	4

C. Changing 4WD output shaft seal on tractors which have 2-step quick-shift gear

1. Drain the oil from the gearbox.

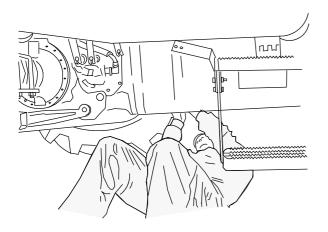


- 2. Remove the propeller shaft guard and disconnect the propeller shaft rear flange joint.
- 3. Open the output shaft nut (ETV893 260) and remove the spacer ring and the drive flange. Remove the old seal and fit a new one with sleeve ETV 891 900.
- 4. Fit the o-ring, drive flange, spacer ring and tighten the nut fully home and then unscrew one a turn.
- 4. Connect the propeller shaft flange joint (35 Nm), fit the guard plate and fill the gearbox with oil.

Note! The front end of the propelles shaft guard has been attached with the front axle attaching bolts. Tightening torque for these bolts is **380 Nm.**

D. Changing 4WD output shaft seals on tractors which have 3-step quick-shift gear (Delta Powershift)

The oil seal and seals of piston ring type can be changed as follows:

- 1. Remove the propeller shaft undershield. Disconnect the propeller shaft front end flange joint and pull the shaft forwards until its rear end releases from the splines on the 4WD output shaft.
- 2. Drain the oil in the gearbox (max. 50 litres).

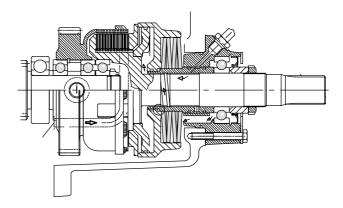

- 3. Unscrew the 4WD output shaft nut using spanner ETV 894 170. Remove the oil seal wear ring and its o-ring on the shaft. Disconnect the pressure oil pipe from the output shaft seal housing.
- 4. Unscrew the seal housing bolts and pull off the housing. Remove the oil sleeve on the shaft. On the sleeve there are fitted the seals of piston ring type.
- 5. Change damaged parts. Apply universal grease to the oil seal lips. Carefully push the oil sleeve into the sealing housing fully home against the ball bearing.
- 6. Carefully fit the sealing housing. Ensure that the o-ring is in place. Fit the protective plate and tighten the housing bolts.
- 7. Place the o-ring onto the shaft and then the wear ring. Tighten the shaft nut using ETV 894 170 first fully home and slacken it then **one and a half turn**.
- 8. Connect the 4WD clutch pressure oil pipe. Fit the propeller shaft and its undershield. Fill the transmission with oil.

Note! The propeller shaft undershield front end is fixed with the front axle attaching bolts. Tighten the bolts to **380 Nm.**

9. Test-run the tractor and make sure that the 4WD clutch functions and that there are no leaks.



	15. 4 . 19 95	Model	Code	Page
44. Delta Powershift	15. 5. 1996	6000-8750	444	1


3-step quick-shift gear, transmissions 300 and 460 (Op. no. 444)

1. Reconditioning Delta Powershift

A. Reconditioning planetary gear and its multi-disc clutch


Dismantling:

- Split the tractor between gearbox-fuel tank (see Op. 441 1A)
- 2. Disconnect the oil pipes from the gear housing.

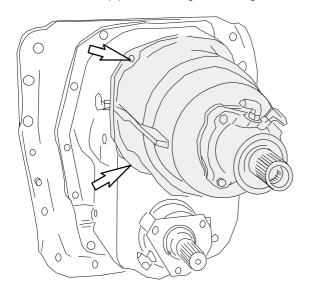


3. Unscrew four attaching bolts of the housing (see arrows) and carefully pull off the housing.

Note! The planetary gear and its multi-disc clutch remain on the front face of the reverse shuttle. Also the foremost and middle sun gear may remain inside the planet gears.

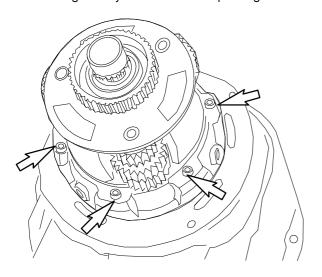

4. Unscrew the planetary carrier fixing bolts (see arrows) and remove the planetary gear. At the same time it is releasing the multi-disc clutch cup springs (2 pcs)


Note! If one of the planet gears prevents unscrewing of the carrier bolts, the planetary gear cannot be rotated but in this case, connect a hydraulic hand pump to the pipe connector on the reverse shuttle housing and pump up pressure into the clutch until the planetary gear can be rotated.

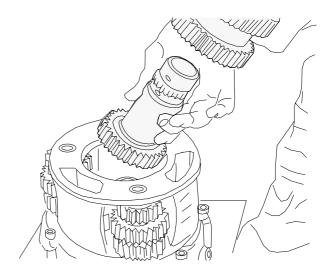

- 5. Remove the foremost and middle sun gears from the planetary gear, if they remained inside the planet gears.
- 6. Remove the planetary carrier rearmost ball bearing using two pinch bars. Remove the pressure plate on the clutch disc pack. Remove the discs and the hub.

Note! 8200 – 8400: From serial no 668103 incl, there are six springs between the ring piston and the pressure plate. Remove the springs as well, when you remove the pressure plate.


7. Remove the foremost ball bearing circlip. Pull out the planetary gear attaching flange together with the bearing.

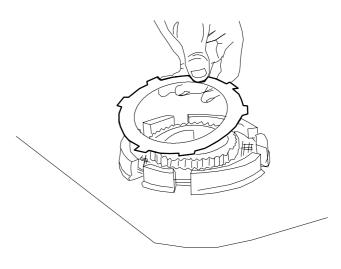

8. If the clutch discs are worn so much that the grooves on the friction discs have disappeared, change the complete disc pack at the same time.


		Model	Code	Page
44. Delta Powershift	15. 5. 1993	6000-8750	444	2

9. If the ring piston seals need to be changed, the piston can be forced out by using compressed air, but be very carefull.

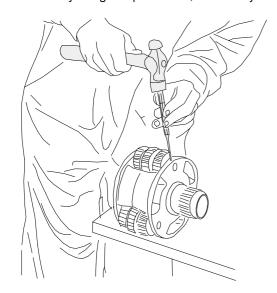


10. Knock the planet gear shaft tension pins into the shafts and remove the shafts at which time the planet gears and their needle bearings are releasing. Change damaged parts.

Assembling:

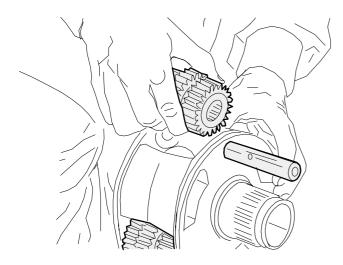

11. Fit the rearmost sun gear into its place (there is a spacer ring behind the sun gear). Fit first two planet gears together with the needle bearings and push their shafts into place.


12. Fit the tension pins so that the split sides come at the carrier groove and tap the pins a little deeper that the planetary carrier surface to facilitate free flow of lubricating oil.

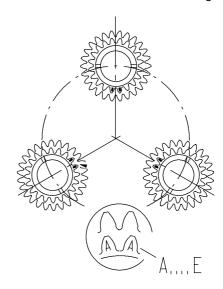

13. When the two planet gears have been fitted, place the rearmost sun gear so that the letter markings (A-E) on the planet gears point towards the sun gear midpoint. Then fit the third planet gear with the letter marking turned towards the sun gear midpoint.

Note! All three planet gears should have the same letter marking (either A, B,C, D or E).

14. Grease the piston seals and press the piston into its location, if removed.

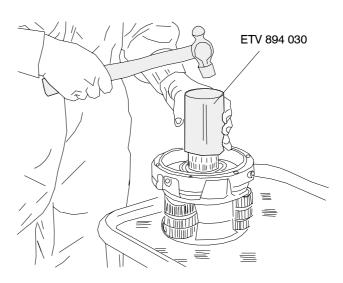

15. Fit the planetary gear foremost ball bearing into the attaching flange against the shoulder (use e.g. ETV 894 030). Place the attaching flange onto the planetary carrier and fit the ball bearing circlip.

44. Delta Powershift

1. 4. 1997 1. 10. 1999


Model **6000 -- 8750**

Code

3


Page

8750 444

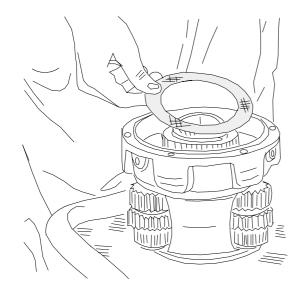


- 16. Place the clutch hub into the attaching flange and then fit alternately 5 steel discs and 4 friction discs in.
- 17. Position the pressure ring onto the disc pack so that the steel disc lugs fit inside the grooves on the ring. Also the loose locking pieces must engage with grooves on the pressure ring.

Important! 8200–8750: From ser. no. 668103 incl, the pressure plate has six drillings for the springs. Before fitting the pressure plate, fasten the spring in their drillings with a little grease, so that they are kept in place during fitting the pressure plate.

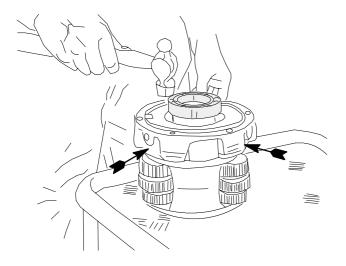

- 18. Fit the rearmost ball bearing against the hub (use ETV 894 030, if needed). Support e.g with two screwdrivers (at arrows) the planetary gear front clutch disc (uppermost disc in picture above), so that it does not drop.
- 19. Place the cup springs with concave sides against each other between the planetary gear and the reverse shuttle.
- 20. Lift the planetary gear into place and turn it so that the pressure oil bore together with its small o-ring comes at the pipe connector on the reverse shuttle housing.


NOTE! Rotate the planetary gear so that the planets do not prevent tightening of the planetary gear attaching bolts.

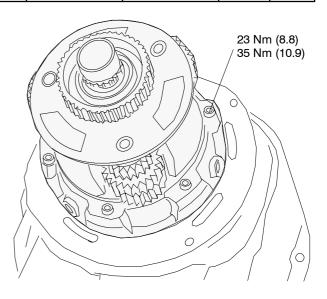

21. Raise the cup springs into place using a screwdriver and tighten the planetary gear attaching bolts progressively to a torque of **23 Nm** (8.8), **35 Nm** (10.9). Apply Loctite 243 to the threads of the bolts. Tightening order, see pages 440/15.

Note! Tighten the bolts in order so that when one bolt becomes stiff to turn, move to the adjacent bolt until the planetary gear attaching flange is tightly against its location on the reverse shuttle front face. Never use force.

- 22. After fitting, pump up pressure of **1,7–2,0 MPa** into the clutch through the pipe connector. If the clutch does not disengage, the clutch foremost steel disc can be wrongly positioned. In this case the clutch should be assembled anew. The connector has thread 9/16 JIC 37° . The reverse shuttle housing has thread $14 \times 1,5$ mm.
- 23. Place the foremost and middle sun gear into the clutch drum inside the gear housing fully home.

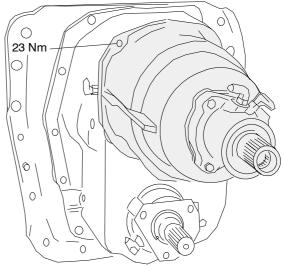


- 24. Grease the large o-ring of the housing and place the o-ring into its groove. Push the housing into place and tighten its four attaching bolts to 23 Nm.
- 25. Connect the pressure oil pipes to the gear housing. Assemble the tractor frame according to instr. **441 2B**.
- 26. Let the engine run for a while with the clutch pedal depressed for proper lubrication. Test-run the tractor and ensure that the quick-shift gear functions correctly.

Model

B. Reconditioning multi-disc clutches for reduction ratio and overdrive


Dismantling:

- 1. Split the tractor between gearbox-fuel tank (see Op. 441 1A)
- 2. Disconnect the oil pipes from the gear housing.

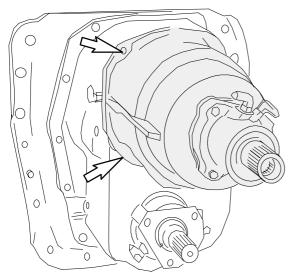


3. Unscrew four attaching bolts of the housing (see arrows) and carefully pull off the housing.


Note! The planetary gear and its multi-disc clutch remain on the front face of the reverse shuttle. Also the foremost and middle sun gear may remain inside the planet gears.

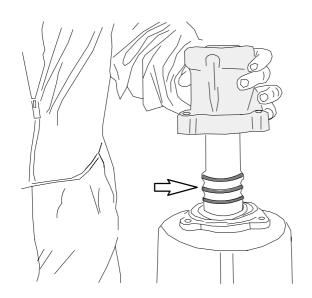


4. Unscrew three fixing bolts of the seal housing and remove the housing. Remove the oil seals of piston ring type on the shaft (3 pcs, see arrow).

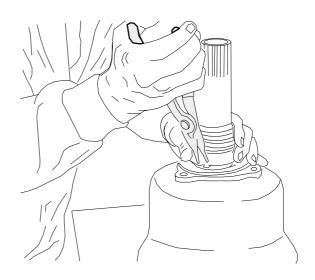

5. Remove the front ball bearing circlip. Tap at the shaft front end until the shaft/clutch drum releases.

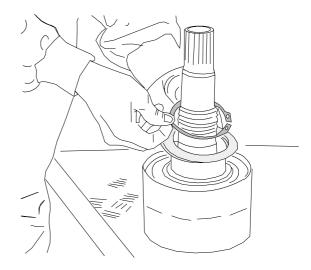

6. Remove the circlip and cup springs of the piston for the rearmost multi-disc clutch.

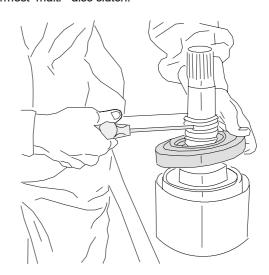

7. Remove the large circlip of the piston. Remove the piston carefully using compressed air through the pressure oil hole. Check and change, if necessary, the piston sealing rings.

6000-8750


Code

444

Page **5**



8. Push the clutch drum inside the casing and remove the circlip which has bevelled ends. Take the drum out of the casing. Remove the rearmost disc pack.

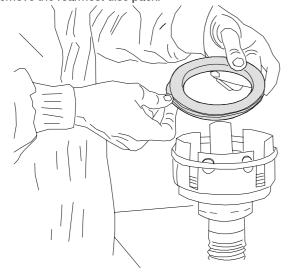

9. Remove the piano wire under the locking ring of the intermediate ring between the disc packs. Then squeeze the locking ring and remove the intermediate ring.

Remove the foremost clutch discs and its hub.




10. Remove the circlip of the foremost clutch piston at which time the cup springs release. Remove the piston carefully e.g. with compressed air through the oil port.

Note! If You must change the clutch drum (press fit), remove it from the shaft e.g. with a hydraulic press and a sleeve. When fitting the drum, warm it and press it onto the shaft against the circlip.

Assembling:

11. Ensure that the clutch drum is fully home against the circlip. Tap or press the drum into place, if needed.

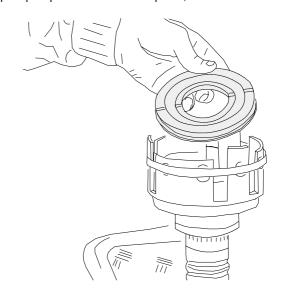

12. Grease the sealing rings of the foremost clutch piston and press the piston into its location so that the grooves on the piston come upwards.

44. Delta Powershift


Model 15. 5. 1993 600

6000-8750


Code

444


Page 6

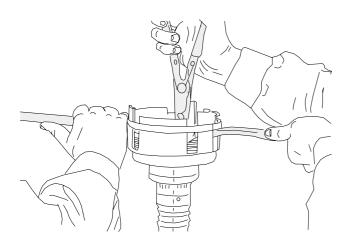

- 13. Fit six cup springs with concave sides against each other on the piston. Open the circlip with pliers and press with two pinch bars the circlip into its groove according to picture above.
- 14. Place the foremost clutch hub on the cup springs so that the internal splines on the hub come upwards.
- 15. Fit the foremost clutch steel and friction discs (6 steel discs and 5 friction disc). If the friction discs are worn out, change the complete disc pack at the same time.
- 16. Fit the intermediate ring between the two multi-disc clutches. Make sure that the locking ring is located in its groove on the drum.
- 17. Push piano wire (thickness ø1 mm and length about 450 mm) under the intermediate ring locking ring. Bend the wire ends outwards about 5 mm so that the wire cannot rotate.

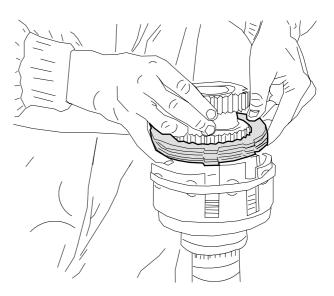


18. Fit the rearmost clutch pack (6 steel discs and 5 friction discs). Position the clutch hub together with the sun gear inside the discs.

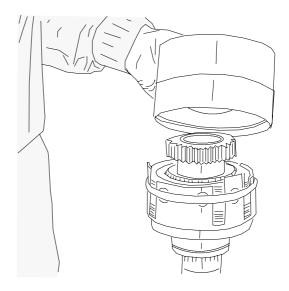


19. Place the clutch casing on the drum and fit the circlip which has bevelled ends.

Note! When You turn the drum upside down, support the rearmost clutch hub so that it does not disengage from the disc pack.

		Model	Code	Page
44. Delta Powershift	15. 5. 1993	6000-8750	444	7

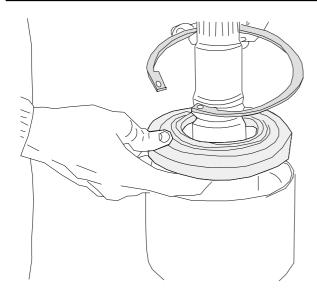

20. Grease the sealing rings of the rearmost clutch piston and press the piston into the casing. Fit the large circlip of the piston.

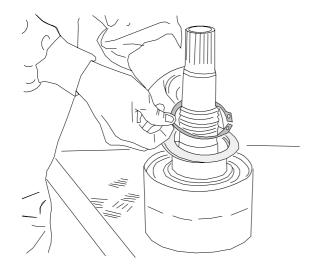


21. Fit four cup springs with concave sides against each other upon the piston. Fit the piston circlip with a sleeve and a heavy drift. The circlip can also be pressed into its groove between jaws of a vice.

Note! Do not damage the seal ring grooves on the shaft when fitting the piston. The function of the multi-disc clutches can be tested e.g. with compressed air.

22. Fit the shaft together with the clutch drum onto the planetary gear so that the foremost and middle sun gears are inside the planet gears and the sun gear front ends are engaged in the clutch discs. Remove the foremost ball bearing at the gear housing front end.

- 23. Fit and grease the gear housing large o-ring. Push the housing into place until it touches the reverse shuttle front face. Tighten the four fixing bolts to a torque of $23 \ Nm$.
- 24. Fit the housing foremost ball bearing. Fit the bearing circlip. Place the seal rings of piston ring type into their grooves on the shaft. Ensure that the seal ring ends have been correctly engaged.
- 25. If you change the oil seal in the sealing housing, remove the damaged oil seal. Grease the lips of the new seal and fit the seal using plate ETV 893 720.

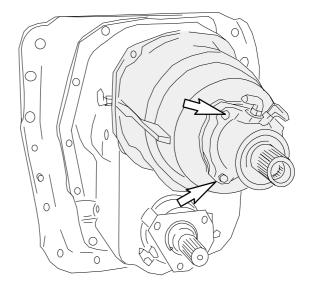

- 26. Fit the sealing housing at the front end of the gear casing. Grease its o-ring and tighten three attaching bolts (see arrows) to a torque of **23 Nm**.
- 27. Connect the oil pipes to the gear housing. Assemble the tractor frame according to instruction **441 2B**.
- 28. Let the engine run for a while with the clutch pedal depressed for proper lubrication. Test—run the tractor and ensure that the Delta Powershift functions correctly.

		Model	Code	Page
44. Delta Powershift	15. 5. 1993	6000-8750	444	8

2. Needle bearings

The mounting depth of both needle bearings inside the gear housing is **0,5 mm** measured from the end face. This ensures free flow of lubricating oil. The needle bearing in the sealing housing is fitted against the bottom of its location.

3. Changing oil seals of Delta Powershift

A. Changing oil seals of piston ring type

- Split the tractor between gearbox-fuel tank, see Op. 441
 A.
- 2. Diconnect the pressure oil pipes from the gear casing.
- 3. Unscrew the three fixing bolts of the sealing housing at the front end of the gear casing and pull out the housing.

Note! Check that sealing ring grooves on the shaft and the hole in the sealing housing are in perfect condition. Do not damage the seal ring grooves during repair work since it can cause seal ring damages.

- 4. Change three seal rings of piston ring type. When fitting new rings, make sure that the ring end lockings engage correctly.
- 5. Grease and fit the seal housing o ring. Fit the seal housing and tighten the three bolts to a torque of **23 Nm**.
- 6. Connect the oil pipes to the gear housing. Assemble the tractor frame according to instruction **441 2B**.

B. Changing front oil seal of gear housing


- 1. Split the tractor frame between gearbox fuel tank, see Op. **441 1A**.
- 2. Remove the damaged oil seal and fit a new seal with a suitable sleeve. If you detach the seal housing, the oil seal can be fitted with plate ETV 893 720.

Note! Do not damage the seal on the input shaft splines. Apply grease to the lips of the new seal.

3. Assemble the tractor frame according to instr. 441 2B.

C. Changing oil seal and needle bearing inside the input shaft front end

1. Split the tractor frame between gearbox-fuel tank, see Op. **441 1A**.

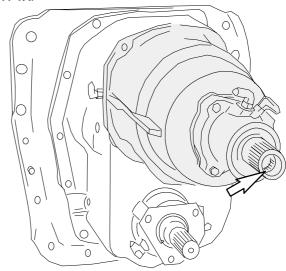


- 2. Remove the guide ring in front of the seal. Use e.g. an impact puller.
- 3. Remove the damaged oil seal inside the input shaft front end. Check/grease the needle bearing behind the oil seal.
- 4. Fit a new oil seal (and needle bearing if changed). The parts can be fitted with tool ETV 892 180.

Note! Fit the needle bearing and the seal deep enough so that the guide ring can be fitted with its front face level with the input shaft front face.

- 5. Grease the seal lips. Apply Loctite 601 to the guide ring surface and fit the ring in front of the seal.
- 8. Assemble the tractor frame according to instr. 441 2B.

		Model	Code	Page
44. Delta power shift	15. 5. 1996	8050-8750	444	9

4. DPS in transmission 650

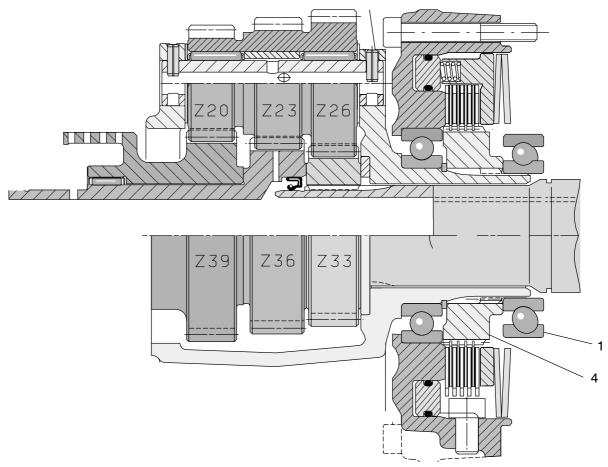


A. Changing the planet gears and reconditioning planetary gear multi-disc clutch C3

1. Remove the DPS housing and the planetary gear on the front surface of the reverse shuttle and remove bearing (1), hub (4) and the cup springs and remove the disc pack, see instr. A paragraphs 1-6 on page 444/1.

Note! The steel discs in this clutch (C3) are different compared with the steel discs in clutches C1 and C2. The friction discs, however, are the same as in other clutches.

- 2. Reconditioning the multi-disc clutch C3 is done in the same way as on transmissions 300 and 460.
- 3. Changing planet gears, see instr. A points 10-13 on page 444/2.
- 3. Assembling the planetary gear and fitting the gear and the DPS housing onto the shuttle front face, see instr. 444 1A points 19-26 on page 444/3.

44 Dalla mannay alaiff	15. 8. 1996	Model	Code	Page
44. Delta power shift	1. 4. 1997	8050-8750	444	10

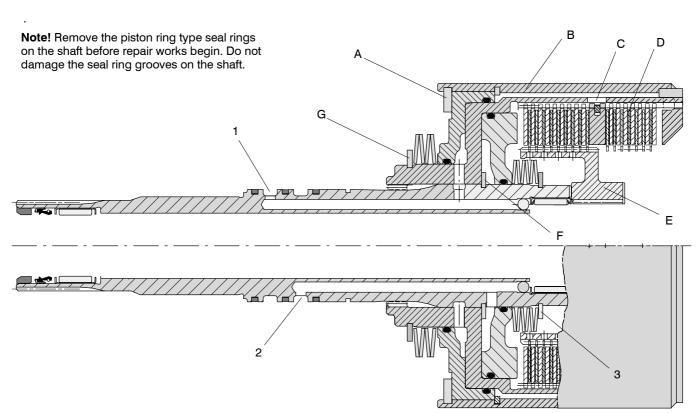

B. Changing friction discs in the clutch drum

- 1. Remove the DPS housing/clutch drum from the reverse shuttle front face, see instr. B paragraphs 1-3 on page 444/4.
- 2. Remove the sealing housing at the front end of the DPS housing. Remove the front bearing circlip and tap out the shaft/clutch drum of the housing, see instr. B paragraphs 4–5 on page 444/4.
- 3. Remove the large circlip (A), and remove the outer housing B by pulling it to the right (in picture above).
- 4. Remove the intermediate disc pack D (7 pcs friction discs and 7 intermediate discs). Squeeze the securing ring between the clutches through holes in the clutch drum C and remove the securing ring and the support ring.

Note! On the latest DPS gears (F32509-), there is a piano wire under the securing ring.

- 5. Remove the front disc pack (9 pcs friction discs and 9 intermediate discs). Ensure that the clutch drum is fully home against the circlip F. Knock or press the drum if necessary.
- 6. When assembling the front disc pack, place first against the piston an intermediate disc and then by turns friction and intermediate disc. Fit the support ring and its securing ring and place the hub E into place.
- 7. Assemble the intermediate disc pack (fit against the support ring a friction disc and then by turns intermediate disc and friction disc). Fit the outer jacket B and secure it with circlip A. Fit the disc pack D hub (+front sun gear) and the middle sun gear shaft.

8. Assemble the DPS together with its housing to the reverse shuttle front face and assemble the tractor frame, see paragraphs 21-27 on page 444/7.

C. Changing piston seals of the clutches

Intermediate clutch:

- 1. Carry out procedures according to paragraphs 1-3 in previous instr. B.
- 2. Remove circlip G and cup springs and blow carefully compressed air into hole 1, until the piston of clutch D comes out. Change piston seals.
- 3. Carry out procedures according to paragraphs 20-27 on page 444/7.

Front clutch

- 1. Remove both disc packs according to paragraphs 1-5 in previous instruction B.
- 2. Release circlip 3, and remove cup springs. Remove the piston by carefully blowing compressed air through hole 2.
- 3. Change the piston seals.
- 4. Assemble the disc packs and the clutch drum and fit the DPS gear onto the tractor, see instr. B paragraphs 6–8.



	1.8-2600	Model	Code	Page	
45. Final drives	1. 9. 2002	6000-8950	450	1	

Contents


General (Op. no. 450): Technical data Special tools Final drive, description 1. Reconditioning final drives (Op. no. 451) A. Removing final drives B. Changing needle bearings in planetary gears C. Changing bearings and seals for outer drive shafts D. Adjusting outer drive shaft bearing clearance E. Fitting final drives	2 3 1 1 2 3
Technical data	
Gear ratio, planetary gears: - final drives 300 - final drives 450/650 - final drives 700 Rear axle flange distance	i=6,86 i=8,57
Tightening torque Drive axle housing – brake housing: – M12, 8.8 (6000 – 6400, 6900 – 8000) (final gears 300) – M12, 10.9 (6200 – 8950) (final gears 450/650/700) Rear wheel nuts Cab rear attaching bolts	125 Nm 550 Nm
Settings	
Drive shaft bearing clearance is adjusted by tightening the centre screw to Distance between brake housing surface—inner drive shaft end: — final gears 300	157,50-159,15 mm
Oil (The transmission and hydraulic systems use the same oil and same oil reservoir) – oil quality and volume	see page 130/4

	1 20000	Model	Code	Page
45. Final drives	1. 9. 2002	6000-8950	450	2

Special tools

Part. no.	Description
ETV 890 220	Universal handle
ETV 892 260	6600-8950; Plate for fitting outer drive shaft inner bearing race
ETV 893 690	6600-8950; Plate for fitting outer drive shaft inner oil seal
ETV 893 310	6000-6400 y 8000; Plate for fitting outer drive shaft inner oil seal
ETV 893 320	6000-6400 y 8000; Plate for fitting outer drive shaft bearing race
ETV 894 470	6200 – 8950: Tool to fit the cassette seal (rear axle housing with greater oil volume)
ETV 894 480	6200 – 8950: Quide sleeve to assemble the final gears (rear axle housing with greater oil volume)
ETV 894 490	6200 – 8950: Quide pipe to assemble the final gears (rear axle housing with greater oil volume)
ETV 894 550	8350 – 8950Hi: Tool to fit the cassette seal in final drives 700
ETV 894 560	8350-8950Hi: Quide sleeve to assemble the final drives 700
Locally prepared to	ools

ET 893 410 Support for removing outer drive shaft bearing race

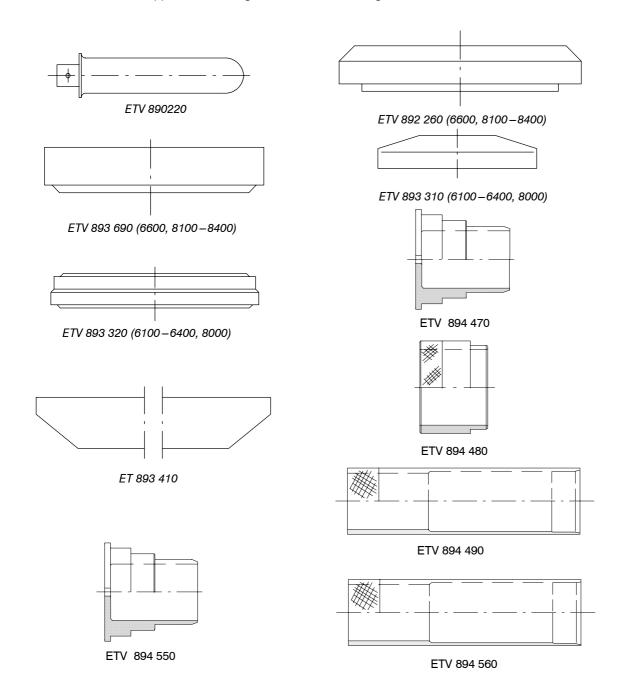

Final drives, description

The final drives are of the planetary gear type working in conjunction with hydraulically controlled multi-disc brakes which run in oil. Final drives have been attached to the brake housings with 14 bolts. Construction is the same on models 6100-6400, 8000 (transmission 300). On models 6600, 8100-8400 the planetary gears are of a sturdier construction and a slightly gear ratio, and the brakes have a greater number of discs. Wheel attaching flanges are identical on all models.

The power is transmitted from the differential, via the inner drive shaft, to the planetary gears, and then though the outer drive shafts to the rear wheels. Planetary gear ratio; 1=5,2 (models 6100-6400, 8000) or i=6,86 (models 6600, 8100-8400).

In the final drives on tractors 6100 – 6400 the external splines of the ring gear has a tight press fit in the rear axle housing. On tractors 6600 – 8400 (not 8000) the ring gear is fitted between the rear axle housing and the brake housing and is easy to remove.

The planetary sun gear is machined integral with the inner drive shaft. When the inner shaft rotates, it drives the planetary gears and the planetary gear retainer, which is connected to the outer drive shaft, through splines.

The outer drive shaft is journalled in the drive axle housing in taper roller bearings. The planetary gears are carried in needle bearings on the shaft studs which are fixed to the planetary retainer. On top of the rear axle housing there is a grease nipple for greasing the outer bearing of the outer drive shaft.

The final drives have not a separate oil space but they have common oil with transmission and hydraulic system.

On models 6600E and 8100E there is an impulse disc on the RH side planetary retainer and the rear wheel rotation speed sensor is fitted on the RH side rear axle housing.

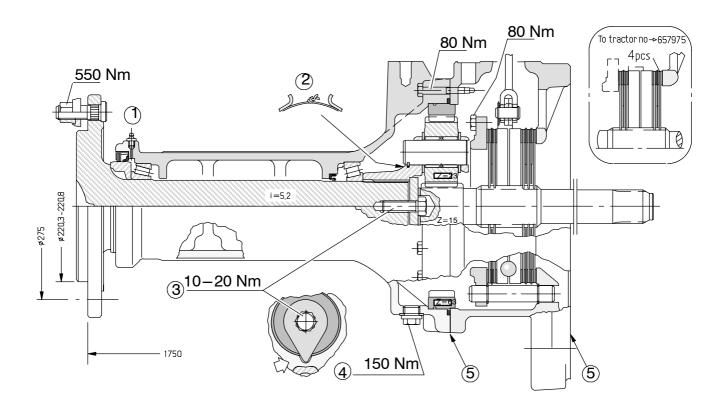


Figure 1. Final drives 300, tractors 6000 – 6400 and 8000 (-K41105)

- 1. Grease nipple (grease bearing at intervals of 1000 running hours)
- 2. Wind the wire ends one to one and a half turns and bend them
- 3. Bearing clearance is adjusted by tightening the centre bolt to 10-20 Nm. Apply Loctite 270 onto bolt threads.
- 4. Draining plug
- 5. Sealing compound Hylosil


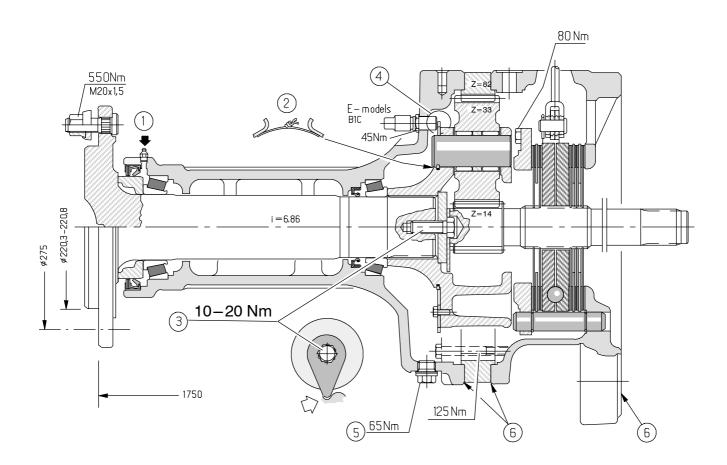


Figure 2. Final drives 450, tractors 6600 – 8750 (-J02315)


- 1. Grease nipple (grease bearing at intervals of 1000 running hours)
- 2. Wind the wire ends one to one and a half turns and bend them
- 3. Bearing clearance is adjusted by tightening the centre bolt to 10-20 Nm. Apply Loctite 270 onto bolt threads.
- 4. Speed sensor and impulse disc (only E-models)
- 5. Draining plug
- 6. Sealing compound Hylosil

	15. 5. 19 96	Model	Code	Page
45. Final drives	1. 8. 2000	6000-8750	450	5

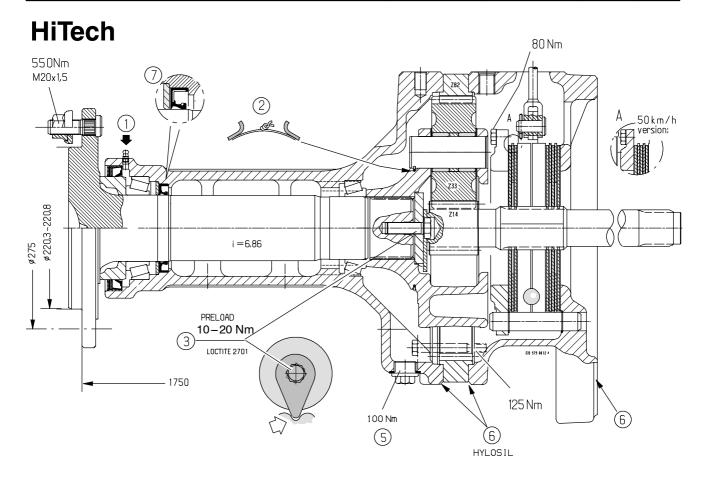

Picture 4. Final drives 650 on 6250Hi –8950Hi (-K36111) and 6600 –8750 (J02316 – K36111).

- 1. Grease nipple (greasing at every 1000 running hours)
- 2. Wind the wire ends one to one and a half turns and bend them
- 3. Bearing clearance is adjusted by tightening the centre bolt to 10-30 Nm. Apply Loctite 270 onto bolt threads.
- 5. Draining plug
- 6. Sealing compound Hylosil
- 7. Plastic ring in front of outer oil seal *)
- *) In order to increase the oil volume (cooling advantage), the inner seal has been moved outwards. Axle housing, hub shaft and the oil seal have different spare part numbers. The plastic ring is a new part.

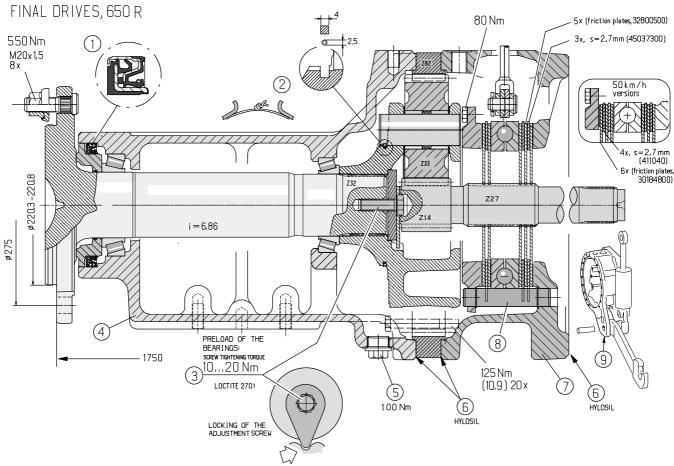

Picture 5. Final drives 650 with greater oil volume in transmission 550/650 (6200 - 8950).

These final drives in 6200-8950 tractors:

- 6200-6400, **K41106-**.
- 6250Hi-8950Hi and 6800-8550, **K36108-,** *).
- 1. Hub axle outer oil seal has been changed into a cassette seal (inner oil seal and grease nipple removed)
- 2. Wind the wire ends one to one and a half turns and bend them
- 3. Bearing clearance is adjusted by tightening the centre bolt to 10-20 Nm. Apply Loctite 270 onto bolt threads.
- 4. Axle housing oil volume has been increased.
- 5. Oil draining plug
- 6. Sealing compound Hylosil RTV Grade A (UK 0067) onto the ring gear sides
- 7. Brake housing
- 8. Support bolt
- 9. Lower link attachment


Larger oil volume in transmission:

Dipstick min. mark 45 I

Max. mark 55 I

Extra max. mark 65 I

*) Also K26616, K26440, K25332, K25414, K23241, K23423, K23538, K34139, K34211, K34311, K34443, K34511, K35307.

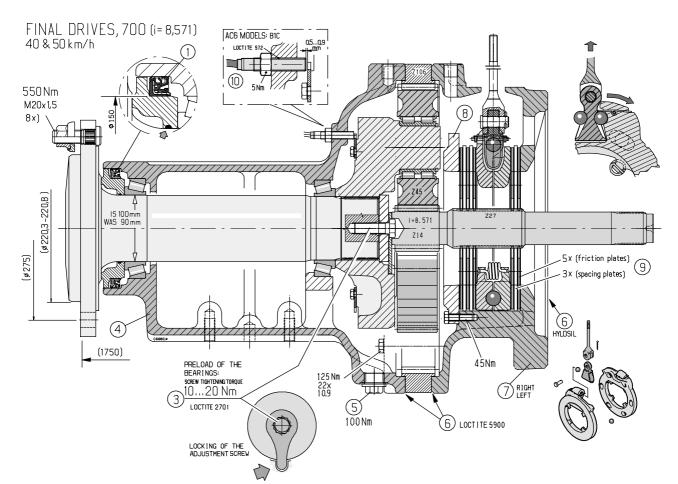

Picture 6. Final drives 700.

This final drive is fitted on 8350-8950Hi from chassis number L32106 incl.

- Flange distance 1750 mm

This final drive is totally new (gear ratio has been changed). The drive shaft diameter has been increased 10 mm.

Planet gears (2) are supported with taper roller bearings.

- 1. Cassette seal is 10 mm greater than in final gears 650. Between wear ring and drive shaft there is an o-ring.
- 2. Planet gear
- 3. Adjusting drive shaft bearing pre-load:

Place the drive shaft with the wheel flange on the floor. Bed in the bearings by rotating the axle housing 20–30 turn. Tighten the centre screw to a torque of **10–20 km**. Again rotate the axle housing and check the torque.

Note! After some time of operation the correct bearing clearance will be established.

Turn the lock washer for the centre screw so that the notch on the washer locates in the recess in the planetary retainer. Apply Loctite 2701 onto the threads of locking bolt.

- Axle housing.
- Oil draining plug.

Change of transmission oil and cleaning of suction strainer at every 1000 running hours.

Code

450

Page

8

- 6. Apply sealing compound Hylosil RTV Grade A (UK 0067).
- 7. Brake housing (left and right housings are different).
- 8. Support brake.

Brake pin has been removed (lugs on the intermediate discs keep the brake parts in place).

- 9. Brake discs pack is new.
- friction discs 9,5" (243 mm) x 7" (178 mm), 5 pcs.
- intermediate discs (s= 5mm), 3 pcs.
- 10. Rotation speed sensor for rear axle.



		Model	Code	Page	
45. Final drives	8. 11. 1990	6000-8750	451	1	

1. Reconditioning final drives (Op no 451)


Note! Both final gear types appear in the illustrations.

A. Removing final drives


Note! The brake housing is not removed from the tractor. E-models have a rotation speed sensor on the RH side final drive.

- 1. Drain the transmission oil (22 mm, 3 plugs). Disconnect the check links from the rear axle housings.
- 2. Slacken the rear wheel nuts. Raise the rear wheel and remove it. Block up the tractor with an axle stand placed under the front edge of the brake housing.
- 3. Unscrew the cab rear attaching bolts. Disconnect the PTO control cable, pick—up hitch release control and the joint at the lower end of the lewelling screw control rod. Remove all engine hood plates.
- 4. Raise the cab rear end about 6 cm and support it.

Note! The lifting rope can be attached to the lewelling screw control rod support on the cab rear wall. Do not damage the rear window.

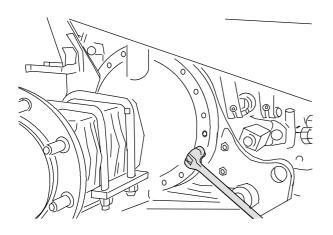


5. Connect a suitable hoist to the rear axle housing. Unscrew the final drive attaching bolts.

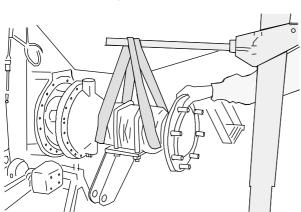


6. Pull the housing straight outwards so that it clears the brake housing.

B. Changing needle bearings in planetary gears

 Remove the lock washer from the centre screw securing the outer drive shaft to the planetary gear and unscrew the screw.
 The attaching plate remains inside the planetary retainer.

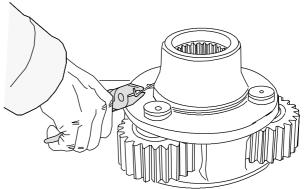


- 2. Pull the planetary gear off the drive shaft. Cut the locking wire under the locking spring for the planetary gear shaft studs. Remove the locking wire.
- 3. Compress the locking spring with a pair of pliers and pull the shaft studs out of the planetary retainer.

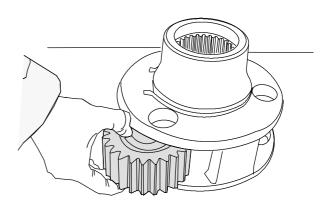

4. Remove the planetary gears from the retainer. Push at the wear washers in order to prevent the 2x25 needles in each bearing from falling out. Change the needles. When assembling, fix the needles in position with a little grease.

Note! Note the spacers between the two rows of needles.


45. Final drives | Model | Code | Page | 6000-8750 | 451 | 2

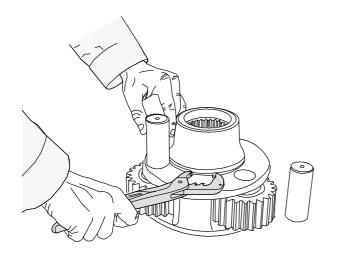

5. Press the bearing wear washers against the sides of the planetary gears and press them into the retainer. Compress the locking spring and push the shaft studs into position and make sure the locking spring engages the groove in the studs.

Note! Fit the attaching plate for the planetary gears retainer before fitting the third planetary gear.


- 6. Push in 1,5 mm wire under the locking spring when the planetary shaft studs have been fitted and wind the wire ends one to one and a half turns and bend them.
- 7. a) Models 6100–6400 and 8000: the ring gear is fitted with a tight press fit in the rear axle housing. Remove or fitting the gear should be done using sturdy hydraulic pressing tools.
- 7. b) Models 6600, 8100 and 8400: the ring gear can be loosened with a drift. Before fitting the ring gear apply sealing compound on the sides of the ring gear.

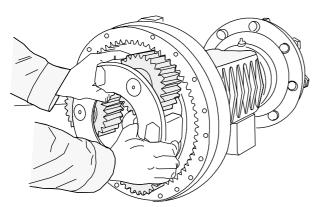


- 8. Push the planetary gear onto the splines on the outer drive shaft. Secure the planetary gear by tightening the centre screw (24 mm).
- 9. Adjust the bearing clearance of the outer drive shaft (paragraph D) and fit the assembly to the tractor (paragraph E).

C. Changing bearings and seals for outer drive shaft

1. Remove the final drives (instr. A) and detach the planetary gear (instr. B: 1-2).

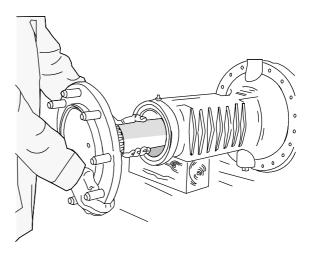


2. Tap at the end of the drive shaft so that it slides out of the bearings. Pull the shaft out of the axle housing.

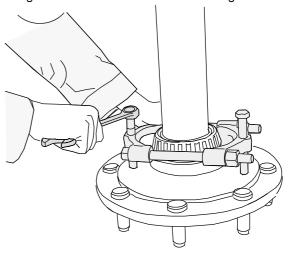

3. Remove the outer drive shaft bearing using a puller. Warm up a new bearing and fit it onto the shaft fully home.

Note! If the wear ring on the shaft has damaged, change it before fitting the bearing.

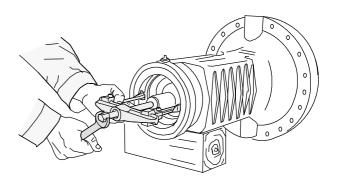

4. Remove the outer seal for the shaft using a puller (fit a suitable counter hold inside the rear axle housing).

45. Final drives


1. 17. 1998 1. 9. 2002

Model **6000-8950**

Code Page


451

3

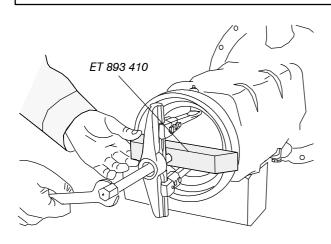


- 5. Position counter hold ET 893 410 against the rear axle housing and pull out the outer bearing race.
- 6. Final gears 650, 6250Hi –8950Hi (-K36111) and 6600 –8750 (J02316 K36111): Remove the plastic ring in front of the inner seal. Lever out the seal, if damaged. Grease lips of a new seal and fit it. Fit the plastic ring in front of the seal.
- 7. Fit the race of the outer bearing (6000-6400, 6900-8000: ETV 893 320 and universal handle ETV 890 220). Tap it fully home
- 8. Final gears 300 and 650: Lubricate the outer oil seal and fit it. Use a sturdy plate for fitting. Final gears 650 R and 700: Fit the outer cassette seal of the drive shaft to the axle housing using plate: 650 R, ETV 894 470 and 700, ETV 894 550).

9. Remove the inner bearing race using a puller and support ET 893 410. Fit a new bearing race using plate ETV 893 320 6000 – 6400, 6900 – 8000 or ETV 892 260 (6600 – 8750).

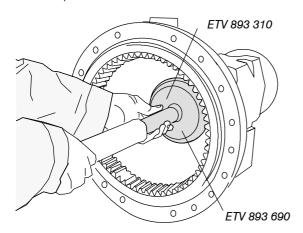

10. **Final gears 300 and 450:** Change the inner oil seal of the outer drive shaft. Fit a new seal with plate ETV 893 310 **6000 – 6400, 6900 – 8000** (–K41105) or ETV 893 690 **6600 – 8750** (–J02315).

NOTE! Recommend use the followings ETV – tools to assemble the final drives

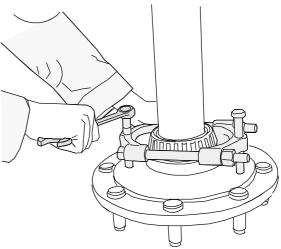

11. Put the drive shaft upright with the wheel flange on the floor. Grease the bearings and seals before fitting them.


Final gears 650 and 700: Place the guide pipe on the drive shaft. (650: ETV 894 490) ja (700: 894 560).

Only 650: Put the guide sleeve ETV 894 480 on the inner bearing race of the axle housing Carefully lift the axle housing into the drive shaft *). Make sure that the seals are not damaged. Remove the ETV-tools from the drive shaft.

- *) HiTech (-K36111) and **6600-8750**, (J02316-K36111) tractors, the inner seal has been moved outwards. Protect the plastic ring seal using the ETV-tools and grease.
- 12. Fit the inner bearing on the drive shaft. Fit the planetary gear on the splines on the drive shaft and press the planetary gear home. Fix the planetary gear to the end of the drive shaft with the attaching plate and the screw.
- 13. Adjust the drive shaft bearing clearance (instr. D) and fit the final drives (instr. E).


D. Adjusting outer drive shaft bearing clearance

1. Place the drive shaft with the wheel flange on the floor. Bed in the bearings by rotating the axle housing 20-30 turn.

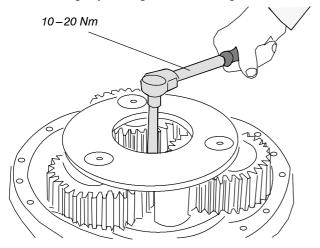

2. Lift up the rear axle housing and move it inwards at right angles so that the inner drive shaft locates between the planetary gears.

4

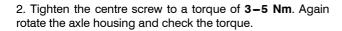

Note! After some time of operation the correct bearing clearance will be established.

3. Turn the lock washer for the centre screw so that the notch on the washer locates in the recess in the planetary retainer.


Note! The lock washer can be fixed with a small amount of grease before fitting the final drives.

E. Fitting final drive

Note! Push the inner drive shaft fully home into the brake housing so that it is pushed through brake discs and its splines engage the differential.

- 1. a) 300: Place a new o-ring between the rear axle housing and the brake housing. Fix the o-ring in position with a little grease. Apply sealing compound Hylosil RTV silicone Grade 102 (UK 0067) to the contact surfaces.
- b) 450/650: Apply sealing compound Hylosil RTV silicone Grade 102 Black (UK 0067) to the ring gear sides and place the ring gear against the rear axle housing.

Note! Make sure that the bolt holes align.

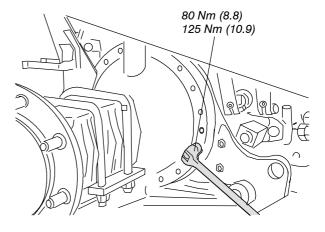

- 3. Tighten the bolts to 80 Nm (final gears 300) or 125 Nm (450/650).
- 4. Press grease through the nipple to the drive shaft outer bearing.
- 5. Connect the check link to its bracket on the rear axle housing. Fit the rear wheel and tighten the nuts to 550 Nm. Fill the transmission with oil.
- 6. Lower the cab rear end and tighten the attaching bolts to 200 Nm.
- 7. Connect the PTO control cable, pick up hitch release control and the joint at the lower end of the lewelling screw control rod. Fit the engine hood plates.
- 8. Test-drive the tractor and check for leaks.

Note! On E-models, ensure that the speed sensor and its wiring have been connected and check the function of the AC-III/IV units.



	15.5.1993	Model	Code	Page
46. Power take – off	1. 4. 1997	6000-8750	460	1

Contents

General (Op. no. 460)	
Technical data	2
Special tools	3
Power take – off	4
- PTO 540/1000 r/min and 540/750 r/min	4
- PTO 540/1000 r/min + ground speed PTO	5
- Heavy duty PTO	
- PTO shafts	
- PTO clutch	9
- engagement of power take-off	10
- lubrication system and clutch pressure	
Repair instructions (Op. no. 462)	
1. Reconditioning power take-off:	
A. Removing PTO	1
B. Detaching power take – off clutch	
C. Reconditioning PTO clutch	
D. Fitting PTO clutch and adjusting bearing clearances	
E. Removing selector fork and gearwheels	
F. Fitting gearwheels and selector fork	6
G. Fitting power take – off	
2. PTO shaft and cushioning valve for engagement:	
A. Changing PTO shaft/seals	8
B. Cushioning valve for engagement	
Front PTO (Op. no. 463):	
Front PTO on 6000 – 8400	
Front PTO on 8450 – 8750	6

	1,4,1997	Model	Code	Page
46. Power take – off	1. 10. 1999	6000-8950	460	2

Technical data

PTO is controlled with a control lever:

- engine PTO is engaged at low engine revs.
- ground speed PTO is engaged while the tractor is stationary

PTO shafts (changeable):

- ø 35 mm (1 3/8") ISO 500, as standard	 6-splines
– ø 35 mm (1 3/8") ISO 500, option	 21-splines
− ø 45 mm (1 3/4") ISO 500, option	 20-splines
− ø 45 mm (1 3/4") ASAE, option	 6-splines
- Ø 38 mm GOST 3480−58, option	 8-splines

At outputs over 50 kW, use 21 - splines shaft. In heavy ground speed PTO use is recommended the 20 - splines shaft. Use, if necessary, a torque limiting clutch (1000 Nm)

Engine PTO, ratios:

PTO speed 540 r/min at engine speed	1874 r/min
- PTO speed 540E r/min at engine speed	1539 r/min
- PTO speed 1000 r/min at engine speed	2080 r/min
 PTO speed 1000E r/min at engine speed (8350Hi)	1750 r/min
Ground speed PTO, ratios on tractors with a 2-step quick-shift gear (concerning DPS mode	els, see the next p
1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	04 0704 DTO - I-

PTO multi-disc clutch:

- clutch pressure 1,8 MPa (from low pressure circuit of hydraulic system).
- PTO clutch solenoid valve is fitted on the servo valve block. In the PTO clutch there is fitted a PTO brake. In addition, the system has a cushioning valve for engagement.
- friction discs 7 pcs (-660476). 6000-6400 6 pcs (660477-) and 6600-8400 8 pcs (660477-)
- steel discs 6 pcs (-660476). 6000 6400 5 pcs (660477) and 6600 8400 7 pcs (660477)

Note! On the latest 6000 - 8750 tractors there are 8 friction discs and 7 steel discs in the PTO clutch.

PTO unit differences on different transmission types on tractors with 2-step quick-shift gear:

(Markings on the later PTO units, see the next page 460/2A).

	Transmission 30 km/h	Transmission 40 km/h
Upper shaft 540/1000 r/min	gears Z25/17	Z25/17
Upper shaft 540/540E r/min	gears Z20/17	Z20/17
PTO shaft gears for 540/540E/1000 r/min	Z59/57/52	Z59/57/52
PTO shaft foremost gearwheel for		
ground speed PTO	Z31	Z25
Gearwheel on the ground speed PTO shaft	Z22	Z24

Note! On E-models, there is an impulse disc on the PTO shaft for measuring PTO shaft speed. On power take-off units without ground speed PTO, there is not a ground speed PTO shaft (lowest) and a ground speed PTO gearwheel at the front end of the PTO shaft. Instead of this gearwheel, there is fitted a spacer ring and spacer sleeve. In addition, the front bearing of the PTO shaft is a ball bearing.

Settings

Clearance of the ground speed PTO shaft bearings 0,025-0,075 mm Clearance of the PTO clutch shaft bearings 0,025-0,075 mm

Clearance between PTO shaft rear bearing and PTO shaft oil seal is adjusted to zero with shims.

Tightening torques

Frame joint between gearbox-PTO housing:

- upper stud nuts (8 pcs)		270-330 Nm
- lower stud nuts (6 pcs)		72-88 Nm
Front cover of the PTO unit		72-88 Nm
Shaft nut on the ground speed PTO sha	aft	260-280 Nm
Locking plate for the clutch shaft adjust	ing nut	21-25 Nm
Locking flange at the front end of the P	TO shaft (earlier version)	190-210 Nm
Locking bolt at the front end of the PTO	shaft (later version)	225 Nm

Locking fluids and sealing compounds used

Sealing compound Hylosil RTV Grade 102 black between gearbox-PTO unit

Sealing compound Loctite 542 on PTO speed sensor threads (only 6600E and 8100E-models).

Activator Loctite747 + locking fluid Loctite 270 onto the locking flange at the front end of the PTO shaft (earlier version). https://tractormanualz.com/

	1.8.1998	Model	Code	Page
46. Power take-off	1. 8. 2000	6000-8750	460	2A

Markings on the PTO units, 662134-.

With effect from tractor ser. no. **662134** the PTO units have been marked with number codes. The purpose is to make it easier to recognize different PTO units when changing tyres, when modifying and repairing the PTO units and in connection with possible repair works. The PTO ratios were modified when the Delta Powershift unit was introduced.

Transmission 300 (PTO 300) **and 390** (PTO 450) : **6000 – 6400** (–K41105), **6900, 8000** (–K36111). Transmission 550 replaces transmissions 300 and 390. In transmission 550, the long PTO shaft diam. is 30 mm.

Code	Туре	Z	Ratio of AVO
1	540+1000		
2	540+1000+AVO	Z25/24	A, B/38,62 C, D, L, K/31,06 J,M/42,04
3	540+1000+AVO	Z31/22	A, B/28,55 C, D, L, K/22,96 J, M/31,08
4	540+540E		
11	540+540E +AVO	Z25/24	A, B/38,62 C, D, L, K/31,06 J, M/42,04
12	540+540E+AVO	Z31/22	A, B/28,55 C, D, L, K/22,96 J, M/31,08
15	540+1000+AVO	Z26/20	A, B/30,95 C, D, L, K/24,89 J, M/33,68
16	540+540E+AVO	Z26/20	A, B/30,95 C, D, L, K/24,89 J, M/33,68
Transmission 450 (PTO 450): 6600 - 6800 (-G01400), 8100 - 8400 (-668102) (DPS reduction - direct - overdrive)			
5	540+1000		
6	540+1000+AVO	Z25/24	E, F/40,96 G, H/55,43 I, N/32,63
7	540+1000+AVO	Z31/22	E, F/30,28 G, H/40,98 I, N/24,12
8	540+540E		
9	HD 1000+AVO	Z25/24	E, F/40,96 G, H/55,43 I, N/32,63
10	HD 1000+AVO	Z31/22	E, F/30,28 G, H/40,98 I, N/24,12
13	540+540E+AVO	Z25/24	E, F/40,96 G, H/55,43 I, N/32,63
14	540+540E+AVO	Z31/22	E, F/30,28 G, H/40,98 I, N/24,12
17	540+1000+AVO	Z26/20	E, F/32,82 G, H/44,42 I, N/26,15
18	540+540E+AVO	Z26/20	E, F/32,82 G, H/44,42 I, N/26,15
19	HD 1000+AVO	Z26/20	E, F/32,82 G, H/44,42 I, N/26,15
20	HD 1000		
Transmission 460 (PTO 450): 8200, 8400 (668103-), 8050 and 8150 (-F32103) (DPS direct-overdrive-overdrive)			
5	540+1000		
6	540+1000+AVO	Z25/24	R, S/40,96 O, P/50,93
7	540+1000+AVO	Z31/22	R, S/30,28 O, P/37,65
8	540+540E		
0	HD 1000 + AVO	705/04	D C/40.06 O D/50.00

AVO=ground speed PTO.

HD=Heavy Duty PTO, see page 460/6.

HD 1000+AVO

Z=number of teeth of the gears for the ground speed PTO (in the PTO unit). Ratio of AVO=E.g. PTO shaft end rotates 38,62 turns/1 turn of the rear wheels. Letters in front of ratio means different gearbox types, see page 420/2A and 2B.

Z25/24

R, S/40,96 O, P/50,93

1. 10: 1999 Model Code Page 46. Power take – off 1. 8. 2000 6000 – 8950 460 2B

Transmission 460 (PTO 450): 8200, 8400 (668103-), 8050 and 8150 (-F32103)

Code	Туре	Z	Ratio of AVO
10	HD 1000+AVO	Z31/22	R, S/30,28 O, P/37,65
13	540+540E+AVO	Z25/24	R, S/40,96 O, P/50,93
14	540+540E+AVO	Z31/22	R, S/30,28 O, P/37,65
17	540+1000+AVO	Z26/20	R, S/32,82 O, P/40,81
18	540+540E+AVO	Z26/20	R, S/32,82 O, P/40,81
19	HD 1000+AVO	Z26/20	R, S/32,82 O, P/40,81
20	HD 1000		

Transmission 650 (PTO 650): 8350-8750, 8050 and 8150 (F32104-), 6600-6800 (G01401-), 6650Hi-8950Hi, Transmission 550 (PTO 650): 6250Hi-6550Hi (K36112-), 6200-6400 (K41106-).

Note! If on HiTech tractors the PTO speeds are changed, the AC V control unit A1 must be reprogrammed, i.e. the new parameter file must be input, **–J38342** or PTO parameters (ratios) must be set in the setting mode, **J38343**–, see code 370.

Code	Туре	z	Ratio of AVO
21	540+1000		
22	540+540E		
23	540+1000+AVO	Z26/20	T/40,81 U/40,81 V/32,82 Y/32,82
24	540+540E+AVO	Z26/20	T/40,81 U/40,81 V/32,82 Y/32,82
25	HD 1000		
26	HD 1000+AVO	Z26/20	T/40,81 U/40,81 V/32,82 Y/32,82
27	540+1000+AVO	Z31/22	T/37,65 U/37,65 V/30,28 Y/30,28
28	540+540E+AVO	Z31/22	T/37,65 U/37,65 V/30,28 Y/30,28
29	HD 1000+AVO	Z31/22	T/37,65 U/37,65 V/30,28 Y/30,28
30	540+1000+AVO	Z25/24	T/50,93 U/50,93 V/40,96 Y/40,96
31	540+540E+AVO	Z25/24	T/50,93 U/50,93 V/40,96 Y/40,96
32	HD 1000+AVO	Z25/24	T/50,93 U/50,93 V/40,96 Y/40,96
33	1000+540E		
34	1000+540E+AVO	Z25/24	T/50,93 U/50,93 V/40,96 Y/40,96
35	1000+540E+AVO	Z31/22	T/37,65 U/37,65 V/30,28 Y/30,28
36	1000+540E+AVO	Z26/20	T/40,81 U/40,81 V/32,82 Y/32,82
37	540E+1000E		
38	540E+1000E+AVO	Z25/24	T/50,93 U/50,93 V/40,96 Y/40,96
39	540E+1000E+AVO	Z31/22	T/37,65 U/37,65 V/30,28 Y/30,28
40	540E+1000E+AVO	Z26/20	T/40,81 U/40,81 V/32,82 Y/32,82

AVO=ground speed PTO.

HD=Heavy Duty PTO, see page 460/6.

Z=number of teeth of the gears for the ground speed PTO (in the PTO unit).
Ratio of AVO=E.g. PTO shaft end rotates 38,62 turns/1 turn of the rear wheels.
Letters in front of ratio means different gearbox types, see page 420/2A and 2B.



46. Power take – off 1. 9. 2002 Model Code Page 6000 – 8950 460 2C

Transmission 650: (PTO 650): 8350-8750, 8050 ja 8150 (F32104-), 6600 ja 6800 (G01401-), 6250Hi-8950Hi (K36108-), 8350Hi-8950Hi (-L32105)


Transmission 550: (PTO 650): **6200 – 6550Hi** (J12242 –), **6200 – 6400** (K41106 –).


Transmission 700: (L32106-), 8350Hi-8950Hi


Note! If on HiTech tractors the PTO speeds are changed, the AC V control unit A1 must be reprogrammed, i.e. the new parameter file must be input, **–J38342** or PTO parameters (ratios) must be set in the setting mode, **J38343–**, see code 370.


Code	Туре	Z	Ground speed PTO ratio
37	540E+1000E		
38	540E+1000E+AVO	Z25/24	JA/40,96
39	540E+1000E+AVO	Z31/22	JA/30,28
40	540E+1000E+AVO	Z26/20	JA/32,82
41	540E+1000 E		
42	540E+1000E+AVO	Z25/24	JA/40,96


PTO VARIATIONS

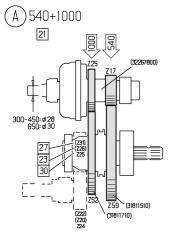


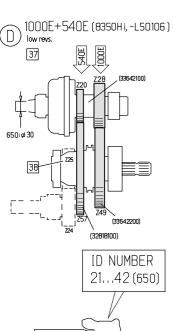


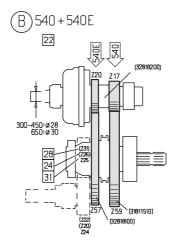

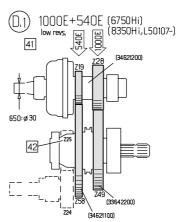

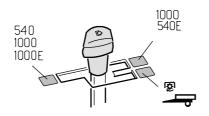

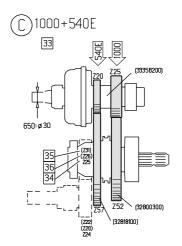

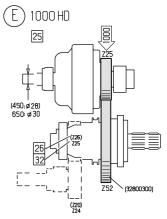

 1000
 r/min at engine speed
 2080 r/min (Z52/25)

 1000
 r/min at engine speed
 1750 r/min, 1000E (Z49/28)

 540
 r/min at engine speed
 1874 r/min (Z59/17)

 540
 r/min at engine speed
 1539 r/min, 540E (Z57/20)


 540
 r/min at engine speed
 1648 r/min, 540E (Z58/19)



40 De 1914 1916	1,4.1997	Model	Code	Page
46. Power take – off	1. 8. 1998	6000-8750	460	3

Special tools

Α	
ETV 890 220	Universal handle
ETV 891 870	Plate for fitting PTO shaft seal (Gearbox 505 – 905)
ETV 894 080	Drift for fitting selector fork rail locking ball (Gearbox 6100 – 8100)
ETV 894 420	Ring for fitting PTO shaft new cassette seal (to be used with below listed sleeves)
ETV 894 430	Sleeve (ø 35) for fitting PTO shaft new cassette seal (to be used with above mentioned ring)
ETV 894 440	Sleeve (ø 44,6) for fitting PTO shaft new cassette seal (to be used with above mentioned ring)
В	
ET 894 000	Tool for unscrewing locking flange (earlier version) at front end of PTO shaft (Steering system 505 – 905)
ET 894 090	Sleeve for fitting PTO clutch circlip

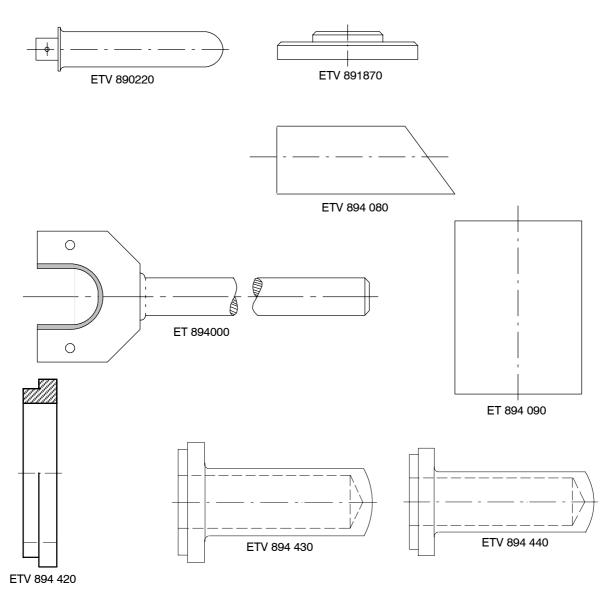

Max. PTO output at 1000 r/min (at engine revs 2080 r/min kW (hv))														
6000	6100	6300	6400	6600	6800	8000	8050	8100	8150	8200	8400	8450	8550	8750
45 (61)	49 (67)	53 (72)	60 (81,5)	66 (90)	73 99)	63,5 (86)	69 (94)	76 (103)	79,5 (108)	81,5 (111)	92 (125)	92 (125)	104 (141)	124 (169)

40 B	8. 17. 1990	Model	Code	Page
46. Power take – off	15. 5. 1993	6000-8750	460	4

Power take-off, description

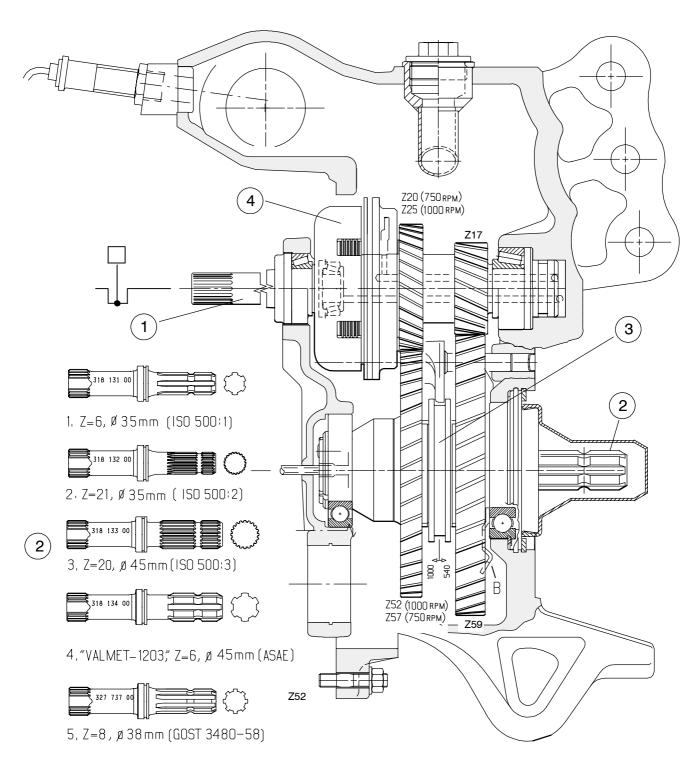


Figure 1. PTO 540/1000 r/min and PTO 540/750 r/min.

Front end of shaft (1) is connected to the coupling sleeve in the pump drive mechanism at the rear end of the gearbox input shaft. Shaft (1) is rotated by the pump drive shaft from the engine flywheel. Shaft (1) front end together with the PTO clutch drum (4) always rotate when the engine is running.

When there is no oil pressure in the PTO clutch, power is not transmitted to the PTO shaft (2). Now the PTO brake cup springs engage the brake which prevents upper shaft gearwheels from rotating

When pressurised oil acts in the PTO clutch, the clutch is engaged (and the brake is released) and power is transmitted to the PTO shaft gearwheels. When sliding coupler (3) is in the front position, 1000 r/min PTO or 750 PTO has been engaged. When the coupler is in the rear position, 540 r/min PTO has been engaged.

Note! In the picture above the locking flange at the front end of the PTO shaft (2) is the earlier version. Later version is illustrated on page **460/7**. Additionally, the clutch housing has been reinforced with a metal ring, see page **460/9**.


Model **6000-8750**

Code

460

Page

5

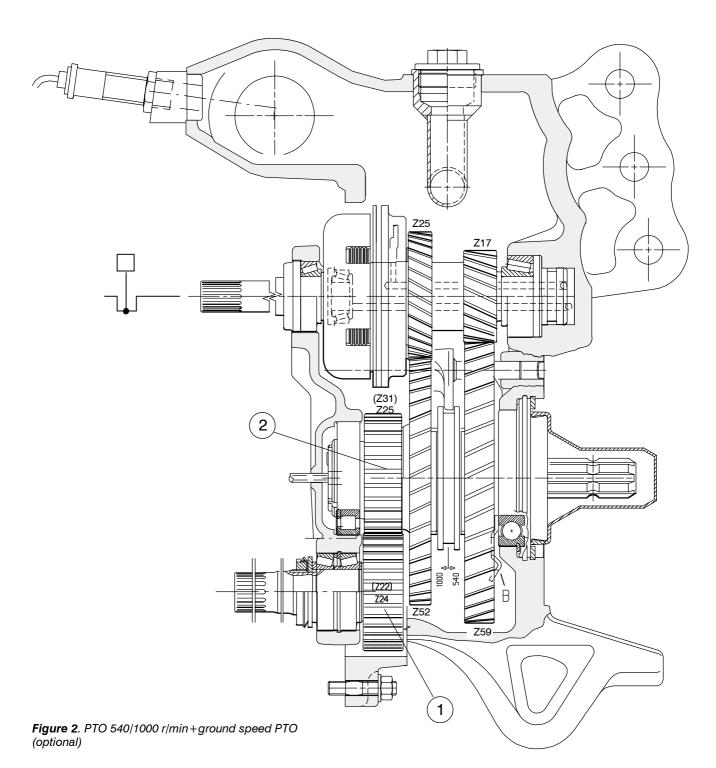

On this PTO unit, nominal speeds 540 and 1000 r/min are obtained in the same way as on a PTO unit without ground speed PTO (see figure 1)

In the figure above shaft (1) is for ground speed PTO. Its front end has been connected with a coupling sleeve to the rear end of the ground speed PTO output shaft in the gearbox. There is a sliding coupler for the ground speed PTO at the front end of the gearbox bevel pinion shaft.

The ground speed PTO is engaged with the same control lever as the engine PTO speeds 540 and 1000 r/min.

When the ground speed PTO has been engaged, the PTO shaft rotates proportional to the rear wheel rotation speed and power is transmitted from gear (1) to gear (2) on the PTO shaft.

Note! In the picture above the locking flange at the front end of the PTO shaft is the earlier version. Later version is illustrated on page **460/7**. Additionally, the clutch housing has been reinforced with a metal ring, see page **460/9**.

6000-8750


Model

Code

460

6

Page

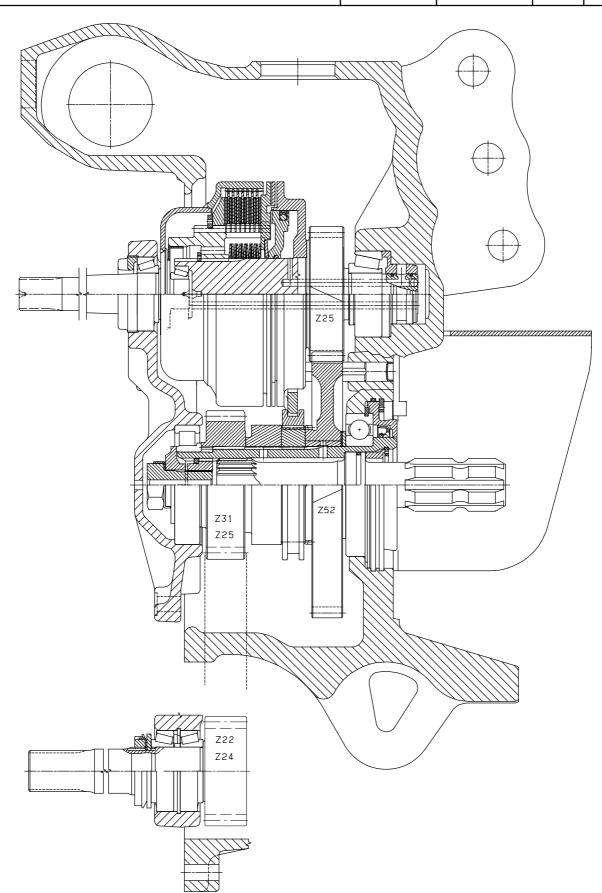

Picture 3. Heavy Duty PTO (6600 - 8400, not 8000)


This PTO unit is optional equipment which can be used in very heavy work.


The heavy duty PTO has an engine PTO 1000 r/min and ground speed PTO which is available in two different ratios (V and F, see Technical Data).

Note! The hardening depth of the clutch shaft has been increased. On these shaft E is marked on the rear side of the shaft. These shafts should always be fitted as a spare part.

Note! This PTO is standard on 8750 tractor. On this tractor for $\Sigma\mathrm{-power}$ system, there is an impulse wheel on the PTO clutch outer circumference and a speed sensor, see under https://tractormanualz.com/

Page **6A**

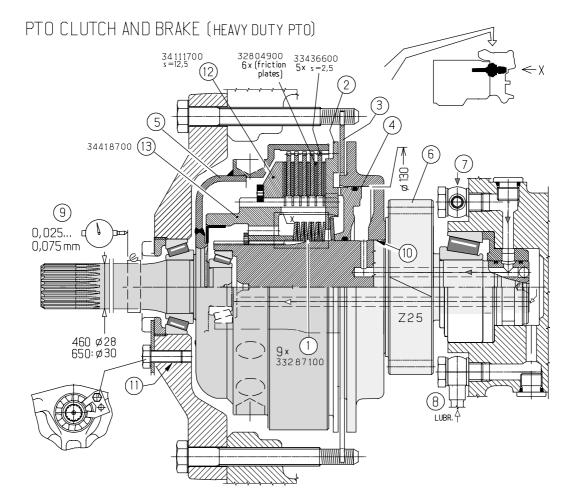


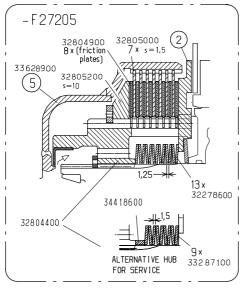

-F27126 SIGMA:

2 4 275 (Ø165)


(Ø165)

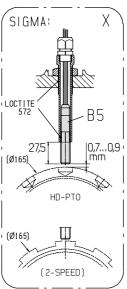

Picture 3A. Heavy Duty PTO clutch

- 1. Cup springs (13 pcs)
- 2. Pressure plate
- 3. Brake plate
- 4. Piston
- 5. Shaft + drum
- 6. Gear weheel

 - 7. Pressure oil
- 8. Lubricating oil
- 9. Adjustment of bearing clearance
- 10. Press-fit
- 11. Apply Loctite 242 to the threads
- 12. Counter hold
- 13. Hub



Code

460

Page

7

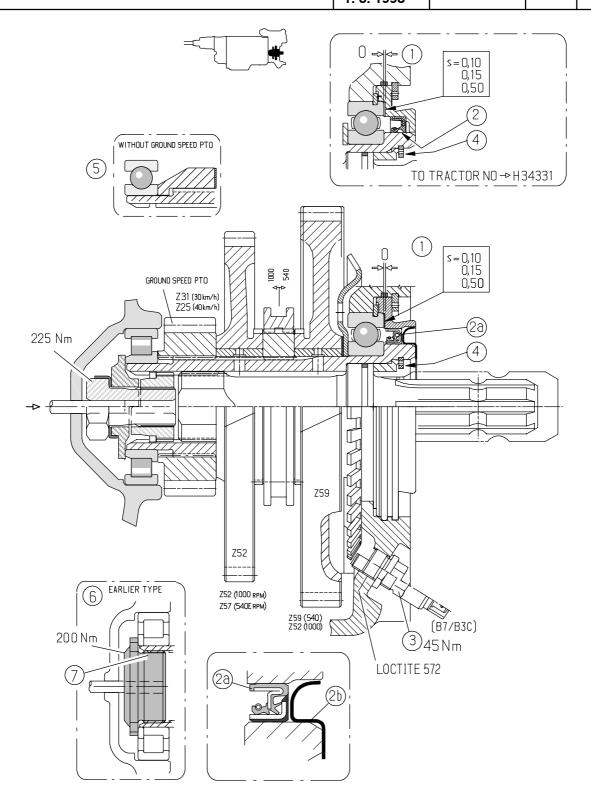
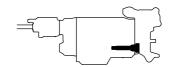


Figure 4. PTO shaft

- 1. Clearance is adjusted to zero with shims
- 2. Universal grease
- 2a. Cassette seal (H34332-). Fitting instruction, see page 462/8A.
- 2b. Protective cup for cassette seal
- 3. PTO rotation speed sensor (only E-models)
- 4. Circlip
- 5. Unit without ground speed PTO
- 6. Earlier type locking flange at the PTO shaft front end
- 7. First activator Loctite 747 (reaction time 15–20 seconds) onto the shaft and flange threads. Then locking fluid Loctite 270 and tighten the flange to 200 Nm with special wrench ET 894 000.

40 Parray tales off	8. 17. 1990 Model		Code	Page
46. Power take – off	15. 5. 1993	6000-8750	460	8



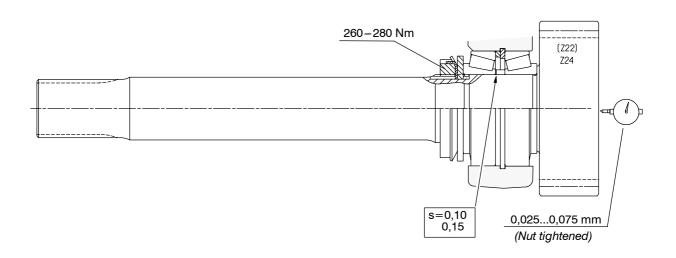


Figure 5. Proportional ground speed PTO shaft (optional)

46. Power take-off

1. 9. 2002

Model

6000-8750


Code

Page 9

460

PTO multi-disc clutch

Pressurised oil to the clutch is conducted from the servo valve block (on gearbox LH side) via internal piping to the rear end of the PTO clutch shaft (6) and onwards via drilling to the oil space behind the piston (4)

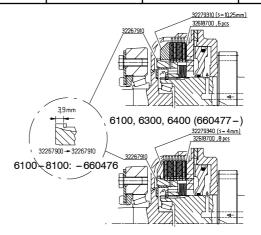

PTO CLUTCH (300-460,650)

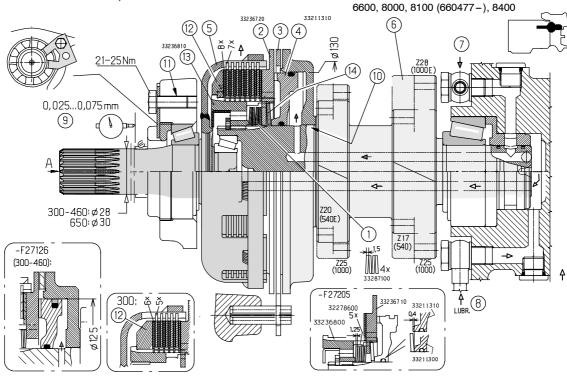


Figure 6. PTO clutch

- 1. Cup springs (5 pcs)
- 2. Pressure plate (modified for spring 14)
- 3. PTO brake disc
- 4. Piston
- 5. Shaft / clutch drum
- 6. Shaft
- 7. Pressure oil to clutch

- 8. Lubricating oil
- 9. Adjustment of PTO clutch shaft bearing cleareance
- 10. Fastening with Loctite 601
- 11. Loctite 242 on the threads
- 12. Support ring (6 friction discs: s=10,25,7 pcs: s=7,4 mm, 8 pcs: s=4 mm
- 13. Hub
- 14. Cup spring (on latest models)

When there is no oil pressure in the clutch (solenoid valve unenergized), cup springs (1) press plate (2) against brake disc (3) causing brake action.

When pressure is connected behind the piston (4), it moves forwards releasing the brake and engaging via disc pack the clutch drum (5) to shaft (6) and power is transmitted to the PTO shaft.

Note!On the latest clutches, the clutch housing (5) has been reinforced with a metal ring.

A number of the clutch discs and disc material have been changed.

Number of the discs, see technical data on page **460/2**. Concerning repairs of the earlier clutches, see page **462/3** and pictures above.

Heavy Duty PTO clutch, see page 460/6A.

Note! In transmission 650 the clutch drive shaft diameter is 30 mm. In other transmissions (300, 460) the diameter is 28 mm

Note! From ser. no. **F27127** incl. the piston of the HD clutch and the standard clutch is the same (\emptyset 130 mm). At the same time the piston seal was changed into an o-ring. From ser. no. **H11438** incl. the dimensions and shape of the piston have been changed. This modification helps to ensure that the PTO shaft stops when the PTO is disengaging.

https://tractormanualz.com/


6000-8750

Model

Code

460

Page 10

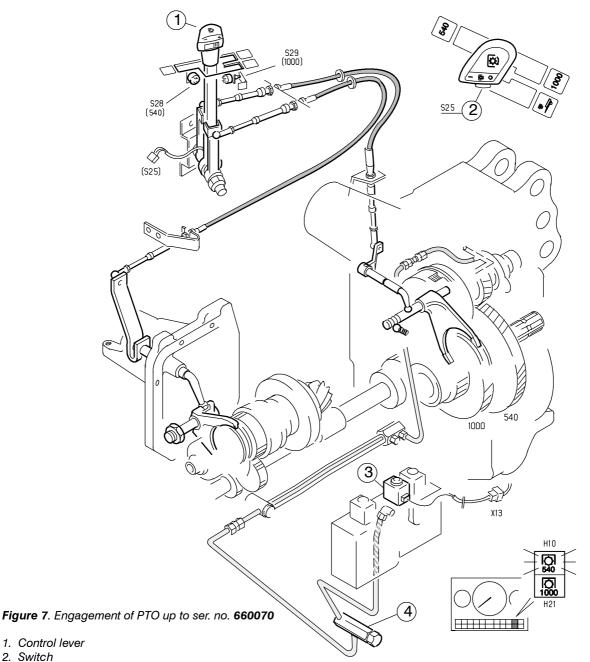

1. Control lever

- 2. Switch
- 3. Solenoid valve
- 4. Cushioning valve

Lever (1) movement is transmitted via a cable to the selector fork on the PTO unit sliding coupler and also via another cable to the selector fork on the sliding coupler (in gearbox) for ground speed PTO (optional).

When the control lever is in the middle position, the PTO unit sliding coupler is in the middle position, PTO clutch is unpressurised and the PTO brake is engaged.

When the lever (1) is moved to the front position (engine PTO 540 r/min), the sliding coupler in the PTO unit is moved to the rear position and when the lever is released, the lever presses the microswitch, which in turn connects current to the PTO solenoid valve and the PTO clutch is engaged and the PTO shaft starts to rotate (indicator light comes on).


When the engine speed PTO is disengaged, first the microswitch disconnects the solenoid valve and the PTO clutch disengages (and the brake engages). When the lever is moved to the middle position, the sliding coupler is moved to the middle position. (indicator light goes out)

In the same way is engaged engine PTO 1000 r/min. Now the lever is moved to the rear position. Indicator light in the instrument panel is lit.

Ground speed PTO is engaged by moving first the lever to the left from the middle position and then backwards. Now the sliding coupler in the gearbox engages the ground speed PTO mechanically. Now the PTO clutch is in the disengaged position (unpressurised).

There is a switch on the PTO control lever knob. With this switch the PTO clutch can be disengaged temporarily. The sliding coupler, however, does not move to the middle position. Long-periods of disengagement should always be done with the control lever


		Model	Code	Page
46. Power take-off	15. 5. 1993	6000-8750	460	11

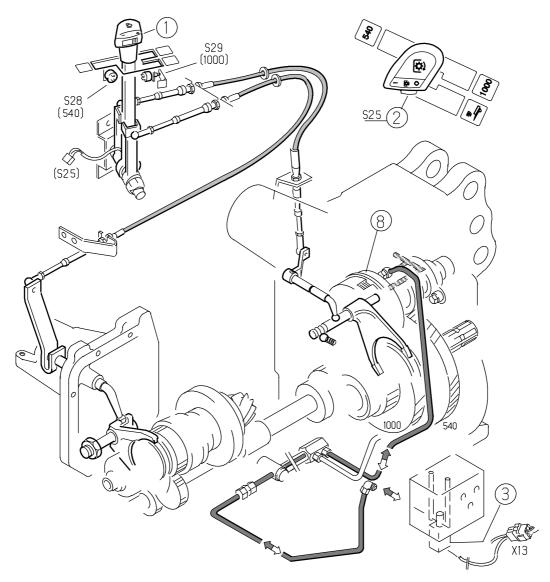


Picture 8. Engagement of PTO with effect from tractor ser. no. **660071**.

- 1. Control lever
- 2. Switch
- 3. New servo valve block, see also pages 420/17-20.
- 8. Multi-disc clutch of PTO

From tractor serial number **660071** there is a new servo valve block on the gearbox LH side. The cushioning valve for the PTO clutch is fitted inside the valve block. For function of the cushioning valve, see page **462/9**. The PTO solenoid valve is fitted on the lower side of the valve block.

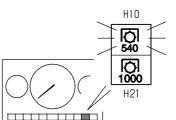

46 Dower take off	\nearrow	Model	Code	Page
46. Power take-off	15. 5. 1993	6000-8750	460	12

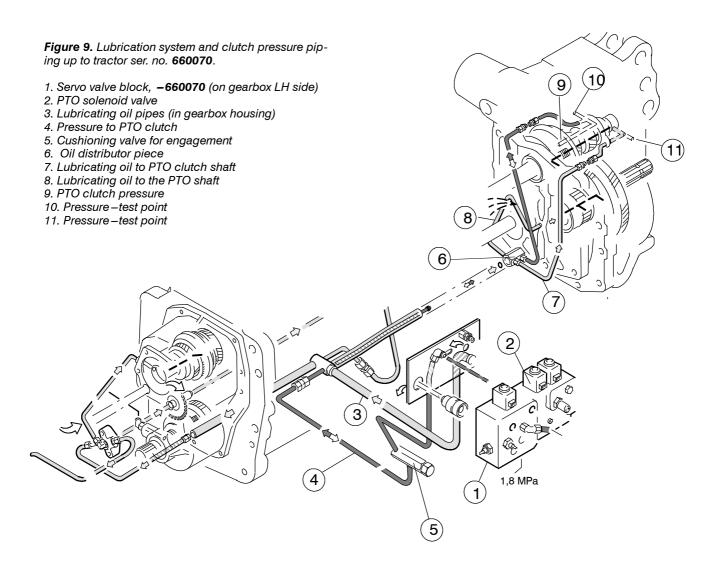

Lubricating system

The PTO unit uses the same oil as the whole transmission/hydraulic system. In addition, pressure lubrication is directed from the servo valve block via pipe (3) to the oil distributor piece (6). From the distributor piece oil is directed to the PTO clutch shaft bearings via pipe (7) and to the PTO shaft gearwheel sliding surfaces via pipe (8).

Note! Inside the lubricating oil pipe (12) is fitted the PTO clutch pressure pipe (4).

PTO clutch pressure

Pressure oil to the PTO clutch is conducted from the servo valve block (1) via cushioning valve (5) and pipe (4) inside the gearbox housing.

Note! Lubricating oil pipe (3) and clutch pressure pipe (4) rear ends have been sealed with o – rings against the oil distributor piece (6).


Important! The piping has been changed with effect from tractor serial number **659787**. The new servo valve block is fitted on tractors from ser. no. **660071** (see picture on the next page).

46. Power take-off		Model	Code	Page
	15. 5. 1993	6000-8750	460	13

Picture 10. Lubricating system and clutch pressure piping, **659787**—.


1. Servo valve block (660071 –), which has in – built cushioning valve for the PTO clutch (see page 462/9). The PTO solenoid valve is fitted on the valve block lower side.

2. Lubricating oil feed pipe in the gearbox housing

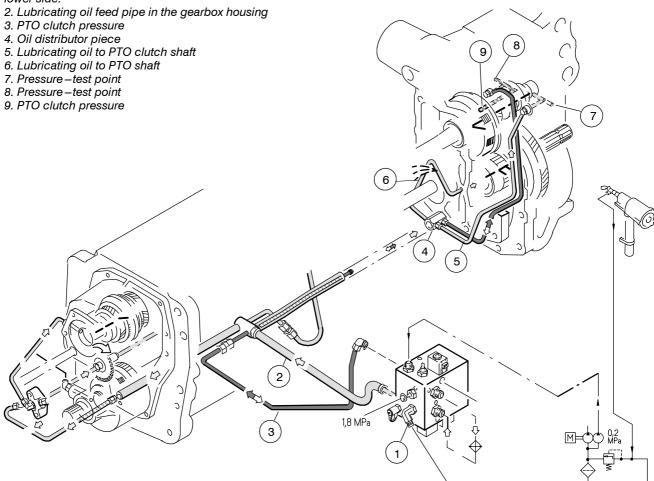


6000-8750

Page 14

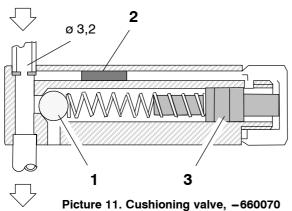

- 1. Ball
- 2. Needle
- 3. Piston

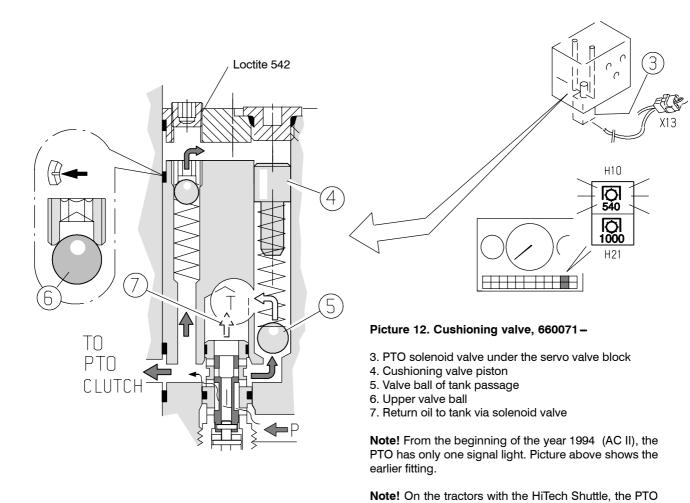

ning valve.

clutch engagement is controlled by a proportional valve and these tractors do not have the above shown cushio-

40 Damentalia aff	1.1.1995	Model	Code	Page
46. Power take-off	1. 11. 1998	6000-8750	460	15

PTO clutch cushioning valve, -660070 (picture 11).

The cushioning valve is fitted in the gearbox housing and it is accessible when a small cover on the gearbox LH side is removed. Before removing the cover, the gearbox oil must be drained.

When PTO solenoid valve opens oil flows under pressure to the PTO clutch. When the pressure has reached 0,5–0,6 MPa, valve ball (1) opens. At the same time oil flows past needle (2) to piston (3). After 0,7–1 second the pressure is equalized and ball (1) closes. The engaging pressure then rises to a normal value of about 1,8 MPa.

Note! The PTO engagement can further be made slower by fitting a Ø 2 mm restriction into the gearbox housing, see page 462/8.

PTO clutch cushioning valve, 660071 – (picture 12).

From tractor ser. no. 660071 the cushioning valve is in – built in the servo valve block on the LH side of the gearbox. The cushioning valve end plugs are fitted on the top side of the valve block, see pictures on pages 420/17A and 17B point 8.

When the PTO is engaged, the solenoid valve directs oil to the PTO clutch and to the cushioning valve. The cushioning valve spring (below piston 4) has its maximum length and raising pressure in the lower passage opens valve ball 5 and oil can flow to the tank. At the same time oil flows by valve ball 6 into the upper passage.

Pressure oil moves piston 4 downwards and spring force which affects the ball 5 increases. Oil flow to tank decreases and clutch pressure rises slowly to its max. value (1,8 MPa).

When the PTO is disengaged, oil returns via solenoid valve to the tank passage 7. Pressure in the lower passage decreases and oil can flow from the upper passage by ball 6. Piston 4 returns quickly to the original position.

This construction facilitates the function of the valve when the PTO is engaged quickly again.

From tractor ser. no **661798** incl. the cushioning valve has been modified so that the engagement of the PTO is "softer".


The spring on ball (5) has been changed so that the spring wire diameter is now 1,0 mm (earlier 1,1 mm). In addition, the restriction on ball (6) has been changed. The new restriction has a groove of 0,4 mm (earlier 0,5 mm).

These modifications can also be done for the earlier manufactured tractors.

The spare part number of the new spring is 30626810. The spare part number of the new restriction is 32720410.

Note! In order to improve further the engagement of the PTO, a new restrictor has been fitted into the servo valve block and an extra passage has been drilled, see page **420/17A** point 17 and page **420/17B** point 17. The restrictor can be fitted also on the earlier manufactured tractors. The spare part number of the restrictor is 31742320 (ø1,2 mm).

Note! HiTech tractors have not the cushioning valve, but the PTO engagement is controlled by a proportional solenoid valve which in turn is controlled by the Autocontrol V control unit (see code 370).

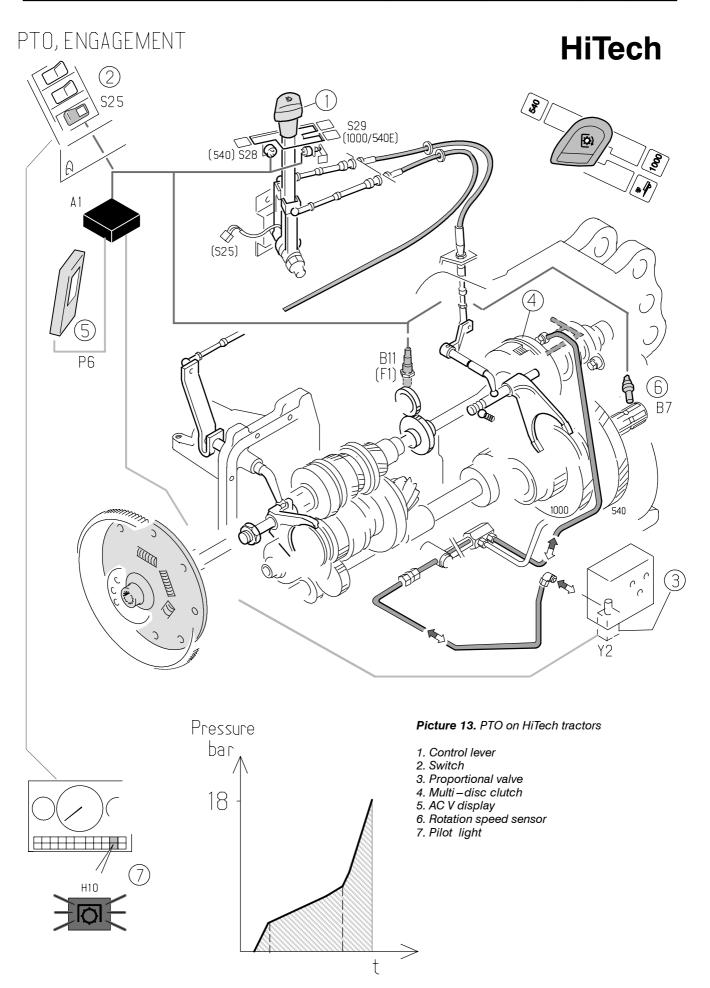




		Model	Code	Page
46. Power take-off	8. 11. 1990	6000-8750	462	1

1. Reconditioning PTO (Op. no. 462)

Note! In the instructions below has been used a PTO unit which is equipped with parts for ground speed PTO. The instructions are good also for PTO units without the ground speed PTO.


A. Removing PTO unit

- 1. Drain the oil from the transmission. On E-models, disconnect the PTO speed sensor wire. Remove the position sensor of the hydraulic power lift.
- 2. Disconnect the auxiliary hydraulic pipes from the quick—action couplings (in front of the bracket for couplings).
- 3. Disconnect the PTO control cable, pick-up hitch release control and the locking pin for the levelling screw control rod joint.

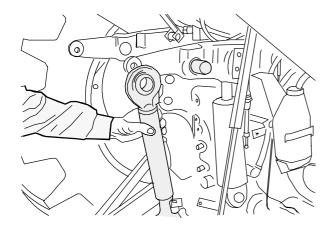

4. Lower the towing hook. Disconnect the lifting links from the lifting arms.


5. Disconnect the lifting cylinder upper ends from the lifting arms. Disconnect the oil hoses from the lifting cylinder and lower them.

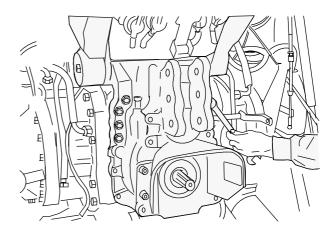

Note! Support the lifting arms by pushing an iron bar through the hole for lifting cylinder pin and further under the return oil connection for auxiliary hydraulic (the cam on the lifting shaft can damage if the lifting arms can rotate freely).

- 6. Unscrew the PTO housing fixing bolts. Disconnect the draft sensor connectors. Open the leak oil reservoir cap and release its hoses.
- 7. Wrap a lifting rope round the PTO housing. Push a tube onto the PTO shaft end. The unit can be kept in balance with the tube.

Note! As a suitable tube can be used tool ET 893 550 (tool for Carraro front axle on Valmet 05 – series).

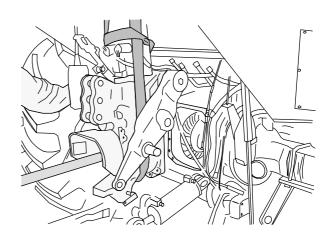


8. Raise the towing hook with a garage jack about 40 cm and pull the PTO unit straight out from place.

	8. 11. 1990	Model	Code	Page
46. Power take-off	15. 5. 1993	6000-8750	462	2


B. Removing PTO clutch

1. Remove the PTO unit (see instr. 1 A).

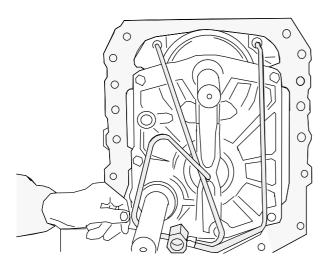

2. Remove the external lubricating oil pipes and the oil distributor piece.


Important! With effect from tractor searial no. **659787** the oil pipes have been drawn in the different way, see picture **10** on page **460/13**.

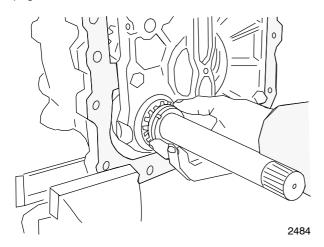

Set the PTO selector lever to the neutral position (middle position). Slacken the ground speed PTO shaft nut for easier removing of the front cover.


Note! On the latest tractors it is unnecessary to slacken the nut before removing the front cover.

Note! Prevent the ground speed PTO shaft from rotating e.g. with pipe tongs. Open the nut with a standard spanner wrench.

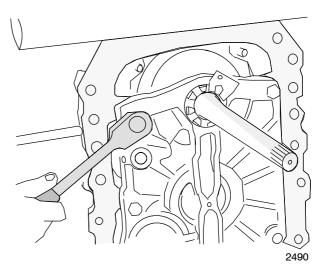


4. Unscrew the front cover bolts. Pry out the cover with a fitting lever and prevent the selector fork locking ball and spring from springing from their place.

Note! Easiest way to remove the cover is to pry at the PTO shaft front end. There is a guide sleeve on two fixing bolts on upper and lower corner of the cover.

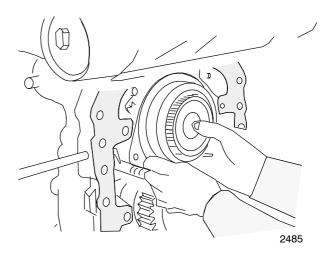

5. Remove the PTO clutch and shaft from the housing.


C. Reconditioning PTO clutch

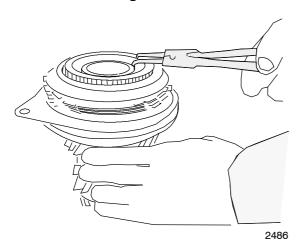

- Remove the oil deflector plate from the PTO clutch hub and remove the circlip under the plate and the clutch cup springs release.
- 2. Remove the clutch discs. Check the condition of the friction and steel discs and the PTO brake plate. Replace damaged parts.


Note! The friction discs and steel discs must be renewed as a complete set. The friction disc must be changed if the grooves on it have disappeared.

3. Remove the piston, if necessary, with compressed air or knock the shaft end against the table. Change the piston seals. Push in the piston

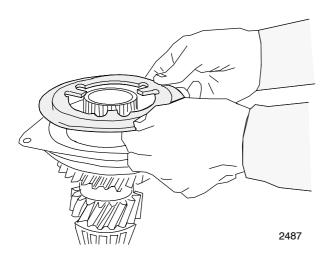

- 4. Assemble the clutch by fitting the brake plate on the piston. Then place on the brake plate a plate which has internal lugs.
- 5. Place the cup springs (5 pcs) on the internal lugs. The first spring concave side against the lugs and then other springs in pairs the concave sides against each other.

Note! The cup spring convexity is 3 mm.

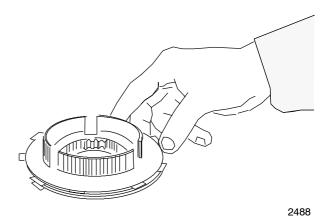


6. Place the friction and steel discs by turns onto the hub (first friction disc). Number of discs, see page **460/2**.

Important! From ser. no. 660477 the disc linings were changed from ceramic to organic type. At the same time number of the discs were changed as follows: 6100–6400 6 pcs and 6600–8400 8 pcs. It is recommended that in repair works organic discs are used. The organic linings are thicker and if you fit these onto the earlier tractors, the hub 32267900 should be machined to 3,9 mm (see page 460/9) or a new hub 32267910 should be used. Number of the discs is the same as earlier. On the latest 6000–8750 tractors, there are 8 friction discs and 7 steel discs in the PTO clutch.

- 7. Fit then the hub/disc pack onto the plate which has internal lugs (and on the cup springs) so that the grooves on the hub engages with the lugs on the plate.
- 8. Fit the circlip into the hub and force the circlip into its groove by striking with sleeve ET 894 090. Fit the oil deflector plate onto the hub.

Note! Place the clutch shaft on a table and assure that the clutch drum grooves are enough deep. The discs (steel disc) must not be against the groove bottoms when the shaft is in the working position.

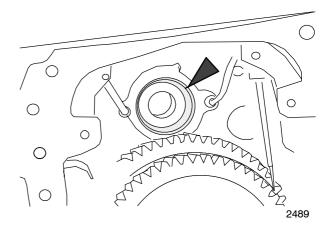


- 9. Check the clutch shaft rear taper roller bearing and its race in its location on the housing. Change the parts if necessary.
- 10. Check also condition of the piston ring type seals at the rear end of the clutch shaft.
- 11. Check and change, if necessary, the taper roller bearings at the front end of the shaft. Fit all bearings fully home.

	8, 1 1, 19 90	Model	Code	Page
46. Power take-off	1. 4. 1997	6000-8750	462	4

D. Fitting PTO clutch shaft and adjusting bearing clearances


Adjusting bearing clearance of ground speed PTO shaft (adjustment is done before fitting the front cover)

- 1. If you have changed the bearings of the ground speed PTO shaft (shaft is attached to the front cover), adjust the taper roller bearing clearance as follows:
- fasten the front cover to a vice
- fit the old shims between the bearings
- Fit the spacer ring and tighten the shaft nut to 260-280 Nm.
- Place a dial gauge stylus against the shaft rear end (middle of the gear)

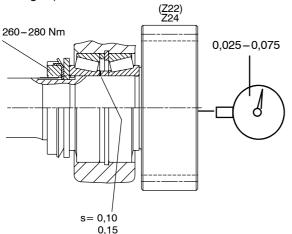


- Measure the clearance which should be 0,025 0,075. Rotate the shaft and press it to its extreme positions.
- Increase or decrease shims thickness between bearings.

Note! Shim thickness of 0,10 and 0,15 mm are available. Tighten the shaft nut after the front cover has been fitted.

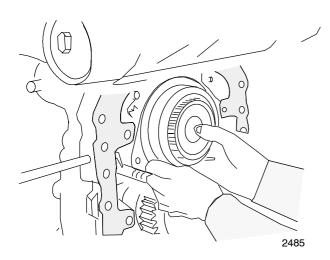

2. Fit the PTO clutch shaft into the housing. Do not damage the piston ring type seals at the rear end of the shaft.

- 3. Place the clutch drum/shaft onto the clutch disc pack.
- 4. Fit drift ETV 894 080 into the hole for selector fork rail for holding the locking spring and ball in place.
- 5. Fit the front cover and make sure that:
- the selector fork rail is pushed through the hole on the cover and that the rail pushes out the drift
- the PTO shaft front end bearing is pushed into its location on the cover
- the brake plate holes engage with the pins on the cover.

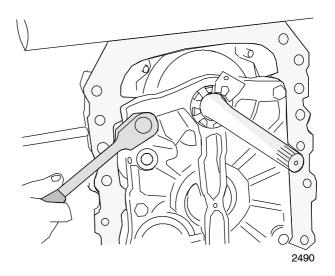


6. Tighten the cover bolts to a correct torque. Ensure that the selector fork rail locking ball and spring are in place.

Note! Two bolts on the upper and lower corner of the cover have a guide sleeve.


7. When the cover is in place, tighten the ground speed PTO shaft nut to **260 – 280 Nm** and lock it with a locking washer.

		Model	Code	Page
46. Power take-off	8. 11. 1990	6000-8750	462	5

Adjusting clutch shaft bearing clearance

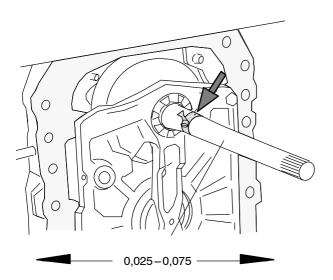

- Remove the locking plate and turn the adjusting nut on the shaft until there is no clearance in the clutch shaft taper roller bearings
- Place a dial gauge stylus against a hose clip pressed on the clutch shaft
- Unscrew the adjusting nut so that the clearance of 0,025-0,075 mm is obtained for the bearings. Rotate the shaft and press it to its extreme positions when measuring the clearance.

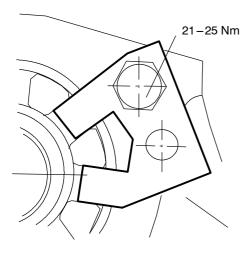


 Lock the adjusting nut with a locking plate and tighten its fixing screw to 21 – 25 Nm. Apply Loctite 242 to threads.

Note! One step of the adjusting nut corresponds to about 0,09 mm alteration on the clearance value. Note that the locking plate can be fitted in two different way which doubles the number of steps.

- 9. Fit the oil pipes and the oil distributor piece.
- 10. Fit the PTO unit (see instr. 1 G).

E. Removing selector fork and PTO shaft gears


- 1. Remove the PTO unit (see instr. 1 A).
- 2. Carry out measures shown in instruction 1B; 2-5.

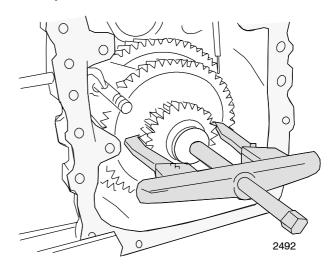

- 3. a) **Earlier version:** Unscrew the locking flange at the front end of the PTO shaft using ET 894000. Remove a spacer ring and roller bearing and pull out the roller bearing inner race with an extractor (see figure above).
- b) Later version: Release the locking washer and unscrew the locking bolt. Remove the flange and pull out the roller bearing inner race as above.

Note! Tractors without ground speed PTO: Pull out the ball bearing and remove the spacer sleeve and ring in front of the gearwheel.

4. Remove the small ground speed PTO gearwheel (if fitted) and the middle gearwheel for engine PTO 1000 r/min.

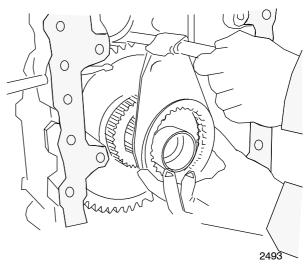

5. Pull the selector fork and its rail out from the housing. Change, if necessary, the inner selector lever which has a round – shaped end. Fit a new fork onto the rail and secure it with a locking pin.

Note! Fit the locking pin of the outer selector lever so that its split side points forwards.


Remove the larger circlip for the oil seal retainer at the PTO shaft rear end. Knock at the front end of the hollow shaft round

	1, 1, 1995	Model	Code	Page
46. Power take-off	1. 8. 1998	6000-8750	462	6

the PTO shaft and remove the PTO shaft/hollow shaft. Remove the big gearwheel from the PTO housing.


7. Check the PTO shaft seal and o-rings and change them if necessary. Check also the PTO shaft rear ball bearing.

F. Fitting gears and selector fork

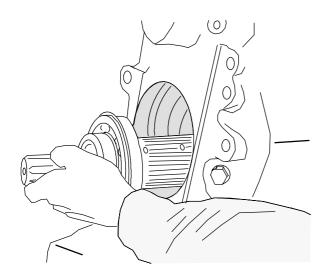

1. Push the PTO shaft/hollow shaft/ball bearing as a complete unit into the housing. Place the impulse disc onto the hollow shaft splines and fit the spacer ring in front of the disc.


Note! The impulse disc is fitted only on E-models. On other models, there are two spacer rings.

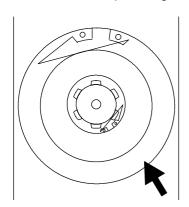

2. Fit the big gearwheel onto the shaft before the shaft is fully home. Tap at the PTO shaft rear end until the rear ball bearing is in its location fully home. Fit the seal retainer and the larger circlip.

IMPORTANT! On the latest tractors (H34332 –) there is fitted a new cassette seal for the PTO shaft, see picture on page 460/7 and fitting instruction of the cassette seal on page 462/8A.

Note! There are shims between the seal retainer and the ball bearing. The clearance between these parts is adjusted to zero. Use old shims. If necessary, the clearance can be measured by placing a dial gauge stylus against the seal retainer. Available thickness of shims; 0,10 0,15 and 0,50 mm.

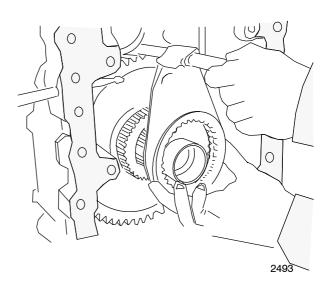


3. Fit the sliding coupler onto the fork and place the fork/rail into the housing so that the sliding coupler engages onto the teeth on the big gearwheel.

Note! Fit the selector lever round – shaped end into the hole on the rail.

4. Fit the middle gearwheel and then the small gearwheel.

Note! Tractors without the ground speed PTO: fit the spacer ring and the sleeve in front of the small gearwheel.

5. Fit the roller bearing inner race onto the shaft in front of the small gearwheel and fit the roller bearing onto the race.

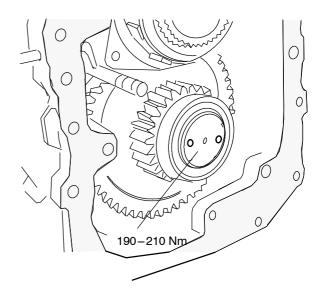

- 6. a) **Earlier version:** Fit the spacer ring in front of the bearing and tighten the locking flange to **190–210 Nm** (ET 894000). **Important:** Instructions on how to lock the locking flange, see figure 4 on page 460/7.
- 6. b) Later version: Fit the flange and tighten the locking bolt to 225 Nm and lock it with the locking washer.


Note! Tractors without the ground speed PTO: Fit the ball bearing and then the locking flange or locking bolt.

- 6. Carry out measures shown in instruction 1D.
- 7. Fit the PTO unit (see instr. 1 G).

	1.6 1999	Model	Code	Page
46. Power take-off	1. 10. 1999	6000-8950	462	7


G. Fitting PTO unit

1. Clean contact surfaces between the PTO housing and the gearbox and apply sealing compound to the surfaces.

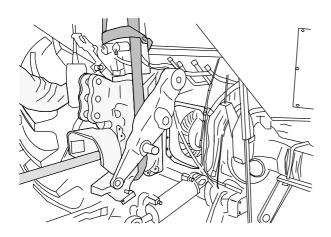


2. Push the PTO unit straight into place so that the PTO clutch shaft front end (and ground speed PTO shaft front end) engages with their splines.

Note! Before fitting the PTO unit, put the ground speed PTO shaft coupling sleeve onto the rear end of the ground speed PTO output shaft in the gearbox.

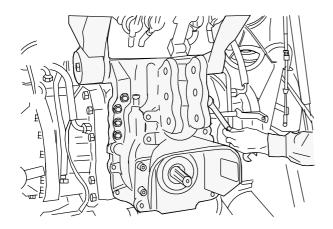

- 3. Tighten the PTO housing bolts to a correct torque. Connect the hoses to the lifting cylinders. Connect the lifting cylinder upper ends with pins to the lifting arms.
- 4. Connect the draft sensor connectors. Fit the leak oil reservoir hoses and the reservoir cap.
- Connect the pipes to the quick action couplings. Slacken, if necessary, the quick – action couplings in their bracket for easier work.

6. Fit the PTO control cable. Connect the pick—up hitch release control. Connect the lower joint of the levelling screw control rod.

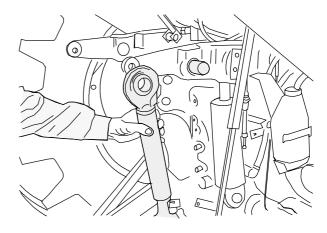

- 7. Connect the lifting link upper ends to the lifting arms. Fit the top link. Connect the pick up hitch lifting links.
- 8. Fill the transmission with oil.
- Fit the position sensor and adjust it, see page 320/6 (AC Power lift) or page 321/9 (ACB/ACD Power lifts).

Note! On E-models, connect the PTO speed sensor wires and check that the AC-III/IV unit functions properly.


Note! On HiTech models, connect the wire of the speed sensor B7. If the PTO speeds have been changed, AC V control unit must be reprogrammed (parameter files), **–J38342**, or PTO parameters (ratios) must be set in the setting mode, **J38343–**, see under code 370.

	1, 1, 1995	Model	Code	Page]
46. Power take – off	1. 8. 1998	6000-8750	462	8	


2. PTO shaft seal and cushioning valve

A. Changing PTO shaft/seal

1. Drain the oil from the transmission. Remove the PTO shaft safety cap.

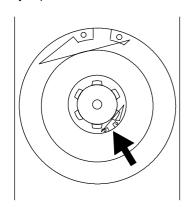

- 2. Remove the smaller circlip round the shaft and pull out the PTO shaft. Also a spacer ring releases.
- 3. Fit a new PTO shaft and check and grease the o-ring on it. Push the shaft fully home and fit the spacer ring and the circlip.

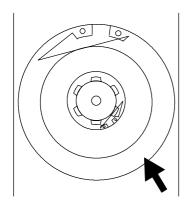

- 4. Remove the larger circlip behind the seal retainer and pry out the retainer by using two screwdrivers.
- Check/change the seal retainer o ring in the PTO housing bore.

IMPORTANT! Concerning tractors which have a new cassette seal for the PTO shaft (H34332-), see picture on page **460/7** and the cassette seal fitting instruction on page **462/8A**.

- 6. Pry out the old oil seal fit a new one with plate ETV 891 870.
- 7. Grease the seal lips and fit the seal retainer into its location. Secure the retainer with the circlip behind it.


Note! There are shims between the seal retainer and the ball bearing. Fit the same shims and fix them, if necessary, with a little grease.

8. Fill the transmission with oil and check for leaks.

B. Cushioning valve for PTO engagement

 The cushioning valve is fitted in the gearbox housing and it is accessible when the small cover on the gearbox LH side is removed.

Note! Before removing the cover, the gearbox oil must be drained.

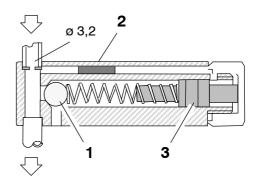

On tractors that have this cushioning valve (and the earlier servo valve block), the PTO engagement can further be made slower by fitting a Ø 2 mm restriction into the gearbox housing as follows:


- remove the servo valve block and fit the Ø 2 mm restriction into the PTO clutch pressure passage in the gearbox housing. The restriction remains a little above the gearbox housing surface
- fit the valve block and check that it does not touch the restriction, machine if needed.

Required parts:

Important! With effect from tractor serial number **660071** the cushioning valve is fitted in the new servo valve block on the LH side of the gearbox, see the next page.

C. Changing cassette seal (H34332-) of PTO shaft

Note! On the tractors, that have the ground speed PTO, the PTO shaft seal is of the earlier type. The new cassette seal can also be fitted on the earlier manufactured tractors, when the seal retainer is changed.

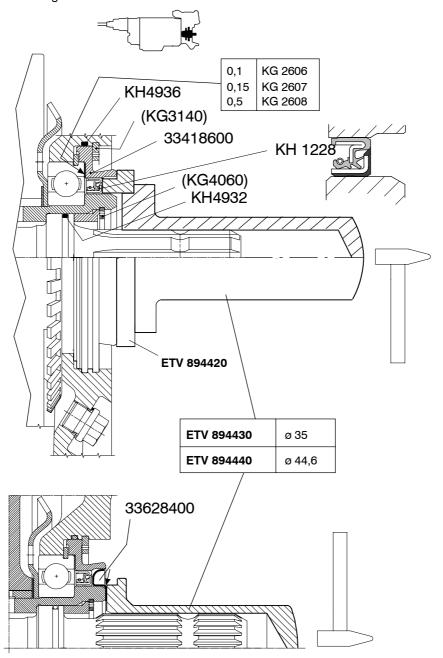

- Drain the oil from the transmission. Remove the PTO shaft protective tube. Remove the PTO shaft seal retainer large circlip and pry out the retainer with two large screwdrivers. Also the protective cup and the cassette seal are removed.
- 2. Clean the parts and the housing bore. Change, if necessary, the seal retainer o-ring and oil it.
- 3. Fit the seal retainer (use same shims between the retainer and the bearing. When necessary, the play can be measured with a dial gauge and new shims can be fitted). Fit the seal retainer large circlip.
- 4. When the seal retainer is in place, fit the cassette seal as follows:
- lubricate the seal inner and outer surfaces with oil
- tap the seal into place by using ring ETV 894420 and sleeve ETV 894430 (PTO shaft ø 35 mm) or sleeve ETV 894 440 (PTO shaft ø 44,6 mm)
- fit the seal protective cup by using one of the above mentioned sleeves

Note! It is very important, that the seal is pushed straight into its location. That is why the fitting sleeves and the ring must be used.


5. Fill the transmission housing with oil. Start the PTO and check for leaks.



	1.1.1995	Model	Code	Page
46. Power take – off	1. 11. 1998	6000-8750	462	9

PTO clutch cushioning valve with effect from tractor ser. no. 660071.


From tractor ser. no. 660071 the cushioning valve is in—built in the servo valve block on the LH side of the gearbox. The cushioning valve end plugs are fitted on the top side of the valve block, see pictures on pages 420/17A and 17B point R

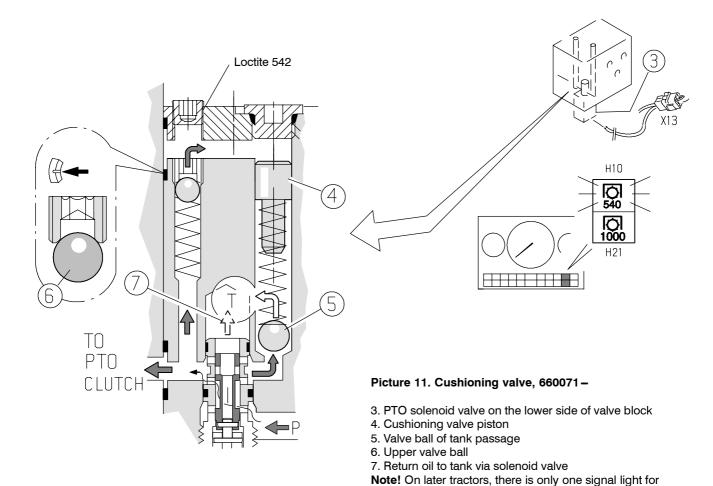

the PTO. Picture above shows the earlier fitting.

Function and modifications of this valve, see page 460/15. The valve can be dismantled by removing the plugs on the servo valve block.

 Note! On HiTech tractors (6250-8950) the PTO engagement is controlled by a proportional valve (AC V), and they have not the cushioning valve.





	1.4.1997	Model	Code	Page
46. Front PTO	1. 8. 2000	6000-8950	463	1

Contents

Technical data, 6000-8150	2
Technical data, 8350-8950	2
1. Description:	
A. Front PTO, 6000 – 8150	3
B. Front PTO, 8350 – 8950	5
2. Repair instructions, 6000–8150	
A. Maintenance	9
B. Fault tracing	10
C. Adjusting engaging time	
D. Removing front PTO / changing V – belts / changing elastic joint	11
E. Disassembling/assembling the front PTO unit	
I. Front PTO on 6250Hi – 6850Hi	13/
3. Repair instructions, 8350 – 8950	
A. Maintenance	14
B. Fault tracing	
C. Adjusting engaging time	
D. Removing PTO unit	14
E. V – belts / elastic joint	
F. Cone clutch	

Technical data, 6000-8150

NOTE! Front PTO on models 6250Hi - 6850Hi, see page 463/13A.

PTO shaft Nominal revs 1000 r/min are achieved at an engine speed of Direction of rotation of the PTO shaft (seen from the front) Max. permissible continuous loading on the crankshaft Corresponding max. front PTO output at 1000 RPM Control:	1860 r/min. anti-clockwise 400 Nm
electro-hydraulically with aid of a rocker switch in the cab.	
 wet multi-disc clutch inside the PTO housing. 	
- friction discs 9 pcs, intermediate discs 10 pcs	
- clutch pressure (separate hydraulic circuit with a pump and filter)	
– pump output	4,5 l/min
Oil cooler fitted in the hydraulic circuit.	
Lubricating oil:	
– oil volume	4,0 litres
oil quality (same oil as in the tractor transmission)	10W30 GL4
Tightening torques	

Technical data, 8350-8950

Front power lift attaching bolts, see page 910/26.

Front power lift attaching bolts, see page 910/26.

PTO shaft	2040 r/min (8350Hi: 1767 r/min). anti – clockwise *) 400 Nm
- electro-hydraulically with an aid of a rocker switch in the cab. - dry cone clutch on the rear face of the PTO housing	
- clutch pressure from the tractor low hydraulic circuit - pressure from the solenoid valve into the cone clutch - the system has a separate hydraulic pump for the cooling circuit - system is equipped with an oil cooler Lubricating oil:	
- oil amount oil quality, Shell Tivela WB Tightening torques	2,5 litres SAE90
Attaching bolts (4 pcs) of the front PTO bracket on the front face of the engine oil sump Front PTO attaching bolts (4 pcs) to the bracket front face	140 Nm 140 Nm

^{*)} Change of rotation direction is possible (8450-8950) by removing one intermediate gear and by fitting another gear "in the middle" between the upper and lower shaft.

1. Description

A. Front PTO on 6000-8150 tractors

The front PTO is an alternative equipment. The front power lift linkage is also fitted together with the front PTO.


The front PTO unit is attached in place of the tractor front piece. The front PTO unit is powered via a drive shaft in the front end of the engine crank shaft. The PTO unit has its own hydraulic circuit with a pump, and is not connected to the tractor hydraulic system.

On tractors with the front PTO, the engine radiator with its cowl and the fan have been modified as well as, the fan belt

pulleys of the crankshaft (the fan ratio has been changed on 8150 tractor, and also the belt pulleys and v-belts).

The front PTO is engaged and disengaged with the aid of a rocker switch in the cab. In the cab lever console, on the PTO wire loom, there is an electric box, which creates a progressive engagement of the front PTO.

In the PTO housing, there is a hydraulic multi-disc clutch, into which pressure oil is conducted via a solenoid valve (proportional valve) on the front side of the PTO unit.

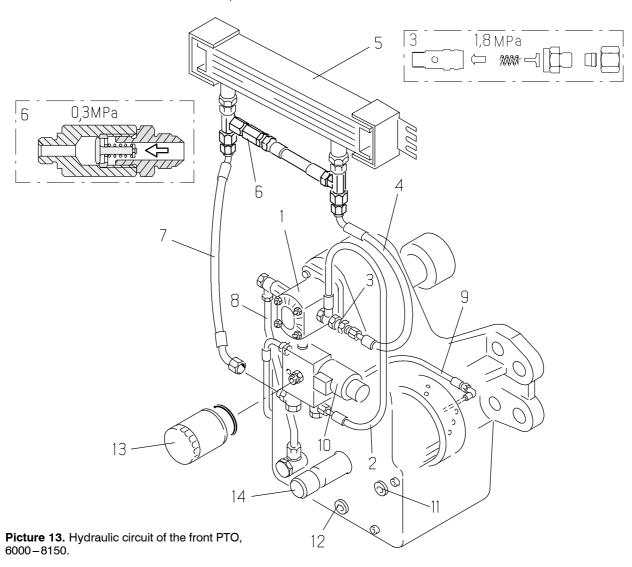

- 1. Gear wheel pump (output 4,5 l/min)
- 2. Pressure oil (1,8 MPa) to the solenoid valve
- 3. Pressure valve, 1,8 MPa.
- 4. Oil into cooler
- 5. Oil cooler
- 6. Cooler by pass valve, 0,3 MPa
- 7. Oil from cooler
- 8. Suction pipe
- 9. Oil pressure into multi-disc clutch (1,8 MPa)
- 10. Solenoid valve
- 11. Oil filling plug/oil level (oil amount 4 l)
- 12. Oil draining plug
- 13. Replaceable oil filter
- 14. PTO shaft

Model


6000-8150


Code


463

4

Page

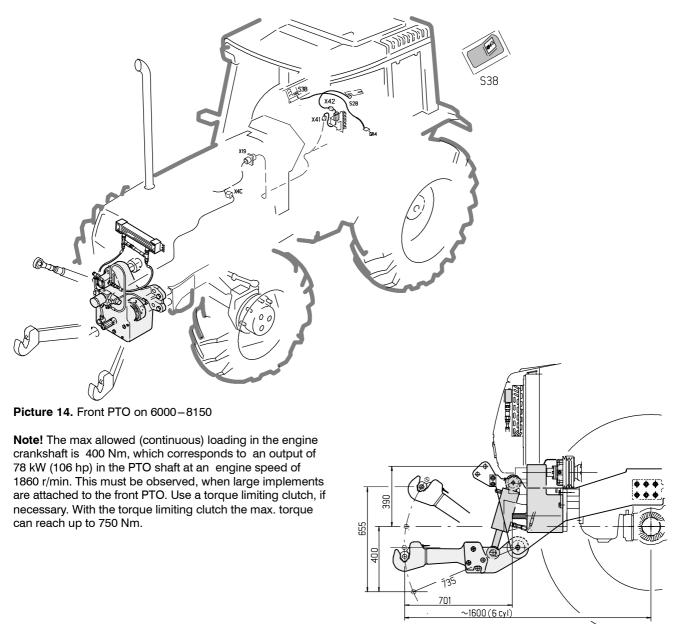

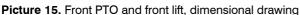

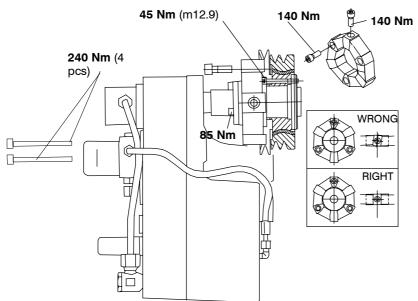

The PTO unit has been fastened to the engine oil sump front surface with four bolts. There are spacer sleeves of 80 mm (6-cyl. engines) between the oil sump and the PTO unit.


There is an elastic rubber joint between the crankshaft front end and the front PTO. On the 4-cylinder engines (6000-6800), the elastic joint is placed inside the belt pulley.

Note! Before removing the front PTO unit, the engine coolant should be drained and the engine radiator and its cowl must be removed.

Kuva 16. Etukoneisto 6000-8150


46. Front PTO		Model	Code	Page
	1. 4. 1997	8450-8750	463	5


B. Front PTO on 8450-8750 tractors

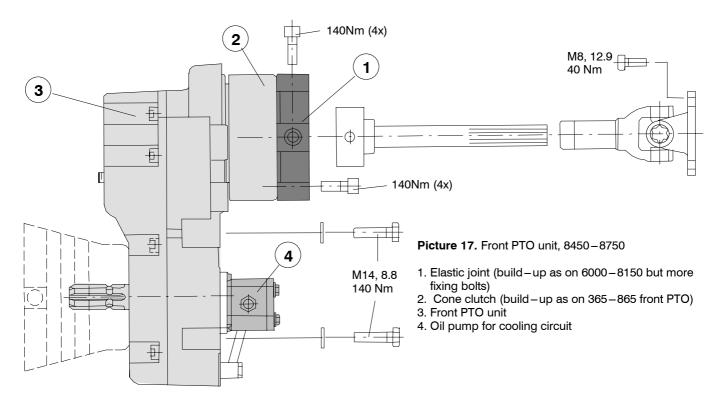

The attaching bracket of the front PTO has been fastened to the oil sump front face in place of the standard front piece. The front PTO is attached to the front part of the bracket with aid of four bolts.

Note! The max allowed (continuous) loading in the engine crankshaft is 400 Nm, which corresponds to an output of 85 kW (116 hp) in the PTO shaft at an engine speed of 2040 r/min. This must be observed, when large implements are attached to the front PTO. Use a torque limiting clutch, if necessary. With the torque limiting clutch the max. torque can reach up to 820 Nm on 8450–8750 tractors.

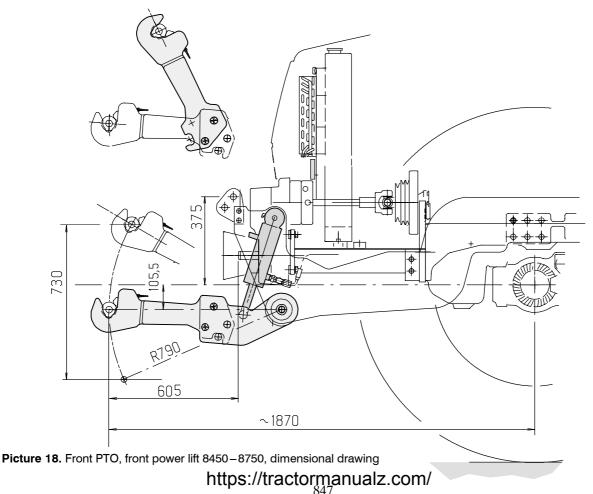

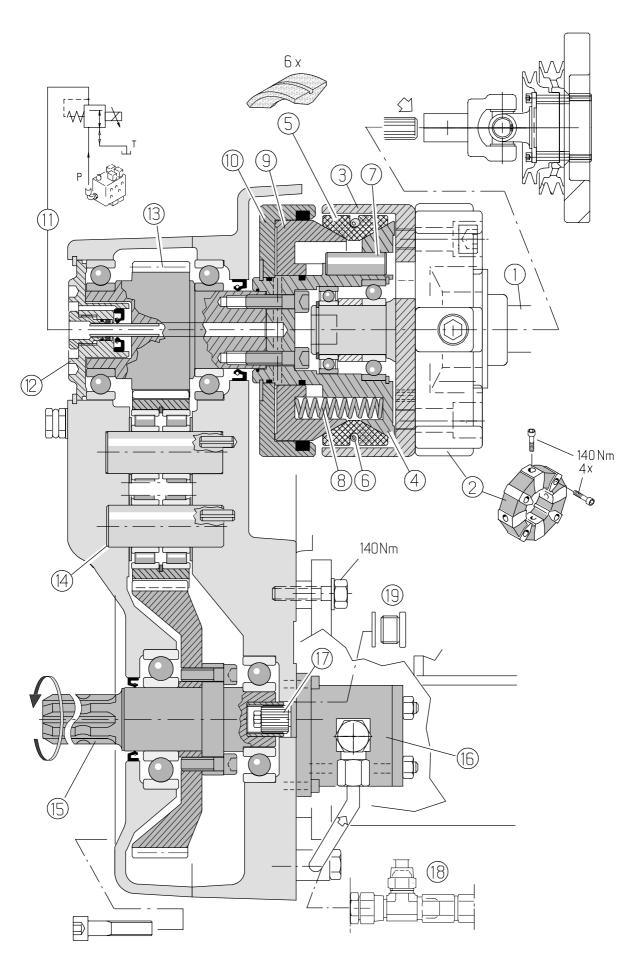


Picture 19. Front PTO unit cross section, 8450-8750

		Model	Code	Page
46. Front PTO	1. 4. 1997	8450-8750	463	7

Picture 19. Cross section

- 1. Drive shaft
- 2. Elastic joint
- 3. Clutch drum
- 4. Hub
- 5. Friction piece (6 pcs)
- 6. Spring
- 7. Clutch guide pin (3 pcs)
- 8. Return spring (6 pcs)
- 9. Piston
- 10. Clutch cylinder
- 11. Pressure oil into clutch (from tractor low pressure circuit)
- 12. Oil inlet cover
- 13. Shaft
- 14. Intermediate gear wheel
- 15. PTO shaft
- 16. Pump (for cooling circuit)
- 17. Pump drive sleeve
- 18. Oil draining
- 19. Oil level


•

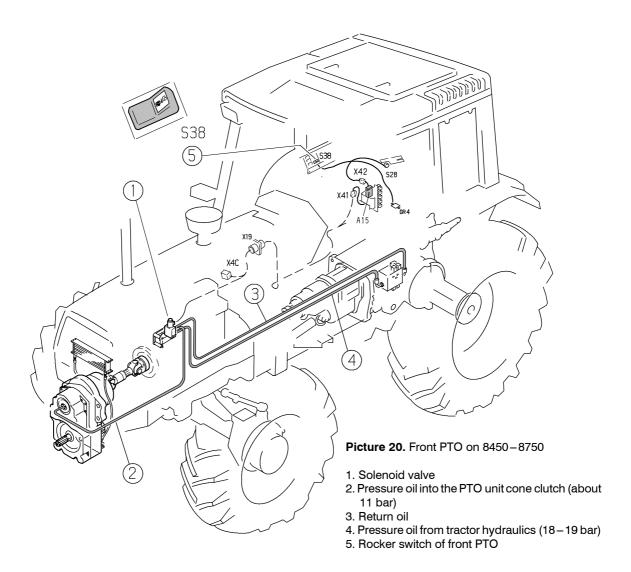

On 8450 – 8750 tractors the front PTO clutch pressure is maintained by the low pressure circuit of the tractor hydraulic system.

Solenoid valve (1), which is located in the engine compartment, directs the oil pressure to the front PTO clutch when the switch (5) is turned. The electronic box (A15) is the same and in the same place as on 6000–8150 tractors.

Note! The electric systems of the front PTO on 6000–8750 tractors are similar, but the wire lengths are different, since the solenoid valves are fitted in the different places on 6000–8150 and 8450–8750 tractors.

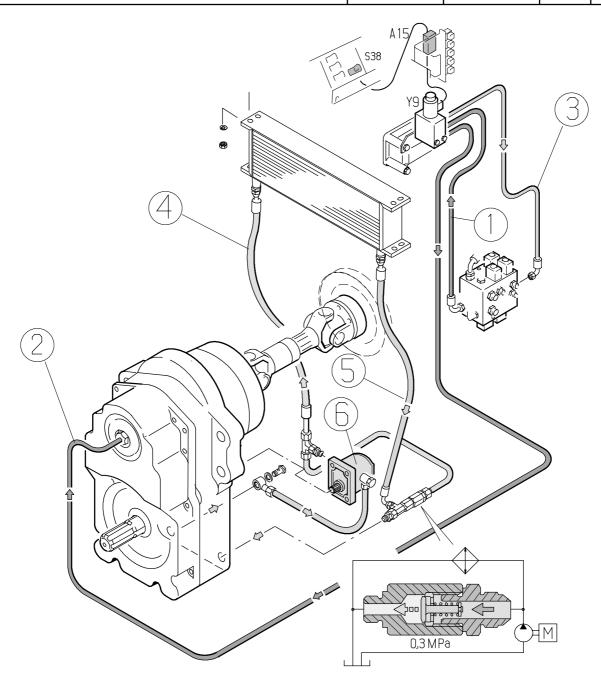

Picture 21. Hydraulic system of the front PTO, 8450–8750.

- 1. Pressure oil from the tractor hydraulics (1,8-1,9 MPa)
- Clutch pressure into the PTO unit cone clutch (about 1,1 MPa)
- 3. Return oil into the tractor hydraulic system
- 4. Lubricating oil into the oil cooler
- 5. Return oil from the oil cooler
- Oil pump for the cooling circuit (pump is different as on 6000–8150 tractors)

Note! The oil cooler by – pass valve, 0,3 MPa, is the same as on front PTO 6000 – 8150. The oil cooler is different as on 6000 – 8150 tractors.

2. Repair instructions, front PTO on 6000-8150

A. Maintenance (also 8350-8950)


- 1. All front PTO fixing bolts should be retightened after the first 100 running hours.
- 2. Check occasionally for leaks, change leaking parts.
- 3. 8350 8950: grease the drive shaft universal joints nipples at intervals of 500 running hours.
- 4. 6000-8150: Change oil and filter at intervals of 500 running hours (clean the filter on 6250-6850, Kxxxxx-). 8350-8950: Check oil level at intervals of 500 running hours, top up if needed.

Oil amount and oil quality:

- 6000-8150: 4 litres SAE 10W/30 GL4 oil.
- 6250Hi-6850Hi: 2,6 litres, Shell Donax TX.
- 8350-8950: 2,5 litres SAE90 oil, Shell Tivela WB.

Draining/level plugs:

- 6000-8150, see picture 13 on page 463/3
- 8350-8950, see the next picture
- 6250Hi-6850Hi, see page 463/13B.
- 5. When necessary, clean the oil cooler to prevent overheating of the front PTO.
- 6. At every 500 running hours, check the rubber coupling for breakage or tears and replace if necessary.

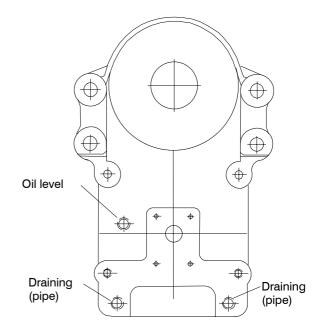

46. Front PTO

| Model | Code | Page | 10

F22 (538) Wire colours Ru=brown \otimes Si=blue Va=white Ke=yellow 90V1 Kevi=Yellowgreen KEVI ٨ \mathbb{R} S 18951 2 GR4

B. Fault tracing, **6000–8150** (also 8450–8750)

If the PTO shaft does not start to rotate, although the switch S38 is turned to the starting position, the fault can lie in:

- fuse F22 in the fuse box. Check/change.
- solenoid valve (resistance should be 5,5-7,5 ohms) or in its wires at which time the solenoid valve does not get voltage in the running position (check, if voltage (12 V) comes to the valve connector pins. If not, check the switch S38 and its wiring).
- pump. Remove the pump and check the splined drive sleeve. 6000-8150: Open the pressure valve and clean it and check the spring and the valve spindle sealing surface). 8450-8750: assure that the pressure of 1,8 MPa is feed into the solenoid valve and that a pressure of 1,1 MPa is fed into the cone clutch.
- worn clutch discs or in leaking piston or solenoid valve seals (the clutch can slip).
- too little oil in the PTO housing. Check/add.

Note! If the front PTO does not start progressively, the fault can lie in the electric box A15 in the cab lever console.

Note! If the front PTO overheats, check the cleanliness of the oil cooler, condition of the pump, oil amount and condition of the by pass valve and the pressure maintaining valve on 6000 – 8150

F22 = fuse in the fuse box

S38 = rocker switch on the lever console front part (FRONT PTO)

A15 = electric box (fastened on the relay bracket) in the lever console


Y9 = solenoid valve on the PTO unit front surface (6000 – 8150) or in the engine compartment (8450 – 8750)

Connectors:

X1/1 in the fuse box X42/1, 2, 3 in the cab lever console X41/1, 2 in the lever console X19/34, 35 socket in the cab front wall on the RH side X4C/8,9 in the engine compartment front part GR 4 earthing point in the lever console rear part Solenoid valve Y9 pins have connector.

C. Adjusting engagement, 6000-8150

(also 8450-8750)

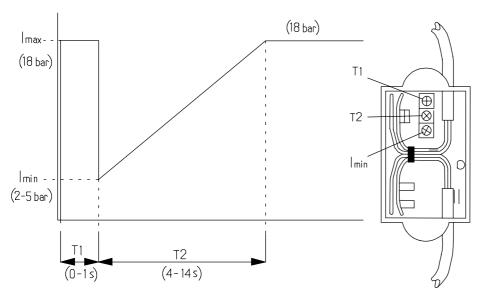

T1 = Clutch filling time T2 = Engaging time I min = Start pressure

The values above can be adjusted by turning the adjusting screws in the electric box A15.

Note! The adjustment has been done in the factory and readjustment is normally unnecessary. Long engaging time causes excessive clutch wear.

		Model	Code	Page
46. Front PTO	1. 4. 1997	6000-8150	463	11


D. Removing the front PTO/changing v-belts/changing elastic joint, 6000-8150

Removing the front PTO unit:

- 1. Before removing the front PTO unit, the engine coolant should be drained and the engine radiator and its cowl must be removed. At the same time must be released the oil cooler and the air conditioner condenser and the drier reservoir, if fitted (do not disconnect the hoses).
- 2. Unscrew the bolts of the drive shaft flange joint in front of the elastic joint (bolts A in the picture below). Unscrew the PTO unit four fixing bolts, after which the unit can be removed.

Note! If necessary, remove the front lift top link bracket. It is possible to remove the front housing half while the rest of the unit is attached to the tractor.

Changing v-belts:

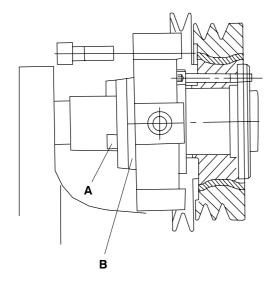

If the engine V-belts have to be changed on 6000-8150 tractors, which are equipped with the front PTO, unscrew the flange joint (A) in front of the elastic joint and then remove the intermediate ring (B), after which there is enough space to remove/fit the belts.

Note! On 6000 – 6800 tractors (4-cyl.) the front PTO unit must be inclined a little, if the tractors have three belt pulleys.

Changing elastic joint:


Before work the front PTO unit must be removed. When fitting the elastic joint (140 Nm, 3+3 pcs (4-cyl), 4+4 pcs (6-cyl.)) apply a little grease onto the lower surfaces of the bolt heads (see also picture 16 on page 463/4).

6000-8150

Code **463**

12

Page

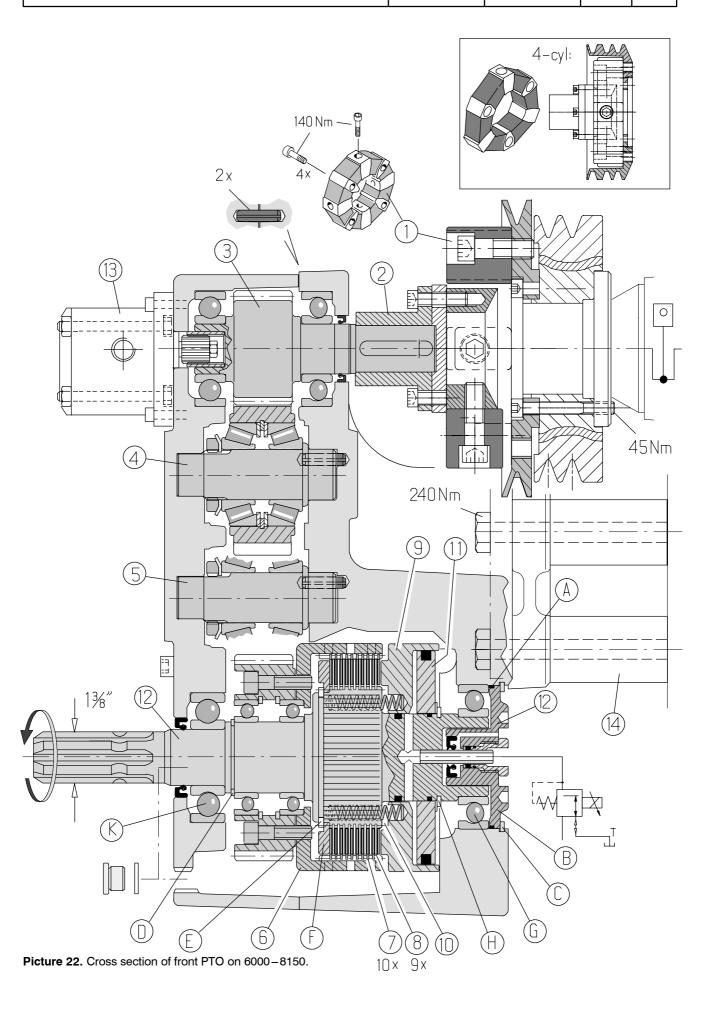

		Model	Code	Page
46. Front PTO	1. 4. 1997	6000-8150	463	13

Picture 22. Cross section.

- 1. Elastic joint.
- 2. Clutch inner part
- 3. Input shaft
- 4. 1. intermediate shaft
- 5. 2. intermediate shaft
- 6. Outer casing of the clutch
- 7. Intermediate discs (10 pcs)
- 8. Friction discs (9 pcs)
- 9. Clutch piston
- 10. Pressure springs (12 pcs)
- 11. Cylinder end
- 12. PTO shaft
- 13. Pump (Casappa)
- 14. Spacer sleeves (4 pcs). Not 4-cyl. engines

E. Reconditioning multi-disc clutch/ changing PTO shaft (detached unit)

Disassembly

- 1. Drain PTO unit oil. Disconnect the oil hoses and pipes. Remove the oil pump (hexagonal socket head 5 mm, 4 pcs) and the solenoid valve.
- 2. Unscrew the fixing bolts of the housing halves.
- 3. Tap with a plastic mallet at the PTO shaft rear end flange (B) and at the upper drive shaft rear end, until an opening appears between the housing halves.
- 4. Place the housing horizontally with the PTO shaft end upwards and pry with two fitting levers the foremost housing half loose from the rearmost half.

Note! This work requires a little force because of the tension pins and bearing tolerances.

- 5. Tap out the PTO shaft/multi-disc clutch.
- 6. Remove bearing (G). Compress with a hydraulic press the piston springs and release circlip (H) and remove the support ring under it.

Note! When using the hydraulic press, the pressure sleeve should have a hole on one side, through which the circlip (H) can be released.

- 7. Remove the piston, springs and the clutch discs.
- 8. If the PTO shaft has to be changed, remove the gear wheel/clutch drum by removing bearing (K) and circlip (D) and by pulling the drum off with an extractor. Place the support ring (F) and the circlip (E) onto a new shaft. When refitting the drum, tap it onto to the new shaft with a suitable sleeve. Refit the circlip (D) and the bearing (K) and mount the seal rings onto the new shaft.
- 9. Fit new clutch discs (friction discs, 9 off, and steel discs 10 off outermost) and change, if necessary, the piston seals.
- During reassembly, compress the piston springs and refit the support ring and the circlip (H). Refit the bearing (G).

Assembly

- 11. Check/change, if needed, the seal rings of flange (B). Fit o-ring (A) onto the flange (B) and tap the flange into place. Fit the flange circlip (C). Ensure that the o-ring (A) is situated correctly in place.
- 12. Position the rearmost housing half horizontally on a table and tap the PTO shaft/multi-disc clutch into the housing so that the rear bearing (G) is pushed into the bearing location against the flange (B).
- 13. Place the intermediate shafts and the drive shaft together with their bearings into the rearmost housing half (if loosened).
- 14. Clean the mating surfaces of both housing halves and fit a new paper gasket (thickness 0,4 mm).
- 15. Position the foremost housing half on the other half and tap the foremost housing half until the bearings are pushed into their locations and the mating surfaces touch each others.
- 16. Tighten the housing half bolts evenly to the correct torque.
- 17. Refit the oil pump, the solenoid valve and reconnect all oil pipes.
- 18. Fill the unit with 4 litres transmission oil (oil level must be at the level of the filling hole lower edge).

F. Intermediate shafts

If these shafts or their bearings are to be changed, tighten the shaft nuts so that the bearings have not clearance and secure the nuts with lock washers.

G. Oil seals

The PTO shaft oil seal can be changed without removing the PTO housing. Fit a new seal by using a suitable sleeve. Fit the protective ring and the PTO shaft guard, if removed.

If the upper drive shaft oil seal has to be changed, the PTO unit must be removed.


Note! If the front PTO is disassembled and repaired, it is recommended that the oil seals are changed.

H. Others

The pump drive sleeve in the front end of the upper shaft has a press-fit. In addition, locking fluid has been used.

	M	lodel	Code	Page
46. Front PTO		6250Hi 6850Hi	463	13A

I. Front PTO on 6250Hi-6850Hi

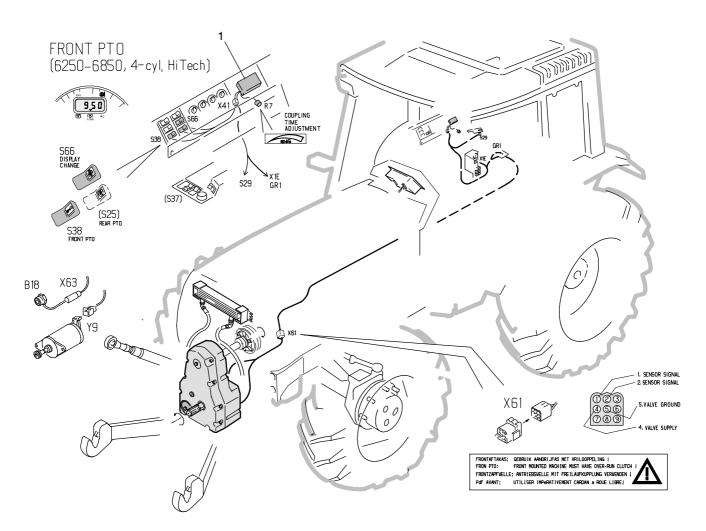

Picture 23. Front PTO on 6250Hi-6850Hi.

The front PTO control unit (1) is placed in the switch console and there is a separate adjusting knob to adjust the PTO engaging time.


The PTO is engaged/disengaged with switch S38. In the front PTO unit there is a proportional valve Y9.

Note! The max allowed (continuous) loading in the engine crankshaft is 400 Nm, which corresponds to an output of 87 kW (116 hp) in the PTO shaft at an engine speed of 2080 r/min (PTO speed 1000 r/min. This must be observed, when large implements are attached to the front PTO. Use a torque limiting clutch, if necessary. With the torque limiting clutch the max. torque can reach up to 830 Nm.

Maintenance

- Oil quantity in the front PTO is 2,6 litres
- Oil quality Shell Donax TX
- Change oil and clean suction filter at every 500 running hours.

463

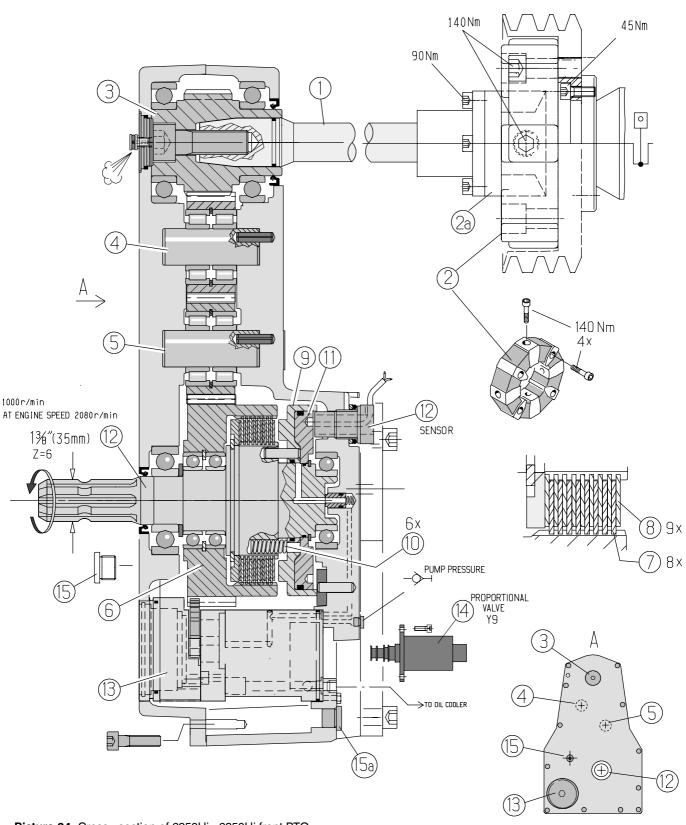

Picture 24. Cross-section of 6250Hi-6850Hi front PTO.

- 1. Drive shaft
- 2. Rubber coupling
- 2a. Intermediate ring
- 3. Drive gear
- 4. 1. intermediate shaft
- 5. 2. intermediate shaft
- 6. Clutch drum
- 7. Steel disc (8 pcs)
- 8. Friction disc (9 pcs)

- 9. Piston
- 10. Return springs (6 pcs)
- 11. Cylinder end flange
- 12. PTO unit
- 13. Pump unit
- 14. 3/2 proportional valve15. Filling/checking plug
- 15a. Draining plug

		Model	Code	Page
46. Front PTO	1. 8. 2000	6250Hi 6850Hi	463	13C

Repair instructions:

Ref. numbers in the instructions refer to picture 24.

A. Changing v-belts:

- unscrew drive flange bolts (90 Nm) in front of the rubber coupling 2
- remove spacer ring 2a
- remove v-belts through the gab

B. Removing / fitting the PTO unit:

Removal:

- unscrew drive flange bolts (90 Nm) in front of the rubber coupling 2
- disconnect oil cooler hoses
- disconnect proportional valve wires.
- drain oil (if necessary)
- unscrew PTO unit fixing bolts.

Fitting:

- fit the unit into place and guide the drive shaft and hoses into places.
- tighten four fixing bolts to 150 Nm
- connect drive flange (90 Nm)
- connect oil hoses.
- connect eletric wires
- fill the unit with oil (if drained)

C. Changing clutch discs / PTO shaft

- detach the PTO unit. Drain oil.
- disconnect the drive shaft tapered joint as follows:

Remove the breather flange on upper front face. Prevent shaft from rotating and unscrew the joint bolt. Screw in a longer bolt M22x1,5 and hit against the end of the bolt until the joint releases

- place the PTO unit, PTO shaft upwards, on a suitable ground, unscrew housing halves bolts and split the housing.
- take the PTO shaft/clutch out of the houisng.
- compress the piston return springs with e.g. three small glue clamps and remove the piston snap ring. Remove the piston and the clutch disc pack
- if the PTO shaft is changed, remove parts on the shaft (see picture 24), change the shaft and refit the parts on the new shaft.
- change clutch discs and oil them. Fit the piston, compress the springs and fit the snap ring.
- position all parts into the housing

To be observed during assembling:

- before connecting the housing halves, check that the intermediate shafts are in bottom and the tension pins in their borings
- use new 0,4 mm paper gasket between housing halves
- do not damage the PTO shaft oil seal when fitting the upper housinhg half
- tap the upper housing half until the contact surfaces are against each others.
- tighten progressively the housing halves bolts
- Connect the drive shaft tapered joint as follows:

Clean well the tapered surfaces. Apply suitable Loctite locking fluid on the tapered surface. Prevent the drive shaft from rotating and tighten the M22 bolt to **550 Nm**. Fit the breather flange in front of the bolt.

Fill the PTO with oil.

D. Changing outer oil seals

PTO shaft seal:


- the seal can be changed from front without removing the PTO unit. Pry out the damaged seal in a suitable way. Do not damage the shaft sealing surface.
- oil the lips of as new seal and fit it by using a suitable sleeve or the old seal. Do not damage the new seal on the shaft splines

Drive shaft seal:

- remove the front PTO unit.
- remove the drive flange on the drive shaft front end and pry out the seal. Do not damage the sealing surface
- oil the lips of a new seal and fit it
- refit the PTO unit

463

Page **13D**

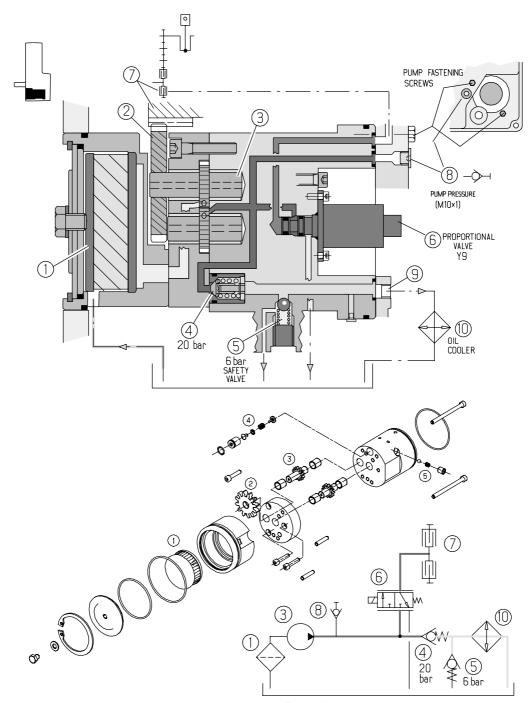

Picture 25. 6250Hi-6850Hi tractors' oil pump in the front PTO.

- 1. Suction filter
- 2. Drive gear
- 3. Gear wheel pump
- 4. Pressure-limiting valve (20 bar), clutch pressure
- 5. Safety valve (6 bar)
- 6. 3/2 proportional valve
- 7. PTO multi-disc clutch
- 8. Pressure-test point
- 9. Into oil cooler
- 10. Oil cooler

The pump produces the clutch engaging pressure (20 bar) and circulates oil through the oil cooler.

Removing pump:

- drain oil in PTO unit
- remove the suction filter flange snap ring (slacken first the centre bolt).
- remove the flange and filter
- disconnect prop. valve wires
- unscrew two pump fixing screws (see picture above)
- remove the pump from front


Note! The pump can be dismantled by opening the assembling screws. The prop. valve, pressure—limiting valve (20 bar) and safety valve (6 bar) can be removed

To be observed when fitting the pump:

- ensure that there are small o-rings round the pump pressure drillings. Fix them with a little grease.
- check all sealing rings.

13E

Page

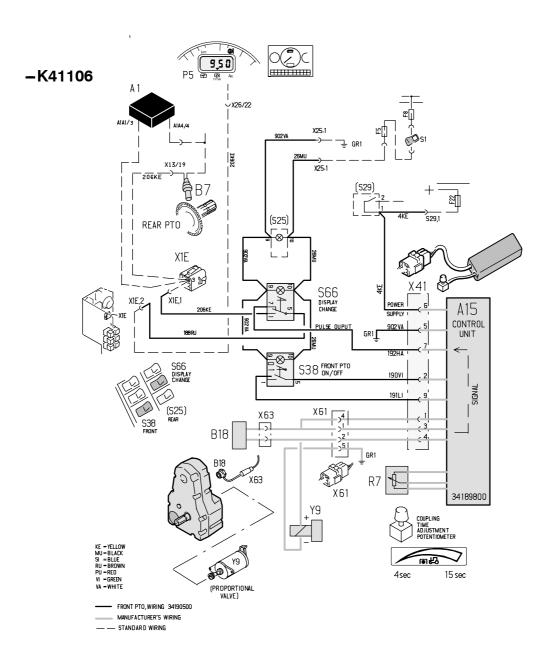

Picture 26. Wiring diagram of front PTO, -K41106, 6250Hi - 6850Hi

When the PTO speed has been selected in the upper display of Agrodata-instrument (arrow at PTO symbole), the display shows either front PTO or rear PTO rotation speed depending on use of rocker switch **S66**:


With potentiometer R7 can be adjusted stepplessly the engaging time of the front PTO (between 4–15 seconds). The engagging time is independet of loading.

Page 13F

13

K41107-

AC 5.2 FRONT PTO, WIRING (4-cyl HiTech, K41107-)

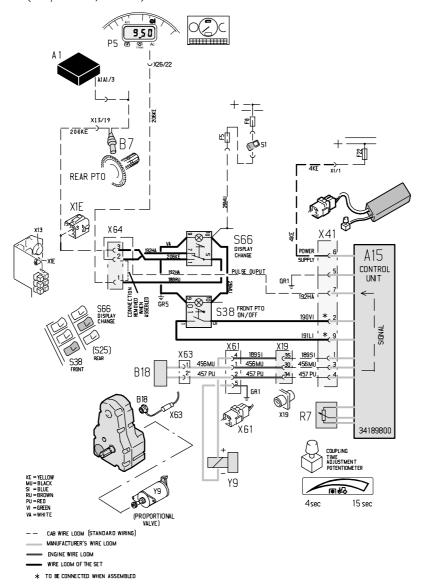

		Model	Code	Page
46. Front PTO	1. 4. 1997	8450-8750	463	14

3. Front PTO 8450-8750, repair instructions

A. Maintenance

See page 463/9.

B. Fault tracing

See page 463/10.

C. Adjusting engaging time

See page 463/10.

D. Removing front PTO unit

- Release the clutch pressure hose on the unit front face
- Release the oil cooler hoses (oil draining) and remove the oil cooler
- Unscrew the elastic joint bolts, which are fitted radially
- Remove the top link bracket of the front lift
- unscrew the front unit fixing bolts (4 pcs)

Note! It is possible to remove separately the PTO housing front half while the unit is attached to the tractor, at which time the PTO shaft, gear wheels and bearings are accessible. There is a paper gasket with thickness of 0,4 mm between the housing halves.

E. Changing V-belts / elastic joint

V-belts:

- Remove the top link bracket of the front lift.
- Remove the oil cooler and its return hose
- Unscrew the elastic joint bolts, which are fitted radially
- Unscrew the PTO unit two lower fixing bolts and fit in place screws with length of 100mm (M14)
- Unscrew the two upper fixing boltsPull the unit forwards along the lower bolts
- Pull the drive shaft front end out of its spline joint
- Pass the V-belts onto the shaft through the hole on the


Note! Refitting is done in the reverse order. In order to make the refitting easier, push the drive shaft front end into the rear end splined joint before fitting the unit

Note! In addition the viscous fan must be detached on the coolant pump side and possible air compressor V-belt should be slackened.

Elastic joint:

Before changing work, the front PTO unit must be removed. When refitting the rubber coupling, tighten the 4 radial and 4 axial bolts to a torque of 140 Nm. Apply a little grease onto the bolt head lower surfaces. (also see picture 16 on page 463/4).

F. Cone clutch

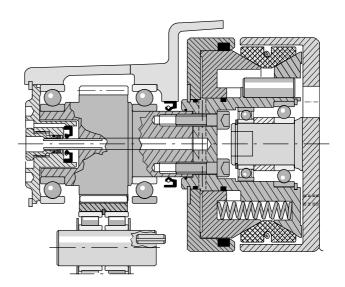

Before the cone clutch can be dismantled the PTO unit must be removed.

The cone clutch is dismantled as follows:

- remove the elastic joint
- release the clutch bearing circlip through the holes in the clutch drum end
- pull out the drum with aid of puller screws (M10) after which the friction pieces are accessible. The bearings loosen when the clutch drum is pulled out.
- If the clutch piston seals or the upper shaft oil seal have to be changed, unscrew the clutch hub six bolts, after which the seals can be changed.

G. Others

The PTO shaft oil seal as well as the upper shaft flange seals can be changed without removing the front PTO or the PTO shaft. The pump drive sleeve in the front end of the PTO shaft has a press-fit. In addition, locking fluid has been used.

HI SHIFT, FITTING INSTRUCTION HI SHIFT, EINBAUANLEITUNG

30.04.1997

Model/Modell

Code **49.1** Page /Seite 1 (12)

13.06.1997 | 60

6000-8750

•

HiShift A33277000

HiShift reduces the use of the clutch pedal to minimum

HiShift can be fitted on the tractors, which have an hydraulically controlled clutch release mechanism. With effect from tractor ser. no. G10101 all cabs have readiness for HiShif (the valve bracket and a prepared hole for the valve, the support of the clutch pedal axle and the limiters have already been fitted).

FITTING:

- Remove the engine hood plates. Remove the battery.
- If the battery is fitted lengthwise, remove also the protective plate behind the battery.
- Remove the instruments. Remove the clutch pedal power assistance and the pedal and the clutch master cylinder.
- *) Up to tractor number G10100:

 Remove the spindle of the limiter for the clutch pedal upper position and the spring (see picture C).
 - Detach switches S9 and S24 (if fitted).
- *) Disconnect the wire of the LH side side light (can be damaged during welding).
- *) Mark places for holes for the valve and the wire loom onto the cab front wall, see picture A.
- *) Mark also a place for the adjusting hole onto the LH side of the steering wheel console, see picture B
- *) Cut the marked holes. Cut the lower part of the valve hole so that the pipe for the limiter of the pedal upper position is removed.
- *) Mark a place for the valve bracket and weld it into place. Weld the pedal axle support into place according to picture C (the hole of the upper position limiter screw must be in the middle of the opening).
 - Protect other parts against welding splashes and fire risk. Paint the welded points and the edges of the holes.
- Fit the valve onto the bracket, seal joints with silicone mass. Fit a new clutch pedal and a limiter screw for the upper position.
 Fasten the pusher to the pedal (parts 11-16, picture G) and adjust its clearance with aid of the upper position limiter screw so that the pusher is free (ref. 6 in picture C) and the clearance to the piston hole edges is min. 1 mm.
- *) Up to tractor number G10100: Fit a new lower position limiter of the pedal (parts 25-29, picture G) into place. Remove the earlier lower position limiter by sawing it.
- Open the cab floor mat on the RH side.
 Detach the plastic console of the mudguard and the gear levers, the side panel and the switch panel.

HiShift verringert den Gebrauch des Kupplungspedals auf ein Minimum.

Mit HiShift können alle Traktoren ausgerüstet werden, die über einen hydraulisch gesteuerten Kupplungsausrückmechanismus verfügen. Ab der Traktor-Serien-Nr. G10101 sind alle Traktoren für den HiShift-Einbau vorbereitet (die Ventilhalterung und eine entsprechende Öffnung für das Ventil sowie der Träger für die Kupplungspedalachse und die Begrenzer sind bereits angebracht).

EINBAU:

- Entfernen der seitlichen Motorraumabdeckungen. Ausbauen der Batterie. Wenn die Batterie längs eingebaut ist, muß auch die Schutzplatte hinter der Batterie ausgebaut werden.
- Ausbauen der Instrumente. Entfernen der mech. Servo-Kupplungsunterstützung, des Pedals und des Kupplungshauptzylinders.
- *) Ab der Traktor-Nr. G10101: Entfernen der Spindel und der Feder des Begrenzers für die obere Kuppllungsposition (siehe Bild C). Abklemmen der Schalter S9 und S24 (falls montiert).
- *) Abklemmen des Kabels der Beleuchtungseinheit auf der linken Seite (kann während des Schweißens beschädigt werden).
- *) Kennzeichen der Öffnungen für das Ventil und den Kabelstrang an der Frontwand der Kabine, siehe Bild A.
- *) Ebenso die Position der Einstellöffnung auf der linken Seite der Lenkradkonsole kennzeichnen, siehe Bild 3.
- *) Ausschneiden der markierten Öffnungen. Den unteren Teil der Ventilöffnung so auschneiden, daß das bisherige Rohr für den Begrenzer der oberen Pedalposition entfernt wird.
- *) Markieren der Position für die Ventilhalterung und diese dann an die entsprechende Stelle anschweißen. Anschweißen des Trägers für die Pedalachse gemäß Bild C (das Loch für die Einstellschraube der oberen Pedalposition muß mittig zur Öffnung für das Ventil liegen).
- Das Ventil an der Halterung befestigen und die Fugen mit Silikon abdichten. Ein neues Kupplungspedal und eine Begrenzungsschraube für die obere Pedalposition montieren.
 Den Ventilschieber am Pedal befestigen (Teile 11-16, Bild G) und mit Hilfe der Begrenzungsschraube für die obere Pedalposition so einstellen, daß der Schieber frei beweglich ist (Punkt 6 in Bild C) und das Spiel zu den Kanten der Kolbenbohrungen mindestens 1 mm beträgt.
- *) Ab der Traktor-Nr. G10101: Anbringen eines neuen Begrenzers für die untere Pedalposition (Teile 25-29, Bild G) an die entsprechende Stelle. Den alten Begrenzer durch Absägen entfernen.
- Die Fußbodenmatte auf der rechten Seite lösen. Entfernen der Plastikkonsole des Kotflügels sowie der seitlichen Armaturentafel und der Schalterleiste.

HI SHIFT,	FITTING INSTRUCTION
HI SHIFT,	EINBAUANLEITUNG

30.04.1997 13.06.1997

Model/ Modell 6000 – 8750

Code **49.1**

Page /Seite 2(12)

 Remove the gear level knobs and fit new ones (picture E). Fit the control buttons onto the knobs, connect the wires to connector S45, see picture E.

 Fit and connect the wire loom into place and fasten it with binds to the cab wire loom (picture E).

Fit diodes V5 onto the wire loom.

 HiShift wire loom connectors X38 (supply) and X36 (earthing of the slower engagement) must be connected (depending on the tractor number) according to pictures D.1 and D.2.

Note! If the tractor is not equipped with Agrodata—instrument, a rocker switch for the earthing of the slower engagement (relay K24) must be fitted on the RH side of the instrument. Current to the rocker switch lamp is drawn from connector nr 10 of the light switch S1 (to this connector comes brown wire no. 15).

On the ACIV-tractors, this earthing must be done according to picture D.3.

Note (ACIV)! — parts of the earth signal do not belong to HiSHift series, but they must be ordered separately, see parts catalogue.

The speed limit must be programmed again (10 kmph —> 4 kmph) see Workshop Manual.

- Make a Ø 38 mm hole through the gearbox sound insulation at the hose union of the steering system return oil pipe (picture F).
- Remove the pressure hose to the valve block. (Note! Tractors with the brake valve: remove the pressure hose from the brake valve, picture F.2). Remove the hose connector from the valve block and fit a new connector. Pass the hydraulic hoses into place according to picture between the sound insulation plate and the cab, bind with binders, if necessary.
- If the battery is fitted lengthwise:
 Fasten the clutch and damping cylinder fluid reservoirs onto the protective plate behind the battery

On the latest tractors, there are ready-made holes (3 pcs, Ø 8 mm).

- If the battery is fitted crosswise:
 Fasten the clutch fluid reservoirs onto the mounting plate (33432300, picture C).
 Remove the brake fluid reservoir. Mark and drill Ø 6,5 mm holes through the mounting plate so that the reservoirs are in the correct level. Fasten the plate and brake fluid reservoir.
- Connect the fluid hoses to the cylinders (a new hose also for the clutch master cylinder). Shorten the hoses, if needed. The hose to the master cylinder must be fitted before fastening the master cylinder.
- Fill the reservoirs with brake fluid. Bleed the clutch. The hoses must be fitted so that no air pocket appear.

- Die Schalthebelköpfe entfernen und durch die neuen ersetzen (Bild E). Die Druckknöpfe an die Schaltköpfe montieren und die Leitungen mit Stecker S45 verbinden, siehe Bild E.
- Den Kabelstrang anschließen und mit Bindern am Kabinenkabelstrang befestigen (s. Bild E).
 Die Dioden V5 am Kabelstrang anbringen.
- Der Stecker des HiShift-Kabelstrangs X38 (Versorgung) und X36 (Erdung für den langsamen Einrückvorgang) müssen gemäß Bildern D.1 und D.2 angeschlossen werden.


Hinweis! Wenn der Traktor nicht mit einem Agrodata-Instrument ausgerüstet ist, muß ein Kippschalter für die Erdung des langsameren Einrückvorgangs (Relais K24) an der rechten Seite des Armaturenbretts angebracht werden. Strom für die Kippschalterbeleuchtung wird vom Stecker Nr. 10 des Lichtschalters S1 entnommen (zu diesem Stecker führt das braune Kabel Nr. 15). Bei Traktoren mit ACIV-Instrument muß die Erdung gemäß Bild D.3 angeschlossen werden. Hinweis (ACIV)! Einige Teile zur Erdung gehören nicht zum HiShift-Bausatz und müssen separat bestellt werden, siehe Ersatzteilkatalog. Die Geschwindigkeitsgrenze muß erneut programmiert werden (10 km/h -> 4 km/h), siehe Werkstatthandbuch.

- Bohren eines Loches (ø 38 mm) durch die Schalldämmungsplatte des Getriebegehäuses an der Rückflußleitung der Lenksystemhydraulik (Bild F).
- Entfernen des Druckschlauchs zum Ventilblock (Hinweis! Bei Traktoren mit Anhängerbremsventil: entfernen des Druckschlauchs vom Bremsventil, Bild F.2). Den Schlauchanschluß vom Ventilblock entfernen und durch einen neuen ersetzen. Anbringen der Hydraulikschläuche, gemäß der Abbildung, zwischen die Schalldämmungsplatte und die Kabine. Falls notwendig, die Schläuche mit Bindern zusammenbinden.
- Bei längs eingebauter Batterie: Befestigen der Flüssigkeitsbehälter für die Kupplung und den Dämpfungszylinder an der Schutzplatte hinter der Batterie.
 An den neueren Traktoren sind die Bohrungen bereits angebracht (3 Stück, ø 8 mm).
- Bei quer eingebauter Batterie: Anbringen des Kupplungsflüssigkeitsbehälters an der Befestigungsplatte (33432300, Bild C). Entfernen des Bremsflüssigkeitsbehälters. Kennzeichnen und Bohren der Löcher (ø 6.5 mm), so daß alle Behälter auf der Platte angebracht werden können. Befestigen der Platte und des Bremsflüssigkeitsbehälters.
- Verbinden der Schläuche mit dem Zylinder (auch für den Hauptzylinder sollte ein neuer Schlauch verwendet werden). Falls notwendig, die Schläuche kürzen. Der Schlauch zum Hauptzylinder muß vor der Montage des Zylinders angebracht werden.
- Die Behälter mit Bremsflüssigkeit füllen. Die Kupplung entlüften. Die Schläuche so montieren, daß keine Lufteinschlüsse auftreten.

HI SHIFT, FITTING INSTRUCTION	30.04.1997	Model/ Modell	Code	Page /Seite
HI SHIFT, EINBAUANLEITUNG	13.06.1997	6000-8750	49.1	3(12)

- Start the engine and operate the clutch pedal with the buttons many times. Check the function and possible leakages. Fit the limiter screw of the lower position (clearance 0,2..2,0 mm). Fit the switch S9 (on AC IV also S24). Fit the instruments.
- Fit the HiShift sticker (picture E).
- Carry out adjustment and test-run, see page 11.
- Fit other detached parts.

- Den Motor Starten und das Kupplungspedal mit Hilfe der Druckknöpfe mehrmals betätigen. Hierbei ist die Funktion zu überprüfen und auf mögliche Leckagen zu achten. Anbringen der Begrenzungsschraube für die untere Pedalstellung (Pedalspiel 0.2...2.0 mm). Montieren des Schalters S9 (mit ACIV auch S24). Die Instrumente wieder anbringen.
- Anbringen des HiShift-Aufklebers (Bild E).
- Durchführen der Einstellung und eines Testlaufs, siehe Seite 11.
- Anbringen der restlichen abmontierten Teile.

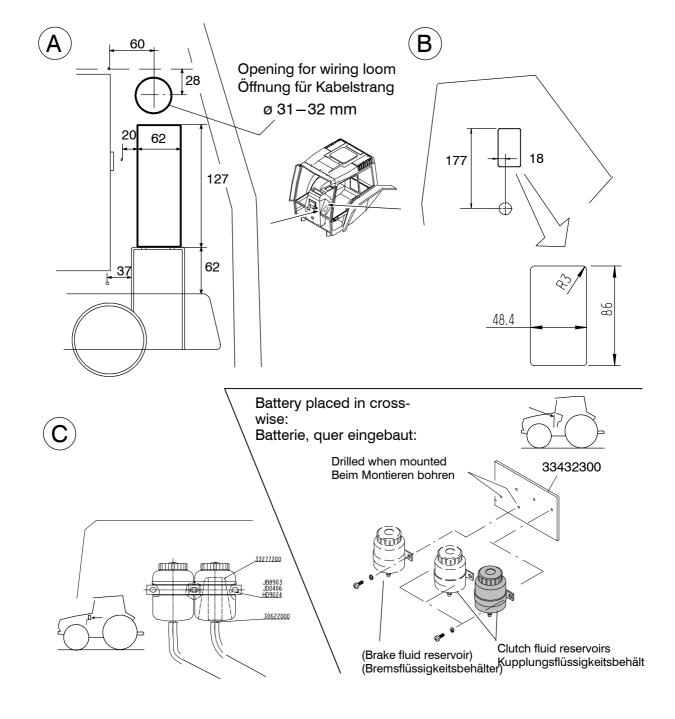

HI SHIFT, FITTING INSTRUCTION
HI SHIFT, EINBAUANLEITUNG


30.04.1997
13.06.1997

Model/ Modell

6000-8750

Code **49.1** Page /Seite 4(12)



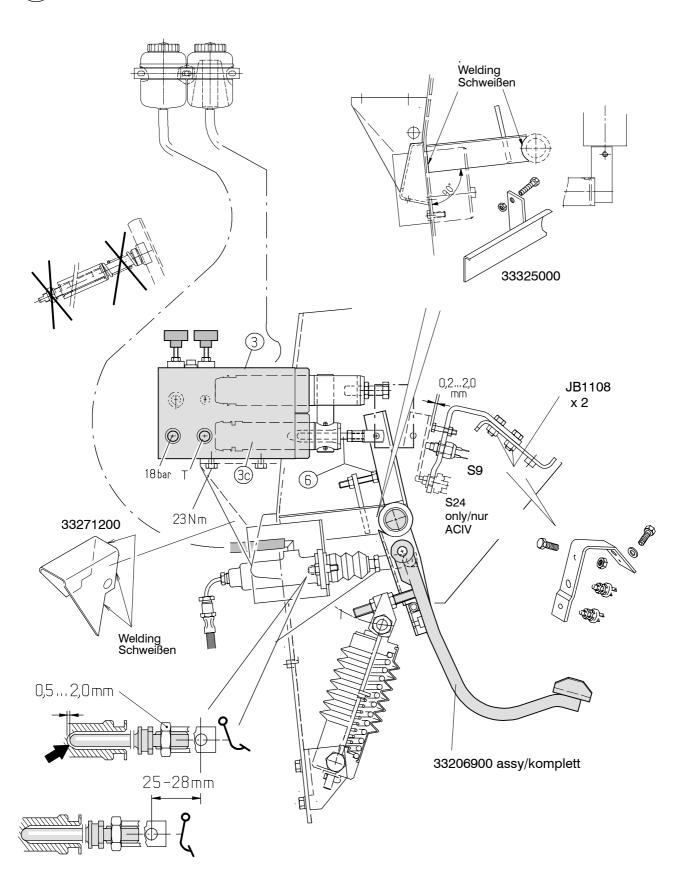



HI SHIFT, FITTING INSTRUCTION	30.04.1997	N
HI SHIFT, EINBAUANLEITUNG	13.06.1997	6

0.04.1997 Model/ Modell

Code

Page /Seite

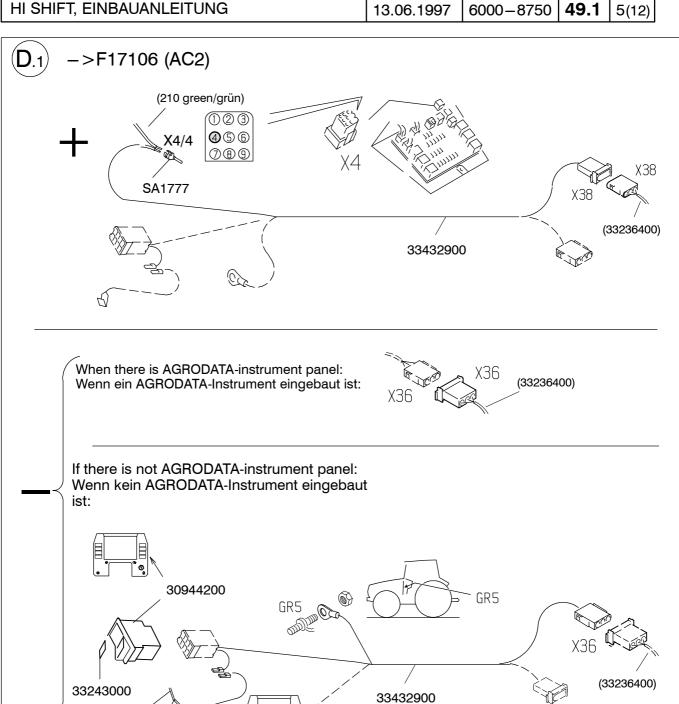


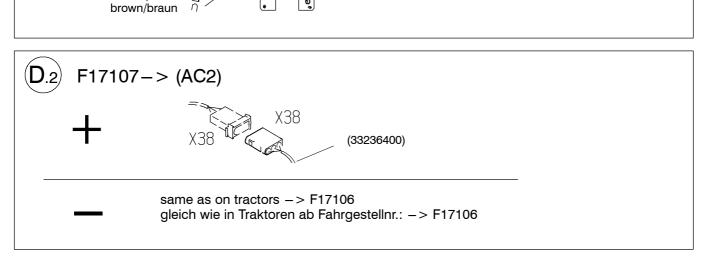


S1/10 (15

 HI SHIFT, FITTING INSTRUCTION
 30.04.1997
 Model/ Modell
 Code /Seite
 Page /Seite


 HI SHIFT, EINBAUANLEITUNG
 13.06.1997
 6000-8750
 49.1
 6(12)

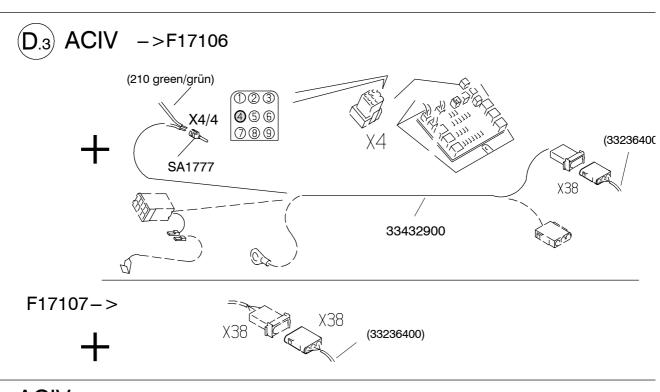


ACIV K24 Earthing signal / Erdungssignal:

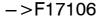

When there is AGRODATA-instrument panel: Wenn ein AGRODATA-Instrument eingebaut ist:

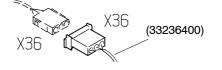

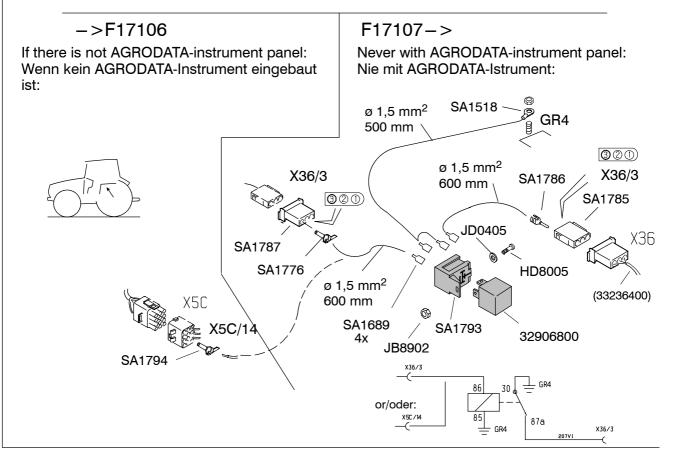


HI SHIFT, FITTING INSTRUCTION HI SHIFT, EINBAUANLEITUNG 30.04.1997 13.06.1997

Model/ Modell 6000 – 8750

Code **49.1**


Page /Seite 7(12)

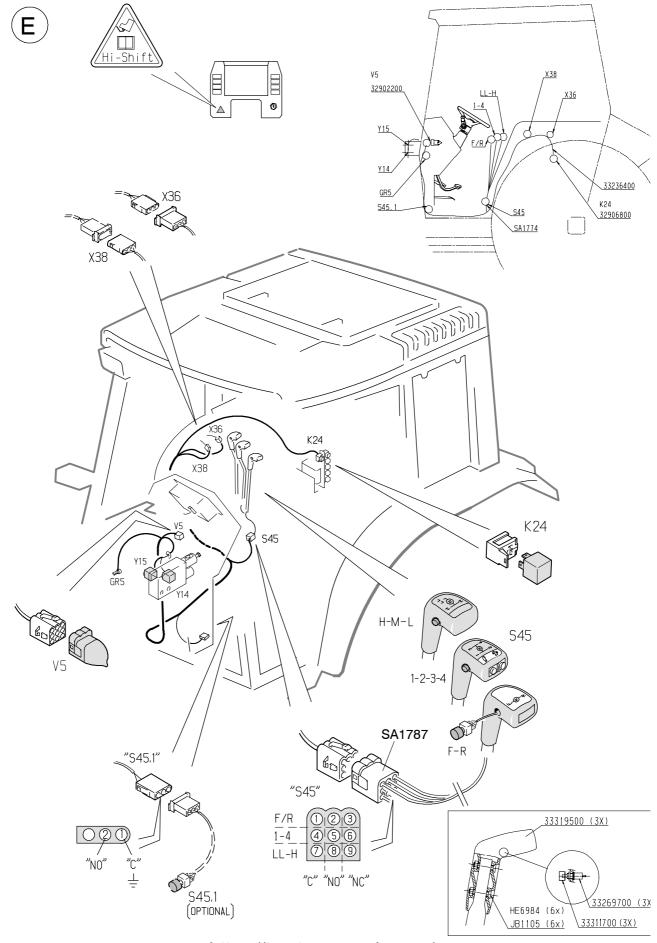

HI SHIFT, FITTING INSTRUCTION HI SHIFT, EINBAUANLEITUNG 30.04.1997 13.06.1997

Model/ Modell


Code **49.1** Page /Seite 8(12)

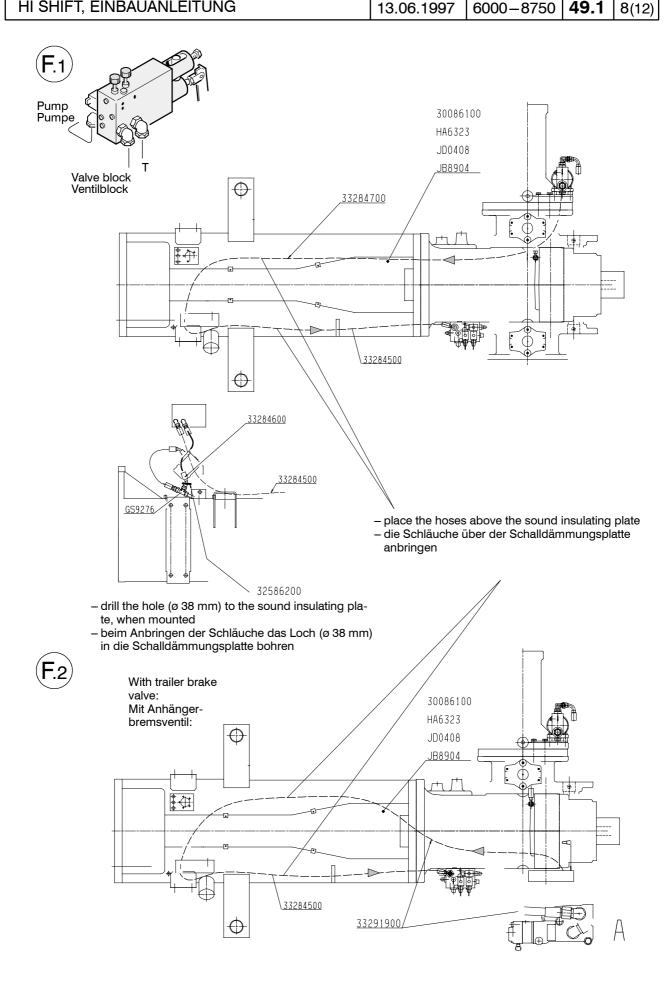

 HI SHIFT, FITTING INSTRUCTION
 30.04.1997
 Model/ Modell
 Code

 HI SHIFT, EINBAUANLEITUNG
 13.06.1997
 6000-8750
 49.1

Page /Seite

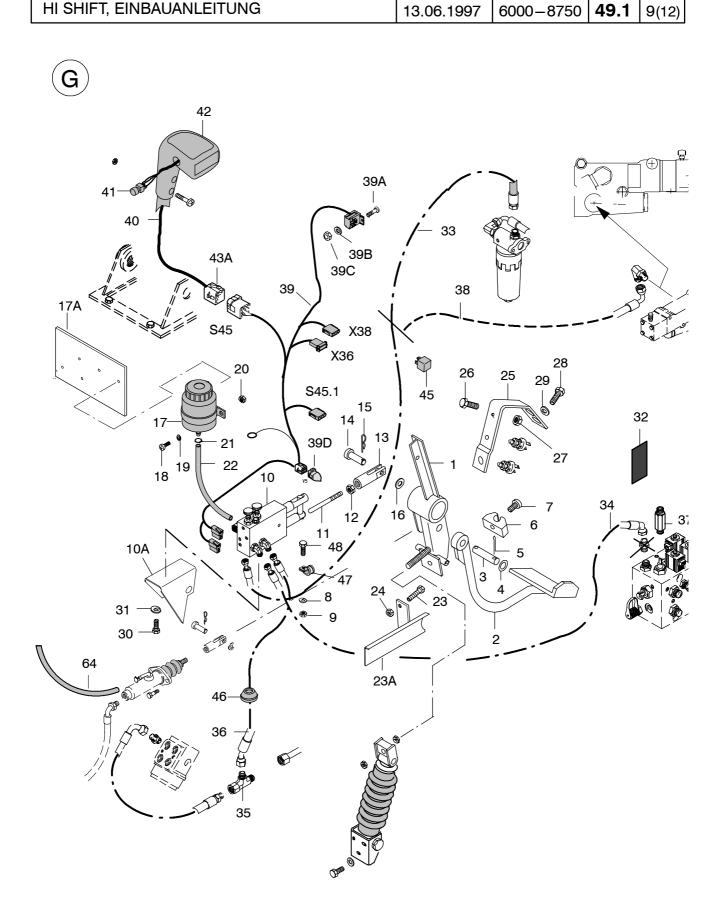

HI SHIFT, FITTING INSTRUCTION	30.04.1997	Model/ Modell	Code
HI SHIFT, EINBAUANLEITUNG	13.06.1997	6000-8750	49.1

Page /Seite 10(12)

1	A33277000 33206900	Hi Shift .Poljin	Hi Shift Pedal	Hi Shift Pedal	Hi Shift Pedal	
1 1	33206600	Napa	Nav	Hub	Nabe	
2 1	33206500	Varsi	Arm	Arm	Arm	
3 1 4 2	33327200 JD0412	Tappi Aluslaatta	Tapp Bricka	Pin Washer	Stift Scheibe	ø 13
5 2	JE3079	Sokka	Sprint	Pin	Splint	ø 3,2 x 20
6 1	33293000	Pidätin	Spärr	Retainer	Halter	
7 1	HD9051	Ruuvi	Skruv	Screw	Schraube	M06X16
8 1 9 1	JD0406 JB8903	Aluslaatta Mutteri	Bricka Mutter	Washer Nut	Scheibe Mutter	ø 6,4 M6
10 1	33188500	.Venttiili	Ventil	Valve	Ventil	IVIO
10A 1	33271200	.Kannatin	Hållare	Support	Halter	
11 1	33188600	.Таррі	Тарр	Pin	Stift	
12 1	JB1108	.Mutteri	Mutter	Nut	Mutter	M8
13 1 14 1	30337000 33052000	.Haarukka .Tappi	Gaffel Tapp	Fork Pin	Gabel Stift	
15 1	JE3047	.Sokka	Sprint	Pin	Splint	ø 2X16
16 1	JD0408	.Aluslaatta	Bricka	Washer	Scheibe	ø 8,4
17 1	33044900	.Säiliö	Behållare	Container	Behälter	
1 17A 1	33277200 33432300	.Suojus .Kiinnityslevy	Skydd Fastsätta platta	Shield Fastening plate	Schutz	
18 3	HD9024	.Ruuvi	Fastsättn. platta Skruv	Screw	Halterplatte Schraube	M6X16
19 3	JD0406	.Aluslaatta	Bricka	Washer	Scheibe	ø 6,4
20 3	JB8903	.Mutteri	Mutter	Nut	Mutter	M6
21 2 22 2	30622000	.Letkunpidin	Slangfäste	Hose holder	Schlauchhalter Schlauch	
22 2 23 1	33324900 45160500	.Letku .Rajoitin	Slang Begränsare	Hose Limiter	Anschlag	
23A 1	33325000	.Tuki	Stöd	Support	Halter	
24 1	JB1108	.Mutteri	Mutter	Nut	Mutter	M8
25 1	33271500	.Latta	Platt	Flat	Platt	
26 1 27 3	HA6325	.Ruuvi .Mutteri	Skruv Mutter	Screw Nut	Schraube Mutter	M08X30 M8
28 2	JB1108 HA6324	.Ruuvi	Skruv	Screw	Schraube	M08X25
29 2	JD0408	.Aluslaatta	Bricka	Washer	Scheibe	ø 8,4
30 4	HA6322	.Ruuvi	Skruv	Screw	Schraube	M08X16
31 4	JD9103	.Aluslaatta	Bricka	Washer	Scheibe	ø 8
32 1 33 1	33306500 33284700	.Kansi .Letku	Lock Slang	Cover Hose	Deckel Schlauch	L=2600
34 1	33284500	.Letku	Slang	Hose	Schlauch	L=2000 L=1800
35 1	GS9276	.Liitin	Anslutning	Connection	Anschluß	
36 1	33284600	.Letku	Slang	Hose	Schlauch	L=515
37 1	30917100	.Liitin	Anslutning	Connection	Anschluß	1 0750
38 1 39 1	33291900 33236400	.Letku .Johdinsarja	Slang	Hose Wiring set	Schlauch Verkabelung	L=2750
39A 1	JB8902	.Mutteri	Ledningssats Mutter	Wiring set Nut	Mutter	M5
39B 1	JD0405	.Aluslaatta	Bricka	Washer	Scheibe	ø 5,3
39C 1	HD8005	.Ruuvi	Skruv	Screw	Schraube	M5x12
39D 1	32902200	.Diodit .Johdin	Dioder	Diodes	Dioden	5kpl /pcs
40 3 41 3	33269700 33311700	.Nuppi	Ledning Knopp	Wire Knob	Leitung Knopf	pun./red
42 3	33319500	.Nuppi	Knopp	Knob	Knopf	puri./red
43A 1	SA1774	.Liitinkotelo	Skarvhus	Connector	Steckergehäuse	
45 1	32906800	.Rele	Relä	Relay	Relais	
46 1 47 1	32586200 30086100	.Läpivientikumi .Letkunpidin	Gummigenomföring Slangfäste	Rubber inlet Hose holder	Durchführ.gummi Schlauchhalter	
48 1	HA6323	.Ruuvi	Skruv	Screw	Schraube	M08X20
64 1		.Letku	Slang	Hose	Schlauch	Kts/ see 22
- 1	33379700	.Tarra	Dekal	Sticker	Aufkleber	HiShift
- 1 - 1	33432900 30944200	.Johdinsarja	Ledningssats	Wiring set Switch	Verkabelung Schaukelschalter	
- i - 1	33243000	.Keinukytkin .Linssi	Vippströmbrytare Lins	Lens	Linse	
- 10	SA9102	.Side	Band	Band	Binde	
ACIV:					Kts. kuva D.3 / See p	icture D.3
1	SA1518	Kaapelikenkä	Kabelsko	Cable lug	Kabelklemme	
1 1	SA1786 SA1785	Liitin Liitinkotelo	Anslutning Skarvhus	Connection Connector	Stift Steckergehäuse	
i	SA1787	Liitinkotelo	Skarvhus	Connector	Steckergehäuse	
1	SA1776	Liitin	Anslutning	Connection	Stift	
1	SA1793	Releenkanta	Reläfäste	Relay mounting	Relaisfaßung	
1	32906800	Rele	Relä	Relay	Relais	
1 1	SA1794 JB8902	Liitin Mutteri	Anslutning Mutter	Connection Nut	Stift Mutter	M5
1	JD0405	Aluslaatta	Bricka	Washer	Scheibe	ø 5,3
1	HD8005	Ruuvi	Skruv	Screw	Schraube	M5x12
1	SA1777	Liitin	Anslutning	Connection	Stift	
4	SA1689	Liitin	Anslutning	Connection	Stift	4 5 2
1	_	Johto httr	Ledning S://tractormar	Wire	Leitung 1700m	m, 1,5 mm ²
		ιιιι	os://tractormar	iuaiz.CUIII/		

HI SHIFT, FITTING INSTRUCTION HI SHIFT, EINBAUANLEITUNG

30.04.1997 13.06.1997


Model/ Modell


6000 - 8750

Code

Page /Seite

49.1 11(12)

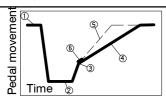

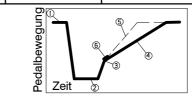

- 1. Pedal up
- 4. Driving speed < 4 km/h
- 2. Pedal down
- 5. Driving speed > 4 km/h
- 3. Knee point
- 6. Clutch slips and engages
- Check the clutch fluid level. Raise the tractor on axle stands. Start the engine and use the HiShift several times so that air is removed from the system.
- 2. Close the cab side restriction spindle.
- Depress the clutch pedal by using the push button.
 Select e.g. gear F/M/1. Adjust engine revs to 800 1000 r/min (greater than 1500 r/min if the tractor has a fluid coupling, i.e. Hi Trol models).
- 4. Release the button at which time the pedal rises up to the knee point (3), in which the working cylinder piston rests against the damping piston. Tractor wheels must not rotate.
- Open the cab side restriction a little, at which time the pedal starts to rise slowly.

Note! On account of possible small leakage of the restriction spindle the pedal can start to rise slowly before the restriction spindle is opened. The knee point (3) can, however, be observed from change of rising speed of the pedal. The wheels must start to rotate before the pedal has risen **10 mm** (ideal value 5 mm) from the knee point.

- If necessary, adjust the position of the knee point (adjusting screw at the end of the damping piston). Screw outwards=point rises and vice versa.
- 7. When the knee point has been adjusted, close the cab side restriction and then open it 1+1/4 turns. The foremost restriction should be open 2 turns (factory setting). Lock the restriction spindles.
- 8. In a test-drive with driving speeds under 4 km/h*) the pedal rises up slower (4) (restriction 1+1/4). With speeds over 4 km/h the pedal rises up faster (restriction (1+1/4)+(2)). When the shuttle lever button is used, the pedal always rises slower regardless of the driving speed.

- 1. Pedal up
- 4. Fahrgeschwindigkeit < 4 km/h
- 2. Pedal down
- 5. Fahrgeschwindigkeit > 4 km/h
- 3. Schleifpunktt
- 6. Kupplung rutscht und greift ein
- Den Kupplungsflüssigkeitsstand überprüfen. Anschließend den Traktor aufbocken. Den Motor starten und HiShift mehrmals betätigen, so daß die Luft aus dem System entweicht.
- Die kabinenseitige Drossel schließen. Die Einstellung der vordersten Drossel hat nun keinen Einfluß mehr.
- Das Kupplungspedal durch Betätigen des Druckknopfes nach unten drücken. Wählen eines Ganges (z.B. F/M/1). Die Motordrehzahl auf 800 – 1000 U/min bringen. Falls der Traktor mit einer Turbokupplung ausgerüstet ist, sollte die Motordrehzahl auf über 1500 U/min erhöht werden.
- 4. Den Druckknopf loslassen, wodurch das Kupplungspedal bis zum Schleifpunkt (3) angehoben wird. In diesem Punkt liegt der Arbeitskolben durch die mechanische Verbindung am Dämpfungskolben an. Die Traktorräder dürfen sich nicht drehen.
- 5. Die kabinenseitige Drossel ein wenig öffnen, wodurch das Pedal beginnt sich langsam nach oben zu bewe-

Hinweis: In Anbetracht möglicher kleiner Leckagen der Drossel kann das Pedal vor dem Öffnen der Drossel schon langsam ansteigen. Der Schleifpunkt läßt sich jedoch aufgrund der Änderung der Anhebegeschwindigkeit des Pedals erkennen. Die Räder müssen sich zu drehen beginnen, bevor sich das Pedal um 10 mm nach oben bewegt hat (Idealwert: 5 mm).

- Falls notwendig, muß die Position des Schleifpunktes eingestellt werden (die Einstellschraube befindet sich am Ende des Dämpfungskolbens).
 Herausdrehen der Schraube -> der Schleifpunkt steigt an und umgekehrt.
- 7. Wurde der Schleifpunkt eingestellt, muß die kabinenseitige Drossel geschlossen und dann wieder um 1¼ Umdrehungen geöffnet werden. Die vorderste Drossel sollte um 2 Umdrehungen geöffnet sein (werkseitige Einstellung). Die Einstellungen der Drosseln müssen dann mit den Feststell-muttern gesichert werden.
- 8. Bei einer Probefahrt mit Fahrgeschwindigkeiten unter 4 km/h *) sollte das Kupplungspedal langsamer ansteigen (4) (Drossel 1½). Bei Geschwindigkeiten über 4 km/h sollte das Pedal schneller ansteigen (5) (Drosseln (1½) + (2)). Wird der Druckknopf am Schalthebel für die Richtungsänderung betätigt, steigt das Pedal immer langsamer an, unabhängig von der Fahrgeschwindigkeit.

HI SHIFT, FITTING INSTRUCTION HI SHIFT, EINBAUANLEITUNG

prevent excess wear of the clutch disc.

30.04.1997 13.06.1997

Model/ Modell


6000-8750

Code **49.1**

Page /Seite 12(12)

Note! Tractor driver can adjust the Hi Shift between certain limits according to his own choice. However, the cab side restriction must always be open at least 1 turn, to


- Check the function of the clutch. Drive under and over 4 km/h and check that the engagement occurs softly.
 Ensure, that the pedal hinge functions. Check for leaks.
- x) or on tractors without Agrodata instrument: if the rocker switch is in the earthing position (i.e. switch lamp lights).
- Hinweis! Der Traktorfahrer kann die HiShift-Funktion zwischen best. Grenzen nach seinen eigenen Bedürfnissen einstellen. Die kabinenseitige Drossel muß aber immer mindestens eine Umdrehung geöffnet sein, um eine übermäßige Abnutzung der Kupplung zu verhindern.
- Kontrollieren der Kupplungsfunktion. Fahren unter und über 4 km/h und prüfen, ob ein weicher Eingriff erfolgt. Sicherstellen, daß das Pedalgelenk funktioniert. Überprüfen auf Leckage.
- x) oder bei Traktoren ohne AGRODATA-Instrument: wenn sich der Kippschalter in der Erdungsposition befindet (d.h.die Kontrollampe am Schalter leuchtet).

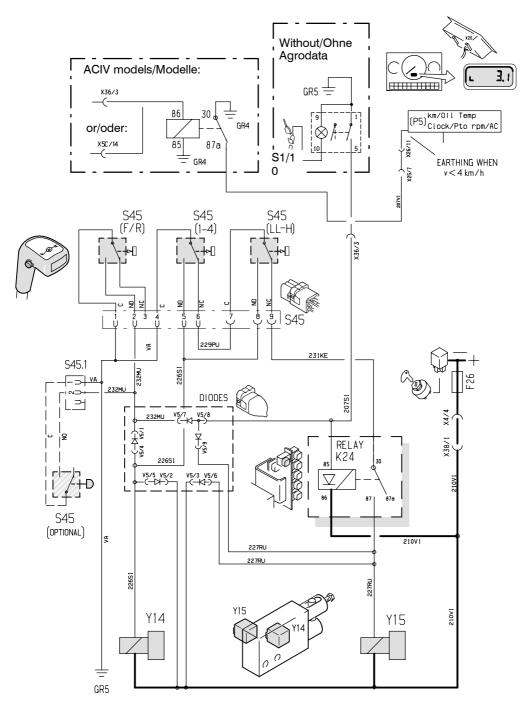

50. Brake system

51. Service brakes

 52. Parking brake





	1.8.2690	Model	Code	Page	
51. Brake system	1. 9. 2002	6000-8950	510	1	

Contents

General (Op. no. 510)	
Technical data	1
Brake system, description	
Pressure air brakes (option)	ь
Reconditioning brakes (Op. no. 511)	
1 Percenditioning convice byskes	
Reconditioning service brakes: A. Changing brake discs	1
B. Adjusting brakes	2
C. Bleeding brake system	
D. Changing brake housing	
F. Adjusting brakes on tractors which have reverse drive controls (TwinTrac)	3
2. Pressure air brakes	4
Reconditioning parking brake (Op. no. 521):	
A. Adjusting parking brake	
B. Parking brake on tractors equipped with HiTech Shuttle	2
Technical data	
Service brakes hydraulically controlled disc brakes running in oil.	
Parking brake mechanically controlled, acting on the foot brakes. In HiTech-models the park	ring brake is controlled
electro-hydraulically.	
Tractors 6000-6400 and 8000 (-657975):	
- number of brake discs per brake (ceramic linings)	
number of brake balls per brake friction surface per brake	
brake disc, diameter	
Tractors 6600, 6800, 8100-8400, 8050-8750, 6250Hi-8950Hi (also on 6000-6400 and 8	
number of brake discs per brake (organic linings, 665437 –) number of balls per brake	5 pcs
 number of brake discs per brake (organic linings, 665437-) number of balls per brake friction surface per brake 	5 pcs 6 pcs 3690 cm ² /org (2650 cm ² /sint)
- number of brake discs per brake (organic linings, 665437-) - number of balls per brake - friction surface per brake - brake disc, diameter	5 pcs 6 pcs 3690 cm ² /org (2650 cm ² /sint)
 number of brake discs per brake (organic linings, 665437 –) number of balls per brake friction surface per brake brake disc, diameter Tractors 6600 –8750, 6650Hi –8950Hi: 50 km/h: On traffic tractors (50 km/h) the splines of the inner drive shaft have been lenghtened, after well as the surface of the shaft have been lenghtened. 	5 pcs 6 pcs 3690 cm ² /org (2650 cm ² /sint) Ø 224 mm/org (Ø 222 mm/sint)
 number of brake discs per brake (organic linings, 665437 –) number of balls per brake friction surface per brake brake disc, diameter Tractors 6600 – 8750, 6650Hi – 8950Hi: 50 km/h: 	5 pcs 6 pcs 3690 cm ² /org (2650 cm ² /sint) Ø 224 mm/org (Ø 222 mm/sint)
 number of brake discs per brake (organic linings, 665437 –) number of balls per brake friction surface per brake brake disc, diameter Tractors 6600 – 8750, 6650Hi – 8950Hi: 50 km/h: On traffic tractors (50 km/h) the splines of the inner drive shaft have been lenghtened, after with the brake dics number can be increased to 6 pcs per brake (3+3). The disc linings are then or the state of the	5 pcs 6 pcs 3690 cm ² /org (2650 cm ² /sint) Ø 224 mm/org (Ø 222 mm/sint)
 number of brake discs per brake (organic linings, 665437 –) number of balls per brake friction surface per brake brake disc, diameter Tractors 6600 – 8750, 6650Hi – 8950Hi: 50 km/h: On traffic tractors (50 km/h) the splines of the inner drive shaft have been lenghtened, after with the brake disc number can be increased to 6 pcs per brake (3+3). The disc linings are then control tractors 8350 – 8950Hi (L32106 –): brake discs, 9,5" (243 mm)x7" (178 mm) 	5 pcs 6 pcs 3690 cm²/org (2650 cm²/sint) Ø 224 mm/org (Ø 222 mm/sint) which of sinter type.
 number of brake discs per brake (organic linings, 665437 –) number of balls per brake friction surface per brake brake disc, diameter Tractors 6600 – 8750, 6650Hi – 8950Hi: 50 km/h: On traffic tractors (50 km/h) the splines of the inner drive shaft have been lenghtened, after with brake dics number can be increased to 6 pcs per brake (3+3). The disc linings are then contractors (343 mm) the splines of the inner drive shaft have been lenghtened, after with brake dics number can be increased to 6 pcs per brake (3+3). The disc linings are then contractors (243 mm) x7" (178 mm) intermediate discs (s=5 mm) 	5 pcs 6 pcs 3690 cm²/org (2650 cm²/sint) Ø 224 mm/org (Ø 222 mm/sint) which of sinter type. 5 pcs 3 pcs
 number of brake discs per brake (organic linings, 665437 –) number of balls per brake friction surface per brake brake disc, diameter Tractors 6600 – 8750, 6650Hi – 8950Hi: 50 km/h: On traffic tractors (50 km/h) the splines of the inner drive shaft have been lenghtened, after with the brake disc number can be increased to 6 pcs per brake (3+3). The disc linings are then control tractors 8350 – 8950Hi (L32106 –): brake discs, 9,5" (243 mm)x7" (178 mm) 	5 pcs 6 pcs 3690 cm²/org (2650 cm²/sint) Ø 224 mm/org (Ø 222 mm/sint) which of sinter type. 5 pcs 3 pcs
 number of brake discs per brake (organic linings, 665437 –) number of balls per brake friction surface per brake brake disc, diameter Tractors 6600 – 8750, 6650Hi – 8950Hi: 50 km/h: On traffic tractors (50 km/h) the splines of the inner drive shaft have been lenghtened, after with the brake dics number can be increased to 6 pcs per brake (3+3). The disc linings are then contractors 8350 – 8950Hi (L32106 –): brake discs, 9,5" (243 mm)x7" (178 mm) intermediate discs (s=5 mm) friction surface/brake Tightening torques	5 pcs 6 pcs 3690 cm²/org (2650 cm²/sint) Ø 224 mm/org (Ø 222 mm/sint) which of sinter type. 5 pcs 3 pcs
 number of brake discs per brake (organic linings, 665437 –) number of balls per brake friction surface per brake brake disc, diameter Tractors 6600 – 8750, 6650Hi – 8950Hi: 50 km/h: On traffic tractors (50 km/h) the splines of the inner drive shaft have been lenghtened, after with the brake dics number can be increased to 6 pcs per brake (3+3). The disc linings are then continuous tractors (243 mm)x7" (178 mm) brake discs, 9,5" (243 mm)x7" (178 mm) intermediate discs (s=5 mm) friction surface/brake Tightening torques Brake disc attaching flange:	5 pcs 6 pcs 3690 cm²/org (2650 cm²/sint) Ø 224 mm/org (Ø 222 mm/sint) which of sinter type. 5 pcs 3 pcs 2150 cm²/org
 number of brake discs per brake (organic linings, 665437 –) number of balls per brake friction surface per brake brake disc, diameter Tractors 6600 – 8750, 6650Hi – 8950Hi: 50 km/h: On traffic tractors (50 km/h) the splines of the inner drive shaft have been lenghtened, after with the brake disc number can be increased to 6 pcs per brake (3+3). The disc linings are then control tractors 8350 – 8950Hi (L32106 –): brake discs, 9,5" (243 mm)x7" (178 mm) intermediate discs (s=5 mm) friction surface/brake Tightening torques Brake disc attaching flange: 6000 – 8950Hi 	5 pcs 6 pcs 3690 cm²/org (2650 cm²/sint) Ø 224 mm/org (Ø 222 mm/sint) which of sinter type. 5 pcs 3 pcs 2150 cm²/org
 number of brake discs per brake (organic linings, 665437 –) number of balls per brake friction surface per brake brake disc, diameter Tractors 6600 – 8750, 6650Hi – 8950Hi: 50 km/h: On traffic tractors (50 km/h) the splines of the inner drive shaft have been lenghtened, after with the brake disc number can be increased to 6 pcs per brake (3+3). The disc linings are then controlled the brake discs number (182106 –): brake discs, 9,5" (243 mm)x7" (178 mm) intermediate discs (s=5 mm) friction surface/brake Tightening torques Brake disc attaching flange: 6000 – 8950Hi 8350 – 8950Hi, L32106 – Brake housing – final gear housing: 	5 pcs 6 pcs 3690 cm²/org (2650 cm²/sint) Ø 224 mm/org (Ø 222 mm/sint) which of sinter type. 5 pcs 3 pcs 2150 cm²/org
 number of brake discs per brake (organic linings, 665437 –) number of balls per brake friction surface per brake brake disc, diameter Tractors 6600 – 8750, 6650Hi – 8950Hi: 50 km/h: On traffic tractors (50 km/h) the splines of the inner drive shaft have been lenghtened, after with the brake disc number can be increased to 6 pcs per brake (3+3). The disc linings are then controlled the brake discs, 9,5" (243 mm)x7" (178 mm) intermediate discs (s=5 mm) friction surface/brake Tightening torques Brake disc attaching flange: 6000 – 8950Hi 8350 – 8950Hi, L32106 – Brake housing – final gear housing: 6100 – 6400 and 8000 (8.8) 	5 pcs 6 pcs 3690 cm²/org (2650 cm²/sint) Ø 224 mm/org (Ø 222 mm/sint) which of sinter type. 5 pcs 3 pcs 2150 cm²/org
 number of brake discs per brake (organic linings, 665437 –) number of balls per brake friction surface per brake brake disc, diameter Tractors 6600 – 8750, 6650Hi – 8950Hi: 50 km/h: On traffic tractors (50 km/h) the splines of the inner drive shaft have been lenghtened, after with the brake disc number can be increased to 6 pcs per brake (3+3). The disc linings are then controlled the brake discs number (182106 –): brake discs, 9,5" (243 mm)x7" (178 mm) intermediate discs (s=5 mm) friction surface/brake Tightening torques Brake disc attaching flange: 6000 – 8950Hi 8350 – 8950Hi, L32106 – Brake housing – final gear housing: 	5 pcs 6 pcs 3690 cm²/org (2650 cm²/sint) Ø 224 mm/org (Ø 222 mm/sint) which of sinter type. 5 pcs 3 pcs 2150 cm²/org 80 Nm 45 Nm 80 Nm 125 Nm
- number of brake discs per brake (organic linings, 665437 –) - number of balls per brake - friction surface per brake - brake disc, diameter Tractors 6600 – 8750, 6650Hi – 8950Hi: 50 km/h: On traffic tractors (50 km/h) the splines of the inner drive shaft have been lenghtened, after with brake dics number can be increased to 6 pcs per brake (3+3). The disc linings are then of the brake discs number can be increased to 6 pcs per brake (3+3). The disc linings are then of the brake discs, 9,5" (243 mm)x7" (178 mm) - brake discs, 9,5" (243 mm)x7" (178 mm) - friction surface/brake Tightening torques Brake disc attaching flange: - 6000 – 8950Hi - 8350 – 8950Hi, L32106 – Brake housing – final gear housing: - 6100 – 6400 and 8000 (8.8) - 6600, 6800, 8100 – 8400 and 8050 – 8750 (10.9) Brake housing – gearbox Rear wheel nuts	5 pcs 6 pcs 3690 cm²/org (2650 cm²/sint) Ø 224 mm/org (Ø 222 mm/sint) which of sinter type. 5 pcs 3 pcs 2150 cm²/org 80 Nm 45 Nm 80 Nm 125 Nm 270 – 330 Nm 550 Nm
- number of brake discs per brake (organic linings, 665437 –) - number of balls per brake - friction surface per brake - brake disc, diameter Tractors 6600 – 8750, 6650Hi – 8950Hi: 50 km/h: On traffic tractors (50 km/h) the splines of the inner drive shaft have been lenghtened, after with the brake dics number can be increased to 6 pcs per brake (3+3). The disc linings are then contained to the brake discs (243 mm)x7" (178 mm) - intermediate discs (3 = 5 mm) - friction surface/brake Tightening torques Brake disc attaching flange: - 6000 – 8950Hi (100 – 1	5 pcs 6 pcs 3690 cm²/org (2650 cm²/sint) Ø 224 mm/org (Ø 222 mm/sint) which of sinter type. 5 pcs 3 pcs 2150 cm²/org 80 Nm 45 Nm 80 Nm 125 Nm 270 – 330 Nm 550 Nm 200 Nm
- number of brake discs per brake (organic linings, 665437 –) - number of balls per brake - friction surface per brake - brake disc, diameter Tractors 6600 – 8750, 6650Hi – 8950Hi: 50 km/h: On traffic tractors (50 km/h) the splines of the inner drive shaft have been lenghtened, after with brake dics number can be increased to 6 pcs per brake (3+3). The disc linings are then of the brake discs number can be increased to 6 pcs per brake (3+3). The disc linings are then of the brake discs, 9,5" (243 mm)x7" (178 mm) - brake discs, 9,5" (243 mm)x7" (178 mm) - friction surface/brake Tightening torques Brake disc attaching flange: - 6000 – 8950Hi - 8350 – 8950Hi, L32106 – Brake housing – final gear housing: - 6100 – 6400 and 8000 (8.8) - 6600, 6800, 8100 – 8400 and 8050 – 8750 (10.9) Brake housing – gearbox Rear wheel nuts	5 pcs 6 pcs 3690 cm²/org (2650 cm²/sint) Ø 224 mm/org (Ø 222 mm/sint) which of sinter type. 5 pcs 3 pcs 2150 cm²/org 80 Nm 45 Nm 80 Nm 125 Nm 270 – 330 Nm 550 Nm 200 Nm
- number of brake discs per brake (organic linings, 665437 –) - number of balls per brake - friction surface per brake - brake disc, diameter Tractors 6600 – 8750, 6650Hi – 8950Hi: 50 km/h: On traffic tractors (50 km/h) the splines of the inner drive shaft have been lenghtened, after with the brake disc number can be increased to 6 pcs per brake (3+3). The disc linings are then of the brake discs (s. 4.3) are then of the brake discs, 9,5" (243 mm)x7" (178 mm) - intermediate discs (s. 5 mm) - friction surface/brake Tightening torques Brake disc attaching flange: - 6000 – 8950Hi - 8350 – 8950Hi, L32106 – Brake housing – final gear housing: - 6100 – 6400 and 8000 (8.8) - 6600, 6800, 8100 – 8400 and 8050 – 8750 (10.9) Brake housing – gearbox Rear wheel nuts Cab attaching bolts Brake pipe – master cylinder	5 pcs 6 pcs 3690 cm²/org (2650 cm²/sint) Ø 224 mm/org (Ø 222 mm/sint) which of sinter type. 5 pcs 3 pcs 2150 cm²/org 80 Nm 45 Nm 80 Nm 125 Nm 270 – 330 Nm 550 Nm 200 Nm 200 Nm
- number of brake discs per brake (organic linings, 665437 –) - number of balls per brake friction surface per brake brake disc, diameter	5 pcs 6 pcs 3690 cm²/org (2650 cm²/sint) Ø 224 mm/org (Ø 222 mm/sint) which of sinter type. 5 pcs 3 pcs 2150 cm²/org 80 Nm 45 Nm 80 Nm 125 Nm 270-330 Nm 550 Nm 200 Nm 200 Nm
- number of brake discs per brake (organic linings, 665437 –) - number of balls per brake - friction surface per brake - brake disc, diameter Tractors 6600 – 8750, 6650Hi – 8950Hi: 50 km/h: On traffic tractors (50 km/h) the splines of the inner drive shaft have been lenghtened, after with the brake disc number can be increased to 6 pcs per brake (3+3). The disc linings are then of the brake discs (s. 4.3) are then of the brake discs, 9,5" (243 mm)x7" (178 mm) - intermediate discs (s. 5 mm) - friction surface/brake Tightening torques Brake disc attaching flange: - 6000 – 8950Hi - 8350 – 8950Hi, L32106 – Brake housing – final gear housing: - 6100 – 6400 and 8000 (8.8) - 6600, 6800, 8100 – 8400 and 8050 – 8750 (10.9) Brake housing – gearbox Rear wheel nuts Cab attaching bolts Brake pipe – master cylinder	5 pcs 6 pcs 3690 cm²/org (2650 cm²/sint) Ø 224 mm/org (Ø 222 mm/sint) which of sinter type. 5 pcs 3 pcs 2150 cm²/org 80 Nm 45 Nm 80 Nm 125 Nm 270-330 Nm 550 Nm 200 Nm 200 Nm 20 Nm
- number of brake discs per brake (organic linings, 665437 –) - number of balls per brake - friction surface per brake - brake disc, cliameter Tractors 6600 – 8750, 6650Hi – 8950Hi: 50 km/h: On traffic tractors (50 km/h) the splines of the inner drive shaft have been lenghtened, after with the brake dics number can be increased to 6 pcs per brake (3+3). The disc linings are then of tractors 8350 – 8950Hi (L32106 –): - brake discs, 9,5" (243 mm)x7" (178 mm) - intermediate discs (s=5 mm) - friction surface/brake Tightening torques Brake disc attaching flange: - 6000 – 8950Hi - 8350 – 8950Hi, L32106 – Brake housing – final gear housing: - 6100 – 6400 and 8000 (8.8) - 6600, 6800, 8100 – 8400 and 8050 – 8750 (10.9) Brake housing – gearbox Rear wheel nuts Cab attaching bolts Brake pipe – master cylinder Settings Brake pedal free travel (latched together) Parking brake free travel (at lever end) Parking brake cable adjusting value, Power Shuttle tractors	5 pcs 6 pcs 3690 cm²/org (2650 cm²/sint) Ø 224 mm/org (Ø 222 mm/sint) which of sinter type. 5 pcs 3 pcs 2150 cm²/org 80 Nm 45 Nm 80 Nm 125 Nm 270-330 Nm 550 Nm 200 Nm 200 Nm 20 Nm 20 Nm
- number of brake discs per brake (organic linings, 665437 –) - number of balls per brake - friction surface per brake - brake disc, diameter Tractors 6600 –8750, 6650Hi –8950Hi: 50 km/h: On traffic tractors (50 km/h) the splines of the inner drive shaft have been lenghtened, after verific the brake dics number can be increased to 6 pcs per brake (3+3). The disc linings are then controlled the brake discs number can be increased to 6 pcs per brake (3+3). The disc linings are then controlled the brake discs (s=5 mm) (178 mm) - intermediate discs (s=5 mm) - friction surface/brake Tightening torques Brake disc attaching flange: - 6000 – 8950Hi - 8350 – 8950Hi - 8350 – 8950Hi - 8350 – 8950Hi - 8350 – 8950Hi - 8600, 6800, 8100 – 8400 and 8050 – 8750 (10.9) Brake housing – gearbox Rear wheel nuts Cab attaching bolts Brake pipe – master cylinder Settings Brake pedal free travel (latched together) Parking brake free travel (at lever end)	5 pcs 6 pcs 3690 cm²/org (2650 cm²/sint) Ø 224 mm/org (Ø 222 mm/sint) which of sinter type. 5 pcs 3 pcs 2150 cm²/org 80 Nm 45 Nm 80 Nm 125 Nm 270-330 Nm 550 Nm 200 Nm 200 Nm 20 Nm XME XME XME XME XME XME XME XME XME XM

Model

Brakes, description

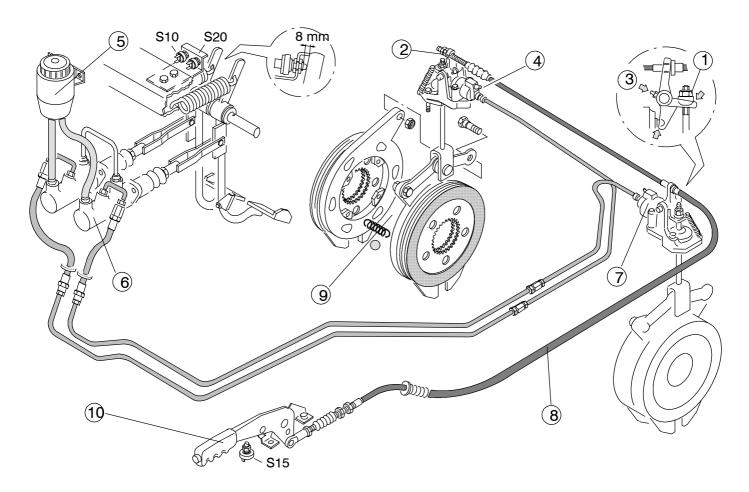


Figure 1. Brake mechanism.

- 1. Service brakes adjusting nut.
- 2. Parking brake adjusting nut.
- 3. Grease nipple.
- 4. Bleeding nipple.
- 5. Brake fluid reservoir.
- 6. Master cylinders (2 pcs).
- 7. Brake cylinder (2 pcs).
- 8. Parking brake cable.
- 9. Brake mechanism (in rear axle housing). In 8350–8950Hi from chassis no. **L32106 –** the mechanism is different.
- 10. Parking brake lever. In HiTech-models the parking brake mechanism is different, see pages 521/2-3.
- S10 = switch for RH side brake light.
- S20 = switch for LH side brake light.
- S15 = switch for parking brake warning light (different in HiTech models).

Service brakes are wet multi-disc brakes fitted in the rear axle housing. Service brakes are controlled hydraulically by means of the brake pedals. When the brake pedals are pressed, the 4WD engages causing brake action also on the front wheels.

Brake pedals can be used separately as steering brakes or they can be latched together.

Parking brake hand lever acts mechanically on the foot brakes (not HiTech-models). The brakes can be adjusted by means of the adjusting nuts. In HiTech-models the parking brake is controlled electro-hydraulically (see pages 521/2-3).

As an optional equipment, the brake valve for a trailer is available. Also pressure—air brakes for trailer is available as an option.

The brake master cylinders and the brake fluid reservoir are positioned to the right on the cab front wall. The brake system has two brake cylinder with in-built equalising valves, which ensure even braking action when the brake pedals are latched together.

The brake discs are fitted on splines on the inner drive shaft in the brake housing. The brake system and the gearbox use the same oil.

The bleeder nipples are positioned on top of the brake cylinders

During brake application the force from the brake cylinders is transferred, via levers, to the brake discs. The thrust plates turn in opposite direction and the balls between the plates force them against the brake discs and brake action is obtained.

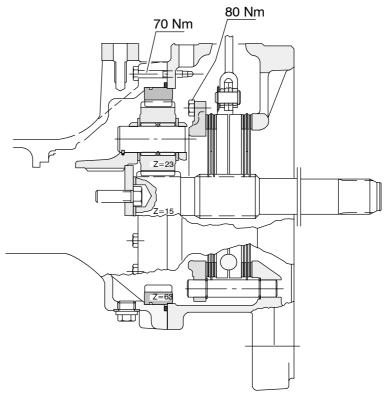


Figure 2. Brake housing with final drives 300

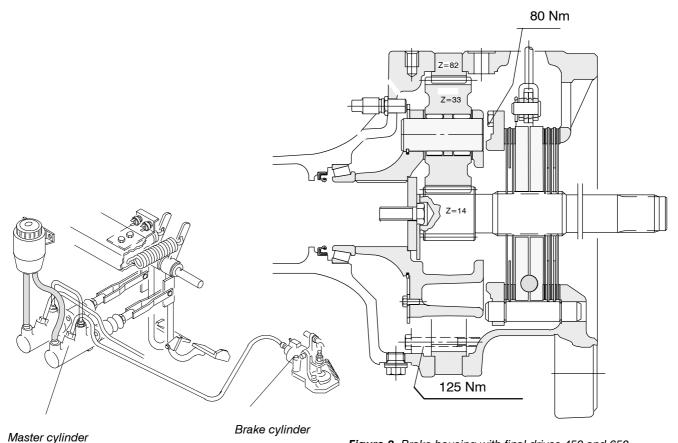


Figure 3. Brake housing with final drives 450 and 650.

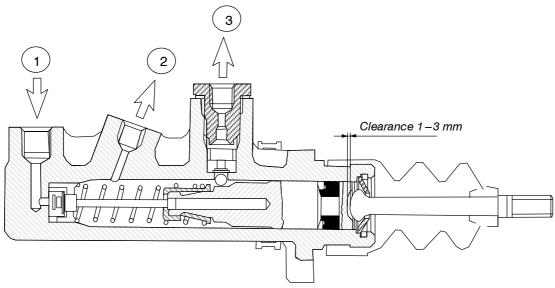


Figure 4. Master cylinder

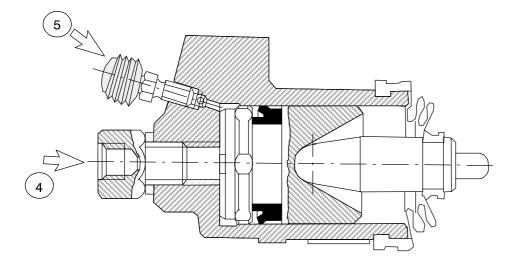


Figure 5. Brake cylinder

The brake fluid flows from the reservoir through pipe (1) into the master cylinder. When the pedals are depressed, the non-return valve at the front end of the master cylinder closes preventing oil from returning to the reservoir. The fluid, now under pressure in the cylinder, flows through pipe (2) to hole (4) at the front end of the brake cylinder behind the piston and forces out the thrust rod.

The valves and the intermediate pipe (3) in the master cylinders serve as an equalising mechanism, if the mechanical setting of the two brakes differs. When the pedals are depressed, the pistons actuate the valves so that they open and any pressure differences in the brake circuits are equalised through the intermediate pipe (3).

If only one of the brakes is applied, the valve is opened by the piston, thus pressurising the intermediate pipe (3). This causes the valve in the other (not actuated) master cylinder to close. Oil under pressure now flows from the master cylinder which is being applied to the corresponding brake cylinder.

Page

4

The brake system bleeder nipples (5) are placed on top of the respective brake cylinders.

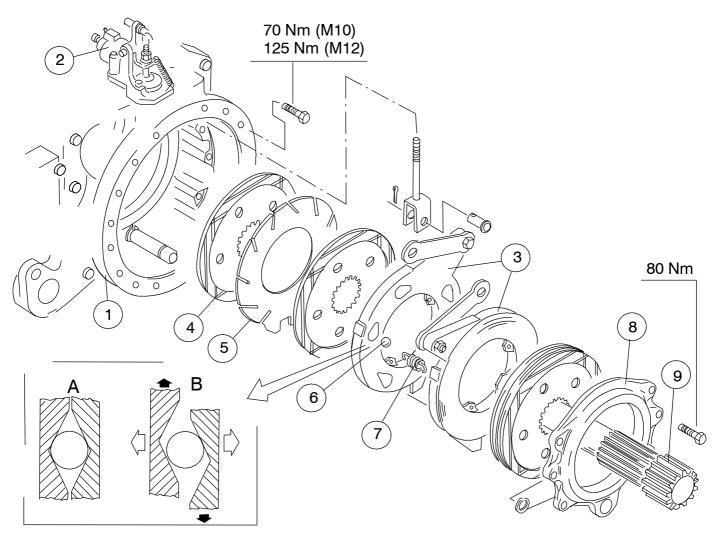


Figure 6. Brake mechanism when final drives 300, 450 and 650 (not 8350 – 8950Hi, L32106 –).


- 1. Brake housing
- 2. Brake cylinder
- 3. Application plates
- 4. Brake discs
- 5. Intermediate discs
- 6. Brake balls
- 7. Return spring (4 pcs per brake)
- 8. Support brake
- 9. Inner drive shaft
- A) Application plates and balls in neutral position
- B) Movement of application plates when braking

Code

510

Page

5A

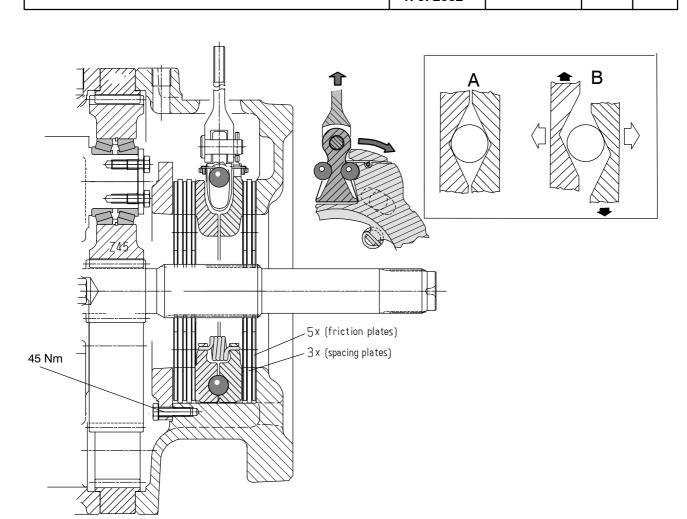


Picture 6A. Brake mechanism in 8350–8950Hi tractors, which has final drives 700 (**L32106–**).

In connection with final drives 700 the brake mechanism is different. In this system the application plate pressing force agains the brake discs is obtained by the tapered part, sides of which press the steel balls which turns the application plates causing the brake force.

There is not an anchor bolt in the lower part of the brakes, as in connection with final drives 300–650. In final drives 700 there are sholders in the intermediate discs and in the application plates which engage in the notches casted in the rear axle housing.

The brake discs are fitted on the drive shaft splines so that the holes in the discs are tried to place almost in the same line in order to facilitate free oil flow.

51. Brakes			
------------	--	--	--

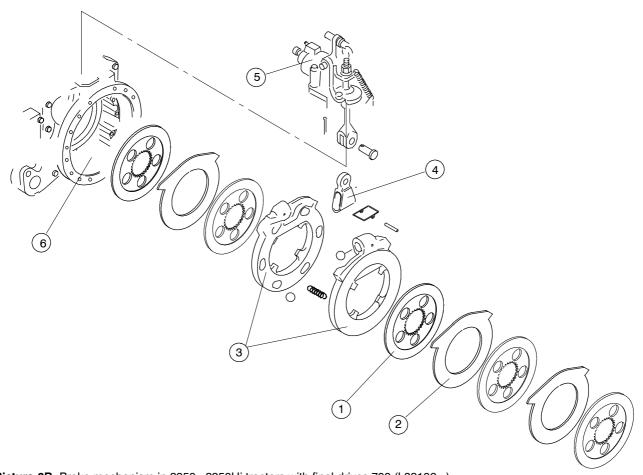

- Picture 6B. Brake mechanism in 8350 8950Hi tractors with final drives 700 (L32106 –).
- Brake discs (5 pcs). Holes almost in the same line.
 Intermediate discs (3 pcs).
- 3. Application plates (6 pcs balls between the plates).
- 4. Taperd part to expand the application plates.5. Brake working cylinder.
- 6. Brake housing.

Model **6000-8950**


Code **510**

6

Page

Pressure air brakes for trailer

Note! Pressure air brakes are available as an optional equipment for 6200 – 8950 tractors.

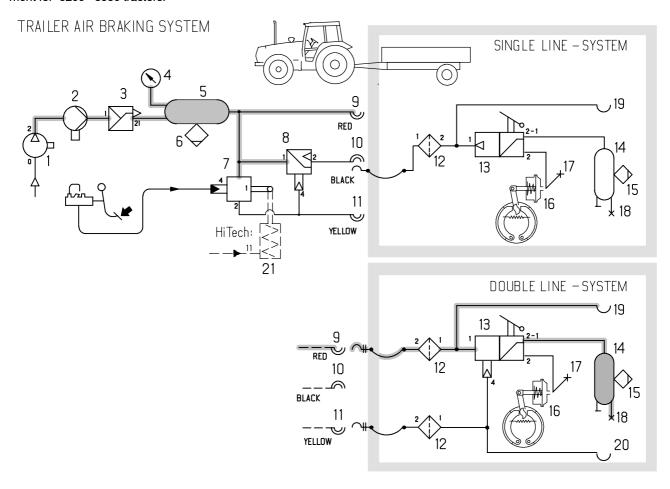

Picture 7. Components of pressure air brakes

- 1. Compressor
- 2. Deicer
- 3. Pressure regulator (incl. filter and relief valve).
- 4. Pressure gauge
- 5. Pressure air reservoir
- 6. Drain cock
- 7. Trailer brake control valve
- 8. Trailer brake control valve
- 9. Two-line system; reservoir line (red)
- 10. One line coupling (black)
- 11. Two-line system; brake line (yellow)
- 12. Filter
- 13. Trailer brake valve+brake power regulator
- 14. Pressure air reservoir
- 15. Water draining tap
- 16. Cylinder
- 17. Pressure test point
- 18. Pressure test point
- 19. Coupling for second trailer, reservoir line (red)
- 20. Coupling for second trailer, brake line (yellow)

Note! Valve (7) controls combined two-line and one-line trailer brake system according to the pilot pressure from the tractor brake pedal.

The valve has additionally a lever, which has been connected to the hand brake mechanism. When the hand brake lever is pulled up, the valve lever turns and causes braking effect in the trailer brakes.


Note! Valve (8) is intended to control the one-line system. The valve is controlled by pilot pressure from valve 7. Valve (8) also limits pressure to the trailer brakes to 5,2 bar. During braking the valve (8) lowers (in one-line system) the trailer brake pressure. When the braking is stopped air can flow via valve (8) to refill the air reservoir of the trailer brake.

Model **6000-8950**

Code

510

Page **7**

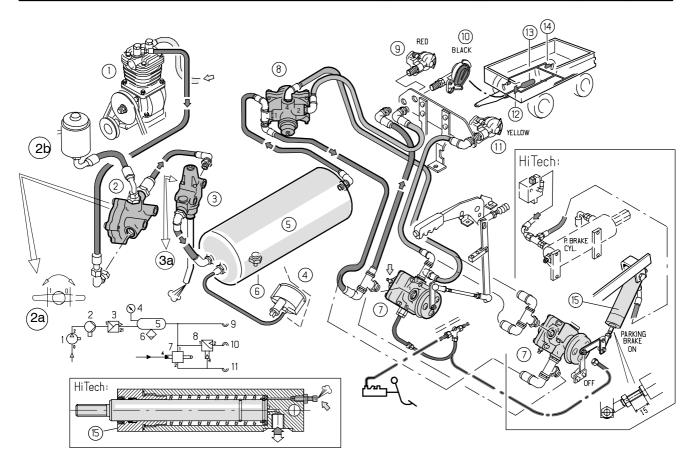

Picture 8. Pressure air brakes for trailer on 6000-8950

- Compressor
- 2. Deicer
- 2a. Flow valve lever
- 2b. Deicer reservoir
- 3. Pressure regulator
- 4. Pressure gauge
- 5. Pressure reservoir
- 6. Water draining plug
- 7. Control valve (one and two –line systens)
- 8. Control valve (one-line system)

General

The trailer is connected in the two-line system to two couplings. The couplings (9 and 11) have been marked as follows:


- Reservoir line red protecting cover
- Brake line yellow protecting cover
- In the one-line system the trailer is connected to the black (brake line) coupling (in certain marketing areas).

By turning connection (3a) on the pressure regulator to the bottom, compressed air can be taken off for auxiliary purposes (pressure about 8 bar, e.g. for tyre inflation). Through this connection the system can also be filled with auxiliary compressed air, e.g. if the tractor compressor does not function. In this case the connection need not be screwed fully into the bottom.

If the outdoor temperature is **below** +5°C, eythol alcohol or methanol must be used in the deicer (2b). Antifreeze agent flow valve lever (2a) must then be open (position 1). Reservoir and lever are placed under the cab RH side front edge. When filling the reservoir it must be removed from its holder


NOTE! In the system there must be full pressure, about 7–8 bar, before driving the tractor. Pressure gauge (4) is placed in the cab beside the dashboard.

When connecting in the two-line system trailer to tractor, connect first the trailer yellow coupling (without pressure). When disconnecting the trailer, disconnect first the red coupling (reservoir line).

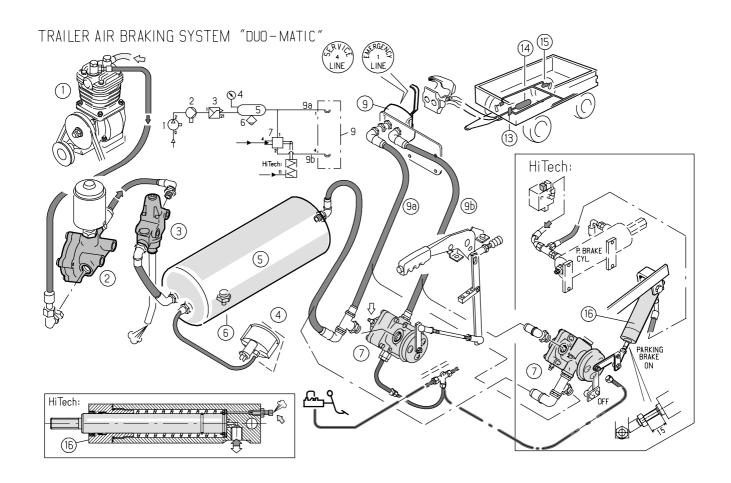


Picture 9. Duo-Matic pressure air brakes.

- Brake system with "Duo-Matic" -couplings is an alternative equipment for customers who have trailers equipped with these couplings (e.g. trailers like in lorries).
- "Duo-Matic" has only two-line system. Function (pressures etc.) corresponds the two-line system shown on page 510/6.
 - "Duo-Matic" couplings have not colour codes, because faulty connection is not possible.
 - 1) Compressor
 - 2) Deicer
 - 3) Pressure regulator
 - 4) Pressure gauge
 - 5) Pressure reservoir
 - 6) Water draining tap
 - 7) Trailer brake control valve
 - 9) Trailer coupling ,"Duo-Matic"
 - 9a) Two-line system; reservoir line
 - 9b) Two-line system; brake line
 - 13) Trailer brake valve + brake power regulator
 - 14) Trailer pressure air reservoir
 - 15) Trailer brake cylinder
 - 16) Servo cylinder (HiTech). Greasing the cylinder lever joint at every 250 running hours

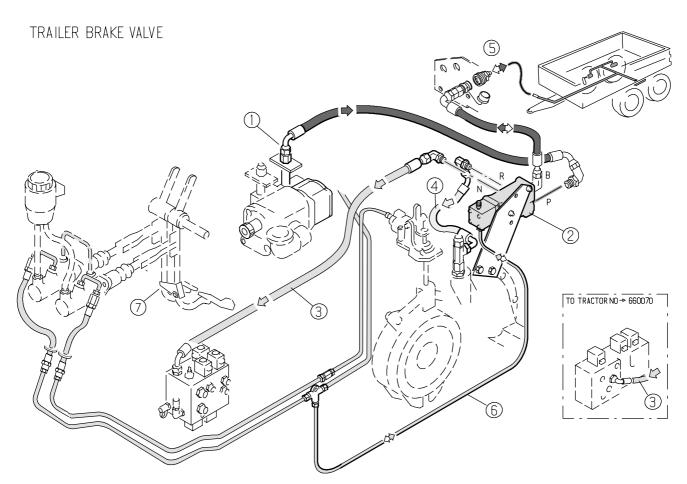

Picture 9. Brake valve for trailer

- 1. Pressure line from pump
- 2. Brake valve
- 3. Pipe from low pressure citcuit
- 4. Pipe
- 5. Coupling for trailer
- 6. Pilot pressure from brake circuit7. Brake pedals

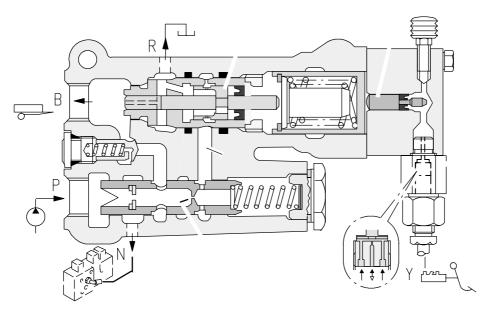

Kuva 10. Perävaunun jarruventtiilin halkileikkauskuva





	8, 11, 1990	Model	Code	Page	
51. Brake system	1. 9. 2002	6000-8950	511	1	


Reconditioning brakes (Op. no. 511)

1. Service brakes


A. Changing brake discs

Note! There are oil grooves on the friction surface of the brake discs. On new discs the grooves are 0,3 mm deep. If the grooves are worn away, the braking efficiency will be impaired and the discs should be replaced.

- 1. Remove the final drives (see Op. 451 1A).
- 2. Pull out the inner drive shaft. Remove the outer support plate in front of the discs.
- 3. Remove the outer brake discs.

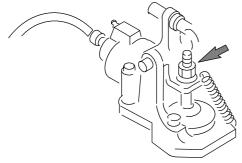

- 4. Slacken the adjusting nut (see arrow) until the brake mechanism is loose.
- 5. Take out the cotter pin and the link pin at the lower end of the stay. Pull the stay up until it is free from the application plate.

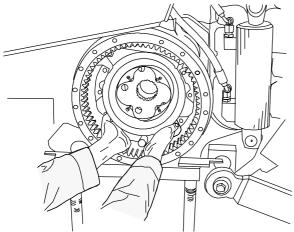


5a. Final drives 300, 450, 650: Remove the application plates by simultaneously pulling out the anchor bolt, fitted under the plate, and loosening the lower end of the plate from its position.

Note! The removal of the application plates is easier if the outermost circlip is removed from the anchor bolt.


- 5b. 8350-8950Hi with final drives 700 has not an anchor bolt. Pull the application rings out of the housing.
- 6. Remove the inner brake discs.
- 7. Check the friction surfaces in the brake housing and polish with an emery cloth.

8a. Final drives 300, 450, 650: Push the anchor bolt in through the hole in the brake housing, but do not press it right home. Fit the inner brake discs on the anchor bolt. Check that the discs remain located in front of the inner circlip.

8b. In connection with final drives 700 there is not the anchor bolt. Place the inner brake discs and the intermediate discs in position so that the lugs engage into the grooves on the brake housing.

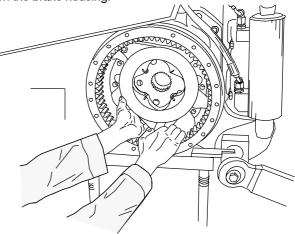


9. Final drives 300, 450, 650: Insert the application plate into the housing with the upper edge first locating the lower edge of the plate on the pulled—out anchor bolt. Press the bolt and the application plate into position. Fit the outer circlip on the anchor bolt. In connection with final drives 700, pass the application plate into place so that lugs on it engage into the grooves in the housing.

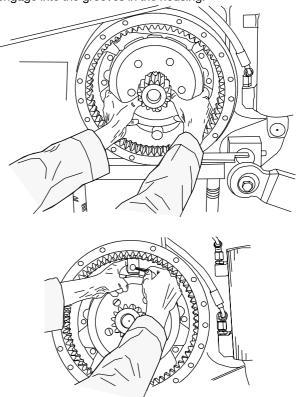

11. Using the link pin connect the brake stay to the link arms of the application plate and secure with the cotter pin. Tighten the adjusting nut at the upper end of the stay.

51. Brake system 8. 11. 4990 | Model | 6000 - 8950

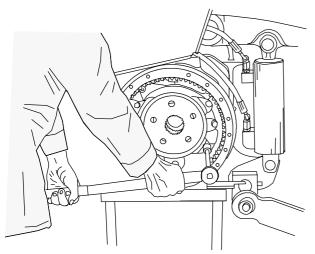


12. Fit the support and tighten it to **80 Nm** (8350–8950Hi, L32106–: **45 Nm**).

 Fit the final drives (see Op. 451 1E) and adjust brakes (see next instr. B).

B. Adjusting foot brakes

Note! The pedal free travel should be **70–80 mm** with the pedals latched together. Adjust as follows:

1. Fit blocks in front of the front wheels to prevent the tractor from moving. When adjusting the service brakes, the parking brake must not be engaged. In HiTech—models the engine must be in running and the shuttle lever must **not** be in the P—position.

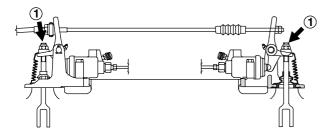

Final drives 300, 450 and 650:

2a. Raise the rear wheels off the ground and adjust both brakes separately with adjusting nuts (1) until the wheels cannot be turned by hand any further.


Slacken the adjusting nuts two turns and check that the wheels can rotate freely.

Final drives 700 (8350-8950Hi, L32106-):

- 2b. Tighten the adjusting nuts (1) to **15 Nm** and unscrew them **one and a half turn**.
- Check that the brake action is the same on both wheels while driving with the pedals latched together. Adjust if necessary.
- 5. Check the pedal free travel.

Note! Tractors equipped with the reverse drive controls: Adjust first the front pedals according to the instruction above. After this is adjusted the rear brake pedal by adjusting the lenght of the cable so that the rear brake pedal free travel becomes **20 mm**, see instruction on page 511/3.

Maintenance

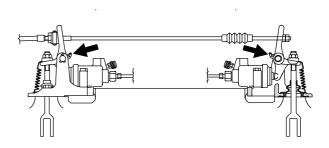

Code


511

Page

2

Note! Grease brake lever nipples (see arrows) weekly (or every 50 running hours). It is recommended, that the brake fluid is changed every other year.

C. Bleeding brake system

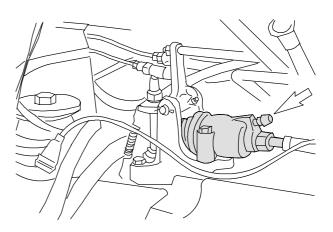

Note! Both brake cylinders have a bleeding nipple (see arrow). Bleed both brakes individually (pedals not latched together).

- 1. Check thet the brake fluid reservoir is full.
- 2. Pump several times with the pedal in order to built up the pressure in the system.
- 3. Depress one of the brake pedals and at the same time open the bleed nipple on the brake which is being actuated by the pedal. Close the nipple and slowly let the brake pedal up again.
- 4. Repeat the pumping action with the brake pedal until the brake fluid which runs out at the bleeding nipple is completely free of air.
- 5. The procedure for bleeding the brakes is the same on both sides

	8, 17, 1990	Model	Code	Page	
51. Brake system	1. 9. 2002	6000-8950	511	3	


D. Changing brake housing

The brake housing fixing bolts are difficult to open if the cabin is fitted in place. For that reason, the cabin must be lifted up before removing the brake housings (**removing** the cab, see section 80) or the tractor frame must be split (see Op. 423 1A).

When fitting the brake housing, apply sealing compound Hylosil RTV Grade 102 black or Loctite 5900 to the contact surfaces between gearbox-brake housing.

Brake housing fixing bolts are tightened to 270-330 Nm.


E. Adjusting master cylinder pushrod clearance

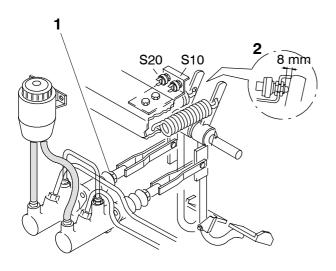

The clearance should be **1–3 mm**. This adjustment is done by slackening screw (1) and removing the cotter pin and the pivot pin and turning the clevis.

Note! Point 2 shows the brake light switch adjusting measurement.

F. Tractors with reverse drive controls (TwinTrac)

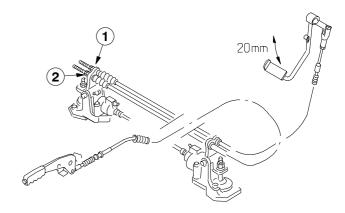


Adjusting rear brake pedal free travel:

- adjust first the free travel of the front pedals according to instruction $\boldsymbol{\mathsf{B}}.$
- adjust the free travel of the rear brake pedal to 20 mm by turning the adjusting nut 1.
- nut 2 is for adjusting the parking brake cable. Adjustment of the parking brake is shown on page 521/1-3.

51. Brake system 1. 10. 1999 Model Code Page 1. 9. 2002 6000-8950 511 4

2. Pressure air brakes for trailer (option)

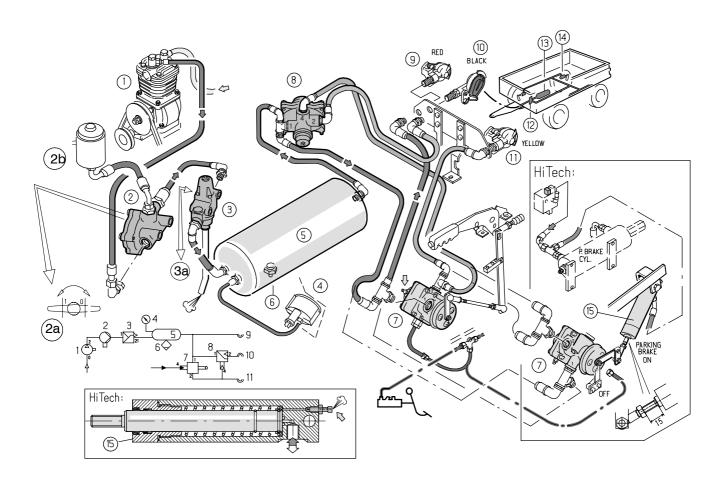

A. Maintenance

General

In the system there is a filter, which is placed in the pressure regulator (3). The filter must be cleaned/changed periodically (depending on use). The filter can be removed by removing the tyre filling connection (3a) on the pressure regulator.

Daily maintenance

Condensed water must be drained from the system daily by pressing or pulling the pin of the draining tap (6) under the air reservoir.

Weekly maintenance

Check the mounting of the compressor. Check/adjust the compressor belt tightness by adjusting the tension pulley (1).

Maintenance at intervals of 250 running hours

Grease the quick coupling rubber surfaces with silicone grease. Grease the hand brake lever joints.


B. Others

The pressure regulator has an in-built relief valve, which blows off, when the pressure in the reservoir exceeds 12-14 bar. This can be caused by e.g. faulty relief valve, icing or blocking filter.

Check the tightness of the system. The system must be so tight that the pressure drop after the engine stop is max. **0,15** bar during 10 minutes (2%).

If the hoses or hose unions have leakages, new parts are available as a spare part. Other components of the pressure air system must be changed as a complete unit since no separate spare parts are available.

C. Compressor

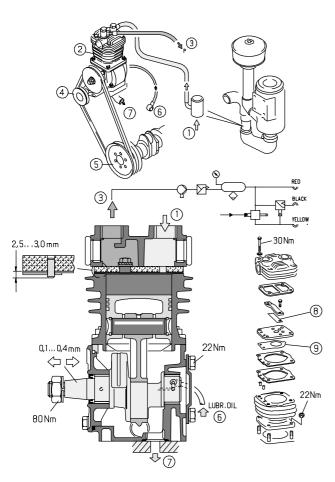


Picture 1 Compressor of pressure air brakes

- 1. Compressor draws air from the engine air intake system
- 2. Compressor
- 3. Pressure air into pressure regulator
- 4. Tension pulley
- 5. Compressor requires extra belt pulley (+hub piece)
- 6. Lubricating oil from engine
- 7. Return oil into engine
- 8. Preessure plates
- 9. Suction plate


Note! On the six-cylinder engines the compressor is fitted on the RH side of the engine. On 3- and 4-cylinder engines (without air conditioning/electric stop) the compressor is fitted on the LH side of the engine.

If the tractor is retrofitted with the air conditioning/electric stop, the compressor is fitted on the RH side of the engine. In fitted with pressure air+air conditioning the compressor is driven by two belts.

D. Pressure regulator

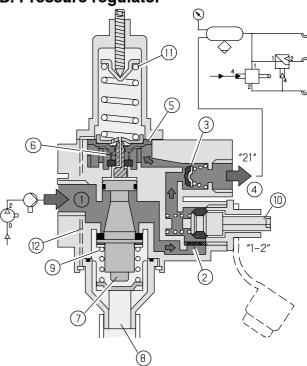

Air from compressor flows in through port 1. Air flows then via strainer 2, opens one—way valve 3, and flows through port 4 into reservoir..

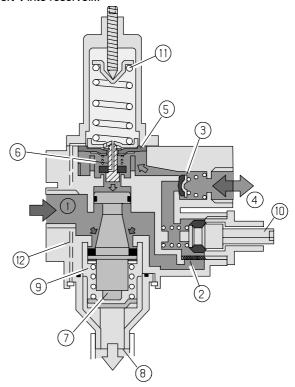


As soon as pressure in the reservoir is greater than spring force 11 (ca. 8 bar), memphrane 5 distorts and piston 6 moves upwards. At the same time rubber collar round the piston closes port in the piston and opens a passage to the upper part of piston 7.

Pressure moves piston **7** downwards against spring **9**, and air from compressor to port **1** blows off via port **8** to atmosphere.

Note! It is possible to adjust the working pressure with the adjusting screw of spring **11**. When the screw is turned outwards, working pressure lowers and vice versa.

E. Control valve for trailer brakes

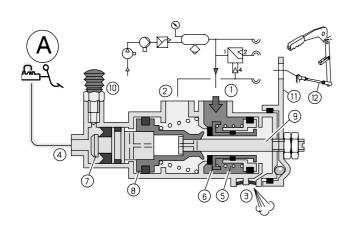


Function, fig. A (not braking):

In the neutral position spring 5 presses sleeve 6 against the valve body, passage from inlet port 1 forwards is closed. Passage 2 to the trailer coupling (and to the one—line system control valve) is connected to outlet port 3.

Adjusting hand brake

Hand brake adjustment is made with the aid of rod 12. Adjustment: Adjust the rod (12) length so that the trailer brake coupling (yellow) gives check pressure of 6,2 – 7,5 bar when the hand brake lever is in the second notch of the ratchet plate.

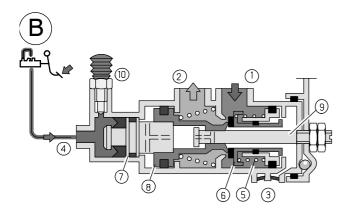

Function, fig. B (when braking):

Brake pedal hydraulic pressure via port 4 and piston 7 pushes it and the adjusting piston 8 to the right.

Connection from port 2 to outlet hole is closed, and passage from port 1 to 2 is opened. Compressed—air is directed via port 2 the trailer brake valve.

Pressure which acts against adjusting piston 8 pushes the piston (+piston 7) against the brake hydraulic pressure to the left and connection between ports 1->2 is closed. Balance situation is achieved.

F. Control valve of one-line system

Model


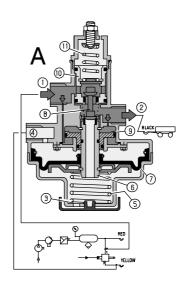


Fig. A (not braking)

Spring 5 holds membrane+sleeve 6 up. Upper end of valve spindle 8 has opened passage from inlet port 1 to trailer brake port 2. Pressure air flows from tractor reservoir via ports 1 and 2 to the trailer brakes.

Simultaneously in port $\, {f 2} \,$ pressure acts on the underside of piston ${f 1}.$

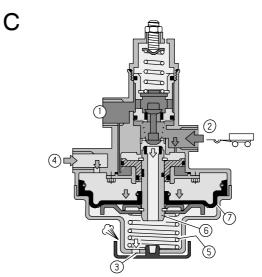

Function, fig. C (when braking):

When depressing the brake pedal pilot pressure from the trailer control valve port 4. Pressure affect the upper part of memphrane 7, and moves the memphrane and sleeve 6 downwards against spring 5. Passage from port 2 to sleeve 6 internal hole opens.

Pressure flows from port 2 via sleeve 6 and cover hole 3 to outdoors to give quick pressure drop for trailer pre-braking. The pressure drop causes an action of trailer brake valve in one-line system.

NOTE! During braking replacing air does not flow into the trailer brake system.

- The one-line system working pressure (5,2 bar) is lower than that in the two-line system. Control valve lowers the system pressure from 7 bar to 5 bar. Contrary to the two-line system coupling (yellow), the black coupling of the one-line system is under pressure when not braking.

The control valve does not require maintenance.

	Model	Code	Page]
51. Brake system	1. 8. 1998 6000-87	50 511	7	

Checking the pressure air brake system:

	Not braking with pedals or hand brake lever	Full braking with pedals or hand brake lever
Reservoir line (red)	6,0 – 8,0 bar	6,0 - 8,0 bar
Brake line (black)	4,8 - 5,6 bar	0
Brake line (yellow)	0	6,2 – 7,5 bar





	1.17:1998	Model	Code	Page	
51. Brake system	1. 9. 2002	6000-8750	521	1	

2. Parking brake


Note! Adjusting parking brake on tractors with pressure air system for trailer brakes, see instr. **E** on page **511/6**.

Note! Parking brake on tractors with HiTech Shuttle, see instruction **B** on pages **521/2-3**.


A. Adjusting parking brake (not HiTech tractors)

Note! The parking brake is controlled mechanically and it is connected to the foot brake mechanism by a cable. The parking brake is adjusted in the factory and re—adjustment is not necessary unless parts of brake mechanism have been changed. The parking brake is affected when the foot brakes are adjusted (**see instr. 1B**).

1. Before adjusting the parking brake, adjust foot brakes (see instr. **1B** on page **511/2**).

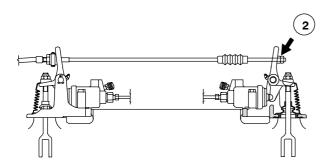

2. Adjust the parking brake lever free travel to about **50 mm** (at the lever end) by turning the adjusting nut (2) at the rear end of the cable.

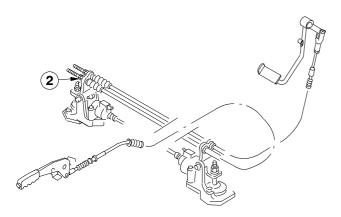

Note! If the tractor has reverse drive controls (TwinTrac), the parking brake adjustment is done with nut (2), but there are two cables connected to brake mechanism. The other cable is for the rear brake pedal.


51. Brake system

1. 10. 1999 1. 9. 2002

Model **6250-8950**

Code **521** Page 2

B. Parking brake on tractors with HiTech Shuttle

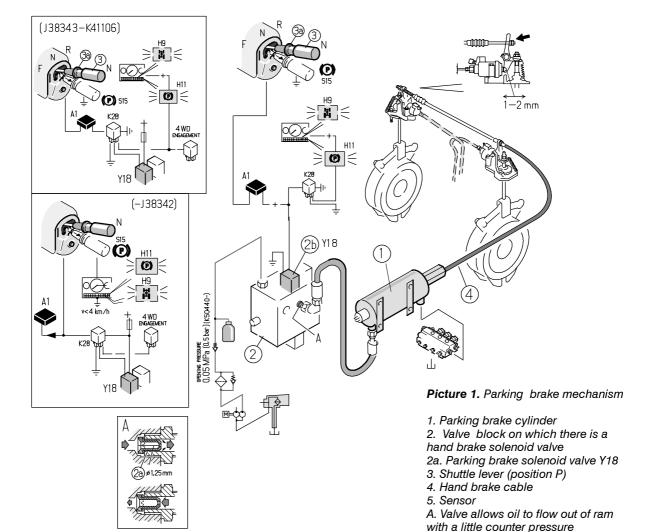

In connection with HiTech Shuttle the hand brake is controlled electro—hydraulically. When the engine is running and the shuttle lever (3) is moved to position P, hydraulic oil pressure from the low pressure circuit is cut off in the ram (1) (solenoid valve (2a) becomes unenergised) and the ram spring pulls the hand brake on.

When pressure again is connected to the ram (solenoid valve energised), pressure compresses the spring and hand brake is released.

When the engine is stopped (pump stops), the hand brake comes on automatically with an aid of the spring force.

If the hand brake does not disengage (engine running) although the shuttle lever is moved to the N, R or F position so:


- check whether the solenoid valve (2a) is energised (magnetic), when the hand brake is disengaged. If not, measure the solenoid resistance, which should be 11 12 ohms.
- If the solenoid is faulty, it should be replaced.
- If the solenoid is OK, measure whether current comes up to the solenoid connector. If not, check the solenoid wires and connectors.

- The condition of the shuttle lever switch can be tested in the AC 5/5.2 test mode, see pages 370/10 or 371/8.
- If the solenoid and its wiring and the hand brake switch are OK, the fault can lie in the hand brake relay or in the AC 5/5.2 control unit.
- If these are Ok, the fault can lie in the hydraulic system.

Note! If the hand brake engages itself during driving, the solenoid valve (2a) has become unenergised or low pressure circuit has malfunctions.

Note! If the driving speed exceeds 2 km/h (in the beginning of the production 4 km/h), the hand brake engagement is prevented by relay K28 (in the lever console).

– a non-return valve from ser. no. K50440 incl. has been fitted in the system which together with the AC 5.2 program modification, retards the pressure drop in the low pressure circuit in cases that e.g. engine stops during driving (e.g. fuel runs out). Program disengages all transmission multidisc clutches, if the engine stops and the driving speed exceeds 5 km/h. In this case the parking brake cylinder starts to brake after 15...30 seconds.

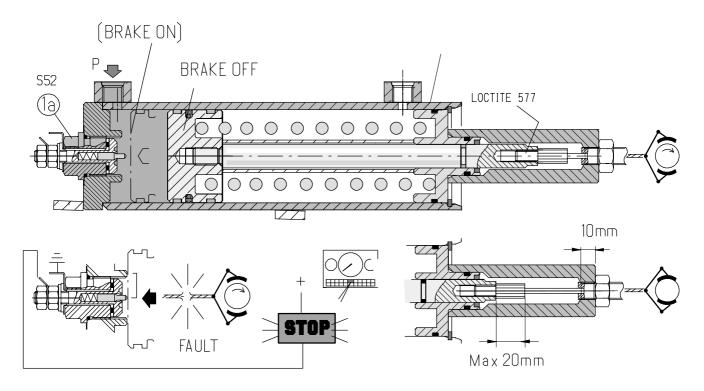


Picture 2. Hand brake ram on HiTech tractors.

1a) Safety switch lights up the STOP light in the dasboard, if e.g. the hand brake cable breaks.

Note! Adjusting dimensions MAX 20 and 10 mm must come true when fitting a new cable.

Adjusting hand brake on HiTech tractors

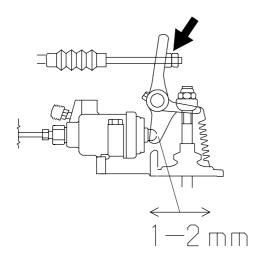

The length of the hand brake cable is adjusted, when necessary, so that when the hand brake is disengaged (=ram pressurised), the clearance between the RH side brake cylinder push rod and the brake mechanism lever is **1–2 mm**. The clearance can be adjusted with nuts at the end of the cable (arrow).

Note! Before adjustment ensure, that the foot brake is correctly adjusted, see instr. **B** on page **511/2**.



BRAKE VALVE, FITTING INSTRUCTION 26.09.★997 | Model | No Page | 28.07.1999 | 6000 – 8950 | **59.1** | 1(6)

6000-6400, 6900 8000, 8000R: Br.valve, pressure ratio 1:5,44 32556110 1:7,11 33646300 1:11,1 32530210 6600, 6800, 8050-8750: Br.valve, pressure ratio 1:5,44 33640900 1:7,11 33646400 1:11,1 33641300 6250Hi-8950Hi: Br.valve, pressure ratio 1:5,44 33619300 1:7,11 33670200 1:11,1 33619400

 The brake valve is used with trailers which have hydraulic brakes. The brake valve steers the tractor hydraulic pressure into the trailer brake cylinders when braking.

CHOOSING CORRECT BRAKE VALVE:

The max operating pressure of the brake valve is 15 MPa and valve pilot part pressure ratios are 1:5,44 or 1:11,1
 NOTE! Check that the trailer max. allowable pressure is not lower that 15 MPa (see trailer type plate).

Pressure ratio 1:5 is intended to be a universal valve for so called "normal" trailers.

Pressure ratio 1:11 is intended to be fitted on heavy trailers or on trailers whose brake cylinders require a high pressure e.g. small cylinders. (The brake pressure does not even in this case rise over 15 MPa, but full braking power is obtained faster).

Fitting instruction:

- Lower the lower links to the lowest position.
 Remove the LH side rear wheel.
- Connect T-connector 11 to the final drives return pipe and then connect the hose 12 end (fig. 1) to the T-connector.

BRAKE VALVE, FITTING INSTRUCTION	26.09.1997	Model	No	Page
	28.07.1999	6000-8950	59.1	2(6)

 Fit the brake valve bracket 9 under two screws of the rear axle housing according to the fig. 1.
 Rear axle housing fitting bolts:

> 70 Nm (M10 property class is 10.9) 125 Nm (M12 property class is 10.9)

- Attach the brake valve (2 pcs screws 8 + nut 15).
- Fit instead of the LH side brake pipe connector piece a T-connector 14 and connect the brake pipe 13 to the pilot part of the valve. Shape the pipe if necessary.
- Detach the hose end (pump/pressure filter valve plate) from the LH side gearbox valve block.

Hi Shift: detach the hose end (pressure filter—hydraulic block), from the clutch hydr. block (see picture 3b).

HiTech: detach the hose end (pressure filter-hydraulic block) from hydr. block (F-R, C3).


- Easiest way to connect the hoses is the following order (fig. 2):
 - 1. N
 - 2. R
 - 3. P or B
- Connect hose 10 to the brake valve port "N" using an angle connector 5 and connect the hose other end to the gearbox (standard models) valve block


Hi Shift: to the clutch hydraulic block (see picture 3b).

HiTech: to the hydr. block (F-R, C3).

- Connect the end of the hose 12 to the brake valve port "R".
- Connect the detached pressure hose end to the port "P" with an angle connector 5.
- Connect hose 4 to the brake valve port "B" and fasten the pipe other end to the quick—action coupling bracket using intermediate nipple 3 and male connector 1.
- Bleed brake system.
- Check for leaks in brake system. Measure the brake valve pressure from the quick—action coupling. Start the engine (hydraulic oil temperature 50–65°C, engine revs1500 r/min). Latch the brake pedals together and increase gradually brake pedal force. The pressure should rise up to 15 MPa.

BRAKE VALVE, FITTING INSTRUCTION	26.0 9. 1997	Model	No	Page
	28.07.1999	6000-8950	59.1	3(6)

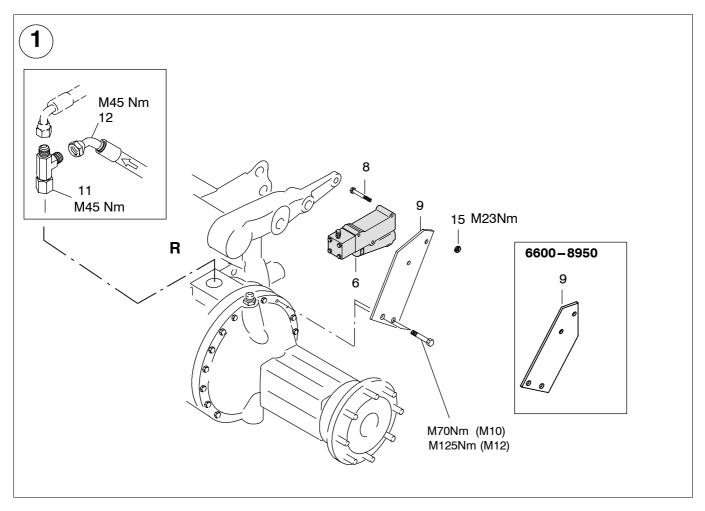

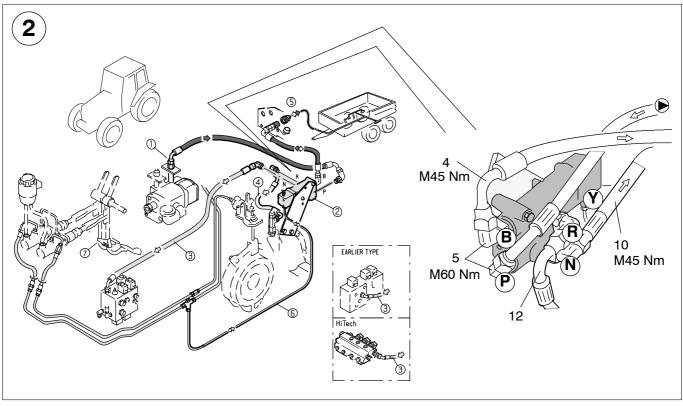

26.09.1997 28.07.1999


Model

No

Page


4(6)

6000-8950 | **59.1**

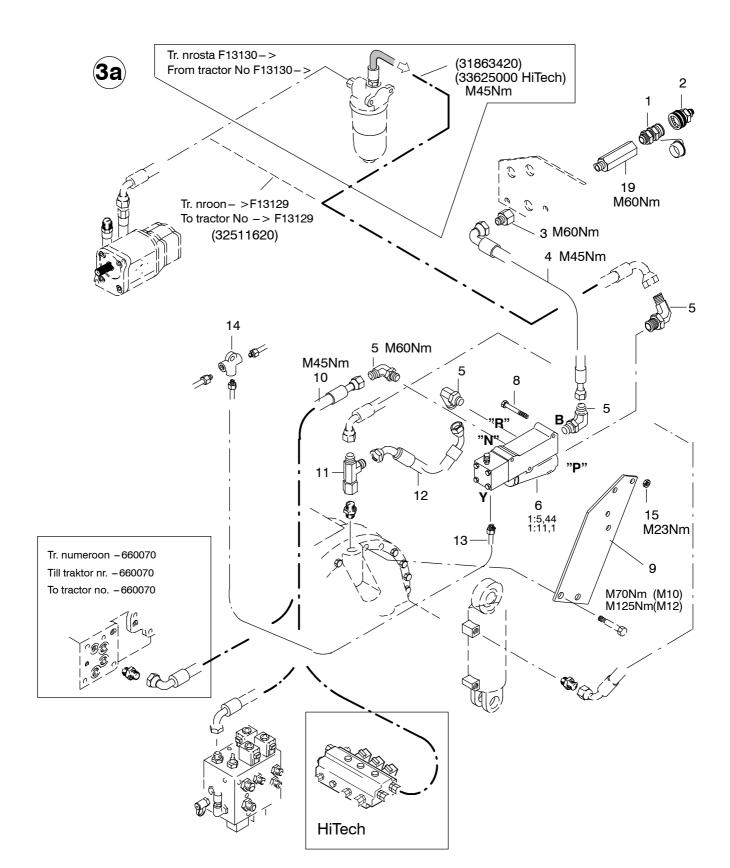

BRAKE VALVE, FITTING INSTRUCTION	26.0 9.1 997	Model	No	Page
	28.07.1999	6000-8950	59.1	5(6)

Jos traktorissa on Hi Shift:
Om traktorn har Hi Shift:

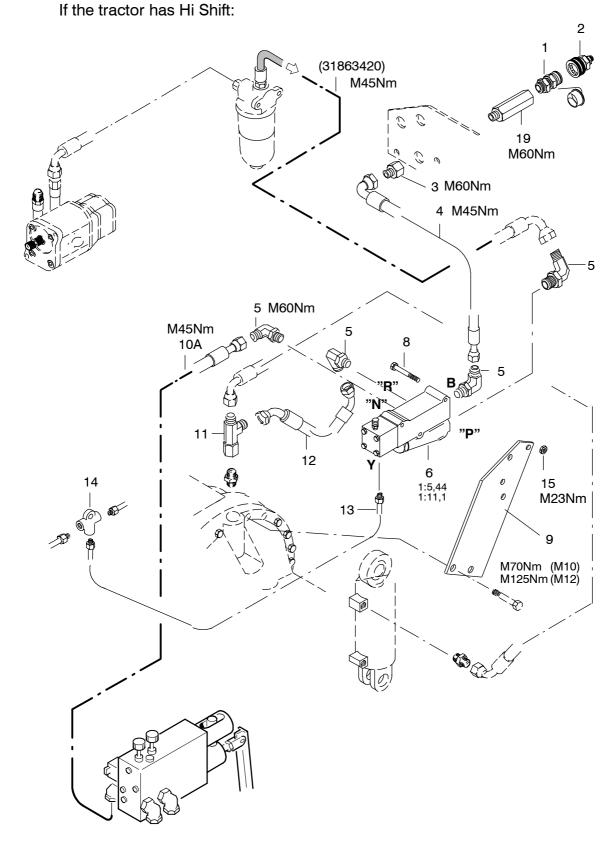

BRAKE VALVE, FITTING INSTRUCTION

26.09.1997 28.07.1999

Model

No

Page

6000-8950

59.1

6(6)

PARTS LIST:

	1	32556110	Jarruventtiili	Bromsventil	Brake valve	Bremsventil	1:5,44 :
	1	33646300	Jarruventtiili	Bromsventil	Brake valve	Bremsventil	1:7,11 :
	1	32530210	Jarruventtiili	Bromsventil	Brake valve	Bremsventil	1:11,1 :
	1	33640900	Jarruventtiili	Bromsventil	Brake valve	Bremsventil	1:5,44 : :
	1	33646400	Jarruventtiili	Bromsventil	Brake valve	Bremsventil	1:7,11 : :
	1	33641300	Jarruventtiili	Bromsventil	Brake valve	Bremsventil	1:11,1 : :
	1	33619300	Jarruventtiili	Bromsventil	Brake valve	Bremsventil	1:5,44 : : :
	1	33670200	Jarruventtiili	Bromsventil	Brake valve	Bremsventil	1:7,11 : : :
	1	33619400	Jarruventtiili	Bromsventil	Brake valve	Bremsventil	1:11,1 : : :
1 2 3 4 5	1 1 1 4 4	32609800 31628700 GS9304 32599600 GS9452 KH9032	.Pikaliitin koiras .Pikaliitin naaras .Liitin .Letku .Liitin .O-rengas	Snabbkoppling hand Snabbkoppling hond Nippel Slang Nippel O-ring		Schnellkupplung / Schnellkupplung ? Verbindung Schlauch Verbindung O-ring	
6	1	32434020	.Jarruventtiili	Broms sventil	Brake valve	Bremsventil	1:11,1
	1	32436120	.Jarruventtiili	Broms sventil	Brake valve	Bremsventil	1:5,44
	1	33651500	.Jarruventtiili	Broms sventil	Brake valve	Bremsventil	1:7,11
8 9	2 1 1	HA8328 33629500 33629600	.Ruuvi .Kannatin .Kannatin	Skruv Hållare Hållare	Screw Support Support	Schraube Halter Halter	:
10	1 1	32599500 33538200	.Letku .Letku	Slang Slang	Hose Hose	Schlauch Schlauch	1,::
10A 11 12 13	1 1 1 1 1	33291900 GS9276 32599700 33629700 33629800 33590200	Letku .Liitin .Letku .Putki .Putki .Putki	Slang Nippel Slang Rör Rör Rör	Hose Union Hose Pipe Pipe Pipe	Schlauch Verbindung Schlauch Rohr Rohr	HiShift : ::::::::::::::::::::::::::::::::::
14	1	30458200	.Liitin	Nippel	Union	Verbindung	
15	2	JB8904	.Mutteri	Mutter	Nut	Mutter	
19	1	32773100	.Liitin	Nippel	Union	Verbindung	
						-	


: = 6000-6400, 6900 8000, 8000R : : = 6600, 6800, 8050-8750 : : : = 6250Hi-8950Hi

AIR PRESSURE BRAKES FOR TRAILER,	>	Model	No	Page
fitting instruction	16.06.2000	6000-8950Hi	59.3	1 (24)

Trailer air braking system 32910800
Trailer air braking system *) 34327000
Trailer air braking system, HiTech 33692600
Trailer air br. system, HiTech*) ... 34186200
Trailer air br. system (Duo-Matic) 33019000
T. air br. system (Duo-Matic) *) ... 34327100
T. air br. system (Duo-Matic), HiTech ... 33690100
T. air br. system (Duo-Matic), HiTech *) 34078600

*) only brake system parts, see fig. A,B,C,D

- NB! if the compressor has not been mounted, see separate instruction.

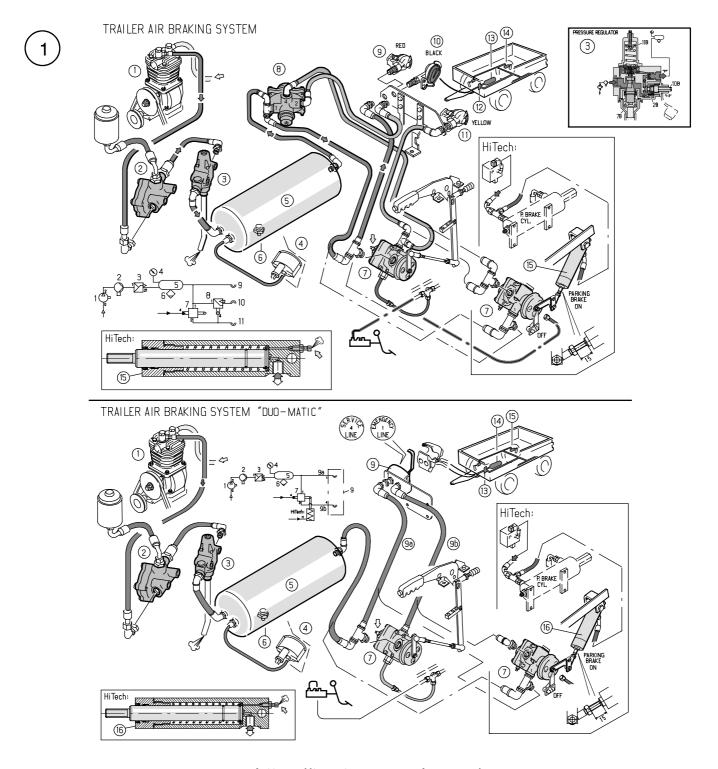

AIR PRESSURE BRAKES FOR TRAILER,		Model	No	Page
fitting instruction	16.06.2000	6000-8950Hi	59.3	2 (24)

FITTING:

 Fasten support 59 under two gearbox-to- fuel tank bolts (M16: 270-330Nm, M12: 125 Nm), see picture A.

Holder **107** is fastened between foot step bracket and intermediate frame support (fig. A.1).

- Fasten bracket 120 under the nuts of the foot step front support.
- Use the reservoir bracket 17 as a pattern and drill holes (2 pcs, 6,2 mm) through the wall on the foot step frame side (picture I).
- Mount the deicer 83 according to picture A, A.1. Pour into reservoir 12A methanol or ethylic alcohol (0,5 l, e.g. AEROL 100). By opening the wing screw the holder + pump can be inclined for easy filling. With lever B can the flow of antifreeze agent cut into the system (if outdoor temperature is over 5_C. In summer the reservoir can be empty, then the lever position is unimportant).
- Fasten the air reservoir 65, the pressure regulator 106 and the control valve 58 (one-line system) according to the picture A, A.1.
- Make a 52 mm hole in the instrument panel for the pressure gauge 78 (dimensions in picture A.1., HiTech – models, picture B, B.1: the gauge needs a back plate 116). Make the hole accurate, since the gauge fixing flange is small. Pass the gauge pipe (reservoir – gauge) through the hole in the cab front wall (beside the 37 pin connector).

Take current and ground for the gauge from the ind. light for the rear working light switch (S2) (wire no 26 black).

Connect the white earth wire. Fasten the pressure gauge.

- Pass hose 85 along the tractor left side under the battery and behind the filter and fuel injection pump to the compressor.
- Fasten the coupler bracket (parts 7, 13, 14) on the PTO housing, and fit the couplers 1, 2, 3 (picture A.2).
- Not HiTech -models:

Take away the shield of the parking brake and the holder. Drill holes 10 mm (2 pcs) and a longer opening (12x35) according the picture **A.3**.

- Drill three holes Ø12 mm) in the lower side plate of the cab for the bracket 33.
 Fasten the control valve 43.
- Not HiTech -models:

Fit the parking brake lever mechanism. Take the control pressure from the brake system (lower brake tube) with help of a T – connector **50** (placed instead of a straight connector). Bleed finally the brake system

(NB! the control valve has also a bleeding nipple).

AIR PRESSURE BRAKES FOR TRAILER,	$\overline{}$	Model	No	Page
fitting instruction	16.06.2000	6000-8950Hi	59.3	3 (24)

Hitech – models (pictures B, B.1, D, D.1): Drill two holes (∅11 mm) in the lower side plate of the cab according to the picture B.1.
 Fasten the control valve 30 and cylinder 23 to the holder 14. Adjust the distance between the nut and the shoulder of the piston rod to 15 mm (picture B.2)

NB! put two washers between the joint piece and the lever (picture **B.2**). Fit the pre—assembled holder.

Take the control pressure from the brake system (lower brake tube) with help of a T- connector (37, picture B), placed instead of a straight connector). Take the working pressure from the parking brake cylinder with help of a T- connector (50, picture B).

- Fit the hoses and the shield tubes (around the tubes). The hoses can be connected with the connectors by pushing.
- Duo Matic (pictures C, D):

The Duo-Matic trailer air pressure system has only a two-line system. The control valve (one-line system) lacks, and the trailer coupling is different.

The mounting can be carried out as previously described according to the pictures C and D. NB! If the tractor has rederse drive controls: move with help of the sleeves **84** the plate **35** (fig. C) backwards. Do not fit the connector **2**.

ADJUSTMENTS:

 Hand brake adjustment is made with the aid of rod 32 (fig. A).

Adjustment: Adjust the rod length so that the trailer brake coupling (yellow) gives check pressure of **6,2 – 7,5 bar** when the hand brake lever is in the second notch of the ratchet plate.

- Check the tightness of the system. The system must be so tight that the pressure drop after the engine stop is max. 0,15 bar during 10 minutes (2%).
- Checking the pressure air brake system:

	Not braking with pedals or hand brake lever	Full braking with pedals or hand brake lever
Reservoir line (red)	6,0 - 8,0 bar	6,0 - 8,0 bar
Brake line (black)	4,8 – 5,6 bar	0
Brake line (yellow)	0	6,2 – 7,5 bar

AIR PRESSURE BRAKES FOR TRAILER,	> <	Model	No	Page
fitting instruction	16.06.2000	6000-8950Hi	59.3	4 (24)

GENERAL (fig. 1):

Instructions for operating:

- On the two hose system the trailer is connected to two different couplings (9-11), which have been marked as follows:
 - Container line red cover
 - Brake line yellow cover

On one hose system the trailer is connected to the coupling with **black** cover (brake line) (is used on some marketing areas).

The couplings of the Duo-Matic system have no colour code, because these couplings cannot be confused.

- From air pressure system it is also possible to get press for external purpose (8 bar), e.g. for tyre/tire filling, from the coupling (fig. 1, ref 3) which is situated on the right side under the cab. Through this coupling the system can be filled, when needed, by outside compressed air e.g. when the compressor of the tractor is broken. By doing this the coupling can not be turned to bottom.
- When the couplings (1) of the trailer are not in use, keep the shields on them.
- When the ambient temperature is colder than +5°C, in the antifreeze container (3) must be filled with ethyl alcohol or methanol. The liquid streaming valve lever (4) has to be open (position 1). The container and streaming valve lever are situated under the right cab corner in front of the cab. The valve with the container can be inclined when filling by loosening the wing screw of the holder.

CAUTION: There must be full pressure in the air pressure system, about 7–8 bar (pressure gauge 8 of the system is beside the instrument panel), before you start driving a tractor which has a trailer with air pressure brakes.

The pressure regulator (fig 1, ref 3) adjusts the system pressure can, if necessary, be adjusted with spring 11 adjusting screw.

AIR PRESSURE BRAKES FOR TRAILER,	> <	Model	No	Page
fitting instruction	16.06.2000	6000-8950Hi	59.3	5 (24)

Service

The system includes also a filter 2, which is situated in the pressure regulator (fig 1, ref 3). It has to be cleaned/changed occasionally (depending on use). The filter can be taken away by first loosening the tyre/tire filler coupling.

The pressure regulator is provided with inbuilt pressure regulator, which is operated, if the pressure rises to 12–14 bar. This can be caused e.g. by the broken pressure regulator valve, frozen or blocked filter.

Service daily:


The water has to be drained **daily** from the press air system by pressing and pulling the spindle (fig. 1, ref. 6) of the water draining valve at the bottom of the container.

Service weekly or after every 50 operating hours:

 Check the fixing bolts of the compressor. Check and adjust the compressor belt tension by adjusting the adjusting wheel.

Service after every 250 operating hours


- Grease the rubber surfaces of the trailer quick couplings (1) with silicone—bottomed grease.
 Grease the joint of the lever for handbrake cylinder (7).
- Check the tightness of the system. The system has to be so tight, that after stopping the engine the pressure does not decrease more than 0,15 bar during 10 minutes (2%). When needed repair the leakages.

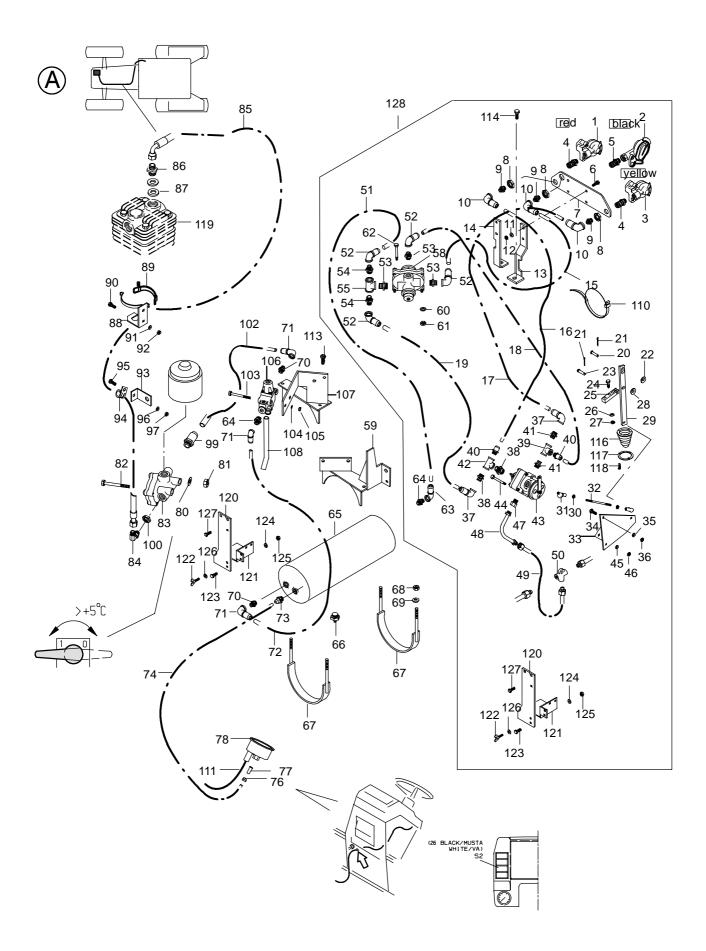

No Model

7 (24)

Page

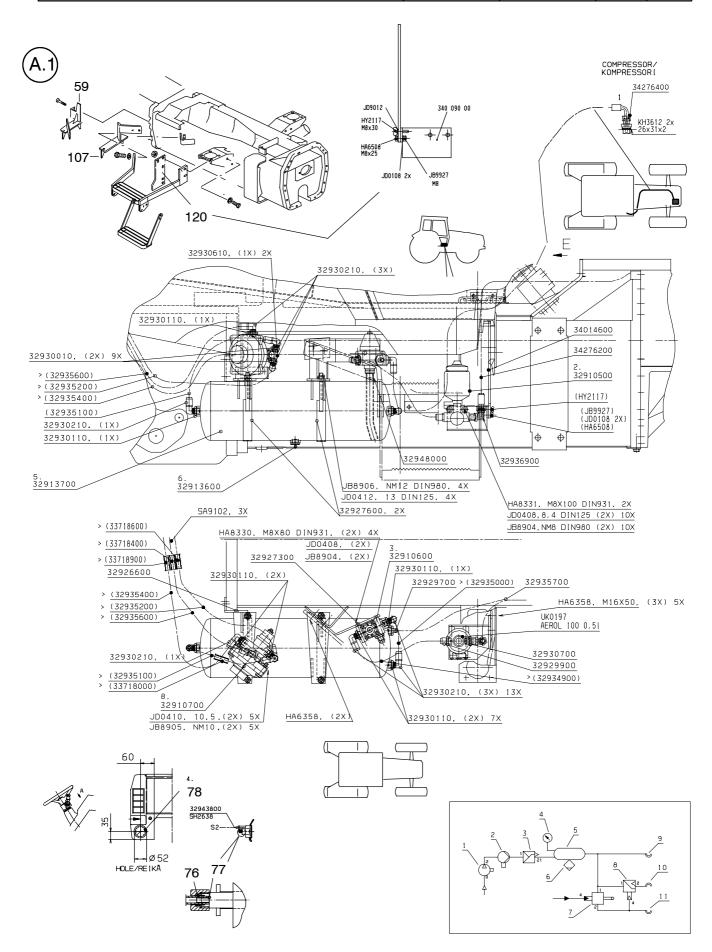


Model

No

8 (24)

Page

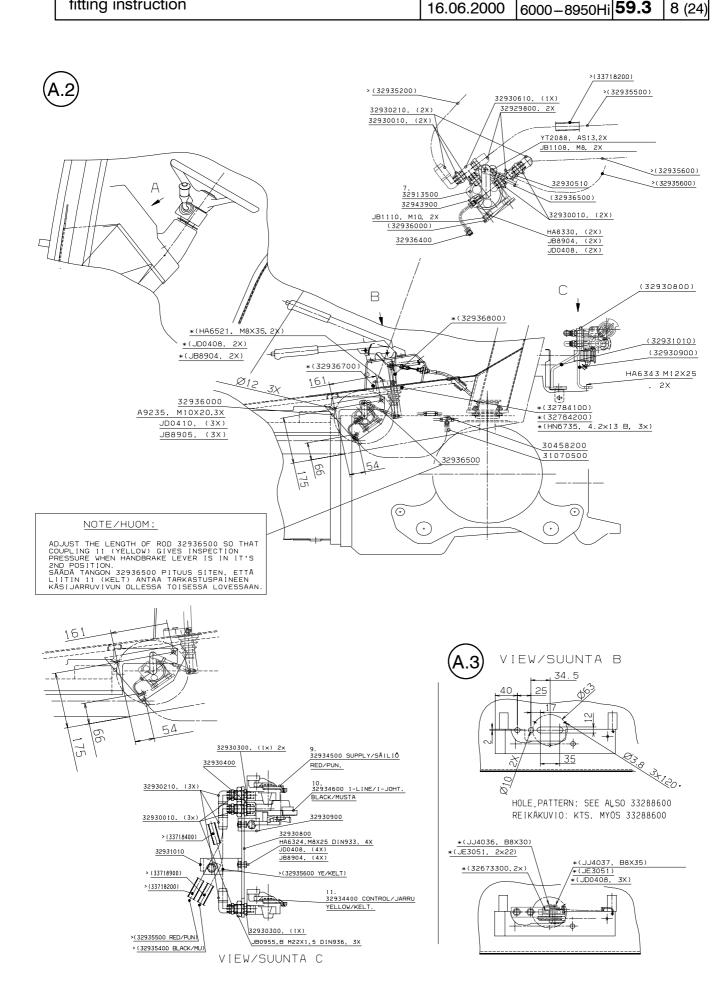

AIR PRESSURE BRAKES FOR TRAILER, fitting instruction

6000-8950Hi **59.3** 16.06.2000

Model No.

Page 9 (24)

32910800 Paineilmajarrut Tryckluftsbroms Air press. brake L.druckbremse Frein à air comprimé 1

1	1	32934500	.Liitin	Nippel	Union	Verbindung	Raccord	
2	1	32934600	.Liitin	Nippel	Union	Verbindung	Raccord	
3	1	32934400	.Liitin	Nippel	Union	Verbindung	Raccord	
4	2	32930300	.Liitin	Nippel	Union	Verbindung	Raccord	
5	1	32930400	.Liitin	Nippel	Union	Verbindung	Raccord	
6	4	HA6324	.Ruuvi	Skruv	Screw	Schraube	Vis	
7	1	32930800	.Levy	Platta	Plate	Platte	Plaque	
8	3	JB0955	.Mutteri	Mutter	Nut	Mutter	Ecrou	
9	3	32930010	.Pikaliitin	Snabbkoppling	Quick coupler	Schnellkuppl.	R. rapide	
10	3	32930210	.Liitin	Nippel	Union	Verbindung	Raccord	
11	4	JD0408	.Aluslevy	Bricka	Washer	Scheibe	Rondelle	
12	4	JB8904	.Mutteri	Mutter	Nut	Mutter	Ecrou	
13	1	32931010	.Kannatin	Hållare	Support	Halter	Support	
14	1	32930900	.Kannatin	Hållare	Support	Halter	Support	
15	1	32935400	.Letku	Slang	Hose	Schlauch	Tuyau flexible	
13	2	33718900	.Suojaputki	Skyddsrör	Shield pipe	Schutzrohr	T. de protection	L=2060
16	1	32935500	.Letku	Slang	Hose	Schlauch	Tuyau flexible	L-2000
10	2	33718200		Skyddsrör		Schutzrohr	T. de protection	L=940
17	1		.Suojaputki .Letku		Shield pipe			L=940
17	-	32935600		Slang	Hose Chiefd nine	Schlauch	Tuyau flexible	1 1040
40	1	33718400	.Suojaputki	Skyddsrör	Shield pipe	Schutzrohr	T. de protection	L=1340
18	1	32935300	.Putki	Rör	Pipe	Rohr	Tuyau	1 4000
40	1	33018300	.Suojaputki	Skyddsrör	Shield pipe	Schutzrohr	T. de protection	L=1000
19	1	32935200	.Letku	Slang	Hose	Schlauch	Tuyau flexible	
	1	33718600	.Suojaputki	Skyddsrör	Shield pipe	Schutzrohr	T. de protection	L=1470
20	1	JJ4037	.Таррі	Tapp	Pin	Stift	Cheville	
21	2	JE3051	.Sokka	Sprint	Pin	Splint	Goupille	
22	3	JD0408	.Aluslevy	Bricka	Washer	Scheibe	Rondelle	
23	1	JJ4036	.Таррі	Тарр	Pin	Stift	Cheville	
24	2	HA9230	.Ruuvi	Skruv	Screw	Schraube	Vis	
25	1	32936700	.Kannatin	Hållare	Support	Halter	Support	
26	2	JD0408	.Aluslevy	Bricka	Washer	Scheibe	Rondelle	
27	2	JB8904	.Mutteri	Mutter	Nut	Mutter	Ecrou	
28	2	32673300	.Kiinnityslaatta	Fästplåt	Mounting plate	Bef.platte	Plaque de support	
29	1	32936800	.Vipu	Spak	Lever	Hebel	Levier	
30	2	JB1108	.Mutteri	Mutter	Nut	Mutter	Ecrou	
31	2	YT2088	.Nivel	Led	Joint	Gelenk	Joint	
32	1	32936500	.Tanko	Stång	Rod	Stange	Barre	
33	1	32936000	.Teline	Konsol	Bracket	Gestell	Support	
34	3	HA9235	.Ruuvi	Skruv	Screw	Schraube	Vis	
35	3	JD0410	.Aluslevy	Bricka	Washer	Scheibe	Rondelle	
36	3	JB8905	.Mutteri	Mutter	Nut	Mutter	Ecrou	
37	2	32930210	.Liitin	Nippel	Union	Verbindung	Raccord	
38	2	32930010	.Pikaliitin	Snabbkoppling	Quick coupler	Schnellkuppl.	Raccord rapide	
39	1				Union		•	
40	2	32930510	.Liitin .Pikaliitin	Nippel Snabbkoppling		Verbindung	Raccord rapida	
		32929800			Quick coupler	Schnellkuppl.	Raccord rapide	
41	2	32930010	.Pikaliitin	Snabbkoppling	Quick coupler	Schnellkuppl.	Raccord rapide	
42	1	32930610	Liitin	Nippel	Union	Verbindung	Raccord	
43	1	32913500	.Ohjausventtiili	Styrventil	Steering valve	Steuerventil	Valve de direction	

AIR PRESSURE BRAKES FOR TRAILER,		Model	No	Page
fitting instruction	16.06.2000	6000-8950Hi	59.3	10(24)

44 45 46 47 48 49 50 51 52 53 54 55 58 59 60 61 62 63 64 66 66 67 68 69 69 69 69 69 69 69 69 69 69 69 69 69	2 2 2 1 1 1 1 1 1 1 4 3 2 1 1 1 1 2 2 2 1 1 1 1 1 2 4 4 0	HA8330 JD0408 JB8904 32943900 32936400 31070500 30458200 32935100 32930210 32930210 32930610 32930610 32910700 32926600 JD0410 JB8905 HA8330 32930210 32930110 32930110 32913700 32913600 32927600 JB8906 JD0412	.Ruuvi .Aluslevy .Mutteri .Liitin .Putki .Letku .Liitin .Putki .Suojaputki .Liitin .Pikaliitin .Pikaliitin .Venttiili .Teline .Aluslevy .Mutteri .Ruuvi .Liitin .Pikaliitin .Pikaliitin .Säiliö .Tulppa .Sanka .Mutteri .Aluslevy	Skruv Bricka Mutter Nippel Rör Slang Nippel Rör Skyddsrör Nippel Snabbkoppling Snabbkoppling Nippel Ventil Konsol Bricka Mutter Skruv Nippel Snabbkoppling Behållare Plugg Bygel Mutter Bricka	Screw Washer Nut Union Pipe Hose Union Pipe Shield pipe Union Quick coupler Quick coupler Union Valve Bracket Washer Nut Screw Union Quick coupler Container Plug Bow Nut Washer	Schraube Scheibe Mutter Verbindung Rohr Schlauch Verbindung Rohr Schutzrohr Verbindung Schnellkuppl. Schnellkuppl. Verbindung Ventil Gestell Scheibe Mutter Schraube Verbindung Schnellkuppl. Behälter Stopfen Bügel Mutter Scheibe	Vis Rondelle Ecrou Raccord Tuyau Tuyau flexible Raccord Tuyau T. de protection Raccord Raccord rapide Raccord rapide Raccord Soupape Support Rondelle Ecrou Vis Raccord Raccord rapide Reservoir Bouchon Support Ecrou Rondelle	L=390
	-							
69		JD0412	.Aluslevy					
70	2	32930110	.Pikaliitin	Snabbkoppling	Quick coupler	Schnellkuppl.	Raccord rapide	
71	3	32930210	.Liitin	Nippel	Union	Verbindung	Raccord	
72	1	32935000	.Putki	Rör	Pipe	Rohr	Tuyau	
73	1	32929700	.Pikaliitin	Snabbkoppling	Quick coupler	Schnellkuppl.	Raccord rapide	
74	1	32935700	.Putki	Rör	Pipe	Rohr	Tuyau	
76 77	1	32944100 32944000	.Rengas .Holkki	Ring Hylsa	Ring Sleeve	Ring Hülse	Anneau Manchon	
78	1	32934800	.Painemittari	Tryck mätare	Press. instr.	Druckinstrumen		
70	1	SH2638	.Lamppu	Lampa	Bulb	Lampe	Lampe	
80	2	JD0408	.Aluslevy	Bricka	Washer	Scheibe	Rondelle	
81	2	JB8904	.Mutteri	Mutter	Nut	Mutter	Ecrou	
82	2	HA8331	.Ruuvi	Skruv	Screw	Schraube	Vis	
83	1	32910500	.Pumppu	Pump	Pump	Pumpe	Pompe	
84	1	32936900	.Liitin	Nippel	Union	Verbindung	Raccord	
85 86	1	34276200 34276400	.Putki .Liitin	Rör Nippel	Pipe Union	Rohr Verbindung	Tuyau Raccord	
87		KH3612	.Tiiviste	Tätning	Gasket	Dichtung	Joint	
88	1	32927900	.Teline	Konsol	Bracket	Gestell	Support	
89	1	33133400	.Side	Band	Band	Binde	Bande	

AIR	PRESSU	RE BRAKES	FOR TRAILE	R,	><	Model	No	Page
fittir	ng instruct	ion			16.06.2000	6000-8950Hi	59.3	11(24)
90 2 91 2 92 2 93 1 94 1 95 1 96 1 97 1 99 1	HA9219 JD0405 JB1105 32935900 30086100 HA6322 JD0408 JB8904 32929900 32930700	.Ruuvi .Aluslevy .Mutteri .Levy .Pidin .Ruuvi .Aluslevy .Mutteri .Pikaliitin	Skruv Bricka Mutter Platta Klämma Skruv Bricka Mutter Snabbkoppling Mutter	Screw Washer Nut Plate Clamp Screw Washer Nut Quick coupler Nut	Schraube Scheibe Mutter Platte Klammer Schraube Scheibe Mutter Schnellkupplun Mutter	Vis Rondelle Ecrou Plaque Agrafe Vis Rondelle Ecrou g Ecrou	Raccord	d rapide
102 1 103 2 104 2 105 2 106 1 107 1 108 1 110 3 111 1 113 5 114 2 116 1	32934900 HA8330 JD0408 JB8904 32910600 32927300 32948000 SA9102 32943800 HA6358 HA6343 32784100	.Teline .Letku .Johdinside .Johdinsarja .Ruuvi .Ruuvi .Suojakumi	Rör Skruv Bricka Mutter Tryckregleringsv. Konsol Slang Buntband Ledningssats Skruv Skruv Skruv	Bracket Hose Wiring band Wiring set Screw Screw Shield rubber	Gestell Schlauch Leitungsklemm Verkabelung Schraube Schraube Schutzgummi	Tuyau Vis Rondelle Ecrou Valve contrôle pre Support Tuyau flexible eBande pour câble Jeu de câbles Vis Vis Protection caouto	es	
117 1 118 3 119 1	32784200 HN6735	.Levy .Ruuvi Kompressori	Platta Skruv Kompressor	Plate Screw Compressor	Platte Schraube Kompreßor	Plaque Vis Compresseur	Katso e as.ohje separat	/ see
120 1 121 1 122 1 123 1 124 1 125 1 126 2 127 1	34007500 34009000 HY2117 HA6508 JD0108 JB9927 JD0412 HA6358	.Kannatin .Teline .Ruuvi .Ruuvi .Aluslevy .Mutteri .Aluslevy .Ruuvi	Hållare Konsol Skruv Skruv Bricka Mutter Bricka Skruv	Support Bracket Screw Screw Washer Nut Washer Screw	Halter Gestell Schraube Schraube Scheibe Mutter Scheibe Schraube	Support Support Vis Vis Rondelle Ecrou Rondelle Vis	Sopular	


Sundry parts kit Teilsatz

Jeu de pièces

128 1 **34327000** Osasarja

Delsats

AIR PRESSURE BRAKES FOR TRAILER,	> <	Model	No	Page
fitting instruction	16.06.2000	6000-8950Hi	59.3	12(24)

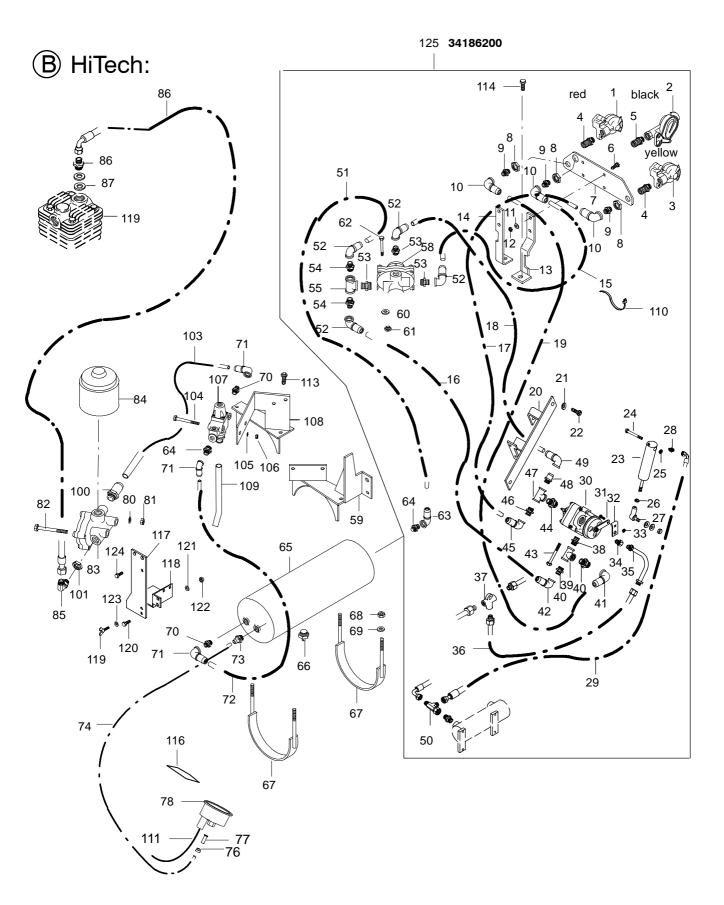


Model

Page

6000-8950Hi **59.3** 1

No

13(24)

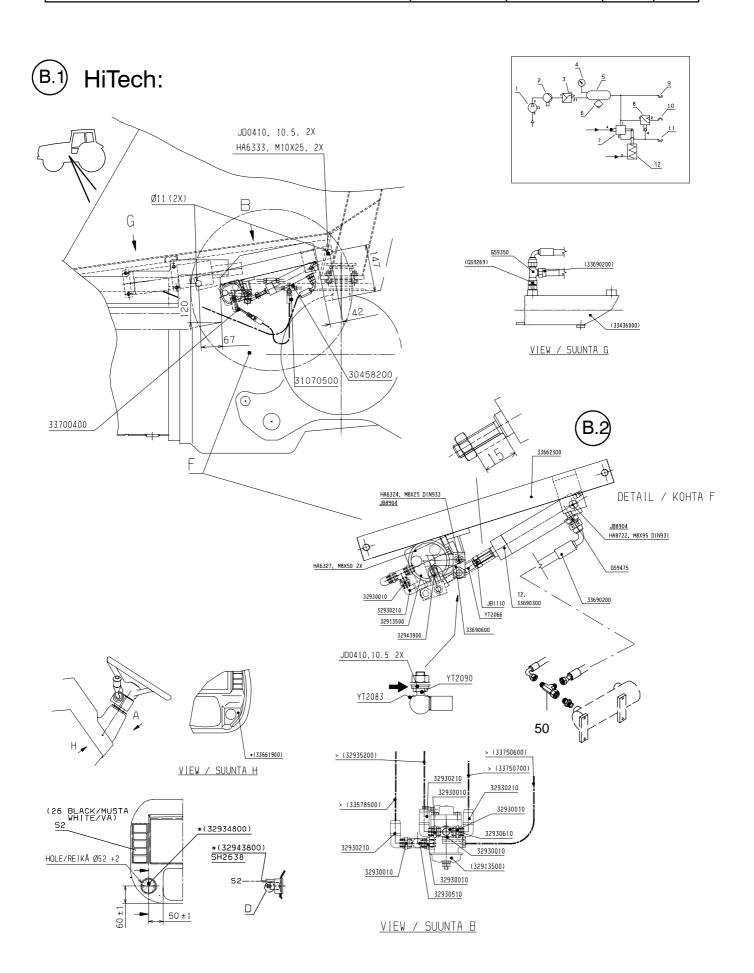

AIR PRESSURE BRAKES FOR TRAILER,		Model	No.	Page
fitting instruction	16.06.2000	6000-8950Hi	59.3	14(24)

HiTech


	1	33692600	Paineilmajarrut	Tryckluftsbroms	Air press. brake	L.druckbremse	Frein à air comprin	né
1	1	32934500	.Liitin	Nippel	Union	Verbindung	Raccord	
2	1	32934600	.Liitin	Nippel	Union	Verbindung	Raccord	
3	1	32934400	.Liitin	Nippel	Union	Verbindung	Raccord	
4	2	32930300	.Liitin	Nippel	Union	Verbindung	Raccord	
5	1	32930400	.Liitin	Nippel	Union	Verbindung	Raccord	
6	4	HA6324	.Ruuvi	Skruv	Screw	Schraube	Vis	
7	1	32930800	.Levy	Platta	Plate	Platte	Plaque	
8	3	JB0955	.Mutteri	Mutter	Nut	Mutter	Ecrou	
9	3	32930010	.Pikaliitin	Snabbkoppling	Quick coupler	Schnellkuppl.	Raccord rapide	
10	3	32930210	.Liitin	Nippel	Union	Verbindung	Raccord	
11	4	JD0408	.Aluslevy	Bricka	Washer	Scheibe	Rondelle	
12	4	JB8904	.Mutteri [*]	Mutter	Nut	Mutter	Ecrou	
13	1	32931010	.Kannatin	Hållare	Support	Halter	Support	
14	1	32930900	.Kannatin	Hållare	Support	Halter	Support	
15	1	32935400	.Putki	Rör	Pipe	Rohr	Tuyau	
	2	33718900	.Suojaputki	Skyddsrör	Shield pipe	Schutzrohr	T. de protection	L=2060
16	1	33578500	.Putki	Rör	Pipe	Rohr	Tuyau	
	2	33718700	.Suojaputki	Skyddsrör	Shield pipe	Schutzrohr	T. de protection	L=1540
17	1	33750700	.Putki	Rör	Pipe	Rohr	Tuyau	
	2	33718600	.Suojaputki	Skyddsrör	Shield pipe	Schutzrohr	T. de protection	L=1340
18	1	32935200	.Putki	Rör	Pipe	Rohr	Tuyau	
	2	33718400	.Suojaputki	Skyddsrör	Shield pipe	Schutzrohr	T. de protection	L=1470
19	1	33750600	.Putki	Rör	Pipe	Rohr	Tuyau	
	2	33718200	.Suojaputki	Skyddsrör	Shield pipe	Schutzrohr	T. de protection	L=940
20	1	33662300	.Kannatin	Hållare	Support	Halter	Support	
21	1	JD0410	.Aluslevy	Bricka	Washer	Scheibe	Rondelle	
22	1	HA6333	.Ruuvi	Skruv	Screw	Schraube	Vis	
23	1	33690300	.Sylinteri	Cylinder	Cylinder	Zylinder	Cylindre	
24	1	HA8722	.Ruuvi	Skruv	Screw	Schraube	Vis	
25	1	JB8904	.Mutteri	Mutter	Nut	Mutter	Ecrou	
26	1	JB1110	.Mutteri	Mutter	Nut	Mutter	Ecrou	
27	1	YT2066	.Nivel	Led	Joint	Gelenk	Joint	_
	1	YT2083	.Lukitusjousi	Låsfjäder	Locking spring		rRessort de verrouil	lage
	1	YT2090	Kuulatappi	Kulatapp	Ballpin	Kugelstift	Bille de cheville	
	2	JD0410	Aluslevy	Bricka	Washer	Scheibe	Rondelle	
28	1	GS9475	.Liitin	Nippel	Union	Verbindung	Raccord	
29	1	33690200	.Letku	Slang	Hose	Schlauch	Tuyau flexible	
30 31	1	32913500 HA6324	.Ohjausventtiili .Ruuvi	Styrventil Skruv	Steering valve Screw	Steuerventil	Valve de direction Vis	
32	1	33690600			Lever	Schraube Hebel	Levier	
33	1	JB8904	.Vipu .Mutteri	Spak Mutter	Nut	Mutter	Ecrou	
	1	32943900	.Liitin	Nippel	Union	Verbindung	Raccord	
35	1	33700400	.Putki	Rör	Pipe	Rohr	Tuyau	
36	1	31070500	.Letku	Slang	Hose	Schlauch	Tuyau flexible	
	1	30458200	.Liitin	Nippel	Union	Verbindung	Raccord	
38	1	32930010	.Pikaliitin	Snabbkoppling	Quick coupler	Schnellkuppl.	Raccord rapide	
39	1	32930510	.Liitin	Nippel	Union	Verbindung	Raccord	
40	2	32930010	.Pikaliitin	Snabbkoppling	Quick coupler	Schnellkuppl.	Raccord rapide	
41	1	32930210	.Liitin	Nippel	Union	Verbindung	Raccord	
	1	32930210	.Liitin	Nippel	Union	Verbindung	Raccord	
43	2	HA6327	.Ruuvi	Skruv	Screw	Schraube	Vis	
44	1	32930010	.Pikaliitin	Snabbkoppling	Quick coupler	Schnellkuppl.	Raccord rapide	
45	1	32930210	.Liitin	Nippel	Union	Verbindung	Raccord	
46	1	32930010	.Pikaliitin	Snabbkoppling	Quick coupler	Schnellkuppl.	Raccord rapide	
47	1	32930610	.Liitin	Nippel	Union	Verbindung	Raccord	

AIR PRESSURE BRAKES FOR TRAILER, fitting instruction 16.06.2000 Model No. Page 15(24)


48 1	32930010	.Pikaliitin	Snabbkoppling	Quick coupler	Schnellkuppl.	Raccord rapide	
49 1	32930210	.Liitin	Nippel	Union	Verbindung	Raccord	
50 1	GS9350	.Liitin	Nippel	Union	Verbindung	Raccord	
51 1	32935100	.Putki	Rör	Pipe	Rohr	Tuyau	
1	33718000	.Suojaputki	Skyddsrör	Shield pipe	Schutzrohr	T. de protection	L=390
52 3	32930210	.Liitin	Nippel	Union	Verbindung	Raccord	
53 3	32930110	.Pikaliitin	Snabbkoppling	Quick coupler	Schnellkuppl.	Raccord rapide	
54 2	32930010	.Pikaliitin	Snabbkoppling	Quick coupler	Schnellkuppl.	Raccord rapide	
55 1	32930610	.Liitin	Nippel	Union	Verbindung	Raccord	
58 1	32910700	.Venttiili	Ventil	Valve	Ventil	Soupape	
59 1	32926600	.Teline	Konsol	Bracket	Gestell	Support	
60 2	JD0410	.Aluslevy	Bricka	Washer	Scheibe	Rondelle	
61 2	JB8905	.Mutteri	Mutter	Nut	Mutter	Ecrou	
62 2	HA8330	.Ruuvi	Skruv	Screw	Schraube	Vis	
63 1	32930210	.Liitin	Nippel	Union	Verbindung	Raccord	
64 1	32930210	.Pikaliitin	Snabbkoppling	Quick coupler	Schnellkuppl.	Raccord rapide	
65 1	32913700	.Säiliö	Behållare	Container	Behälter	Réservoir	
66 1	32913600				Stopfen	Bouchon	
		.Tulppa .Sanka	Plugg	Plug			
	32927600		Bygel	Bow	Bügel	Support Ecrou	
68 4	JB8906	.Mutteri	Mutter	Nut	Mutter		
69 4	JD0412	Aluslevy	Bricka	Washer	Scheibe	Rondelle	
70 2	32930110	.Pikaliitin	Snabbkoppling	Quick coupler	Schnellkuppl.	Raccord rapide	
71 3	32930210	.Liitin	Nippel	Union	Verbindung	Raccord	
72 1	32935000	.Putki	Rör	Pipe	Rohr	Tuyau	
73 1	32929700	.Pikaliitin	Snabbkoppling	Quick coupler	Schnellkuppl.	Raccord rapide	
74 1	32935700	.Putki	Rör	Pipe	Rohr	Tuyau	
76 1	32944100	.Rengas	Ring	Ring	Ring	Anneau	
77 1	32944000	.Holkki	Hylsa	Sleeve	Hülse	Manchon	
78 1	32934800	.Painemittari	Tryck mätare	Press. instr.	Dr.instrument	Manomètre	
1	SH2638	.Lamppu	Lampa	Bulb	Lampe	Lampe	
80 2	JD0408	.Aluslevy	Bricka	Washer	Scheibe	Rondelle	
81 2	JB8904	.Mutteri	Mutter	Nut	Mutter	Ecrou	
82 2	HA8331	.Ruuvi	Skruv	Screw	Schraube	Vis	
83 1	32910500	.Pumppu	Pump	Pump	Pumpe	Pompe	
84 1	33495200	Säiliö	Behållare	Container	Behälter	Réservoir	
85 1	32936900	.Liitin	Nippel	Union	Verbindung	Raccord	
86 1	32943700	.Putki	Rör	Pipe	Rohr	Tuyau	
87 1	32944200	.Liitin	Nippel	Union	Verbindung	Raccord	
88 1	32948300	.Liitin	Nippel	Union	Verbindung	Raccord	
2	KH3612	.Tiiviste	Tätning	Gasket	Dichtung	Joint	
100 1	32929900	.Pikaliitin	Snabbkoppling	Quick coupler	Schnellkuppl.	Raccord rapide	
101 1	32930700	.Mutteri	Mutter	Nut	Mutter	Ecrou	
103 1	32934900	.Putki	Rör	Pipe	Rohr	Tuyau	
104 2	HA8330	.Ruuvi	Skruv	Screw	Schraube	Vis	
105 2	JD0408	.Aluslevy	Bricka	Washer	Scheibe	Rondelle	
106 2	JB8904	.Mutteri	Mutter	Nut	Mutter	Ecrou	
107 1	32910600	Paineensäätöv	Tryckregleringsv.		Drucksteuerv.	Valve contrôle pres	sion
108 1	32927300	.Teline	Konsol	Bracket	Gestell	Support	
109 1	32948000	.Letku	Slang	Hose	Schlauch	Tuyau flexible	
110 3	SA9102	.Johdinside	Buntband	Wiring band	Leitungsklemme	eBande pour câbles	;
111 1	32943800	.Johdinsarja	Ledningssats	Wiring set	Verkabelung	Jeu de câbles	
112 1	32944300	Kompressori	Kompressor	Compressor	Kompreßor	Compresseur	
113 5	HA6358	.Ruuvi	Skruv	Screw	Schraube	Vis	
114 2	HA6343	.Ruuvi	Skruv	Screw	Schraube	Vis	
116 1	33661900	.Levy	Platta	Plate	Platte	Plaque	
117 1	34007500	.Kannatin	Hållare	Support	Halter	Support	
118 1	34009000	.Teline	Konsol	Bracket	Gestell	Support	
119 1	HY2117	.Ruuvi	Skruv	Screw	Schraube	Vis	
120 1	HA6508	.Ruuvi	Skruv	Screw	Schraube	Vis	
121 1	JD0108	.Aluslevy	Bricka	Washer	Scheibe	Rondelle	
122 1	JB9927	.Mutteri	Mutter	Nut	Mutter	Ecrou	
123 2	JD0412	.Aluslevy	Bricka	Washer	Scheibe	Rondelle	
124 1	HA6358	.Ruuvi	Skruv	Screw	Schraube	Vis	
125 1	34186200	Osasarja	Delsats	Sundry parts kit	Teilsatz	Jeu de pièces	Air pressure
							brake

AIR PRESSURE BRAKES FOR TRAILER,		Model	No.	Page
fitting instruction	16.06.2000	6000-8950Hi	59.3	16(24)

O Duo-Matic:

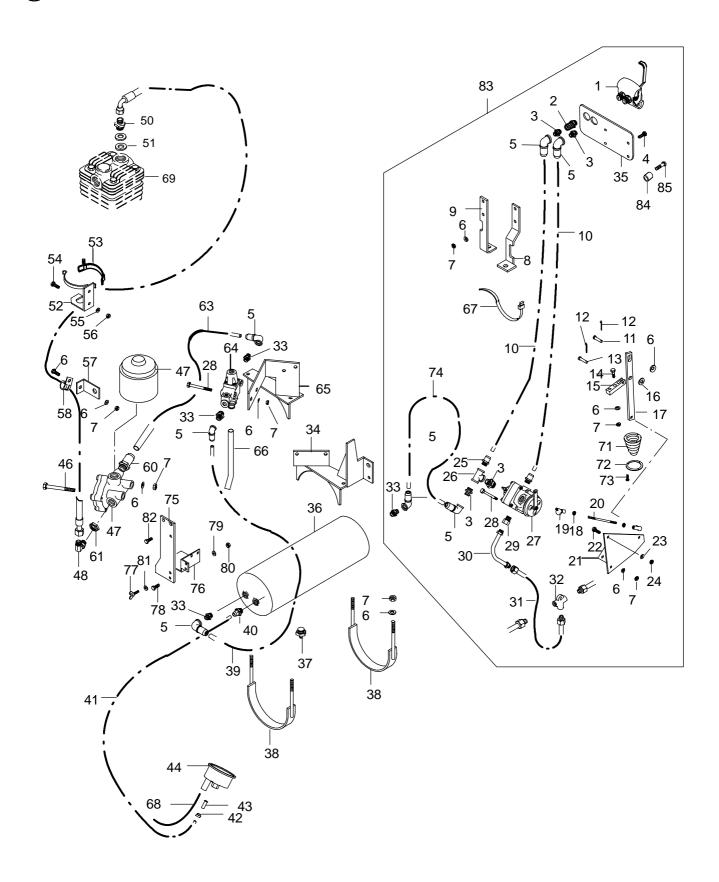

AIR PRESSURE BRAKES FOR TRAILER,	\nearrow	Model	No	page
fitting instruction	16.06.2000	6000-8950Hi	59.3	17(24)

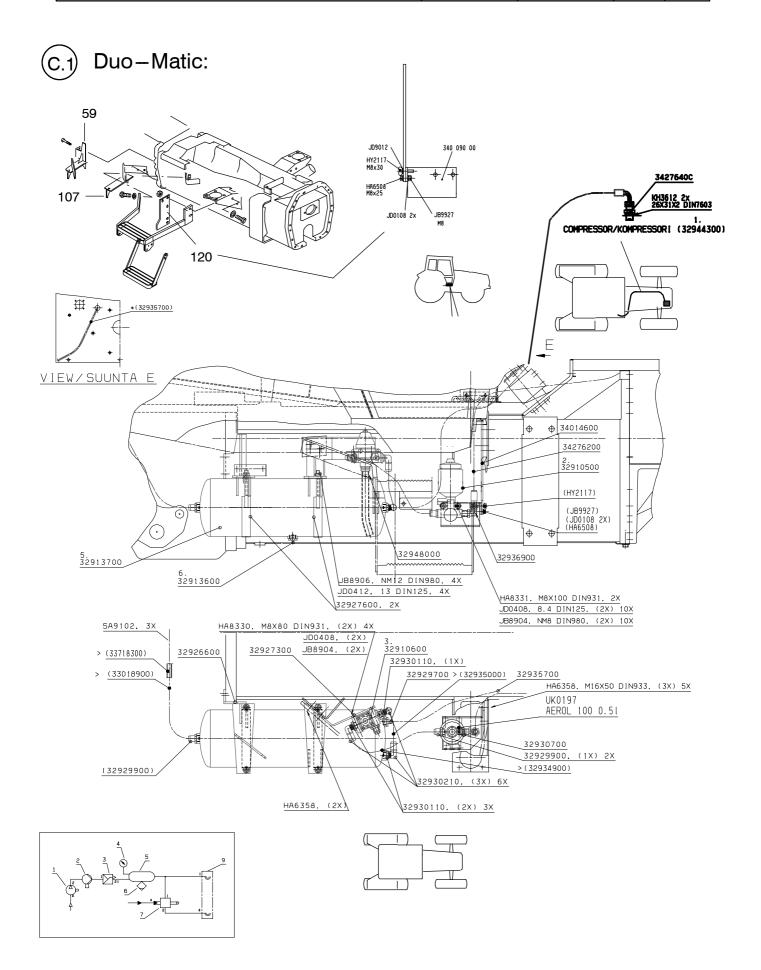


Model

Page

6000-8950Hi**|59.3**

No

18(24)

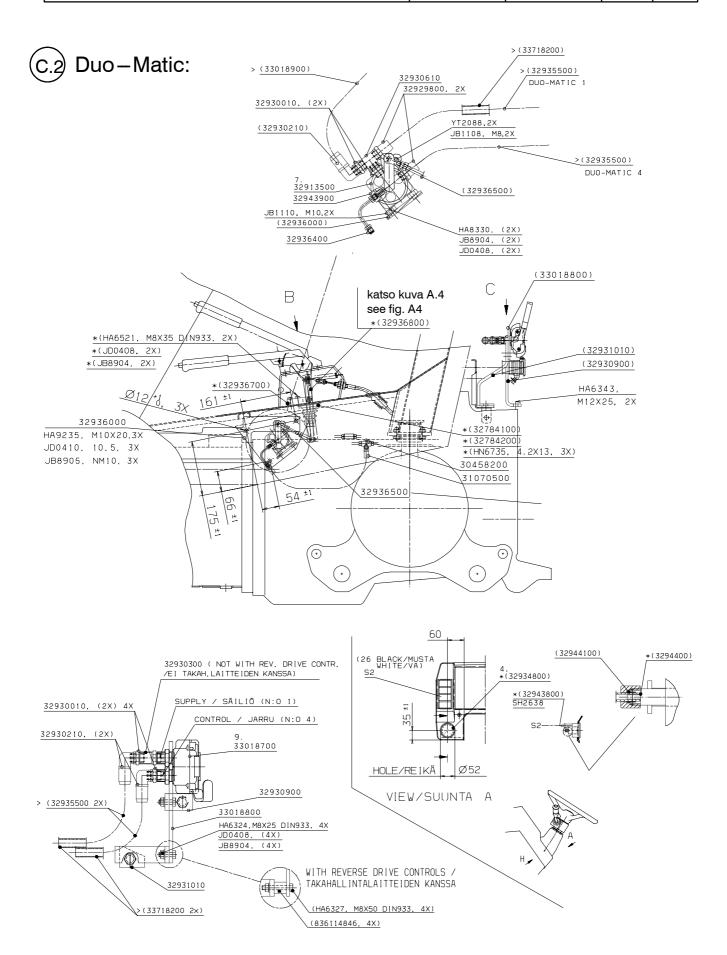

AIR PRESSURE BRAKES FOR TRAILER,		Model	No	Page
fitting instruction	16.06.2000	6000-8950Hi	59.3	19(24)

Duo-Matic:


	1	33019000	Paineilmajarrut	Tryckluftsbroms	Air press. brake	L.druckbremse	Frein à air comprim	ıé
1 2	1	33018700 32930300	.Liitin .Liitin	Nippel Nippel	Union Union	Verbindung Verbindung	Raccord Raccord	Ei takahall.laitt. Not with rev.
3	4	32930010	.Pikaliitin	Snabbkoppling	Quick coupler	Schnellkuppl	Raccord rapide	drive controls
4	3	HA6322	.Ruuvi	Skruv	Quick coupler Screw	Schnellkuppl. Schraube	Raccord rapide Vis	
5	6	32930200	.Liitin	Nippel	Union	Verbindung	Raccord	
0	6	32930210	.Liitin	Nippel	Union	Verbindung	Raccord	
6	16	JD0408	.Aluslevy	Bricka	Washer	Scheibe	Rondelle	
7	13	JB8904	.Mutteri	Mutter	Nut	Mutter	Ecrou	
8	1	32931010	.Kannatin	Hållare	Support	Halter	Support	
9	1	32930900	.Kannatin	Hållare	Support	Halter	Support	
10	2	32935500	.Letku	Slang	Hose	Schlauch	Tuyau flexible	
	2	33718200	.Suojaputki	Skyddsrör	Shield pipe	Schutzrohr	T. de protection	L=940
11	1	JJ4037	.Таррі	Тарр	Pin	Stift	Cheville	
12	1	JE3051	.Sokka	Sprint	Pin	Splint	Goupille	
13	1	JJ4036	.Таррі	Тарр	Pin	Stift	Cheville	
14	2	HA9230	.Ruuvi	Skruv	Screw	Schraube	Vis	
15	1	32936700	.Kannatin	Hållare	Support	Halter	Support	
16	2	32673300	.Kiinnityslaatta	Fästplåt	Mounting plate	Bef.platte	Plaque de support	
17	1	32936800	.Vipu	Spak	Lever	Hebel	Levier	
18	2	JB1108	.Mutteri	Mutter	Nut	Mutter	Ecrou	
19		YT2088	.Nivel	Led	Joint	Gelenk	Joint	
20	1	32936500	.Tanko	Stång	Rod	Stange	Barre	
21	1	32936000	.Teline	Konsol	Bracket	Gestell	Support	
22		HA9235	.Ruuvi	Skruv	Screw	Schraube	Vis	
23	3	JD0410	.Aluslevy	Bricka	Washer	Scheibe	Rondelle	
24	3	JB8905	.Mutteri .Pikaliitin	Mutter	Nut	Mutter	Ecrou	
25 26	2	32929800 32930610	.Liitin	Snabbkoppling	Quick coupler Union	Schnellkuppl. Verbindung	Raccord rapide Raccord	
27	1	32913500	.Ohjausventtiili	Nippel Styrventil	Steering valve	Steuerventil	Valve de direction	
28	4	HA8330	.Ruuvi	Skruv	Screw	Schraube	Valve de direction	
29	1	32943900	.Liitin	Nippel	Union	Verbindung	Raccord	
30	1	32936400	.Putki	Rör	Pipe	Rohr	Tuyau	
31	1	31070500	.Letku	Slang	Hose	Schlauch	Tuyau flexible	
32	1	30458200	.Liitin	Nippel	Union	Verbindung	Raccord	
33		32930110	.Pikaliitin	Snabbkoppling	Quick coupler	Schnellkuppl.	Raccord rapide	
34	1	32926600	.Teline	Konsol	Bracket	Gestell	Support	
35	1	33018800	.Levy	Platta	Plate	Platte	Plaque	
36	1	32913700	.Säiliö	Behållare	Container	Behälter	Réservoir	
37	1	32913600	.Tulppa	Plugg	Plug	Stopfen	Bouchon	
38		32927600	.Sanka	Bygel	Bow	Bügel	Support	
39		32935000	.Putki	Rör	Pipe	Rohr	Tuyau	
40		32929700	.Pikaliitin	Snabbkoppling	Quick coupler	Schnellkuppl.	Raccord rapide	
	1	32935700	.Putki	Rör	Pipe	Rohr	Tuyau	
42		32944100	.Rengas	Ring	Ring	Ring	Anneau	
43		32944000	.Holkki	Hylsa	Sleeve	Hülse	Manchon	
44		32934800	.Painemittari	Tryck mätare	Press. instr.	Dr.instrument	Manomètre	
40	1	HS2638	.Lamppu	Lampa	Bulb	Lampe	Lampe	
46 47		HA8331 32910500	.Ruuvi	Skruv	Screw	Schraube	Vis Pompe	Incl. Container
47 48		32910500	.Pumppu .Liitin	Pump	Pump Union	Pumpe Verbindung	Raccord	moi. Container
	1	34276200	.Putki	Nippel Rör	Pipe	Rohr	Tuyau	
50	1	34276400	.Liitin	Nippel	Union	Verbindung	Raccord	
51		KH3612	.Tiiviste	Tätning	Gasket	Dichtung	Joint	

AIR PRESSURE BRAKES FOR TRAILER,		Model	No	Page
fitting instruction	16.06.2000	6000-8950Hi	59.3	20(24)


Duo-Matic:

52 53 54 55 56 57 58 60	1 1 2 2 2 1 1 2	32927900 33133400 HA9219 JD0405 JB1105 32935900 30086100 32929900	.Teline .Side .Ruuvi .Aluslevy .Mutteri .Levy .Pidin .Pikaliitin	Konsol Band Skruv Bricka Mutter Platta Klämma Snabbkoppling	Bracket Band Screw Washer Nut Plate Clamp Quick coupler	Gestell Binde Schraube Scheibe Mutter Platte Klammer Schnellkuppl.	Support Bande Vis Rondelle Ecrou Plaque Agrafe Raccord rapide	
61 63	1	32930700 32934900	.Mutteri .Putki	Mutter Rör	Nut Pipe	Mutter Rohr	Ecrou Tuyau	
64 65 66	1 1 1	32910600 32927300 32948000	.Teline .Letku	Tryckregleringsv. Konsol Slang	Bracket Hose	Gestell Schlauch	V. contrôle pressior Support Tuyau flexible	1
67 68 69	3 1 1	SA9102 32943800	.Johdinside .Johdinsarja Kompressori	Buntband Ledningssats Kompressor	Wiring band Wiring set Compressor	Leitungsklemme Verkabelung Kompreßor	eBande pour câbles Jeu de câbles Compresseur	Katso erilinen as.ohje / see separate instr.
71 72 73 74 75 76 77 78 79 80 81 82	1 1 3 1 1 1 1 1 1 1 2 1	32784100 32784200 HN6735 32935100 34007500 34009000 HY2117 HA6508 JD0108 JB9927 JD0412 HA6358	.Suojakumi .Levy .Ruuvi .Putki .Kannatin .Teline .Ruuvi .Ruuvi .Aluslevy .Mutteri .Aluslevy .Ruuvi	Skyddsgummi Platta Skruv Rör Hållare Konsol Skruv Skruv Bricka Mutter Bricka Skruv	Shield rubber Plate Screw Pipe Support Bracket Screw Screw Washer Nut Washer Screw	Schutzgummi Platte Schraube Rohr Halter Gestell Schraube Schraube Scheibe Mutter Scheibe Schraube	Protection caoutcher Plaque Vis Tuyau Support Support Vis Rondelle Ecrou Rondelle Vis	•
83	1	34327100	Osasarja	Delsats	Sundry parts kit	Teilsatz	Jeu de pièces	
84 85	2	836114846 HA6327	Holkki Ruuvi	Hylsa Skruv	Sleeve Screw	Hülse Schraube	Manchon Vis	*
*			Takah.laitteet	U.vändb. f.plats	Back dr. system	R.wärtssteuers	Système conduite a	ar.

AIR PRESSURE BRAKES FOR TRAILER,	> <	Model	No	Page
fitting instruction	16.06.2000	6000-8950Hi	59.3	21(24)

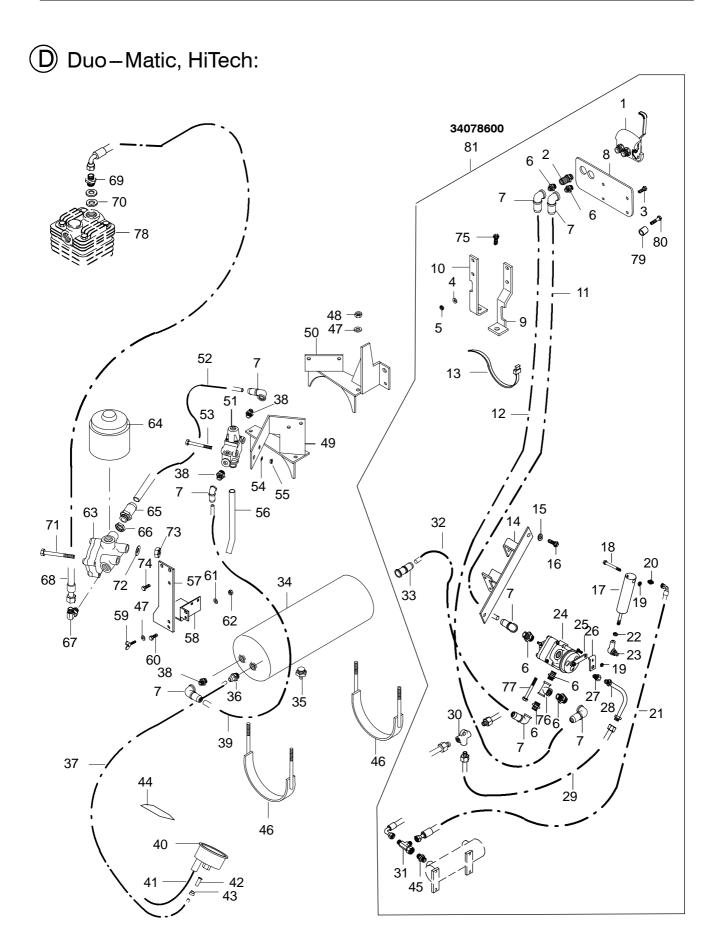

AIR PRESSURE BRAKES FOR TRAILER, fitting instruction 16.06.2000 Model No Page 16.06.2000 6000-8950Hi 59.3 22(24)

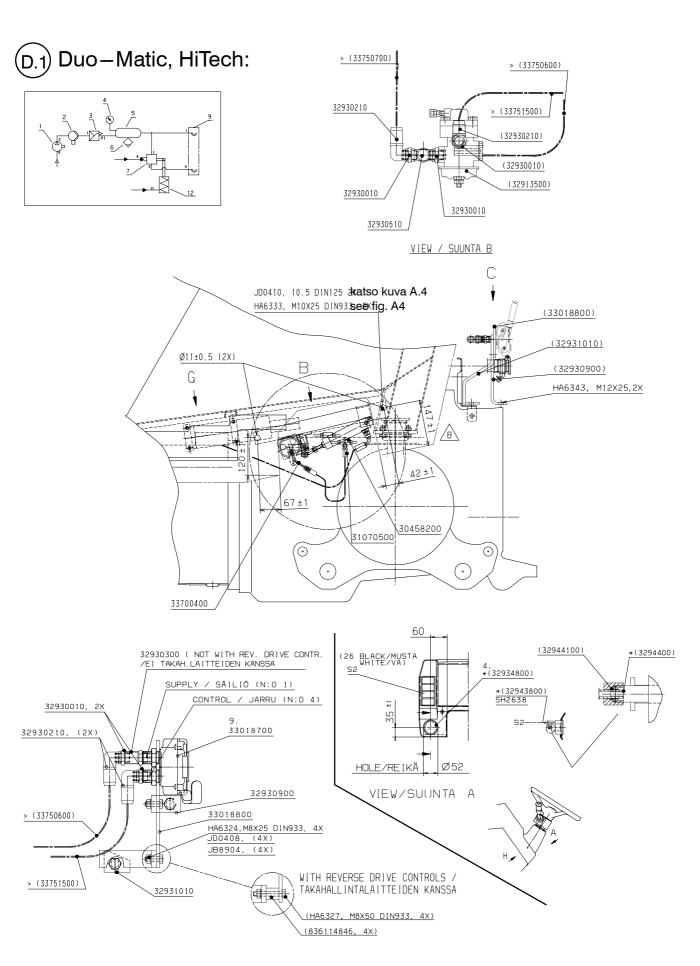

AIR PRESSURE BRAKES FOR TRAILER,		Model	No	Page
fitting instruction	16.06.2000	6000-8950Hi	59.3	23(24)

Duo-Matic, HiTech:

	1	33690100	Paineilmajarrut	Tryckluftsbroms	Air press. brake	L.druckbremse	Frein à air comprin	né
1 2	1 1	33018700 32930300	.Liitin .Liitin	Nippel Nippel	Union Union	Verbindung Verbindung	Raccord Raccord	Ei takahall.laitt.
						· ·		Not with rev. drive controls
3	4	HA6324	.Ruuvi	Skruv	Screw	Schraube	Vis	
4	4	JD0408	.Aluslevy	Bricka	Washer	Scheibe	Rondelle	
5	4	JB8904	.Mutteri	Mutter	Nut	Mutter	Ecrou	
6	6	32930010	.Pikaliitin	Snabbkoppling	Quick coupler	Schnellkuppl.	Raccord rapide	
7	8	32930210	.Liitin	Nippel	Union	Verbindung	Raccord	
8	1	33018800	.Levy	Platta	Plate	Platte	Plaque	
9	1	32931010	.Kannatin	Hållare	Support	Halter	Support	
10	1	32930900	.Kannatin	Hållare	Support	Halter	Support	
11	1	33751500	.Putki	Rör	Pipe	Rohr	Tuyau	
	1	33752000	.Suojaputki	Skyddsrör	Shield pipe	Schutzrohr	Tuyau de protectio	n
12	1	33750600	.Putki	Rör	Pipe	Rohr	Tuyau	
40	1	33718200	.Suojaputki	Skyddsrör	Shield pipe	Schutzrohr	Tuyau de protectio	
13	3	SA9102	Johdinside	Buntband	Wiring band		eBande pour câbles	3
	1	33662300	.Kannatin	Hållare	Support	Halter	Support	
15	1	JD0410	.Aluslevy	Bricka	Washer	Scheibe	Rondelle	
16	1	HA6333	.Ruuvi	Skruv	Screw	Schraube	Vis	
		33690300	.Sylinteri	Cylinder	Cylinder	Zylinder	Cylindre	
18	1 2	HA8722 JB8904	.Ruuvi .Mutteri	Skruv Mutter	Screw Nut	Schraube Mutter	Vis Ecrou	
19 20	1	GS9475	.Liitin		Union	Verbindung	Raccord	
21	1	33690200	.Littiiii .Letku	Nippel Slang	Hose	Schlauch	Tuyau flexible	
22	1	JB1110	.Mutteri	Mutter	Nut	Mutter	Ecrou	
23	i	YT2066	.Nivel	Led	Joint	Gelenk	Joint	
20	1	YT2083	Lukitusjousi	Låsfjäder	Locking spring		rRessort de verrouil	llage
	1	YT2090	Kuulatappi	Kulatapp	Ballpin	Kugelstift	Bille de cheville	ago
	1	JD0410	Aluslevy	Bricka	Washer	Scheibe	Rondelle	
24	1	32913500	.Ohjausventtiili	Styrventil	Steering valve	Steuerventil	Valve de direction	
25	1	HA6324	.Ruuvi	Skruv	Screw	Schraube	Vis	
26	1	33690600	.Vipu	Spak	Lever	Hebel	Levier	
27	1	32943900	.Liitin	Nippel	Union	Verbindung	Raccord	
28	1	33700400	.Putki	Rör	Pipe	Rohr	Tuyau	
29	1	31070500	.Letku	Slang	Hose	Schlauch	Tuyau flexible	
30	1	30458200	.Liitin	Nippel	Union	Verbindung	Raccord	
31		GS9350	.Liitin	Nippel	Union	Verbindung	Raccord	
32	1	33750700	.Putki	Rör	Pipe	Rohr	Tuyau	
	1	33718400	.Suojaputki	Skyddsrör	Shield pipe	Schutzrohr	T. de protection	L=1340
33	1	32929900	.Pikaliitin	Snabbkoppling	Quick coupler	Schnellkuppl.	Raccord rapide	
	1	32913700	.Säiliö	Behållare	Container	Behälter	Réservoir	
	1	32913600	.Tulppa	Plugg	Plug	Stopfen	Bouchon	
	1	32929700	.Pikaliitin	Snabbkoppling Rör	Quick coupler	Schnellkuppl.	Raccord rapide	
38	3	32935700 32930110	.Putki .Pikaliitin	Snabbkoppling	Pipe Quick coupler	Rohr Schnellkuppl.	Tuyau Raccord rapide	
39	1	32935110	.Putki	Rör	Pipe	Rohr	Tuyau	
40	1	32934800	.Painemittari	Tryck mätare	Press. instrum.	Druckinstr.	Manomètre	
70	1	HS2638	.Lamppu	Lampa	Bulb	Lampe	Lampe	
41	1	32943800	.Johdinsarja	Ledningssats	Wiring set	Verkabelung	Jeu de câbles	
	1	32944000	.Holkki	Hylsa	Sleeve	Hülse	Manchon	
43	1	32944100	.Rengas	Ring	Ring	Ring	Anneau	
44	1	33661900	.Levy	Platta	Plate	Platte	Plaque	
45	1	GS9269	.Liitin	Nippel	Union	Verbindung	Raccord	
46		32927600	.Sanka	Bygel	Bow	Bügel	Support	

AIR PRESSURE BRAKES FOR TRAILER,	>	Model	No	Page
fitting instruction	16.06.2000	6000-8950Hi	59.3	24(24)

Scheibe

Mutter

Gestell

Gestell

Schraube

Rohr

Press. control.v. Drucksteuerv.

Rondelle

Support

Support

Tuyau

Vis

V. contr. pression

Jeu de pièces

Air pressure brake

Ecrou

Washer

Bracket

Bracket

Pipe

Screw

Nut

47 5

4

1

48

49 1

50

51 1

52 1

53 2

JD0412

JB8906

32927300

32926600

32910600

32934900

HA8330

.Aluslevy

.Mutteri

.Teline

.Teline

.Ruuvi

34078600 Osasarja

81 1

Bricka

Mutter

Konsol

Konsol

Skruv


Delsats

..Paineensäätöv. T.regleringsv. .Putki Rör

55	_	11A0330	.nuuvi	Skiuv	Sciew	Scrifaube	VIS	
54	2	JD0408	.Aluslevy	Bricka	Washer	Scheibe	Rondelle	
55	2	JB8904	.Mutteri	Mutter	Nut	Mutter	Ecrou	
56	1	32948000	.Letku	Slang	Hose	Schlauch	Tuyau flexible	
57	1	34007500	.Kannatin	Hållare	Support	Halter	Support	
58	1	34009000	.Teline	Konsol	Bracket	Gestell	Support	
59	1	HY2117	.Ruuvi	Skruv	Screw	Schraube	Vis	
60	1	HA6508	.Ruuvi	Skruv	Screw	Schraube	Vis	
61	1	JD0108	.Aluslevy	Bricka	Washer	Scheibe	Rondelle	
62	1	JB9927	.Mutteri	Mutter	Nut	Mutter	Ecrou	
63	1	32910500	.Pumppu	Pump	Pump	Pumpe	Pompe	
64	1	33495200	.Säiliö	Behållare	Container	Behälter	Réservoir	
65	1	32929900	.Pikaliitin	Snabbkoppling	Quick coupler	Schnellkuppl.	Raccord rapide	
66	1	32930700	.Mutteri	Mutter	Nut	Mutter	Ecrou	
67	1	32936900	.Liitin	Nippel	Union	Verbindung	Raccord	
68	1	34276200	.Letku	Slang	Hose	Schlauch	Tuyau flexible	
69	1	34276400	.Liitin	Nippel	Union	Verbindung	Raccord	
70	2	KH3612	.Tiiviste	Tätning	Gasket	Dichtung	Joint	
71	2	HA8331	.Ruuvi	Skruv	Screw	Schraube	Vis	
72	2	JD0408	.Liitin	Nippel	Union	Verbindung	Raccord	
73	2	JB8904	.Mutteri	Mutter	Nut	Mutter	Ecrou	
74	1	HA6358	.Ruuvi	Skruv	Screw	Schraube	Vis	
75	2	HA6343	.Ruuvi	Skruv	Screw	Schraube	Vis	
76	1	32930510	.Liitin	Nippel	Union	Verbindung	Raccord	
77	2	HA6327	.Ruuvi	Skruv	Screw	Schraube	Vis	
78	1	32944300	.Kompressori	Kompressor	Compressor	Kompreßor	Compresseur	
79	2	836114846	Holkki	Hylsa	Sleeve	Hülse	Manchon	*
80	2	HA6327	Ruuvi	Skruv	Screw	Schraube	Vis	*
*			Takah.laitteet	U.vändb. f.plats	Back dr. system	R.wärtssteuers	Système conduite	e ar.

Sundry parts kit Teilsatz

60. Steering system and front axle

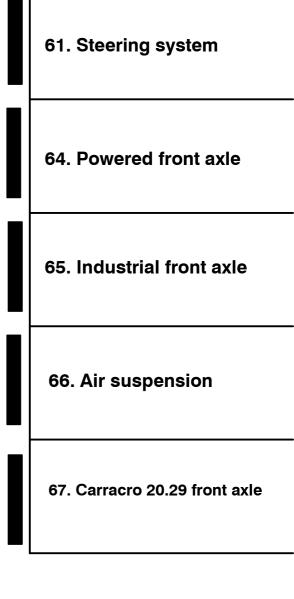





	15. 5. 19 93	Model	Code	Page
61. Steering system	15. 5. 1996	6000-8750	610	1

Contents

General (Op. no. 610) Technical data Special tools Steering system, description Steering valve Priority valve Steering cylinder Fault tracing Reverse drive controls	2 4 6 8 11
Reconditioning steering system	
Steering valve (Op. no. 611): A. Measuring working pressure of steering system B. Measuring shock valve opening pressure C. Steering circuit leakage check D. Removing steering valve E. Reconditioning shock valves and pressure—limiting valve F. Changing seals in steering valve G. Fitting steering valve Priority valve (Op. no. 612): 1. Cleaning priority valve:	1 2 2 3 4
A. Disassembling priority valve	
A. Removing steering cylinder B. Changing oil seals on RH side end piece C. Changing oil seals on LH side end piece D. Fitting steering cylinder Adjustments:	1 2
A. Adjusting toe-in	

Technical data

Hydrostatic steering system. Oil is supplied to the steering system from the high—pressure pump via the priority valve. Adjustable telescopic steering wheel column. One double—action steering cylinder in the middle of the front axle.

Steering valve	Orbitrol OSPC 125 LS
Pump capacity per revolution	. 0,125 l
Working pressure (at pressure – test point, 1500 r/min / 50 – 65°C)	. 14–15,5 MPa
Pressure – limiting valve opening pressure	. 14 MPa
Shock valve opening pressure	. 19,5-21,5 MPa
Priority valve:	
- 6000-8400	. OLS 80
– 8050 – 8750	OLS 120
Steering speed	over 2 rounds/sec. at idling speed
Steering wheel rotates	5,2 turn
Steering capacity $\pm 30^{\circ}$ with front axle load of 5000 kg on dry asphalt	

Turning radius (m) with standard track width:


Tractor Tyres Turning circle		6300 – 6400 13.6 – 24 4,2 m	14.9R24	8000 14.9R24 5,1 m	8100 13.6R28 5,1 m	8400 16.9R28 5,5 m
Suction straine	er filtering pro	perties				0–5 mm 125 μm β10=75

		Model	Code	Page
61. Steering system	8. 11. 1990	6000-8750	610	2

Special tools


ETV 893 100 Fitting tool for steering valve seal (Steering valve 505 – 905)

ET 894 000 Tool for rotating steering cylinder head up to axle no 129/92 (Front axle Sige 505–905)

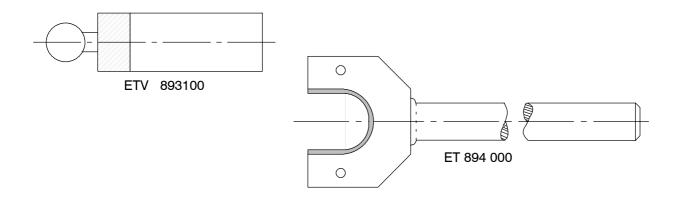


61. Steering system	8.17.1990	Model	Code	Page
	1. 1. 1995	6000-8750	610	3

Special tools

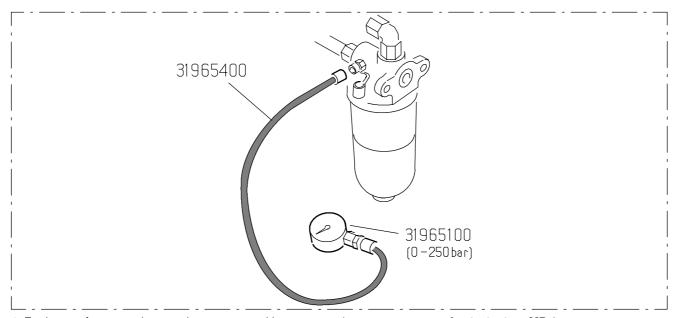


1. Equipment for measuring steering system working pressure (**pressure at test point 14,0–15,5 MPa**)

Pressure measuring kit 31965000 includes the above shown hose and pressure gauge. These parts can also be ordered separately.

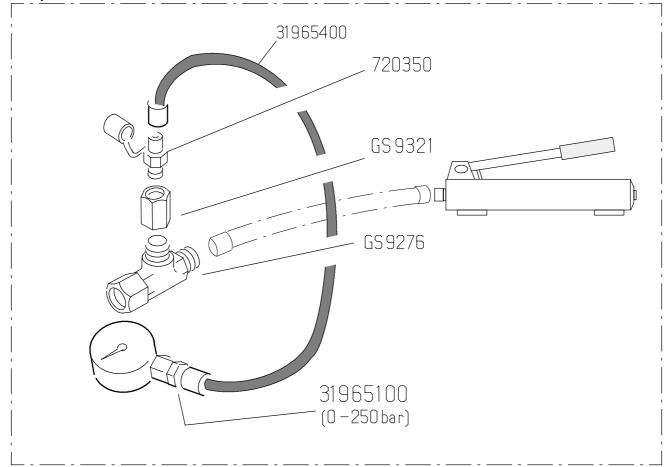

2. Equipment for measuring shock valve opening pressure **(opening pressure 19,0–21,5 MPa)**. **Note!** T – connector GS9276 has thread 3/4 – 16 for connecting hand pump hose. The pressure measuring kit 31965000 does not include the hand pump

Steering system, description

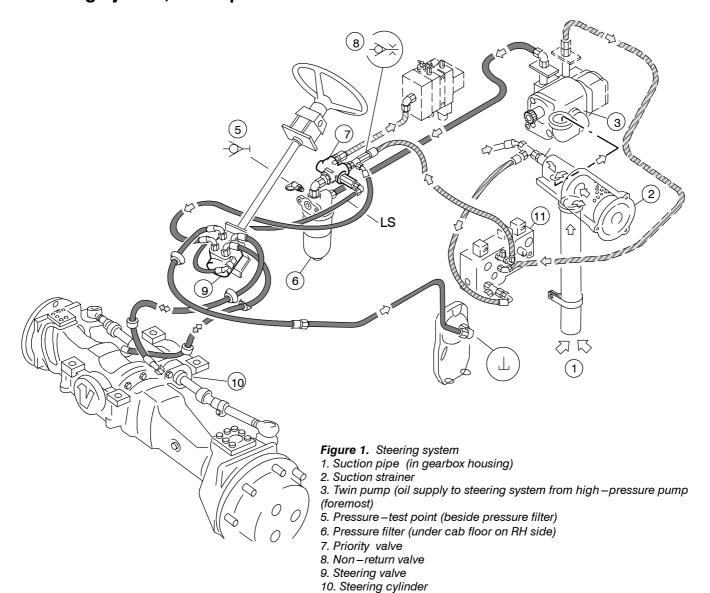

Pressurized oil to the steering system (and to the working hydraulics) is supplied by the high—pressure pump. The system has a priority valve, which ensures that there is always enough hydraulic oil for steering.

Pressure-limiting valve (14 MPa) and shock valves (19,5 MPa) are fitted in the steering cylinder.

The steering valve on the 6100–8100 tractors is a load sensing type of valve. Compared with the conventional unit, the LS steering valve has a 5th additional LS port. One port on the steering valve is for pressure oil feed, one for return oil, two to/from the steering cylinder and one for the load sensing. The load sensing pipe is fitted between the priority valve and the steering valve.

The LS port is either open to the return line when the steering is in neutral, or open to the pressure feed line as soon as the steering wheel is turned.

11. Servo valve block, -660070 (low-pressure circuit)

Important! With effect from tractor serial number **660071**, 6100–8400 tractors have a new servo valve block. In picture above is shown an earlier valve block. There is not an oil hose between the new valve block and the priority valve

6000-8750

Page **5**

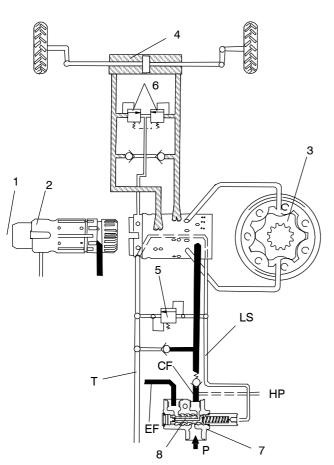


Figure 2. Steering wheel is not turned

- 1. Steering wheel
- 2. Spool valve
- 3. Rotor
- 4. Steering cylinder
- 5. Pressure limiting valve (14 MPa)
- 6. Shock valves (19,5 MPa)
- 7. Priority valve
- 8. Priority valve slide
- P=From pump
- T=To tank

CF=Pressure oil to steering valve

EF=Pressure oil to working hydraulics

HP=Low-pressure oil from servo valve block, -660070

LS=Load sensing line

In this figure the steering wheel is not turned. LS line is unpressurized and the slide (8) in the priority valve directs oil pressure to the line EF (to the working hydraulics)

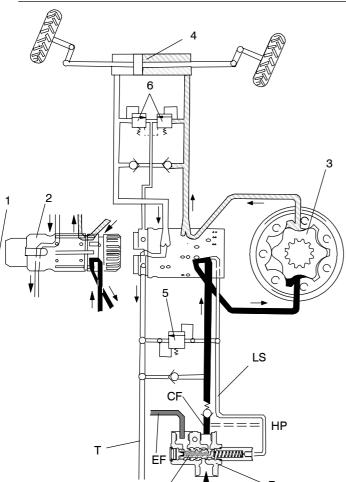


Figure 3. Steering wheel is turned to the right

- 1. Steering wheel
- 2. Spool valve
- 3. Rotor
- 4. Steering cylinder
- 5. Pressure limiting valve (14 MPa)
- 6. Shock valves (19,5 MPa)
- 7. Priority valve
- 8. Priority valve slide
- P=From pump
- T=To tank
- CF=Pressure oil to steering valve
- EF=Pressure oil to working hydraulics
- HP=Low-pressure oil from servo valve block, -660070
- LS=Load sensing line

In this figure the steering wheel is turned and the pipe LS is pressurized and pushes the slide (8) so that pressure from pump P is directed to the steering valve (pipe CF) and further to the steering cylinder. The pressure limiting valve (5) regulates the steering system pressure at 14 MPa.

Steering valve

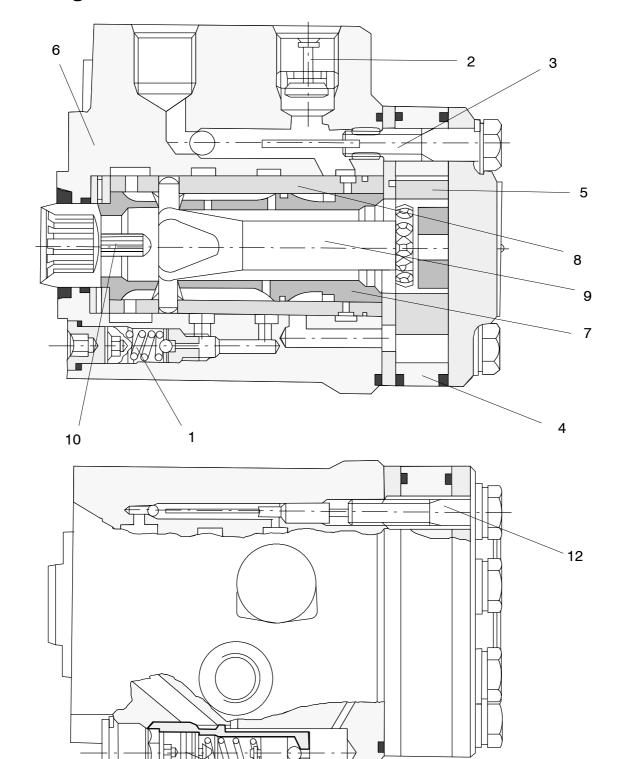


Figure 4. Steering valve

- 1. Shock valve (2 pcs, 19,5 MPa)
- 2. Non-return valve
- 3. Non-return valve for emergency steering
- 4. Rotor ring
- 5. Rotor
- 6. Valve housing

- 7. Inner valve spool
- 8. Outer valve spool
- 9. Rotor shaft

11

- 10. Centring springs
 11. Pressure limiting valve (14 MPa)
 12. Anti cavitation valves (2 pcs)

Steering valve, description

See figure 4 on previous page.

The steering valve consists of a metering unit (rotor set) and a valve unit. The rotor set consists of a rotor ring (4) with seven internal teeth and a rotor (5) with six external teeth. The valve unit consists of a valve housing (6), outer valve slide (8) and inner valve slide (7).

The inner slide (7) is directly actuated by the steering wheel. The outer valve slide (8) is mechanically connected to the rotor (5) by a cross pin and rotor shaft (9). The cross pin which runs through both valve slides permits the inner valve slide to move 8° in both directions independent of the outer valve slide.

When the steering wheel is in the rest position, centring springs keep the inner and the outer valve slides in neutral (in relation to each other) and the oil flows freely through the steering valve. The passages to the steering cylinder are kept closed and the steering cylinder cannot move.

When the steering wheel is turned, the inner valve slide is turned in relation to the outer valve slide. The neutral – position passages become restricted at the same time the passages down to the measuring unit and on to the steering cylinder gradually open. Simultaneously the return oil from the other side of the steering cylinder flows back via the steering valve. The oil flow from the pump through the valve makes the rotor and the outer valve slide turn in the same direction as the steering wheel and the inner valve slide.

When the steering wheel is not turned any further and kept still, the centring springs bring the outer and the inner valve slide back into the neutral position The passages to the steering cylinder close and the oil flows freely again through the steering valve.

When the hydraulic pump does not supply any oil, the metering unit of the steering valve acts as a manually powered pump. The oil which is drawn from the steering cylinder and the return line via the non-return valve (3) is delivered to the other side of the steering cylinder when the steering wheel (and inner valve slide 7) is turned 8°. The cross pin then also makes the following parts turn: the outer valve slide (8), rotor shaft (9) and rotor (5). Shocks and knocks against the steering wheel are dampened by the two shock valves (1) which are fitted in the steering valve.

The shock valves are combined with anti-cavitation valves (point A in figure 5) in order to keep the cylinder fully supplied with oil at all times.

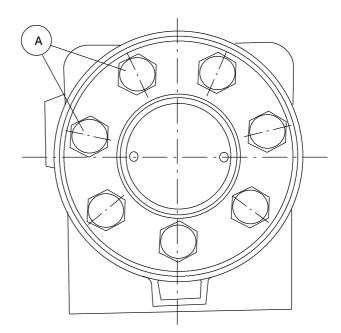


Figure 5. Steering valve lower face A. Anti – cavitation valves


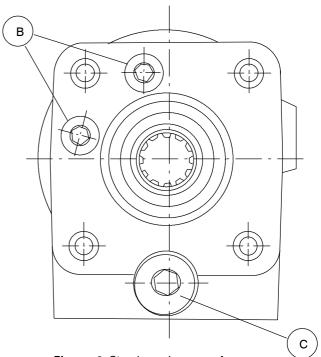


Figure 6. Steering valve upper face

B. Shock valves

C. Pressure-limiting valve

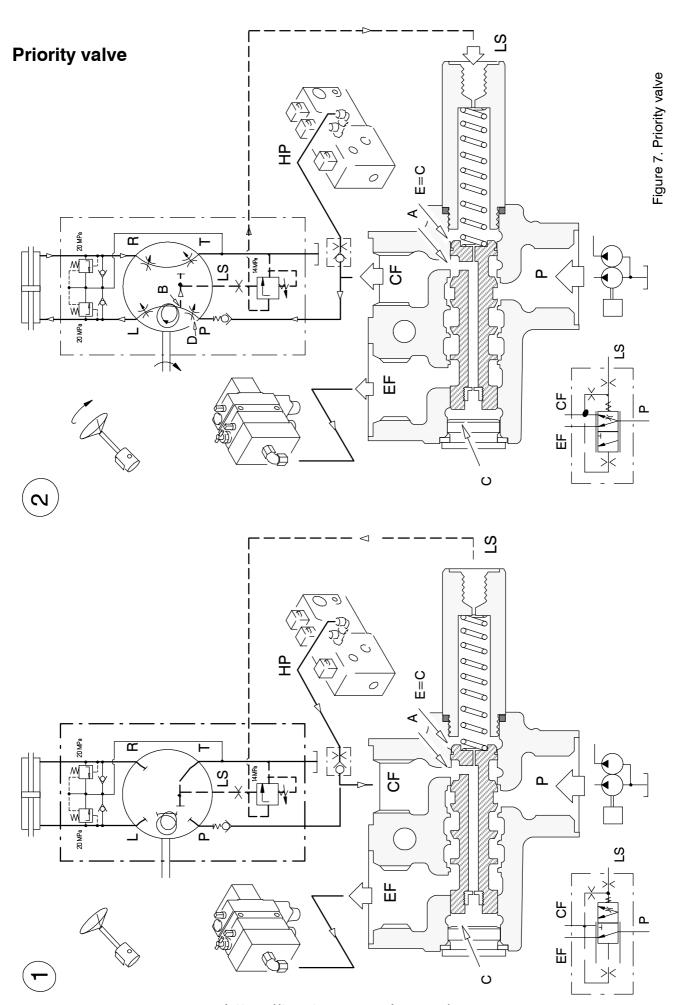

61. Steering system	8, 11: 1990	Model	Code	Page
	15. 5. 1993	6000-8750	610	9

Priority valve (figure 7)

 The priority valve is placed beside the pressure filter on the RH side of the tractor.

The priority valve directs the oil flow both to the working hydraulics EF and to the steering hydraulics CF.

Steering hydraulics have priority. This means that in every situation there is sufficient oil flow for the steering of the tractor, independently of the load of steering hydraulics and working hydraulics. The rest of the oil flow is available for the working hydraulics

Function of the priority valve:

1) The pump delivers oil-steering is not used:

The **P** connection of the steering valve is closed. The **LS** (Load Sensing) line is connected to the **T** connection. All the pump delivery is driven over the three—stepped throttling to the **EF** connection (to the working hydraulics) with a pressure loss determined by the LS spring, which is about 7 bar (area C x pressure in point A=spring force LS).

Auxiliary pressure **HP** (from the low-pressure circuit, 1,8 MPa) presses the slide to the right and reduces the free-circulation pressure **P** of the pump.

Important! From tractor ser. no. **660071** the **HP** pressure does not affect the priority valve. The hose betveen the servo valve block and the priority valve removed.

2) The steering wheel is turned:

The throttle D of the steering valve opens up. The pressure upon the steering cylinder L/R is conducted from point B along the LS line to the spring side of the priority valve. The pressure which acts at the left end of the slide is area Cx pressure B on the steering valve (this pressure is conducted via port CF and through the drilling on the slide). At the right end of the slide acts pressure B + spring pressure. Now the slide moves to the left and oil flow between ports P-EF is throttled and oil starts to flow between ports P-CF.

The state of balance is achieved when the pressure loss **A-B** = 7 bar, which corresponds to the value of the LS spring.

D is the throttling that varies according to the steering speed in the space **A**-**B**:


Steering at maximum speed:

When the steering speed is the maximum, the flow area D of the throttle is maximum.

The priority valve increases the oil flow from the **CF** connection to the steering valve so much, that the pressure loss ${\bf A}-{\bf B}=7$ bar. This situation corresponds the maximum steering speed

When the steering movement is finished, port D on the steering valve is closed and the pressure in line LS discharges to the tank. Now pressure HP presses the priority valve slide to the right against the spring, and the oil flows from pump (port P) to the working hydraulics (port EF). Important! From tractor ser. no. 660071 the HP pressure does not affect the priority valve. The hose betveen the servo valve block and the priority valve removed.

61. Steering system	8. 17. 1990	Model	Code	Page
	15. 5. 1993	6000-8750	610	10

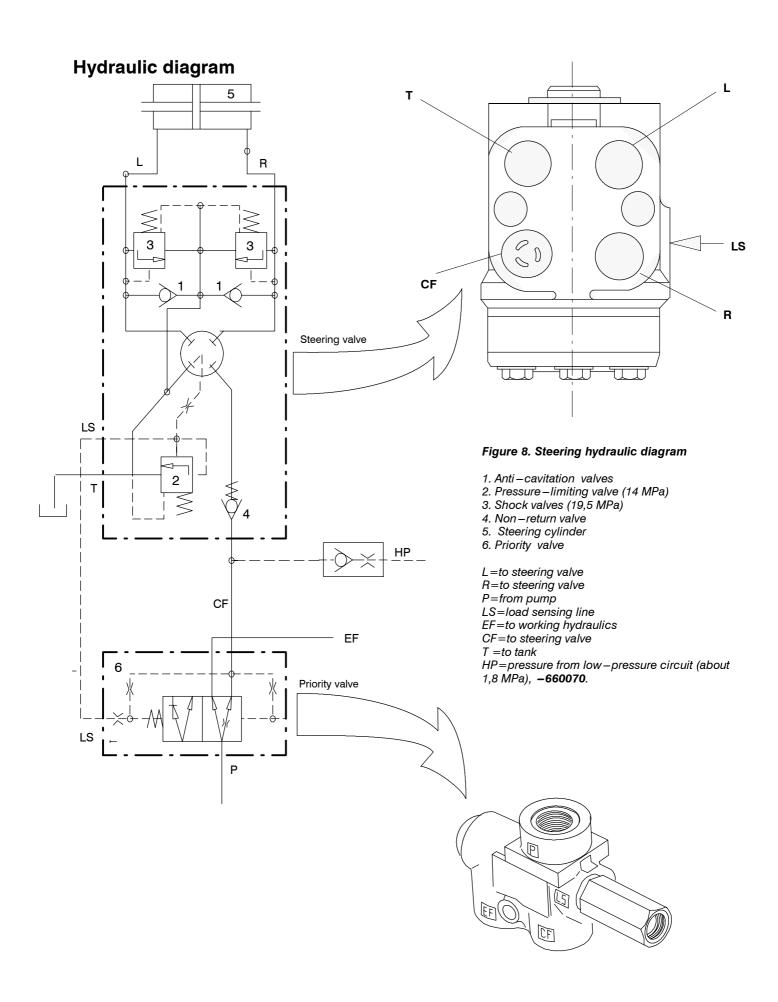

	15. 5. 19 93	Model	Code	Page
61. Steering system	1. 1. 1995	6000-8750	610	11

Steering cylinder

The steering cylinder is fitted at the back of the front axle member where it is protected from damage.

The piston is fitted at the centre of the piston rod which runs through both ends of the cylinder. There are seals on the piston against the cylinder barrel and also in both end pieces against the piston rod and cylinder liner.

The tie-rods are connected directly to the piston rod ends. Steering movements are transmitted symmetrically via the tie-rods to the steering arms; there is ample steering power even close to the full-lock positions.


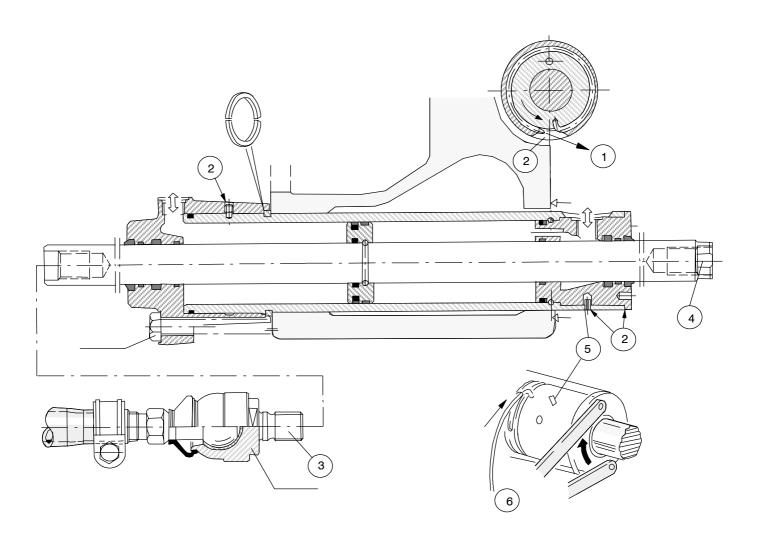


Figure 9. Sige steering cylinder up to front axle no. **1672**/94 (On Hi – Lock axles up to front axle number **0305**/94. On ind. front axles up to axle number **085**/94).

- 1. Removal of locking wire
- 2. Fill with silicon mass when fitting
- 3. Locking fluid Loctite 586 on the threads
- 4. Loctite 586
- 5. Pin to prevent rotation of end piece
- 6. Fitting of locking wire

	15.5.1993	Model	Code	Page
61. Steering system	1. 1. 1995	6000-8750	610	12

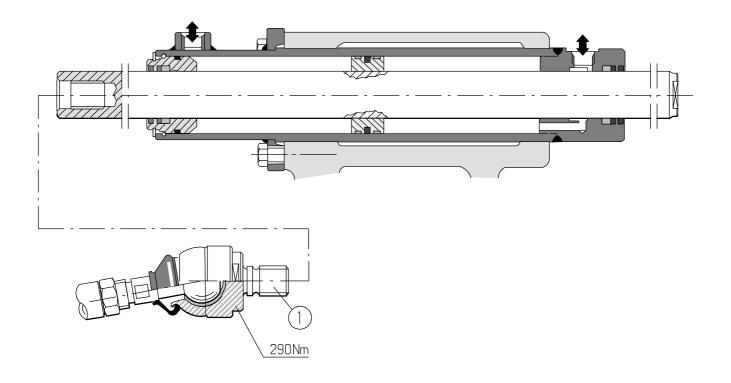

Picture 10. Steering cylinder with effect from front axle number **1673/94** (on Hi–Lock axles from axle number **0306/94.** On ind. front axles from axle no **086/94**). 1. Locking fluid Loctite 586 to threads.

The parts of the latest steering cylinder are not separately exchangeable with the earlier cylinder parts. The complete steering cylinder is exchangeable with the earlier cylinder. The inner diameter of the cylinder is 65 mm. The piston rod diameter is 32 mm.

NOTE! Steering cylinder on Carraro 20.29 front axle, see code 675.

	8.11.1990	Model	Code	Page
61. Steering system	15. 5. 1993	6000-8750	610	13

Fault tracing chart

Before disconnecting the pipes, hoses and hydraulic components it is most important that the units, as well as the adjacent parts, should be carefully cleaned. Use white spirit or a similar solvent. Also remove paint from the pipe fittings, couplings etc.

Open ports, hose and pipe ends must be plugged immediately after they are exposed, in order to prevent dirt from getting into the system.

Never use teflon when assembling the system. Traces of teflon can get into the system and cause problems.

Before examining the steering system for particular malfunctions, the fluid level should be checked and the whole system bled if necessary. Where applicable, check that the fluid system is not blocked. It is also important to make sure that the correct type of hydraulic fluid is used, see the oil recommendations.

Fault	Probable cause	Remedy
The steering wheel is hard to turn, but the steering is otherwise normal	No hydraulic pressure. The pump or the pump drive faulty	Repair the fault
	2. Non-return valve (3 fig. 5) leaking or ball in wrong position.	Replace the ball or check its position
	3. Pressure-limiting valve jammed in open position	Repair the pressure-limiting valve (or clean it)
	4. Considerable friction in the mechanical parts of the steering system.	Lubricate the steering system bearings and joints, repair if necessary. Check the steering column clearance
Continual correction of the steering wheel is necessary. The steering	1. Leaf springs have no force or are broken	Change the leaf springs
wheel will not assume a neutral position.	2. Steering column and steering valve are not in line.	Line up the steering column with the centre line of the steering valve
	3. Too little play or no play at all between the steering column and the connecting piece.	Adjust the clearance
The steering wheel will not assume the neutral position, tends to turn itself=motor effect)	Dirt, burrs or swarf between the inner and outer slides.	If possible clean the slides, otherwise change the complete housing or the whole steering valve
	2. Jamming between the inner and outer slides caused by too high fluid pressure	Clean the whole steering system
	3. Leaf springs broken or have no spring pres-	Adjust the pressure-limiting valve to the prescribed pressure
	sure.	Change the leaf springs
Road wheels turn in the wrong di-	Hoses to steering cylinder are reversed	Change the hoses round
rection	2. Wrong setting of rotor shaft or rotor set, see figure	Correct the setting
Steering force too low (or only to one side)	1. Steering pressure too low	Correct the pump pressure of the pressure e-limiting valve
one side)	2. Worn seal on steering cylinder piston	-
	3. Too large internal leakage in steering valve	Change the piston seal
	4. Shock valve faulty	Change or recondition the steering valve
	5. Abnormal superstructure for use of machine	Recondition shock valve
		Compare with machine of standard version
Abnormally large "play" in steering wheel	Groove for cross pin worn or broken	Change rotor shaft
- WI1001	2. Play in universal joint on steering column	Change the universal joint
	3. Leaf springs broken or have no spring force	Change the leaf spring

	8_17:1993	Model	Code	Page
61. Steering system	15. 5. 1993	6000-8750	610	14

Road wheels vibrate	1. Air in the steering cylinder	Bleed the steering system
	2. Wear in the mechanical connections or wheel bearings	Change worn parts
The steering wheel is subject to severe shocks when steering wheel is turned or the steering wheel tries to move the opposite way (=tends to twist out of the hands)	Faulty setting of rotor shaft and rotor set	
Shocks from road wheels while driving	1. Non-return valve (2 fig. 5) faulty	Change steering valve
Steering too slow	 Too little oil in the system Pipe lines partly clogged worn steering valve Abnormal superstructure or use of machine 	Check oil level and oil pressure flow from the pump Clean or repair Change or recondition the steering valve Compare with machine of standard version

C4. Charming avetoms	15. 5. 19 93	Model	Code	Page
61. Steering system	1. 1. 1995	6000-8750	610	15

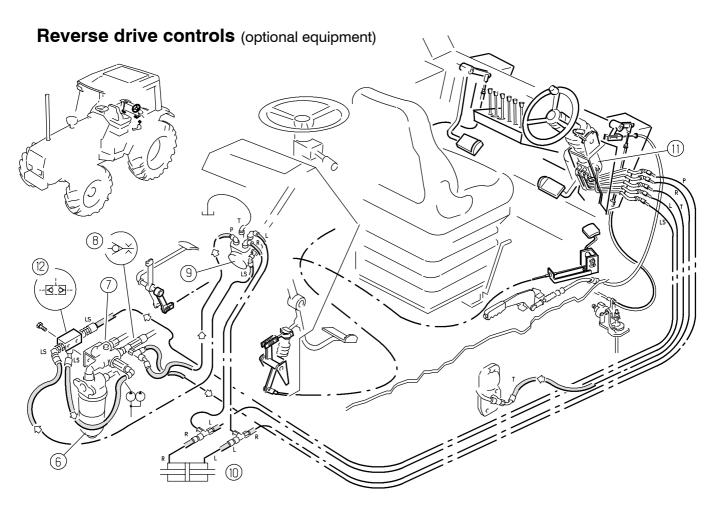


Figure 10. Reverse drive controls

- 6. Pressure filter
- 7. Priority valve

- 8. Non-return valve
 9. Steering valve (forward driving)
 10. Steering cylinder
 11. Steering valve, reverse drive controls
- pressure relief valve 14 MPa
 shock valve pressure 19,5 MPa
- steering valve revolution volume 100 cm $^3/r$
- 12. Shuttle valve, reverse drive controls


61. Steering system

1. 1. 1995

Model **6000-8750**

Code **610**

Page 16

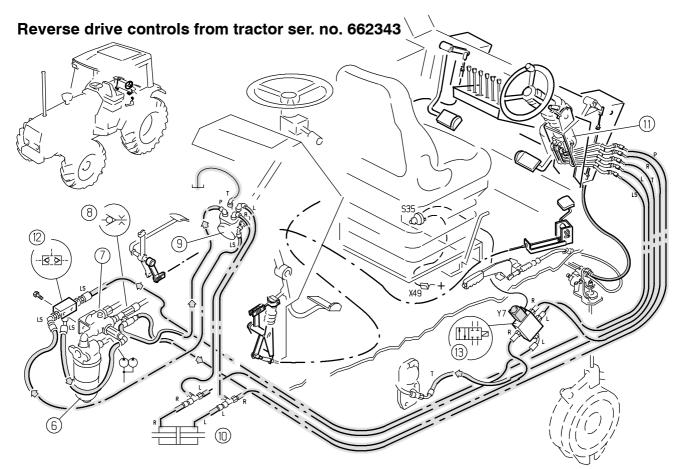

With effect from tractor serial no. **662343** the parking brake does not operate the rear brakes via the reverse drive brake pedal but the cable operates the brake mechanism direct (as on std models).

On certain markets the reverse drive controls are equipped with a directional control valve 13, which disengages the rear steering system when driving forwards.


When the seat is turned forwards, the switch **S35** under the seat switches on current to solenoid **Y7**, and the directional control valve 13 prevents oil from flowing from the rear steering valve to the steering cylinder.

Note! Check every now and then fuse F25 (if the fuse is blown, the valve 13 remains in the open position and the rear drive controls function despite of the position of the seat).


- The use of the reverse drive control in the road driving (transport driving) is prohibited.
- Valve table + levers (six or eight levers) are available as optional equipment.
- 7. Priority valve
- 8. Non-return valve
- 9. Steering valve
- 11. Rear steering valve
- pressure limiting valve 9 MPa
- shock valve 16 MPa
- revolution volume 100 cm³/r
- 12. Shuttle valve
- 13. Directional control valve

		Model	Code	Page
61. Steering system	1. 10. 1999	6250-8950	610	17

Reverse drive controls (TwinTrac) on HiTech models

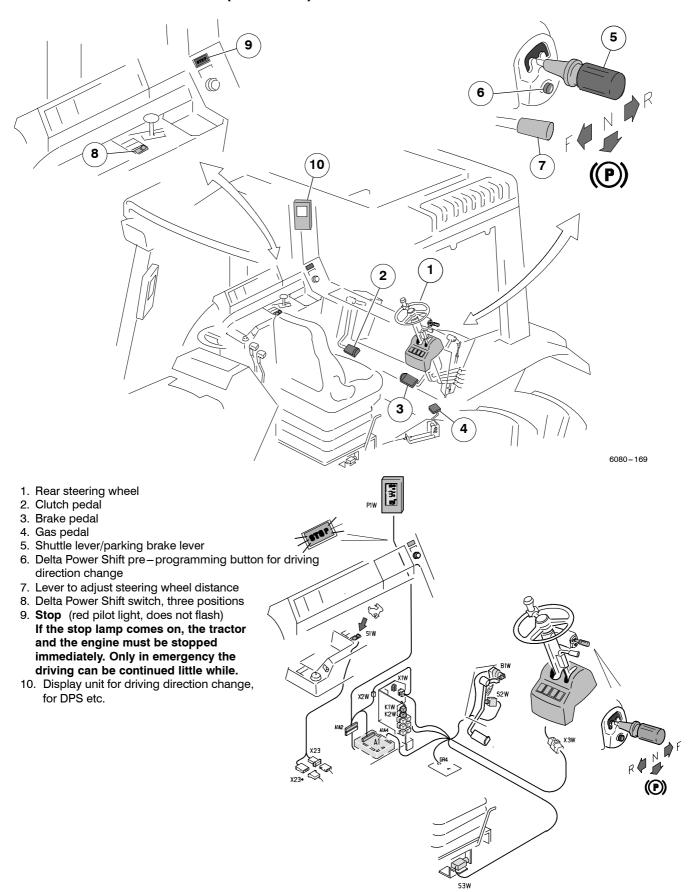


_		Model	Code	Page
61. Steering system	1. 10. 1999	6000-8950	610	18

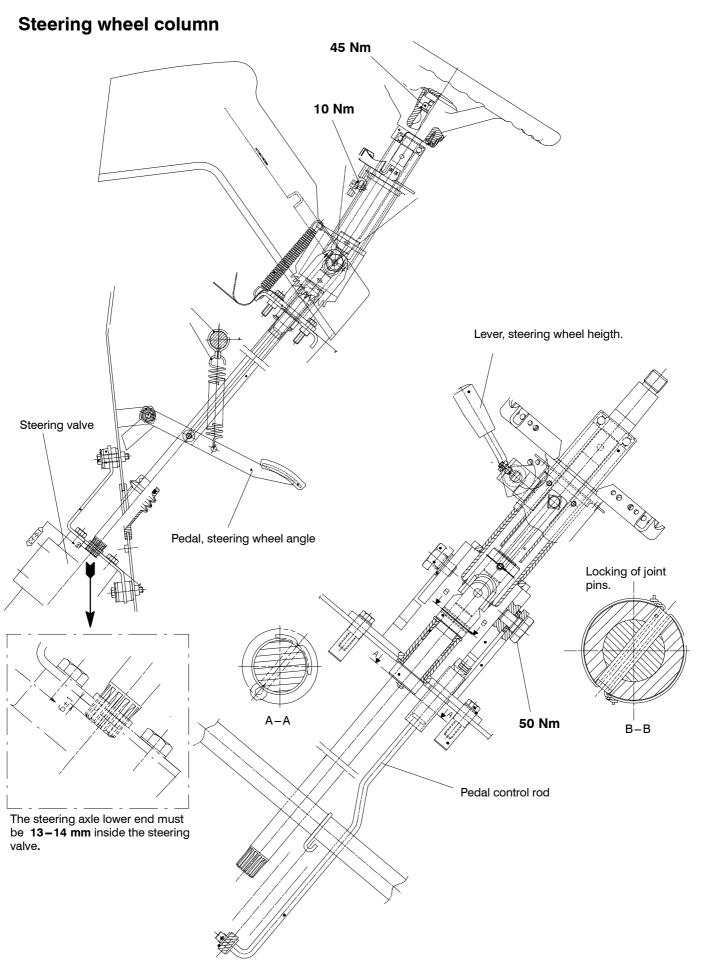

_		Model	Code	Page	l
61. Steering system	1. 8. 2000	6000-8950	610	19	

TwinTrac, AC 5.2

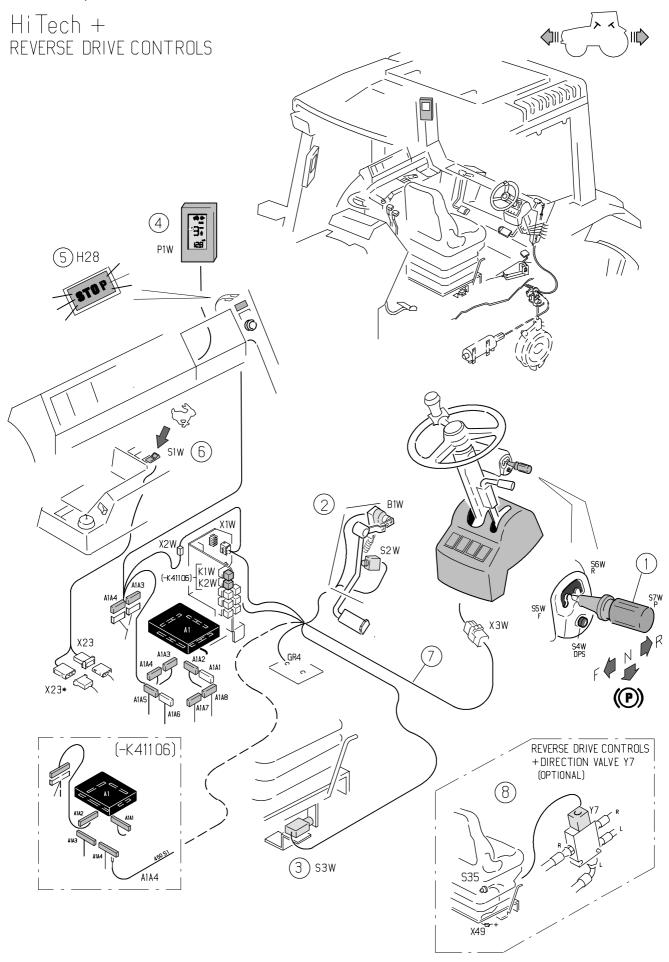





		Model	Code	Page
61. Steering system	8. 11. 1990	6000-8750	611	1

Reconditioning steering system


Steering valve (Op. no. 611)

A. Measuring steering system pressure


(pressure-limiting valve opening pressure)

1. Start the engine and allow it run until the oil temperature in the transmission is $50-65\,^{\circ}$ C.

Note! Oil warms up faster if the steering wheel is held against

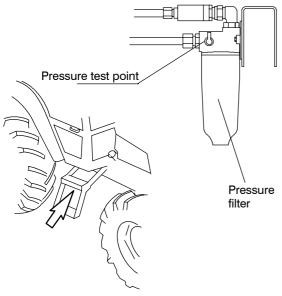


- 2. Connect a pressure gauge (measuring equipment, see page **610/3**) to the pressure test point (Valmet HPR) on the pressure filter bracket.
- 3. Run engine at 1500 r/min.

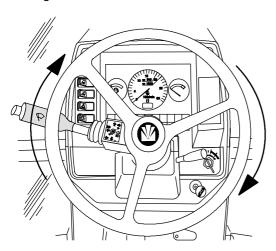

4. Turn the steering wheel to full lock and hold. The correct pressure gauge reading is **14,0–15,5 MPa** (140–155 bar).

Note! If the pressure value is not correct, remove the steering valve (**see instr. D**) and inspect the pressure limiting valve (**see instr. E**).

B. Checking shock valve opening pressure

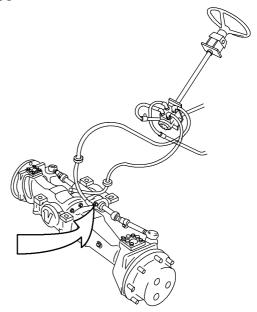

1. Disconnect one of the oil lines to the steering cylinder and connect a hand pump and a pressure gauge to the disconnected hose (measuring equipment 610/3).

Note! It is easier to disconnect the hose if the tractor is driven so that one front wheel is upper that the other (axle oscillation).


- 2. Pump up pressure and read off the shock valve opening pressure. The correct value is **19,5–21,5 MPa** (195–215 bar).
- 3. Completely re assemble the system and check the opening pressure in the other line to the steering cylinder.

Note! If opening pressure is not correct, remove the steering valve (**see instr D**) and check and clean the shock valves and adjust them (**see instr. E**).

		Model	Code	Page
61. Steering system	8. 11. 1990	6000-8750	611	2

C. Steering circuit leakage check


- 1. Start the engine and allow it run until the oil temperature in transmission is $55-65\,^{\circ}C$.
- 2. Run the engine at 1500 r/min.

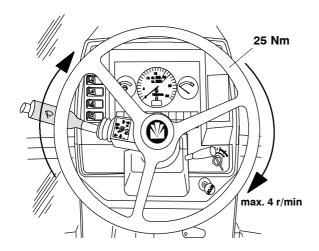

- 3. Turn the steering wheel to full lock and apply **25 Nm** torque to the steering wheel.
- 4. If the steering wheel turns more that **4 rev/min**, there is too much internal leakage in the steering valve and it must be changed.
- 5. Check the internal leakage also with a new steering valve. If the steering wheel still turns too much, the steering cylinder seals must be checked.

D. Removing steering valve

1. Remove the engine side shields.

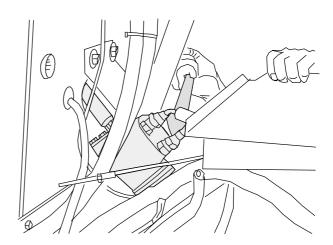

2. Disconnect the oil hoses from the steering valve.

Note! Mark the hoses for easier fitting.


- 3. Unscrew the steering valve bracket screws from the cab front wall.
- 4. Attach the steering valve to a vice and remove the bracket.

	\setminus	Model	Code	Page
61. Steering system	8. 11. 1990	6000-8750	611	3


E. Cleaning shock valves and pressure limiting valve

1. Remove the steering valve (**see instr D**). Secure the valve in a vice with soft jaws.

Note! There are two shock valves in the steering unit. Both valves are similar.

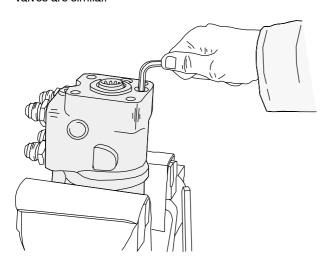


2. Remove the plug on the shock valve (6 mm socket head) and remove the sealing ring of the plug.

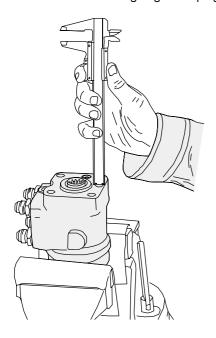

- 3. Measure and make a note of the distance between the adjusting screw and the upper face of the steering valve to faciliate the setting of the opening pressure of the shock valve.
- 4. Remove the adjusting screw (6 mm socket head). Shake out a spring, washer and a ball.
- 5. Clean and check the parts and change faulty ones. Lubricate all parts with oil before assembling. Minor damage to the seat can be polished with a ball and fine grinding paste.

- 6. Fit the valve ball, washer and the spring.
- 7. Apply a little locking fluid to the threads on the adjusting screw. Screw in the screw to the depth as measured in paragraph 3.
- 8. Fit the sealing ring and the valve plug and tighten to a torque of $40-60 \ Nm$.
- 9. Unscrew the pressure-limiting valve plug (8 mm socket head).

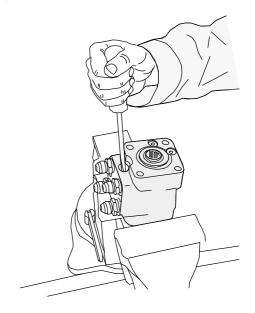

- 10. Remove the pressure limiting valve insert by unscrewing it with a 12 mm Allen key.
- 11. The pressure—limiting valve insert can be disassembled by unscrewing the plug with a 4 mm Allen key. After that the valve spring, seat and the ball can be removed.


Note! When assembling the valve, screw the plug to the same depth as it was before disassembling.

- 12. Clean all parts and the valve bore and lubricate the parts with oil.
- 13. Make sure that there is a sealing ring on the pressure—limiting valve insert. Fit the valve insert and tighten it to 40-60 Nm.
- 14. Fit the plug sealing ring and tighten the plug to 40-60 Nm.
- 15. Fit the steering valve (see instr. G) and check the steering system pressures (see instr. A and B).


		Model	Code	Page
61. Steering system	8. 11. 1990	6000-8750	611	4

F. Changing seals in steering valve


- 1. Remove the steering valve (see instr. D).
- 2. Secure the steering valve in a vice with the cover upwards. Mark the position of the cover, distributor plate and rotor ring for easier fitting.

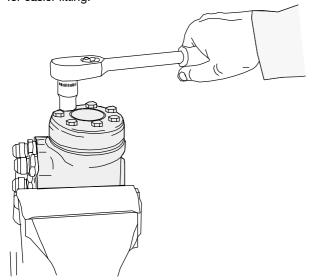


3. Unscrew the cover fixing bolts.

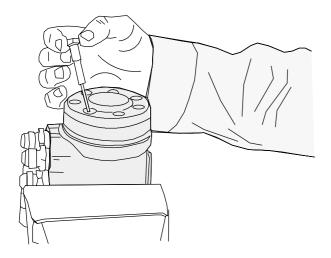

Note! Remember where the bolt with the locating pin was fitted. If the valve is turned upside down, three valve balls and two pins will fall out.

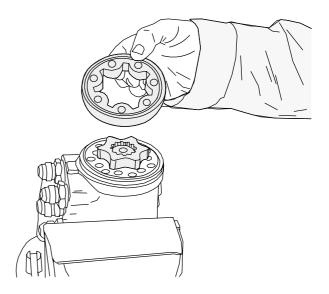

4. Remove the cover, rotor ring and the rotor and the washer inside the rotor.

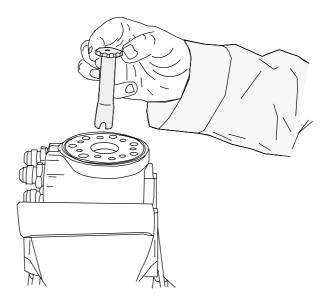

- 5. Remove the rotor shaft and the distributor plate. Check/ change o-rings between the parts.
- 6. Push up the valve slide and pull them out of the valve housing. Remove the thrust bearing from the slide bore.

61. Steering system


1.8.1998

Model **6000-8750**

Code


611

Page **5**

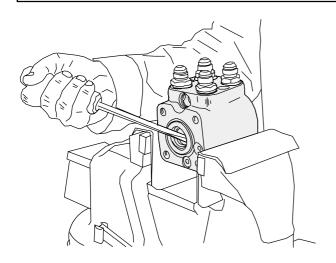

7. Turn the steering valve to a horizontal position and prize out the seal from the valve housing. Remove the inner oil seal. Fit a new outer seal. Apply some grease to the seal and turn the valve back to the vertical position.

8. Fit the inner seal (and the support ring) using tool ETV 892 100 *) as follows:

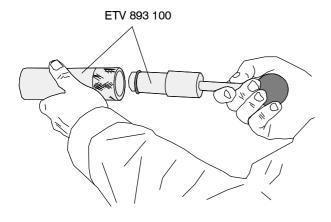

- lubricate the o-ring. Fit the support ring on the stud of the tool and fit the o-ring on the support ring. Push the stud into the guide sleeve.



-push the guide sleeve into the valve housing and push the seal together with the support ring in place using the stud on the tool. Remove the tool and check that the seal is property positioned.

*) Seal has been changed during autumn 96. A new seal can be fitted with tool ETV 894 330.




Note! If the centring springs are changed, they must be fitted as shown in figure above.

Note! Before removing the springs, mark position of the valve spindles in ralation to each others e.g. with tusche. Rinse the spindles with gas oil (also lubricating properties) so that they can move easily and the centring springs can center them.

9. Fit the ring over the centring springs. Place the thrust bearing assembly onto the valve slide.

Note! Thick thrust washer first, then bearing and then the thin thrust washer. Chamfered side of the thick washer towards the slide.

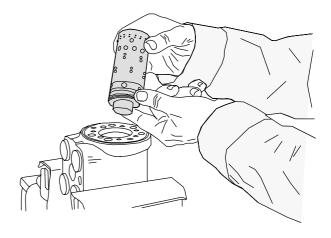

10. Push the valve slide into the housing fully home

Note! The valve slide together with the thrust bearing is easier to fit into the housing when the steering valve is horizontally. Turn the slides until the cross pin is parallel to the flat side of the valve housing.

11. Fit a new o-ring and the distributor plate onto the housing according to the mark. Fit the rotor shaft so that grooves on it engage the cross pin.

61. Steering cylinder


8. 17. 1990 1. 8. 1998

Model **6000-8750**

Code

611

Page **6**

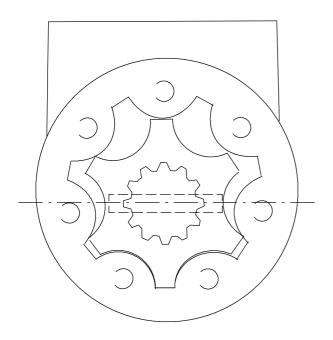

13. Then fit a new o-ring and the rotor ring according to the marks. Fit the rotor according to the figure above.


14. Fit the washer inside the rotor.

Note! See also the notes on the next column.



15. Fit the cover according to the marks and tighten the bolts to a torque of **30–35 Nm**.

16. Fit the steering valve (see next instruction).

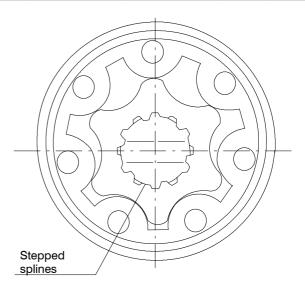

Note! In the latest steering valves the rotor shaft and the rotor have stepped splines at which time the mutual position of the parts is determined automatically.


Note! The stepped splines also prevent the rotor shaft from releasing from the cross pin inside the valve. With regard to possible repair works it is recommended, that a spacer is fitted at the end of the rotor shaft to ensure the position of the shaft. The spacers are still available as spare parts.

G. Fitting steering valve

- 1. Attach the bracket to the steering valve (17 mm) and secure the screws with locking washers.
- 2. Place the valve into its place and guide the steering wheel column lower end into the valve splines.
- 3. Fasten the bracket to the cab front wall. Connect the oil hoses according to the marks.
- 4. Test-run the tractor and check for leaks.



		Model	Code	Page
61. Steering system	8. 11. 1990	6000-8750	612	1

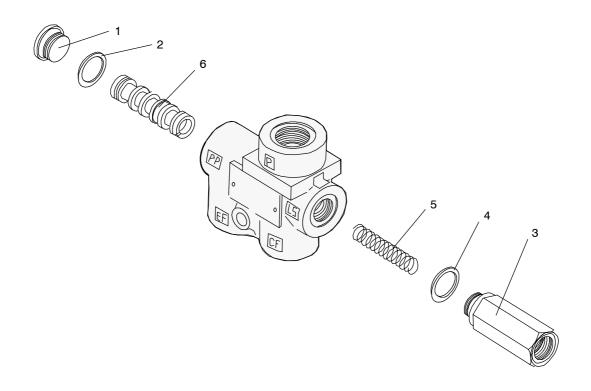

Priority valve (Op. no. 612)

1. Cleaning priority valve OLS 80

A. Disassembling

- 1. Detach the priority valve which is fitted beside the pressure filter under the cab floor on the RH side.
- 2. Open the plug (1) and remove the sealing ring (2).
- 3. Unscrew the connection (3) and remove the sealing ring (4) and the spring (5).
- 4. Push out the valve slide (6) by using e.g. a pencil. Do not damage contact surfaces on the slide and the housing.
- 5. Check and clean the parts. Replace the sealing rings with new ones. Lubricate the parts with oil before fitting.

B. Assembling


- 1. Push the slide (6) into the housing. Fit a new sealing ring on the plug (1).
- 2. Place the spring (5) into the housing. Fit a new sealing ring and the connection (3). Tighten the connection to **40 60 Nm**.
- 3. Tighten the plug (1) to 40-60 Nm.
- 4. Fit the priority valve.

8050-8750

Code

612

Page 2

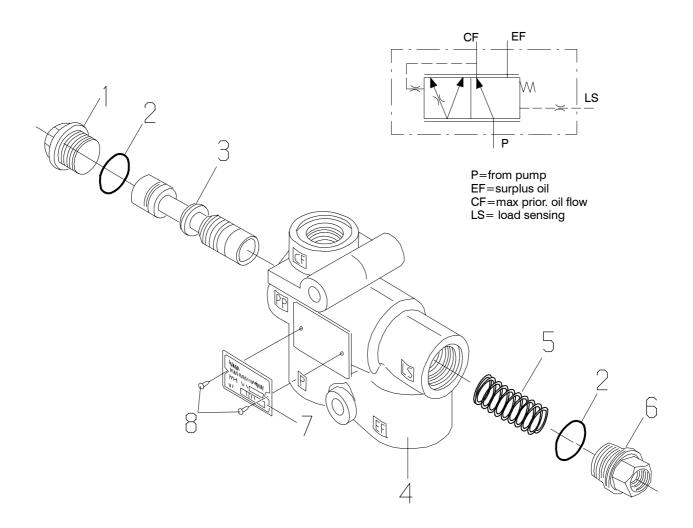

Priority valve OLS 120

Note! Priority valve OLS 120 is fitted on 8050-8750 tractors and on 6000-8400 from F13208 – . The construction differs a little from OLS 80 valve. OLS 120 valve is bigger than OLS 80.

1. Cleaning priority valve

A. Disassembling

- 1. Detach the priority valve which is fitted beside the pressure filter under the cab floor on the RH side.
- 2. Open plug (1) and remove the sealing ring (2).
- 3. Unscrew the connection (6) and remove the sealing ring (2) and the spring (5).
- 4. Push out the valve slide (3) by using e.g. a pencil. Do not damage contact surfaces on the slide and the housing.
- 5. Check and clean the parts. Replace the sealing rings with new ones. Lubricate the parts with oil before fitting.

B. Assembling

- 1. Push the slide (3) into the housing. Fit a new sealing ring on the plug (1).
- 2. Place the spring (5) into the housing. Fit a new sealing ring and the connection (6). Tighten the connection to **40–60 Nm**.
- 3. Tighten the plug (1) to **40–60 Nm**.
- 4. Fit the priority valve.



	8_11.1990	Model	Code	Page
61. Steering system	1. 1. 1995	6000-8750	613	1

Steering cylinder (Op. no. 613)


1. Changing seals in steering cylinder

Note! This instruction concerns earlier steering cylinder, -1672/93, -0305/93 (Hi-Lock). Later cylinder, see page 613/3.


A. Removal of steering cylinder

- **N.B.** It is not necessary to detach the front axle from tractor when repairing the steering cylinder. In the figures below the front axle is detached.
- 1. Raise the front end of the tractor and place axle stands behind the front axle. Turn the front wheels to the left against the limiter screw.
- 2. Heat up the RH side piston rod end at the joint between the piston rod and tie rod until the locking fluid in the threads melts (apply heat carefully about 30 mm from end, max 200° C).

Important!. the metal must not be allowed to become blue during the heating operation. Do not heat up the ball joint because this can damage the rubber cover on the joint.

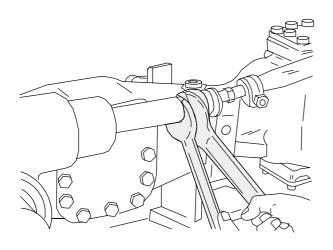

- 3. Disconnect the tie rod from the piston rod end.
- 4. Turn the LH wheel to the right against the limiter screw and disconnect the threaded joint between the LH side piston rod and tie rod in the same way as described above.
- 5. Disconnect oil hoses from the steering cylinder. Remove the connecting nipple from the RH side end piece. Cover all holes with suitable plugs.

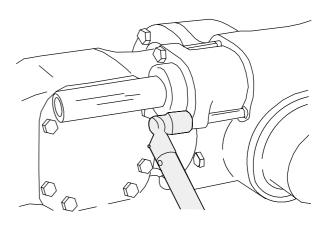

- 6. Remove steering cylinder attaching bolts (on LH side).
- 7. Pull out the cylinder to the left from the axle housing.

Note! On E-models, there is a sensor on the front axle for detecting steering angle.


B. Changing seals in RH side end piece

1. Remove steering cylinder (instr. A).




2. Secure the cylinder in a vice. Tap in the pin (ø 4 mm) on the RH side end piece. Push the pin as far as possible.

61. Steering system 8. 11. 1990 Model 6000-8750

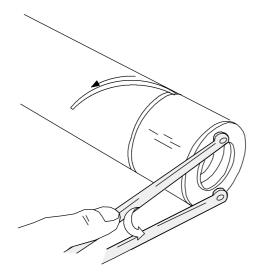

- 3. Turn the end piece with tool ET 894000 until the locking wire emerges. Remove the end piece from cylinder. Remove the pin from the end piece.
- 4. Change the o-ring and support ring which packs against the cylinder liner. Grease the o-ring with universal grease (support ring is fitted outermost).
- 5. Change scraper seal, support ring and seal which packs against the piston rod. Grease parts with universal grease. Change the innermost support ring when necessary.

Note! Scraper seal lip outwards, seal lip inwards.

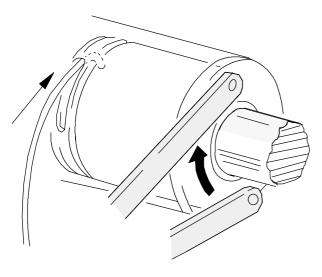

- 6. Push the end piece carefully into the cylinder, hook the safety wire into the hole and rotate the end piece until the whole wire has been correctly positioned in the groove (note direction of rotation).
- 7. Drive the pin into the hole until it is level with the surface of the end piece.
- **N.B.** Never use a pin that is too long ($\max \emptyset 4x8 \text{ mm}$), because it will prevent removal of the end piece in the future..
- 8. Apply silicon mass to the pin, to the locking wire groove and to the joint between cylinder liner and end piece.
- 9. Fit the steering cylinder into the front axle housing (Op. D).

C. Changing seals in LH side end piece


Code

613


Page

2

- 1. Remove steering cylinder (instr. A).
- 2. Secure steering cylinder in a vice.

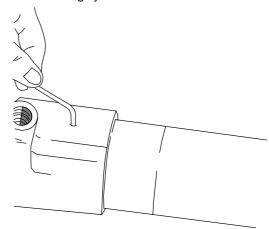

3. Unscrew the locking screw on the LH side end piece.

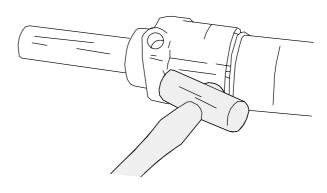


- 4. Knock out the end piece using a hammer. Remove the now loose locking ring segments.
- 5. Change the o-ring on the cylinder liner outer side. Change the scraper seal, sealing ring and two support rings which are fitted on the end piece. Grease parts with universal grease.

Important: The lip of the scraper seal should be turned inwards.


- 6. Fit the end piece onto the cylinder liner until it lies against the segments of the locking ring. Turn the end piece until the locking screw can be fitted.
- N.B.! Apply silicon mass to the locking screw.
- 7. Fit the steering cylinder into the axle housing (Op. D).

	8.11.1990	Model	Code	Page
61. Steering system	1. 1. 1995	6000-8750	613	3

D. Fitting steering cylinder

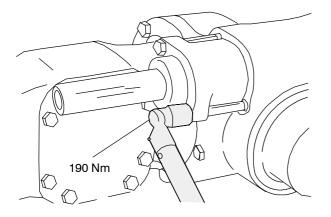

1. Push the steering cylinder into the axle housing. Tighten cylinder attaching screws to **190 Nm**.

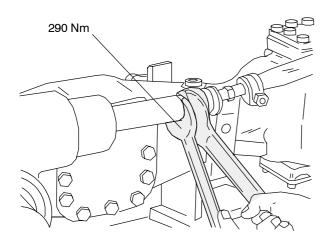

- 2. Connect the piston rod to the tie rods. Tighten the joint to **290 Nm.** Apply locking fluid Loctite 586 to the threads.
- 3. Connect the oil hoses to the steering cylinder.
- 4. Start the engine and check that the steering system functions properly. Check for possible leakage. Check oil level in hydraulic oil tank.


2. Later steering cylinder

The steering cylinder on Sige front axles has been changed from axle number 1673/94 incl. and 0306/94 – incl. (Hi–Lock) or 086/94 – incl. (ind. front axle)

The new cylinder is as a complete unit exchangeable with the earlier one. Order number of the new steering cylinder is 31797410.

A. Changing seals

1. Removing the cylinder, see instr. 1A on page 613/1.

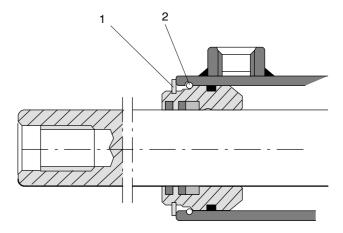

- 2. Remove the locking ring (1). Push the end piece a little inwards and remove the securing ring (2).
- 3. Pull the piston rod/piston out of the cylinder with a rapid movement at which time also the end piece releases.
- 4. Remove all damaged seals and fit new ones.


Note! A seal ring kit no 31797510 is available. Lubricate all seals with oil before assembling the cylinder.

5. Assemble the cylinder in the reverse order. Fitting the cylinder into the front axle, see instr. **D** on this page **613/3**.

	8.11.1990	Model	Code	Page
61. Steering system	1. 1. 1995	6000-8750	613	4

Adjustments


A. Adjusting front wheel toe-in

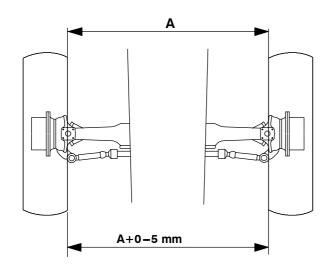

First check that there is no play on the ball joints of the steering arms and tie rods. Set the wheels for running straight ahead.

Checking

Make a vertical mark on the front tyres on the middle of the tread level with hubs. Measure the distance between the marks. Roll the tractor forwards so that the marks again come level with hubs, this time at the rear edge. Measure the distance between the marks again. The distance of the marks should be **0-5 mm** larger at the rear edge.

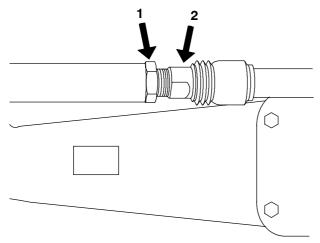


Adjustment

Slacken the locking screws (1) of the tie rod and turn the adjusting screw (2) in the desired direction.

Check the measurements again as above and tighten the locking screws when the correct measurement has been obtained. Both tie rods must be adjusted so that there is no limitation of the steering lock.

B. Adjusting steering lock

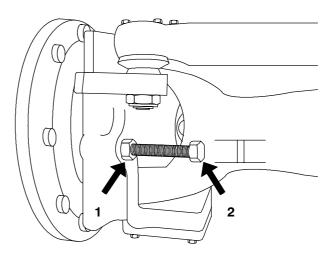

Adjustment of steering angle may be necessary when changing tyres or if the track width of the front wheels has been adjusted.

The front axle is fitted with limiter screws which limit the steering lock. Carry out adjustment by slackening the locking nuts (1) and adjust the adjusting screws (2). After adjusting tighten the nuts.

Adjust the adjusting screws of both sides to the same length, so that the turning angle would be same on both sides.



		Model	Code	Page
64. Powered front axle	8. 11. 1990	6000-8750	640	1

Contents

General (Op. no. 640) Technical data	3
Axle housing and central pivot bearing brackets (Op. no. 641) A. Removing front axle B. Changing front axle central pivot bearing bracket sleeves C. Fitting front axle	1
Drive shafts (half shafts) (Op. no 642) 1. Reconditioning drive shafts: A. Changing outer ball bearing and oil seal B. Changing inner bearing bushing and oil seal C. Reconditioning double universal joint	3
Hub reduction gear (Op. no. 643) 1. Reconditioning planetary hub gear: A. Changing planetary pinion roller bearings B. Changing hub bearings and seals C. Changing steering knuckle bearings	2
Differential (Op. no. 644) 1. Reconditioning differential: A. Changing pinion shaft seal (without removing the shaft) B. Changing differential brake discs	
2. Changing pinion shaft/crown wheel: A. Removing differential B. Removing pinion shaft C. Fitting pinion shaft and adjusting position of pinion shaft D. Adjusting differential bearing preload and tooth backlash pinion/crown wheel E. Assembling front axle	3 3 5

64. Powered front axle

8. 11. 1990 1. 1. 1995

Model **6000-8750**

Code **640**

Page

2

Technical data

4WD is engaged electro – hydraulically by means of a multi – disc clutch.

Axle type designation:	
- 6000 - 8400 · · · · · · · · · · · · · · · · · ·	Sige CS17VSD
Gear ratios:	
- differential	
- hub reduction gears	
- total gear ratio	17,72
Gear ratios front axle – rear axle, tractors with 2 – step quick – shift gear: – transmission 300/30 km/h (tractors 6100 – 6400 and 8000)	1 301
- transmission 300/30 km/h (tractors 6100–6400 and 8000)	
- transmission 420/30 km/h (tractors 6600 and 8100)	
- transmission 420/40 km/h (tractors 6600 and 8100)	
Note! Tractors with Delta Powershift, see page 420/2A.	1,010
110101 1101010 11111 2010 101010 1111 1110 1	
Camber	1
KPI	5°
Caster	0
Toe-in	0-5 mm
Front axle oscillation	
Front axle oscillation, 662538 – , 8100 – 8400	
Steering lock (adjustable)	
Flange distance	1700 mm
Automatic differential brake:	0.0
- number of friction discs	•
- number of intermediate discs	•
- thrust plates Oils:	•
Oils.	or 10W30 GL-4 STOU
Oil capacities:	01 10W00 GE-4 0100
- differential	8 litres
– hub	
Tightening torque	
Front axle attaching bolts	380 Nm
Front wheel nuts	
Propeller shaft flange joint	35 Nm
Tie rod-steering arm	160 Nm
King pin attaching bolts	120 Nm
Ring gear attaching bolts	75 Nm
Crown wheel attaching bolts	
Pinion shaft nut	
Axle housing bolts	
Planetary gear housing attaching bolts	70 Nm

Setting values

Rolling resistance, pinion shaft bearings (measured

Axial clearance (between axle housing – pivot bearing brackets) 0,1 – 1,1 mm

Sealing compounds and locking fluids used:

Sealing compound Loctite 290

- on outer sides of oil seals
- on wear ring inner surfaces
- on hub seal dust cover

Medium strength locking fluid Loctite 242

- ring gear attaching bolts

Heavy strength locking fluid Loctite 586

- tie rod-piston rod

Special tools


ETV 892 290 Sleeve for fitting drive shaft outer oil seal (powered front axle 505–905)
ETV 893 600 Sleeve for fitting pinion shaft oil seals (powered front axle 505–905)
ETV 893 730 Plate for fitting drive shaft inner oil seal (powered front axle 505–905))
ETV 894 020 Plate for fitting hub oil seal (powered front axle 505–905)

ETV 894 150 Flate for fitting hub oil seal of cassette type (1701/94–)

Locally prepared tools

ET 894 010 Drift for fitting/removing drive shaft bushing (powered front axle 505–905)

Extractor for removing king pins

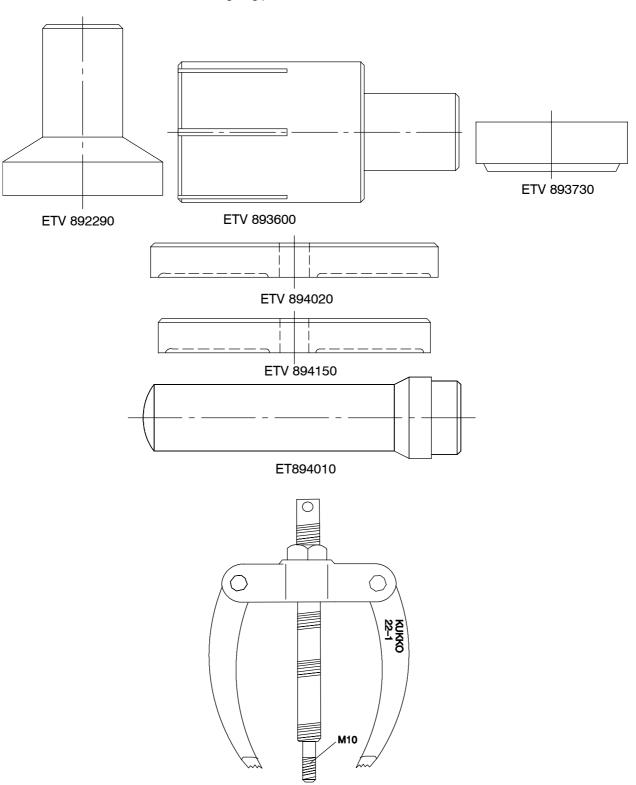

Extractor for removing king pins

		Model	Code	Page
64. Powered front axle	8. 11. 1990	6000-8750	640	4

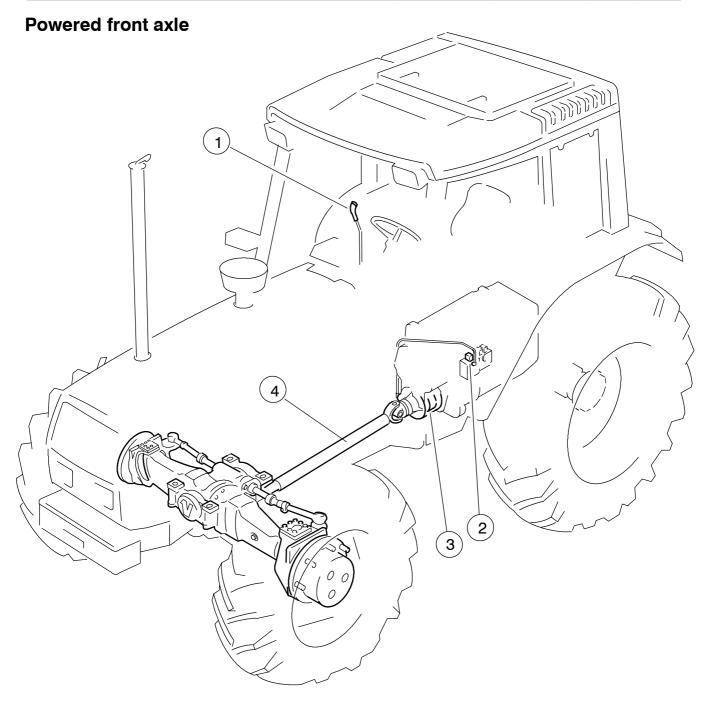


Figure 1. Powered front axle

- 1. 4WD switch is placed on the range gear lever knob
- 2. Solenoid valve for 4WD on the servo valve block
- 3. 4WD clutch/output shaft is fitted in the lower part of the reverse shuttle housing
- 4. Propeller shaft

Note! Reconditioning 4WD clutch, see section 44

Note! 4WD engages automatically when the brake pedal/pedals are depressed

Powered front axle, description

Powered front axle on 6100 – 8100 tractors is the same Sige – axle as on Valmet –05 series.

The powered front axle is attached to the front end of the tractor by two bearing brackets. There is a small clearance between the axle housing and central pivot bearing brackets. This clearance can be adjusted with shims.

The power is transmitted from the gearbox to the pinion shaft by the propeller shaft. From the pinion shaft, power is transmitted through the differential to the drive shafts and through the double universal joints to the hub reduction gears and the front wheels

The drive shafts are carried in bearing bushings in the axle housing and in ball bearing in the swivel housings.

In each hub gear the planetary pinions (3 off) are carried in roller bearings in the retainer. The ring gear is bolted to the steering knuckle. The steering knuckle is attached to the front axle housing by the king pins which are carried in taper roller bearings. The bearing preload of the king pins is adjusted with shims at the upper pin.

The differential is provided with an automatic differential brake. The friction discs are fitted between the differential side gears and the differential casing.

Position of pinion shaft, tooth backlash and differential and pinion bearing preload are adjusted with shims.

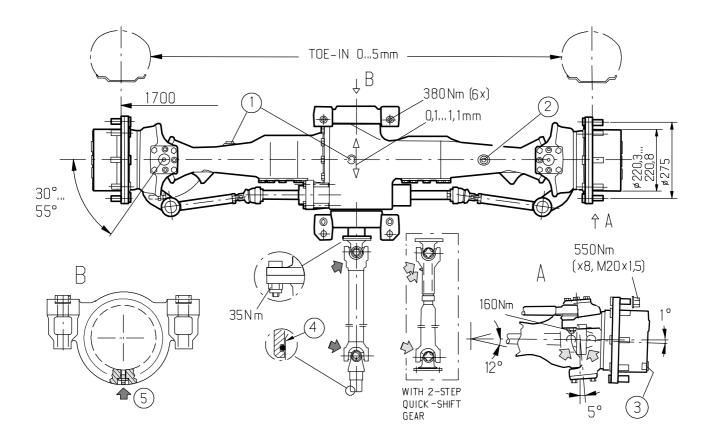


Figure 2. Sige front axle

- 1. Plug for checking and raining oil in differential housing
- 2. Oil filling plug for differential housing
- 3. Oil filling and draining plug for hub

Note! Oil levels in the axle should be checked every 500 running hours. Oil should be changed yearly/every 1000 running hours. Central pivot bearing bracket nipples (B) must be greased at every 50 running hours, other nipples at every 250 running hours.

- 4. Pressure resistat grease on splines in connection with repairs
- 5. Earlier two grease nipples, later one grease nipple.

Code

640

Page

6

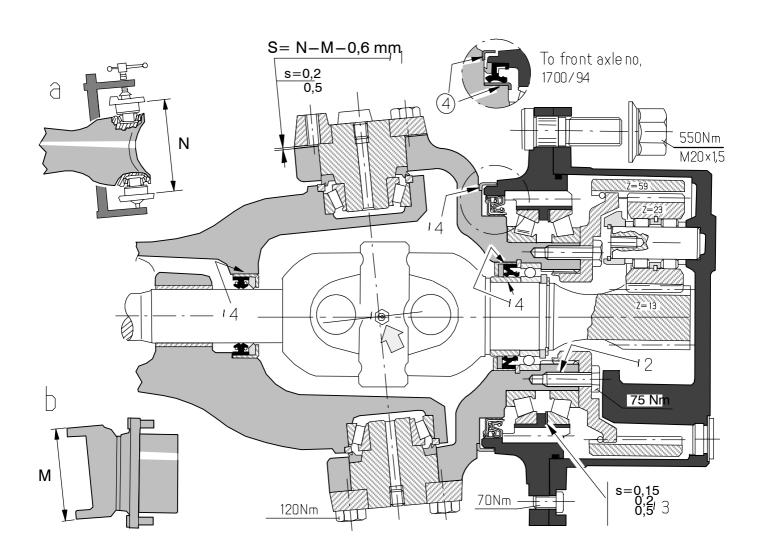


Figure 3. Planetary gear, Sige front axle

- 1. Shims for adjusting steering knuckle bearing preload
- 2. Locking fluid Loctite 242 on threads
- 3. Shims for adjusting wheel bearing preload
- 4. Sealing compound Loctite 290
- a) Adjustment of steering knuckle bearings preload
- b) Adjustment of steering knuckle bearings preload

		Model	Code	Page
64. Powered front axle	8. 11. 1990	6000-8750	640	7


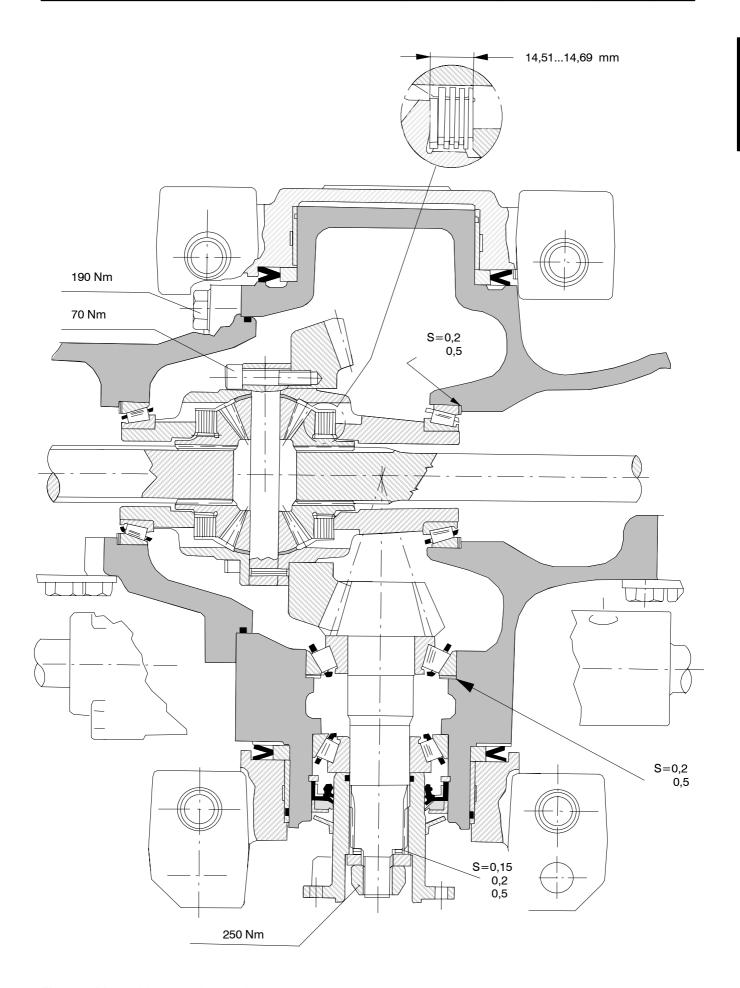


Figure 4. Differential, powered front axle

		Model	Code	Page
64. Powered front axle	1. 1. 1994	6000-8750	640	8

Differential lock

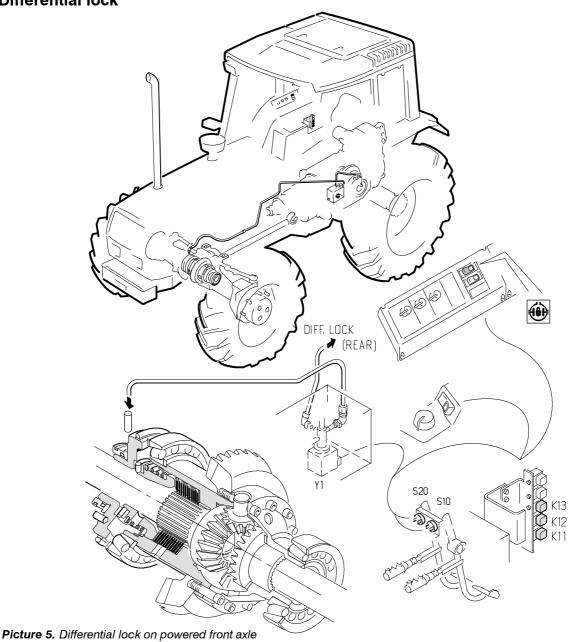


The front axle differential lock is an optional equipment for all Mezzo-tractors from the beginning of the year 1994.

The front and rear locks are supplied via the same solenoid valve (Y1) and both locks are controlled with the same rocking switch on the driver's right. Clutch pressure (1,8 MPa) from the low pressure circuit.

Differential lock control, see **Autocontrol II** under code **311**, **Autocontrol IV** under code **350**.

Repair instructions of the differential lock, see page 644/8.

		Model	Code	Page
64. Powered front axle	1. 1. 1994	6000-8750	640	9

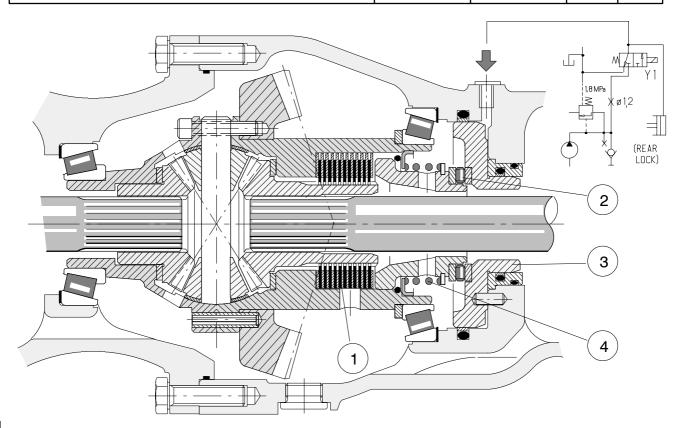

Picture 6. Cross section of differential lock

- 1. Disc pack: 11 friction discs ja 12 steel discs
- 2. Thrust bearing
- 3. Piston
- 4. Return spring of piston

The differential equepped with the lock cannot be fitted into the standard axle since the differential with the lock requires a new axle housing.






		Model	Code	Page
64. Powered front axle	8. 11. 1990	6000-8750	641	1

Axle housing and central pivot bearing brackets (Op. no. 641)

A. Removing front axle


- 1. Drain the oil from the hub gears and from the differential (if necessitated by the repair job in hand).
- 2. Remove the propeller shaft guard. Disconnect the propeller shaft front flange joint from the pinion shaft.
- 3. Disconnect oil hoses from the steering cylinder. Raise the tractor front end and place axle stands under the front frame. Remove front wheels if needed.
- 4. Connect the hoist to the front axle and remove axle bearing brackets from tractor frame. Remove the axle from the tractor.

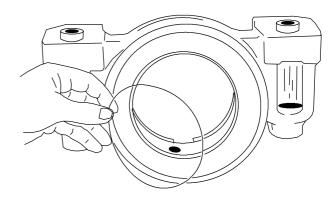

- 3. Check condition of v-ring and intermediate ring. Grease all parts with universal grease. Also grease the o-rings for the sleeves.
- 4. Fit bearing brackets onto the axle and fit the axle (Op C).
- **N.B.** Central pivot bearing brackets should have a small axial clearance (0,1-1,1 mm). Adjust this if necessary using shims.

B. Changing central pivot bearing brackets sleeves


1. Remove front axle (see Op. A 2-4)

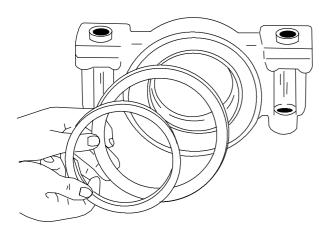

2. Remove bearing brackets from axle. Check condition of bearing sleeves.

C. Fitting front axle

 - ${\bf 1.\,Check\,that\,bearing\,brackets\,are\,in\,right\,position\,on\,the\,axle.}$
- 2. Lift up the front axle and tighten the bearing bracket attaching bolts to **380 Nm. Note!** Propeller shaft guard front end must be fitted under the rear attaching bolts.
- 3. Connect the steering cylinder oil hoses. Connect the propeller shaft flange joint (35 $\,\mathrm{Nm}$).
- 4. Fit the front wheels if removed (**550 Nm**). Remove supports from under the tractor.
- 5. If the oil was drained refill the differential (8 I) and both hubs (2x1 I).
- 6. Grease the front axle central pivot bearings.
- 7. Test run the tractor and check that the steering system function properly.






		Model	Code	Page
64. Powered front axle		6000 8750	642	.
	8. 11. 1990	6000-8750	042	

Drive shafts (Op. no. 642)


1. Reconditioning drive shafts

A. Changing outer oil seal and ball bearing.

1. Raise the tractor front end and place axle stands under the tractor. Drain the oil from the hub.

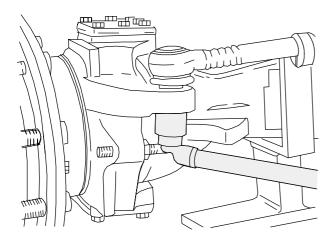


2. Disconnect the tie rod from the steering arm.

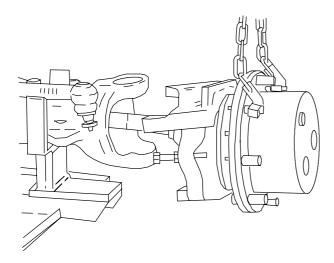


3. Support the hub with a suitable hoist and remove the king pins. Carefully pull out the hub from the axle housing; the drive shaft will also be loosened.


Note! Do not damage the drive shaft inner oil seal. King pins can be removed by using a standard extractor e.g. Kukko 22–1 (see page **640/3**)

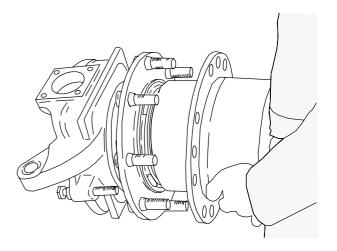

4. Unscrew the planetary gear housing screws and pull the planetary gear unit out from the hub.

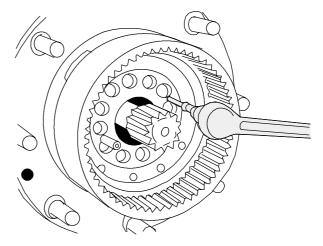

5. Unscrew the ring gear attaching bolts and pull out the ring gear using puller screws (M8).

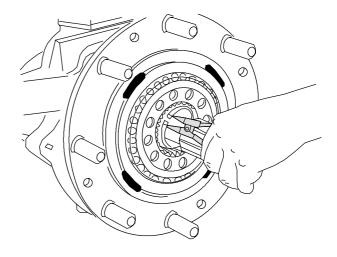

- 6. Remove the drive shaft circlip and spacer ring and knock out the drive shaft from the hub.
- 7. Pry out the drive shaft outer seal from the hub. Remove the ball bearing circlip and the bearing. Fit a new bearing; push it right home against the bottom of the housing and fit the circlip.

64. Powered front axle


	_			T_N
_	_	_		J ''
	5	11	1000	7


Model **6000-8750**

Code **642**


Page

2

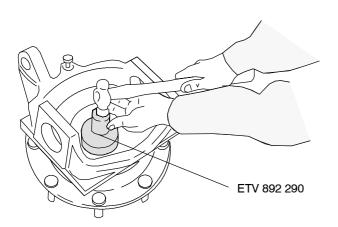

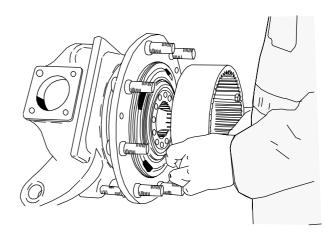


- 8. Oil the new seal and fit it into the place against the circlip.
- **N.B.** Tool ETV 892290 can be used when fitting the seal. Apply sealing compound Loctite 290 to the outer side of the seal.
- 9. Fill the space between the seal lips with universal grease. If necessary change the oil seal wear ring on the drive shaft. Apply sealing compound Loctite 290 to the inner side of the wear ring.
- **N.B.** Heat the wear ring to 80°C before fitting; heating makes it easier to fit onto the shaft.

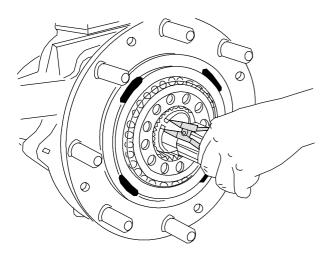

10. Wrap thin plastic film round the drive shaft splines (sun gear) and push carefully into the hub. Fit the drive shaft spacer ring and circlip..


- 11. Fit the ring gear and tighten bolts evenly to **75 Nm.** Apply locking fluid Loctite 242 to threads.
- 12. Check the planetary gear housing o-ring and change if necessary. Apply universal grease to the o-ring. Attach the housing to the hub. Tighten the screws to a torque of **70 Nm**.

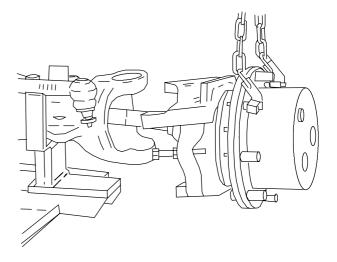

- 13. Fit the hub on the axle housing and push the drive shaft carefully into the housing, avoiding damage to the drive shaft inner oil seal. Push the drive shaft until its splines slide into the splines in the differential.
- 14. When the drive shaft is fully home the hub is attached to the axle by means of the king pins. Replace the same shims under the upper king pin, which were removed. Tighten the king pins to **120 Nm.**
- 15. Connect the tie rod to the steering arm (160 Nm). Fill the hub with oil and fit the front wheel (550 Nm). Test run the tractor and check for possible leakages

		Model	Code	Page
64. Powered front axle	8. 11. 1990	6000-8750	642	3

B. Changing inner bearing bushing and oil seal

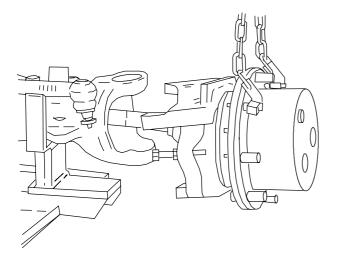

- 1. Remove the hub and the drive shaft (see Op A; 1-3).
- 2. Remove the old oil seal from axle housing.
- 3. Check the bearing bushing behind the seal. If the bush has to be changed tap it into the axle housing by using the drift ET 894010. Fit the new bush into its place with the same drift. Grease the bushing with universal grease.
- **N.B.** The old bushing can be removed from the axle housing through the cover which is fitted on the front side of the housing.




4. Apply sealing compound Loctite 290 to the outer side of the new oil seal. Oil the seal and fit it carefully in place using tool ETV 893730 with the all—purpose handle. Fill the space between the seal lips with universal grease.


5. Fit the drive shaft and the hub onto the axle housing (see Op. A; 13-15).

C. Reconditioning double universal joint

1. Remove the drive shaft (see Op. 642 1A; 1-6).

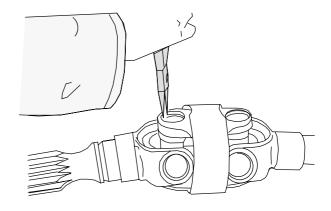


2. Remove the cross journal snap-rings (8 pcs).

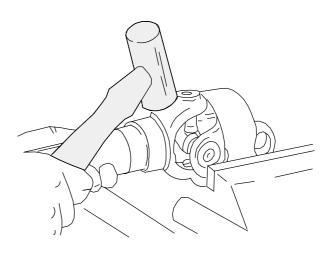

- 3. Secure the joint in a vice and tap either side of the fork shank to remove the bushings. Remove all the bushings in the same way; this will also free both cross journals.
- **N.B.** There are bearing needles in the bushing. The needles can be kept in position with grease.

		Model	Code	Page
64. Powered front axle	8. 11. 1990	6000-8750	642	4

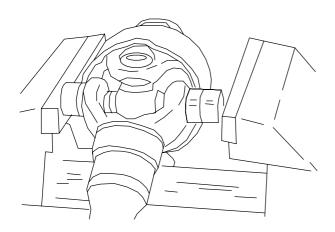

- 4. Fit the bushings as shown in the figure above. When the bushings are in place the snap-rings can be fitted.
- 5. Fit the drive shaft (see Op. 642 1A; 10-15).




		Model	Code	Page
64. Powered front axle	8. 11. 1990	6000-8750	643	1

Hub reduction gear (Op. no. 643)


1. Repairing planetary gear

A. Changing planetary pinion roller bearings


1. Raise the front end of the tractor and support the tractor frame. Remove the front wheel on the side requiring repair. Drain the oil from the hub.

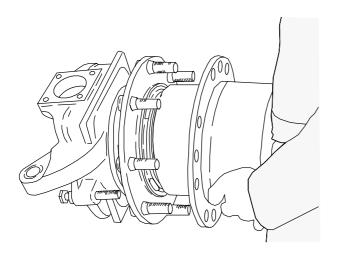


2. Unscrew the planetary gear housing screws and pull the housing off the axle.

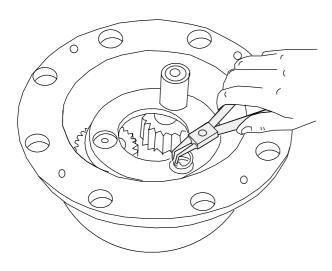

3. Remove the planetary pinion shaft circlips.

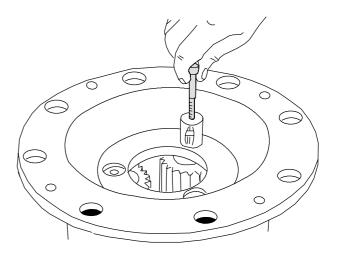


- 4. Pull off the shafts using a screw (M8). The fit is not particularly tight.
- 5. To remove the gears, first move two from the outside, after which the third one can be removed through the middle. Remove all the gears in the same way.
- 6. Remove the old bearing rollers from the gears.
- 7. Fit new bearing rollers (rollers are changed as a complete set) and apply grease to the rollers so that they are held in place on the gears. Fit the outer spacer rings against the rollers.
- 8. First fit the two gears carefully through the middle hole of the retainer and position them against the housing. Then fit the third gear into place through the middle hole.
- **N.B.** Check that the rollers and spacer rings are correctly positioned before fitting the pins.
- 9. Push the pins into place and fix them with circlips.

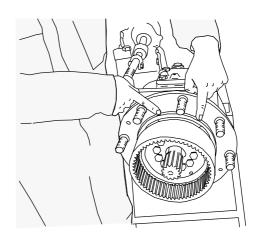


- 10. Check the o-ring on the planetary gear housing and change if necessary. Fit the planetary gear onto the steering knuckle and tighten the bolts to **70 Nm**.
- 11. Fit the front wheel $(550 \ Nm)$. Fill the hub with oil and testrun the tractor.

B. Changing wheel bearing and hub oil seal


1. Raise the front end of the tractor and support it with sturdy trestles. Remove the front wheel from the side to be repaired. Drain the oil from the hub.

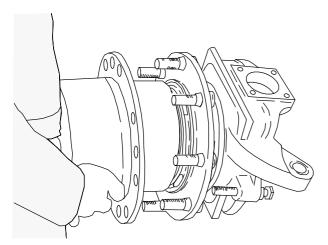


- 2. Unscrew the planetary gear housing screws and remove the housing from the axle.
- 3. Unscrew the ring gear attaching screws; pull off the ring gear with aid of two screws (M8).

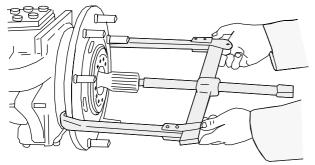


- 4. Pull off the wheel attaching flange using a puller; this action releases the outer bearing of the wheel.
- 5. Use a drift to tap out the wheel bearing outer races. Fit new outer races.

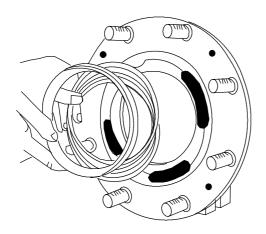

Important: to ensure that the wheel bearing has the correct preload replace the same shims under the outer race of the outer wheel bearing.

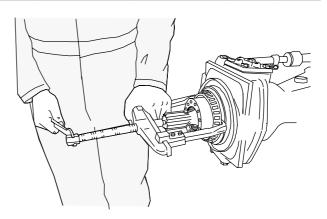

- 6. Remove the inner bearing from the steering knuckle using an extractor. When the bearing is changed it can be removed by attaching a puller behind the rollers.
- 7. Heat the new inner bearing (80°C) and push it fully home onto the knuckle. Oil the bearing rollers.

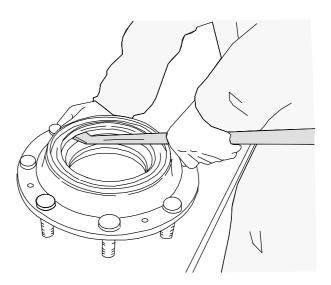


8. Change hub oil seal if necessary (ETV 894 020). It can be removed by tapping it through the holes in the opposite side. Fit the dust seal ring. Fill the space between the lips of the seal with universal grease.


Note! On the latest axles there is a cassette type hub oil seal, which can be fitted with plate ETV 894 150. The casette seal is fitted on standard axles from axle no. **1701/94** incl. and on the Hi–Lock axles from axle no. **0036/94** incl. In connection with the cassette seal the wear ring is not used. The wear ring should be removed from the earlier axles before fitting the cassette seal. The spare part steering knuckles have a wear ring which should be removed before the cassette seal is fitted.

- 9. Check the wear ring of the hub oil seal and change it if necessary. The wear ring is easier to remove if it is warmed up.
- **N.B.** Heat the wear ring to 80°C when fitting. Apply sealing compound Loctite 290 to the inner surface of the wear ring.


64. Powered front axle 8. 11. 1990 | Model | Code | 643

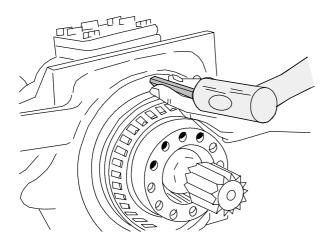

- 10. If you change the dust-cover apply sealing compound Loctite 290 to the rear side. Fix the dust-cover with sex equidistant clips of the drift punch.
- 11. Fit the wheel attaching flange onto the knuckle. It should be pushed fully home so that the outer race of the bearing is against the bearing rollers.

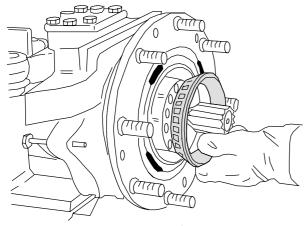

12. Heat up the outer bearing (80°C) and push it fully home against the outer race. Oil the bearing.

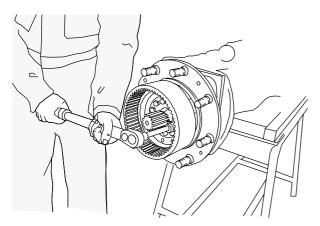

- 13. Fit the ring gear and tighten the screws to **75 Nm.** Apply locking fluid Loctite 242 to the threads.
- 14. Check the condition of the o-ring on the planetary gear housing and change it if necessary. Grease the o-ring. Fit the planetary gear housing and tighten the screws to **70 Nm**.
- 15. Fit the front wheel, tighten to **550 Nm** and fill the hub with oil. Test-run the tractor.


C. Changing steering knuckle bearings

1. Raise the tractor front end and support it with sturdy trestles. Remove the front wheel from the side to be repaired.


Page

3

2. Disconnect the tie rod from the steering arm.

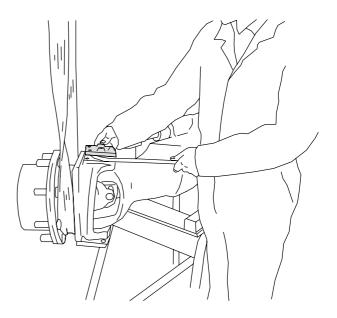

3. Support the hub with a hoist and remove the king pins by using extractor Kukko 22-1 (see page 640/3)

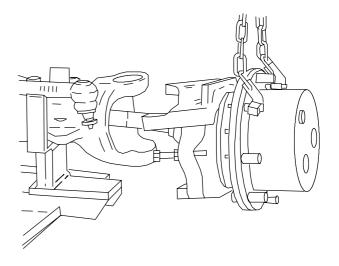



4. Pull the hub carefully off the axle housing; this releases the drive shaft.

Note! Do not damage the drive shaft inner oil seal if it is not being changed.


64. Powered front axle

	Model	Code	Page
8. 11. 1990	6000-8750	643	4

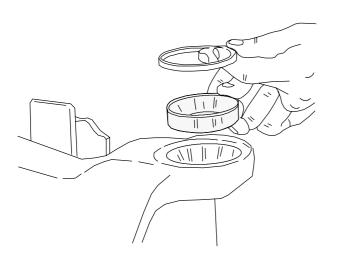


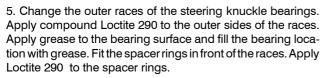

- 6. Remove the bearings from the king pins and fit new bearings. Grease bearing rollers. Fit new seals into the king pin holes inside the knuckle. Grease the seals.
- 7. Adjust the steering knuckle bearing preload as follows:

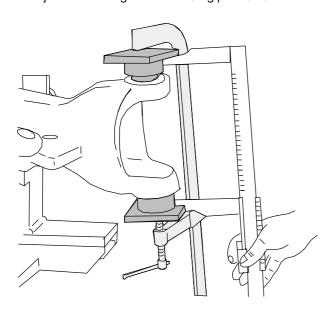

 Press the king pins into place using a screw clamp and measure the distance between the inner surfaces of the king pin cover (measurement N e.g. 258,50 mm)

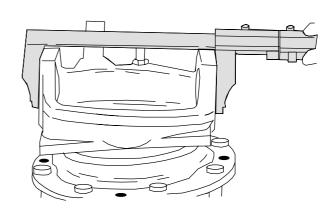

- On the knuckle housing measure the distance between the surfaces as shown in the figure above (measurement M e.g. 256,85)
- Calculate the number of shims required (measurement S), taking into account the fact that the bearings are preloaded by 0,6 mm (measurement P).

$$S=N-M-P$$
 (=258,50-256,85-0,6=1,05)

- 8. Fit the required number of shims under the upper king pin.
- 9. Fit the steering knuckle onto the axle housing (see Op 642 1A;13-15).



		Model	Code	Page
64. Powered front axle		6000-8750	644	.
	8. 11. 1990	00000750	044	'

Differential (Op. no. 644)


1. Reconditioning differential

A. Changing pinion shaft seal (without removing the front axle)


- 1. Drain the oil from the differential. Remove the protective shield and unscrew the propeller shaft front flange joint.
- 2. Unscrew the pinion shaft nut and remove the spacer ring and shims which are under the nut. Pull the drive flange off the shaft.
- 3. Pry out the oil seals and fit new seals (tool ETV 893600 can be used to facilitate fitting the seals). Fill the space between the lips of the seal with universal grease).
- 4. Check the drive flange o-ring and change if necessary. Grease the o-ring.
- 5. Fit the drive flange, shims (use the same shims) and the spacer ring onto the shaft. Tighten the nut to **250 Nm**. Connect the propeller shaft flange joint (**35 Nm**). Fit the protective shield.
- 6. Fill the differential with oil and test run the tractor. Check for possible leakages.




1. Raise the front end of the tractor and support it with sturdy trestles. Drain the oil from the differential housing.

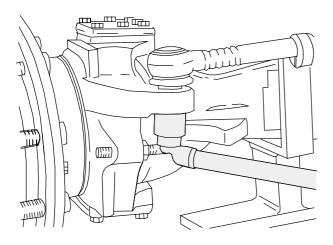


2. Disconnect the tie-rod from the steering arm on the side with the shorter axle section.

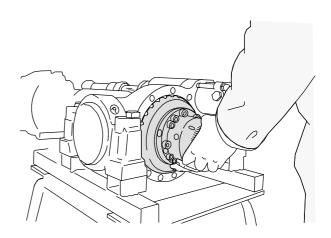

3. Pull the axle housing section apart once the bolts have been unscrewed. Remove the differential unit from the axle housing..

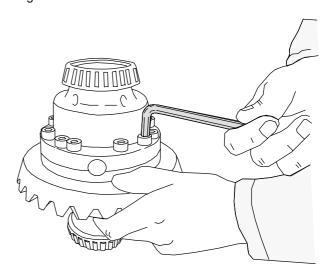


- 4. Unscrew the bolts holding the differential carrier. Knock off the crown wheel and remove the locking pins.
- **N.B.** Mark the halves of the differential carrier to facilitate reassembling.

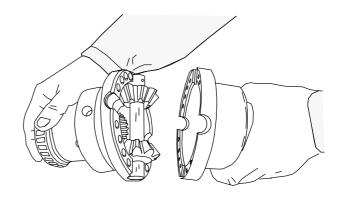

5. Open the carrier and remove the various components.

		Model	Code	Page
64. Powered front axle	8. 11. 1990	6000-8750	644	2

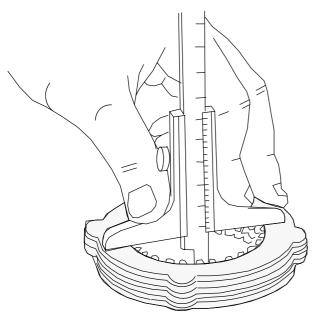

- 6. Check the friction disc for wear and change if necessary. Measure the total thickness of the set of discs. It should be in the range **14,51–14,69 mm**. Immerse the discs in oil before reassembling.
- **N.B.** In the event of replacement, renew both the RH and LH pack. The thickest disc with internal teeth should be fitted with the smooth side against the differential side gear. Next fit friction disc and intermediate disc alternatively. The last disc should have external teeth.
- 7. Also check both differential pinions and side gears and change if necessary. Oil all parts.
- **N.B.** The differential pinion shaft is locked by means of the locking pin. The diff. pinion thrust—washers are fitted so that the locking lugs engage in the grooves on the differential carrier
- 8. Reassemble the differential and fit the carrier halves so that the marks are in the same places as they were before dismantling. Fit the crown wheel and tighten the screws to **70** Nm.



9. Fit the locking pins. First fit the bigger pin and then the smaller pin inside with the split pointing towards the heads of the screws


- 10. Rotate the differential with the splined end of the drive shaft. The drive shaft should turn freely, without resistance.
- 11. Fit the differential unit into the housing and attach the bolted joint of the axle housing. Check the o-ring on the joint and apply grease to it. Tighten the screws to **190 Nm.**
- 12. Attach the tie-rod to the steering arm (160 Nm). Fill the differential housing with oil. Test-run the tractor.

2. Changing crown wheel/pinion shaft

Note! This operation is easier if the front axle is detached from the tractor. However this is not essential.


A. Removing differential

- 1. Remove the front axle (**Op. no. 641 A**). Drain the oil from the differential housing.
- 2. Detach the tie-rod from the steering arm on the side with the shorter axle section.

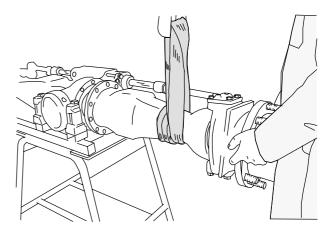


- 3. Unscrew the bolted joint on the axle housing.
- 4. Remove the differential unit. Detach the old crown wheel. Fit a new crown wheel and tighten the screws to **70 Nm**.


B. Removing pinion shaft

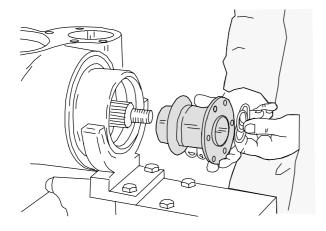

1. Unscrew the pinion shaft nut and remove the spacer ring and shims from under the nut. Remove the drive flange from the shaft.

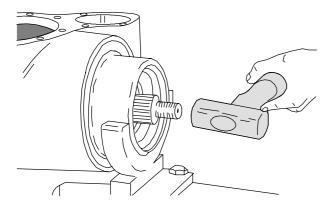

2. Tap the pinion shaft out from the bearing and remove the outer bearing as it is freed.

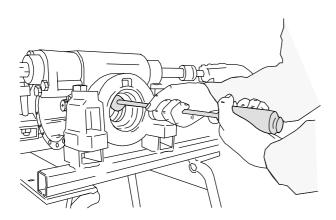

3. Remove the oil seals from the shaft housing. Remove the circlip which is placed behind the seals and use a puller to extract the outer bearing race.

- 4. Tap out the inner bearing race from the housing and remove the shims from under the race. Tap the inner bearing off the shaft
- 5. Check the condition of the bearings and change if necessary.

C. Fitting pinion shaft adjusting position


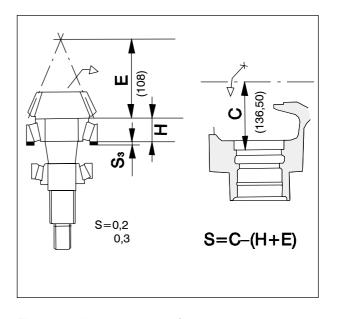


Figure 5. Adjusting pinion shaft position

1. Read off the value ${\bf E}$ which is stamped on the end of the pinion shaft (e.g. 108,00 mm).

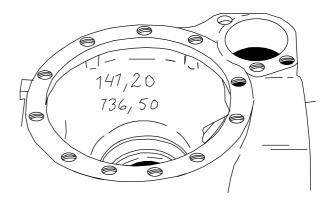



2. Check the smaller figure marked in the axle housing (in side for the longer axle section), measurement $\bf C$ (e.g. 136,50 mm).


Note! If no measurement can be found in the axle housing, see page **644/6A**.

64. Powered front axle


	Model	Code	Page
8. 11. 1990	6000-8750	644	4

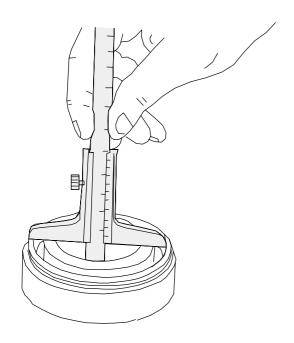

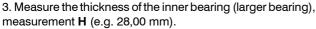

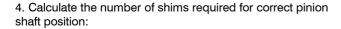

$$S=C-(H+E)=136,50-(108,00+28,00)=0,5 \text{ mm}$$

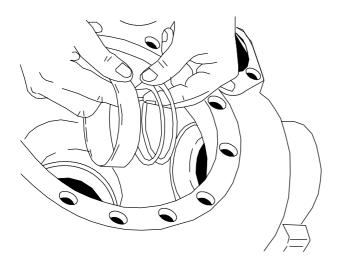

5. Put the shims required under the inner bearing outer race and fit the outer race against the shims. Fit the outer bearing outer race.

6. Heat the inner bearing to 80° C and fit it onto the pinion shaft. Push fully home.

7. Push the pinion shaft into the housing. Heat the outer bearing to 80°C and push it onto the shaft against the outer race. Fit the circlip.

8. Fit the drive flange onto the pinion shaft (do not fit the seals yet) and fit the shims, spacer ring and the nut. Tighten the nut to **250 Nm.**

N.B. Turn the shaft 20–30 revolutions before measuring the rolling resistance and lubricate the bearings with oil.


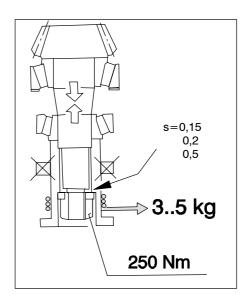


Figure 6. Adjustment of pinion shaft bearing preload.

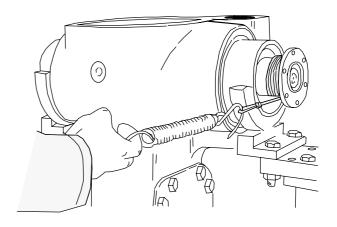

9. Use a spring balance (see figure above) to measure the force needed to rotate the pinion shaft. The rolling resistance should be **3–5 kg.** If the rolling resistance is not correct the number of shims under the nut must be adjusted.

N.B. If the rolling resistance is too great more shims are required and vice versa.

10. When rolling resistance is correct the seals can be fitted. Grease the lips of the seal with universal grease; fit a dust seal in front of the seal.

N.B. Tool 893600 can be used when fitting the seals.

11. Fit shims, spacer ring and drive flange; tighten the nut to ${\bf 250~Nm}.$

D. Adjusting differential bearing preload and pinion/crown wheel tooth backlash



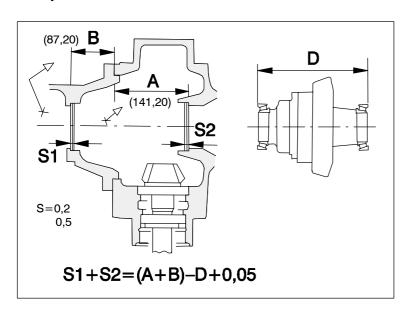


Figure 7. Adjusting differential bearing preload.

1. Remove differential bearing outer races from both axle sections and remove any shims that may be fitted behind the races. Remove roller bearings from the differential carrier.

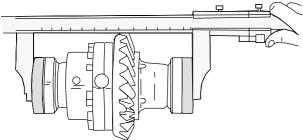


2. Fit new bearings onto the differential carrier. Press outer races against the bearings and use a vernier caliper to measure the distance between them as shown in the figure above, measurement **D** (e.g. 226,50 mm). **N.B.** When measuring the use of measuring pieces is necessary.

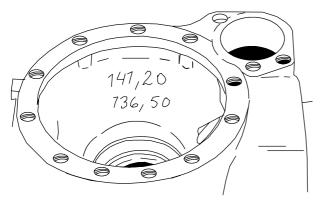

3. Read off measurement **A** (larger figure) marked inside the longer axle housing. This is the distance between the bottom of the differential bearing location and the axle housing flange surface (e.g. 141,20 mm).

Note! If no measurement can be found in the axle housing, see page **644/6A**.

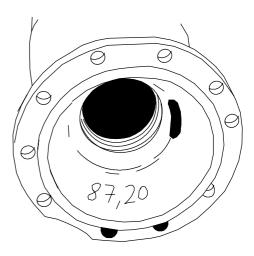

4. Read off measurement **B** marked inside the shorter axle housing. This is the distance between the bottom of the bearing housing and the axle housing flange surface (e.g. 87,20 mm).


Note! If no measurement can be found in the axle housing, see page **644/6A**.

5. The preload **(P)** of the differential bearings should be **0,05 mm**. Calculate the number of shims required as follows:

$$S=(A+B)-D+P=(141,20+87,20)-226,50+0,05$$

S=1,95 mm.

		Model	Code	Page
64. Powered front axle	8. 11. 1990	6000-8750	644	6

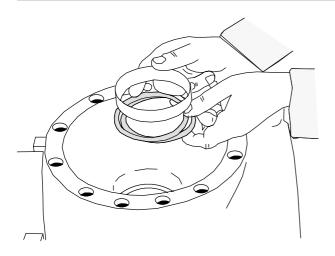

6. Fit an equal number of shims under each differential bearing. Fit the differential into the axle housing and connect the axle sections with several screws (190 Nm).



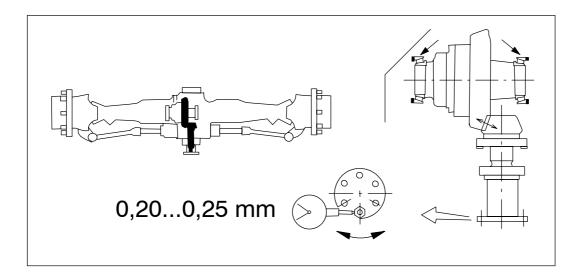


Figure 8. Adjusting tooth backlash between pinion/crown wheel.

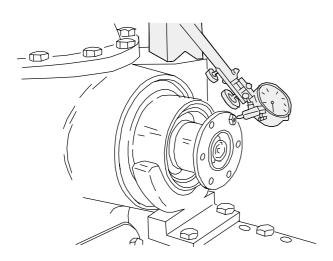

7. Measure the pinion/crown wheel tooth backlash using an indicator gauge stylus against a screw on the drive flange. The backlash should be in the range 0,20-0,25 mm.

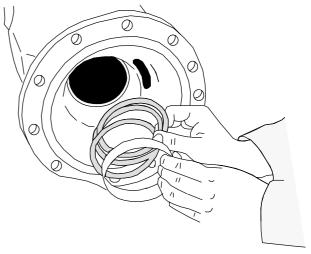


8. If the backlash is not correct transfer shims from one bearing race to the other.

N.B. If the backlash is too small transfer shims from the shorter axle section side to the longer side and vice versa.

		Model	Code	Page
64. Powered front axle Sige	1. 8. 1998	6000-8400	644	6A

Note! If in the axle production adjusting measurements has not been marked in the axle housing, the measurements can be determined according to the pictures below:

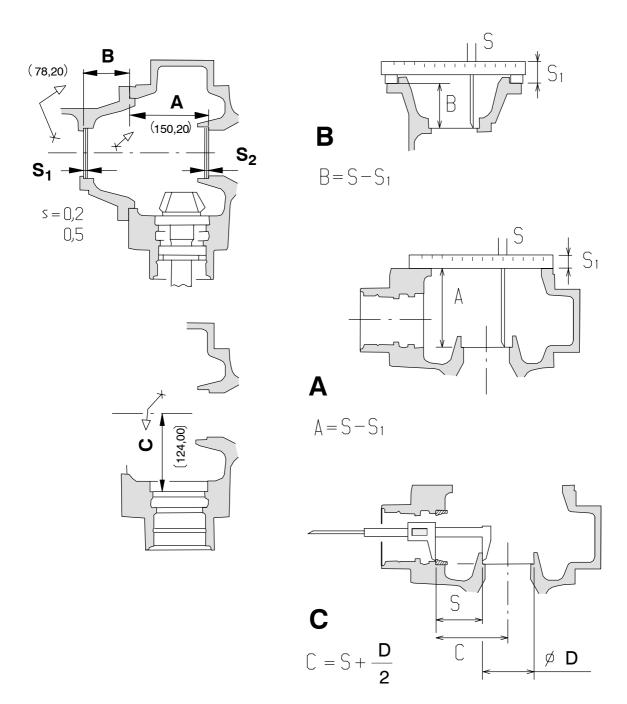




Model	Code	Page
6000-8750 8. 11. 1990 6000-8750	644	7
8. 11. 1990		

E. Fitting front axle

- 1. When the backlash is correctly adjusted unscrew the axle housing joint and check the condition of the o-ring.
- 2. Change the o-ring if necessary and apply grease to it.

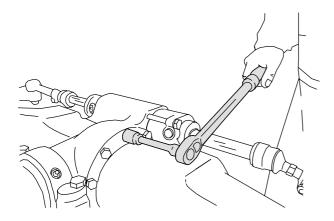

- 3. Connect the bolted joint of the axle housing. Tighten the attaching screws to a torque of $190\ Nm.$
- 4. Attach the tie-rod to the steering arm.
- 5. Fit the front axle (see Op no 641 C). Fill the differential housing with oil.

		Model	Code	Page
64. Powered front axle	1. 1. 1994	6000-8750	644	8

3. Differential lock


Sige front axle with the differential lock is an optional equipment. This shaft has the same pivot bearings and mounting brackets, hubs, king pins, drive shaft joints, seals and bushings and the same bevel pinion shaft as the standard axle:

- Mounting brackets, see page 641/1.
- Drive shafts, see page 642/1
- Hubs, see page 643/1
- King pins, see page 643/3 instruction C
- Bevel pinion shaft, see page 644/3 instructions B and C.


A. Changing differential lock piston seals

Note! If the piston seals leak, the pressure oil can flow into the axle housing causing oil level rise.


1. Raise the tractor front end and support it. Drain the oil in axle housing. Remove the LH side front wheel.

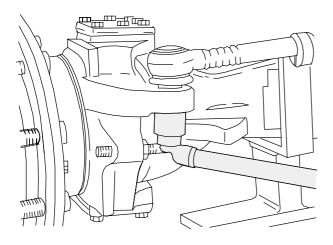

2. Disconnect the tie rod from the LH side steering arm.

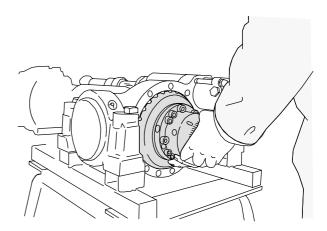


3. Pull the axle housing section apart once the bolts have been unscrewed. Remove the differential unit from the axle housing. Remove the diff. lock thrust bearing.

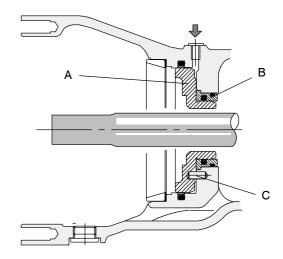


- 4. Remove the piston (A) by using compressed air through the pressure oil pipe but **be very careful**. Remove, if necessary, the differential bearing race and shims behind it. Remove the piston dowel (C).
- 5. Remove the metal ring (B) together with its seals.

		Model	Code	Page
64. Powered front axle	1. 1. 1994	6000-8750	644	9

6. Change the piston seal and the o-ring in the axle housing groove.

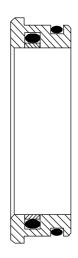

- 7. Change the metal ring sealing rings.
- 8. Apply grease to the sealing rings..
- 9. Push the metal ring with its seals into its location fully home. Fit the piston together with its dowel. Fit the differential bearing race and shims, if removed..
- 10. Fit the thrust bearing ring into the piston recess. Fix it, if necessary, with a little grease.
- 11. Fit the other thrust bearing ring and its roller ring onto the differential. Fix with grease, if needed.

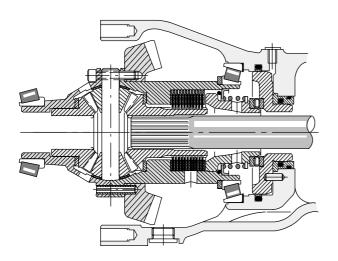


12. Fit the differential unit into the axle housing so that the drive shaft splines guide into the differential side gear.

- 13. Check and grease the axle section o-ring. Place the axle sections to the correct position and tighten the bolts to a torque of **190 Nm**.
- 14. Rotate the hub by hand. It must rotate quite easily.
- 15. Connect the tie rod to the steering arm (160 Nm). Fit the front wheel (550 Nm). Fill the axle housing with oil. Test-run the tractor and assure that the lock functions. Check for leaks.

B. Changing the disc pack

1. Remove the differential, see Op. A paragraphs 1-3.

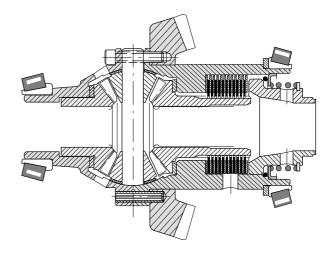

- 2. Remove the pressure sleeve snap ring and the spring (not necessary).
- 3. Pull out the pressure sleeve together with the spring seat and the o-ring behind it.
- 4. Take away the disc pack.
- 5. Oil new discs. Fit by turns steel disc and friction disc into the differential housing. First and last the steel disc (11 friction discs and 12 steel discs).

 $\mbox{\bf Note!}$ It is better to change the whole disc back than separate discs.

- 6. Place the pressure sleeve on the disc pack. Fit the o-ring (fit a new o-ring, if the earlier one was damaged).
- 7. Fit the spring seat, spring and the spring snap ring (if removed).
- 8. Fit the differential unit, see Op. A paragraphs 10-15.

		Model	Code	Page
64. Powered front axle	1. 1. 1994	6000-8750	644	10

C. Changing differential gears/crown wheel

Note! Compare Op. B on page 644/1.

- Remove the differential unit from the axle housing, see Op.
 A paragraphs 1-3. Mark the halves of the differential carrier to facilitate reassembling.
- 2. Unscrew the crown wheel bolts. Knock off the crown wheel.
- 3. Knock off the locating pins of the crown wheel. Open the carrier and remove the various components.
- 4. Check the condition of the housing, differential gears and bearing plates. Change all damaged parts. Lubricate all parts with oil.

Note! The differential pinion shaft is locked by means of the locking pin. The diff. pinions thrust—washers are fitted so that the locking lugs engage in the grooves on the differential carrier.

5. Reassemble the differential and fit the carrier halves so that the marks are in the same places as they were before dismantling. Fit the crown wheel and tighten the screws to **70** Nm.

Important! If you change the crown wheel, also the pinion shaft must be changed. Removing, fitting and adjusting the pinion shaft, see page **644/3** instr. **B** and **C**.

- 6. Fit the locking pins. First the bigger pin and then the smaller pin inside with the split pointing towards the heads of the screws.
- 7. Fit the differential, see instr. A paragraphs 10-15.

D. Changing differential bearings

Note! If you change the differential bearings, the bearing pre-load should be adjusted and also the tooth backlash between the crown wheel and the pinion shaft should be adjusted, see instr. **D** on page **644/5**.

- 1. Remove the differential, see instr. A paragraphs 1-3.
- 2. Remove differential bearing outer races from both axle sections and remove any shims that may be fitted behind the races.
- 3. Remove the roller bearings from the differential carrier.
- 4. Fit new bearings onto the differential carrier.
- 5. Press outer races against the bearings and use a vernier caliper to measure the distance between them, **measurement D**.
- 6. Read off **measurement A** (larger upper figure) marked inside the longer axle housing. This is the distance between the bottom of the differential bearing location and the axle housing flange surface.
- 7. Read off **measurement B** marked inside the shorter axle housing. This is the distance between the bottom of the bearing housing and the axle housing flange surface.
- 8. The preload **(P)** of the differential bearings should be **0,05 mm**. Calculate the number of shims required as follows:

$$S=(A+B)-D+P$$

- 9. Fit an equal number of shims under each differential bearing.
- 10. Fit the differential into the axle housing and connect the axle sections with several screws (190 Nm).
- 11. Measure the pinion/crown wheel tooth backlash using an indicator gauge stylus against a screw on the drive flange. The backlash should be in the range **0,20–0,25 mm**.
- 12. If the backlash is not correct transfer shims from one bearing race to the other.

Note! If the backlash is too small transfer shims from the shorter axle section side to the longer side and vice versa.

13. When the backlash is correctly adjusted, fit the differential unit and reassemble the axle housing, see instr. A paragraphs 10–15.



	15.5.1996	Model	Code	Page
65. Industrial front axle	1. 8. 1998	6000-8750	650	1

Sige industrial front axle is an optional equipment on Valmet 6000 – 8400 tractors. The industrial front axle has a heavy duty construction. This section shows only differences compared with the standard axle, see section 64.

Technical data

Axle type	Sige DS17 V SD.01
Flange distance	1810 mm
Number of the teeth (crown wheel/pinion)	Z27/8
Differential ratio	3,375
Ratio of the hubs	5,25
Total ratio	17,72
Number of the differential pinions	4 pcs
Oil volume in hubs	2x1,5 litres
Wheel disc attachment: Hub guides (ø 280,3-280,8), M20x1,5 (10 pcs)	
Max. statical carrying capacity	
Max. dynamic carrying capacity 0-8 km/h	
Carrying capacity at speed of 40 km/h	3900 kg

Hubs and king pins

Ring gear support bolts	120 Nm Loctite 242
Pre-load of king pin bearings	0,5 mm
Rolling resistance of the hub bearings (measured with a spring balance from wheel	
attaching bolt)	3,6-4,7 kg
King pin covers	190 Nm
Tie rod tapered joint to steering arm (nut)	220 Nm

 $\label{lem:mortant:the:morta$





		Model	Code	Page	
65. Industrial front axle	1. 1. 1994	6000-8750	651	1	

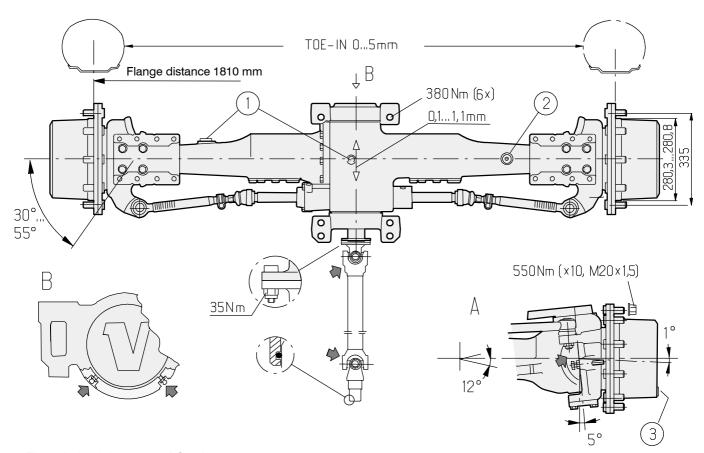


Fig. 1. Industrial front axle DS17V


- 1. Plug for checking and draining oil in differential housing.
- 2. Oil filling plug for differential housing.
- 3. Oil filling and draining plug for hub..
 Oil volume in differential housing 8 litres
- Oil volume in hubs 2x1,5 litres.

Grease the central pivot bearing nipples weekly / at every 50 running

Grease propeller shaft nipples at every 250 running hours

Check the front axle oil levels at every 500 running hours and change oils at intervals of 1000 running hours.

		Model	Code	Page
65. Industrial front axle	1. 1. 1994	6000-8750	651	2

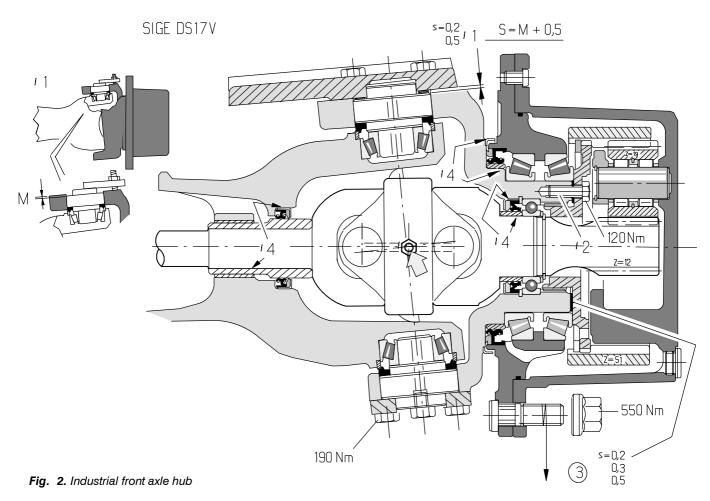

- 1. Adjusting king pin bearing pre-load 2. Loctite 242
- 3. Shims for adjusting hub bearing pre-load 4. Loctite 290

Apply grease between the lips of the seals

		Model	Code	Page
65. Industrial front axle	1. 1. 1994	6000-8750	651	3

Note! Here is presented shortly the repair instructions for the industrial front axle. If the instructions are the same as for the standard axle, necessary refers are given.

1. Hubs, drive shafts and king pins

(see fig. 2 on previous page)

A. Central pivot bearing brackets

See page 641/1.

Oil volume in the hubs is 2x1,5 litres.

B. Drive shaft seals and double joints

The drive shaft outer seal is changed as shown on page 642/1. The king pins can be removed with extractor shown on page 640/3 but the king pins have thread M12. The king pin cover bolt tightening torque is 190 Nm.

The outer diameter of the drive shaft outer seal is 95 mm.

The ring gear support tightening torque is **120 Nm**. When you remove the ring gear support flange, at the same release also shims for adjusting the wheel bearing pre-load. The shims should be fitted back when reassembling the hub.

The drive shaft inner seal is changed as described in instr. **B** on page **642/3**. The seal outer diameter is 80 mm. The seal has also a wear ring. Apply Loctite 290 under the wear ring, if removed.

Reconditioning double joints, see page 642/3 instr. C.

C. Hubs

The planetary gear bearings are changed as shown on page **643/1**. The hub big seal can be fitted with locally prepared tool ET 894 020.

Adjusting wheel bearing preload:

- oil new bearings. Fit the wheel attaching flange and the bearings into place. Fit the ring gear support and tighten the bolts (2) so that the bearings have a small play, so that the hub rolling resistance can be measured without bearing preload. Before measurement, rotate the hub many times into both directions.
- attach a spring balance wire to the wheel attaching bolt and measure the hub rolling resistance without preload, e.g.
 F=6,5 kg.
- Then tighten the ring gear support flange bolts to **120 Nm** and measure again the rolling resistance, e. g. **F=11 kg**. Subtract this from the previous value:

11 kg-6,5 kg=4,5 kg

The preload value should be between 3,6-4,7 kg.

The preload is adjusted with shims which are fitted between the ring gear support and the hub.

Note! The same shims can be used often, because the bearings are precision—machined.

D. Changing king pin bearings

See instr. C on page 643/3.

Adjust the king pin bearings as follows:


- Ensure that the lower king pin with its bearing and cover is fitted in place. Tighten the lower pin cover bolts to a correct torque.
- Fit the upper king pin together with its bearing into place and press with a suitable plate and bolt the upper king pin/ bearing into its location until the bearings have no play.
- Measure with a depth gauge how deep the upper king pin was pressed, measurement $\, {\bf M} \,$ e.g. ${\bf 0.8} \,$ ${\bf mm} \,$
- The king pin bearings need a preload of **0,5 mm**. The shim thickness **S** which must be fitted on the upper pin can be calculated as follows:

S = M + 0.5

E.g. 0,8+0,5 mm=1,3 mm.

Model **6000-8750**

Code **651** Page **4**

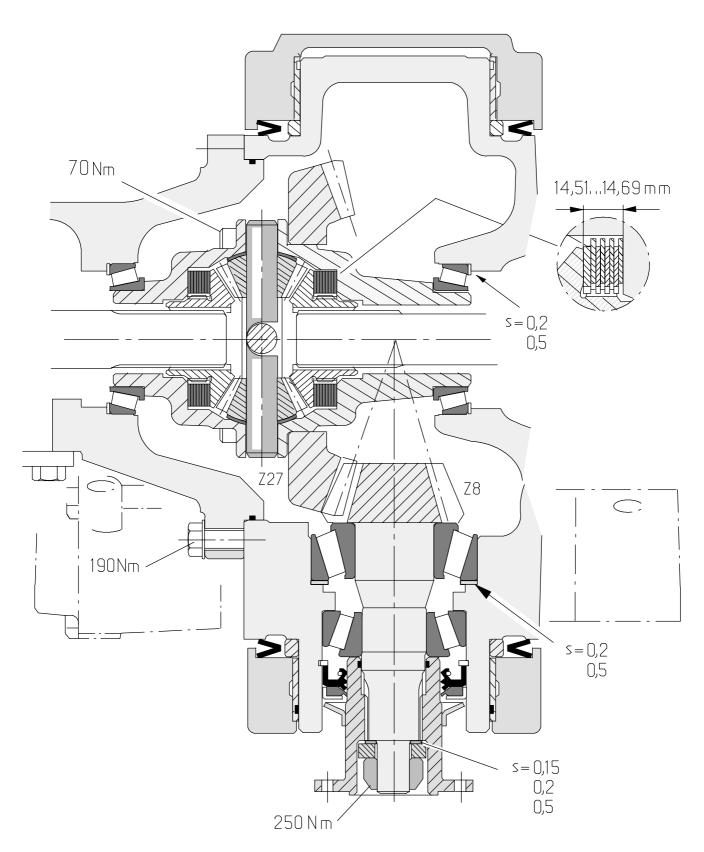

Picture 3. Differential and bevel pinion shaft. Apply grease between the lip seal lips. Oil felt gasket before fitting.

		Model	Code	Page
65. Industrial front axle	1. 1. 1994	6000-8750	651	5

2. Bevel pinion shaft and differential

(See picture 3 on the previous page)

A. Bevel pinion shaft seal

The seal can be changed without removing the front axle, see page 644/1 instruction A.

B. Changing differential friction discs

See instruction B on page 644/1.

It is best to change both disc packs at the same time. The disc pack thickness should be between 14,51-14,69 mm. The differential has four pinions.

C. Changing bevel pinion shaft and crown wheel

See instruction 2 on page **644/2**. Various adjustments are shown below.

Adjusting bevel pinion shaft position

Note! Working procedure is the same as on the standard axle, see page **644/3**.

- read off value **E** which is stamped on the end of the pinion shaft (e.g. 114 mm).
- see the bigger value marked in the axle housing (inside the longer axle section), **measurement C** (e.g. 152,00)
- measure the thickness of the inner bearing (larger bearing), measurement H (e.g. 36,50)
- calculate the number of shims required for correct pinion shaft position:

$$S=C-(H+E)$$

E.g. 152,00 - (36,50 + 114) = 1,5 mm

 put the shims required under the inner bearing outer race and fit the outer race against the shims.

Adjustment of pinion shaft bearing preload.

Note! Same as for the standard axle, see page 644/4.

- fit the pinion shaft together with its bearings.
- fit the circlip in front of the outer bearing.
- fit the drive flange onto the shaft but do not fit yet the seal.
- fit the same shims as earlier. Fit a ring in front of the shims and tighten the shaft nut to 250 Nm.

- use a spring balance to measure the force needed to rotate the pinion shaft (see picture on page 644/4), \emptyset 60 m
- the rolling resistance should be 3-5 kg.
- if the rolling resistance is not correct the number of shims under the nut must be adjusted. If the rolling resistance is too great, more shims are required and vice versa.
- when the rolling resistance is correct the seals can be fitted.

Adjusting differential bearing preload and pinion/crown wheel tooth backlash

The working procedure is the same as on the standard axle, see page **644/5**.

- Using a vernier caliper, measure the distance between the differential bearings, see picture on page 644/5, measurement D e.g. 226,50.
- Read off measurement A (larger figure) marked inside the longer axle housing. This is the distance between the bottom of the differential bearing location and the axle housing flange surface (e.g. 141,20 mm).
- Read off measurement B marked inside the shorter axle housing. This is the distance between the bottom of the bearing housing and the axle housing flange surface (e.g. 87,20 mm).
- -The preload **(P)** of the differential bearings should be **0,05 mm**. Calculate the number of shims required as follows:

$$S=(A+B)-D+P$$

E.g. (141,20+87,20)-226,50+0,05=1,95 mm.


- Fit an equal number of shims under each differential bearing. Fit the differential into the axle housing and connect the axle sections with several screws (190 Nm).
- Measure the pinion/crown wheel tooth backlash using an indicator gauge stylus against a screw on the drive flange, see picture on page **644/6**.
- the correct tooth backlash value is 0,20-0,25 mm.
- If the backlash is not correct transfer shims from one bearing race to the other.

N.B. If the backlash is too small transfer shims from the shorter axle section side to the longer side and vice versa.

 when the backlash is correctly adjusted, reassemble the axle, see page 644/7.

		Model	Code	Page
65. Industrial front axle	1. 1. 1995	6000-8750	651	6

Tapered joint between tie-rod and steering arm

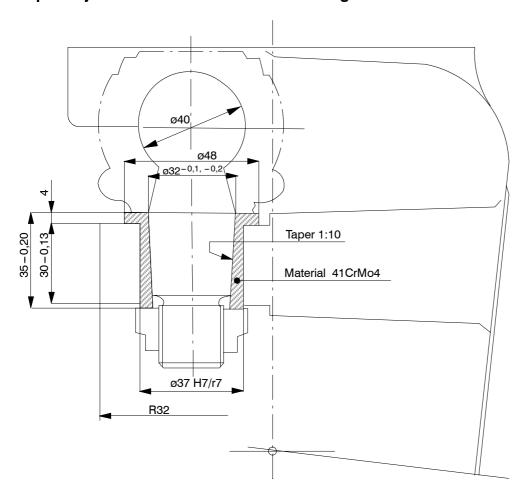

The tie—rod end has been strengthened. Taper ø 32 mm (was ø 26 mm), joint ball ø 40 mm (was ø 35 mm). At the same time the steering arm has been modified in the corresponding way. The modified steering knuckle and the tie—rod are in pairs exchangeable with each others. This modification is in production with effect from axle number 0116/94.


The earlier steering knuckle can be rapaired by machining a space for a body-fit sleeve (see picture above). The repair work can be done in the tractor factory, if necessary.



	1.11.1998	Model	Code	Page
66. Air suspension of front axle	1. 8. 2000	6200-8950	660	1

General

The front axle air suspension (option) is available for 6200 – 8950 tractors. The foremost components of the system (compressor, deicer with reservoir, pressure regulator, pressure gauge and pressure air reservoir) are the same as for the optional pressure air brakes for the trailer (pressure air brakes, see pages 510/6-7 and 511/4-7). In addition, the air suspension has an overflow valve and a levelling valve, which keeps the height of the suspension system (rubber bellows height) the same regardless of the loading on the front axle. In addition, the system incl. two shock absorbers, air pipes and necessary frame parts. The upper parts of the frame are bolted onto the side of the tractor frame (front loader mounting is possible, since spacer plates of different thickness can be fitted between the tractor frame and the air suspension system frames. A space of 30 mm has been left on both sides for fitting optional equipments).

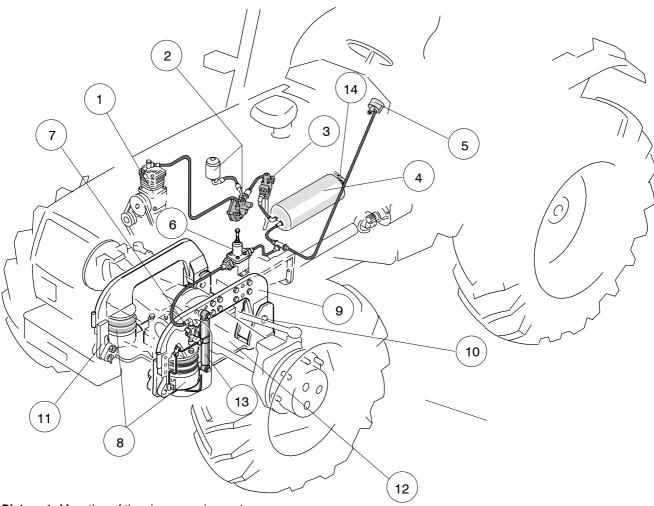

Picture 1. Mounting of the air suspension system


- 1. Compressor (same as for pressure air brakes)
- 2. Deicer and reservoir (same as for pressure air brakes)
- 3. Pressure regulator (same as for pressure air brakes)
- 4. Pressure reservoir (same as for pressure air brakes)
- 5. Pressure gauge (same as for pressure air brakes)
- 6. Overflow valve
- 7. Levelling valve
- 8. Rubber bellows
- 9. Fixed support plates (on both sides)
- 10. Hinge pins in the rear end
- 11. Oval attaching holes in the front end (suspension can be locked by using round holes)
- 12. Bottom plate, on which there is attached the front axle
- 13. Shock absorber (on both sides)
- 14. Pressure take-off for trailer brakes.

Model **6200 – 8950**

Code **660**

2

Page

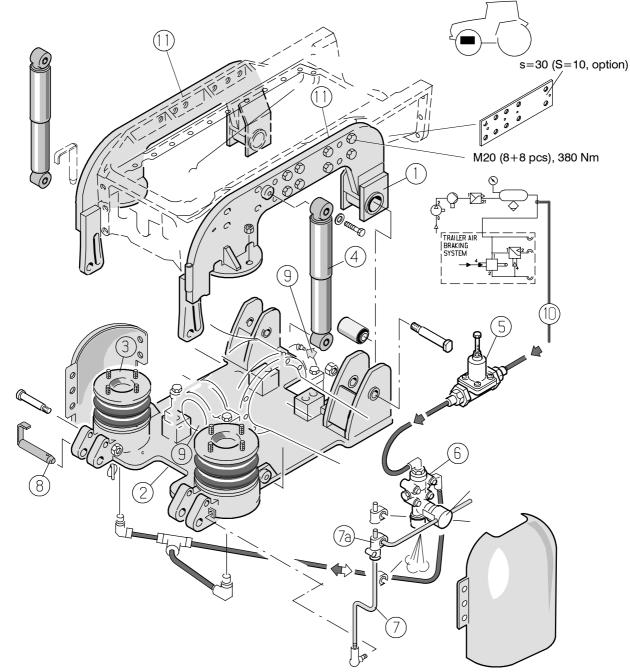

Picture 2. Air suspension system for front axle

- 1. Joint pin bracket
- 2. Bottom plate
- 3. Rubber bellows
- 4. Shock absorber
- 5. Overflow valve (if the tractor has the trailer air brakes, the overflow valve ensures enough high pressure in the brakes even though there is a leakage in the suspension system).
- 6. Levelling valve
- 7. Feeler linkage of the levelling valve
- 7a. Adjusting piece of linkage
- 8. Locking pin (the suspension can be locked by fitting the lock pin into the round holes. If the holes do not align, turn the levelling valve linkage to align the holes).
- 9. Grease nipples of axle brackets. The nipple of the foremost bracket is placed under the bracket (greasing at every 250 running hours)
- 10. Pressure air intake from reservoir (symbols in picture, see picture 7 on page 510/6).
- 11. Spacer plates between the frames (plate thickness depends on the front mounted implement)

Note! The front axle loading is **350 kg** greater than on the tractor without the air suspension. The max. permissible axle loadings are the same as for the industrial front axle and standard front axle.


Model **6200 – 6850**

Code **660**

80

Page

2A

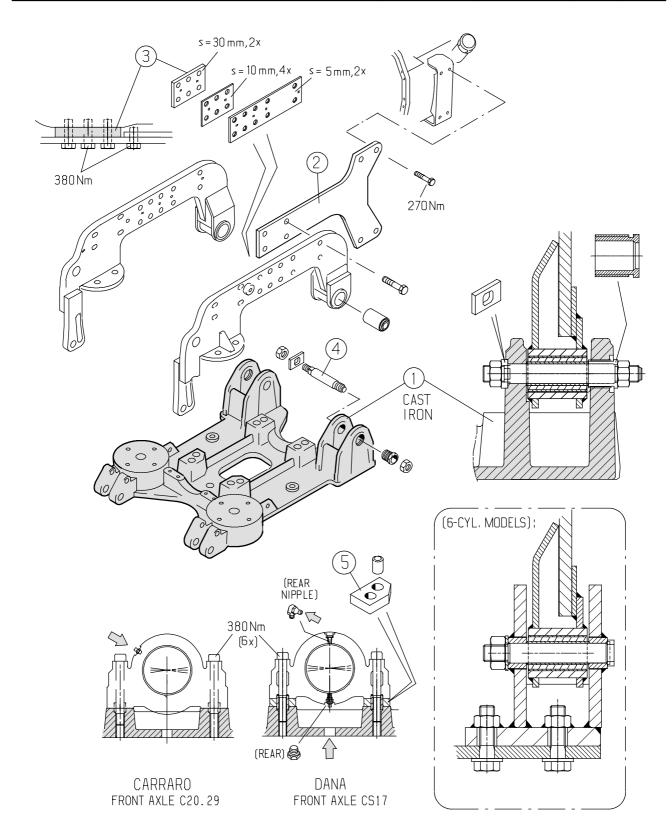

Picture 2A. Front axle air suspension is also available for tractors with 4-cyl. engines.

- 1. Cast iron lower part in connection with 4-cyl. engines.
- 2. The intermediate attachment requires support plate which is fastened on the intermediate frame.
- 3. Alternative intermediate plates
- 4. The pin can be disassembled outwards (the front lift arms need space inside). Clearences are removed with threaded bushing.
- 5. Intermediate piece for Sige (Dana) front axle. There is a hole for greasing the foremost bearing in the lower piece.




6200-8950

Model

Code **660**

Page 3

1. Levelling valve

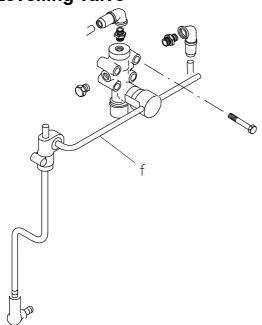

A. Function


When the loading on the front axle increases, the tractor frame/levelling valve moves downwards. Linkage lifts up the link (f) and sleeve (d) with the aid of the cam pin (e). When the sleeve (d) moves upwards, it opens the valve (b), and compressed air flows from the reservoir through port (1) and valve (a) into the suspension rubber bellows, which are connected to port 22 (port 21 is plugged).


When pressure increases in the bellows, the frame moves upwards, and link (f), when moving downwards, closes the valve (b).

When pressure increases in the bellows and link (f) together with the cam pin (e) move downwards, excess air from the bellows can flow through passage (c) and hole (3) to atmosphere. Now the tractor frame moves downwards and link (f) returns into the normal horizontal position. When passage (c) is closed, the levelling valve is again in the balanced position.

B. Adjustment

- lower the tractor frame into the lowest position against the limiter
- fill the bellows slowly. The valve must stop the lifting movement, when the locking pin holes align in the front part of the suspension frame. If the tractor rises more, lower the tractor frame and make the vertical link longer.
- check the adjustment again and change the vertical link length until the lifting height is correct (locking pins holes align).
- if the closing angle (link near horizontal) is reached before the correct height, shorten the vertical link.

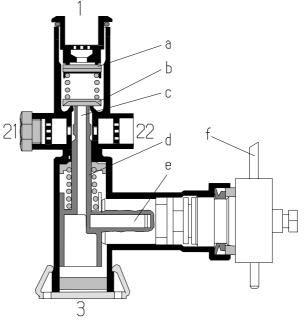

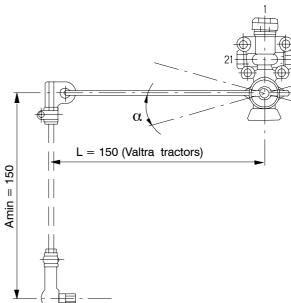



Note! The total stroke of the bellows on Valtra-tractors is \pm 72 mm i.e. H= 144 mm (front wheel suspension is then \pm 40 mm).

Note! Separate spare parts are not available for the valve. In case of a damage a new valve must be fitted. When fitting a new valve, the adjusting values can be set into the same values as for the old valve (however, the adjustment must be checked).

2. Overflow valve

(only on tractors equipped with pressure air brakes)

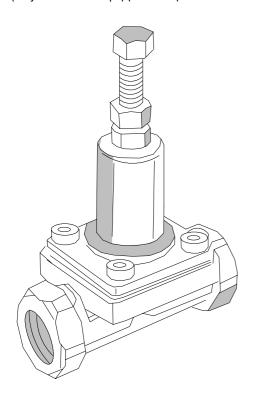

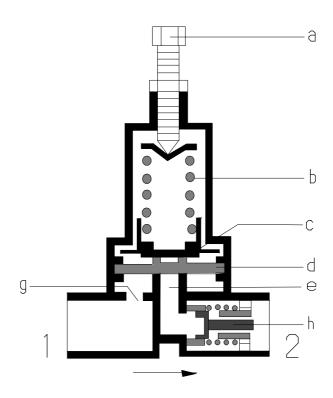

A. Function

This valve ensures that the pressure air flow into the suspension occurs just when the correct pressure affects the air brake system (although the suspension air bellows are leaking). Non-return valve (h) prevents return of the air form port 2 (suspension) to port 1 (reservoir). If the pressure drops in port 1, the pressure in the second side 2 remains the same.

Compressed air flows in the direction of the arrow through valve and through port (g) to the underside of membrane (d). Spring (b) presses the membrane against the seat. When enough high pressure has reached (6,2–6,5 bar), spring force (b) is overcome so that the membrane (d) rises up from its seat and passage (e) opens. Air flows through the non–return valve (h) into the suspension. Return flow is impossible since the non–return valve closes, if the pressure in the suspension is higher.

B. Adjustment

The valve opening pressure can be adjusted by turning screw (a). When turning clockwise the opening pressure increases and vice versa.

The valve does not need any maintenance. Opening pressure (1 -> 2) factory setting is **6,2-6,5 bar** (closing pressure -10%).

Note! In case of damage the whole valve is changed.

3. Other components

Compressor, deicer, pressure regulator, pressure reservoir and pressure gauge are the same as for the air brakes of the trailer (option).

Concerning these parts, see pages 510/6-7 and 511/4-7.

Note! The pressure air pipes of the suspension system have been made of nylon pipes and quick couplings.

IMPORTANT! Although the engine is stopped, the suspension system remains under pressure. Always before maintenance works, make the system unpressurised e.g. by turning the level valve linkage.

<u> </u>	廴	≯	r. ⊴ 998
	1	8	2000


Model **6200-8950**

Code **660**

Page 5

4. Other parts

A. Shock absorbers

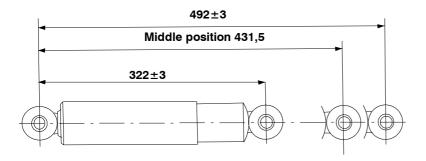


The shock absorbers (2 pcs) are of a liquid type. If the shock absorbers are damaged, the oscillations will take longer to stabilize after driving over pot holes or an rough terrain: giving uncomfortable driving. The shock absorbers are attached with the aid of bushings which have rubber damping.


Note! The shock absorbers cannot be repaired, but a new one is fitted in place of the damaged one.

B. Rubber bellows

Type: Dunlop 8"x2. Pressure values:

	Pressure	Limit value
Max. axle loading, static	3,5 bar	15 bar
Max. axle loading, bottom reaching	14 bar	15 bar
Norm. axle loading, outwards	1,8 bar	not vacuum

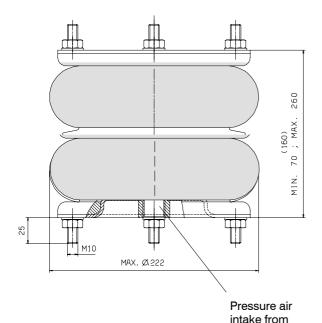

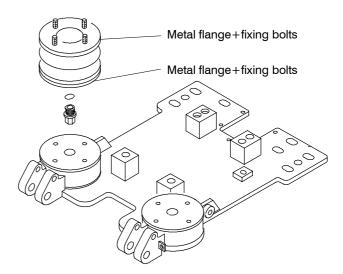

Note! In case of damages the rubber bellows are changed as a complete unit.

The bellows can be removed as follows:

- stop the engine, exhaust the system
- remove the rubber bellows protective coverings
- unscrew the bellows upper nuts (4 pcs)
- disconnect the pressure pipes under the bellows
- unscrew the lower nuts (4 pcs)
- remove the front end joint pins of the suspension
- raise the tractor front frame, until the bellows can be removed.
- fitting in the reverse order


level valve

Model **6200 – 8950**

Code **660**

Page 6

C. Frame parts

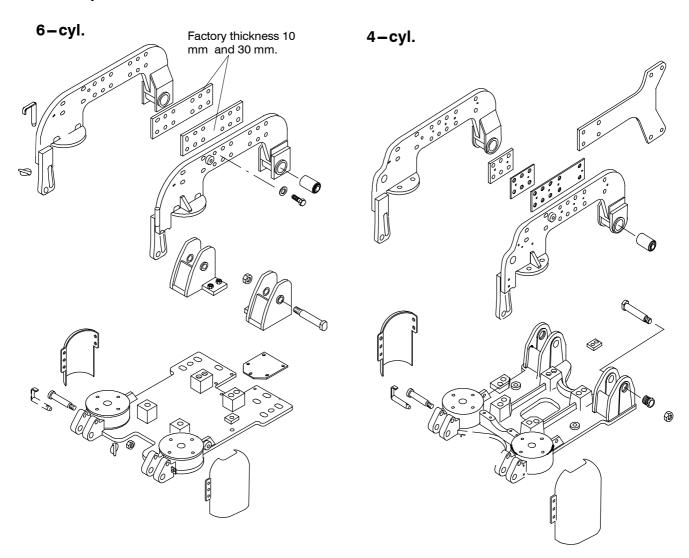

The upper frame parts have been fastened onto the sides of the engine oil sump. Between the upper frames and the oil sump there are spacer plates. Thickness of the plates depends on the front mounted implements (the factory thickness of the plates are 10 and 30 mm).

Both upper frame parts are fastened with eight bolts (M20x75 8.8, 380 Nm). In connection with the 6-cylinder engines the joint brackets of the frame parts are fastened with bolts and if the frame parts must be changed, possible dimension deviations can be compensated by adjusting the joint brackets. In connection with 4-cyl. engines the joint bracket have been casted on the lower frame The pins have rubber bushings.

Note! On the side of the rubber bellows there are protective coverings. In addition, at the propeller shaft front joint there is a removable shield.



		Model	Code	Page
67. Powered front axle Carraro	1. 10. 1999	8450-8950	670	1

Contents

General (Code no. 670)	_
Technical Data	
Description	
Description	
Axle housing and mounting brackets (Code no. 671):	
A. Removing front axle	. 1
B. Changing bearing sleeves of central pivot bearings	
C. Fitting front axle	. 2
U.b. (Code no. 670):	
Hubs (Code no. 672):	
1. Reconditioning hub reduction gear A. Changing planetary gears/bearing rollers	1
B. Changing hub cassette seal and wheel bearings	
C. Changing king pin bearings	
Drive shafts (Code no 673):	
1. Changing drive shaft/seals/bearing bushing:	
A. Changing inner oil seal and inner bearing bushing	
B. Changing outer oil seal and outer bearing bushing	. 2
B. Changing outer oil seal and outer bearing bushing	. 2
	. 2
Reconditioning differential/bevel pinion shaft (Code no. 674):	
Reconditioning differential/bevel pinion shaft (Code no. 674): A. Changing bevel pinion shaft cassette seal	. 1
Reconditioning differential/bevel pinion shaft (Code no. 674): A. Changing bevel pinion shaft cassette seal B. Removing differential C. Removing bevel pinion shaft	. 1 . 1 . 2
Reconditioning differential/bevel pinion shaft (Code no. 674): A. Changing bevel pinion shaft cassette seal B. Removing differential C. Removing bevel pinion shaft D. Disassembling differential	. 1 . 1 . 2
Reconditioning differential/bevel pinion shaft (Code no. 674): A. Changing bevel pinion shaft cassette seal B. Removing differential C. Removing bevel pinion shaft D. Disassembling differential E. Assembling differential	. 1 . 1 . 2 . 4
Reconditioning differential/bevel pinion shaft (Code no. 674): A. Changing bevel pinion shaft cassette seal B. Removing differential C. Removing bevel pinion shaft D. Disassembling differential E. Assembling differential F. Adjusting position of bevel pinion shaft	. 1 . 2 . 4 . 4
Reconditioning differential/bevel pinion shaft (Code no. 674): A. Changing bevel pinion shaft cassette seal B. Removing differential C. Removing bevel pinion shaft D. Disassembling differential E. Assembling differential F. Adjusting position of bevel pinion shaft G. Adjusting bearing preload of bevel pinion shaft	. 1 . 2 . 4 . 4 . 5
Reconditioning differential/bevel pinion shaft (Code no. 674): A. Changing bevel pinion shaft cassette seal B. Removing differential C. Removing bevel pinion shaft D. Disassembling differential E. Assembling differential F. Adjusting position of bevel pinion shaft G. Adjusting bearing preload of bevel pinion shaft H. Fitting differential onto bracket	. 1 . 2 . 4 . 4 . 5
Reconditioning differential/bevel pinion shaft (Code no. 674): A. Changing bevel pinion shaft cassette seal B. Removing differential C. Removing bevel pinion shaft D. Disassembling differential E. Assembling differential F. Adjusting position of bevel pinion shaft G. Adjusting bearing preload of bevel pinion shaft H. Fitting differential onto bracket I. Adjusting tooth backlash between bevel pinion and crown wheel	. 1 . 2 . 4 . 5 . 6
Reconditioning differential/bevel pinion shaft (Code no. 674): A. Changing bevel pinion shaft cassette seal B. Removing differential C. Removing bevel pinion shaft D. Disassembling differential E. Assembling differential F. Adjusting position of bevel pinion shaft G. Adjusting bearing preload of bevel pinion shaft H. Fitting differential onto bracket I. Adjusting tooth backlash between bevel pinion and crown wheel and adjusting preload of differential bearings	. 1 . 2 . 4 . 5 . 6 . 7
Reconditioning differential/bevel pinion shaft (Code no. 674): A. Changing bevel pinion shaft cassette seal B. Removing differential C. Removing bevel pinion shaft D. Disassembling differential E. Assembling differential F. Adjusting position of bevel pinion shaft G. Adjusting bearing preload of bevel pinion shaft H. Fitting differential onto bracket I. Adjusting tooth backlash between bevel pinion and crown wheel and adjusting preload of differential bearings	. 1 . 2 . 4 . 5 . 6 . 7
Reconditioning differential/bevel pinion shaft (Code no. 674): A. Changing bevel pinion shaft cassette seal B. Removing differential C. Removing bevel pinion shaft D. Disassembling differential E. Assembling differential F. Adjusting position of bevel pinion shaft G. Adjusting bearing preload of bevel pinion shaft H. Fitting differential onto bracket I. Adjusting tooth backlash between bevel pinion and crown wheel and adjusting preload of differential bearings J. Fitting differential into axle housing Reconditioning steering ram (Code no. 675):	. 1 . 2 . 4 . 5 . 6 . 7 . 8
Reconditioning differential/bevel pinion shaft (Code no. 674): A. Changing bevel pinion shaft cassette seal B. Removing differential C. Removing bevel pinion shaft D. Disassembling differential E. Assembling differential F. Adjusting position of bevel pinion shaft G. Adjusting bearing preload of bevel pinion shaft H. Fitting differential onto bracket I. Adjusting tooth backlash between bevel pinion and crown wheel and adjusting preload of differential bearings J. Fitting differential into axle housing Reconditioning steering ram (Code no. 675): A. Reconditioning steering ram	. 1 . 2 . 4 . 5 . 6 . 7 . 8
Reconditioning differential/bevel pinion shaft (Code no. 674): A. Changing bevel pinion shaft cassette seal B. Removing differential C. Removing bevel pinion shaft D. Disassembling differential E. Assembling differential F. Adjusting position of bevel pinion shaft G. Adjusting bearing preload of bevel pinion shaft H. Fitting differential onto bracket I. Adjusting tooth backlash between bevel pinion and crown wheel and adjusting preload of differential bearings J. Fitting differential into axle housing Reconditioning steering ram (Code no. 675): A. Reconditioning steering ram	. 1 . 2 . 4 . 5 . 6 . 7 . 8
Reconditioning differential/bevel pinion shaft (Code no. 674): A. Changing bevel pinion shaft cassette seal B. Removing differential C. Removing bevel pinion shaft D. Disassembling differential E. Assembling differential F. Adjusting position of bevel pinion shaft G. Adjusting bearing preload of bevel pinion shaft H. Fitting differential onto bracket I. Adjusting tooth backlash between bevel pinion and crown wheel and adjusting preload of differential bearings J. Fitting differential into axle housing Reconditioning steering ram (Code no. 675): A. Reconditioning steering ram Adjustments (Code no. 676):	. 1 . 2 . 4 . 5 . 6 . 7 . 7 . 8
Reconditioning differential/bevel pinion shaft (Code no. 674): A. Changing bevel pinion shaft cassette seal B. Removing differential C. Removing bevel pinion shaft D. Disassembling differential E. Assembling differential F. Adjusting position of bevel pinion shaft G. Adjusting bearing preload of bevel pinion shaft H. Fitting differential onto bracket I. Adjusting tooth backlash between bevel pinion and crown wheel and adjusting preload of differential bearings J. Fitting differential into axle housing Reconditioning steering ram (Code no. 675): A. Reconditioning steering ram	. 1 . 2 . 4 . 5 . 6 . 7 . 8 . 1

		Model	Code	Page
67. Powered front axle Carraro	1. 10. 1999	8450-8950	670	2

Technical Data

Axle type	Carraro 20. 29
Electro-hydraulic differential lock (HiLock)	standard
Electro – hydraulic differential lock (HiLock) Ratio, differential	2,538
Ratio, hub reduction gears	
Total ratio	
Ratio, front axle – rear axle	1,315
Steering angle, adjustable	max. 55°
Oscillation angle	±7°
Caster	6°
KPI	7°
Camber	1,5°
Toe –in	0-5 mm
Flange distance	1900
Oils:	
– in differential	6 litres
- in hubs	2x1,5 litres
- oil quality (e.g. Valtra Axle)	80W/90 GL-5 (LS)
	, ,

Setting values

Bevel	pinion	shaft:

_	- bearing pre–load (measured with a spring balance on the shaft, Ø 34,8 mm)	3–5 kg
-	- thickness of shims for position adjustment (with increment of 0,1 mm)	2,50-3,40 mm

Differential:

- bearing pre-load (measured with spring balance on the bevel pinion shaft, Ø 34,8 mm)	
is bevel pinion shaft bearing preload+	
- tooth backlash, bevel pinion-crown wheel	0,17-0,23 mm
- thickness of thrust washers for differential side gears (with increment of 0,1 mm)	1,45 – 1,55 mm
- tooth backlash, differential pinions - differential side gears	0,13-0,18 mm
- thickness of steel discs in differential lock (8 pcs)	1,43-1,57 mm
- thickness of friction discs in differential lock (7 pcs)	2,24-2,36 mm
Others:	
- End float of central pivot bearing brackets	0,1-1,1 mm

Tightening torques

Hubs:

Hub cover (planet gear carrier) bolts (2 pcs) Planet gear fixing bolts Ring gear support fixing bolts King pin covers King pin covers Front wheel bolts Front wheel stud bolts to hub flange (threads) Front wheel stud bolts to knuckle housing For drive flange attaching bolts on bevel pinion shaft (2 pcs) Folifferential: Differential bracket bolts to axle housing For differential bracket bolts for central pivot bracket to tractor frame For differential bracket bolts to axle housing For differe	nups:		
 Ring gear support fixing bolts King pin covers Front wheel bolts Front wheel stud bolts to hub flange (threads) Tie – rod tapered joint to knuckle housing Bevel pinion shaft: Shaft nut is tightened until the bearing pre – load is correct. Bolts between bevel pinion shaft drive flange – propeller shaft drive flange drive flange attaching bolts on bevel pinion shaft (2 pcs) Differential: Differential bracket bolts to axle housing Bearing covers of differential bearings Crown wheel fixing bolts Locking nuts for differential bearing adjusting nuts Others: Front axle central pivot bearing bracket to tractor frame Tie – rod ball joint Tie – rod ball joint locking nut Locking nut for steering angle limiting bolts Bolts of steering cylinder end flange Locking bolts for central pivot bearing brackets 			
 King pin covers Front wheel bolts Front wheel stud bolts to hub flange (threads) Tie-rod tapered joint to knuckle housing Bevel pinion shaft: Shaft nut is tightened until the bearing pre-load is correct. Bolts between bevel pinion shaft drive flange-propeller shaft drive flange drive flange attaching bolts on bevel pinion shaft (2 pcs) Differential: Differential bracket bolts to axle housing Bearing covers of differential bearings Crown wheel fixing bolts Locking nuts for differential bearing adjusting nuts Others: Front axle central pivot bearing bracket to tractor frame Tie-rod ball joint Tie-rod ball joint locking nut Locking nut for steering angle limiting bolts Bolts of steering cylinder end flange Locking bolts for central pivot bearing brackets 2 			
Front wheel bolts Front wheel stud bolts to hub flange (threads) Tie-rod tapered joint to knuckle housing Bevel pinion shaft: Shaft nut is tightened until the bearing pre-load is correct. Bolts between bevel pinion shaft drive flange-propeller shaft drive flange drive flange attaching bolts on bevel pinion shaft (2 pcs) Differential: Differential bracket bolts to axle housing Bearing covers of differential bearings Crown wheel fixing bolts Locking nuts for differential bearing adjusting nuts Others: Front axle central pivot bearing bracket to tractor frame Tie-rod ball joint Tie-rod ball joint locking nut Locking nut for steering angle limiting bolts Bolts of steering cylinder end flange Locking bolts for central pivot bearing brackets			
Front wheel stud bolts to hub flange (threads) 7 Tie-rod tapered joint to knuckle housing 2 Bevel pinion shaft: Shaft nut is tightened until the bearing pre-load is correct. Bolts between bevel pinion shaft drive flange-propeller shaft drive flange 7 drive flange attaching bolts on bevel pinion shaft (2 pcs) 6 Differential: Differential bracket bolts to axle housing 1 Bearing covers of differential bearings 2 Crown wheel fixing bolts 7 Locking nuts for differential bearing adjusting nuts 1 Others: Front axle central pivot bearing bracket to tractor frame 3 Tie-rod ball joint 3 Tie-rod ball joint locking nut 2 Locking nut for steering angle limiting bolts 1 Bolts of steering cylinder end flange 1 Locking bolts for central pivot bearing brackets 2			
Tie-rod tapered joint to knuckle housing Bevel pinion shaft: Shaft nut is tightened until the bearing pre-load is correct. Bolts between bevel pinion shaft drive flange-propeller shaft drive flange drive flange attaching bolts on bevel pinion shaft (2 pcs) Differential: Differential bracket bolts to axle housing Bearing covers of differential bearings Crown wheel fixing bolts Locking nuts for differential bearing adjusting nuts Others: Front axle central pivot bearing bracket to tractor frame Tie-rod ball joint Tie- rod ball joint locking nut Locking nut for steering angle limiting bolts Bolts of steering cylinder end flange Locking bolts for central pivot bearing brackets			
Bevel pinion shaft: - Shaft nut is tightened until the bearing pre-load is correct. - Bolts between bevel pinion shaft drive flange-propeller shaft drive flange 77. - drive flange attaching bolts on bevel pinion shaft (2 pcs) 60. Differential: - Differential bracket bolts to axle housing 1. - Bearing covers of differential bearings 2. - Crown wheel fixing bolts 7. - Locking nuts for differential bearing adjusting nuts 11. Others: - Front axle central pivot bearing bracket to tractor frame 3. - Tie-rod ball joint 3. - Tie-rod ball joint locking nut 2. - Locking nut for steering angle limiting bolts 1. - Bolts of steering cylinder end flange 1. - Locking bolts for central pivot bearing brackets 2.	Front w	heel stud bolts to hub flange (threads)	70 Nm
 Shaft nut is tightened until the bearing pre-load is correct. Bolts between bevel pinion shaft drive flange-propeller shaft drive flange drive flange attaching bolts on bevel pinion shaft (2 pcs) Differential: Differential bracket bolts to axle housing Bearing covers of differential bearings Crown wheel fixing bolts Locking nuts for differential bearing adjusting nuts Others: Front axle central pivot bearing bracket to tractor frame Tie-rod ball joint Tie- rod ball joint locking nut Locking nut for steering angle limiting bolts Bolts of steering cylinder end flange Locking bolts for central pivot bearing brackets 	Tie-roo	d tapered joint to knuckle housing	220 Nm
 Bolts between bevel pinion shaft drive flange – propeller shaft drive flange drive flange attaching bolts on bevel pinion shaft (2 pcs) Differential: Differential bracket bolts to axle housing Bearing covers of differential bearings Crown wheel fixing bolts Locking nuts for differential bearing adjusting nuts Others: Front axle central pivot bearing bracket to tractor frame Tie – rod ball joint Tie – rod ball joint locking nut Locking nut for steering angle limiting bolts Bolts of steering cylinder end flange Locking bolts for central pivot bearing brackets 	Bevel pin	ion shaft:	
 drive flange attaching bolts on bevel pinion shaft (2 pcs) Differential: Differential bracket bolts to axle housing Bearing covers of differential bearings Crown wheel fixing bolts Locking nuts for differential bearing adjusting nuts Others: Front axle central pivot bearing bracket to tractor frame Tie – rod ball joint Tie – rod ball joint locking nut Locking nut for steering angle limiting bolts Bolts of steering cylinder end flange Locking bolts for central pivot bearing brackets 	- Shaft nu	ut is tightened until the bearing pre-load is correct.	
Differential: - Differential bracket bolts to axle housing	 Bolts be 	etween bevel pinion shaft drive flange-propeller shaft drive flange	70 Nm
Differential: - Differential bracket bolts to axle housing	drive fla	inge attaching bolts on bevel pinion shaft (2 pcs)	60 Nm
 Bearing covers of differential bearings Crown wheel fixing bolts Locking nuts for differential bearing adjusting nuts 1 Others: Front axle central pivot bearing bracket to tractor frame Tie – rod ball joint Tie – rod ball joint locking nut Locking nut for steering angle limiting bolts Bolts of steering cylinder end flange Locking bolts for central pivot bearing brackets 2 			
 Crown wheel fixing bolts Locking nuts for differential bearing adjusting nuts Others: Front axle central pivot bearing bracket to tractor frame Tie-rod ball joint Tie- rod ball joint locking nut Locking nut for steering angle limiting bolts Bolts of steering cylinder end flange Locking bolts for central pivot bearing brackets 2 	Differen	tial bracket bolts to axle housing	170 Nm
 Crown wheel fixing bolts Locking nuts for differential bearing adjusting nuts Others: Front axle central pivot bearing bracket to tractor frame Tie-rod ball joint Tie- rod ball joint locking nut Locking nut for steering angle limiting bolts Bolts of steering cylinder end flange Locking bolts for central pivot bearing brackets 2 	 Bearing 	covers of differential bearings	265 Nm
 Locking nuts for differential bearing adjusting nuts Others: Front axle central pivot bearing bracket to tractor frame Tie-rod ball joint Tie- rod ball joint locking nut Locking nut for steering angle limiting bolts Bolts of steering cylinder end flange Locking bolts for central pivot bearing brackets 			
Others: - Front axle central pivot bearing bracket to tractor frame - Tie-rod ball joint - Tie- rod ball joint locking nut - Locking nut for steering angle limiting bolts - Bolts of steering cylinder end flange - Locking bolts for central pivot bearing brackets 2			
 Tie – rod ball joint	_		
 Tie – rod ball joint	Front ax	de central pivot bearing bracket to tractor frame	380 Nm
 Tie – rod ball joint locking nut Locking nut for steering angle limiting bolts Bolts of steering cylinder end flange Locking bolts for central pivot bearing brackets 			
 Locking nut for steering angle limiting bolts Bolts of steering cylinder end flange Locking bolts for central pivot bearing brackets 2 			
Bolts of steering cylinder end flange			
- Locking bolts for central pivot bearing brackets			

		Model	Code	Page
67. Powered front axle Carraro	1. 10. 1999	8450-8950	670	3


Special tools


Ordering no.	Description
ETV 893 490	Socket spanner for bevel pinion shaft nut (also Carraro 505 – 905)
ETV 894 460	Plate to fit hub cassette seal (new)
ETV 893 450	Tool to adjust bevel pinion shaft position, which incl.:
	ETV 803 451 Measuring rod (1 pcs) (also Carraro 505 - 905)

ETV 893 451, Measuring rod (1 pcs) (also Carraro 505 – 905) ETV 893 452, Screw M10x100 (1 pcs) (also Carraro 505 – 905) ETV 893 453, Compression plate (2 pcs) (also Carraro 505 – 905)

ETV 893 454, Nut M10 (1 pcs) (also Carraro 505-905)

Note! Various bearings and bearing races can be removed by using a drift and a suitable puller. Fitting can be done with sleeves or plates of suitable dimensions. Bearings can be warmed or cooled according to the fitting. Drive shaft seals can be fitted with plates or sleeves of correct dimensions. Some earlier ValtraValmet ETV-sleeves and - plates can be used when repairing this axle.

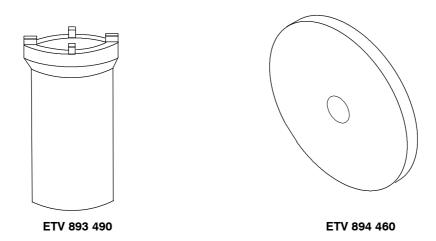

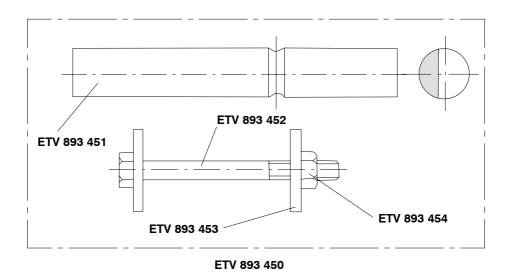

		Model	Code	Page
67. Powered front axle Carraro	1. 10. 1999	8450-8950	670	4


Description

Carraro 20.29 axle replaces the earlier used Sige industrial front axle from week 32/99. The Carraro axle has as standard an electro—hydraulically controlled differential lock (HiLock), which functions simultaneously with the rear axle lock.

Earlier used front wheel discs cannot be used with this Carraro-axle, since the front wheel fixing studs are different.

Build – up of Carraro axle is shown in pictures on the following pages.

The maintenance intervals and oil qualities are the same as in Sige-axle. However, the grease nipples of the king pins are greased at intervals of 50 running hours/weekly.

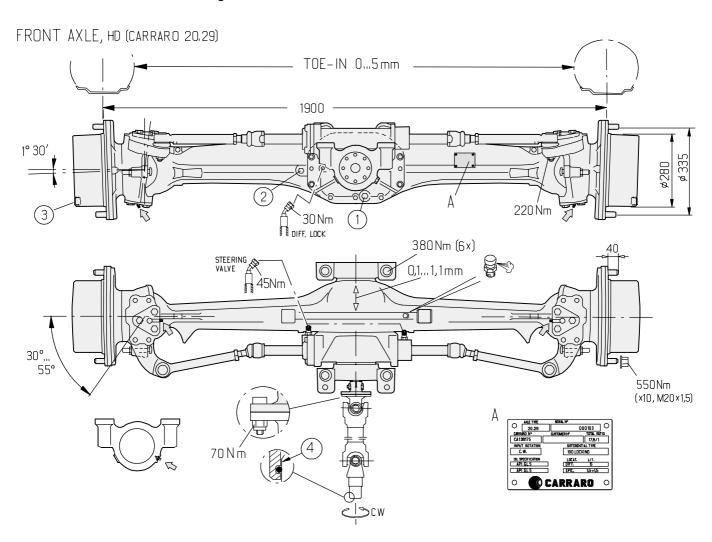


Picture 1. Carraro front axle

- 1. Axle housing oil draining plug
- 2. Filling plug
- 3. Hub oil draining / filling plug
- 4. EP-grease on splines

		Model	Code	Page
67. Powered front axle Carraro	1. 10. 1999	8450-8950	670	5

PLANETARY GEAR, HD (CARRARO 20.29)

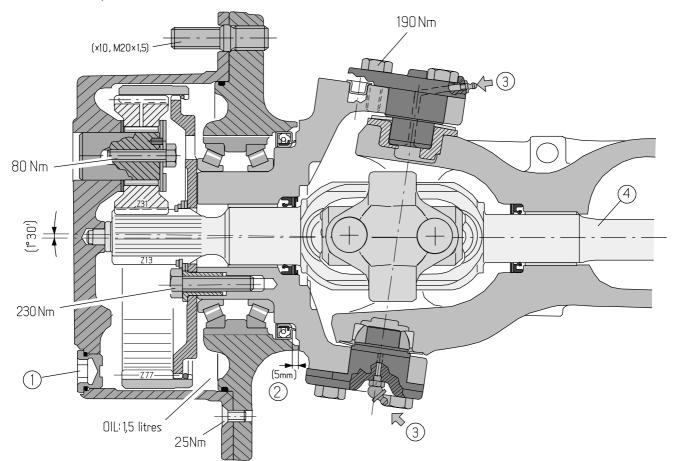


Picture 2. Carraro front axle hub

- Oil draining / filling plug
 Mounting depth of hub cassette seal
 King pin grease nipples (at intervals of 50 running hours / weekly)
 Drive shaft

		Model	Code	Page
67. Powered front axle Carraro	1. 10. 1999	8450-8950	670	6

DIFFERENTIAL, HD (CARRARO 20.29)

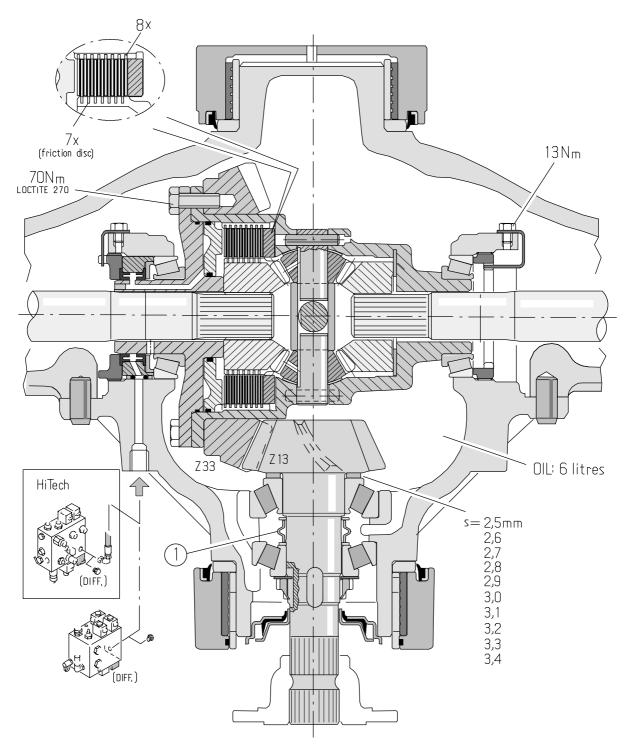

Picture 3. Differential, Carraro front axle

1. Compression bushing

7

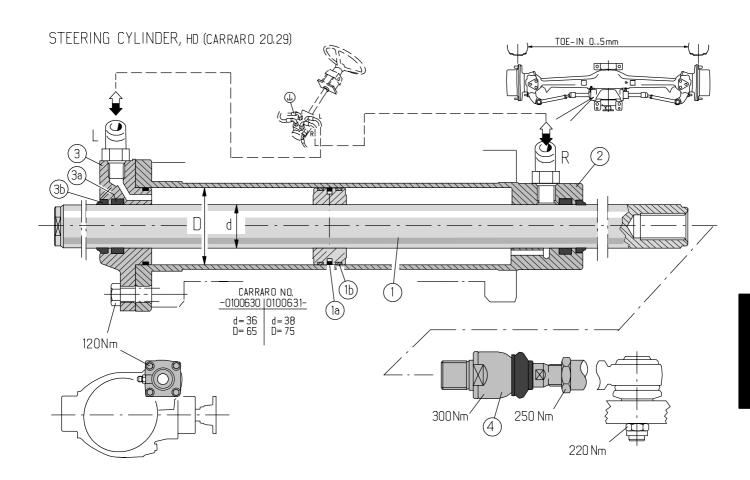


Bild 4. Steering cylinder

- 1. Piston rod and piston
- 1a. Piston seal + piston seal expander
- 1b. Wear rings
- Cylinder liner
 End flange
- 3a. Scraper
- 3b. Oil seal



		Model	Code	Page
67. Powered front axle Carraro	1. 10. 1999	8450-8950	671	1


Axle housing and attaching brackets (Op. no. 671)

A. Removing front axle


- 1. Apply parking brake. Scotch the rear wheels. Disconnect, if necessary, battery cables.
- 2. Drain oil in hubs and axle housing (if necessary for repair).
- 3. Remove the propeller shaft guard under the tractor. Disconnect the propeller shaft front end flange joint.
- 4. Disconnect oil hoses on the steering cylinder. Disconnect the differential lock pressure oil pipe on the axle housing. Raise the tractor front end and put axle stands under the front frame. Remove front wheels when needed.
- 5. Fasten lifting ropes to the axle on both sides of the engine.
- 6. Unbolt the central pivot bearing bracket bolts. Lower the axle and remove it.

B. Changing central pivot bearing sleeves.


- 1. Apply parking brake. Scotch the rear wheels. Disconnect the battery cables.
- 2. Raise the tractor front end and put axle stands under the tractor.
- 3. Support the axle so that the bearing brackets can be unbolted.

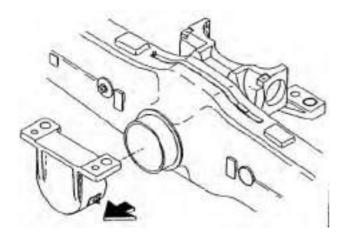


4. Open the bearing bracket bolts. Lower the axle until the guide sleeves release and remove first the foremost bearing bracket.

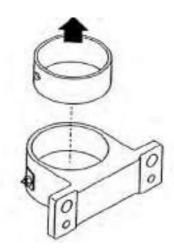

- 5. Slacken the locking bolt and remove the bearing sleeve. Check sleeve for wear. Change if necessary. Tighten the locking bolt.
- 6. Check the V-shaped seal ring on the axle. Change if necessary.

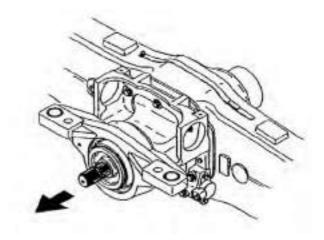


7. Remove the rearmost bearing bracket on the axle.

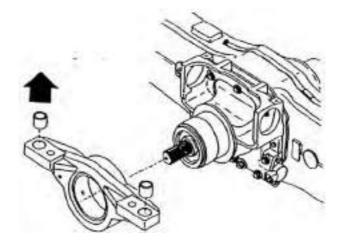

8. Check the condition of the sleeves. Change when necessary. Check also condition of the V-shaped seal on the axle, change when necessary.

		Model	Code	Page
67. Powered front axle Carraro	1. 10. 1999	8450-8950	671	2

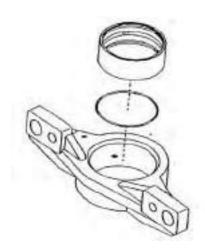

- 9. Slacken the bearing sleeve locking bolt and remove the sleeve. Change if needed. Check also condition of the oring.
- 10. Fit the bearing brackets on the axle. Ensure, that the guide sleeves are in their places. Position the axle under the tractor and tighten the bearing bracket bolts to **380 Nm**.
- 11. Grease the bearings sleeves with universal grease (nipples).
- 12. Remove the axle stands under the tractor.
- 13. Test-run the tractor and check that axle functions are OK.

C. Fitting front axle

- 1. Ensure that the bearing brackets are correctly positioned on the axle and that their guide sleeves are in place.
- 2. Lift the axle into place and tighten the bearing brackets to a torque of **380 Nm**.
- 3. Connect the oil hoses to the steering cylinder. Connect the differential lock pressure oil pipe. Connect the propeller shaft front flange joint (70 Nm).
- 4. Fasten the front wheels, if removed (550 ${
 m Nm}$). Remove the axle stands under the tractor.
- 5. Fill the differential housing with oil (6 litres) and fill hubs (2x1,5 litres), if drained (oil quality 80W/90 GL-5 (LS), e.g. Valtra Axle).
- 6. Grease the bearing bracket nipples with universal grease.
- 7. Test-run the tractor and check that steering and front axle function properly. Check for leaks.




		Model	Code	Page
67. Powered front axle Carraro	1, 10, 1999	8450-8950	672	1

Hubs (Op. no. 672)


1. Reconditioning hubs

A. Changing planet gears/bearing rollers


- 1. Apply parking brake. Place wedges on the both sides of the rear wheels. Disconnect the battery cables.
- 2. Raise the tractor front end and support it with sturdy axle stands. Remove front wheel(s).

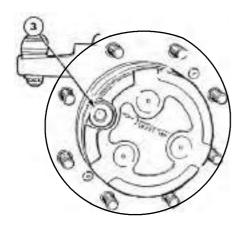


3. Turn the hub so that the oil draining/filling plug (3) is in the rear position. Unscrew the plug and drain the oil into a suitable vessel (1,5 litres oil in both hubs)

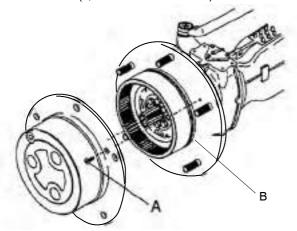

- 4. Unscrew two hexagonal socket head bolts (A) in recesses. B is the hub large o-ring.
- 5. Tap with a soft mallet the planetary carrier (hub cover) out and pry it out with two fitting levers.
- 6. Fasten the planetary carrier e.g. in a vice.

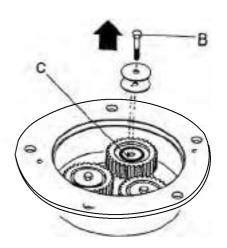

7. If the planet gears/bearing rollers must be changed, unscrew bolts (B) and remove the thrust washers. Take care of the locking pin (C), if it releases.

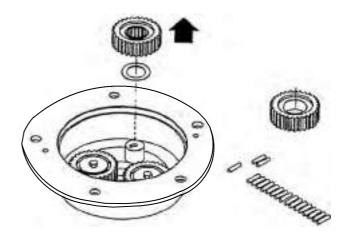

8. Remove the planet gears and washers under them. Do not mix the planet gear bearing rollers. Change, if necessary, the bearing rollers (28 pcs/gears).

Note! If the stud bolts must be changed, they cannot be separately removed and changed but the whole planetary carrier must be changed. The studs have press fits and they must be pressed into place during fitting.

9. Fit the washer, bearing rollers and planet gears and fit the thrust washers and tighten the bolts to **80 Nm**. Ensure that the locking pins remain in their locations.


Note! The bearing rollers can be fastened with a little grease when assembling them.

- 10. Check the hub large o-ring, change if necessary. Grease the o-ring.
- 11. Push the planetary carrier (hub cover) into place and tighten the two socket head bolts to ${\bf 25\ Nm}$
- 12. Fill the hub with **1,5 litres** oil (80W/90 GL 5 (LS)), e.g. Valtra Axle.
- 13. Fit the front wheel(s), remove the supports and test-run the tractor. Check for leaks.


_		Model	Code	Page
67. Powered front axle Carraro	1. 10. 1999	8450-8950	672	2

B. Changing hub cassette seal/wheel bearings


1. Remove the planetary carrier (hub cover) as shown in instr. **1A** stages **1-5** on page **672/1**.

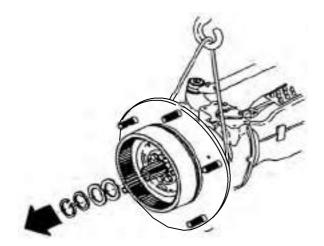


2. Support the hub with a lifting rope. Remove the drive shaft snap ring and thrust washers. Observe the positions of the washers.

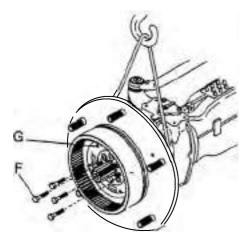


3. Unscrew the ring gear support bolts (F). Screw in two bolts into puller holes (G) and pull out the ring gears.

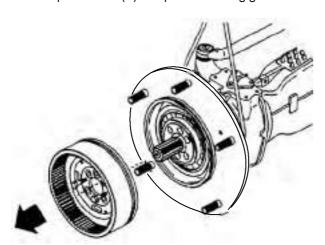


4. Remove the ring gear and its support.

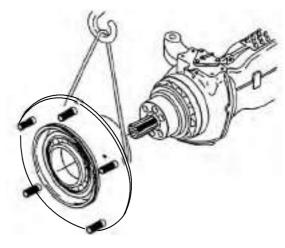

5. Remove the hub flange with wheel bearings and the cassette seal. Remove the outer wheel bearing.

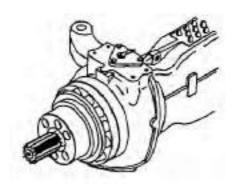

6. Remove the inner wheel bearing on the knuckle housing, if damaged. Removing can be done with a drift and a puller.

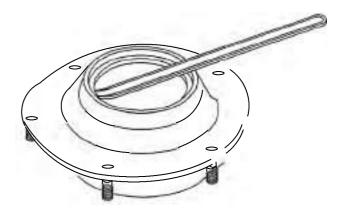

7. Prise out the hub cassette seal.

67. Powered front axle Carraro


Model 1. 10. 1999 845

8450-8950

Code

672


Page 3

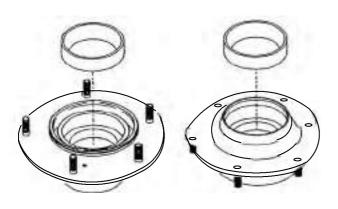


8. Remove the wheel bearing outer races in the hub flange and fit new ones. Removing can be done e.g. with a drift and a hammer. When fitting new races, they can be cooled.




12. If you change the steel sleeves, prefit the sleeves into ring gear support so that two sleeves protrude some millimetres to guide the ring gear support when fitting it.

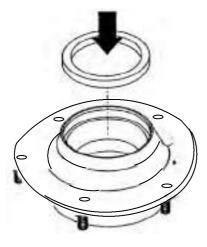


- 9. Fit a new cassette seal with plate **ETV 894 460**. Grease the seal lips.
- 10. Fit a new inner tapered roller bearing on the knuckle housing. The bearing can be warmed up to $+80^{\circ}$ C.

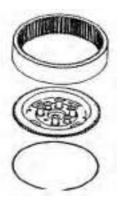

- Fasten the ring gear onto support and secure it with the snap ring.
- 14. Press the hub flange into place so that the inner bearing outer race fits onto the roller bearing on the knuckle housing.
- 15. Push the outer wheel bearing against its outer race in the flange. The bearing can be warmed up to $+80^{\circ}$ C.
- 16. Place the ring gear onto the hub. Tap in all steel sleeves to their boring. Fit and tighten the ring gear support bolts to **230 Nm**.

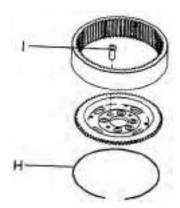

11. Detach, when necessary, the ring gear by releasing circlip (H) with a suitable pliers. Remove, when necessary, steel sleeves (I) and fit new ones.

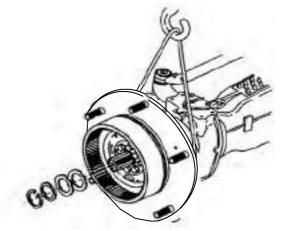

17. Refit the washers in a correct order and secure them with the circlip.


		Model	Code	Page
67. Powered front axle Carraro	1. 10. 1999	8450-8950	672	4

18. Fit the planetary carrier (hub cover) and add oil into the hub, see instr. 1 A stages 10-13 on page 672/1.


C. Changing king pin bearings

Remove the hub cover according to instr. 1A stages
 1-5. Remove the drive shaft outer end circlip and the washers.

Note! The above shown stage 1 is not necessary, since the hub can be removed as a complete unit when the king pin covers are removed. In this case the drive shaft comes out with the hub. However, the drive shaft outer seal cannot be changed.

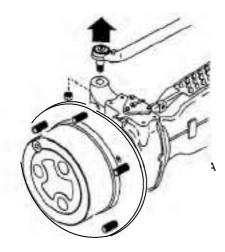

- 2. Disconnect the tie-rod tapered joint from the steering
- Support the hub/knuckle housing with a lifting rope and unscrew the king pin upper and lower covers. Do not mix the upper and lower tapered rings (different thickness and shape).

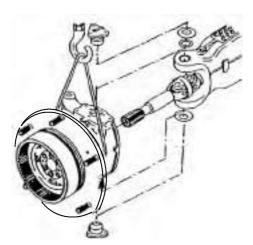


4. Remove the king pins and remove the nub. Take care of the washers.


Note! If the drive shaft remains in the axle housing, do not damage the drive shaft outer seal. If the drive shaft comes out together with the hub, do not damage the drive shaft inner seal.



- 5. Fasten the lower king pin in a vice and drive out the tapered ring according to the picture above.
- 6. Remove the sleeve from the upper king pin in the same way.

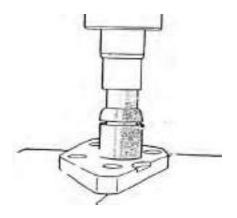


7. Press with a hydraulic press a new tapered ring (lower pin) and a new sleeve (upper pin) into place.

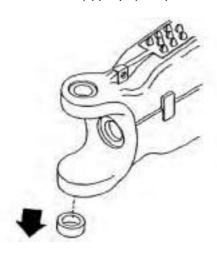

8. Pull out the lower king pin inner tapered ring and fit a new one.

67. Powered front axle Carraro


	Model	Code	Page
1. 10. 1999	8450-8950	672	5

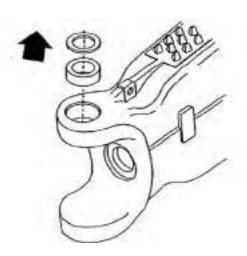


9. Remove the upper pin sleeve after removing the tapered ring.



10. Fit a new lower king pin outer bearing cup.

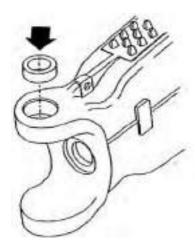


11. Fit the upper pin bearing cup.

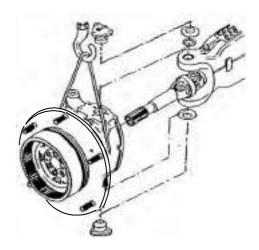

12. Support the hub with a lifting rope and push it onto the axle end and fit the washers and the king pins.

Note! Do not mix the upper and lower washers (different thickness and shape). Do not damage the drive shaft outer seal, if the drive shaft remained in the axle housing

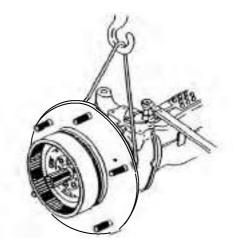

- 13. Tighten the king pin covers (190 Nm).
- 14. If you removed the hub cover and the circlip and the washers at the end of the drive shaft, refit first the washers and circlip (correct order) at the end of the drive shaft and fit the planetary carrier (hub cover) as shown in instr. 1A stages 10–13 on page 672/1.
- 15. Grease the king pin nipples with universal grease.
- 16. Connect the tie rod tapered joint (220 Nm).





		Model	Code	Page
67. Powered front axle Carraro	1. 10. 1999	8450-8950	673	1


Drive shafts (Code no. 673)

1. Changing drive shaft oil seals / bearing bushings


A. Changing inner seal/bearing bushing

Note! The drive shaft inner oil seal can be changed so that first are removed the king pins and then the hub is pulled out together with the drive shaft. In this case is unnecessary to disassemble the hub.


- 1. Remove the front wheel. Disconnect the tie-rod tapered joint, support the hub with a lifting rope and remove the king pins, see instr. 1 C stages 2-4 on page 672/4.
- 2. Pull out the hub/drive shaft. When necessary, drain the oil in the axle housing.

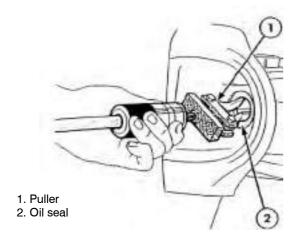


3. Prise out or pull out the inner oil seal.

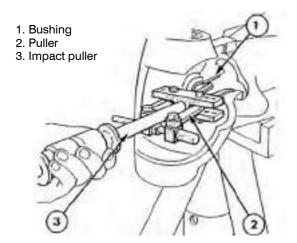

4. Check the condition of the drive shaft bearing bushing in the axle housing bore. Pull it out, if damaged, with a suitable puller.

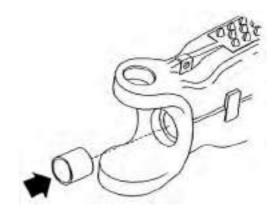

5. Tap in a new bushing with a suitable fitting tool. Grease the bushing.

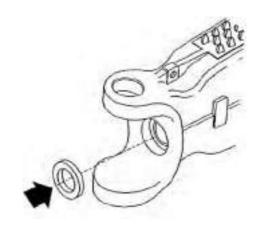

- 6. Fit a new inner oil seal into the housing bore (lips turned to the housing side). Grease the seal lips.
- 7. Push the hub/drive shaft into the housing. Do not damage the inner oil seal with the drive shaft splines.
- 8. Fit the king pins/washers and tighten the pins to a torque of **190 Nm.** Connect the tie-rod tapered joint to the steering arm (**220 Nm**).
- 9. Grease the king pin nipples.
- 10. Add oil into the axle housing, if drained (6 litres, 80W/90 API GL-5 (LS), e.g. Valtra Axle).
- 11. Refit the front wheel. Test-run the tractor and ensure that no leaks exist.

Drive shafts:


Note! Check the condition of the drive shaft splines and the double joints. The double joints can be disassembled in a normal way concerning these joints, see e.g. instr. **C** on page **642/3**.

If the joints have been damaged, cross pieces, sleeves and washers are available as a spare part.


		Model	Code	Page
67. Powered front axle Carraro	1. 10. 1999	8450-8950	673	2

B. Changing drive shaft outer oil seal / bearing bushing


12. Drain oil in the hub, remove the planetary carrier (hub cover), see instr. **1A** stages **1-5** on page **672/1**. When necessary, drain oil in the axle housing.

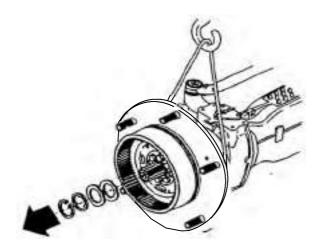


13. Remove the drive shaft snap ring and the washers (note the order of the washers).

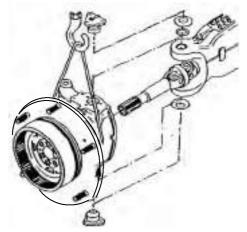


14. Support the hub with a lifting rope. Disconnect the tie-rod from the steering arm. Remove the king pins/washers and pull out the hub.

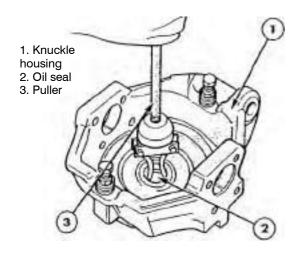

15. Prise out the drive shaft outer oil seal. Check the condition of the bearing bushing. Pull out the damaged bushing with a suitable puller or knock it out with a suitable tool.

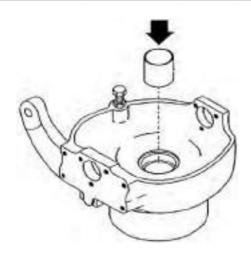

16. Drive in a new bushing with a suitable tool.

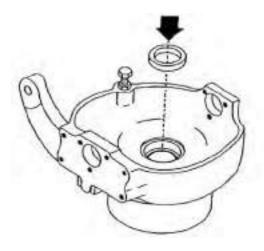

- 17. Fit a new outer seal with a suitable tool.
- 18. Grease the bushing and the seal
- 19. Wrap a plastic foil round the drive shaft splines (sun gear) and push the drive shaft into the hub. Remove the plastic foil, fit the washers (observe order) and fit the snap ring.
- 20. Push the hub/knuckle housing together with the drive shaft into the axle housing (do not damage the drive shaft inner oil seal).
- 21. Fit the washers/king pins and tighten the pins to a torque of **190 Nm.** Reconnect the tie-rod (**220 Nm**).
- 22. Grease the king pin nipples.
- 23. Add oil into the axle housing, if drained (6 litres, 80W/90 API GL-5 (LS), e.g. Valtra Axle).
- 24. Fasten the planetary carrier, see instr. **1A** stages **10–13** on page **672/1**.
- 25. Test-run the tractor and ensure that no leaks exist.




67. Powered front axle Carraro 1. 10. 1999 | Model | Code | Page | 674 | 1

Reconditioning differential/bevel pinion shaft (Code no. 674)

A. Changing bevel pinion shaft cassette seal.

Note! The seal can be changed from under as follows:


- 1. Drain oil in the axle housing.
- 2. Remove the propeller shaft guard under the tractor.
- 3. Disconnect the flange joint at the front end of the propeller shaft and lower the shaft to the ground. Remove the drive flange on the bevel pinion shaft splines.

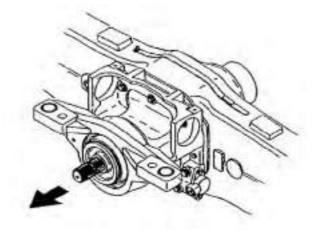


- 4. Prise out the damaged seal with a suitable lever. Remove the o-ring, if fitted.
- 5. Put the o-ring into place and grease it and lips of a new cassette seal. Fit the new cassette seal with a suitable fitting tool. Do not damage the seal on the shaft splines.
- 6. Refit the drive flange onto the bevel pinion shaft (60 Nm). Reconnect the flange joint (70 Nm). Refit the propeller shaft guard. Add oil into the axle housing.
- 7. Test-run the tractor and check for leaks.

B. Removing differential


- 1. Drain the oil in the axle housing. Remove the steering ram (see instr. A stages 675/1). Disconnect the diff. lock pressure oil hose.
- 2. Remove both hubs together with the drive shafts (see instr. **1A** stages **1-2** on page **673/1**)

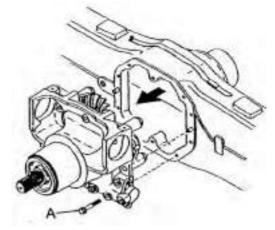

3. Unscrew the differential bracket bolts (A) and take out the differential/bevel pinion shaft. In the mating surfaces there are dowels

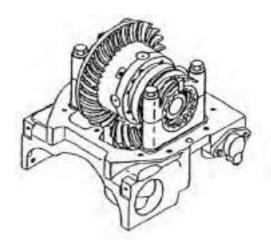


4. Place the differential unit in a suitable fitting base.

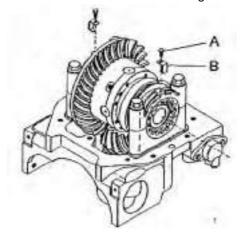


5. Unscrew bolts (A) and remove lock tabs (B).


$\overline{}$	Model	Code	Page
1. 10. 1999	8450-8950	674	2

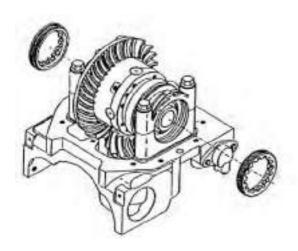


6. Unscrew and remove the adjusting nuts.

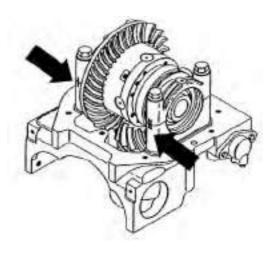


7. Before removing the differential bearing caps, mark their positions to make refitting easier.

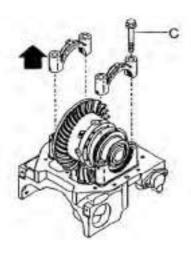

8. Unscrew the bearing cap bolts (C) and remove the caps.

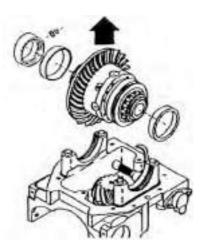


9. Remove the differential unit together with its bearings and remove oil distributor sleeve, o-ring and the intermediate ring.

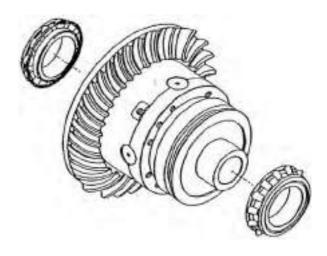


10. Remove the differential bearings, when necessary.

C. Removing bevel pinion shaft:

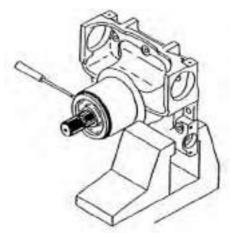


11. Remove the cassette seal by prising it out (note that the seal is damaged when it is removed).


	Model	Code	Page
1. 10. 1999	8450-8950	674	3

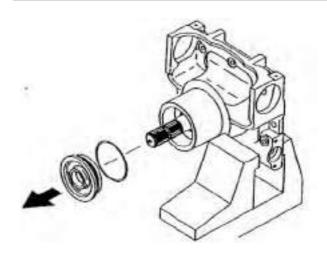


12. Remove the cassette sea and the o-ring (if fitted).

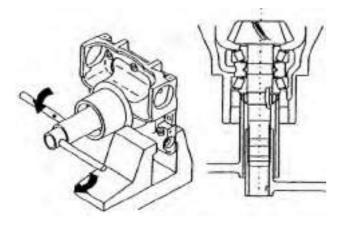


13. Unscrew the bevel pinion shaft nut with spanner **ETV 893 490**. Prevent shaft from rotating in a suitable way.

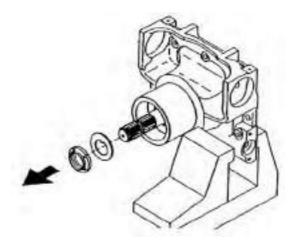


14. Remove the nut and the lock washer on the shaft.

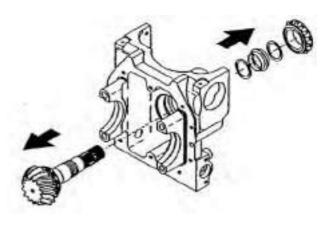

15. Knock out the shaft with a soft mallet. Take care of the intermediate rings, compression bushing and the outer bearing, which are released.

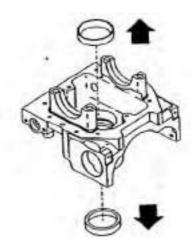

16. When necessary, drive out the shaft bearing outer races in the differential bracket.

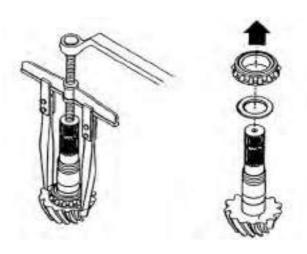


17. Remove the inner tapered roller bearing on the shaft and remove the spacer ring under the bearing.

Note! The chamfered side of the spacer ring must be turned to the bevel pinion side.


674

D. Disassembling differential

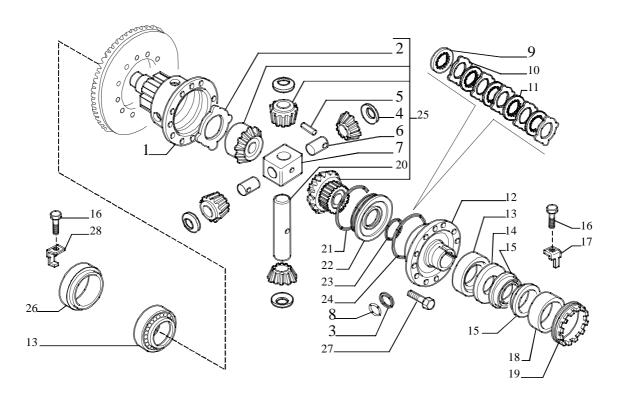

- 18. Unscrew bolts (27), at which time the crown wheel is released and the differential housing is split.
- 19. Remove cover (12) and change o-ring (24).
- 20. Remove piston (22) and change o-rings (21) and (23).
- 21. Remove the disc pack (9, 10, 11) (note the fitting order. Steel discs have teeth on the outer circumference) and check the condition of the discs. If the disc wear can be found, change all discs at the same time. Thickness of the discs, see page 670/2.
- 22. Remove and check the condition of the differential pinions. Before removing, remove tension pins (5).

Note! In connection with damages, change all parts under pos. no. 25.

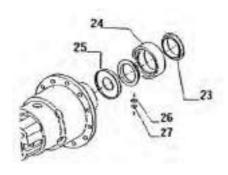

- 23. Check/change seals (23) and o-ring (27).
- 24. Check the housing wear. Small damages can be repaired with fine emery cloth.


E. Assembling differential

- 25. Assembling is done in a reverse order.
- 26. Lock the differential pinions with pins (5). Fit the disc pack and the differential side gears (disc pack contains 1 thrust plate, 8 steel discs and friction discs. Steel discs have teeth on the outer circumference).
- 27. Refit piston (22) and its o-rings (23) and (21), cover (12) and o-ring (24).


Note! The differential gears have thrust washers with different thickness, see technical data. In addition, the differential gears have a certain tooth backlash, see technical data. If the thrust washers must be changed, the tooth backlash must be checked with a dial gauge.

Page 5


F. Adjusting position of bevel pinion shaft

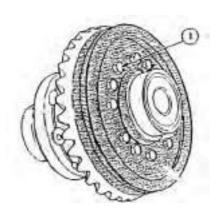


28. Place the crown wheel into place, apply Loctite 270 on the bolts (1) and tighten them to 70 Nm.

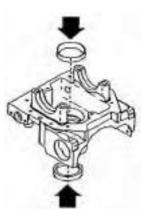


31. Fit both bearing outer races into their locations in the bracket. Cool, when necessary, the bearing races before fitting.

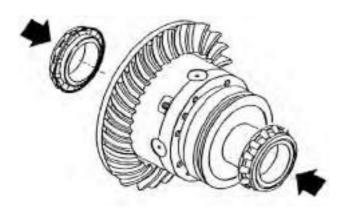

29. Fit the differential bearings onto the housing. When necessary, warm the bearings up to +80°C before fitting.

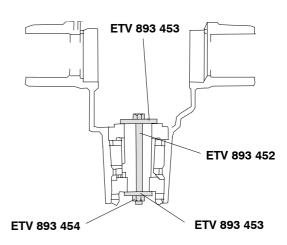


32. Fit the bevel pinion shaft bearings and fasten them with the special tools (plates ETV 893 453 (2 pcs), ETV 893 454 nut M10 and ETV 893 452 screw M10x100) so that the bearings rotate freely but without clearance. Rotate bearings many times.

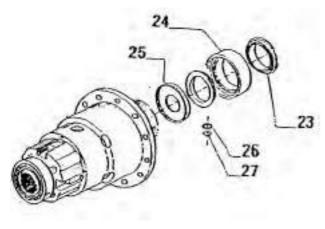

30. Fit the intermediate plate (25), protector (24) and seal (23) (if removed). After this the differential can be fastened onto the support. Observe the o-ring (27) and plate (26).

IMPORTANT! The intermediate plate (25) must be fitted so that the bent side is turned to the bearing side (see picture on page 670/6).

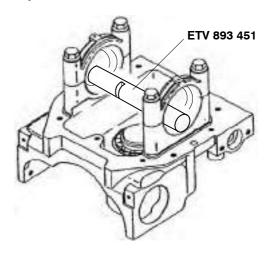

33. Place the measuring rod ETV 893 451 on the differential bearing bores in the middle of them in the lowest position.


Note! Bearing caps (in picture) can be removed.


	_	
	Model	Code
	8450 – 8950	674
1 10 1000	0430-0330	0/4

Page

6

674

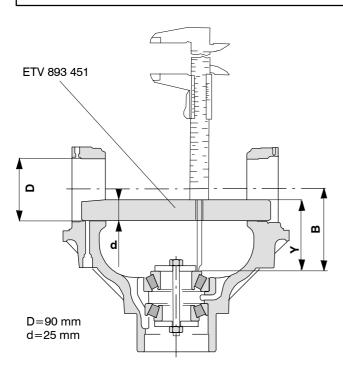


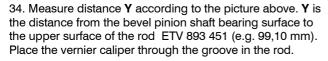

34a. The sought measurement B (distance between the bevel pinion shaft bearing surface to the middle of the differential bearing locations) can be calculated as follows:

B = Y-d + D/2, e.g.:

B = 99,10 mm - 25 mm + 45 mm = 119,10 mm

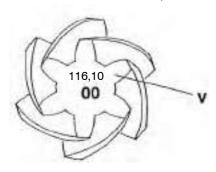


35. Read measurement V (e.g. 116,10) at the end of the bevel pinion shaft.

Thickness of spacer ring between the bevel pinion and the bearing can be calculated as follows:

S=B-V, e.g.

S=119,10 mm-116,10 mm = 3.00 mm


Choice a correct spacer ring S. Available from 2,5 mm to 3,4 mm: (with increments of 0,1 mm).

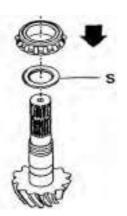


36. Fit the correct spacer ring S (chamfered side to the bevel pinion side) and the bearing. When needed, warm the bearing to +80°C before fitting.

G. Adjusting pre-load of bevel pinion shaft bearings

37. Fit the thrust washer on the shaft, new compression bushing and other thrust washer.

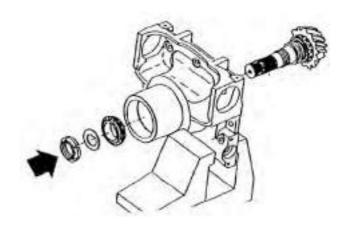

38. Push the shaft into place and fit the other bearing onto it, locking ring and screw in the shaft nut.

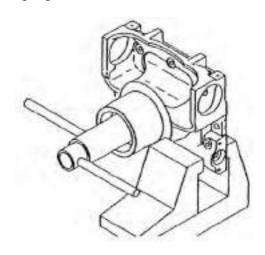

39. Tighten progressively the nut with tool ETV 893 490 and measure now and then the bearing rolling resistance with a spring balance. Always after tightening, rotate the shaft many times.


Model 1. 10. 1999 845

8450--8950

Code

674

Page **7**

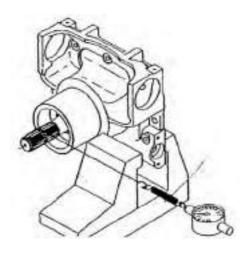


- 40. Wind a rope round the bevel pinion shaft (Ø 34,8 mm) and connect a spring balance to the rope (shaft without the cassette seal).
- 41. Measure the rolling resistance **P** two, three times. Read off the value, while the shaft is rotating. In the beginning more power is needed.


The correct rolling resistance should be 30 N-50 N (3-5 kg)

42. Tighten the shaft nut, if necessary.

IMPORTANT! Take a note of the rolling resistance value, since it is needed when adjusting the differential bearing rolling resistance.

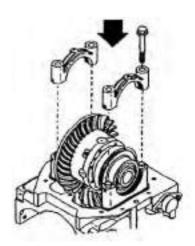


45. Refit the bearing caps according to the marks and screw in the fixing bolts and tighten them but not too hard.

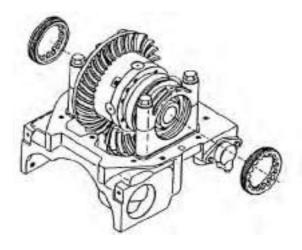

46. Screw the adjusting nuts into place in a suitable way.

H. Fitting differential onto bracket

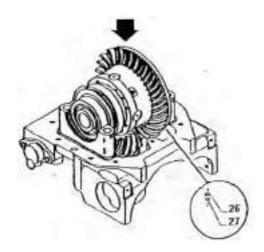


43. Fit the o-ring (27) and the washer (26) into the differential.

Note! Grease the parts to keep them in place during fitting.

44. Position the differential onto the bracket. Do not move parts (26) and (27). Ensure, that the bearing outer races are in places fully home.

I. Adjusting tooth backlash and differential bearing pre-load:

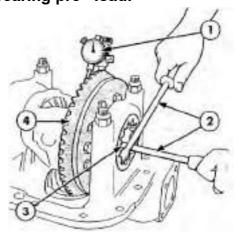


47. Place the dial gauge (1) stylus against the crown wheel tooth (measure at least on three teeth). Adjust the tooth backlash by slackening (if too small backlash) or by tightening (if too big backlash) the adjusting nut (3) (i.e. by moving the differential axially so that the bearing clearance is kept as zero or slightly pre-loaded).

The backlash must be between 0,17-0,23 mm.

Model Code Page 1. 10. 1999 8450-8950 674 8

48. When the tooth backlash is correct, ensure that the adjusting nuts keep the differential bearings without clearance or slightly pre—loaded. If the nuts must further be tightened (when adjusting preload), the differential must not move axially.

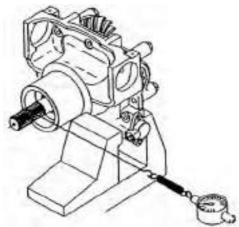

49. Wind the spring balance rope round the bevel pinion shaft (\emptyset 34,8 mm).

50. Measure the common rolling resistance of the differential bearings and the bevel pinion shaft bearings (T) two three times. Read off the value when the shaft is rotating. In the beginning more power is required.

The correct value (T), is:

$$T = (P+60 \text{ N})...(P+90 \text{ N}) \text{ i.e. } (P+6 \text{ kg})... (P+9 \text{ kg})$$

In which:

T= common rolling resistance of the differential bearings and the bevel pinion shaft bearings

P= rolling resistance of the bevel pinion shaft bearings (measured earlier))

6 kg – 9 kg (60 – 90 N) = differential bearing allowable rolling resistance.


51. If the value is not within the given limits, tighten the differential bearing adjusting nut (if resistance is too small) and vice versa. Always after tightening the nut, rotate the differential many times.

IMPORTANT! Do not affect the tooth backlash when tightening the adjusting nuts. After the rolling resistance adjustment, check once more the tooth backlash.




52. The teeth contact surface can be checked (if necessary) by using marking colour. The picture above shows the correct colour spread pattern on the teeth.

J. Fitting differential into axle housing

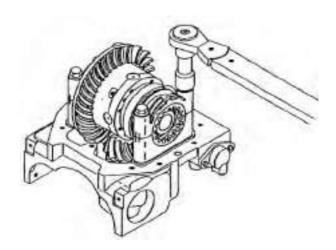


53. Tighten the differential bearing caps to a correct torque (270 Nm)

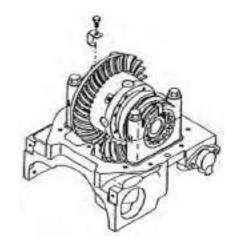


54. Refit the locking tabs. Turn the nuts, if necessary, so that the tabs fit into the notches on the nuts. Tighten the screws to **13 Nm**.

55. Lock the bevel pinion shaft nut with the locking washer.

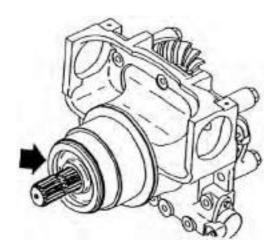

56. Fit the o-ring (if any), grease and fit the cassette seal with a suitable sleeve. Do not damage the seal on the shaft splines.

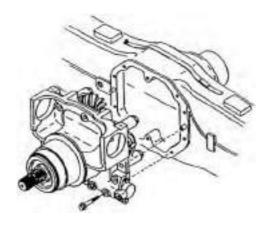


- 57. Clean the mating surfaces on the axle housing and on the differential bracket. Apply Loctite 510 or alt. Loctite 518 and push the differential into the axle housing. There are dowels in the joint.
- 58. Tighten progressively the bracket fixing bolts to 170 Nm. Reconnect the diff. lock hose.
- 59. Fit the bevel pinion shaft drive flange (fixed with two bolts). Connect the propeller shaft front flange joint (70 Nm).
- 60. Fit the steering ram, see instr. A on page 675/1.
- 61. Fit the bottom guard.
- 62. Fasten the hubs/drive shafts, see instr. **1C** stages **12–16** on page **672/5**.
- 63. Add oil into the axle housing (6 litres. 80W/90 GL-5 (LS), e.g. Valtra Axle).
- 64. Test-run the tractor and check the function of the front axle and differential lock. Check for leaks and test the steering system.



Reconditioning steering ram (Code no. 675)


Note! The steering ram must be removed, if the differential is removed from the axle.

Note! From Carraro no. **0100631** – incl. the steering force/ power has been added by changing the control valve and the cylinder diameters 75/38x276 (was 65/36x276). Because of this the cylinder outer diameter has also been enlarged, thus it is not exchangeable with the earlier cylinder.

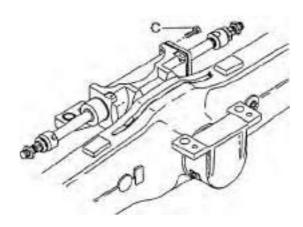


4. Slacken some turns four bolts (C). Turn the steering wheel to the left at which time the ram end flange is pushed out. Little oil can drain. Remove the bolts (C) and the ram.


A. Reconditioning steering ram

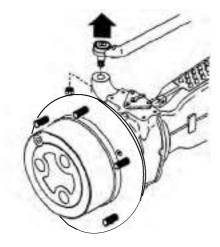


1. Disconnect the tie-rod tapered joint.

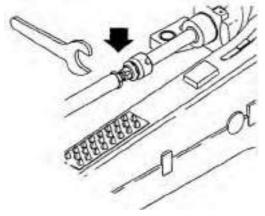

- 2. Disconnect the tie rod ball joint.
- 3. Disconnect the oil hoses on the ram.

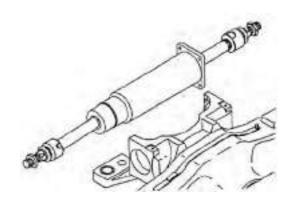


5. The steering ram unit can be changed as a complete unit or it can be repaired. Oil leakages can be repaired by changing seals. A seal kit is available as a spare part.

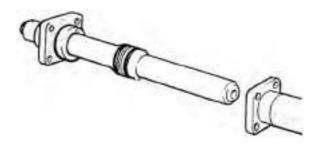


6. Pull out the piston rod/piston. Slide away the left end flange.


	Model	Code	Page	
1. 10. 1999	8450-8950	675	2	

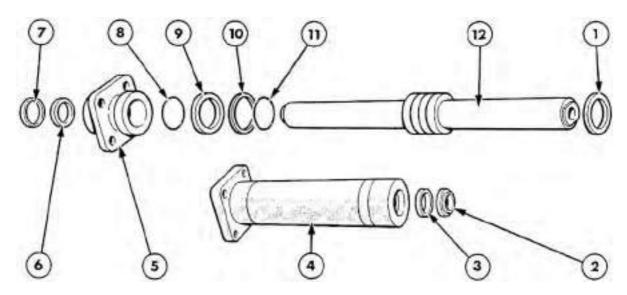


- 1. Wear ring
- 2. Scraper ring
- 3. Oil seal
- 4. Cylinder liner
- 5. End flange
- 6. Oil seal
- 7. Scraper ring
- 8. End flange o-ring
- 9. Wear ring
- 10. Piston seal
- 11. Piston seal expansion ring
- 12. Piston rod and piston
- 7. Remove the wear rings, the piston seal and o-rings, end flange seals and oil and scraper rings.
- 8. Wash the parts with suitable solvent and let them dry.
- 9. Check the piston rod. Small damages can be repaired with fine emery cloth.

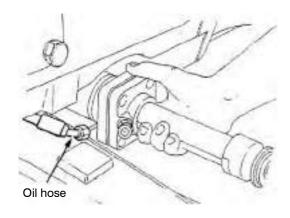

10. Refit the assembled steering ram onto the differential bracket.

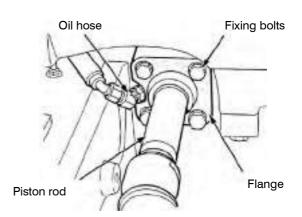

11. Tighten the fixing bolts to a correct torque (120 Nm). Reconnect oil hoses.

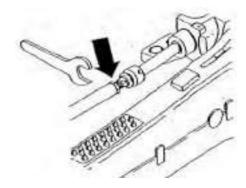

- 12. Reconnect the tie rod ball joint (300 Nm, locking nut 250 Nm). Reconnect the tie rod to the steering arm (220 Nm).
- 13. Add drained oil into the system. Start the engine and turn the steering wheel from one extreme position to another many times and ensure that the steering system functions properly and that no leaks exist. Check, if necessary toe—in.




67. Powered front axle Carraro 1. 10. 1999 Model Code Page 8450-8950 676 1


Other checks and adjustments (Code no. 676)

Note! Check that the axle housing breather valve is open. If the front axle diff. lock piston seals have leaks, oil flows into the axle housing in which oil level rises.


A. Adjusting toe-in (one possible method)

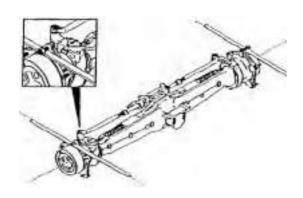

1. Fasten straight rods with length of about one meter onto both hubs according to picture above. Turn the hubs straight ahead.

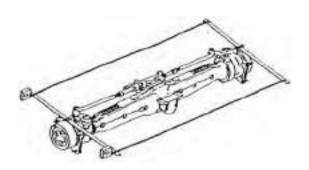


- 2. Measure the distance of the rod ends in the rear and in front of the axle.
- 3. The distance in the front must be **0–2 mm** smaller than in the rear.

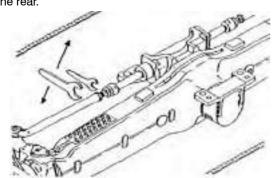


4. The toe—in can be adjusted at the tie rod ball joint. Adjust both tie rods equally (ball joint 300 Nm, locking nut 250 Nm).

B. Adjusting steering angle

Note! Adjustment can be necessary, if wheels are changed

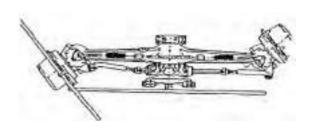


1. Use the same rods as shown in the previous instruction A according to the pictures.

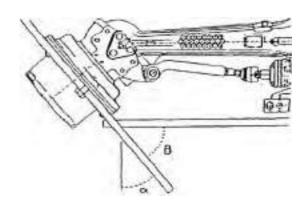

2. Measure the steering angle $\left(\alpha \right)$ with a suitable angle rule:

$$\alpha = 90^{\circ} - \beta$$

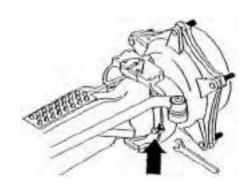

3. Limit the steering angle with stop bolts. Tighten the bolt locking nut to a correct torque (150 Nm). Limit both hubs equally.


FRONT MUDGUARDS, FITTING INSTRUCTION	19.0 5.1 995	Model	Code	Page
	04.01.1996	6000-8400	69	1(3)

11.00-16 30429600
12.4R24 32611600
13.6-24, 13.6R24 32611500
14.9-24, 14.9R24, 13.6R28,
14.9-28, 13,6-14.9R28 32600500
16.9R28, 480/65R24, 480/65R28,
440/65R28 32873100
17,5-19.5R24, 540/65R28 32600410
Fixed rims:
14.9-24, 14.9-28, 13,6-14.9R28 32600500
16.9R28, 16.9-24
13.6-24 32611500
Ind. front outs. fixed rime.
Ind. front axle, fixed rims: 16.9R28, 16.9-24
14.9R28, 14.9-28, 14.9-24 32873300
Townstandary of the Alexander Activities
Transferring pieces for the narrow track widths
(ref. 11 in picture) 32258900

Adjusting front mudguards to track width1500 mm. Suits to 28" or smaller tyres.

FITTING:

- 4WD: the front mudguards are fastened into the threaded holes on the king pin covers (3 off).
 Remove the plastic plugs in the holes.
- 2WD: the mudguards are fastened under the bolt of the steering arm.

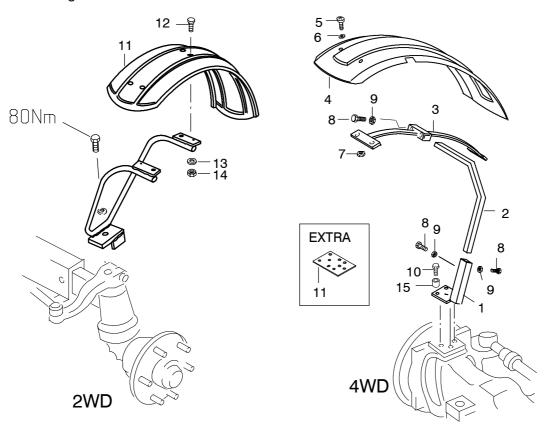

FRONT MUDGUARDS, FITTING INSTRUCTION	19.05.1995	Model	Code	Page
	04 01 1996	6000_8400	60	2(3)

	1	32600410	Etulokasuojat	Framstänkskärma	ar Front mudguards	Vorderkotflügel	4WD
1 2 3 4 8 9	1 1 2 2 1 1 12 12	33064500 330646 00 32612110 32612310 33047200 33047300 HA9242 JB1112	Rengas 17.5R24, 19.5R24 .Kiinnitin .Kiinnitin .Kulmaputki .Tuki .Kaari .Kaari .Ruuvi .Mutteri	Ring 17.5R24, 19.5R24 Fästdon Fästdon Vinkelrör Stöd Båge Båge Skruv Mutter	Ring 17.5R24, 19.5R24 Fastener Fastener Elbow pipe Support Bow Bow Screw Nut	Ring 17.5R24, 19.5R24 Halter Halter Winkelrohr Stütze Bogen Bogen Schraube Mutter	Left Right Left Right
1 2 3 4 8 9	1 1 1 2 2 1 1 12 12	32611800 32613000 32612200 32612700 32612400 32612500 HA6334 JB1110	Etulokasuojat Rengas 13.6–28, 14.9–24 .Kiinnitin .Kiinnitin .Kulmaputki .Tuki .Kaari .Kaari .Ruuvi .Mutteri	Framstänkskärma Ring 13.6–28, 14.9–24 Fästdon Fästdon Vinkelrör Stöd Båge Båge Skruv Mutter	Ar Front mudguards Ring 13.6–28, 14.9–24 Fastener Fastener Elbow pipe Support Bow Bow Screw Nut	Vorderkotflügel Ring 13.6–28, 14.9–24 Halter Halter Winkelrohr Stütze Bogen Bogen Schraube Mutter	Left Right Left Right M10x30 M10
	1	32611500	Etulokasuojat Rengas 13.6–24	Framstänkskärma Ring 13.6–24	arFront mudguards Ring 13.6–24	Vorderkotflügel Ring 13.6–24	4WD
1 2 3	1 1 2 2	32611800 32613000 32612200 32611700	.Kiinnitin .Kiinnitin .Kulmaputki .Tuki	Fästdon Fästdon Vinkelrör Stöd	Fastener Fastener Elbow pipe Support	Halter Halter Winkelrohr Stütze	Left Right
4 8 9	1 1 12 12	32612600 32612700 HA6334 JB1110	.Kaari .Kaari .Ruuvi .Mutteri	Båge Båge Skruv Mutter	Bow Bow Screw Nut	Bogen Bogen Schraube Mutter	Left Right M10x30 M10
	1	32611600	Etulokasuojat	Framstänkskärma	ar Front mudguards	Vorderkotflügel	4WD
1 2 3 4	1 1 2 2 1 1 12	32611800 32613000 32612200 32612200 32612800 32612900 HA6334	Rengas 12.4 – 24 .Kiinnitin .Kiinnitin .Kulmaputki .Tuki .Kaari .Kaari .Ruuvi	Ring 12.4-24 Fästdon Fästdon Vinkelrör Stöd Båge Båge Skruv	Ring 12.4-24 Fastener Fastener Elbow pipe Support Bow Bow Screw	Ring 12.4-24 Halter Halter Winkelrohr Stütze Bogen Bogen Schraube	Left Right Left Right M10x30
8 9	12	JB1110	.Mutteri	Mutter	Screw Nut	Schraube Mutter	M10x30 M10
			IENSAMMA DELAR /				
5 6	8	HK0013 32539300	.Ruuvi .Aluslaatta	Skruv Bricka Mutter	Screw Washer	Schraube Scheibe	
7 10	8 6	JB1106 HA8337	.Mutteri .Ruuvi	Mutter Skruv	Nut Screw	Mutter Schraube	M10x60
15	6	33063400	.Holkki	Hylsa	Sleeve	Hülse	Ø11

FRONT MUDGUARDS, FITTING INSTRUCTION 19.05.1995

Code

69

Page

3(3)

04.01.1996

6000-8400

Model

	1	32873110	Etulokasuojat	Framstänkskärma	ar Front mudguards	Vorderkotflügel	4WD
1 2 3 4 8	1 2 2 1 1 1		Rengas 16.9R28, 16.9–24 .Kiinnitin .Kiinnitin .Kulmaputki .Tuki .Kaari .Kaari .Ruuvi .Mutteri	Däck 16.9R28, 16.9–24 Fästdon Fästdon Vinkelrör Stöd Båge Båge Skruv Mutter	Tire 16.9R28, 16.9-24 Fastener Fastener Elbow pipe Support Bow Bow Screw Nut	Reifen 16.9R28, 16.9-24 Halter Halter Winkelrohr Stütze Bogen Bogen Schraube Mutter	Left Right Left Right M12x35 M12
	1	32873210	Etulokasuojat	Framstänkskärma	ar Front mudguards	Vorderkotflügel	4WD IND.
1 2 3 4 8 9	1 2 2 1 1 1		Rengas 16.9R28, 16.9–24 .Kiinnitin .Kiinnitin .Kulmaputki .Tuki .Kaari .Kaari .Ruuvi .Mutteri	Däck 16.9R28, 16.9–24 Fästdon Fästdon Vinkelrör Stöd Båge Båge Skruv Mutter	Tire 16.9R28, 16.9-24 Fastener Fastener Elbow pipe Support Bow Bow Screw Nut	Reifen 16.9R28, 16.9-24 Halter Halter Winkelrohr Stütze Bogen Bogen Schraube Mutter	Left Right Left Right M12x35 M12
	1	32873300	Etulokasuojat Rengas	Framstänkskärma Däck	Tire	Vorderkotflügel Reifen	4WD IND.
1	1 2	32873000 32873600 32612200	14.9–24, 14.9–28 .Kiinnitin .Kiinnitin .Kulmaputki	14.9–24, 14.9–28 Fästdon Fästdon Vinkelrör	14.9–24, 14.9–28 Fastener Fastener Elbow pipe	14.9–24, 14.9–28 Halter Halter Winkelrohr	: Left Right
3 4		32611700 32612400	.Tuki .Kaari	Stöd Båge	Support Bow	Stütze Bogen	Left
8			.Kaari .Ruuvi .Mutteri	Båge Skruv Mutter	Bow Screw Nut	Bogen Schraube Mutter	Right M10x30 M10
Y	HTEIS	SET OSAT / GE	MENSAMMA DELAR /	COMMON PARTS:			
	8 8 0 6 6	HK0013 32539300 JB1106 HA8337 HA8360	.Ruuvi .Aluslaatta .Mutteri .Ruuvi .Ruuvi	Skruv Bricka Mutter Skruv Skruv	Screw Washer Nut Screw Screw	Schraube Scheibe Mutter Schraube Schraube	M10x60 IND.M16x70
1	5 6 6	33063400 33063500	.Holkki .Holkki	Hylsa Hylsa	Sleeve Sleeve	Hülse Hülse	Ø11 Ø17 IND.
1	1 2	32258900	Levy	Platta	Plate	Platte: (NL)	
	1 2	30429600 850095	Etulokasuojat Rengas 10x16 ja 11.00x16 .Kaari	Framstänkskärma Ring 10x16 11.00x16 Båge	Ring 10x16 11.00x16 Bow	Vorderkotflügel Ring 10x16 11.00x16 Bogen	2WD
	2 8 8	HK0013 JD0406	.Ruuvi .Aluslaatta .Martaat	Skruv Bricka	Screw Washer	Schraube Scheibe	

Nut

Mutter

Mutter

14 8 JB1106

.Mutteri

SPECIAL STEERING WHEEL	>	Model	Code	Page
FITTING INSTRUCTION	23.12.1994	6000-8400	69	1(2)

Special steering wheel 32482900

- With a leather covered steering wheel the driver has a pleasant and safe hold to driving.

FITTING:

- Unscrew the steering wheel centre nut and remove the standard steering wheel with a suitable puller. Move the return ring 7 of the earlier steering wheel onto the corresponding place on the special steering wheel.

Assemble the special steering wheel, be sure that the screws 3 do not get into wrong threads. Fit the new steering wheel into position (tightening torque 70Nm).

- Change spring 6 into a stronger one: Open first locking plate 20, slacken locking screw 19 and pull out the steering wheel column pipe and the steering wheel.

Note! Do not lose the locking piece 18. Remove plastic covering 5. Change the spring 6 with aid of iron wire etc. Refit the covering.


- Fasten the locking piece 18 temporarily with e.g. grease, or slacken adjusting screws 12 (remember number of opening revs), so that the locking piece remains better in the notch.

Push the steering wheel+column pipe into position by rotating the steering wheel so that the teeth

Lock the column pipe with screw 19.

NB! Bend the locking plate 20 so that screw 19 cannot get loose!

- If the adjusting screws 12 have been unscrewed, check after assembling the function of the steering wheel locking.

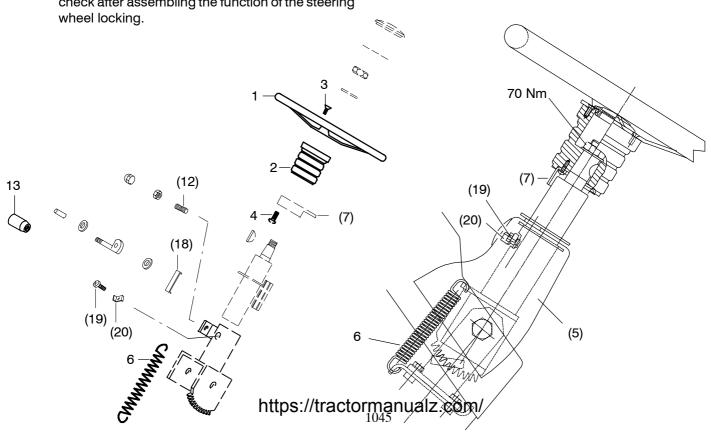

SPECIAL STEERING WHEEL		Model	Code	Page
FITTING INSTRUCTION	23.12.1994	6000-8400	69	2(2)

	1	32482900	Erikoisohjauspyörä	Specialratt	Spec. steering wheel	Speziallenkrad
1	1	32483000	.Ohjauspyörä	Ratt	Steering wheel	Lenkrad
2	1	32476800	.Keskiö	Centrum	Centre	Zentrum
3	6	HE6973	.Ruuvi	Skruv	Screw	Schraube
4	1	HD9032	.Ruuvi	Skruv	Screw	Schraube
6	1	33011900	Jousi	Fjäder	Spring	Feder

REVERSE DRIVE CONTROL, fitting instruction

27.11.1996 14.03.2000

Model (not HiTech) 6000-8750 Code

Page

69.3 1 (22)

Reverse drive control, Twin Trac

The mounting kit includes the reverse drive controls with the steering valve, accelerator, clutch and brake pedals and fitting parts.

Note! The rear brake pedal affects only the rear axle brakes of the tractor.

Also the brake valve of the trailer does not function when using the rear brake pedal.

Reverse drive control + control valve (lock valve for the reverse drive controls)


 The kit includes the reverse drive controls (Twin Trac) and a directional control valve, which switches off the reverse steering wheel, when the driver's seat is turned forwards.

Rear accelerator pedal

6000-8750 33749900

 The kit includes this pedal with necessary fitting parts.

When working with the reverse drive controls in the cab, the rear accelerator pedal makes it easier and more effective to use the timber loader or excavator.

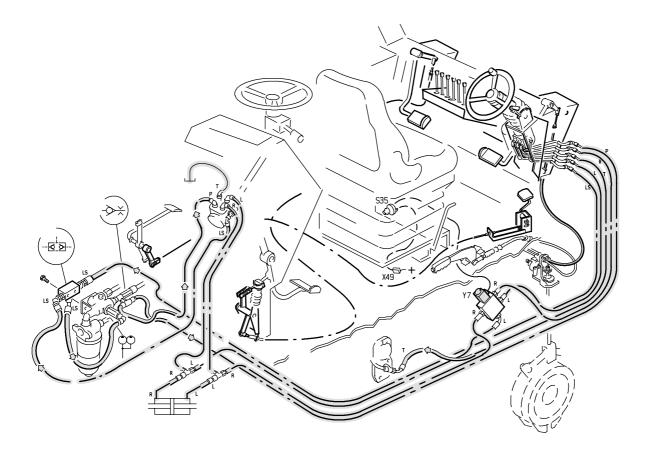

REVERSE DRIVE CONTROL, fitting instruction

27.11.1996 14.03.2000

Model (not HiTech) 6000-8750 Code

Page

69.3 2(22)

1. Preliminary works:

- Disconnect the battery earth cable.
- Remove the seat and the floor mat.
 Remove the side panel protection, the hand brake console, the passenger's seat and the tool box.
- Remove the wire loom inside the rear beam and tie the loom to the protective arch.
- Remove the lower window at the rear of the tractor.

Remove the electric socket and the PTO safety switch from the loom (these parts must be reconnected).

This ensures that the wire loom does not damage while drilling holes to the beam.

 Mark a Ø 9mm starting hole according to the picture.

Fasten the housing to this hole and mark other holes which are to be drilled. Drill Ø 9mm holes with a drilling machine.

Mark and drill also holes a and b for the rear steering wheel.

- Remove a bit from the edge of the hole for the brake pedal
- Paint all points where is not the original paint.
- Pass the clutch cable under the cab.

2. Fitting accelerator pedal:

- Fit the pedal bracket and mark places for the holes (3x). The relief on the bracket must become against the protective rubber of the hand brake lever cable. Drill ø 9mm holes.
 Drill with a self-tapping screw a fastening point for the return spring in the rear beam (see picture).
- Fasten the pedal and check function.
 Note! Fasten the clutch cable + fastening eye under the rear fixing bolt of the accelerator pedal.
- Remove the accelerator pedal in the front part of the cab.

Fit in place a pre-assembled pedal. Secure it with a tension pin.


 Fit the cable (32496800) between pedals. Check that the cables to the front pedal are in the straight line, so that there are not curves, which can prevent the function of the pedals. If necessary, bend the cable support on the floor. (From cab no ca 15575 the piece 32602400 is not needed).

Model (not HiTech) 6000-8750

Code

69.3 3(22)

Page

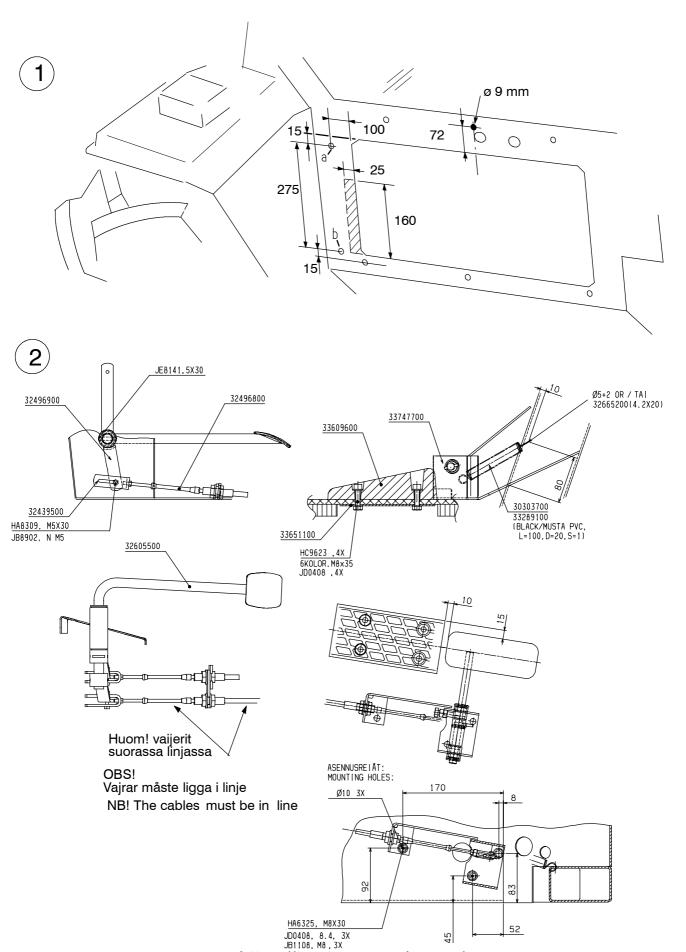


 ${\bf REVERSE\ DRIVE\ CONTROL,\ fitting\ instruction}$


27.11.1996

Model (not HiTech) 6000-8750 Code

69.3 4(22)

Page

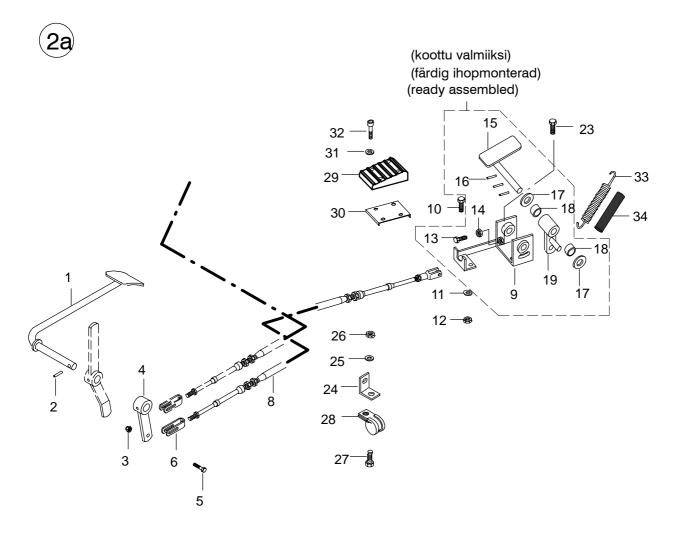

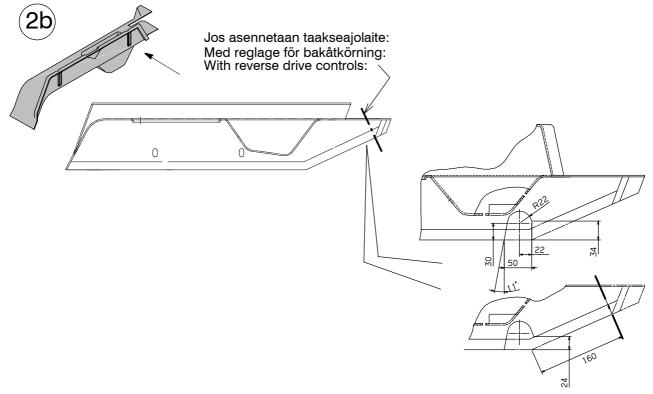

REVERSE DRIVE CONTROL, fitting instruction

14.03.2000

Model (not HiTech) 6000-8750 Code

Page 5(22) 69.3

- Adjusting the accelerator pedal cable: Remove play from the rear fixing nuts of the

Adjust the limiter screw of the rear pedal bracket so that the pedal touches the floor mat when it is depressed.

Make the adjustment with the cable front nuts so that both pedals move without play and simultaneously.


 Cut holes to the hand brake protection for the accelerator pedal (see picture 2a). If it is fitted also the reverse drive controls, the protection must also be shortened. Tighten the sheet metal protection (32600910) with silicone and fit it. Fasten the hand brake protection.


3. Fitting clutch pedal:

- Dimension a starting point to the cab front wall with a ø 4mm drill (see picture). Cut to the insulation of the front wall an opening of 100 x 250 mm (under the lever support). Drill with a 45 mm hole drill a hole at the starting point hole.
- Remove the clutch pedal power assistance. Note! a locking pin into the hole before removing the spring assembly!
- Earlier model: Make M8 hole to the upper fixing point of the power assistance (see picture) for clewis 6 (picture 3a). Latest models: fork (32633710) fastens to the arm of the pedal.
- Fasten the leverage to the clutch pedal (see picture 3a). Check that the lever is in the middle of the hole (otherwise resulting malfunctions), Turn the leverage carefully, if needed. Mark places for holes of support 22 upper end and make M6 threads. Fasten the support upper end and mark places for other holes, drill ø10mm hole.
- Apply silicone mass round the fixing holes (for water leaks), and fasten the bracket of the levers.
- Fit the leverage, the levers must not get entangled. Fit the power assistance.

Model (not HiTech) 6000-8750 Code **69.3**

Page 6 (22)

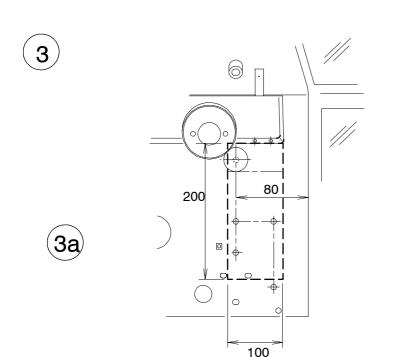

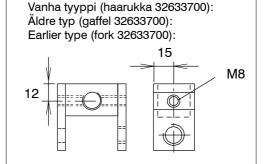

Aikaisemmat mallit: katkaise kuivaajasäiliön teline Tidigare modeller: skär av torkarbehållarens hållare


Earlier models: cut off the support for dryer





Jos ilmastointilaitteen kuivaajasäiliö on ohjaamon etuseinässä:


Med luftkonditionering (om torkar – behållaren finns i hyttens framvägg):

With air conditioning (if the dryer has been located in the cab front wall):

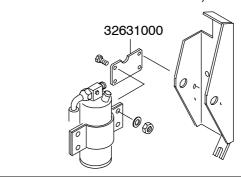

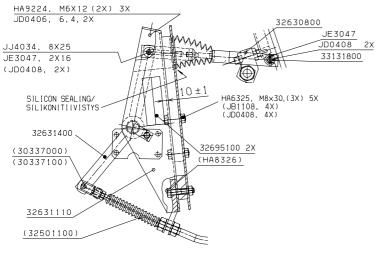


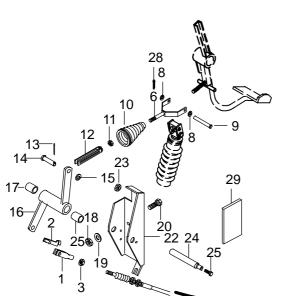

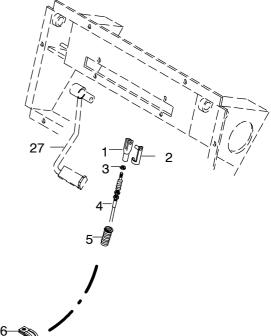

69.3

14.03.2000

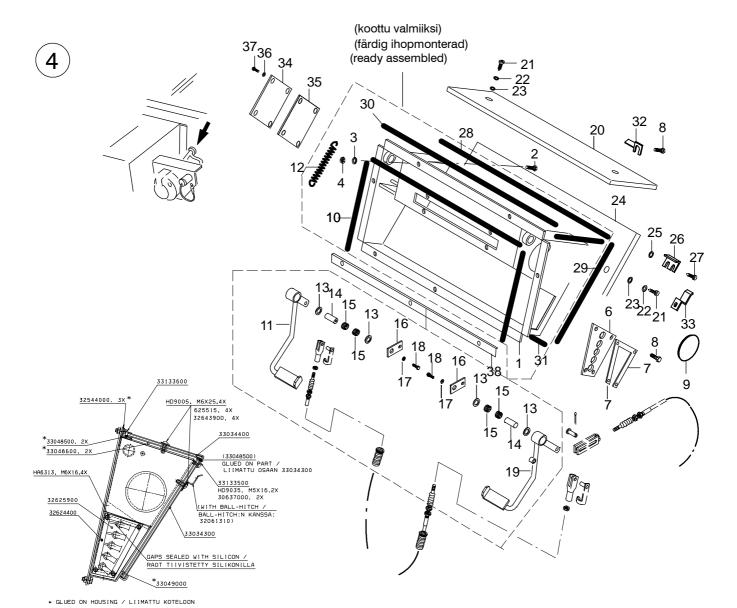

4. Fastening the rear housing:


- Glue gaskets to the edge of the rear opening and fasten the housing with M8 screws. Connect the electric socket and the PTO safety switch to the fastener on the rear housing. Wires to the socket are drawn through the earlier hole for the safety socket in the rear wall of the cab.

Position a shrink plastic to the joint of the wire and the switch frame (water tight).

- Assemble the clutch leverage and the brake leverages (see picture 4a). Check function. Fasten the clutch cable, leave all adjusting clearances to the rear lever.
- Fit the brake cable.

69.3

Page 8 (22)

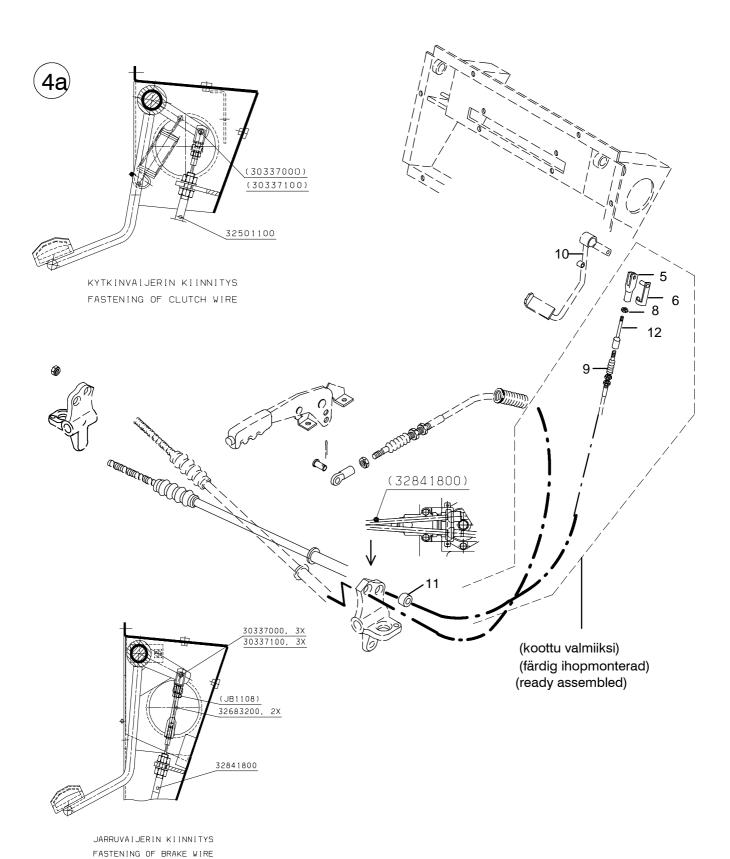

REVERSE DRIVE CONTROL	, fitting	instruction
-----------------------	-----------	-------------


27.77.1996 14.03.2000

Model (not HiTech) 6000 - 8750 Code

Page 9 (22) 69.3


5. Fitting steering wheel column:

- Fasten the column frame (do not tighten the screws too hard).
- Assembly the steering valve (o-rings against the valve, connectors in places). Place washers (JD0410, fasten with grease) between valve and the frame. make sure that the steering valve is in the middle of the hole and fasten the valve.
 - Secure the bolts with locking plate.
- NOTE! Check by measuring that the steering column end splines are pushed into the shaft of the steering valve 13...14 mm. Make before assembling a marking with a pen on the steering column shaft (32485800) with a distance of 13...14 from the end of the shaft, see picture 4. (the steering column shaft is not allowed to touch the bottom of the splines in the steering valve shaft). If necessary, adjust with washers between frame and valve.
- Fit the steering hoses (note fitting order, the lengths of the hoses which come out of the housing shorten evenly (P->LS). Tighten the hoses with silicone mass to water tight at the lead-in rubbers.

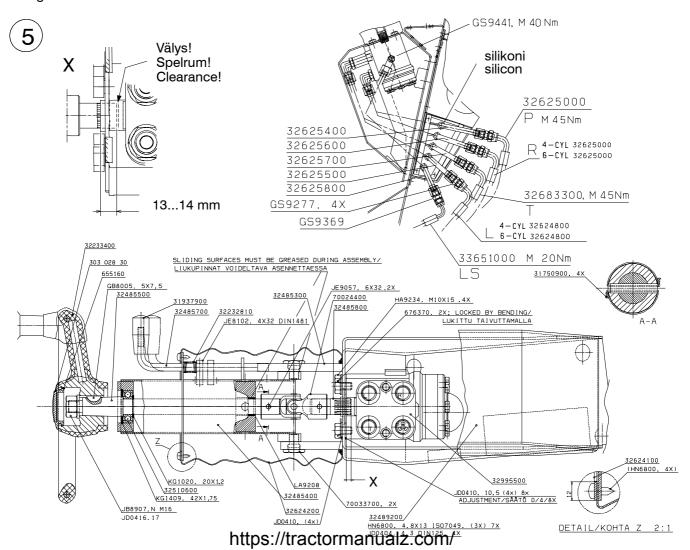

69.3 10(22)



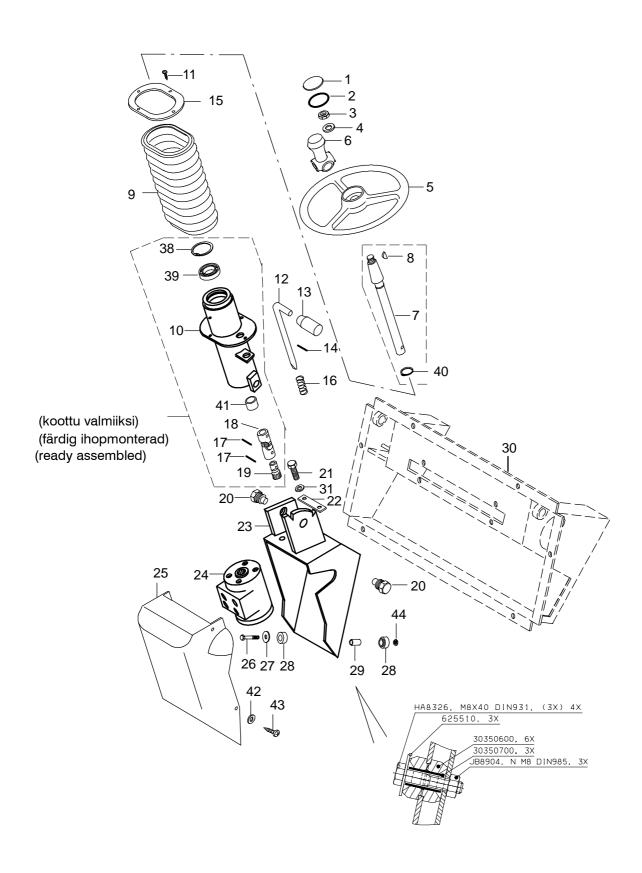

REVERSE DRIVE CONTROL, fitting instruction

27.11.1996 14.03.2000

Model (not HiTech) 6000-8750 Code

Page

69.3 | 11(22

6. Fitting steering hydraulics:

- assemble the bracket+change-over valve under the priority valve. Because of the modification of the priority valve (with effect from tractor number F13208->), the brackets and fastening are different, see pictures 6a and 6b.
- Fasten the hoses (starting from the rear ends)
 according to pictures 5 and 6. Fasten the hoses
 together with plastic clips.
 The hoses are drawn under the cab floor behind
 the shuttle lever to the priority valve.
- 6b. Fitting steering hydraulics (reverse drive control +directional control valve):
- Fasten the directional control valve under the fixing bolt of the LH side rear axle housing. The fixing point depends on the tractor model (see picture 6b).

Fasten the hoses according to the picture.

 Connect wire loom (32876000) connector to the directional control valve.

Pass the loom through the hand brake cable hole into the cab.

Find connector X49 near the seat (red and white wires), and connect to the wire loom.

In the loom, there is a reserved connector for the pneumatic seat.

7. Rest of fittings:


- Fasten gaskets to the edges of the rear housing (see picture 4) and place (plexi)glasses into the housing (screw + washer + rubber plate).
- Fit the rear mirror, see picture 7.
- Refit the cab floor ma. Mount the towing hook releasing control.
 Refit the seat.
- Glue warning stickers (32843800 and 33332700) on the beam in the lower edge of the rear window.
- Replace the stickers on the earlier rear window to the new window.

REVERSE DRIVE CONTROL,	, fitting instruction
------------------------	-----------------------

27.11.1996 14.03.2000


Model (not HiTech) 6000-8750 Code **69.3**

Page 12(22)

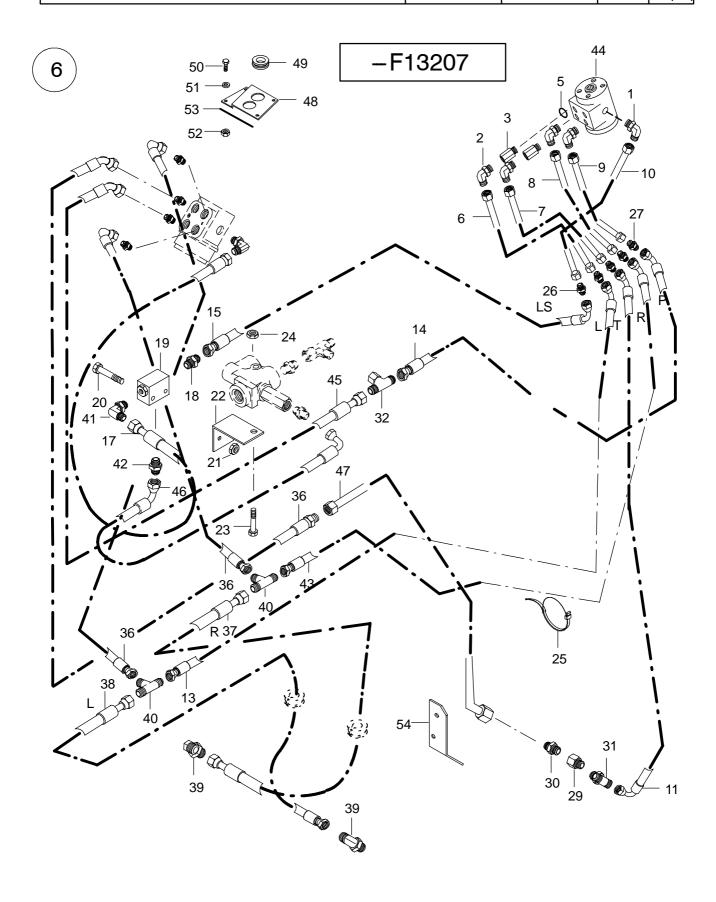

REVERSE DRIVE CONTROL, fitting instruction	27.71.1996	Model (not HiTech)	Code	Page
	14.03.2000	6000-8750	69.3	13(22)

6a

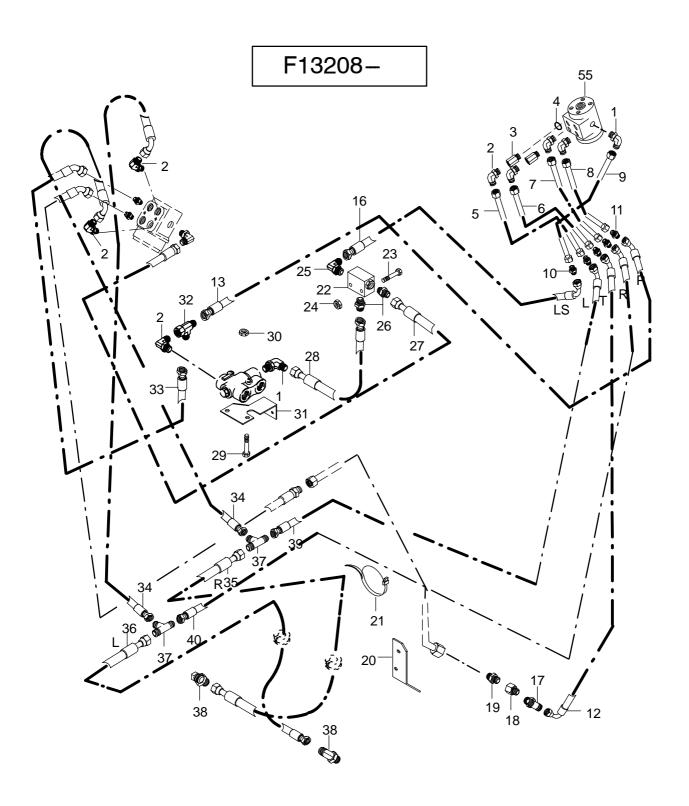


Model (not HiTech) 6000-8750 Code

Page

69.3 14(22)




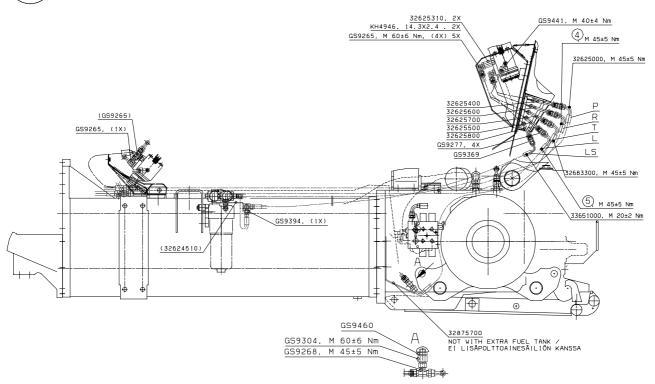

	PART NO/	MODEL /	(1)	(2)	(3)
	TAVARAT.	MALL I		(2)	(3)
*	32624300	6100-6600	32732300	30917010	G59272
**	32720800	8000-8400	32764500	32778600	-
*	32872000	6100-6600	32732300	30917010	GS9272
**	32872100	8000-8400	32764500	32778600	-

REMOVED PARTS / POISTETUT OSAT:

* GS9270, 32270840, 33202300, 33202400 ** 32270840, 34070500, 33203600

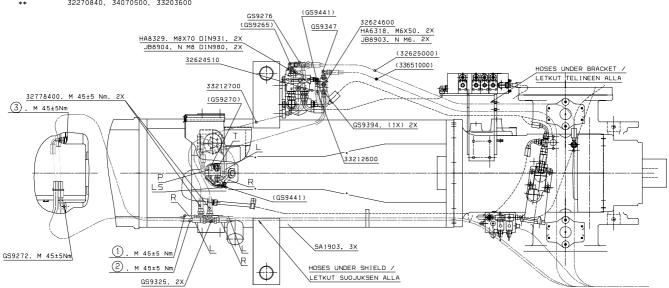


27.11.1996 14.03.2000

Model (not HiTech) 6000-8750 Code **69.3**


Page 15(22)



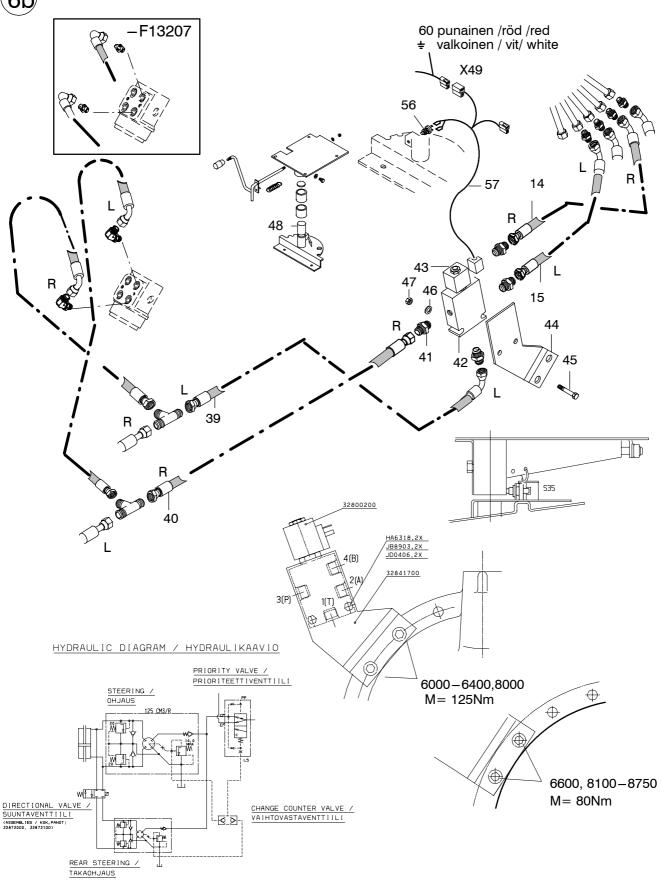

69.3

16(22

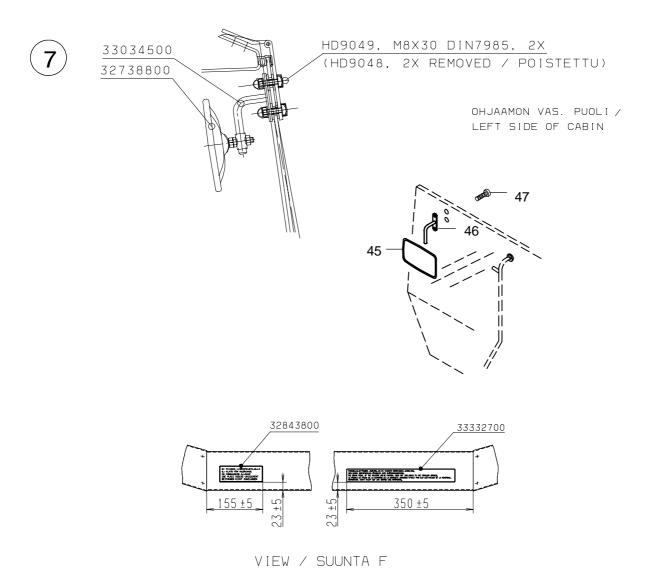

REVERSE DRIVE CONTROL, fitting instruction 27.11.1996 | Model (not HiTech) | Code (not HiTech) | 6000 – 8750 | 69.3 | 17(22)

20							
2a	33749900	Noneusvivusto	Hastigh.reglage	Speed levers	G.gestänge	Levier de vitesse	
1 1	32605500	.Poljin	Pedal	Pedal	Pedal	Pédale	
2 1	JE8141	.Sokka	Sprint	Pin	Splint	Goupille	
3 1	J8902	.Mutteri	Mutter	Nut	Mutter	Ecrou	
4 1	32496900	.Vipu	Spak	Lever	Hebel	Levier	
5 1	HA8309	.Ruuvi	Skruv	Screw	Schraube	Vis	
6 1	32439500	.Haarukka	Gaffel	Fork	Gabel	Fourchette	
8 1	32496800	.Vaijeri	Vajer	Cable	Kabel	Câble	
9 1	32497110	.Runko	Ram	Frame	Rahmen	Châssis	
10 1	HA6325	.Ruuvi	Skruv	Screw	Schraube	Vis	
11 3	JD0408	.Aluslevy	Bricka	Washer	Scheibe	Rondelle	
12 3	JB1108	.Mutteri	Mutter	Nut	Mutter	Ecrou	
13 1	HA6325	.Ruuvi	Skruv	Screw	Schraube	Vis	
14 1	JB1108	.Mutteri	Mutter	Nut	Mutter	Ecrou	
15 1	33606500		Pedal	Pedal	Pedal	Pédale	
16 3	JE9056	.Poljin		Pin			
17 2		.Sokka	Sprint		Splint	Goupille Plaque de roulement	
	32111800	.Laakerilevy	Lagerplatta	Bearing plate	Lagerplatte		
18 2	LA9196	.Laakeri	Lager	Bearing	Lager	Roulement	
19 1	32497200	.Vipu	Spak	Lever	Hebel	Levier	
23 2	HA6323	.Ruuvi	Skruv	Screw	Schraube	Vis Pièce	
29 1	33609600	.Pala	Stycke	Piece	Stück		
30 1	33651100	.Levy	Platta	Plate	Platte	Plaque	
31 4	JD0408	.Aluslevy	Bricka	Washer	Scheibe	Rondelle	
32 4	HC9623	.Ruuvi	Skruv	Screw	Schraube	Vis	
33 1	30303700	.Jousi	Fjäder	Spring	Feder	Ressort	
34 1	33289100	.Letku	Slang	Hose	Schlauch	Tuyau flexible 0	020, L=100
3a	00007000	11	0-#-1	Faul.	Cabal	Carriale atta	
1 2	30337000	Haarukka	Gaffel	Fork	Gabel	Fourchette	
2 2	30337100	Pidin	Klämma	Clamp	Klammer	Agrafe	
3 2	JB1108	Mutteri	Mutter	Nut	Mutter	Ecrou	
4 1	32501100	Vaijeri	Vajer	Cable	Kabel	Câble	
5 1	30203010	Suojakumi	Skyddsgummi	Shield rubber	Schutzgummi	Protection caoutchou	ıc
6 1	32633710	Haarukka	Gaffel	Fork	Gabel	Fourchette	
8 1	JD0408	Aluslevy	Bricka	Washer	Scheibe	Rondelle	
9 1	33131800	Tappi	Тарр	Pin	Stift	Cheville	
10 1	70038300	Suojakumi	Skyddsgummi Mutter	Shield rubber	Schutzgummi	Protection caoutchou	IC
11 1	JB1208					_	
		Mutteri		Nut	Mutter	Ecrou	
12 1	32634000	Luisti	Slid	Slide	Schieber	Coulissement	
13 1	32634000 JE3047	Luisti Sokka	Slid Sprint	Slide Pin	Schieber Splint	Coulissement Goupille	
13 1 14 1	32634000 JE3047 JJ4034	Luisti Sokka Tappi	Slid Sprint Tapp	Slide Pin Pin	Schieber Splint Stift	Coulissement Goupille Cheville	
13 1 14 1 15 1	32634000 JE3047 JJ4034 JD0408	Luisti Sokka Tappi Aluslevy	Slid Sprint Tapp Bricka	Slide Pin Pin Washer	Schieber Splint Stift Scheibe	Coulissement Goupille Cheville Rondelle	
13 1 14 1 15 1 16 1	32634000 JE3047 JJ4034 JD0408 32631400	Luisti Sokka Tappi Aluslevy Vipu	Slid Sprint Tapp Bricka Spak	Slide Pin Pin Washer Lever	Schieber Splint Stift Scheibe Hebel	Coulissement Goupille Cheville Rondelle Levier	
13 1 14 1 15 1 16 1 17 2	32634000 JE3047 JJ4034 JD0408 32631400 LA9208	Luisti Sokka Tappi Aluslevy Vipu Laakeri	Slid Sprint Tapp Bricka Spak Lager	Slide Pin Pin Washer Lever Bearing	Schieber Splint Stift Scheibe Hebel Lager	Coulissement Goupille Cheville Rondelle Levier Roulement	
13 1 14 1 15 1 16 1 17 2 18 4	32634000 JE3047 JJ4034 JD0408 32631400 LA9208 JB1108	Luisti Sokka Tappi Aluslevy Vipu Laakeri Mutteri	Slid Sprint Tapp Bricka Spak Lager Mutter	Slide Pin Pin Washer Lever Bearing Nut	Schieber Splint Stift Scheibe Hebel Lager Mutter	Coulissement Goupille Cheville Rondelle Levier Roulement Ecrou	
13 1 14 1 15 1 16 1 17 2 18 4 19 4	32634000 JE3047 JJ4034 JD0408 32631400 LA9208 JB1108 JD0408	Luisti Sokka Tappi Aluslevy Vipu Laakeri Mutteri Aluslevy	Slid Sprint Tapp Bricka Spak Lager Mutter Bricka	Slide Pin Pin Washer Lever Bearing Nut Washer	Schieber Splint Stift Scheibe Hebel Lager Mutter Scheibe	Coulissement Goupille Cheville Rondelle Levier Roulement Ecrou Rondelle	
13 1 14 1 15 1 16 1 17 2 18 4 19 4 20 4	32634000 JE3047 JJ4034 JD0408 32631400 LA9208 JB1108 JD0408 HA6325	Luisti Sokka Tappi Aluslevy Vipu Laakeri Mutteri Aluslevy Ruuvi	Slid Sprint Tapp Bricka Spak Lager Mutter Bricka Skruv	Slide Pin Pin Washer Lever Bearing Nut Washer Screw	Schieber Splint Stift Scheibe Hebel Lager Mutter Scheibe Schraube	Coulissement Goupille Cheville Rondelle Levier Roulement Ecrou Rondelle Vis	
13 1 14 1 15 1 16 1 17 2 18 4 19 4 20 4 22 1	32634000 JE3047 JJ4034 JD0408 32631400 LA9208 JB1108 JD0408 HA6325 32631110	Luisti Sokka Tappi Aluslevy Vipu Laakeri Mutteri Aluslevy Ruuvi Korvake	Slid Sprint Tapp Bricka Spak Lager Mutter Bricka Skruv Öra	Slide Pin Pin Washer Lever Bearing Nut Washer Screw Lug	Schieber Splint Stift Scheibe Hebel Lager Mutter Scheibe Schraube Ohr	Coulissement Goupille Cheville Rondelle Levier Roulement Ecrou Rondelle Vis Support	
13 1 14 1 15 1 16 1 17 2 18 4 19 4 20 4 22 1 23 1	32634000 JE3047 JJ4034 JD0408 32631400 LA9208 JB1108 JD0408 HA6325 32631110 JB1106	Luisti Sokka Tappi Aluslevy Vipu Laakeri Mutteri Aluslevy Ruuvi Korvake Mutteri	Slid Sprint Tapp Bricka Spak Lager Mutter Bricka Skruv Öra Mutter	Slide Pin Pin Washer Lever Bearing Nut Washer Screw Lug Nut	Schieber Splint Stift Scheibe Hebel Lager Mutter Scheibe Schraube Ohr Mutter	Coulissement Goupille Cheville Rondelle Levier Roulement Ecrou Rondelle Vis Support Ecrou	
13 1 14 1 15 1 16 1 17 2 18 4 19 4 20 4 22 1	32634000 JE3047 JJ4034 JD0408 32631400 LA9208 JB1108 JD0408 HA6325 32631110	Luisti Sokka Tappi Aluslevy Vipu Laakeri Mutteri Aluslevy Ruuvi Korvake	Slid Sprint Tapp Bricka Spak Lager Mutter Bricka Skruv Öra	Slide Pin Pin Washer Lever Bearing Nut Washer Screw Lug	Schieber Splint Stift Scheibe Hebel Lager Mutter Scheibe Schraube Ohr	Coulissement Goupille Cheville Rondelle Levier Roulement Ecrou Rondelle Vis Support	
13 1 14 1 15 1 16 1 17 2 18 4 19 4 20 4 22 1 23 1	32634000 JE3047 JJ4034 JD0408 32631400 LA9208 JB1108 JD0408 HA6325 32631110 JB1106	Luisti Sokka Tappi Aluslevy Vipu Laakeri Mutteri Aluslevy Ruuvi Korvake Mutteri	Slid Sprint Tapp Bricka Spak Lager Mutter Bricka Skruv Öra Mutter	Slide Pin Pin Washer Lever Bearing Nut Washer Screw Lug Nut	Schieber Splint Stift Scheibe Hebel Lager Mutter Scheibe Schraube Ohr Mutter	Coulissement Goupille Cheville Rondelle Levier Roulement Ecrou Rondelle Vis Support Ecrou	
13 1 14 1 15 1 16 1 17 2 18 4 19 4 20 4 22 1 23 1 24 1	32634000 JE3047 JJ4034 JD0408 32631400 LA9208 JB1108 JD0408 HA6325 32631110 JB1106 32631700	Luisti Sokka Tappi Aluslevy Vipu Laakeri Mutteri Aluslevy Ruuvi Korvake Mutteri Akseli	Slid Sprint Tapp Bricka Spak Lager Mutter Bricka Skruv Öra Mutter Axel	Slide Pin Pin Washer Lever Bearing Nut Washer Screw Lug Nut Shaft	Schieber Splint Stift Scheibe Hebel Lager Mutter Scheibe Schraube Ohr Mutter Achse	Coulissement Goupille Cheville Rondelle Levier Roulement Ecrou Rondelle Vis Support Ecrou Arbre	
13 1 14 1 15 1 16 1 17 2 18 4 19 4 20 4 22 1 23 1 24 1 25 1	32634000 JE3047 JJ4034 JD0408 32631400 LA9208 JB1108 JD0408 HA6325 32631110 JB1106 32631700 HA9224	Luisti Sokka Tappi Aluslevy Vipu Laakeri Mutteri Aluslevy Ruuvi Korvake Mutteri Akseli Ruuvi	Slid Sprint Tapp Bricka Spak Lager Mutter Bricka Skruv Öra Mutter Axel Skruv	Slide Pin Pin Washer Lever Bearing Nut Washer Screw Lug Nut Shaft Screw	Schieber Splint Stift Scheibe Hebel Lager Mutter Scheibe Schraube Ohr Mutter Achse Schraube	Coulissement Goupille Cheville Rondelle Levier Roulement Ecrou Rondelle Vis Support Ecrou Arbre Vis Agrafe	ee fig. 4
13 1 14 1 15 1 16 1 17 2 18 4 19 4 20 4 22 1 23 1 24 1 25 1 26 1	32634000 JE3047 JJ4034 JD0408 32631400 LA9208 JB1108 JD0408 HA6325 32631110 JB1106 32631700 HA9224	Luisti Sokka Tappi Aluslevy Vipu Laakeri Mutteri Aluslevy Ruuvi Korvake Mutteri Akseli Ruuvi Pidin	Slid Sprint Tapp Bricka Spak Lager Mutter Bricka Skruv Öra Mutter Axel Skruv Klämma	Slide Pin Pin Washer Lever Bearing Nut Washer Screw Lug Nut Shaft Screw Clamp	Schieber Splint Stift Scheibe Hebel Lager Mutter Scheibe Schraube Ohr Mutter Achse Schraube Klammer	Coulissement Goupille Cheville Rondelle Levier Roulement Ecrou Rondelle Vis Support Ecrou Arbre Vis Agrafe	ee fig. 4

REVERSE DRIVE CONTROL, fitting instruction

27.11.1996 14.03.2000

Model (not HiTech) 6000-8750 Code

Page

69.3 | 18(22)

4								
	1	32498700	Takakotelo	Bakhus	Rearhousing	Rückgehäuse	Châssis arrière	
1	1	32498810	.Runko	Ram	Frame	Rahmen	Châssis	
2	7	HA6325	.Ruuvi	Skruv	Screw	Schraube	Vis	
3	15	JD0408	.Aluslevy	Bricka	Washer	Scheibe	Rondelle	
4	8	JB1108	Mutteri	Mutter	Nut	Mutter	Ecrou	
6	1	32625900	.Kumi	Gummi	Rubber	Gummi	Caoutchouc	
7	1	32624400	.Levy	Platta	Plate	Platte	Plaque	
8	5	HA6313	.Ruuvi	Skruv	Screw	Schraube	Vis	
9	4	32499400	.Tulppa	Plugg	Plug	Stopfen	Bouchon	
10	3	32544000	.Tiiviste	Tätning	Gasket	Dichtung	Joint	
11	1	32499000	.Poljin	Pedal	Pedal	Pedal	Pédale	
12	1	70018600	.Jousi	Fjäder	Spring	Feder	Ressort	
13	4	32499300	.Laakerilevy	Lagerplatta	Bearing plate	Lagerplatte	Plaque de rouleme	ent
14	2	32499100	.Akseli	Axel	Shaft	Achse	Arbre	
15	4	70038200	.Laakeri	Lager	Bearing	Lager	Roulement	
16	2	32499200	.Latta	Platt	Flat	Platt	Anneau	
17	2	JD0408	.Aluslevy	Bricka	Washer	Scheibe	Rondelle	
18	2	HA6323	.Ruuvi	Skruv	Screw	Schraube	Vis	
19	1	32498910	.Poljin	Pedal	Pedal	Pedal	Pédale	
	1	33034400	Suojus	Skydd	Shield	Schutz	Protection	
21	4	HD9005	Ruuvi	Skruv	Screw	Schraube	Vis	
22	4	625515	Aluslevy	Bricka	Washer	Scheibe	Rondelle	
23	4	32643900	Kumialuslaatta		Rubber washer		Rond. de caoutch.	
24	1	33034300	Suojus	Skydd	Shield	Schutz	Protection	
25	2	30637000	Vaimennin	Dämpare	Damper	Dämpfer	Amortisseur	
26	1	33133500	Levy	Platta	Plate	Platte	Plaque	
27 28	1	HD9035 33049100	Ruuvi Kumitiiviste	Skruv	Screw	Schraube	Vis	
29	2	33048600	Kumitiiviste	Gummitätning Gummitätning	Rubber seal Rubber seal		Joint de caoutch. Joint de caoutch.	L=515
30	1	33048500	Kumitiiviste	Gummitätning	Rubber seal		Joint de caoutch.	L-313
31	1	33049000	Kumitiiviste	Gummitätning	Rubber seal		Joint de caoutch.	L=640
32	1	33133600	Levy	Platta	Plate	Platte	Plaque	L-040
33	1	32061310	Lukitsin	Låsplatta	Lock plate	Verrieg.platte	Frein	(BALL-HITCH)
34	2	33532900	Kansi	Lock	Cover	Deckel	Couvercle	(5/122 1111011)
35	2	33533000	Tiiviste	Tätning	Gasket	Dichtung	Joint	
36	8	JD04060	Aluslevy	Bricka	Washer	Scheibe	Rondelle	
37	8	HA9223	Ruuvi	Skruv	Screw	Schraube	Vis	
38	1	33532800	Reunalista	Kantlist	Edge strip	Kantenleiste	Bordure	
					5 1			
4a								
5	1	30337000	Haarukka	Gaffel	Fork	Gabel	Fourchette	
6	1	30337100	Pidin	Klämma	Clamp	Klammer	Agrafe	
7	1	30203010	Suojakumi	Skyddsgummi	Shield rubber	Schutzgummi	Prot. caoutchouc	
8	1	JB1108	Mutteri	Mutter	Nut	Mutter	Ecrou	
9	1	32841800	Vaijeri	Vajer	Cable	Kabel	Câble	
10	_	00000100	Poljin	Pedal	Pedal	Pedal	Pédale	see fig.4
11	1	32809100	Holkki	Hylsa	Sleeve	Hülse	Manchon	
12	1	32683200	Jatkokappale	Förlängning	Extension	Verl.stück	Extension	

REVERSE DRIVE CONTROL, fitting instruction

27.11.1996 14.03.2000

Model (not HiTech) 6000-8750 Code

Page

69.3 19(22)

_								
5a	1	32279500	Takah.laitteet	Utr.vändb. förarplats	Back driving system	Rückfahr – einrichtung.	Com. du poste de conduite inver	6000-6800 sée
	1	32875800	Takah.laitteet	Utr.vändb.	Back driving	Rückfahr-	Com. du poste	6000-6800, with direction valve
	1	32534600	Takah.laitteet	Utr.vändb.	Back driving	Rückfahr-	Com. du poste	6900-8750
	1	32875900	Takah.laitteet	Utr.vändb.	Back driving	Rückfahr-	Com. du poste	6900-8750 with direction valve
1	1	30302830	Peitelevy	Täckplatta	Covering plate	Deckplatte	Couverture	VALTRA
2	1	655160	Kiilarengas	Kilring	Key ring	Keilring	Anneau de blocage	
3	1	JB8907	Mutteri	Mutter	Nut	Mutter	Ecrou	_
4	1	JD0416	Aluslevy	Bricka	Washer	Scheibe	Rondelle	
	1	32233400	Ohjauspyörä	Ratt	Steering wheel		Volant	
5	1	32623600	.Ohjauspyörä	Ratt	Steering wheel		Volant	No stored
6	1	32623700	.Nuppi	Knopp	Knob	Knopf	Pommeau	
7	1	32485500	Akseli	Axel	Shaft	Achse	Arbre	
8	1	GB8005	Kiila	Kil	Key	Keil	Clef	
9	1	32624200	Suojus	Skydd	Shield	Schutz	Protection	
10	1	32485400	Ohjauspylväs	Rattstam	Steering column	nLenksäule	Colonne de direction	on
11	4	HN6800	Ruuvi	Skruv	Screw	Schraube	Vis	
12	1	32485700	.Таррі	Тарр	Pin	Stift	Cheville	
13	1	31937900	Nuppi	Knopp	Knob	Knopf	Pommeau	
14		JE8102	Sokka	Sprint	Pin	Splint	Goupille	
	1	32624100	Kehys	Ram	Frame	Rahmen	Cadre	
	1	32232810	Jousi	Fjäder	Spring	Feder	Ressort	
17		JE9057	Sokka	Sprint	Pin .	Splint	Goupille	
	4	31750900	Lanka	Tråd	Thread	Draht	Filetage	
18		70024400	Nivel	Led	Joint	Gelenk	Joint	
	1	32485800	Akseli	Axel	Shaft	Achse	Arbre	
20	2	70033700	Ruuvi	Skruv	Screw	Schraube	Vis	
21	4	HA9234	Ruuvi	Skruv	Screw	Schraube	Vis	
22		676370	Aluslevy	Bricka	Washer	Scheibe	Rondelle	
	1 1	32485300	Runko	Ram	Frame	Rahmen	Châssis	
	1	32995500 32489200	Ohjausventtiili Suojus	Styrventil Skydd	Steering valve Shield	Steuerventil Schutz	Valve de direction Protection	
26		HA8326	Suojus Ruuvi	Skruv	Screw	Schraube	Vis	
27		625510	Aluslevy	Bricka	Washer	Scheibe	Rondelle	
28		30350600		Vibr.dämpare		Vibr.dämpfer		
29		30350700	Holkki	Hylsa	Sleeve	Hülse	Manchon	
	1	000007.00	Runko	Ram	Frame	Rahmen	Châssis	see fig. 4
	4	JD0410	Aluslevy	Bricka	Washer	Scheibe	Rondelle	occ ng
38		KG1409	Pidätinrengas	Låsring	Circlip	Sicherungsring		
39		32510600	Laakeri	Lager	Bearing	Lager	Roulement	
	1	KG1020	Pidätinrengas	Låsring	Circlip	Sicherungsring	Circlip	
	1	LA9208	Laakeri	Lager	Bearing	Lager	Roulement	
42		JD0404	Aluslevy	Bricka	Washer	Scheibe	Rondelle	
	1	HN6800	Ruuvi	Skruv	Screw	Schraube	Vis	
44	4	JB1108	Mutteri	Mutter	Nut	Mutter	Ecrou	

REVERSE DRIVE CONTROL, fitting instruction

27.11.1996 14.03.2000

Model (not HiTech) 6000-8750 Code

Page

6

-4	α	\mathbf{n}	7
 -1		,,,	_

69.3 20(22)

								F13207
1	1	GS9441	Liitin	Nippel	Union	Verbindung	Raccord	
	1	KH4934	.O-rengas	O_ring	O-ring	O-ring	Joint torique	
2	4	GS9265	Liitin	Nippel	Union	Verbindung	Raccord	
	1	KH9032	.O-rengas	O-ring	O-ring	O-ring	Joint torique	
3	2	32625310	Liitin	Nippel	Union	Verbindung	Raccord	
5	2	KH4946	O-rengas	O-ring	O-ring	O-ring	Joint torique	
6	1	32625500	Putki	Rör	Pipe	Rohr	Tuyau	
7	1	32625700	Putki	Rör	Pipe	Rohr	Tuyau	
8	1	32625600	Putki	Rör	Pipe	Rohr	Tuyau	
9	1	32625400	Putki	Rör	Pipe	Rohr	Tuyau	
10	1	32625800	Putki	Rör	Pipe	Rohr	Tuyau	
	1	32683300	Letku	Slang	Hose	Schlauch	Tuyau flexible	
	2	32625000	Letku	Slang	Hose	Schlauch	Tuyau flexible	
	1	32625000	Letku	Slang	Hose	Schlauch	Tuyau flexible	
	1	32624700	Letku	Slang	Hose	Schlauch	Tuyau flexible	
	1	32625210	Letku	Slang	Hose	Schlauch	Tuyau flexible	
18	3	GS9364	Liitin	Nippel	Union	Verbindung	Raccord	
	3	KH9030	.O-rengas	O-ring	O-ring	O-ring	Joint torique	
	1	32624600	Vaihtovastaven		Skyttelventil	Shuttle valve	Richtungsventil	Valve d'inversion
	2	HA6318	Ruuvi	Skruv	Screw	Schraube	Vis	
	2	JB8903	Mutteri	Mutter	Nut	Mutter	Ecrou	
	1	32624500	Kiinnitin	Fästdon	Fastener	Halter	Fixation	
	1	HA8328	Ruuvi	Skruv	Screw	Schraube	Vis	
	1	JB8904	Mutteri	Mutter	Nut	Mutter	Ecrou	
	3	SA1903	Side	Band	Band	Binde	Bande	
	1	GS9456	Liitin	Nippel	Union	Verbindung	Raccord	
	4	GS9277	Liitin	Nippel	Union	Verbindung	Raccord	
	1	GS9304	Liitin	Nippel	Union	Verbindung	Raccord	
30	1	GS9460	Liitin	Nippel	Union	Verbindung	Raccord	
01	1	KH9032	.O-rengas	O-ring	O-ring	O – ring	Joint torique	
	1	GS9268	Liitin	Nippel	Union	Verbindung	Raccord	
	2	GS9268 32683400	Liitin Letku	Nippel Slang	Union Hose	Verbindung Schlauch	Raccord	
	1	32732300	Letku	Slang	Hose	Schlauch	Tuyau flexible Tuyau flexible	6000-6800
31	1	32764500	Letku	Slang	Hose	Schlauch	Tuyau flexible	8000-8400
38	1	30917010	Letku	Slang	Hose	Schlauch	Tuyau flexible	6000-6800
30	1	32778600	Letku	Slang	Hose	Schlauch	Tuyau flexible	8000-8400
39	2	GS9272	Liitin	Nippel	Union	Verbindung	Raccord	6000-6400
09	1	GS9272	Liitin	Nippel	Union	Verbindung	Raccord	8000-8400
40	2	GS9325	Liitin	Nippel	Union	Verbindung	Raccord	0000-0400
41	1	GS9347	Liitin	Nippel	Union	Verbindung	Raccord	
71	i	KH9030	.O-rengas	O-ring	O-ring	O-ring	Joint torique	
42	1	GS9394	Liitin	Nippel	Union	Verbindung	Raccord	
	1	KH9030	.O-rengas	O-ring	O-ring	O-ring	Joint torique	
43	1	32624800	Letku	Slang	Hose	Schlauch	Tuyau flexible	
	1	32995500	Ohjausventtiili	Styrventil	Steering valve	Steuerventil	Valve de direction	
	i	32778400	Letku	Slang	Hose	Schlauch	Tuyau flexible	
	1	32778500	Letku	Slang	Hose	Schlauch	Tuyau flexible	
	1	32263740	Putki	Rör	Pipe	Rohr	Tuyau	
	i	30992000	Levy	Platta	Plate	Platte	Plaque	
	2	30145900		s Genomföringsri		Inlet ring	Durchführungsring	Anneau d'entrée
	4	HA6306	Ruuvi	Skruv	Screw	Schraube	Vis	,
	4	JD0405	Aluslevy	Bricka	Washer	Scheibe	Rondelle	
	4	JB9926	Mutteri	Mutter	Nut	Mutter	Ecrou	
	1	32745300	Tiiviste	Tätning	Gasket	Dichtung	Joint	
	1	32875700	Levy	Platta	Plate	Platte	Plaque	
			•				•	

1066

REVERSE DRIVE CONTROL, fitting instruction 27.11.1996 | Model (not HiTech) | 6000 - 8750 | 69.3 | 21(22)

6a							
1	1	GS9441	Liitin	Nippel	Union	Verbindung	Raccord
2	7	GS9265	Liitin	Nippel	Union	Verbindung	Raccord
_	1	KH9032	O-rengas	O-ring	O-ring	O-ring	Joint torique
3	2	32625310	Liitin	Nippel	Union	Verbindung	Raccord
4	2	KH4946	O-rengas	O-ring	O-ring	O-ring	Joint torique
5	1	32625500	Putki	Rör	Pipe	Rohr	Tuyau
6	1	32625700	Putki	Rör	Pipe	Rohr	Tuyau
7	1	32625600	Putki	Rör	Pipe	Rohr	Tuyau
8	1	32625400	Putki	Rör	Pipe	Rohr	Tuyau
9	1	32625800	Putki	Rör	Pipe	Rohr	Tuyau
10	1	GS9456	Liitin	Nippel	Union	Verbindung	Raccord
11	4	GS9277	Liitin	Nippel	Union	Verbindung	Raccord
12	1	32683300	Letku	Slang	Hose	Schlauch	Tuyau flexible
13	2	32625000	Letku	Slang	Hose	Schlauch	Tuyau flexible
14	1	32625000	Letku	Slang	Hose	Schlauch	Tuyau flexible
15	1	32624800	Letku	Slang	Hose	Schlauch	Tuyau flexible
16	1	33651000	Letku	Slang	Hose	Schlauch	Tuyau flexible
17	1	GS9268	Liitin	Nippel	Union	Verbindung	Raccord
18	1	GS9304	Liitin	Nippel	Union	Verbindung	Raccord
19	1	GS9460	Liitin	Nippel	Union	Verbindung	Raccord
	1	KH9032	.O-rengas	O-ring	O-ring	O-ring	Joint torique
20	1	32875700	Levy	Platta	Plate	Platte	Plaque
21	3	SA1903	Side	Band	Band	Binde	Bande
22	1	32624600	Vaihtov.venttiili	Skyttelventil	Shuttle valve	Richtungsventil	Valve d'inversion
23	2	HA6318	Ruuvi	Skruv	Screw	Schraube	Vis
24	2	JB8903	Mutteri	Mutter	Nut	Mutter	Ecrou
25	1	GS9347	Liitin	Nippel	Union	Verbindung	Raccord
	1	KH9030	.O-rengas	O-ring	O-ring	O-ring	Joint torique
26	2	GS9394	Liitin	Nippel	Union	Verbindung	Raccord
	3	KH9030	O-rengas	O-ring	O-ring	O-ring	Joint torique
28	1	33212600	Letku	Slang	Hose	Schlauch	Tuyau flexible
29	1	HA8329	Ruuvi	Skruv	Screw	Schraube	Vis
30	1	JB8904	Mutteri	Mutter	Nut	Mutter	Ecrou
31	1	32624510	Kiinnitin	Fästdon	Fastener	Halter	Fixation
32	1	GS9276	Liitin	Nippel	Union	Verbindung	Raccord
33	1	33212700	Letku	Slang	Hose	Schlauch	Tuyau flexible
34	1	32778400	Letku	Slang	Hose	Schlauch	Tuyau flexible
35	1	32764500	Letku	Slang	Hose	Schlauch	Tuyau flexible
36	1	32778600	Letku	Slang	Hose	Schlauch	Tuyau flexible
37	2	GS9325	Liitin	Nippel	Union	Verbindung	Raccord
38	2	GS9272	Liitin	Nippel	Union	Verbindung	Raccord
39	1	32625000	Letku	Slang	Hose	Schlauch	Tuyau flexible
40	1	32624800	Letku	Slang	Hose	Schlauch	Tuyau flexible

	RE\	/ERSE DR	IVE CONTRO	L, fitting instr	uction	27.11.1996	Model (not HiTech)	Code	Page
						14.03.2000	6000-8750	69.3	22(22
6b									
39	1	32834500	Letku	Slang	Hose	Schlauch	Tuyau flexible	*	
40	1	32834200	Letku	Slang	Hose	Schlauch	Tuyau flexible	*	
41	4	GS9329	Liitin	Nippel	Union	Verbindung	Raccord		
43	1	32800200	Venttiili	Ventil	Valve	Ventil	Soupape	*	
	1	32875200	.Kela	Spole	Coil	Spule	Inducteur	*	
	1	32875100	.Kara	Spindel	Spindle	Spindel	Axe	*	
	1	32875300	.Pesä	Hus	Housing	Gehäuse	Carter	*	
44	1	32841700	Levy	Platta	Plate	Platte	Plaque	*	
45	2	HA6318	Ruuvi	Skruv	Screw	Schraube	Vis	*	
46	2	JD0406	Aluslevy	Bricka	Washer	Scheibe	Rondelle	*	
47	2	JB8903	Mutteri	Mutter	Nut	Mutter	Ecrou	*	
48	1	34045300	Runko	Ram	Frame	Rahmen	Carcasse	*	
55		32995500	Ohjausventtiili	Styrventil	Steering valve	Steuerventil	Valve de direction	1	
56 *	1	684690	Rajakytkin	Gränsbrytare	Limit switch	Grenzschalter	Interrupteur limita	ition	
57	1	32876000	Johdin	Ledning	Wire	Leitung	Fil électrique	*	
	1	30145700	Läpivientirenga	U	Inlet ring	Durchf.ring	Anneau d'entrée		
*			Takaohj.estin	Spärr f. Bakstyringen	Lock for revers drive control	e Sperr f. Rück- fahreinrictung			
7									
45	1	32738800	Peili	Spegel	Mirror	Spiegel	Miroir		
46	1	33034500	Teline	Konsol	Bracket	Gestell	Support		
	_			01	•	0.1	\ ' \		

Screw

Schraube

Vis

47 2 HD9049

Ruuvi

Skruv

SHUTTLE LEVER (Twin-Trac), fitting instruction

25,09,1997

Model

Number

Page

15.11.1997 | 6000 – 8750

69.4

1 (4)

Shuttle lever (Twin Trac) 33494400

- Remove the RH side rear wheel, mudguard service cover and ventilation filter with its pipe. Disconnect and turn to one side hydraulic hoses.
 Plug the hoses and nipples. Remove the lever console side panel, upper panel, remove the AC/ACD control unit rubber band and the relay fastening bracket.
- Measure positions of protective rubber 6 and screw holes, see picture A.1.
- Measure and make hole onto the cab panel, see picture B.
- Measure fastening holes for fastener 1 onto the cab wall on the RH mudguard side.
 Try to make an accurate measurement. Use the fastener as a pattern. Drill four Ø 8 holes, see drawing A. NOTE! Be careful not to damage the wires when drilling.
- Fit lever 10 onto the fastener 1, place washer 13 and nut 14 (without play). Turn the lever straight.
- Try the fastener with the lever and an intermediate rubber piece. Check that the lever is in the middle of the hole. If not, loosen and adjust the lever.
- Fit the fastener together with the lever and protective rubber 6 (the intermediate piece 5 is fitted between the cab wall and the fastener) with screw 2, washer 3 and lock nut 4.
 The protective rubber is fitted from under with
 - The protective rubber is fitted from under with screw 8, washer 7 and lock nut 9.
- Fit the lever knob 20 together with push buttons (the button with red wire is fitted against the mudguard) onto the lever 10 with screws 21, and nut 22. Pull the wires through the lever tube. Fit the protective plastic and the round connector 32. The yellow wires (2 pcs) are connected together to the round connector.
 - Fit the connector housing **30** (the wires are connected to the corr. coloured wires of connector 29, except that the green wire corr. to the connector 29 brown wire). Fit the cover on the knob.
- Remove the existing shuttle lever.
 Weld the lever extension 19 to the removed shuttle lever, see drawing C. Refit the lever.
- Fit the joint bar 18 and adjust the gear lever. Lock with the nut.
- Make Ø 12,5 hole for lead in rubber 33 through the front panel, see drawing D.
 Fit the lead in rubber and draw wire loom 25 through it.

SHUTTLE LEVER (Twin-Trac), fitting instruction	25.09.1997	Model	Number	Page
	15.11.1997	6000-8750	69.4	2 (4)

- Fit the round connector 32 onto red, yellow and blue wires.
 - Put the wires with the round connector into the connector housing **33** and connect it to connector housing "X23".
- HiShift: Disconnect the black and green wires of the foremost shuttle lever from connector "S45".
 Connect black and brown wires of the wire loom to corr. coloured wires of the foremost shuttle lever to the connector with aid of the round connector 32.
- Tie the wires.
- Check the electrical functions.
- Adjust the relay bracket according to drawing E.
- Turn the ventilation filter backwards (turn the Tunion). Clearance must be left on the cab side.
 Refit the hydraulic hoses.
- Grease the gear lever.
 Check that the gear lever and the joint bar can move freely.
- Refit all removed parts.


	1	33494400	Suunnanvaihtovipu	Fram-backspak Fäste	Forward – reverse gear lever	Twin-Trac
1	1	70157100	.Kiinnitin		Support	Movoe
2	4		.Ruuvi .Aluslaatta	Skruv Bricka	Screw Washer	M8x25
3	4 4		.Alusiaalla .Lukitusmutteri	Låsmutter		8x19x1,5 M8
4		70457500			Locking nut	IVIO
5	1	70157500	.Kumivälipala	Gummimellanlägg	Rubber	
6	1	612880	.Suojakumi	Damask	Rubber shield	
7	2	960139	.Aluslaatta	Bricka	Washer	Mo. 40
8	2	955272	.Ruuvi	Skruv	Screw	M6x19
9	2		.Lukitusmutteri	Låsmutter	Locking nut	M6
10	1	70157200	.Vaihdevipu	Växelspak	Gear lever	
11	2	30208600	.Holkki (musta)	Bussning (svart)	Bushing (black)	
12	1	GG0088	.Voidenippa	Smörjnippel	Greasing nipple	
13	1	29869	.Aluslaatta	Bricka	Washer	16,5x38x6
14	1	963121	.Lukitusmutteri	Låsmutter		M16x1,5
15	2	959081	.Kulmakuulanivel	Vinkelkulled	Angle joint	
16	2	971083	.Lukitusmutteri	Låsmutter	Locking nut	M10
17	2		.Mutteri	Mutter	Nut	M10
18	1	70157300	.Niveltanko	Länkstång	Joint rod	
19	1	70157400	.Pidennyskappale	Hävarmsförlängare	Lengthening piece	
20	1	33319500	.Vivun nuppi	Spakknopp	Knob	
21	2	HE6984	.Ruuvi	Skruv	Screw	M5
22	2	JB1105	.Mutteri	Mutter	Nut	M5
23	1		.Suojakansi	Skyddslock	Lock	
24	2	948210	.Johdinside	Buntband	Band	
25	1		.Johdinsarja	Kabelknippe	Wiring harness	
26	1	33269700	.Johdin	Kabel	Wire	
27	1	32908300	.Nappi	Knopp	Button	
28	1	32948400	.Painonapit	Tryckknappar	Button	
29	1	SA1775	.Liitinkotelo	Skarvhus	Connector housing	
_	5	SA1785	.Liitin	Anslutning	Pin	
30	1	SA1774	.Liitinkotelo	Skarvhus	Connector housing	
32	10	SA1776	.Liitin	Anslutning	Pin	
33	1	SA1787	.Liitinkotelo	Skarvhus	Connector housing	
34	1	32643500	.Läpivientikumi	Skyddsbussning	Rubber	
35	1		.Suojaputki	Skyddshölje	Shield	
	-		-)	,		

Model

69.4

Number Page

3(4)

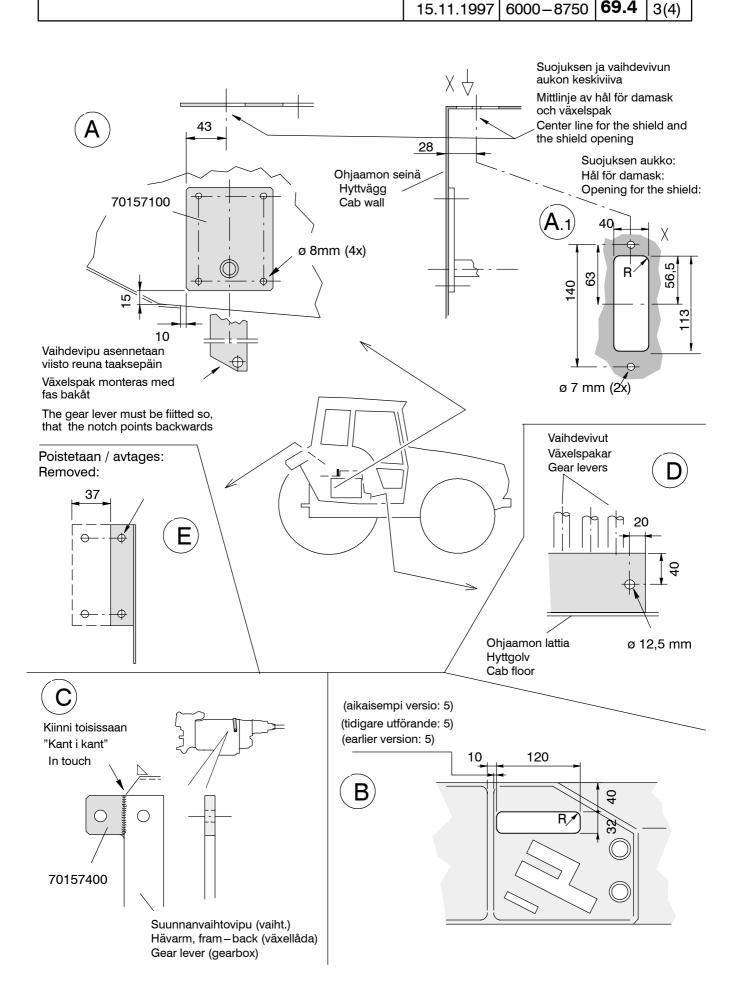

Model

6000-8750 69.4

Number

Page 4(4)

15.11.1997


(0)00 "S45" (HiShift) 32 musta/svart black vihreä/grön/green 27 ruskea/brun/brown X23 33 32 23 (B)) 20 28 34 28 [9] (2) 21 22 sin./blå kelt./gul yellow 26 blue 25 pun./röd red 30 24 29 10 30 35 pun./ röd / red-> pun./ röd / red kelt./ gul / yellow-> kelt./ gul / yellow 13 sin. / blå / blue-> sin. / blå / blue 19 musta / svart / black -> musta / svart / black vihreä / grön / green -> ruskea / brun / brown 2 12 16 18 15 17

	Model	No	Page
$\overline{}$	6900 (8000R	h	
	100000 (000011	V	
24.02.1999	8050 <u></u> 8950	69.5	1(17)
ZT.UZ. 1000	0000 0000	00.0	1 (1 <i>1)</i>

Air suspension of front axle 33135100 The suspension requires also a pressure reservoir kit and the compressor kit (if not fitted).

Pressure reservoir kit	33501100
Compressor kit (6900-8400)	32960200
Compressor kit (8450-8750)	33273600
Spacer (s=10, front loader, Ålö)	33145900
Spacer (s=30)	33145800

- Can be fitted on tractors with 6-cylinder engines, which have a short wheel base (2558 mm), all front axle types.
- Not on tractors with the front lift.
- Other options must be observed during fitting.
- The suspension functions with the aid of pressure air. The suspension is adjusted automatically according to the ftont axle loading. With the air suspension is obtained very sturdy and pleasant driving properties when using different implement.

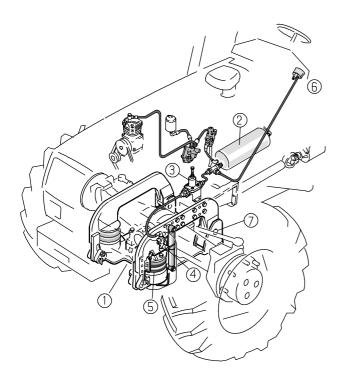

- 1) Suspension frame parts
- 2) Pressure reservoir
- 3) Overflow valve
- 4) Levelling valve
- 5) Rubber bellows
- 6) Pressure gauge
- 7) Hinge pins

Model 6900(8000R) 69.5 8050 - 8950

No

Page

2(17)

24.02.1999

(Fitting the compressed air equipment (if not fitted): see page 9/17)

Removing the front axle:

- Remove the propeller shaft guard under the tractor. Unbolt the front flange joint of the propeller shaft.
- Disconnect the oil hoses on the steering cylinder. Raise the tractor front end and place sturdy axle stands under the front frame. Remove the front wheel, if needed,
- Fasten the lifting ropes on the axle and unbolt the axle bearing brackets. Lower the axle and remove

Modifications:

- Drill on the front bearing bracket a grease hole so that it is a mirror image to the earlier hole and tap a thread for the nipple (picture A).
- Plug the earlier grease hole, fit the nipple into the new hole.
- Remove an edge from the front bearing bracket by machining it, picture A.1 and check the function.
- Make chamfers onto the oil sump frame, see picture B.
- Fasten the axle onto a new frame, do not tighten the bolts to the final torque. Tighten them just when the propeller shaft is correctly positioned. Ensure, that the bearing brackets are correctly positioned on the axle.

Fastening front axle:

- connect the upper and lower frames, and fasten the bellows and the shock absorbers, see picture E.
- Fasten the complete frame+front axle onto the tractor frame, fit spacers 3 (30 mm) between the tractor and the new frame.


(Spacers 10 mm are available as an option for front loader).


Fasten the propeller shaft (35e).


Adjust the propeller shaft in the middle of the intermediate frame (picture C) by turning the front axle, tighten the front axle attaching bolts (380 Nm).


Reconnect the oil hoses on the steering ram. Fit new shields (38 and 39, picture E).

- Fit the compressed air components, picture F
- Assemble the levelling valve linkage. Basic measurements; see picture **D**.
- Fill the system up to the adjusted pressure. Carry out adjustment.

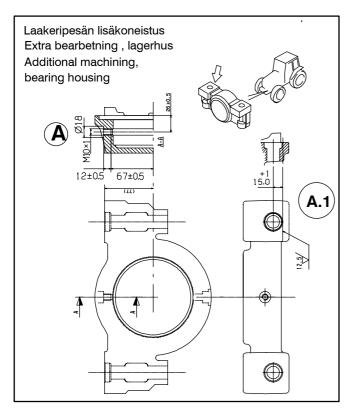

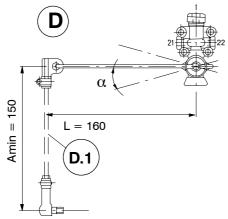

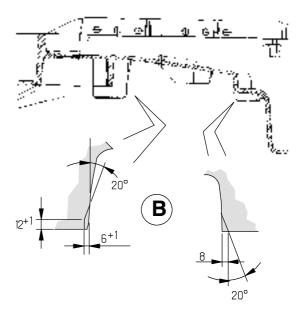

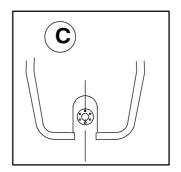

Model 6900(8000R) No Page 6900(8000R) 69.5 4(17)

Adjustment:

- lower the tractor frame into the lowest position against the limiter
- fill the bellows slowly. The valve must stop the lifting movement, when the locking pin holes align in the front part of the suspension frame, picture F.1
- If the tractor rises more, lower the tractor frame and make the vertical link longer.
- check the adjustment again and change the vertical link **D.1** length until the lifting height is correct (locking pins holes align).
- if the closing angle (link near horizontal) is reached before the correct height, shorten the vertical link.


Carry out a test-run

General

Check regularly, that all bolts and nuts are tight.


Maintenance at intervals of 250 running hours

Grease the front axle bearing brackets (nipples, 2 pcs).

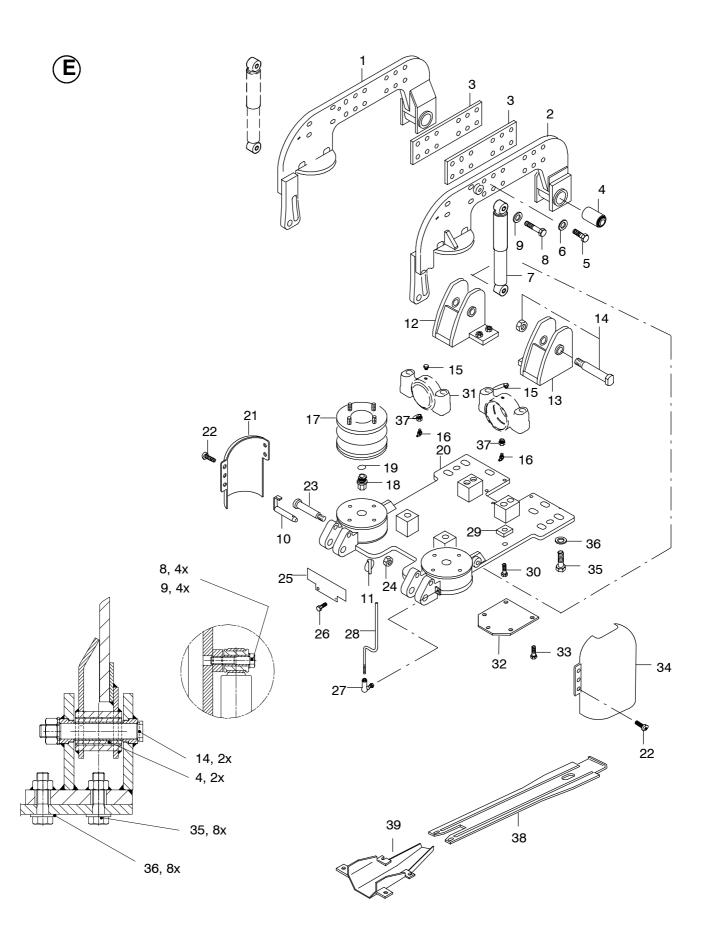

Model No 6900(8000R) 8050-8950 **69.5** 24.02.1999

Page

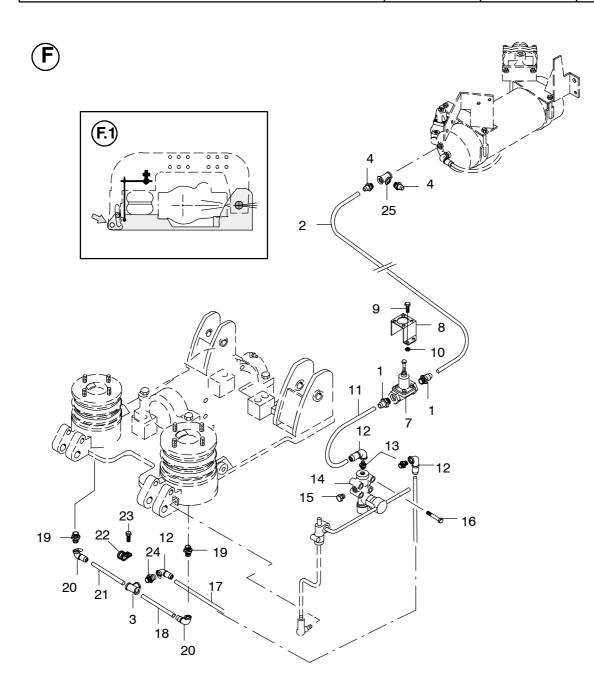

24.02.1999

Model 6900(8000R) 8050-8950 **69.5**

Page

(E	(
	1	33584300	Etuakselin jousitus	Framaxelns fjädking	Suspens. of front ax	leFeder. der Vorderac	hse
1			Jousituksen painei.	Framaxelns tryckluf.	Air system of susp.	D.luft der V.achse	Page 8/17
	1		.Paineilmasäiliö	Tryckluftsbehållare	Air pressure container	Luftdruckbehälter	Page 17/17
	1	33135100	Etuakselin jousitus	Framaxelns fjädkiwg	Suspens. of front ax	leFederung der vorde	era
1	1	33138600	Runko	Ram	Frame	Rahmen	Right
2	1	33138500	Runko	Ram	Frame	Rahmen	Left
3	2	33145800	Levy	Platta	Plate	Platte	s=30
	1	33145900	Levy	Platta	Plate	Platte	s=10, Ålö
4	2	33150100	Holkki	Hylsa	Sleeve	Hülse	
5	16	HA9422	Ruuvi	Skruv	Screw	Schraube	
6	16	JD0420	Aluslevy	Bricka	Washer	Scheibe	21
7	2	33139100	Iskunvaimennin	Stöddämpare	Shock absorber	Stoßdämbfer	
8	4	HA8714	Ruuvi	Skruv	Screw	Schraube	
9	4	JD0416	Aluslevy	Bricka	Washer	Scheibe	17
10	2	32532500	Таррі	Тарр	Pin	Stift	
11	2	JE9301	Sokka	Sprint	Pin	Splint	
12	1	33137700	Kannatin	Hållare	Support	Halter	Right
13	1	33137600	Kannatin	Hållare	Support	Halter	Left
14	2	32746200	Таррі	Тарр	Pin	Stift	
15	2	GR0261	Tulppa	Plugg	Plug	Stopfen	
16	2	GG0087	Voidenippa	Smörjnippel	Grease nipple	Schmiernippel	
17	2	33145500	Palje	Bälg	Bellows	Balg	
18	2	33149700	Holkki	Hylsa	Sleeve	Hülse	
19	2	KH4052	O-rengas	O-ring	O-ring	O-ring	
20	1	33136700	Runko	Ram	Frame	Rahmen	
21	1	33533700	Suojus	Skydd	Shield	Schutz	Right
22	12	HD9046	Ruuvi	Skruv	Screw	Schraube	
23	2	33533400	Таррі	Тарр	Pin	Stift	
24	2	JB1116	Mutteri	Mutter	Nut	Mutter	
25	1	33145400	Levy	Platta	Plate	Platte	
26	2	HA6322	Ruuvi	Skruv	Screw	Schraube	
27	1	YT2045	Nivel	Led	Joint	Gelenk	
28	1	33145100	Tanko	Stång	Rod	Stange	
29	2	33495700	Rajoitin	Begränsare	Limiter	Anschlag	
30	2	HA6334	Ruuvi	Skruv	Screw	Schraube	
31	1	33151300	Laakeripesä	Lagerhus	Bearing housing	Lagerghäuse	
32	1	33526000	Kansi	Lock	Cover	Deckel	
33	5	HA9248	Ruuvi	Skruv	Screw	Schraube	
34	1	33533600	Suojus	Skydd	Shield	Schutz	Left
35	8	HA9211	Ruuvi	Skruv	Screw	Schraube	
36	8	33533500	Aluslevy	Bricka	Washer	Scheibe	
37	2	33139700	Liitin	Nippel	Union	Verbindung	
38	1	33138300	Suojus	Skydd	Shield	Schutz	
39	1	33499800	Suojus	Skydd	Shield	Schutz	

24.02.1999

Model 6900(8000R) 8050-8950 **69.5**

Page

F)	33500800	Jousituksen painei.	Framaxelns tryckluf.	Air system of susp.	Druckluft. der vorde	era
				,	,	.	
1	2	32929900	.Pikaliitin	Snabbkoppling	Quick coupler	Schnellkupplung	
2	1	33650400	.Putki	Rör	Pipe	Rohr	L=1900
	1	33650500	.Putki	Rör	Pipe	Rohr	L=1760
3	1	33501500	.Liitin	Nippel	Union	Verbindung	
4	2	32929800	.Pikaliitin	Snabbkoppling	Quick coupler	Schnellkupplung	
7	1	33145700	.Venttiili	Ventil	Valve	Ventil	
8	1	33500900	.Tuki	Stöd	Support	Stütze	
9	4	HA6322	.Ruuvi	Skruv	Screw	Schraube	
10	4	JB1108	.Mutteri	Mutter	Nut	Mutter	
11	1	33609700	.Putki	Rör	Pipe	Rohr	L=680
12	3	32930210	.Liitin	Nippel	Union	Verbindung	
13	2	33501000	.Pikaliitin	Snabbkoppling	Quick coupler	Schnellkupplung	
14	1	33145600	.Venttiili	Ventil	Valve	Ventil	
15	1	33495500	.Tulppa	Plugg	Plug	Stopfen	
16	4	HA9402	.Ruuvi	Skruv	Screw	Schraube	
17	1	33013300	.Putki	Rör	Pipe	Rohr	L=560
	1	33607600	.Putki	Rör	Pipe	Rohr	L=540
18	1	33607500	.Putki	Rör	Pipe	Rohr	L=265
	1	33018400	.Putki	Rör	Pipe	Rohr	L=200
19	2	33014210	.Pikaliitin	Snabbkoppling	Quick coupler	Schnellkupplung	
20	2	32930210	.Liitin	Nippel	Union	Verbindung	
21	1	33607500	.Putki	Rör	Pipe	Rohr	L=265
	1	33018400	.Putki	Rör	Pipe	Rohr	L=200
22	2	30555700	.Pidin	Klämma	Clamp	Klammer	
23	2	HA6322	.Ruuvi	Skruv	Screw	Schraube	
24	1	32930110	.Pikaliitin	Snabbkoppling	Quick coupler	Schnellkupplung	
25	1	32930510	.Liitin	Nippel	Union	Verbindung	

24.02.1999

Model 6900(8000R) 8050-8950

No

Page

69.5 9(17)

Fitting compressor (6900, 8000, 8000R, 8100, 8400, 8050, 8150): picture **G**

On 6—cyl. engines the compressor is always fitted on the RH side of the engine.

- Remove the engine side plates. Lift up the engine hood plate.
- Fasten an extra belt pulley 35 on the ready-fitted pulley (the same fixing bolts).
 Change alternator shield 38.
- Fit the compressor bracket and the compressor according to the picture at the bolts of the engine timing gear casing.

One return oil hole in the compressor bottom is plugged with plug 11. In the hole at the return hole must be fitted an o-ring 10.

Fit the return pipe parts (13, 14, 27) .

Change the alternator shield 38.

- Remove the plug screw behind the alternator on the cylinder block and fit in it the compressor lubricating oil hose 25 one end (union 50). Fasten the other end to the compressor.
- Assemble the tightener (parts 39 48) into place.
 Fit the belt 37 and tighten it.

NOTE! check:

- alignment of the pulleys
- belt tensioning
- tightness of pipe connections
- Replace the suction pipe intermediate pipe with pipe 5, and fit the suction pipe 4 with its parts into place. Fasten the suction pipe at suitable points.

Fitting compressor (8450 – 8750): picture **H**

Fitting like above shown.
 The alternator shield is not changed.


Fitting the air reservoir (pictures I and I.1):

- Fasten support 6 under two gearbox-to- fuel tank bolts (M16: 270-330Nm, M12: 125 Nm), see picture I.
 - Holder **31** is fastened between foot step bracket and intermediate frame support.
- Fasten bracket 34 under the nuts of the foot step front support.
- Use the reservoir bracket 17 as a pattern and drill holes (2 pcs, 6,2 mm) through the wall on the foot step frame side (picture I).


FRONT	AXI F	AIR SU	ISPENS	NOI	fittina	instr
	, , , , , , ,		O. E. 10	, O . 1,	11111119	

	Model	No	Page
	6900(8000R)		
24.02.1999	8050-8950	69.5	10 (17)

G 6900, 8000, 8000R, 8100, 8400, 8050, 8150

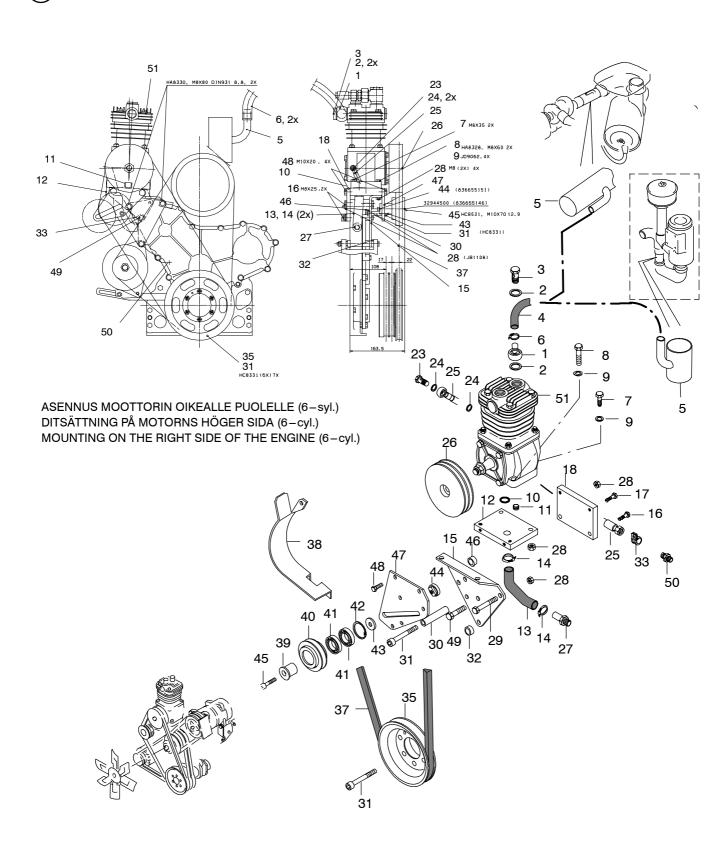

$\bigg/$	Model	No	Page
	6900(8000R)		
04.00.4000	0900(000011)	60 F	
24.02.1999	8050-8950	09.5	11(1 /)

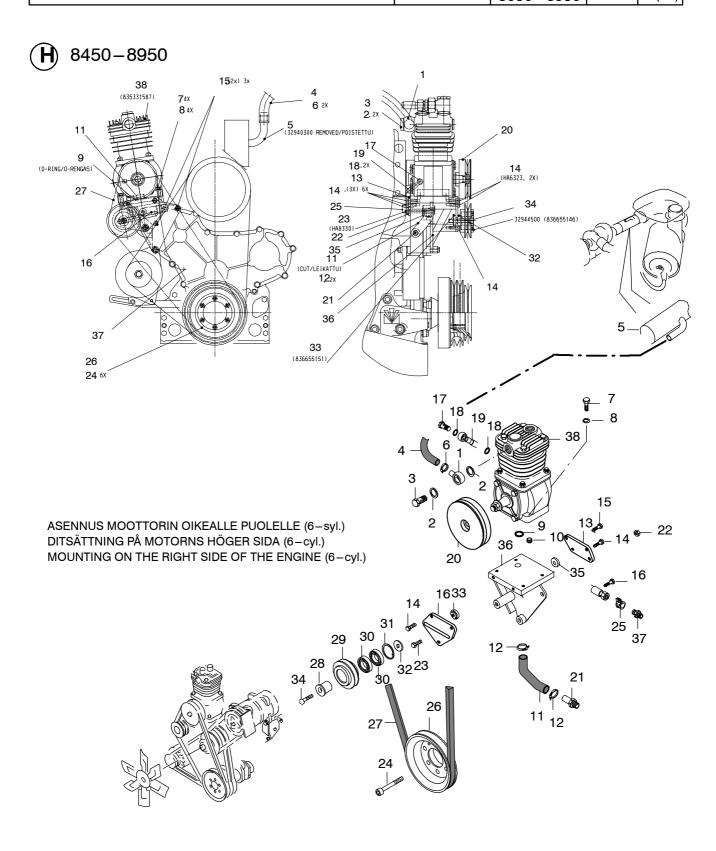

\searrow	
24 02 1999	

Model No 6900(8000R) 8050-8950 **69.5**

No Page

12 (17

 Make a 52 mm hole in the instrument panel for the pressure gauge 37 (dimensions in picture I.1.
 Note! HiTech – models).

Make the hole accurate, since the gauge fixing flange is small.

Pass the gauge pipe (reservoir—gauge) through the hole in the cab front wall (beside the 37 pin connector).

Take current and ground for the gauge from the ind. light for the rear working light switch (S2) (wire no 26 black)

Connect the white earth wire. Fasten the pressure gauge.

Assemble parts according to picture I.
 Pour into reservoir 12A methanol or ethylic alcohol (0.5 l).

With lever **B** can the flow of antifreeze agent cut into the system (if outdoor temperature is over 5_C. In summer the reservoir can be empty, then the lever position is unimportant).

- Pass hose 14 along the tractor left side under the battery and behind the filter and fuel injection pump to the compressor.
- Check the tightness of the system. It must be so tight that pressure does not drop more than 0,15 bar during 10 minutes (2%), when the engine is stopped. When necessary, the leaks must be repaired.

General (picture I.1):

Pressure regulator (picture **A**) adjusts the system pressure to correct. When the pressure rises up to about. 8 bar, allows the regulator air to flow to atmosphere. When the system pressure lowers 0,6 bar, the regulator adjusts the compressed air to flow into the system.

The system pressure can be adjusted by turning the spring **11B** adjusting screw.


Compressed air can also be taken out for auxiliary components (pressure 8 bar) by turning union **10B** into bottom, e.g. to fill tyres. Through this union the system can be filled with auxiliary compressed air, e.g. if the tractor's own compressor is not working. Then the union must not be turned into bottom.


Filter **2B** must be cleaned regularly. Valve **7B** functions also as a relief valve.

Water must be removed from the system daily by pulling or pushing the tap 10 (picture I) under the pressure reservoir.

Model 6900(8000R) 8050-8950 **69.5**

Page 13 (17)

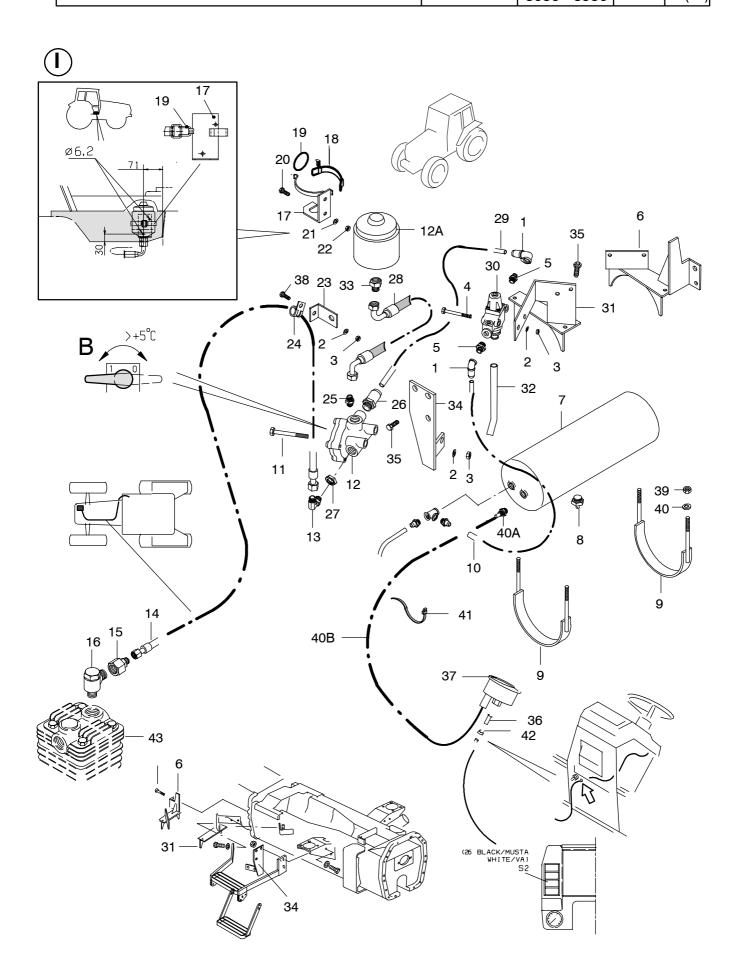

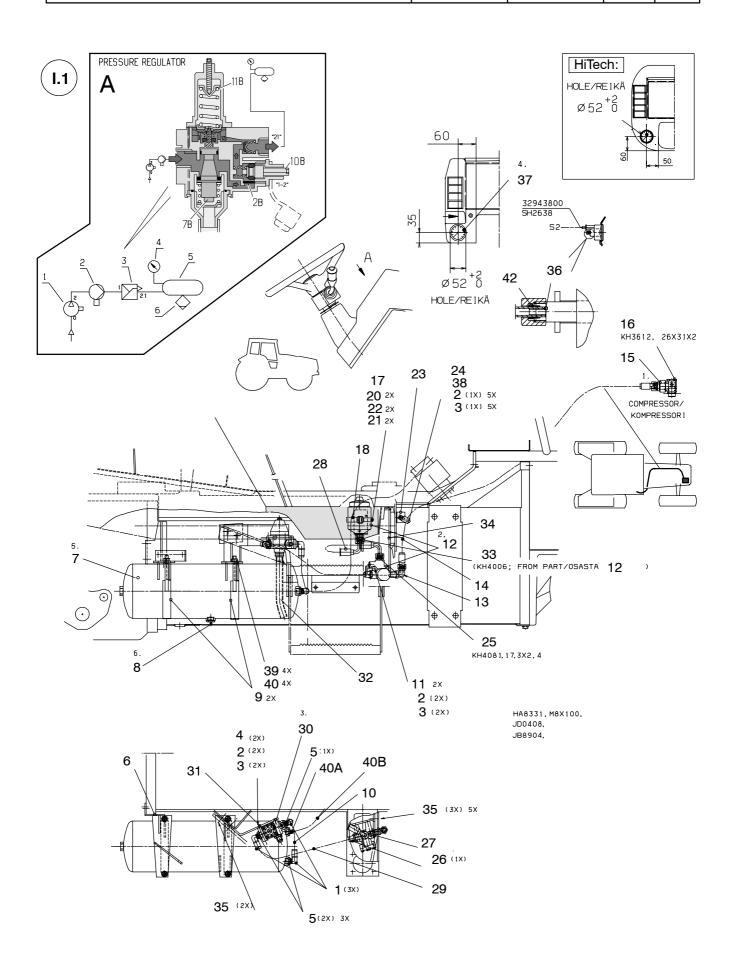

24.02.1999

Model 6900(8000R) 8050-8950 **69.5**

Page

15(17)



G 6900, 8000, 8000R, 8100, 8400, 8050, 8150

	1	32960200	Kompressori	Kompressor	Compressor	Kompreßor	6900, 8000, 8000R, 8100
(1	32960300	Kompressori	Kompressor	Compressor	Kompreßor	*)
1	1	640255222	.Nippa	Nippel	Nipple	Nippel	
2	2	KH3612	.Tiiviste	Tätning	Gasket	Dichtung	
3	1	640435022	.Ruuvi	Skruv	Screw	Schraube	
4	1	836655225	.Letku	Slang	Hose	Schlauch	8000,8100
4	1	836655224	.Letku	Slang	Hose	Schlauch	*
5	1	836855254	.lmuputki	Sugrör	Intake pipe	Saugrohr	8000,8100 *
5	1	33073800	.lmuputki	Sugrör	Intake pipe	Saugrohr	*
6	2	GP3912	.Letkunkiristin	Slangklämma	Hose clip	Schlauchbinder	
7	2	HA9230	.Ruuvi	Skruv	Screw	Schraube	
8	2	HA8328	.Ruuvi	Skruv	Screw	Schraube	
9	4	JD9062	.Aluslaatta	Bricka	Washer	Scheibe	
10	1	614702532	.O-rengas	O-ring	O-ring	O-ring	
11	1	835331738	.Tulppa	Plugg	Plug	Stopfen	
12	1	836136875	.Laatta	Platta	Plate	Platte	
13	1	836136869	.Putki	Rör	Pipe	Rohr	
14	2	GP3918	.Letkunkiristin	Slangklämma	Hose clip	Schlauchbinder	
15	1	836136866	.Levy	Platta	Plate	Platte	
16	2	HA6324	.Ruuvi	Skruv	Screw	Schraube	
17	2	HA9235	.Ruuvi	Skruv	Screw	Schraube	
18	1	836136865	.Laatta	Platta	Plate	Platte	
23	1	640435006	.Ruuvi	Skruv	Screw	Schraube	
24	2	KH3641	.Tiiviste	Tätning	Gasket	Dichtung	
25	1	836847771	.Putki	Rör	Pipe	Rohr	
26	1	836652094	.Kiilahihnapyörä	Kilremskiva	V-belt pulley	Keilriemenrad	
27	1	836136868	.Putki	Rör	Pipe	Rohr	
28 29	4 2	JB1108	.Mutteri	Mutter Skruv	Nut Screw	Mutter Schraube	
30	1	HA8330 836852171	.Ruuvi .Holkki		Sleeve	Hülse	
31	1 7	HC8331	.noikki .Ruuvi	Hylsa Skruv	Screw	Schraube	
32	1	836019387	.Nuuvi .Välipala	Mellanstycke	Intermedeate piece	Zwischenstück	
33	1	602060612	.Kiinnitin	Fästdon	Fastener	Halter	
35	1	836655449	.Kiilahihnapyörä	Kilremskiva	V-belt pulley	Keilriemenrad	*
37	1	684121500	.Kiilahihna	Kilrem	V-belt V-belt	Keilriemen	
38	1	836852402	.Suoja	Skydd	Cover	Schutz	
_	1	32944500	Kiilahihnapyörä	Kilremskiva	V-belt pulley	Keilriemenrad	Assy
39	1	32510410	Akseli	Axel	Shaft	Achse	7 100 y
40	1	32509610	Kiilahihnapyörä	Kilremskiva	V-belt pulley	Keilriemenrad	
41	2	LA1800	Laakeri	Lager	Bearing	Lager	
42	1	KG3052	Varmistinrengas	Låsring	Circlip	Sicherungring	
43	1	836655155	.Välipala	Mellanstycke	Intermedeate piece	Zwischenstück	
44	1	32969100	.Vastakappale	Motstycke	Counterpiece	Gegenstück	
45	1	HC8531	.Ruuvi	Skruv	Screw	Schraube	
46	1	836114846	.Välipala	Mellanstycke	Intermedeate piece	Zwischenstück	
47	1	836852172	.Levy	Platta	Plate	Platte	
48	2	HA9235	.Ruuvi	Skruv	Screw	Schraube	
49	1	HA9400	.Ruuvi	Skruv	Screw	Schraube	
50	1	641086006	.Liitin	Anslutning	Connection	Anschluß	
51	1	32944300	.Kompressori	Kompressor	Compressor	Kompreßor	

^{*= 8400, 8050, 8150}

24.02.1999

Model 6900(8000R) 8050-8950 **69.5**

Page



	1	33273600	Kompressori	Kompressor	Compressor	Kompreßor	Assy
							(8450-8750)
1	1	640255222	.Liitin	Nippel	Union	Verbindung	,
2	2	KH3612	.Tiiviste	Tätning	Gasket	Dichtung	
3	1	640435022	.Ruuvi	Skruv	Screw	Schraube	
4	1	33279400	.Letku	Slang	Hose	Schlauch	
5	1	33073800	.lmuputki	Sugrör	Intake pipe	Saugrohr	
6	2	GP3912	.Letkunkiristin	Slangklämma	Hose clip	Schlauchbinder	
7	4	HA9230	.Ruuvi	Skruv	Screw	Schraube	
8	4	JD9062	.Aluslaatta	Bricka	Washer	Scheibe	
9	1	614702532	.O-rengas	O-ring	O-ring	O-ring	J
10	1	835331738	.Tulppa	Plugg	Plug	Stopfen	
11	1	836136869	.Putki	Rör	Pipe	Rohr	
12	2	GP3918	.Letkunkiristin	Slangklämma	Hose clip	Schlauchbinder	
13	1	836338193	.Levy	Platta	Plate	Platte	
14	6	HA6323	.Ruuvi	Skruv	Screw	Schraube	
15	2	HA8330	.Ruuvi	Skruv	Screw	Schraube	
16	1	836338192	.Kiinnityslevy	Fästplåt	Mounting plate	Befestigungsplatte	
17	1	640435006	.Ruuvi	Skruv	Screw	Schraube	
18	2	KH3641	.Tiiviste	Tätning	Gasket	Dichtung	
19	1	836847771	.Putki	Rör	Pipe	Rohr	T
20	1	836338194	.Kiilahihnapyörä	Kilremskiva	V-belt pulley	Keilriemenrad	
21	1	836136868	.Putki	Rör	Pipe	Rohr	
22	1	JB1108	.Mutteri	Mutter	Nut	Mutter	
23	1	HA8330	.Ruuvi	Skruv	Screw	Schraube	
24	6	HC8331	.Ruuvi	Skruv	Screw	Schraube	
25	1	602060612	.Kiinnitin	Fästdon	Fastener	Halter	
26	1	836324762	.Kiilahihnapyörä	Kilremskiva	V-belt pulley	Keilriemenrad	
27	1	33279300	.Kiilahihna	Kilrem	V-belt	Keilriemen	
_	1	32944500	Kiilahihnapyörä	Kilremskiva	V-belt pulley	Keilriemenrad	Assy
28	1	32510410	Akseli	Axel	Shaft	Achse	
29	1	32509610	Kiilahihnapyörä	Kilremskiva	V-belt pulley	Keilriemenrad	
30	2	LA1800	Laakeri	Lager	Bearing	Lager	
31	1	KG3052	Pidätinrengas	Låsring	Circlip	Sicherungsring	
32	1	836655153	.Välipala	Mellanstycke	Intermediate piece	Zwischenstück	
33	1	32969100	.Vastakappale	Motstycke	Counterpiece	Gegenstück	
34	1	HC9765	.Ruuvi	Skruv	Screw	Schraube	
35	1	836114846	.Välipala	Mellanstycke	Intermediate piece	Zwischenstück	
36	1	836338191	.Teline	Konsol	Bracket	Gestell	
37	1	641086006	.Liitin	Anslutning	Connection	Anschluß	
38	1	32944300	.Kompressori	Kompressor	Compressor	Kompreßor	

FRONT AXLE AIR SUSPENSION,	fitting	instr.
----------------------------	---------	--------

24.02.1999

Model 6900(8000R) 8050-8950 **69.5**

No

Page 17 <u>(</u>17)

)						
`		1	33501100	Paineilmasäiliö	Tryckluftsbehållare	Air pressure container	Luftdruckbehälter	
1		5	32930210	Liitin	Nippel	Union	Verbindung	
2		16	JD0408	.Aluslaatta	Bricka	Washer	Scheibe	
3		13	JB8904	.Mutteri	Mutter	Nut	Mutter	
4		4	HA8330	.Ruuvi	Skruv	Screw	Schraube	
5		2	32930110	.Liitin	Nippel	Union	Verbindung	
6		1	32926600	.Teline	Konsol	Bracket	Gestell	
7		1	32913700	.Säiliö	Behållare	Container	Behälter	
8		1	32913600	.Tulppa	Plugg	Plug	Stopfen	
9		2	32927600	.Sanka	Bygel	Bow	Bügel	
10	า	1	32935000	.Putki	Rör	Pipe	Rohr	
1.		2	HA8331	.Ruuvi	Skruv	Screw	Schraube	
12		1	32910500	.Pumppu	Pump	Pump	Pumpe	
	- 2A	•	33495200	Säiliö	Behållare	Container	Behälter	
13		1	32936900	.Liitin	Nippel	Union	Verbindung	
14		1	32943700	.Putki	Rör	Pipe	Rohr	
15		1	32944200	.Liitin	Nippel	Union	Verbindung	
16		1	32948300	.Liitin	Nippel	Union	Verbindung	
	•	1	KH3612	.O-rengas	O-ring	O-ring	O-ring	
17	7	i	32927900	.Teline	Konsol	Bracket	Gestell	
18		1	33133400	.Side	Band	Band	Binde	
19		1	KH4341	.O-rengas	O-ring	O-ring	O-ring	
20		2	HA9219	.Ruuvi	Skruv	Screw	Schraube	
2		2	JD0405	.Aluslaatta	Bricka	Washer	Scheibe	
22		2	JB1105	.Mutteri	Mutter	Nut	Mutter	
23		1	32935900	.Levy	Platta	Plate	Platte	
2		1	30086100	.Letkunpidin	Slangfäste	Hose holder	Schlauchhalter	
25		1	32976000	.Liitin	Nippel	Union	Verbindung	
		1	KH4081	.Tiiviste	Tätning	Gasket	Dichtung	
26	ร	2	32929900	.Liitin	Nippel	Union	Verbindung	
2		1	32930700	.Mutteri	Mutter	Nut	Mutter	
28		1	32929600	.Letku	Slang	Hose	Schlauch	
29		1	32934900	.Putki	Rör	Pipe	Rohr	
30		1	32910600	.Paineensäätöv.	Tryckregleringsv.	Pressure control.v.	Drucksteuerv.	
3		1	32927300	.Teline	Konsol	Bracket	Gestell	
32		1	32948000	.Letku	Slang	Hose	Schlauch	
30		1	32802300	.Liitin	Nippel	Union	Verbindung	
	_	1	KH4006	.Tiiviste	Tätning	Gasket	Dichtung	
34	4	1	32928900	.Teline	Konsol	Bracket	Gestell	
35		5	HA6358	.Ruuvi	Skruv	Screw	Schraube	
36	3	1	32944000	.Holkki	Hylsa	Sleeve	Hülse	
37		1	32934800	.Painemittari	Tryck mätare	Pressure instrument		
		1	32943800	.Lampunpidin	Lampfattning	Bulb socket	Lampenfuß	
		1	SH2638	.Lamppu	Lampa	Bulb	Lampe	
38	3	1	HA6322	.Ruuvi	Skruv	Screw	Schraube	
39		4	JB8906	.Mutteri	Mutter	Nut	Mutter	
40		4	JD0412	.Aluslaatta	Bricka	Washer	Scheibe	
	AC	1	32929700	.Liitin	Nippel	Union	Verbindung	
	ЭΒ		32935700	.Putki	Rör	Pipe	Rohr	L=2320
4		1	33133400	.Side	Band	Band	Binde	
42	2	1	32944100	.Rengas	Ring	Ring	Ring	
43		1		Kompressori	Kompressor	Compressor	Kompreßor	Page 9/17
								-




70. Frame and wheels

71. Frame
72. Wheels








	1.8-2600	Model	Code	Page
70. Frame and wheels	1. 9. 2002	6000-8950	710	1

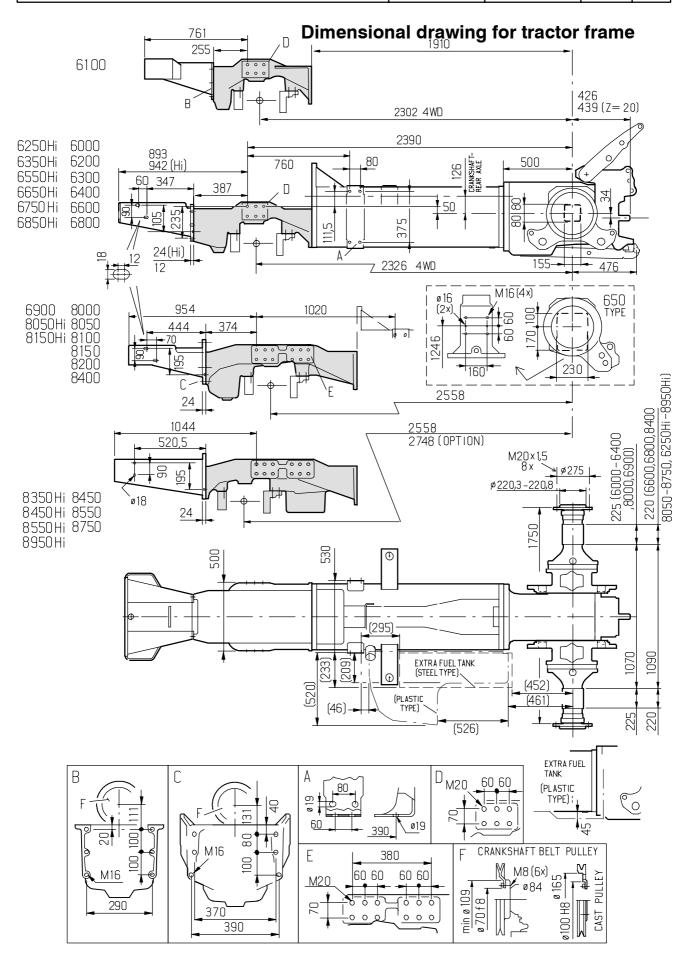

Tightening torques for frame joints

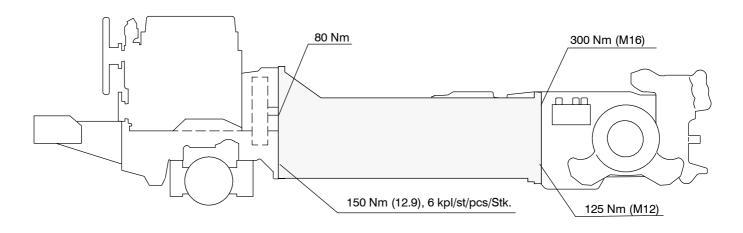

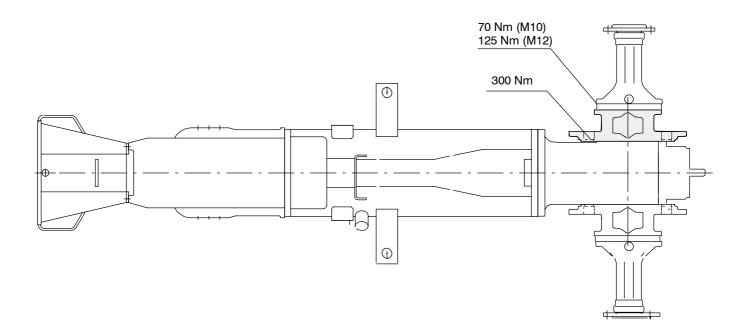

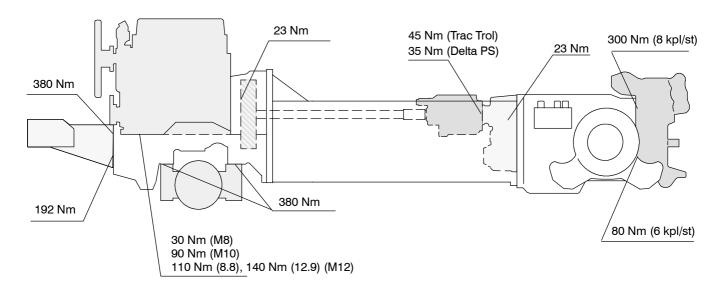



70. Frame and wheels	1, 1, 1994	Model	Code	Page
70. Frame and wheels	15. 5. 1996	6000-8750	720	1

Tyres and track widths

Tyres (alternative tyre equipment)

When changing tyres, make sure that the ratio between the front and rear axles becomes correct, see also page **640/2**. Allways when changing tyres, check that the front wheels do not touch the frame at max steering angle. If necessary, limit the steering angle with limiter screws.

Etu	Taka	6000, 6100 ⁴⁾	6300, 6400, 8000 ⁴⁾	6600, 8100, 8200, 8400		
11.00-16/8	13.6R38/8	Х	X			
11.00-16/8	14.9R38/8	Х	X			
11.00-16/8	16.9R34/8	Х	X			
11.00-16/8	16.9R38/8	Х	X			
12.4R24/8	13.6R38/8	Х	X			
13.6R24/8	14.9R38/8	X	X			
13.6R24/8	16.9R34/8	Х	X			
14.9-24/8	16.9-34/8	X	X			
14.9-24/8	18.4-34/8	X	X	X		
14.9R24/8	18.4R34/8	Х	X	X ¹⁾		
14.9R28/8	18.4R38/8		X	X		
14.9-28/8	18.4-38/8			X		
16.9R28/8	20.8R38/8			X		
480/65R24	600/65R34		X	X		
480/65R28	600/65R38		X	X		
19.5R24	620/75R30		X	X		
540/65R28	650/65R38			X		
				1		_
14.9-24/14 IND	18.4-34/14 IND	Х	X	X		
14.9-24/14 FOR	18.4-34/14 FOR	Х	Х	Х		
14.9-28/14 FOR	18.4-38/14 FOR		X	X		
14.9R28/8	18.4R38/8		Х	Х		3
16.9R28/8	20.8R38/8			X		
13.6-24/12 IND	16.9-34/14 IND	Х	Х			
16.9R28	20.8R38			X		
16.9-24/14 IND	18.4-38/14 IND			X		
14.9R28	18.4R38			Х	2)	
14.9-28/14 FOR	18.4-34/14 FOR			Х		
14.9-24/14 IND	18.4-34/14 IND			Х		

¹⁾ Depands on tyre type and manufacturer. 2) Industrial front axle. 3) Fixed discs. 4) on 6000 – 6400, 8000 with front/rear axle ratio 1,334 (without quick – shift gear, pinion shaft/crown wheel 9/38) and with ratio 1,332 (with Delta Power Shift, pinion shaft/crown wheel 8/42)


Wheem nuts, tightening torques

-Wheel nuts,	front	550 Nm
	rear	550 Nm
-Rim-wheel	240 Nm	
-Rim-wheel	disc (front and rear), 10.9	310 Nm


Note! Retightening of the wheel nuts should be done according to the Service Program.

Track widths, -660070

Front

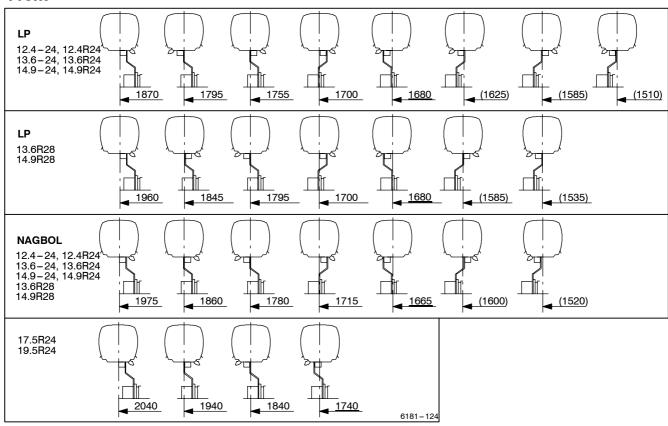

Rear

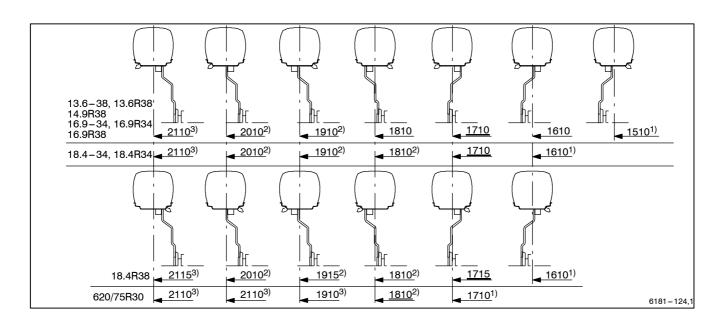

N.B. Standard track width underlined.

LP and NAGBOL are wheel disc manufacturers and are marked on the wheel discs.


¹⁾ Space between tyre and mudguard less than 80 mm (note when using snow chains).

²⁾ Do not use on public roads. Distance between tyre outer side and outer side lights more than 400 mm. The side lights must be moved and broader mudguards must be fitted.


³) Do not use on pubtic roads. Distance between tyre outer side and outer side lights more than 400 mm. The side lights must be moved. The broader mudguards are not enough. Distance between rear mudguards is 1020 mm.

Track widths, 660071 –

Front (not LP or NAGBOL markings)

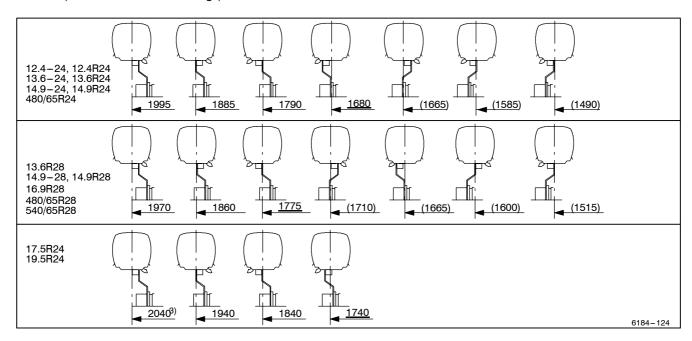

Rear (not LP or NAGBOL markings)

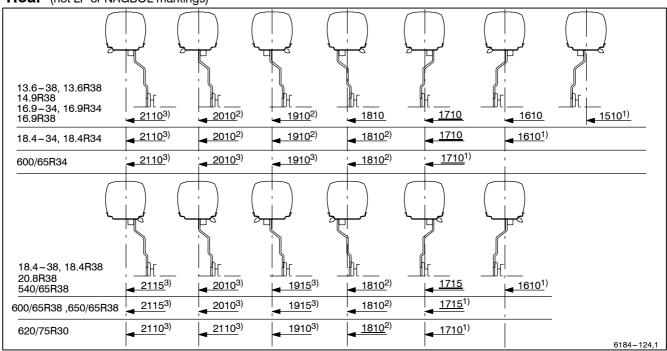

Note! Standard track width underlined

1) Space between tyre and mudguard less than 80 mm (note when using snow chains).

²⁾ Do not use on public roads. Distance between tyre outer side and outer side lights more than 400 mm. The side lights must be moved and broader mudguards must be fitted.

³) Do not use on pubtic roads. Distance between tyre outer side and outer side lights more than 400 mm. The side lights must be moved. The broader mudguards are not enough. Distance between rear mudguards is 1020 mm.

70. Frame and wheels

15. 5. 1993 1. 1. 1994

Model **6000-8750**

Code **720**

Page 4

Tyre pressures and loadings/tyre (40 km/h)

	Front axle			Rear axle	
Tyre	Max. loading	Pressure	Tyre	Max. loading	Pressure
11.00-16/8	1150 kg	250 kPa	13.6-38/8	1530 kg	200 kPa
12.4-24/8	1415 kg	230 kPa	13.6R38/8	1800 kg	160 kPa
12.4R24/8	1360 kg	160 kPa	14.9R38/8	2060 kg	160 kPa
13.6R24/8	1450 kg	160 kPa	16.9-34/8	1905 kg	170 kPa
13.6-24/8	1235 kg	200 kPa	16.9R34/8	2430 kg	160 kPa
13.6R28/8	1550 kg	160 kPa	16.9R38/8	2575 kg	160 kPa
14.9-24/8	1410 kg	180 kPa	18.4-34/8	2050 kg	140 kPa
14.9R24/8	1700 kg	160 kPa	18.4R34/8	2800 kg	160 kPa
14.9R28/8	1800 kg	160 kPa	18.4R38/8	3000 kg	160 kPa
14.9-28/8	1505 kg	180 kPa	18.4-38/8	2170 kg	140 kPa
16.9R28/8	2240 kg	160 kPa	20.8R38/8	3650 kg	160 kPa
480/65R24	1750 kg	160 kPa	540/65R38	2430 kg	160 kPa
	1240 kg	70 kPa	1	1900 kg	70 kPa
480/65R28	1850 kg	160 kPa	600/65R34	2900 kg	140 kPa
	1300 kg	70 kPa]	2050 kg	70 kPa
540/65R28	2070 kg	120 kPa	600/65R38	3075 kg	160 kPa
	1540 kg	60 kPa	1	2150 kg	70 kPa
17.5R24	2060 kg	160 kPa	620/75R30	3875 kg	160 kPa
19.5R24	2360 kg	160 kPa	650/65R38	3350 kg	120 kPa
12.4-24/12 IND.	2370 kg	380 kPa	1	2510 kg	60 kPa
14.9-24/12 IND.	3090 kg	330 kPa	16.9-34/14 IND.	3935 kg	290 kPa
13.6-24/10 FOR	1790 kg	250 kPa	18.4-34/14 IND.	4850 kg	290 kPa
14.9-24/14 FOR	2375 kg	300 kPa	18.4-34/14 FOR	2985 kg	260 kPa
14.9-28/14 FOR	2530 kg	300 kPa	18.4-38/14 FOR	3110 kg	260 kPa
16.9-24/14 IND	3530 kg	300 kPa	18.4-38/14 IND	5055 kg	290 kPa

With R-tyres at speed of 30 km/h the max permissible loading per tyre is 20 % bigger.

Adjusting track widths, front wheels and rear wheels

Adjusting front and rear wheel track widths is done in the same way.

Scotch the front wheels (or rear wheels) to prevent the tractor from moving. Raise the rear wheels off the ground and position sturdy axle stands under the axle housing.

Track width can be adjusted by changing the position of the wheel rim in relation to the central disc or by turning the wheel around (as shown above). If tyres are turned move them to other side.

Make sure that the arrows on the upper part of the tyres are pointing forwards.

Lubricate the wheel nuts and tighten them to the recommended values (see technical specifications).

Code

720

Page

5

Alternative tyre equipment (in pairs) on HiTech models

2WD					
Rear	Front	6250Hi-2, 6350Hi-2, 6550Hi-2			
13.6R38/8	11.00-16/8	Х			
14.9R38/8	11.00-16/8	Х			
16.9R38/8	11.00-16/8	Х			
16.9R34/8	11.00-16/8	Х			

4WD						
Rear	Front	6250Ні, 6350Ні, 6550Ні	6650Hi, 6850Hi	8050Hi, 8150Hi	8350Hi-8950Hi	
16.9R34	13.6R24	Х				
18.4-34	14.9-24	Х	Х			
18.4R34	14.9R24	Х				
520/70R34	420/70R24	Х				
600/65R34	480/65R24	Х	Х			
13.6R38	13.6R24	Х				
14.9R38	12.4R28	Х				
16.9R38	13.6R28	Х	Х	Х		
18.4R38	14.9R28	Х	X(*)	X(*)	X*	
18.4R38	14.9R28	X	X(*)	X(*)		
480/70R38	380/70R28	Х	Х	Х		
520/70R38	420/70R28	Χ	X(*)	X(*)	X*	
20.8R38	16.9R28		X(*)	X(*)	X*	
20.8R38	16.9R28		X(*)	X(*)	X*	
540/65R38	440/65R28	Χ	Х	8050		
580/70R38	480/70R28		X(*)	X(*)	X*	
600/65R38	480/65R28	Χ	X(*)	X(*)	X*	
650/65R38	540/65R28		X(*)	X(*)	X*	
18.4R34 IND	14.9R24 IND	Х				
18.4-38/14 IND	16.9-24/14 IND		X*	X*	X*	
20.8R38 IND	16.9R28IND		X*	X*	X*	
18.4-34/14 FOR	14.9-24/14 FOR	Х	Х	Х		
18.4-38/14 FOR	14.9-28/14 FOR	Х	X(*)	X(*)	X*	
600/65R38 FOR	500/65R28 FOR		X*	X*	X*	
20.8-38/14 FOR	16.9-28/14 FOR		X*	X*	X*	

¹ Wide rear mudguards

Fixed rims

When changing tyres, observe the correct ratio on 4WD models. Check always when changing tyres or when adjusting track widths, that the tyres do not touch the engine side plates, limit the front wheel steering angle when necessary.

² Not all tyres on traffic tractors (50 km/h)

^(*) Agricultural front axle or ind. front axle

^{*} Industrial front axle (on 8350Hi - 8950Hi as standard)

70. Frame and wheels

1. 10. 1999

Model 6250Hi--8950Hi Code **720**

Page 6

Tyre inflation pressures and max permissible tyre loadings on HiTech models.

	Rear axle	
Tyre	Carrying capaci- ty	Pressure
16.9R34/8	2430 kg	160 kPa
18.4-34/8	2565 kg	140 kPa
18.4R34/8	2800 kg	160 kPa
F00/70D04	3150 kg	160 kPa
520/70R34	1775 kg	60 kPa
000/0FP04	2900 kg	140 kPa
600/65R34	2050 kg	70 kPa
13.6R38	1800 kg	160 kPa
14.9R38	2060 kg	160 kPa
16.9R38/8	2575 kg	160 kPa
18.4R38/8	3000 kg	160 kPa
400/70D00	2900 kg	160 kPa
480/70R38	1635 kg	60 kPa
500/70 D 00	3875 kg	160 kPa
520/70R38	2185 kg	60 kPa
20.8R38/8	3650 kg	160 kPa
E40/05D00	2390 kg	120 kPa
540/65R38	1810 kg	60 kPa
F00/70D00	3875 kg	120 kPa
580/70R38	2185 kg	60 kPa
600/6ED00	3075 kg	160 kPa
600/65R38	2150 kg	70 kPa
GEO/GED29	3350 kg	120 kPa
650/65R38	2510 kg	60 kPa
18.4R34 IND	4850 kg	290 kPa
18.4-38/14 IND	5055 kg	290 kPa
20.8R38 IND	5460 kg	260 kPa
18.4-34/14 FOR	2985 kg	260 kPa
18.4-38/14 FOR	3110 kg	260 kPa
600/65R38 FOR	4375 kg	240 kPa
20.8-38/14 FOR	4340 kg	230 kPa

Front axle				
Tyre	Carrying capaci- ty	Pressure		
11.00-16/8	1320 kg	250 kPa		
13.6R24	1450 kg	160 kPa		
14.9-24/8	1760 kg	180 kPa		
14.9R24/8	1700 kg	160 kPa		
420/70R24	1900 kg	160kPa		
420/70N24	1070	60 kPa		
480/65R24	1750 kg	160 kPa		
400/00124	1240 kg	70 kPa		
12.4R28	1450 kg	160 kPa		
13.6R28/8	1550 kg	160 kPa		
14.9R28/8	1800 kg	160 kPa		
000/70D00	1750 kg	160 kPa		
380/70R28	985 kg	60 kPa		
400/70D00	2060 kg	160 kPa		
420/70R28	1160 kg	60 kPa		
16.9R28/8	2240 kg	160 kPa		
440/65R28	1450 kg	120 kPa		
440/03N20	1060 kg	60 kPa		
490/65D09	1850 kg	160 kPa		
480/65R28	1300 kg	70 kPa		
490/70D09	2500 kg	160 kPa		
480/70R28	1410 kg	60 kPa		
540/65R28	2070 kg	120 kPa		
340/03H20	1540 kg	60 kPa		
14.9R24 IND	3090 kg	330 kPa		
16.9-24/14 IND	3530 kg	300 kPa		
16.9R28IND	3765 kg	300 kPa		
14.9-24/14 FOR	1900 kg	300 kPa		
14.9-28/14 FOR	2024 kg	300 kPa		
500/65R28 FOR	2800 kg	240 kPa		
16.9-28/14 FOR	3120 kg	270 kPa		

In the twin wheel use the carrying capacity of two wheels is 1,76 x carrying capacity of single wheel.

70. Frame and wheels 1. 10. 1999 | Model | Code | Page | 720 | 7

Track widths on HiTech models

(Between middle of wheels on the ground)

	Rear	Track widths
	13.6R38, 14.9R38	1510, 1610, 1710, <u>1810</u> , 1910, 2010, 2110
	16.9R34, 18.4-34, 18.4R34, 520/70R34, 600/65R34	1610, 1710, <u>1810</u> , 1910, 2010, 2110
	16.9R38, 18.4R38, 480/70R38, 20.8R38, 520/70R38, 540/65R38, 580/70R38	1610, <u>1715</u> , 1810, 1915, 2010, 2115
	600/65R38, 650/65R38	<u>1715</u> , 1810, 1915, 2010, 2115
1)	18.4R38, 520/70R38, 20.8R38, 580/70R38, 600/65R38, 650/65R38	1610, 1715, <u>1810</u> , 1910, 2010, 2115
	18.4R34/14 IND	1740, 1790
	18.4-34/14 FOR	1650, 1880
	18.4-38/14 FOR, 18.4R38, 18.4-38/14 IND, 20.8R38, 20.8R38 IND, 20.8-38/14 FOR, 600/65R38 FOR	1650, 1875

Front	Track widths
11.00-16/8	1465, 1565, <u>1665</u> , 1765
13.6R24, 14.9-24, 14.9R24, 420/70R24, 480/65R24	1535, 1640, 1735, <u>1840</u> , 1935
12.4R28, 13.6R28, 14.9R28, 380/70R28, 420/70R28, 440/65R28, 16.9R28, 480/65R28, 480/70R28, 540/65R28	1540, 1635, 1740, <u>1835</u> , 1940, 2035
14.9R28, 14.9-28/14 FOR, 16.9R28	1555, 1830
14.9-24/14 FOR, 14.9R24 IND	1710
Industrial front axle	Track widths
14.9R28, 16.9R28, 420/70R28,	1530, 1625, 1730, <u>1830</u> ,
480/65R28, 480/70R28, 540/65R28	1930, 2025, 2130, 2230
16.9-24/14 IND	<u>1840</u> , 1915
16.9R28 IND	<u>1870</u> , 1890
14.9R28, 16.9R28, 14.9-28/14 FOR, 16.9-28/14 FOR, 500/65R28 FOR	<u>1870</u> , 1890

 
Standard track widths underlined.

Fixed rims

The distance between the rear mudguards is 1020 mm.

NOTE! Always when adjusting track widths or when changing tyres, the front wheel steering angle must be checked/adjusted with max oscillation angles of the front axle in both directions. When adjusting the rear axle track widths, check that the wheels can rotate freely. Also check when using the snow chains, that the distance between the cab and the rear wheels is not under 80 mm. In addition, check that the distance between the parking lights and the rear wheel outer edges does not exceed 400 mm.

¹⁾ Models 8350Hi-8950Hi




WHEEL WEIGHTS	08.12.1995	Model	No	Page
FITTING INSTRUCTION	01.04.1998	205-8750	79.2	1(3)

- Wheel weights are fitted with bolts to the rim.
 Tightening torque: 190 Nm.
- In the picture (see page 2) there are some fitting examples:

A: 8	1 4	30608600 831020	Painot .Paino	Vikter Vikt	Weights Weight	Gewichte Gewichte	80 kg
9 10 11 12	10 10 10 10	HA8366 JB8907 JD0416 32982500	.Vanteille .Ruuvi .Mutteri .Aluslevy .Aluslevy	För fälgar Skruv Mutter Bricka Bricka	For rims Screw Nut Washer Washer	Für Felgen Schraube Mutter Scheibe Scheibe	(DW12x38) M16x180
B: 8	1 8	813860 831020	Painot .Paino	Vikter Vikt	Weights Weight	Gewichte Gewichte	80 kg
9 9 10 12	10 10 10 20	HA8727 HA8729 JB8907 32982500	.Vanteille .Ruuvi .Ruuvi .Mutteri .Aluslevy	För fälgar Skruv Skruv Mutter Bricka	For rims Screw Screw Nut Washer	Für Felgen Schraube Schraube Mutter Scheibe	(DW15Lx34) M16x280 M16x300
C: 8	1 2	31568000 31545700	Painot .Paino .Vanteille	Vikter Vikt För fälgar	Weights Weight For rims	Gewichte Gewichte Für Felgen	80 kg (DW16x34
9 10 11 12	10 10 10 10	HA8367 JB8907 JD0416 32982500	.Ruuvi .Mutteri .Aluslevy .Aluslevy	Skruv Mutter Bricka Bricka	Screw Nut Washer Washer	Schraube Mutter Scheibe Scheibe	Fixed) M16X200
D: 8	1 2	38905200 831020	Painot .Paino .Vanteille	Vikter Vikt För fälgar	Weights Weight For rims	Gewichte Gewichte Für Felgen	80 kg (DW14x30
9 10 11 12	10 10 10 10	HA9419 JB8907 JD0416 32982500	.Ruuvi .Mutteri .Aluslevy .Aluslevy	Skruv Mutter Bricka Bricka	Screw Nut Washer Washer	Schraube Mutter Scheibe Scheibe	Fixed) M16x130
E: 13	1 2	32480700 75003210	Painot .Paino	Vikter Vikt	Weights Weight	Gewichte Gewichte	70kg
14 15 16 17 18	2 8 8 8	33131400 HA8366 JB8907 JD0416 32982500	.Vanteille .Holkki .Ruuvi .Mutteri .Aluslevy .Aluslevy	För fälgar Hylsa Skruv Mutter Bricka Bricka	For rims Sleeve Screw Nut Washer Washer	Für Felgen Hülse Schraube Mutter Scheibe Scheibe	(DW14x30) L=34,5 M16x180

WHEEL WEIGH	HTS		08 12.1995	Model	No	Page
FITTING INSTE	RUCTION		01.04.1998	205-8750	79.2	2(3)
F: 1 32403500 13 4 75003210 14 2 33131400 15 8 HA8370 16 8 JB8907 17 8 JD0416 18 8 32982500	Painot .Paino .Vanteille .Holkki .Ruuvi .Mutteri .Aluslevy .Aluslevy	Vikter Vikt För fälgar Hylsa Skruv Mutter Bricka Bricka	Weights Weight For rims Sleeve Screw Nut Washer Washer	Gewichte Gewichte Für Felgen Hülse Schraube Mutter Scheibe Scheibe	L=3	(14x30)
G: 1 (32480710) 13 2 75003210 14 2 33131400	Painot .Paino .Vanteille .Holkki	Vikter Vikt För fälgar Hylsa	Weights Weight For rims Sleeve	Gewichte Gewichte Für Felgen Hülse		/15Lx30) /14Lx30)
15 8 HA8366 16 8 JB8907 17 8 JD0416 18 8 32982500	.Ruuvi .Mutteri .Aluslevy .Aluslevy	Skruv Mutter Bricka Bricka	Screw Nut Washer Washer	Schraube Mutter Scheibe Scheibe		x180
H: 1 32403510 13 4 75003210	Painot .Paino .Vanteille	Vikter Vikt För fälgar	Weights Weight For rims	Gewichte Gewichte Für Felgen	,	9 (15Lx30) (14Lx30)
14 2 33131400 15 8 HA8726 16 8 JB8907 17 8 JD0416 18 8 32982500	.Holkki .Ruuvi .Mutteri .Aluslevy .Aluslevy	Hylsa Skruv Mutter Bricka Bricka	Sleeve Screw Nut Washer Washer	Hülse Schraube Mutter Scheibe Scheibe	L=3	
l: 1 (33131600) 13 2 75003210	Painot .Paino .Vanteille	Vikter Vikt För fälgar	Weights Weight For rims	Gewichte Gewichte Für Felgen		15Lx30)
14A 2 33131500 15 8 HA8367 16 8 JB8907 17 8 JD0416 18 8 32982500	.Holkki .Ruuvi .Mutteri .Aluslevy .Aluslevy	Hylsa Skruv Mutter Bricka Bricka	Sleeve Screw Nut Washer Washer	Hülse Schraube Mutter Scheibe Scheibe	L=7	(14Lx30) 75 6x200
J: 1 (33131700) 13 4 75003210	Painot .Paino .Vanteille	Vikter Vikt För fälgar	Weights Weight For rims	Gewichte Gewichte Für Felgen		9 (15Lx30) (14Lx30)
14A 2 33131500 15 8 HA8727 16 8 JB8907 17 8 JD0416 18 8 32982500	.Holkki .Ruuvi .Mutteri .Aluslevy .Aluslevy	Hylsa Skruv Mutter Bricka Bricka	Sleeve Screw Nut Washer Washer	Hülse Schraube Mutter Scheibe Scheibe	L=7	

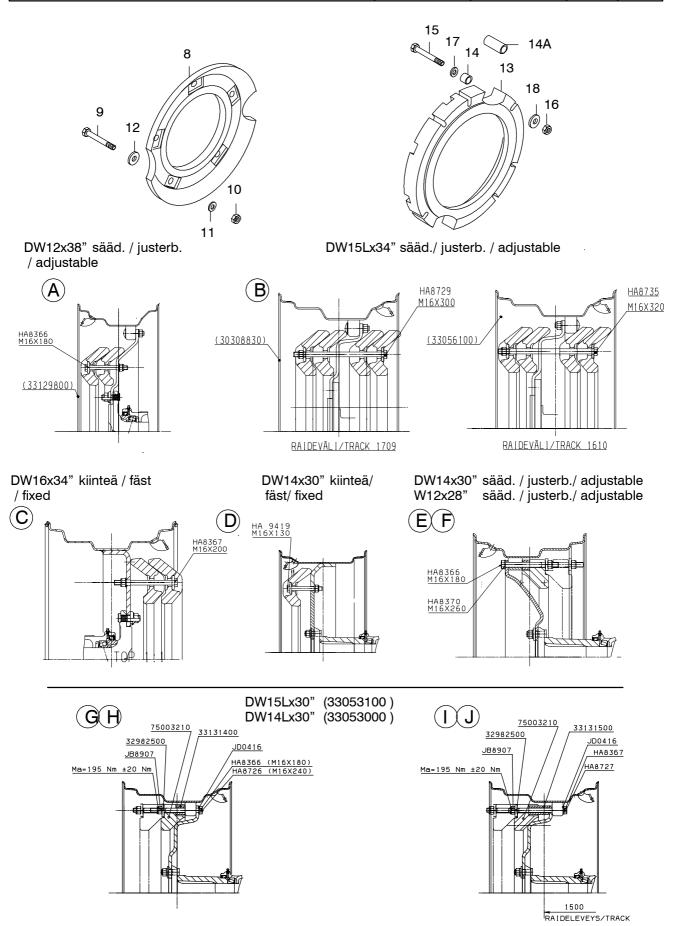


MUD SHIELDS, FITTING INSTRUCTION	24.08.1997	Model	No	Page
	01.04.1998	365-8750	79.3	1(2)

Mud shields, front+rear (365-665) . 33362200

rear axle (865, 600-900) ... 33561500 rear axle (6000-8750) 33561200

The mud shields protect the shaft seals when working in very difficult conditions (e.g. muddy fields).

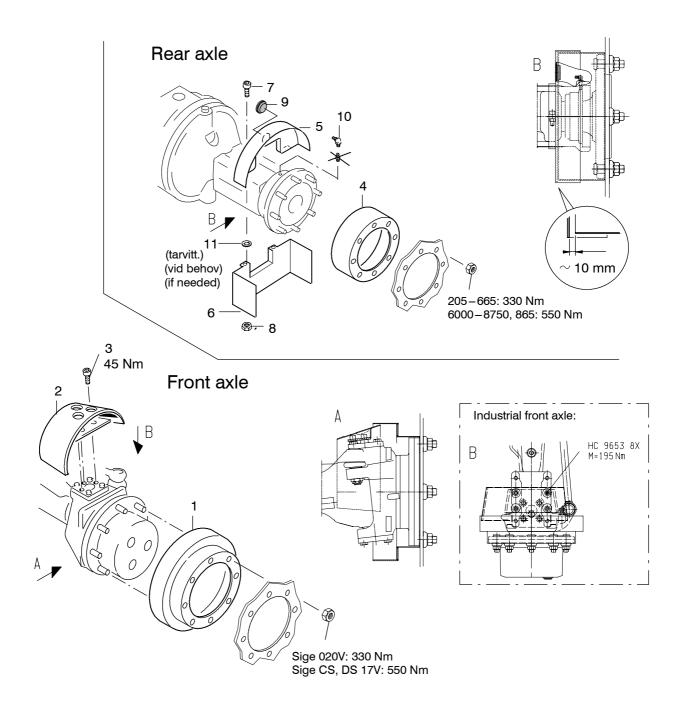


N	MUD SHIELDS, FITTING INSTRUCTION			24.08.1997	Model	No	Page	
					01.04.1998	365-8750	79.3	2(2)
	1	33362200	Suojat, etu + taka	Skydd, fram+bak	Shields, front+rear	Schutz, v+h	365-665	
1	2	33339200	.Suoja	Skydd	Cover	Schutz		
2	1	33338800	.Suoja	Skydd	Cover	Schutz	Oik. / Right	
_	1	33338900	.Suoja	Skydd	Cover	Schutz	Vas. / Left	
3 4	6 2	HC9336 33343100	.Ruuvi .Suoja	Skruv Skydd	Screw Cover	Schraube Schutz		
5	2	33343200	.Suoja	Skydd	Cover	Schutz		
6	2	33343300	.Suoja	Skydd	Cover	Schutz		
7	4	HC8328	.Ruuvi	Skruv	Screw	Schraube		
8	4	JB8904	.Mutteri	Mutter	Nut	Mutter		
9	2	33362100	.Kumitulppa	Gummiplugg	Rubber plug	Gummistopfe	n	
10	2	GG0094	.Voitelunippa	Smörjnippel	Grease nipple	Schmiernippe	el	
		33561600	Suojat, etuaks.	Skydd, framaxel	Shield, front axle	Schutz, vorn	4WD, 865, 6000-8400	
1	2	33339200	.Suoja	Skydd	Cover	Schutz		
2	1	33338800	.Suoja	Skydd	Cover	Schutz	Oikea / Rig	
_	1	33338900	.Suoja	Skydd	Cover	Schutz	Vasen / Lef	t
3	6	HC9336	.Ruuvi	Skruv	Screw	Schraube		
		33561700	Suojat, etuaks.	Skydd, framaxel	Shield, front axle	Schutz, vorn	Teoll. etuak Ind. Front a	
1	2	33479900	.Suoja	Skydd	Cover	Schutz		
2	1	33479700	.Suoja	Skydd	Cover	Schutz	Oikea	
•	1	33479800	.Suoja	Skydd	Cover	Schutz	Vasen	
3	8	HC9653	.Ruuvi	Skruv	Screw	Schraube		
		33561500	Suojat, taka-aks.	Skydd, bakaxel	Shield, rear axle	Schutz, hinter	n 865, 600–	900)
4	2	33294300	.Suoja	Skydd	Cover	Schutz		
5	2	33360400	.Suoja	Skydd	Cover	Schutz		
6	2	33360510	.Suoja	Skydd	Cover	Schutz		
7	4	HC8328	.Ruuvi	Skruv	Screw	Schraube		
8	4	JB8904	.Mutteri	Mutter	Nut	Mutter		
9	2	33362100	.Kumitulppa	Gummiplugg	Rubber plug	Gummistopfe		
10	2	GG0094	.Voitelunippa	Smörjnippel	Grease nipple	Schmiernippe	el	
		33561200	Suojat, taka-aks.	Skydd, bakaxel	Shield, rear axle	Schutz, hinter	n 6000–875	50
4	2	.33294300	.Suoja	Skydd	Cover	Schutz		
5	2	33344100	.Suoja	Skydd	Cover	Schutz		
6	2	33344210	.Suoja	Skydd	Cover	Schutz		
7	4	HC8328	.Ruuvi	Skruv	Screw	Schraube		
8	4	JB8904	.Mutteri	Mutter	Nut	Mutter		
9	2	33362100	.Kumitulppa	Gummiplugg	Rubber plug	Gummistopfe		
10	2	GG0094	.Voitelunippa	Smörjnippel	Grease nipple	Schmiernippe	; 1	
11	_	JD0408	Aluslaatta	Bricka	Washer	Scheibe	ø 8,4, tarvit if needed	taessa,

if needed

EXTRA FRONT BALLAST WEIGHTS	06.09.1994	Model	Code	Page
FITTING INSTRUCTION	11.01.1996	6000-8400	79	1(1)

Extra front ballast weights, 550 kg .. 32938200 (12x37,5 +100)

1 2 3	1 1 1 1 1 1 6 8	33129100 32938200 33130900 32937400 33130800 32937900 HA6368 HA6368	Etupainot Etupainot .Teline .Teline .Teline .Teline .Ruuvi	Extra frontvikter Extra frontvikter Hållare Hållare Hållare Hållare Skruv	E. front b. weights E. front b. weights Support Support Support Support Screw Screw	Z. V.gewichte Z. V.gewichte Halter Halter Halter Halter Schraube	(12 kpl/psc) 4-Cyl. (12 kpl/pcs) 6-Cyl. Vas./ Left 4-Cyl. Vas./ Left 6-Cyl. Oik./ Right 4-Cyl. Oik./ Right 6-Cyl. 4-Cyl. (M20x40) 6-Cyl.
4	4	HA6370	.Ruuvi	Skruv	Screw	Schraube	(M20x60)
5	4	HA6358	.Ruuvi	Skruv	Screw	Schraube	
6	4	JB8907	.Mutteri	Mutter	Nut	Mutter	
7	12	31759200	.Etupainot	Frontvkter	Front ballast	Vorderballast	37,5 kg
8	4	JB8908	.Mutteri	Mutter	Nut	Mutter	
9	2	32403200	.Ruuvi	Skruv	Screw	Schraube	
10	2	HA8373	.Ruuvi	Skruv	Screw	Schraube	
11	2	30231200	.Таррі	Тарр	Pin	Stift	
12	2	JJ5102	.Sokka	Sprint	Pin	Splint	

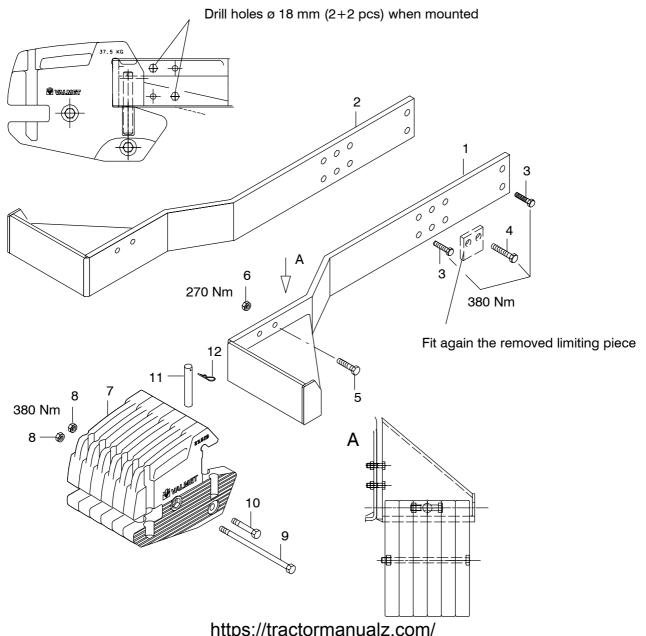

https://tractormanualz.com/



EXTRA FUEL TANK, FITTING INSTRUCTION

06.04.2000 11.04.2000

Model 6000-8750 6250Hi-8950Hi

Code

Page 79.5

1(2)

Extra fuel tank 6000-8750 33627000 Note! Fuel tank draining plug thread should be M30x1,5 (from tractor ser. no. 664868 ->).


The extra fuel tank capacity is 85 litres, which can be an addition to the fuel in the standard tank. When filling the tank, observe that in the end the filling happens slower due to resistance of fuel flow.

- Fitting extra tank:
- Drain the fuel tank. Remove the footstep iron. HiTech-models: remove the wires which go to the end piece of the parking brake cylinder (\$52).
- Tractors to tractor no. -J10111: Assemble the fuel filling hole extension piece according to the picture. Check that the o-ring 17 remains in its groove when You tighten the sleeve 5. Tighten the sleeve as hard as possible using e.g. an oil filter spanner.
- Fasten the damper sticker 10 onto the extra tank and also bands 11 (7 off) onto the frame 12.
- Unscrew the nut of the lower stud bolt (M16) and the upper hexagonal socket screw M12 on the LH side in the bolted joint between gearbox-fuel tank. Fasten the support 18 with nut and screw. Place the frame 12 temporarily into place. Estimate the position of the cut-off point of the footstep RH side support iron. Mark places for the fixing holes (Ø18 mm) on the footstep iron and drill the holes. HiTech-models: leave the footstep support (33598300) away.
- If the tractor has an air conditioner and its hoses have been drawn behind the cab front attachment. the hoses should be moved to the front side of the attachment. In this case, unscrew the cab front attaching bolts and slacken the cab rear bolts. Also the PTO control cable should be detached. Raise the cab about 50 mm and move the hoses to the front side of the attachment. (Note! Remove out from way the attaching screws of the engine heater socket). Also detach the drier and push excess hose length into the engine compartment.
- Connect the hose 4 to the extra fuel tank and fasten frame and the tank. The tank front end is attached to the rear face of the cab attachment and the rear end is attached with the support 18. NOTE! Guide e.g. with a flat iron the edge seal of the intermediate frame protective shield so that it stays between the tank and the intermediate
- Change the lower shield 40 on the left side of the cab.

EXTRA FUEL TANK, FITTING INSTRUCTION	06.02-2000	Model	Code	Page
	00.04.2000	6000-8750		
	11.04.2000	6250Hi-8950Hi	79.5	2(2)

- Fasten the fuel pipe 8 (it can be assembled while the fastener 13 is in place). Connect the pipe 4 other end to the connector on the fuel filling hole. HiTech-models: make the wires of the parking brake cylinder longer by the extension wire 34135100 (HiTech only). Join the connector S52.
- Fill the tank with fuel and check for leaks.

	1	33627000	Polttoainesäiliö	Bränsletank	Fuel tank	Kraftstofftank	Réservoir de carburant	6200 – 8550 6250Hi – 8950Hi
1	1	32755220	.Polttoainesäiliö	Bränsletank	Fuel tank	Kraftstofftank	Réservoir de carburant	
2	1	32829700	.Täyttöputki	Påfyllningsrör	Filling pipe		Tuyau de remplissage	
3	2	GP3927	.Letkunkiristin	Slangklämma	Hose clip	Schlauchbinder		
4	1	32837000	.Letku	Slang	Hose	Schlauch	Tuyau flexible	
5	1	32829800	.Holkki	Hylsa	Sleeve	Hülse	Manchon	-J10111
6	1	32967500	.Ruuvi	Skruv	Screw	Schraube	Vis	M30x1,5
7	2	KH3643	.Tiiviste	Tätning	Gasket	Dichtung	Joint	
8	1	32967710	.Putki	Rör	Pipe	Rohr	Tuyau	
9	1	32967600	.Letku	Slang	Hose	Schlauch	Tuyau flexible	
10	2	32021500	.Tiiviste	Tätning	Gasket	Dichtung	Joint	
11	7	32697500	.Tiiviste	Tätning	Gasket	Dichtung	Joint	
12	1	32816010	.Kehys	Ram	Frame	Rahmen	Cadre	
13	1	32755300	.Laatta	Platta	Plate	Platte	Plaque	
14	1	JB8907	.Mutteri	Mutter	Nut	Mutter	Ecrou	
15	4	HA9242	.Ruuvi	Skruv	Screw	Schraube	Vis	
16	4	JB8906	.Mutteri	Mutter	Nut	Mutter	Ecrou	
17	1	KH4933	.O-rengas	O-ring	O-ring	O-ring	Joint torique	-J10111
18	1	32959900	.Korvake	Öra	Lug	Ohr	Support	
19	2	GP3919	.Letkunkiristin	Slangklämma	Hose clip	Schlauchbinder	Clip de tuyau	
	1	34135100	.Johdin	Ledning	Wire	Leitung	Fil électrique	HiTech
40	1	33678800	.Suojus	Skydd	Shield	Schutz	Protection	Left

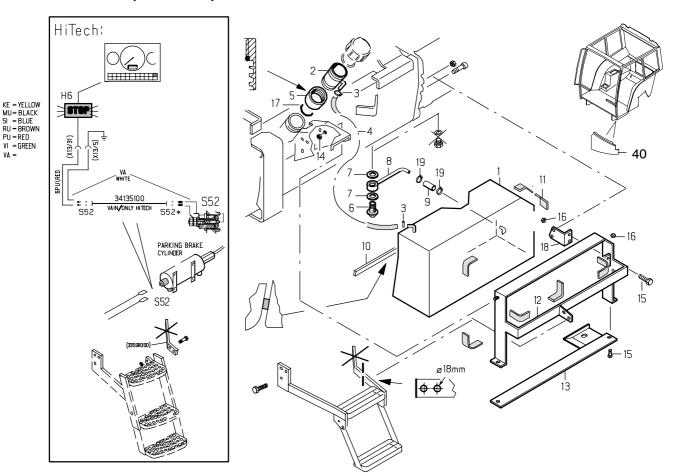

WATER RESERVOIR, FITTING INSTRUCTION	04.06.1993	Model	Code	Page
	26.09.1994	6000-8400	79	1(3)

Water reservoir (+pump) 32837200

The water reservoir capacity is **85** litres. The reservoir material is stainless steel. The reservoir has a pump with output of **7,3** l/min at a pressure of **2,5** kp/cm². The water hose is fitted on a portable hose drum and the hose length is **20** m.

The water tank can be used as a fire—fighting equipment e.g. when working in the peat industry NOTE! In a cold season the tank should be drained (or anti—freeze agent should be used). Pour into the empty tank engine coolant and let the pump run for a while so that all water in the pump runs out.

Never use the pump without liquid.

The pump has been connected to the fuse F14 (permanent current).

FITTING:

- Remove the foot step irons.
- Fasten padding band 2 onto the water tank and also band 3 (7 pcs) onto the frame 4.
- Unscrew the nut of the lower stud bolt M16 and the upper hexagonal socket screw M12 on the LH side in the bolted joint between gearbox—fuel tank. Fasten the support 31 with these nut and screw. Place the frame 4 temporarily into place. Estimate the position of the cut—off point of the footstep RH side support iron. Mark places for the fixing holes (Ø18 mm) on the footstep iron and drill the holes.
- Fit the stand and the tank. NOTE! <u>Guide e.g. with a flat iron the edge seal of the intermediate frame protective shield so that it stays between the tank and the intermediate frame.</u>
 - Connect hoses 18 and 9 to the tank.
- Connect the other end of hose 18 to the filling pipe 20. Use the filling pipe as a pattern (do not bend the hose) and drill holes (2 pcs, Ø13 mm) into the inner surface of the LH side mudguard. Fasten the filling pipe.
- Place the hose stand 22 on the RH side mudguard and mark places for holes (2 pcs, Ø 9 mm) (if you want that the side window can be opened, the stand should be fitted partly on the console of the rear light).
 - Drill holes and fasten the stand.
- If the tractor has an air conditioner and its hoses have been drawn behind the cab front attachment, the hoses should be moved to the front side of the attachment.
 - In this case, unscrew the cab front attaching bolts and slacken the cab rear bolts. Also the PTO control cable should be detached. Raise the cab about 50 mm and move the hoses to the front side of the attachment. (Note! Remove out from way the attaching screws of the engine heater socket). Also detach the drier and push excess hose length into the engine compartment.

WATER RESERVOIR, FITTING INSTRUCTION	04.06.1993	Model	Code	Page
	26.09.1994	6000-8400	79	2(3)

- Open the lever console side panel and detach the longer upper panel. Cut a hole for the switch frame 28. Fasten the parts 28, 29 and the switch 27 into place.
 - Draw the wiring loom connector S34 + ind. lamp wire to the switch. Fasten the upper panel. Connect the earh connector under the earth screw in the lever console bottom. Pass the rest of the wires out of the console through its rear corner.
- Draw wire nr 166 (green) together with other wires to the fuse box. Disconnect connector X6 and connect the wire to the connector pole 6. Tape the wire to the side of the other wire looms. Change fuse F14 (10 A) into a fuse of 15 A.
- Draw the wire no 167 (red) to the cab LH side rear corner and further through the lead - in point to the pump. Fit the connector 11A on the wire. Connect the earth connector 11C to the pump black wire and connector 11B to the pump red wire. Fit the pump (earth cable shoe under one pump fixing screw). Connect the pump suction and presssure hoses.
- Fill the tank (at least up to the pump level). Check the function of the pump and check for leaks.

1 1A 1B 2 3 4 5 6 7 8 9 10 11A 11B 11C	1	32837200 32819400 KH3610 GR0225 32021500 32697500 32816010 32816200 JB8907 HA9242 JB8906 32837600 GP3927 32837400 SA1527 SA1687 SA1763	Vesisäiliö .Säiliö .Tiiviste .Tulppa .Tiiviste .Tiiviste .Kehys .Laatta .Mutteri .Ruuvi .Mutteri .Putki .Letkunkiristin .Pumppu Liitinkotelo Liitin Maadoituskenkä	Vattentank Behållare Tätning Plugg Tätning Tätning Ram Platta Mutter Skruv Mutter Rör Slangklämma Pump Skarvhus Anslutning Jordanslutning	Water tank Container Gasket Plug Gasket Gasket Frame Plate Nut Screw Nut Pipe Hose clip Pump Connector housing Connection Earth connector	Waßertank Behälter Dichtung Stopfen Dichtung Dichtung Rahmen Platte Mutter Schraube Mutter Rohr Schlauchbinder Pumpe Klemmschutz Klemme
–	-			Anslutning Jordanslutning		
12	1	GS9112	.Liitin	Nippel	Union	Verbindung
13	1	GP3916	.Letkunkiristin	Slangklämma	Hose clip	Schlauchbinder
14	1		.Letku	Slang	Hose	Schlauch
15	4	JD0405	.Aluslaatta	Bricka	Washer	Scheibe
16	4	HA6306	.Ruuvi	Skruv	Screw	Schraube
17	2	GP3941	.Letkunkiristin	Slangklämma	Hose clip	Schlauchbinder
18	1	32837500	.Letku	Slang	Hose	Schlauch
19	2	HA6343	.Ruuvi	Skruv	Screw	Schraube
20	1	32836800	.Täyttöputki	Påfyllningsrör	Filling pipe	Einfüllungsrohr
21	1	32861800	.Korkki	Lock	Cap	Deckel
22	1	32841410	.Kiinnitin	Fästdon	Fastener	Halter
23	2	HA6324	.Ruuvi	Skruv	Screw	Schraube
24 25	2	625510	.Aluslaatta	Bricka	Washer	Scheibe
	2	JB8904	.Mutteri	Mutter	Nut Hose dram	Mutter Schlauch rulle
26 27	1	32837810 30944200	.Letkukela Kojnukatkin	Slangtrum Vippströmbrytare	Switch	Schaukelschalter
21	1	30944200	.Keinukytkin	Lampfattning	Bulb socket	
	1	32862300	.Lampunpidin .Linssi	Lins	Lens	Lampenfuß Linse

WATER RESERVOIR, FITTING INSTRUCTION			04.06.1993	Model	Code	Page	
				26.09.1994	6000-8400	79	3(3)
28 1 29 2 30 1 31 1	30944400 30944500 32862200 32959900 31541100	.Paneeli .Peitelevy .Johdinsarja .Korvake .Sulake	Panel Täckplatta Ledningssats Hållare Säkring	Panel Covering plate Wiring set Support Fuse	Paneel Deckplatte Verkabelung Halter Sicherung	1	15A
26	25		27 28 29 11E	110 12	8-e 20 17 - 19)	
	22 1 23			9 9 10	18 – 17		
		2	3-0	31	8 8	% 7	
Ĺ			Ø18	Smm .	5	J	
	166 VI	HRE'A'	15A 10A				
	166 VI / G G X6/6	RON REEN			±/1		
		http	s://tractorman	ualz.com/			

80. Cab and shields

81 Cabin
82. Shields
83. Air conditioning



		Model	Code	Page
80. Cab and shields	8. 11. 1990	6000-8750	810	1


Contents

General (Op. no. 810)	
Special tools	
Cab, general	 (
Instruments and controls	 4
Seat	
Cabin heater	 8
Repair instructions (Op. no. 811)	
Removing and fitting cabin:	
A. Removing cab	 •
D. Etu:	,
B. Fitting cab	


80. Cab and shields		Model	Code	Page
	8. 11. 1990	6000-8750	810	2

Locally prepared tools

ET 894 110 Tool for lifting the cabin

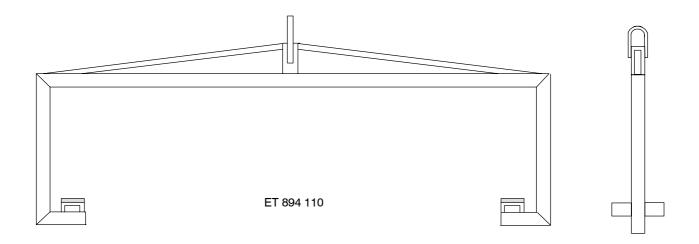


Cab, general

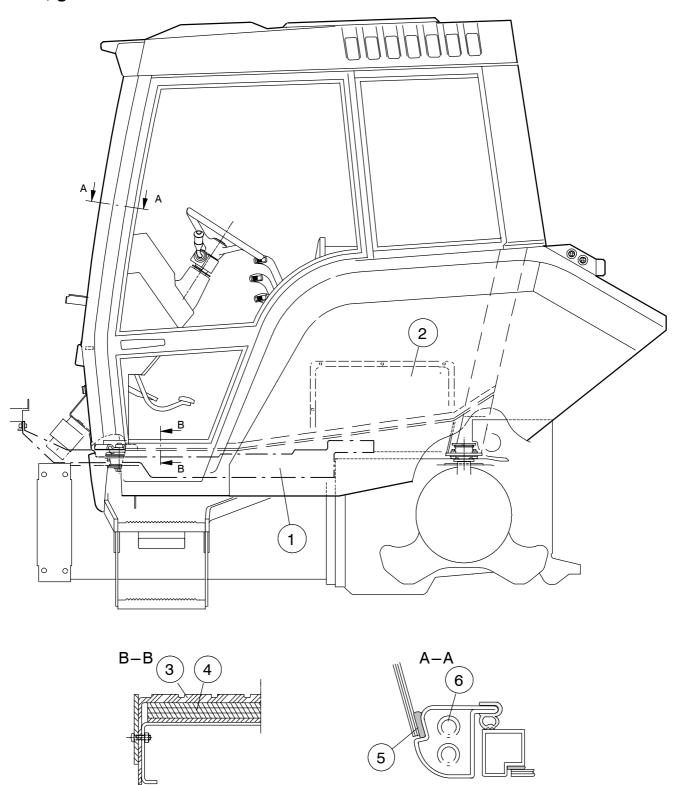

- 1. Sound insulating shield.
- 2. Access hole (on the RH side mudguard). On the cabin floor there is also an access hole for fitting the clutch shaft coupling sleeve.
- 3. Floor mat: rubber or polyurethane.
- 4. Insulating material: foam rubber s=15mm (protected with polyurethane film).
- 5. The windscreen and door windows have been glued onto the cab frame in the beginning of the tractor production. Later the glasses have been fastened with butyl rubber and plastic fasteners.
- 6. The hoses for the air conditioner (optional equipment) are located in the LH side front corner pillar (in the right side there are the hoses for the cab heater).

Instruments and controls

Instrument panel and pedals

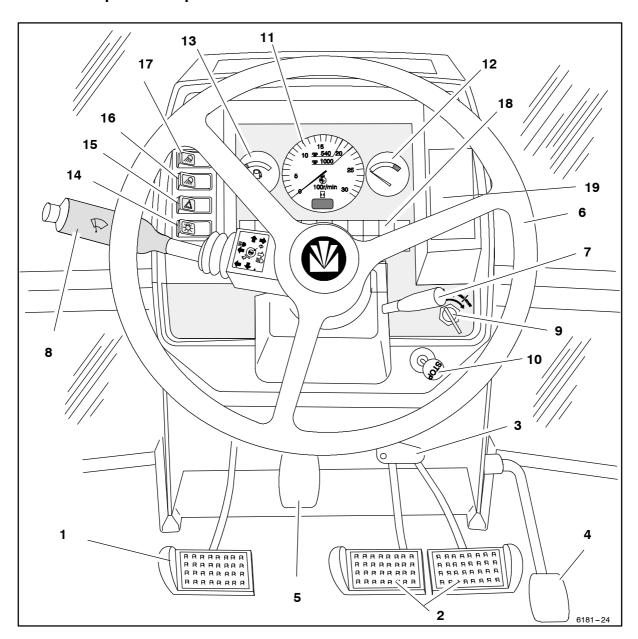


- 1.Clutch pedal
- 2.Brake pedals
- 3.Latch for brake pedals
- 4.Accelerator pedal
- 5.Lock for steering wheel inclination
- 6.Steering wheel
- 7.Lever for adjusting steering wheel height
- 8.Control for:
- main/dipped headlights
- direction indicators
- horn
- windscreen wiper
- windscreen washer
- headlight flasher


- 9.Ignition switch
- 10. Stop control
- 11.Rev. counter and hour recorder
- 12.Coolant thermometer
- 13.Fuel gauge
- 14.Light switch
- 15 .Hazard warning flasher switch
- 16.Switch, rear working lights
- 17.Switch, front working lights
- 18.Indicator lights on instrument panel
- 19. Places for switches for optional equipment

Note! On tractors which have Delta Powershift, the DPS indicator light panel is fitted in the instrument panel on the RH side.

Indicator and warning lights

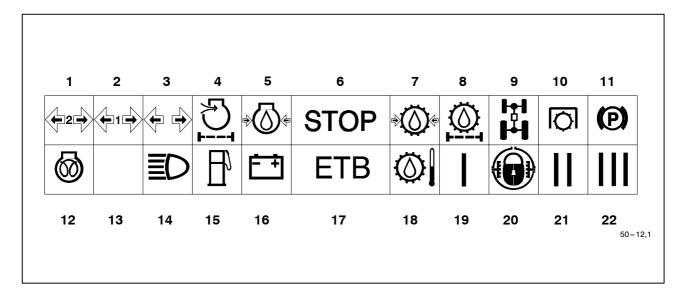

- 1.Direction indicator warning light for second trailer (green)
- 2.Direction indicator warning light for first trailer (green)
- 3. Tractor direction indicator warning light (green)
- 4.Air cleaner warning light (yellow)
- 5.Engine oil pressure (red)
- 6.Engine Stop (red)
- 7.Gearbox oil pressure (red)
- 8.Blocked working hydraulics pressure filter, red (option)
- 9. Front wheel drive (yellow)
- 10. Power take off 540 r/min (yellow). From the beginning of the year 1994 common with 1000 r/min PTO (AC II).
- 11. Parking brake (red)
- 12. Thermostart glow (yellow)
- 13.Not used (yellow)
- 14.Main beams (blue)
- 15. Low fuel level (yellow)
- Rev. counter and hour recorder

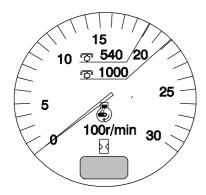

The rev. counter shows the engine speed in hundreds of revolutions per minute. The revolutions which correspond to the nominal revolutions of PTO are also marked on the rev. counter.

The digital hour recorder shows the total number of hours worked, when the lift/lower switch of the power lift is in the lifting position.

- 16. Battery charging (red)
- 17.ETB, Σ -power (yellow), 8750 tractor only
- 18. Gearbox oil temperature (red)
- 19. Not used (red). Later DPS indicator light
- 20. Differential lock (yellow)
- Power take off 1000 r/min (yellow). Removed from the beginning of the year 1994 (AC II). See point 10. Later DPS ind. light
- 22. DPS ind. light.

The central warning (STOP) lamp is actuated by::

- engine oil pressure
- gearbox oil pressure
- gearbox oil temperature
- engine coolant temperature


If the central warning light (stop) comes on when the tractor has been driven the engine must be stopped immediately and the fault must be repaired before continuing again.

Note! If the STOP-light comes on alone, and engine temperature is not too high, the fault lies in the engine temperature sensor, which should be changed (temperature gauge shows, however, a correct value). In this case, the STOP-light goes temporarily out, when you disconnect the sensor wire.

When the lift/lower switch is in the lower position, the display shows the position of the lower links on a scale 0-100 (50=middle position).

Note! The letters Ac after the number mean Autocontrol.

Controls on RH side

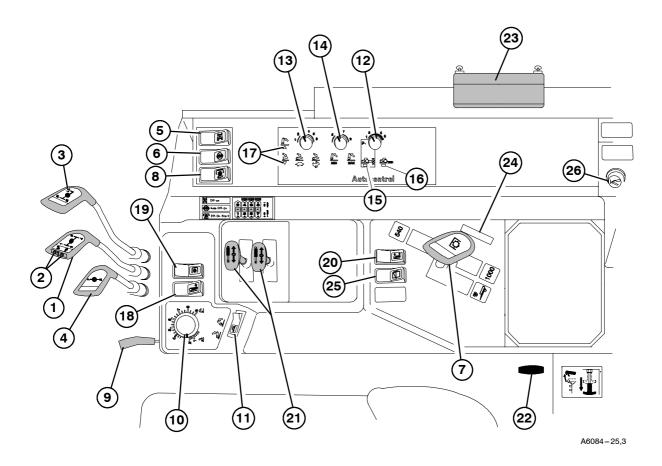


- 1. Speed gear lever
- 2. Push buttons for Delta powershift operation (alternative equipment)
- 3. Range gear lever
- 4. Forward/reverse gear lever
- 5. Switch for 4WD
- 6. Switch for differential lock (3 positions)
- 7. PTO control lever
- 8. PTO switch (3 positions)
- 9. Hand throttle lever
- 10. Position control knob, hydraulic lift
- 11. Lift/stop/lower switch, hydraulic lift (3 positions)
- 12. Draft control selector
- 13. Lowering speed selector
- 14. Transport height selector
- 15. Position control indicator light
- 16. Draft control indicator light
- 17. Lift/lower indicator light
- 18. Forced-lowering switch for hydraulic lift, standard on
- ACD linkage models, extra equipment on other models.
- 19. Agrodata instrument switch (option)

- 20. Lift/lower switch (corresponding push-buttons are located on both mudguards)
- 21. Auxiliary hydraulic valve levers
- 22. Pick-up hitch release control
- 23. Side window opening handle
- 24. Place for remote control (cutter etc.)
- 25. Rear window wiper + washer (optional equipment)
- 26. Lighter (also for electric output)

Note! Parking brake lever is placed on the LH side of the driver's seat. Cab heater controls are fitted on the roof console (see cabin heater on page 810/8–9).

Control on RH side on HiTech models

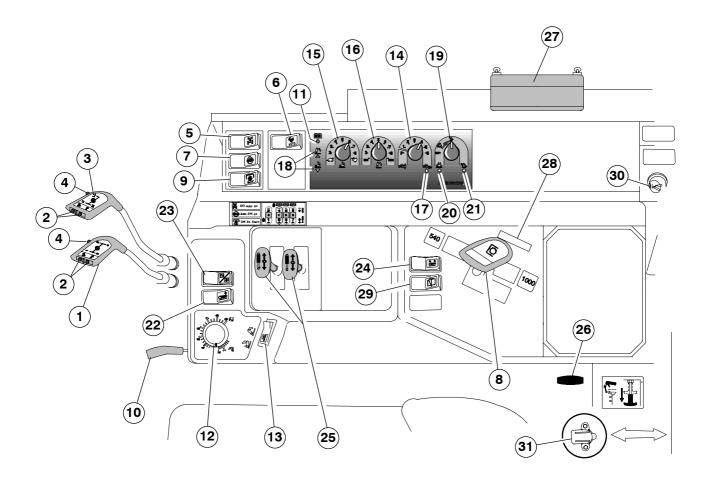


- 1. Speed gear lever
- 2. Delta Power Shift push buttons
- 3. Range gear lever
- 4. HiShift button
- 5. 4WD rocker switch
- 6. Delta Power Shift Auto/Man switch
- 7. Diff. lock switch (three positions)
- 8. PTO control lever
- 9. PTO rocker switch (3 positions), PTO push buttons on rear mudguard as an option
- 10. Hand throttle
- 11. Diagnosis light (indicated possible faults)
- 12. Position control potentiometer
- 13. Power lift lift/stop/lower switch
- 14. Draft control selector
- 15. Lowering speed selector
- 16. Transport heigth selector
- 17. Ind. light, draft control mode, Autocontrol D (ACD)

- 18. Lift/lower ind. lights
- Oscillation damper (DBC) switch. On Autocontrol D (ACD) slip control as an option
- 20. Ind. light, oscillation damper
- Slip control ind. light, on Autocontrol D (ACD) as an option
- 22. Forced lowering switch
- 23. Switch for AD-instrument
- Power lift lift/lower rocker switch (correcponding yellow push buttons on both rear mudguards.
- 25. Control levers, auxiliary hydraulics
- 26. Pick-up hitch release control (option)
- 27. Side window opening handle
- 28. Place for remote controller
- 29. Rear window wiper+washer (option)
- 30. Cigarette lighter (also current socket)
- 31. 3-pin current socket

		Model	Code	Page
80. Cab and shields	1. 10. 1999	6250-8950	810	6B

Dashboard on HiTech models

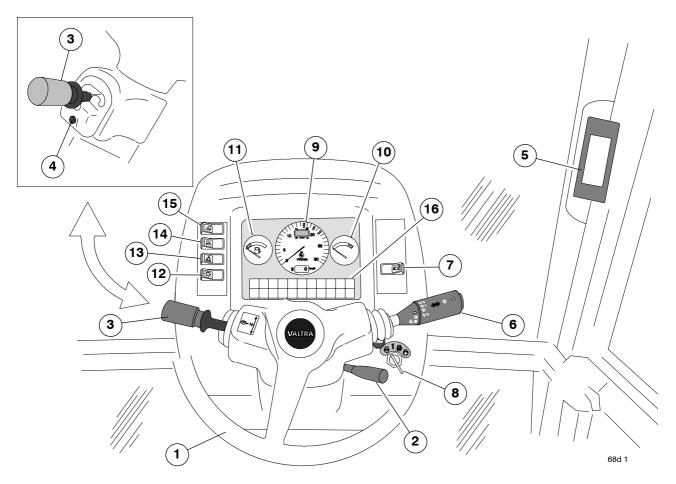

Shuttle/parking brake lever (3.) and combination control (6.) can be fitted also on the other side of the steering wheel.


- 1. Steering wheel
- 2. Locking lever, steering wheel height
- 3. Shuttle lever/parking brake lever
- 4. Delta Power Shift pre-programming button for driving direction change
- 5. Display for transmission functions
- 6. Combination control:
 - high/dipped beams
 - direction indicator flashershornwindscreen wiper

 - windscreen washer
 - high beam flash

- 7. Toggle switch, raised headlights (option)
- 8. Ignition switch
- 9. Rev counter/hour recorder/lower link position, not on 8950Hi.
- 10. Engine temperature gauge
- 11. Fuel gauge
- 12. Light switch
- 13. Switch for hazard warning flashers
- 14. Switch, rear working lights
- 15. Switch, front working lights
- 16. Warning ligh panel

80. Cab and shields		Model	Code	Page
	8. 11. 1990	6000-8750	810	7


Driver's seat

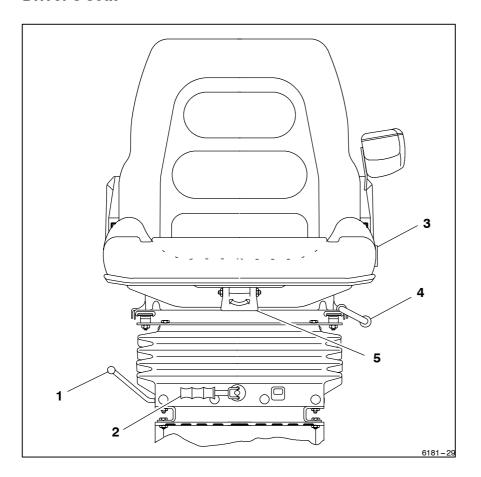

- Lock for turning seat
 Suspension
- 3. Seat back inclination
- 4. Adjustor forward/rearward5. Lock for side inclination of the seat

Note! Height adjustment by lifting the seat

Cabin heater

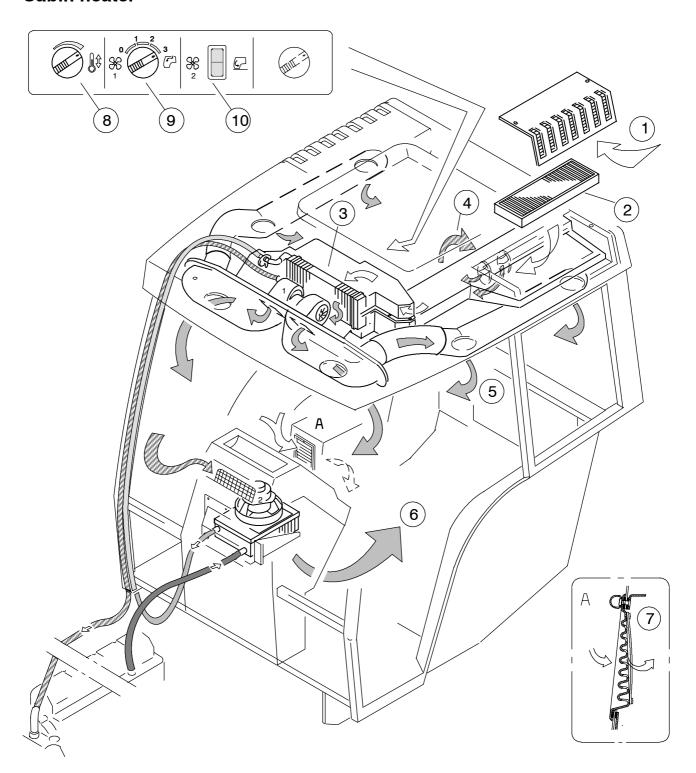

- 1. Air intake
- 2. Air filter (clean at intervals of 200 running hours)
- 3. Heater radiator
- 4. Re-circulation of air (can be closed when needed)
- 5. Warm air into the cab (nozzles can be turned 360°)
- 6. Warm air for the lower part of the cab
- 7. Overpressure valve
- 8. Heating and ventilation control
- 9. Roof heater fan (3-speeds)
- 10. Floor heater fan


Note! The heater unit components on the roof are accessible after removing the upper roof plate. Detach the roof plate as follows:

- open the roof hatch and unscrew the screws on the edge of the hatch
- unscrew the screws on the rear and front edge of the roof (6 pcs)
- unscrew the front gutter plate screws
- remove the upper roof plate

Note! When fitting the roof plate, do not tighten the screws too hard because the roof plate material (glass fibre) could be damaged.

9

Ventilation and heating system, cab PT/94

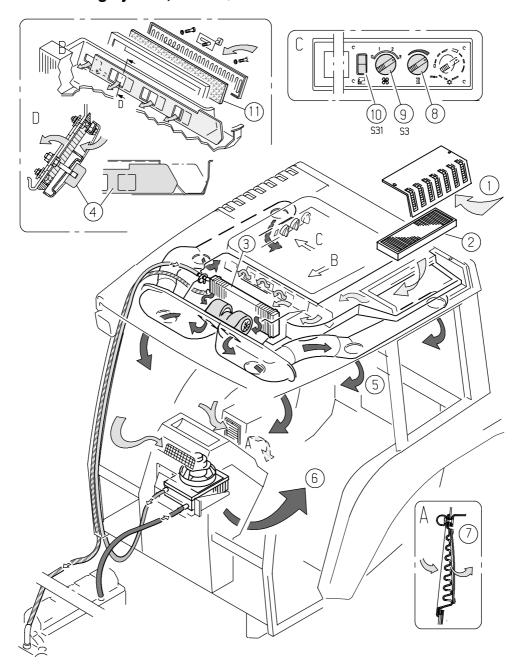

- 2. Cab air filter (cleaning at every 250 running hours).
- 3. Heater radiator. The radiator has been made wider in connection with modifications.
- 4. Recirculation valve

In the front part of the roof panel there is a steplessly adjustable air recirculation grille. When opening the grille, the outdoor air intake passage is closed at the same time (the passage is reduced to about 15 %).

When the grille is open (fully open when the knob is in the extreme position on the LH side) it is achieved:

- Faster cab heating.
- Greater heating capacity.
- Greater cooling effect if the air conditioner is fitted.

When the grille is closed (the knob on the RH side) it is achie-

- Better removal of moisture and prevention of icing
- Greater pressurisation of the cab (reduced dust ingress)
- 5. Warm air into cab (nozzles can be turned 360°)
- 6. From floor heater fan
- 7. Overpressure valve
- 8. Heater control knob
- 9. Roof fan (3-speed).
- 10. Floor heater fan switch (2-speed with effect from cab no.
- 11. Pre-filter is accessible after removing the grille. Wash the filter when necessary.




1. Removing and fitting cab


Note! If the garage has not enough lifting space, first remove the rear wheels. Then detach the auxiliary hydraulic valve block bracket on the gearbox (work through access hole on the mudguard). Then detach the quick—action couplings from their bracket and fasten valve blocks and pipes to the cab with wires. Now it is not necessary to lift the cab very much.

A. Removing cab

- 1. Remove the engine hood plates. Disconnect the battery cables.
- 2. Detach the following in front of the cab on the LH side:

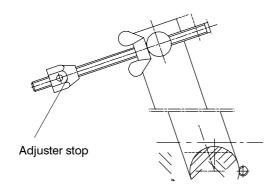


- adjusting rod from the clutch lever (measure the position of the adjuster stop for easier fitting)
- stop control cable from the injection pump
- 3. Detach the following parts from the cab front wall:

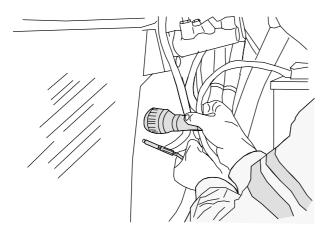


- socket and the accelerator pedal cable
- steering valve bracket screws
- cab earth cable
- 4. Disconnect the cable from the starter motor. Disconnect the windscreen washer hose and cable shoe.
- 4. Drain a little engine coolant through the motor block plug and disconnect the heater hose front ends from the engine.

5. Disconnect the following parts on the RH side:

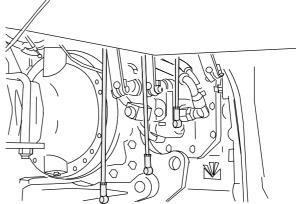

- shifter rods from the gear lever lower ends
- shifter cables from the selector levers and from the lower ends of the gear levers
- ground speed PTO cable from its selector lever (if fitted)
- solenoid valve leads from the control valve for the hydraulic lift
- 6. Disconnect the following parts at the rear of the tractor on the RH side:
- hydraulic lift sensor connectors
- PTO control cable lower end
- pick-up hitch release control lower end
- lifting link gear control rod lower end
- 7. Disconnect the following parts at the rear of the tractor on the LH side:
- solenoid valve lead connector
- sensor wires from the servo valve block
- 8. Unscrew the brake cylinder fixing screws and release the parking brake cable. Support the brake cylinders.

Note! The brake pipes can also be disconnected at the joint under the cab floor on the LH side. Now it is not necessary to detach the brake cylinders.

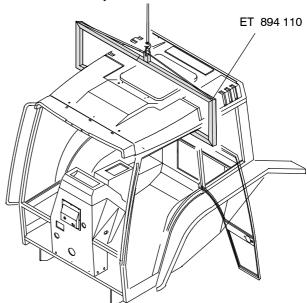

9. Unscrew the cab front and rear attaching bolts. Fit the tool ET 894 110 on the rear edge of the door opening and lift the cab carefully.

Note! Make sure that the auxiliary hydraulic valve levers do not prevent lifting. Remove, if necessary, the lever knobs.

		Model	Code	Page
80. Cab and shields	8. 11. 1990	6000-8750	811	2

B. Fitting cab

1. Lift the cab onto the tractor frame and guide all detached parts into places. Make sure that the auxiliary hydraulic valve levers fit through their hole.

2. Tighten the cab attaching bolts.

Connect the following parts in front of the cab on the LH side:

- stop control cable to the injection pump
- clutch adjusting rod to the clutch lever (fit the adjuster stop on the rod according to the measurement)

Connect the following parts to the cab front wall:

- socket and the accelerator pedal cable
- steering valve bracket
- cab earth lead
- connect the cable to the starter motor
- connect the windscreen washer hose and cable connector
- connect the cab heater hoses and fill the cooling system

Connect on the RH side of the tractor:

- shifter rods to the gear lever lower ends
- shifter cables to the selector levers and gear lever lower ends.
- ground speed PTO control cable wire (optional)
- solenoid valve leads to the control valve of the hydraulic lift

Connect at the rear of the tractor on the RH side:

- hydraulic lift sensor connectors
- PTO control cable lower end
- pick-up hitch release control lower end
- lifting link gear control rod lower end

Connect at the rear of the tractor on the LH side:

- connector for the solenoid valve leads
- sensor leads to the servo valve block

Fit at the rear of the tractor:

- brake cylinders (or brake pipe joints)
- parking brake cable
- 3. Connect the battery cables. Test run the tractor and ensure that the electrical system and the control levers function properly. Bleed, if necessary, the brake system and adjust the brakes.
- 4. Ensure that the accelerator pedal and stop control cables have been fitted correctly. Fit the engine hood plates.

Note! If you detached the cab in the way which needs less lifting space (see the note in the beginning of instruction A), carry out the following steps:

- attach the auxiliary hydraulic valve set bracket to the gearbox (work through the access hole).
- connect the quick action couplings to the bracket at the rear of the tractor.
- fit the access hole cover and the rear wheels

	1,1,1995	Model	Code	Page
80. Cab and shields	1. 8. 1998	6000-8750	811	3

2. Glueing cab windows

The cab front windows and the door windows have been fastened with sealing compound (butyl) and plastic fasteners. In connection with possible repair work the windows are fitted as follows:

- Clean the window contact surfaces from remaining sealant and glass. Remove possible grease spots with suitable solvent.
- 2. Before fastening the window, check that it fits into place. Ensure that there are not unevenesses on the contact surface (e.g. welding splashes etc).
- 3. Place butyl rubber band KH 3708 onto the window contact surface on the door or on the cab frame.
- Position the window in place and fasten it with the plastic fasteners. Check that the glass is in the middle of the opening.
- 5. Varnish the butyl band with protective lacquer UF 3274 so that dust does not fasten on the sealant (not necessary if the tractor is not used in dusty conditions immediately after fitting the windows).

Note! Since in very warm conditions the side exhaust pipe can raise windscreen temperature near the max. allowable temperature of the butyl band $(+80^{\circ}\text{C})$, the butyl band raw material has been changed. Temperature resistance of the new material is $+100^{\circ}\text{C}$. In addition, the side movement of the windscreen has been prevented by filling the space between the windscreen upper part and the frame with silicone mass.

Order numbers:

 Butyl band (Ø 8 mm, 6 m, 80°C) KH3708 	
- Butyl band (Ø 10 mm, 6 m, 100°C) KH6343	
- Silicone (300 ml) UK0067	
- Silicone (80 ml) UK0068	
- Cleaner (250 ml)	0

3. Changing rear window

- 1. Remove the damaged rear window. Remove the middle position locking device by removing the latch, latch pin and the spring (these parts were removed with effect from tractor ser. no. **658670**).
- 2. Check that the handle fits correctly against the window. Bend the handle, if needed, so that holes on the handle and the window are against each other. Check also that the handle fastening flanges are parallel with the glass surface. Fasten the handle and note the mounting order of the fastening parts.
- 3. Fit the window seal. Fit the window. Bend the hinges, if necessary, so that the window fits correctly in position.
- 4. Adjust counter piece 31607100 so that the glass closes with power of 15 kp which corresponds the seal compression of 2–4 mm in the middle of the seal in the lower edge. If there is not enough adjusting space, new M6 holes have to be drilled for counter piece screws HD 9153. Alternatively sheet iron screws HN 6646 can be used.




	15, 6, 1992	Model	Code	Page
83. Air conditioner	1. 1. 1994	6000-8750	830	1

Contents

Air conditioner (Op no 830):	
Technical specifications	2
Operation principle	3
Maintenance, fault tracing, repairs (Op no 831):	
- Safety precautions	
- Maintenance	
- Drier container	2
Fault tracing without special equipment:	
A. Correct function	
B. Refrigerant filling and moisture in system	3
C. Electrical system	3
D. Compressor	
E. Expansion valve	4
F. Evaporator	4
G. Condenser	
2. Fault tracing with pressure gauges	5
3. Important information on air conditioner repairs and spare part storage	8
4. Compressor	9
5. Changing refrigerant R12 to refrigerant R134a	10

83. Air conditioner

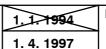

Model

6000--8750

Code **830**

Page 2

Technical data

Important! These instructions present both the earlier air conditioner (refrigerant R12) and the later air conditioner which has refrigerant R134a (Suva). The compressor and the drier reservoir have markings stating which one of the refrigerants is in the system. If R12 refrigerant is replaced with R134a, see page 831/10. Tractors which have the earlier air conditioner, the heater and air conditioner control panel is fitted on the front side of the cab roof. On the later air conditioner, the control panel is placed on the RH side of the cab roof.

Air conditioner on Valmet 6000-8750 tractors:

Refrigerant	
Compressor Diesel Kiki DKS 15 CH: - Number of cylinders - Cyl diam x stroke - Max revs - Lubricating oil if refrigerant R12 - Lubricating oil if refrigerant R134a - Lubricating oil volume Electro – magnetic clutch: - voltage - starting torque - power consumption - clutch clearance	ø 34 mm x 24 mm 7000 r/min Freol DS-83P or Esso 2980 ZXL 100 PG (DH-PS) 200 cm ³ (2,0 dl) 12 V (DC) 50 Nm 44 W (max)
Drier - heat fuse melts at (not heat fuse if refrigerant R134a) Pressure switch switches off at max pressure, R12 Pressure switch switches off at max pressure, R134a - switches on again when pressure drops Pressure switch switches off at min pressure - switches on again when pressure rises up to	+107+118°C 2,55±0,2 MPa 3,40±0,2 MPa 0,57±0,2 MPa 190±20 kPa
Thermostatic switch: - switch off when evaporator temperature is below	+6+7 °C
High and low pressures at engine revs 1500 r/min between temperatures +20+25 °C: – low pressure	


OO Air condition on	15 6. 1992	Model	Code	Page
83. Air conditioner	1. 1. 1994	6000-8750	830	3

Operating principle

An air conditioner takes heat from the cab air when outdoor temperature is high. Refrigerant in the system is exposed under different pressures and temperatures and this causes a cooling effect. Refrigerant vaporizes in the evaporator and evaporation absorbs heat which is taken from the warm cab air which is blown through the evaporator.

The air conditioner functions so that the refrigerant is continuously circulated in the system at which time it changes from liquid form into gaseous form. This process absorbs heat from the cab when the refrigerant vaporises in the evaporator and emits heat to outdoors when refrigerant becomes condensed in the condenser.

Although the process has four parts, it can be divided into two main parts: high pressure side and low pressure side according to the figure below.

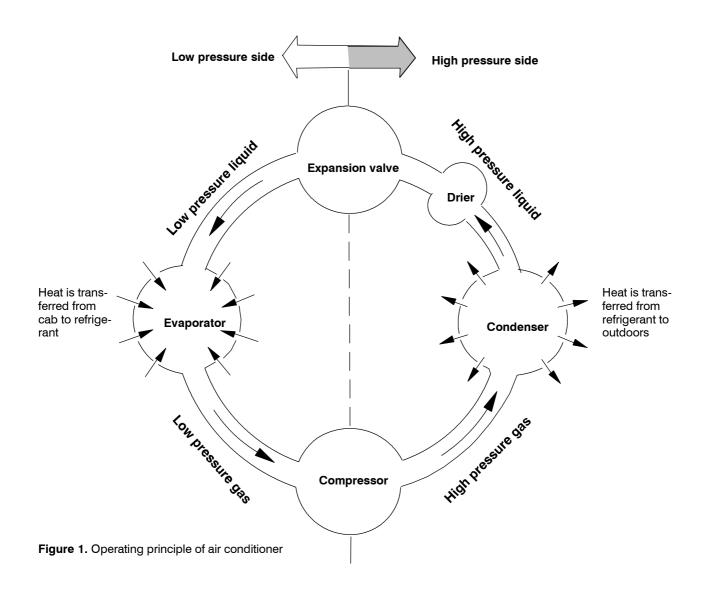

83. Air conditioner

15. 6. 1992 1. 1. 1994


Model **6000 -- 8750**

Code

830

Page

4

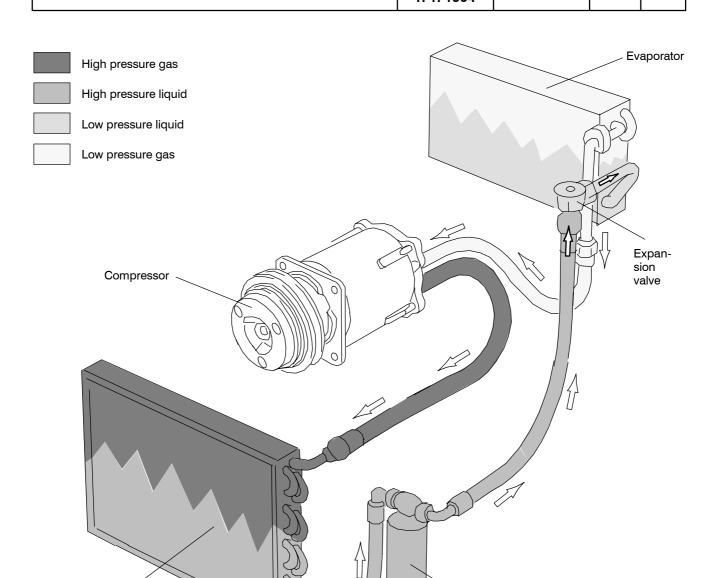

Circulation of the refrigerant begins from the compressor. The compressor sucks low pressure gas from the evaporator and compresses high pressure gas into the condenser. In the condenser gaseous refrigerant becomes condensed and emits heat to outdoors. From the condenser high pressure liquid flows via a drier to the expansion valve in which a part of the liquid vaporizes and the refrigerant cools and its pressure drops. Liquid flows from the expansion valve into the evaporator where cab heat changes liquid into gas. This low pressure gas then flows into the compressor suction side from where a new circulation begins.

Condenser

Max. cooling effect corresponds to the situation when the compressor works all the time. In order to achieve a certain cooling effect, the compressor has to keep a certain pressure in the evaporator outlet side.

An evaporation temperature of Freon R12 is -30° C at normal air pressure. The corresponding value of the R134 is -26° C. When pressure increases the evaporation temperature rises and vice versa.

When the air conditioner is operating the low pressure hoses are cold and high pressure hoses are warm.

Drier

Liquid refrigerant from the condenser is filtered and dried in the drier container. The drier also prevents gaseous freon from entering into the expansion valve. In the drier container there is a pressure switch which switches off current to the compressor if pressure in the high pressure circuit rises too high or becomes too low:

In addition, the drier has a heat fuse (not if refrigerant R134a) which melts at 107-118 °C (corresponds pressure 3,4-3,8 MPa) and refrigerant blows off. The drier has two inspection glasses through which can be checked the refrigerant filling and moisture in the system (see page 831/2).

Earlier air conditioner which has the control panel fitted in the front part of the cab roof.

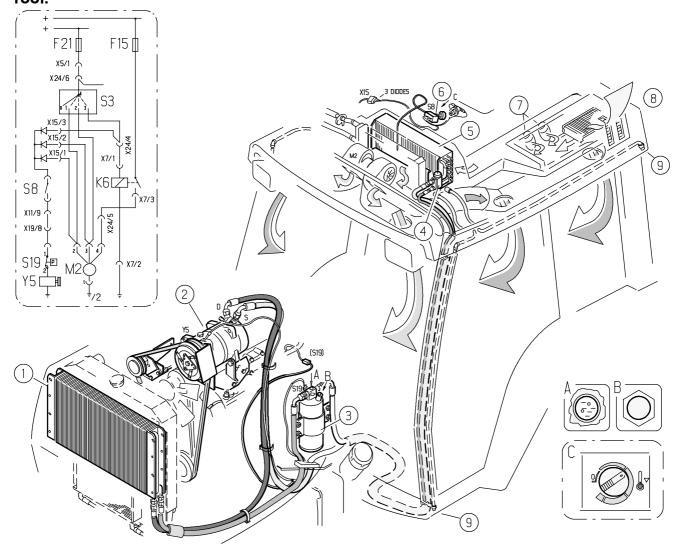


Figure 3. Air conditioner on Valmet 6100-8100 tractors.

- 1. Condenser
- 2. Compressor
- 3. Drier
- A=Inspection glass
- B=Moisture indicator
- 4. Expansion valve
- 5. Evaporator
- 6. Temperature switch
- 7. Re-circulation nozzles
- 8. Air inlet into cab
- 9. There are valves in the outlet pipes for condensing water. The valves prevent air from entering into the evaporator housing. Water becomes condensed in the housing when the warm cab air flows through the cold evaporator.

Compressor (2) is driven by an extra belt pulley at the front end of the crankshaft. The compressor belt pulley is fitted with an electromagnetic clutch, which switches the compressor off and on according to the required cooling effect. The compressor is shown on page 831/9.

The expansion valve (4) regulates the amount of refrigerant in the evaporator (5) so that the refrigerant vaporizes in the best possible way. The expansion valve lets only as much refrigerant flow into the evaporator as the evaporator can vaporize. The expansion valve is shown on the next page.

Wiring diagram:

F21 = Air conditioner fuse

F15 = Fan fuse

S3 = Fan switch

S8 = Temperature switch

S19 = Pressure switch

Y5 = Electromagnetic clutch

M2 = Fan

K6 = Relay, max speed III of fan

Temperature switch sensor (6) (capillary tube) is pushed between the evaporator fins and it senses evaporator temperature in its coldest place. The sensor switches off the compressor when the evaporator temperature drops below +2...+3°C (prevents icing on the evaporator), and switches on again when the evaporator temperature has risen over +6...+7°C (or up to +19°C when the temperature switch is in min position).


Code

830

Page

6

Later air conditioner (ECOND) which has the control panel fitted on the RH side of the cab roof. Refrigerant R134a.

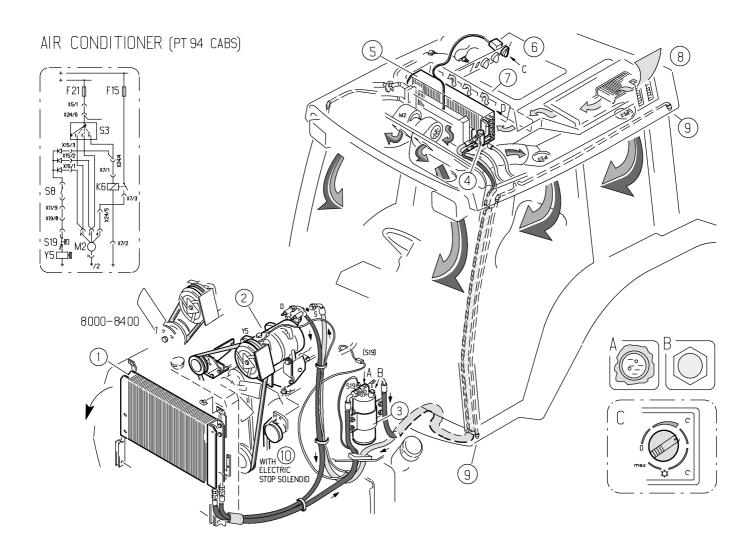


Picture 4. The following modifications have been made:


- 1. The condenser has more cooling area. The front covering is openable and the condenser has hinges in the lower edge for easier cleaning.
- 2. New compressor which has new oil type and new service valves. Compressor seal material is different. The compressor type plate is marked with the new refrigerant R134a.
- 3. New drier reservoir with new synthetic drying material. The drier has not a heat fuse. The drier reservoir type plate is marked with new refrigerant type. On the latest tractors the drier reservoir is fitted in front of the engine radiator.
 - 4. Expansion valve has different adjusting values
 - 5. Larger evaporator
 - 6. Air conditioner switch is placed on the roof console on the RH side of the roof.
 - 7. Recirculation grille with an adjustable valve.
 - 8. Cab air filter
 - 9. Condension water draining pipes
 - 10. An additional belt pulley, if the tractor has the electric stop solenoid on the fuel injection pump.

All rubber pipes and seals are of different material.

		Model	Code	Page
83. Air conditioner	1. 1. 1994	6000-8750	830	7

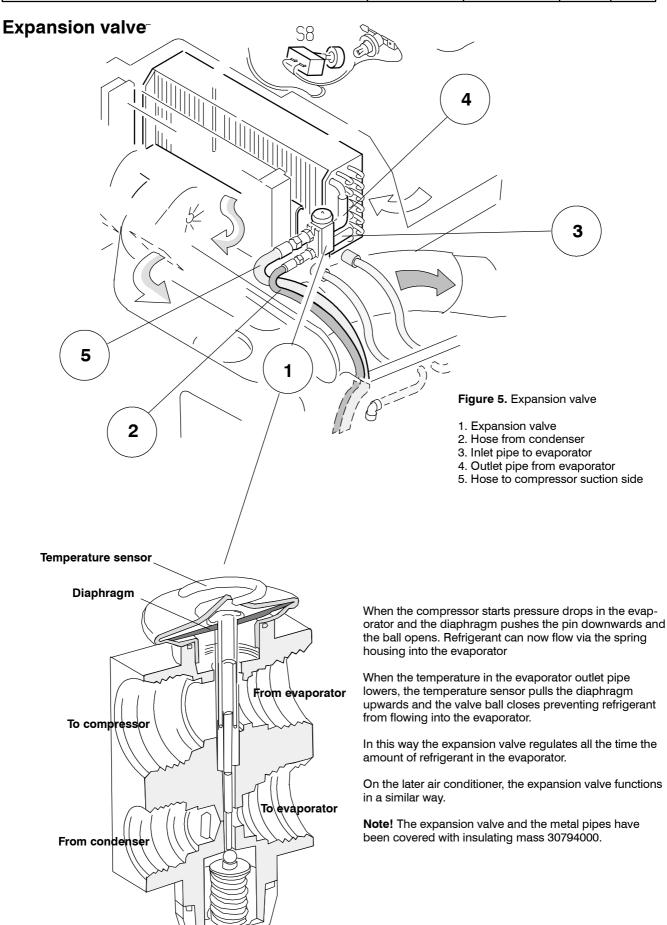

		Model	Code	Page
83. Air conditioner	1. 1. 1994	6000-8750	830	8

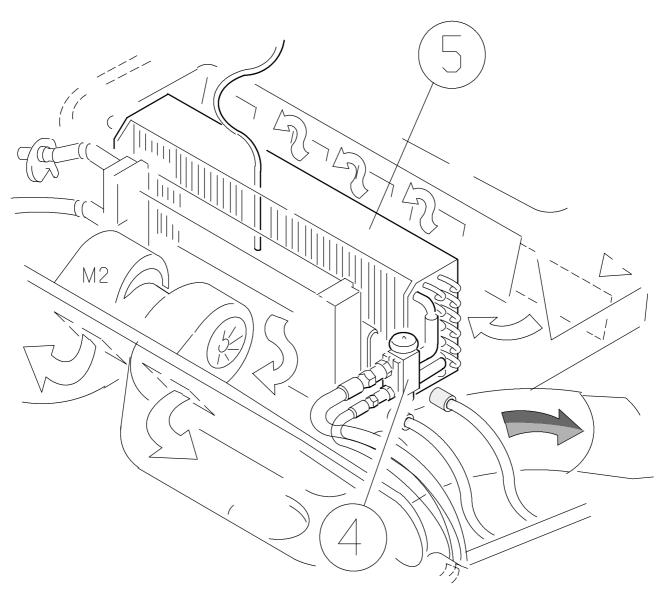

Picture 6. The new air conditioner

- 4. Expansion valve 5. Evaporator. At the rear of the evaporator there is the recirculation grille.



	15 5. 19 93	Model	Code	Page
83. Air conditioner	1. 1. 1994	6000-8750	831	1

Maintenance, fault tracing and repairs

Safety precautions

Important! If the air conditioner system must be opened, this work must be done by an expert who knows refrigerating systems.

- The pressure of the refrigerant is always greater than its normal boiling point. If piping is split, the refrigerant will evaporate or boil very rapidly.
- -Uncontrolled escape of refrigerant must be avoided. The refrigerants Freon 12 and R134a are non-flammable, non-toxic (except when in contact with a flame) and non-corrosive (except in contact with water).
- Never attempt to empty the system by loosening a connection. Slow emptying without danger can only be carried out using a manifold gauge set.
- You should be very careful when handling refrigerant. It can freeze the skin or the eyes on direct contact. Never handle refrigerant without wearing safety goggles, as well as gloves.
- Do not empty the system in a room where there is a flame. Decomposition of R12 gives **phosgene gas which is deadly**. The same precautions must be taken if you are looking for leaks. Refrigerant R134a and open flame form poisonous and stimulating compounds (e.g. hydrofluoric acid)
- Never weld or clean with steam near a filled system: excess pressure may be created with possible leakage.
- If it is necessary to retighten a connection, use two spanners for tightening, so as to prevent distortion which may give rise to leakage.
- Do not store refrigerant in the sun or close to a source of heat.
- Avoid subjecting the bottle to impact. Do not carry the bottle in the passenger compartment of a vehicle.

In the event of an accident, proceed as follows:

— If you get refrigerant in your eyes, wash them carefully with a solution of mineral oil, and continue to wash them carefully, with a solution of boric acid and water (1 teaspoonful of acid, diluted in a quarter of a cup of water). Contact a doctor immediately.

Important! Never wash you eyes with pure water because refrigerant+water causes corrosive acid.

Freezing caused by liquid refrigerant can be treated by progressively thawing the injured area with cold water and then applying a dry skin cream. Contact a doctor immediately.

Maintenance

- Before switching on the air conditioner, ensure that windows and doors are properly closed. If for any reason the cab cannot be completely closed, the air recycling system must be switched off. If these recommendations are not observed, there is a risk of blockage at the evaporator and risk of damage to the compressor.
- Check externally the drier, condenser and hoses (if the evaporator or expansion valve for any reason should be checked, the cab roof and the evaporator housing cover must be removed). All impurities (and ice on evaporator) cause malfunctions. Check also occasionally the tightness of the compressor belts.
- Check regularly through the drier inspection glasses moisture and refrigerant filling in the system (see next page).
- Always when the system has leaked and it has been opened and specially if brown or yellow colour can be seen in the drier inspection glass or if the moisture indicator has changed its colour, the drier should be changed. Also if the heat fuse has melted (not heat fuse if refrigerant R134a), the drier must be changed.
- From the bottom of the evaporator housing there are drawn three drain hoses through which the condensing water flows away from the housing. This prevents icing on the evaporator.
- In order to keep the system in good condition, we recommend to operate the system for several minutes each month in order to lubricate all the components, since the compressor oil can get mixed with the refrigerant.
- When restarting the compressor, specially if it has not operated for some time, proceed in the following manner to ensure lubrication right from the first rotations of the compressor:
- . Switch on the electromagnetic clutch by switching the fan on and moving the temperature switch to cold.
- . Crank over the tractor engine for a few seconds with the fuel stop button out.
- . Then push in the fuel stop button, start the engine and allow to idle slowly for several minutes.

A simple functional check:


- a) Start the engine and adjust engine revs to 1500 r/min. Turn the fan switch to max speed and select the max cooling effect with the temperature switch (compressor starts).
- **b)** Check temperature of different components:
- $-\mbox{Low pressure}$ hoses, compressor inlet hose should be cold when touched by hand.
- Compressor outlet hose, condenser, drier and every high pressure hose should be warm when touched by hand

Note! Expansion valve and evaporator are accessible only after removing the cab roof. The thermostatic temperature switch is accessible after removing the roof panel in the cab.

	15 6: 1992	Model	Code	Page
83. Air conditioner	1. 1. 1994	6000-8750	831	2

Possible faults can be localized easily if pressure gauges are connected to the compressor service valves. The low pressure gauge is connected to valve S and the high pressure gauge to valve D. For instruction on how to carry out these pressure measurements, see page **831/5**.

Note! If You have not got enough training for repairing refrigerating systems, it is necessary to call an expert if the system should be opened or if refrigerant must be added. The refrigerating system expert has equipment with which repair work can be done in a correct and safe way.

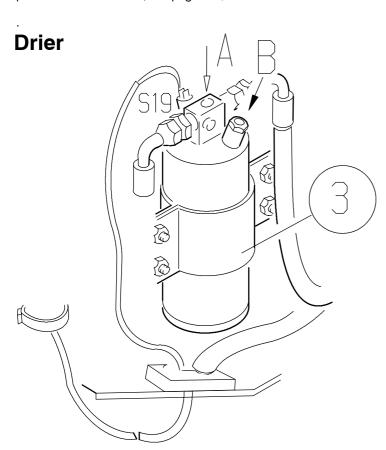

The drier reservoir (3) is a combined expansion/liquid reservoir and a drying filter for moisture. The drier also includes a filter which filters impurities in the system. There are two inspection glasses on the drier: A=inspection of refrigerant and its filling, B=moisture indicator.

The drier reservoir must not be stored with pipe connections open. The drier must be changed if the system has been opened for maintenance work. There is a pressure switch S19 which switches off current to compressor, if the high pressure rises too much or is too low. There is also an in—built heat fuse which melts if refrigerant temperature rises up to 107–118°C (not heat fuse if refrigerant R134a).

Inspection glass A (1500 r/min and max cooling effect)

Sightglass	Description	Conclusion and remarks
	No bubbles appear at all. (Reduction by bleeding is necessary). (This can also mean that there is no refrigerant at all in the system).	POSSIBLE EXCESSIVE REFRIGERANT The high – pressure side will be abnormally hot. REMEDY: Contact authorized workshop for releasing the excess refrigerant
° ° ° ° ° ° ° ° ° ° ° ° ° ° ° ° ° ° °	The fluid inside is almost transparent. A few bubbles may appear as the engine speeds up and down.	SUFFICIENT REFRIGERANT. The high – pressure side will be hot and the low – pressure side cold.
-0-0 o0-0	A few bubbles appear intermittenly, at intervals of 1 to 2 seconds. (Refilling is necessary)	INSUFFICIENT REFRIGERANT. The high-pressure side will be warm, and the low-pressure side fairly cold. REMEDY: Check for refrigerant leakage. Contact authorized workshop.
	When bubbles flow continuously, or the flow has changed to a "mist" flow, the refrigerant is almost exhausted . (Refilling is necessary)	VERY LITTLE REFRIGERANT. There will be almost no difference in temperature between the high – pressure side and the low – pressure side. REMEDY: Stop the compressor and inspect the entire system. When necessary, contact authorized workshop.

N.B. The refrigerant in the inspection glass should be clear. If it has brown/yellowish colour, the refrigerant and the drier must be changed.

Inspection glass B

If the moisture indicator colour is blue, the system is in order. If its colour has changed into pink or grey, the drier and the refrigerant should be changed.

1. Fault tracing without special equipment


Note! This instruction supposes that the outdoor temperature is high enough so that the temperature switch switches on the compressor.

A. Correct function

When the air conditioner is functioning properly the compressor runs and stops at regular intervals and cool air flows into the cab according to the position of the temperature switch.

To check for malfunction, carry out the following simple test in the shadow by fitting a thermometer sensor into the front ventilation nozzle on the LH side and by following nozzle temperatures during 5–10 minutes. During this test the windows, doors and re-circulation nozzles should be closed. Select the max speed for the fan. Adjust the max cooling effect and set the engine revs to 1500 RPM.

Nozzle temperatures should be according to the curves below ($\pm 1,0^{\circ}$ C). Curve A is for the earlier air conditioner and curve B for the later air conditioner which has the roof console on the RH side of the roof:

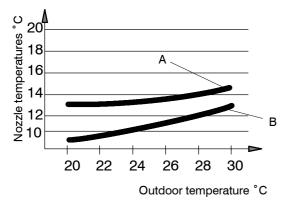

If measured temperatures agree with the curve above, the air conditioner is in order.

If the nozzle temperatures are higher, make sure that the heater control knob is closed so that the warm engine coolant does not circulate in the heating element which is placed in front of the evaporator. If the knob is closed, see the following instruction B.


B. Refrigerant filling and moisture

- Check the amount of refrigerant and moisture in the system through the drier inspection glasses (see page 831/2).

Moisture in the system causes icing in the expansion valve and in the compressor which in turn causes malfunctions. Refrigerant+water causes a corrosive compound.

Possible leakages can be found with an electronic leak detector. If the refrigerant filling is wrong or there is moisture in the system, contact an expert who knows refrigerating systems. If everything is OK, see the following instruction C.

C. Electric system

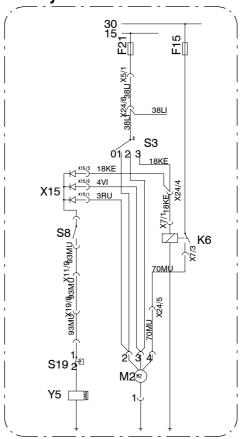

Switch on current to the tractor and turn on the fan S3. If the fan does not start, check fuse F21. If the fan started, turn the temperature switch S8 to max cooling effect at which time the click—sound must be heard from the compressor magnetic clutch. This indicates that the electric system functions.

If the click – sound was not heard, disconnect the wires to the pressure switch S19 and connect the wire ends (never connect the + wire to the frame). If the click can now be heard in the compressor, the electric system is OK, but the fault lies in the pressure switch or in the system pressures. Call an expert.

If the click-sound cannot be heard when connecting the pressure switch wires, check the supply wire for current to the pressure switch. If it is there, the fault lies in the compressor magnetic clutch or in its wiring.


Measure the voltage from the pressure switch supply wire with different fan speeds. If there is no current with some fan speed, the fault lies in diodes, which should be changed. The diodes cannot be changed separately but the complete wiring set no 326 107 00 (earlier air conditioner) or no 328 351 00 (later air conditioner) should be changed.

If there is no current to the pressure switch wire, check connector X19/8 in the cab front wall on the RH side and also connector X11/9 which is placed behind the roof panel in the cab (on the RH side).

If there is no current to the pressure switch wire, connect the temperature switch wire ends. If now there is current to the pressure switch supply wire, the fault lies in the temperature switch which should be changed.

83. Air conditioner 15 6: 1992 Model Code Page 6000-8750 831 4

D. Compressor

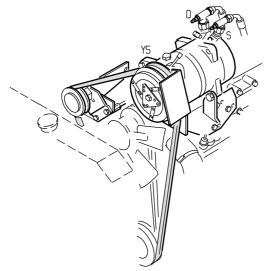

1. Normal function

– When the compressor is functioning properly, it starts and stops regularly. With max cooling effect the compressor runs often but not as long as in min cooling. Unusual sound must not be heard from the compressor. Check the compressor belts regularly.

2. Continuing running, no cooling

The compressor is faulty and should be changed. Also icing caused by moisture can cause this kind of malfunction (check the moisture indicator colour). In this case also temperature difference between high and low pressure pipes is diminutive.

3. Continuing running, max cooling

- The compressor is in order but a fault lies in the temperature switch which does not switch off current to the compressor when the evaporator temperature is under $+2...+3\,^{\circ}\text{C}$. Make sure that the temperature switch sensor is correctly fitted between the evaporator fins. This malfunction causes icing on the evaporator which lowers the cooling effect.

4. Irregular running

- Check the compressor belt tightness.
- Change for faulty compressor

5. Unusual sound

Compressor engaged:

- Check the compressor attachment.
- Electromagnetic clutch slips, faulty bearings or valves in the compressor can cause an unusual sound.
- Wrong refrigerant filling in the system can cause unusual sound
- Change faulty compressor

Compressor disengaged:

electromagnetic clutch clearance is wrongly adjusted.

Note! If the compressor front end is oily and moist, the compressor shaft seal can be leaking. If the compressor does not run at all, the fault is in the electrical system.

E. Expansion valve

Note! The expansion valve is accessible after removing the cab roof and the evaporator housing cover. In addition, the evaporator is covered by insulating mass.

- A faulty expansion valve causes a poor cooling effect.
- If the expansion valve is noisy (continuing whistle), there is too little refrigerant in the system which causes bubbles to appear in the inspection glass of the drier.
- If the expansion valve does not function (stuck fast or frozen in open or closed position) the cooling effect is insufficient.
- If the air conditioner blows first cool air, then warm and then again cool, there is ice in the expansion valve which prevents refrigerant from flowing into the evaporator.

F. Evaporator


Note! The evaporator is accessible after removing the cab roof and the evaporator housing cover.

 If there is icing on the evaporator, the fault lies in the temperature switch or its sensor is wrongly positioned between the evaporator fins.

Note! Do not use the air conditioner if the outdoor temperature is below **+20** °C.

– Make sure that the drain pipes for the condensing water are open i.e. water can flow away from the evaporator housing bottom. Otherwise icing can appear on the evaporator. If there is water on the evaporator housing bottom, the drain pipes should be checked e.g. with compressed air.

G. Condenser

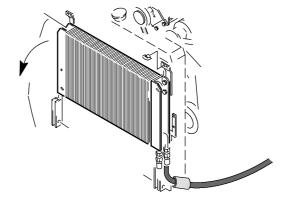

 If malfunctions occur, always check and clean externally the condenser from impurities. Cleaning can be carried out with compressed air. In the later air conditioners, the tractor front covering can be raised up and the condenser has hinges for easier cleaning.

	1_1 2-19 94	Model	Code	Page
83. Air conditioner	1. 4. 1997	6000-8750	831	5

2. Trouble shooting with pressure gauges

System pressures depend directly on air pressure and temperature. At outdoor temperature 20° – 25° C and at engine revs 1500 r/min the low pressure varies between 50–300 kPa and the high pressure between 700–1400 kPa. The pressure gauges are connected to the compressor service valves: low pressure gauge to (S) and high pressure gauge to (D). The service valves are different on the air conditioners which have refrigerant R134a thus preventing mischarging with freon R12.

Fault analysis and symptoms

- a) Leaks in the system will lead to inadequate cooling and low and high gauge readings will be too low.
- b) If the system is under-charged, bubbles will be permanently visible in the dehydrator sight glass and both gauge readings will be low.
- c) If the evaporator is dirty or an expansion valve is blocked or frozen up, there will be a partial vacuum on the low pressure side and insufficient pressure on the high pressure side.

- d) An over-charged system, an expansion valve stuck open or a clogged condenser will cause excessive pressure on the low pressure side.
- e) A clogged condenser and an over-charged system will cause excessive pressure on the high pressure side.

Overcharge

Note! The correct refrigerant filling is **1,4 kg** on Valmet 6000-8750 tractors.

In a correctly charged system, R12 discharged from the compressor in the form of gas looses its excess heat, resulting from compression in the first coil of the condenser and condenses to a liquid in the subsequent coils. Before flowing to the reservoir, this liquid is held in the last condenser coil. If the system is over—charged, the liquid level builds up in the condenser, leaving fewer coils available to condense the gas. Both temperature and pressure then build up, causing hoses to burst in some cases.

Connecting pressure gauges:

Stop the engine. Remove the service valve protective caps. Connect the low pressure gauge to valve S and high pressure gauge to valve D.

Disconnecting gauges:

Stop the engine. Unscrew rapidly the low pressure gauge. Run the air conditioner 5–10 min and stop the engine. Unscrew rapidly the high pressure gauge.

https://tractormanualz.com/

Note! Refrigerant in the gauge hoses blows off. Use gloves and goggles when connecting and disconnecting gauges. Recap valves.

Low pressure too low High pressure normal

Possible fault	Remedy
Expansion valve faulty.	1. Change expansion valve.
2. Moisture in system causing icing in expansion valve	2. Empty and flush the system. Change the drier and the expansion valve if necessary.
3. Expansion valve is	,
clogged or evaporator dirty, if low pressure gauge shows underpressure.	3. Empty system and change the expansion valve and also the evaporator and drier if necessary.
4. Drier blocked (temperature difference on different sides of blockage causes icing in the drier when air conditioner is functioning).	Empty system and change the drier.

83. Air conditioner

15. 6. 1992 1. 4. 1997

Model


Code

Page

6


6000-8750 831

Low pressure high High pressure normal

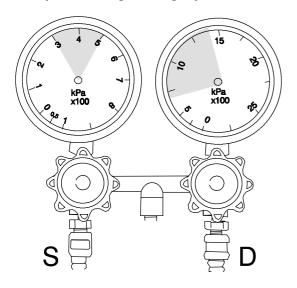


Possible fault	Remedy
Expansion valve faulty. Valve stuck fast in open position.	Empty system and change expansion valve.
2. Compressor faulty or its belt slackened.	Check compressor belt. Change damaged compressor.
3. Too little refrigerant in system.	3. Empty and refill the system with refrigerant (1,4 kg).

Low pressure high High pressure low

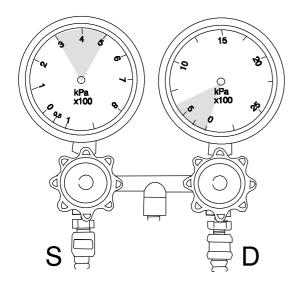

Possible fault	Remedy
Valves or seals in compressor faulty.	Change compressor.
2. Too little refrigerant causes the high pressure reading to be too low.	2. Empty and refill the system with correct amount of refrigerant (1,4 kg).


Low pressure normal High pressure high

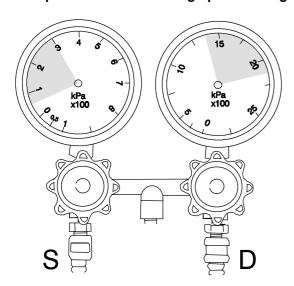

Possible fault	Remedy
Air in system or too much refrigerant in system.	Empty system and refill with refrigerant (1,4 kg).
2. Condenser dirty (insects etc)	2. Clean the condenser.
3. If bubbles appear in inspection glass fast filling is OK, the drier hose connections have been connected faulty and refrigerant flows in reverse direction.	3. Empty system and change hose connections. Change the drier. Refill system (1,4 kg).
4. If there is bubbles and icing in the drier, there is restriction in the drier inlet side.	4. Empty system and remove blockage and fit a new drier. Refill system (1,4 kg).

83. Air conditioner 15. 6. 1992 1. 4. 1997 Model 6000 – 8750

Low pressure high High pressure high

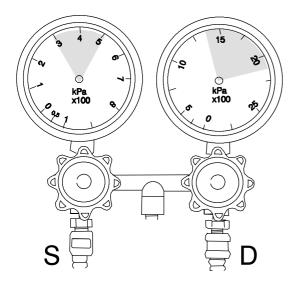

Possible fault	Remedy
1. Condenser is dirty (insects etc.)	1. Clean condenser
2. Too much refrigerant in system.	2. Empty and refill system with refrigerant (1,4 kg).


Code

831

Page

7

Both gauges show same pressure

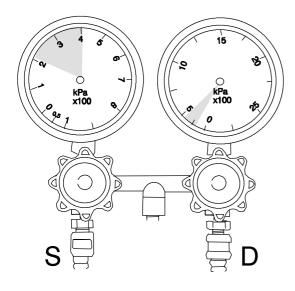

Possible fault	Remedy
Compressor magnetic clutch does not function.	Change compressor
2. Compressor is faulty	2. Change compressor
3. Electric system faulty (temperature switch, pressure switch, fuse etc.)	3. Check electrical system (see page 831/3 instr. C).

Important information on air conditioner repairs and spare part storage

Note! Moisture is the worst enemy of any air conditioner.

- 1. Keep all spare parts sealed and store in a dry place.
- 2. Immediately make all connections air tight when interrupting the refrigerant circuit.
- 3. Before installation purge refrigerant hoses with nitrogen or refrigerant.
- 4. When installing parts, do not remove plugs until shortly before assembly. This is especially important for the drier. A drier, which is not sealed, quickly becomes saturated and cannot be used.
- 5. Do not pump refrigerant from the air conditioner back into the cylinder.
- 6. Always keep empty refrigerant cylinders closed.
- 7. Only buy refrigerant from specialized dealers.
- 8. Do not carry out repairs outdoors in damp weather.
- 9. Always replace drier receiver after interrupting the refrigerant circuit.
- 10. The presence of moisture in the refrigerant circuit does not only lead to a poor cooling output but also to the decomposition of the solid-state drier and the decay of the refrigerant lines due to acid formation. Expensive repairs and down-time are the result.
- 11. Before starting, check oil level of the compressor and evacuate refrigeration circuit according to instructions given. Time of evacuation 1 4 hours. Dry refrigeration circuit at least once by breaking the vacuum with liquid refrigerant.

83. Air conditioner

1>1994 1.8.2000

Model 6000-8950 Code


831

Page

9

Compressor

The service valves (D and S) are fitted on the pipe connectors on air conditioners that have refrigerant R134a as in figure below

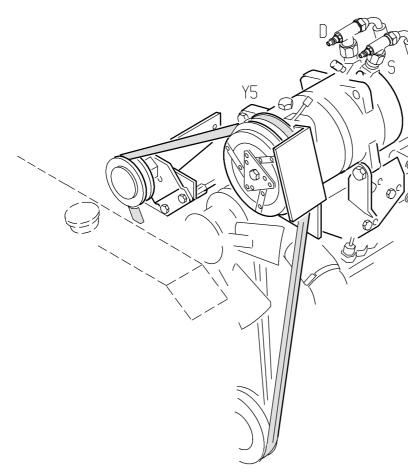

If the compressor should be changed, contact an expert who knows refrigerating systems.

A new compressor is filled with 2,0 dl oil in the factory. Drain the oil in the new compressor. 1,6 dl oil must run out. Pour the oil back to the compressor and fit the plug. If the drained oil amount was not 1,6 dl, add or reduce the oil volume to 1,6 dl (on account of the internal build-in, all oil in the compressor does not run out).

Note! If the system is opened and refrigerant changed, the compressor oil should also be changed. In this case, fill the compressor with 2,0 dl oil.

Detach the new compressor protective caps very carefully so that the threads and connections do not damage.

Tightening torques:

- 3/4" connection on pressure side 24,5-29,5 Nm.
- 7/8" connection on suction side 29,5-33,5 Nm.

D = Discharge S = Suction

Y5 = magnetic clutch

Valmet 6000 - 8400 tractors' compressor type: Diesel Kiki model DKS 15 CH.

Specifications

Number of cylinders 6 pcs


Cyl. diam x stroke ø34 mm x 24 mm Max. revs 7000 r/min

Lubricating oil: Freol DS-83P or Exxon (Esso) 2980 (R12) or ZXL 100 PG (DH-PS) (Valtra UC 1300) if refrigerant R134a.

Oil volume: 200 cm3 (2,0 dl)

Magnetic clutch:

Starting moment 50 Nm Power consumption 44 W (max) Clutch clearance value 0,3-0,6 mm

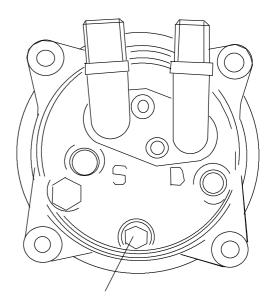

Draining/filling plug for lubricating oil.

Note! Do not open the plug, if the system is filled with refrigerant. Compressor oil should be stored in a closed container. If refrigerant is freon R12, the service valves are fitted on the rear side of the compressor (S and D in picture above).

	1 7-1994	Model	Code	Page
83. Air conditioner	1. 8. 2000	6000-8950	831	10

5. Changing refrigerant R12 to R134a.

If the R134a refrigerant is changed to the air conditioners which have refrigerant R12, the following components should also be changed:

- Dryer reservoir
- Pressure switch
- Compressor
- Compressor service valves
- All O-rings
- All hoses if the tractor has been manufactured before March 92 (-657500)

When the parts have been changed, fill the system with refrigerant R134a and run the air conditioner about one hour. Empty then the system and the compressor and fill the compressor with new oil (2,0 dl oil ZXL 100 PG (DH-PS) (Valtra UC 1300) and fill the system again with the refrigerant 134a.

Two oil changes must still be carried out at intervals of 100 running hours after which the earlier mineral oil has been removed from the system.

Note! If you have a special charging device (AKA force method) the oil changes after filling is unnecessary but the system is evacuated 0,5-1 hours, after which the air conditioner can be charged finally.

Part numbers

Dryer reservoir Pressure switch Pressure switch O-ring Dryer reservoir hose O-rings (2 pcs)	32844300 32275210
Compressor	32838600
Service valve S (LH side)	
Service valve (S) O – ring against compressor	
Service valve D (RH side)	
Service valve (D) O – ring against compressor	
LH side valve (S) upper end O-ring	
RH side valve (D) upper end O-ring	30415010

Note! When fitting the compressor, adjust the distance between the support and compressor to 0,1 mm with shims.

Condenser hose O-rings:

Front hose O – ring		30415010
Rear hose O-ring		30414910

Expansion valve O-rings:

Upper hose O-ring	30415110
Lower hose O-ring	30414910
O-rings (2 pcs) on the evaporator side tubes	30415010

Note! Before changing the expansion valve O-rings, the insulating mass should be removed. After fitting, cover the valve with mass no 30794000.

Up to ser. no 657500 all the rubber hoses should be changed

(tractors manufactured	before	March	92):
------------------------	--------	-------	------

Hose between compressor and condenser	100
Hose between condenser and drier reservoir:	
- 3/4-cylinder engines 328629	900
- 6-cylinder engines 328499	500
Hose between drier reservoir and expansion valve	400
Hose between expansion valve and compressor:	
- 3/4-cylinder engines 328490	300
- 6-cylinder engines 328492	200

ACTIVE COAL FILTER	29.04.1993	Model	No	Page
FITTING INSTRUCTION	07.04.1998	205-8750	89.1	1(1)

Active coal filter 505–905, 205–900 **20790500** (to tr. no -> F51507), 6000–8400 **20707700** (from tr no. F51508 ->) 6000–8400, . . . **20750400** 8050–8750

Active coal filter, filters both solid and gaseous impurities such as dust and spores and it reduces biocide concentration in the cab to about 1/10 of a normal value. The active coal filter, filters all particles in dimensions 2/1000 mm (2 μ m) and bigger. It separates visible impurities totally. The active coal filter is fitted instead of the standard filter.

Fitting 205-900:


- Remove the filter housing cover and place the active coal filter in place of the standard filter, see figure below.
- Refit the cover.

Fitting 505-905:

- Remove engine hood side plate on the LH side and raise the upper plate
- Open the filter housing and place the active coal filter in place of the standard filter. Note the position of the filter, see picture 2.
- Refit the engine hood plates

Fitting 6000-8750:

- Detach the air intake cover on the LH side of the roof and place the active coal filter in place of the standard filter.
- Refit the cover

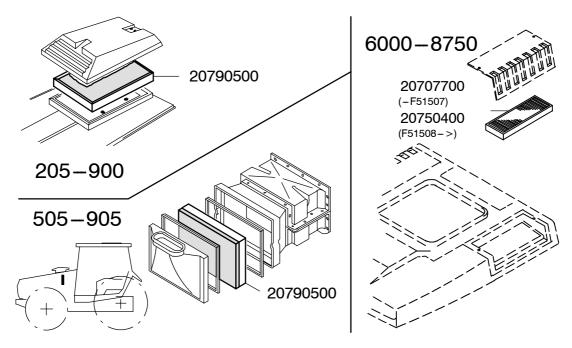

<u>I</u>		

WIDER REAR MUDGUARDS, fitting instruction	26.07.1993	Model	No	Page
	07.03.2001	6000-8950H	i 89.3	1(2)

Wider rear mudguards (320mm) 32600800 Wider rear mudguards (485mm) 33270200 W. r. mudguards Green Claas (485mm) . 34232000

- Remove the filter cover and the previous filter (when dirty).
- The wider rear mudguards are fitted, if needed, in place of the standard rear mudguards.

FITTING:


- Remove the rear light protective covers and the cover fasteners (it is not necessary to remove the push buttons and the rear lights).
 Remove the standard rear mudguards.
- Fit the wider mudguards 1 into place.
- The support 2 needs not to be mounted of strength reasons, but mounting can be done.
 See picture for the position of support.
- Fasten the rear light covers together with the push buttons into place.
- Earlier tractors: Position the parking lights more outwards by changing over the RH and LH side parking light brackets.
 NOTEL In new tractors this has already been


NOTE! In new tractors this has already been done.

 Order new mudguard side stickers or lathes (not included) according to tractor's color, if needed.

	1	32600800	Takalokasuojat	Bakstänkskärmar	Rear mudguar	Hinterkotflügel	320mm, Total
	1	33270200	Takalokasuojat	Bakstänkskärmar	Rear mudguar	Hinterkotflügel	485mm, Total
	1	34232000	Takalokasuojat	Bakstänkskärmar	Rear mudguar	Hinterkotflügel	485mm, Total, Green Claas
1	1	32286520	.Lokasuoja	Stänkskärm	Mud guard	Kotflügel	Left 320mm
1	1	33170410	.Lokasuoja	Stänkskärm	Mud guard	Kotflügel	Left 485mm
1	1	34063500	.Lokasuoja	Stänkskärm	Mud guard	Kotflügel	L. 485mm, Green Claas
1	1	32286620	.Lokasuoja	Stänkskärm	Mud guard	Kotflügel	Right 320mm
1	1	33170510	.Lokasuoja	Stänkskärm	Mud guard	Kotflügel	Right 485mm
1	1	34063600	.Lokasuoja	Stänkskärm	Mud guard	Kotflügel	R. 485mm, Green Claas
2	2	32668400	.Kannatin	Hållare	Support	Halter	If needed
4	4	HA6326	.Ruuvi	Skruv	Screw	Schraube	If needed

WIDER REAR MUDGUARDS, fitting instruction	26.07.1993	Model	No	Page	1
	07.03.2001	6000-8950H	i 89.3	2(2)	l

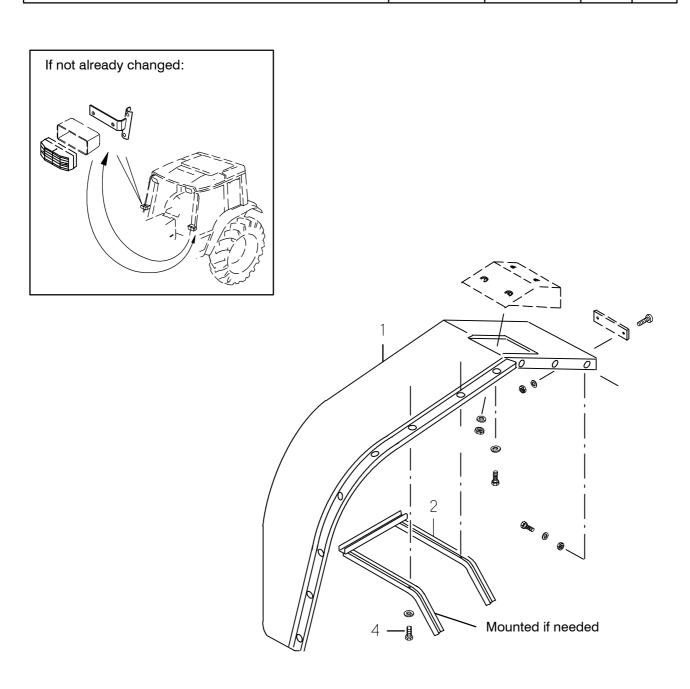

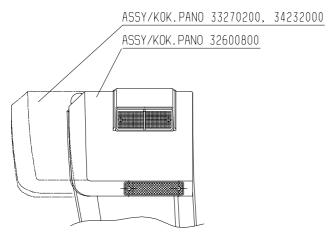

AIR SUSPENDED DRIVER'S SEAT		Model	Code	Page
FITTING INSTRUCTION	26.07.1993	6000-8400	89	1(2)

Air suspended seat 32036900

The air suspended seat makes tractor driving pleasant when driving on an uneven ground and also the seat improves driving comfort.

The seat reduces sways automatically according to the driver's weight. In addition, the seat has a horizontal springiness which can be locked. This springiness improves roadholding

The seat has an in-built compressor.

The seat is fastened with fixing screws of the standard seat.


The air suspended seat power demand is 108W, seat fuse is F25 (10 A).

FITTING:

- Remove the standard seat (4 screws) and fasten the air suspended seat inplace.
- Connect the seat wires to the connector X49 in the cab wiring loom. The connector is situated at the turning device.
- Become familiar with various adjustments of the seat and adjust it.

1 2 3 85 86 87	1 1 4 4 4	32036900 32097600 31660200 HA6323 JD0408 JB8904	Istuin .Istuimen alaosa .Yläosa Ruuvi Aluslaatta Mutteri	Förarstol Förarstol undre del Övredel Skruv Bricka Mutter	Seat Seat lowerpart Upper part Screw Washer Nut	2
						-1
						85 X49
			ht	tps://tractorma	86 anualz.com	

6000-8400

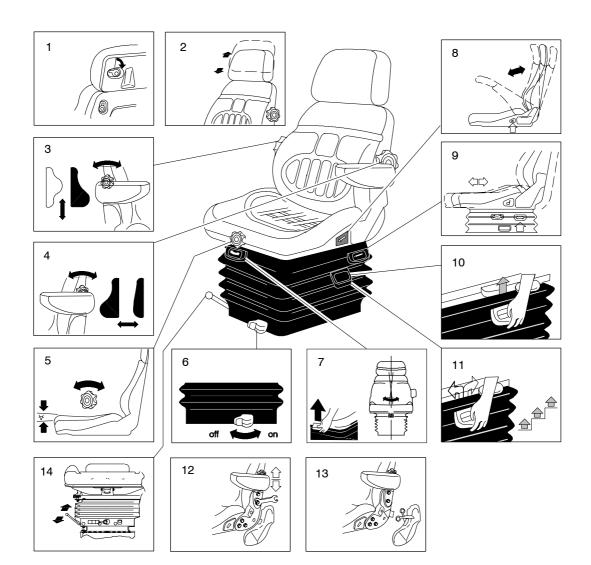

Ilmajousitettu istuin

- 1. ja 2. Niskatuen korkeuden säätö
- 3. Ristiselän tuki korkeuden säätö
- 4. Ristiselän tuki kohouman säätö
- 5. Pitkittäiskallistus
- 6. Pituusjouston lukitus
- 7. Sivukallistus $(7^{\circ}-0^{\circ}-7^{\circ})$
- 8. Selkänojan kallistus
- 9. Etäisyys
- 10.ja 11. Paino ja korkeus
- 12. Kyynärtuen korkeus
- 13. Turvavyön kiinnitys
- 14.Kääntö

Luftfjädradsits

- 1. och 2. Inställning av nackstödets höjd
- 3. Höjd inställning av svankstödets höjd
- 4. Inställning av svankstöd
- 5. Inställning av sittdynans lutning
- 6. Spärr plandämpare
- 7. Inställning av sitsens sidolutning (7°-0°-7°)
- 8. Ryggstödets lutning
- 9. Inställning framåt/bakåt
- 10. och 11. Inställning av förarvikt och höjd
- 12.Inställning av armstödets höjd
- 13. Fästpunkter för säkerhetsbältet
- 14. Inställning av sitsens vridning

Air suspension-driver's seat

- 1. and 2. Head support height adjustment
- 3. Lower seat back height adjustment
- 4. Lumber support adjustment
- 5. Seat pan adjustment
- 6. Lock for height suspension
- 7. Side inclination $(7^{\circ}-0^{\circ}-7^{\circ})$, tilting
- 8. Seat back inclination adjustment
- 9. Adjustment for forwards/rearwards
- 10.and 11. Weight and height adjustment
- 12.Arm rest adjustment
- 13. Seat belt anchor point
- 14. Seat rotation

ELECTRIC AIR FILTER		Model	Code	Page
FITTING INSTRUCTION	03.08.1993	6000-8400	89	1(3)

Electric air filter 32675100

 The electric air filter can filter also small particles which cannot be filtered by mechanical filters (the electirc air filter can filters particles with sizes of 0,2 um).

The cabin air becomes more pleasant and the productivity increases.

The filter consists of the paper filters and a dust collection element of the high voltage type in which the dust particles fasten on the metal plates. The dust collection element is washable.

The air filter is fitted in place of the roof hatch. However, the roof hatch can be used as an emergency exit even if the air filter is fitted on the tractor.

The filter increases the cab total height about 20 cm

The fan has three different speeds.

The power consumption is max. 210W (The electric air filter: 10 W).

Ionizing voltage: 8000 V.

The filter is connected to fuse F26 (10A).

Fitting:

- Remove the upper roof plate as follows:
 Remove the roof hatch (hinges). Unscrew the screws on the edges of the roof hatch opening.
 Unscrews the screws on the roof front and rear edges. Uncrew the front gutter plate screws.
 Remove the upper roof plate.
- Open a little the cab linings at the cab side pillar so that you can pass wire 20 into the connector "A7" and further to the roof side. Draw the wire to the LH side front edge of the roof opening.
- Refit the roof plate and fit the front gutter plate screws and the middle screw of the roof front edge.
 NOTE! Do not tighten the screws too hard since the roof material can damage.
- Fit washers 19 (5 pcs) at the fastening holes. Fit gasket 2 onto the bracket 9.
 Fasten the bracket 9 onto the roof with new screws. (front end screws M8 x 40). Detach the roof hatch lock counter piece on the edge of the
- Fasten the fastener 10 and the counter piece 21 onto the roof.
- Connect connectors SA1687 and connector plug SA 1950 to the air filter current wire. Connections, see picture C.

ELECTRIC AIR FILTER	><	Model	Code	Page
FITTING INSTRUCTION	03.08.1993	6000-8400	89	2(3)

- Open the air filter cover and mark positions for the extra holes to be drilled, picture a.
 Fasten the hole fastening parts 6 (4 pcs).
- Fit the air filter into place on the roof. (the hinge side forwards). Fasten the device with fastening handles 6.

Mark places for extra holes Ø 9 mm, see picture **b** Fit screws **23** (M8x16) and bushes **22**.

 Open the cab side pillar and mudguars linings and pass the wire together with other wires into the steering wheel console.

Connect wire **20** connector equipped with an earth casble shoe under the earth screw in the cab front wall

Connect wire no 160 (black) to the connector X4/4 in the electric centre

Tape the wires against the other wiring looms


 Connect connector A7 in the roof opening to the air filter connector and push the connectors into the roof linings.

Check the function of the electric air filter.

The filter has an indication lamp which lights when the current is switched on. If the lamp begins to flash, the filter should be cleaned.

	1	32675100	Sähkösuodin	Elektrofilter	Elecric air filter	
1 2 3 4 5 6 7 8 9	1 1 4 4 4 4 4 1 1	32729700 32681100 JB8903 HE6963 32431500 32437600 HA9221 JB9926 32673900 32725410	.Sähkösuodin .Tiiviste .Mutteri .Ruuvi .Korvake .Kiinnitin .Ruuvi .Mutteri .Runko .Pidin	Elektrofilter Tätning Mutter Skruv Öra Fästdon Skruv Mutter Ram Klämma	Elecric air filter Gasket Nut Screw Lug Fastener Screw Nut Frame Clamp	(32501700)
11	4	JD0500	.Aluslaatta	Bricka	Washer	
12	4	HD9052	.Ruuvi	Skruv	Screw	
13	4	32643900	.Kumialuslaatta	Gummibricka	Rubber washer	
16	3	HA6508	.Ruuvi	Skruv	Screw	
17	5	JD0501	.Aluslaatta	Bricka	Washer	
18	2	HA8326	.Ruuvi	Skruv	Screw	
19	5	30752500	.Aluslaatta	Bricka	Washer	
20	1	32723600	.Johdin	Ledning	Wire	
21	1	32842900	.Levy	Platta	Plate	
22	2	32842800	.Holkki	Hylsa	Sleeve	
23	2	HA6322	.Ruuvi	Skruv	Screw	
24	1	SA1550	.Liitin	Anslutning	Connector	
25	2	SA1687	.Liitin	Anslutning	Connector	

ELECTRIC AIR FILTER		Model	Code	Page
FITTING INSTRUCTION	03.08.1993	6000-8400	89	3(3)

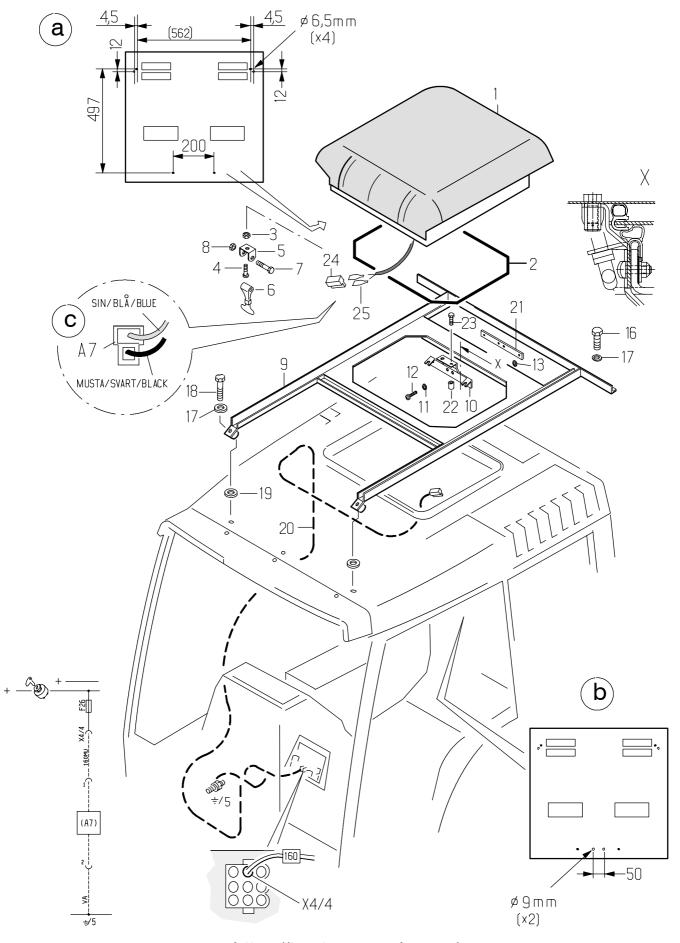

VENTILATION LATCH FOR DOOR	> <	Model	Code	Page
FITTING INSTRUCTION	23.06.1993	6000-8400	89	1(1)

Ventilation latch 32708200


With aid of this latch the cab doors can be locked ajar which improves the cab ventilation.

The doors can be locked normally by turning the latch to one side. The mounting kit includes latches for both doors.

Fitting:

- Press the latch 4 round section against the door lock.
- Lift the attacment 1 against the lock pin lug so much up as possible
 Move the attachment towards the windscreen until the ventilation latch touches the door seal.
- Fit the inner screw 2 (the screw does not need a ready—made hole).
 The outer screw is fitted when the door is open.
 Fasten the latch and the friction plates.

	1	32708200	Tuuletussalpa	Ventilationslås	Ventilation latch	Ventilatorriegel
1	1	32707800	.Kiinnitin	Fästdon	Fastener	Halter
2	2	32665100	.Ruuvi	Skruv	Screw	Schraube
3	2	32577400	.Kitkalevy	Friktionplatta	Friction plate	Reibungsplatte
4	1	32707300	.Salpa	Spärr	Catch	Riegel
	1	32708000	.Salpa	Spärr	Catch	Riegel
5	1	JD0408	.Aluslaatta	Bricka	Washer	Scheibe
6	1	JB8904	.Mutteri	Mutter	Nut	Mutter

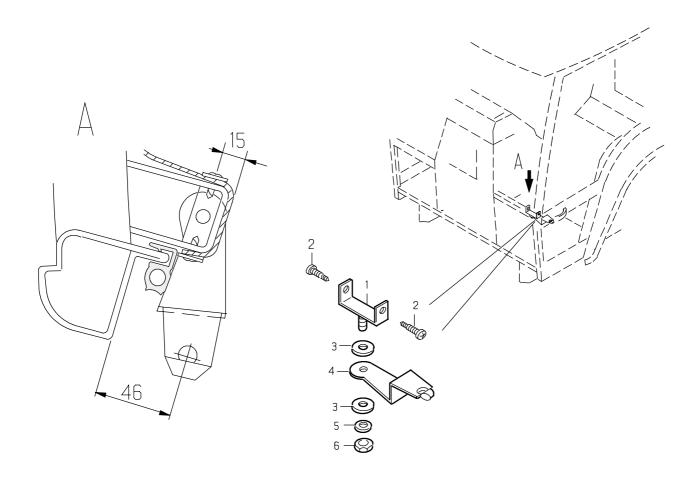


DOOR LIMITER		Model	Code	Page
FITTING INSTRUCTION	08.09.1994	6000-8400	89	1(1)

Door limiter 32843700

 With this limiter can the door opening be limited to many different positions.


	1	32843700	Oven Rajoitin	Begränsare	Limiter	Anschlag	assy
1	2	32801200	.Rajoitin	Begränsare	Limiter	Anschlag	
2	2	HA6316	.Ruuvi	Skruv	Screw	Schraube	
3	2	JB8903	.Mutteri	Mutter	Nut	Mutter	

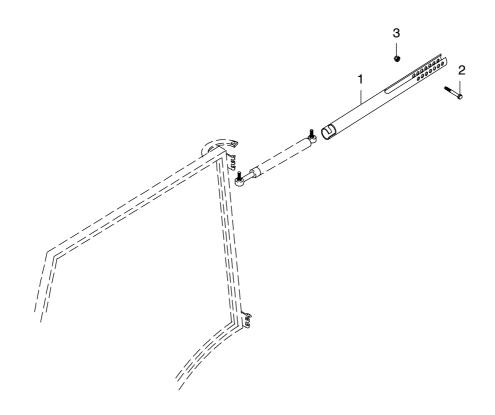

POWDER EXTINGUISHER	$\overline{}$	Model	Code	Page
FITTING INSTRUCTION	07.09.1994	6000-8400	89	1(1)

Powder extinguisher (2kg) 32640500

	1	32640500	Jauhesammutin	Pulversläckare	Powder extinguisher assy
1	1	32548300	.Jauhesammutin	Pulversläckare	Powder extinguisher
2	2	HE6963	.Ruuvi	Skruv	Screw
3	2	JB8903	.Mutteri	Mutter	Nut

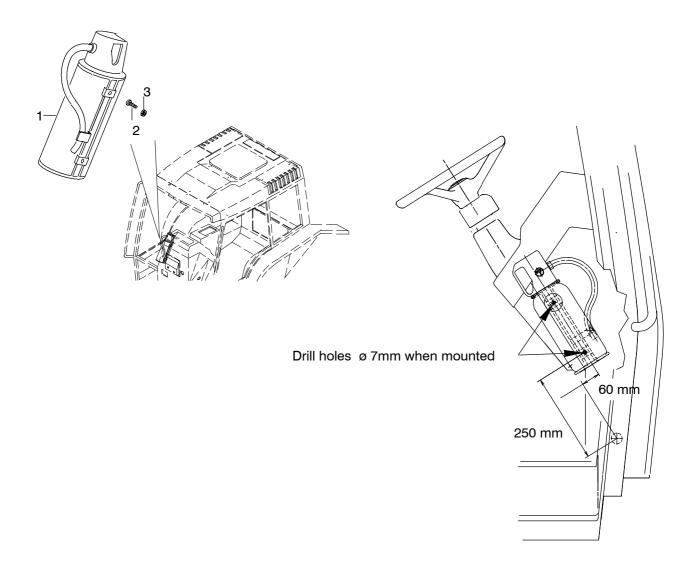

EXTRA AIR FILTER, FITTING INSTRUCTION		Model	Code	Page
	20.09.1994	6000-8400	89	1(2)

- Extra air filter 32787100

The kit includes a housing with necessary mounting parts

In place of the standard filter is placed a protruding part which has space for two filter elements. These filter elements are the same as the standard filter has and they take air from underside. Thus dust does not collect on the filters and a shock caused by a door shut cleans the filters.

The filters are easily accessed with aid of a holder which has hinges.

- FITTING:


- Remove the filter cover and the previous filter (when dirty).
- Place housing 4 into the filter opening and drill holes Ø 3,6 mm (14 off) using the housing as a pattern. Place spring nuts 21 (14 off) on the roof at the holes

Place seal **24** and seal **25** (on the filter side) between the roof and housing **4** (see picture) and fasten the housing.

- Fasten nuts 14 with rivets 15 on frame 12. Fit the frame with hinge pins 10 and lock pins 9 in position.
- Using protective covering 2 as a pattern, drill holes Ø 3,6 mm (4 off) through housing 4 and fasten the covering.
- Position filters 11 on the frame and fasten it and grille 13 with parts 16, 22 and 23.

		32787100	Ilmansuodin	Luftfilter	Air filter	Luftfilter
0	4	00707000	Cusius	Cloude	Chield	Cob.ut-
2	1	32787200	.Suojus	Skydd	Shield	Schutz
3	4	HN6805	.Ruuvi	Skruv	Screw	Schraube
4	1	32786500	.Kotelo	Hus	Housing	Gehäuse
9	2	JE3029	.Sokka	Sprint	Pin	Splint
10	2	JJ6033	.Таррі	Тарр	Pin	Stift
11	2	31739500	.Suodin	Filter	Filter	Filter
12	1	32786600	.Kotelo	Hus	Housing	Gehäuse
13	1	32800400	.Säleikkö	Grill	Grid	Grill
14	4	32675200	.Mutteri	Mutter	Nut	Mutter
15	8	JF5002	.Niitti	Nit	Rivet	Niet
16	4	32665500	.Ruuvi	Skruv	Screw	Schraube
17	14	HN6804	.Ruuvi	Skruv	Screw	Schraube
18	4	JD0406	.Aluslaatta	Bricka	Washer	Scheibe
19	4	32720100	.Kiinnitin	Fästdon	Fastener	Halter
21	14	JC9003	.Mutteri	Mutter	Nut	Mutter
22	1	32673300	.Kiinnityslaatta	Fästplåt	Mounting plate	Befestigungsplatte
23	1	32665600	.Kiinnityslaatta	Fästplåt	Mounting plate	Befestigungsplatte
24	1	32544000	.Tiiviste	Tätning	Gasket	Dichtung
25	1	30938000	.Tiiviste	Tätning	Gasket	Dichtung
				_		-

EXTRA AIR FILTER, FITTING INSTRUCTION		Modell	Code	Page
	20.09.1994	6000-8400	89	2(2)

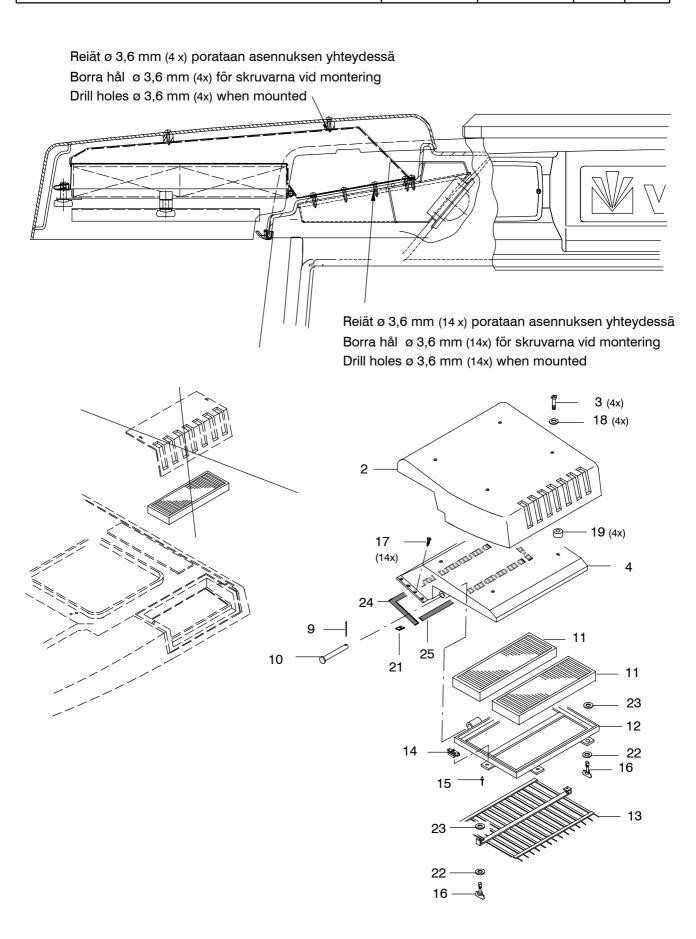

AIR CONDITIONING, FITTING INSTRUCTION (PT94- cabin)

28.96.1999 30.07.1999

Model 6000-8750 6250Hi-8950Hi No

Page


89.2 | 1 (28)

Air conditioning 6000-6600 32453210
Air conditioning 6800 33099900
Air conditioning 6900(8000R) -8150 32214310
8450-8750, 8050Hi-

NB! The tractor must have openable front cover.

Model 8000-8400, up to engine no **-D 1229**: the 3-groove coolant pump pulley (836855063) is needed.

NB! If the tractor has other extra equipment, familiarize yourself with fitting instructions and the extra parts before ordening the set.

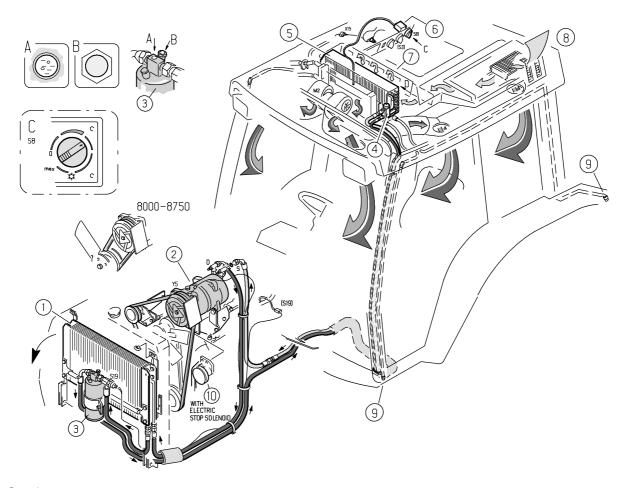

- 1. Condenser
- 2. Compressor
- 3. Dryer
- A=Inspection glass
- B=Moisture indicator
- 4. Expansion valve
- 5. Evaporator
- 6. Temperature switch
- 7. Re-circulation valves
- 8. Air inlet into cab
- 9. Condensing water hoses have nozzles which prevent air from entering into the system via hoses.
- 10) With an electric stop solenoid

AIR CONDITIONING, FITTING INSTRUCTION 28.06.1999 Model 6000-8750 6000-8750 6250Hi-8950Hi 89.2 2 (28)

TECHNICAL DATA:

REFRIGERANT approx.	R134a
Compressor DKS15CH DIES	
- capacity/rev	6 000r/min 147cm ³ 200cm ³
- clearance value 0,3-	12V DC 50Nm W (max) 0,6 mm 7±4 bar
<u>Drier:</u>	
- switches on	0,2MPa 0,2MPa oressure ±20kPa ±30kPa
Thermostat:	
 switches on when evaporator temperature has 	+7 °C
	, at outdoor 300 kPa 400 kPa

NB!

- The installation place must be clean and dry and provided with a filling device for the refrigerant. Try to carry out fitting as quickly as possible so that moisture does not enter the system (moisture in the refrigerant circuit is one of the commonest reason for malfunction). The protective plugs on new components must remain in place until immediately before the component is connected. Components must not be blown through with compressed air but cleaned out with nitrogen or R134a refrigerant. Unions for the refrigerant hoses must be sealed with o-rings. When lubricating o-rings before fitting, use the same type of oil as in the compressor. Note! The o-rings are made of special rubber and must not be replaced by any other quality.

AIR CONDITIONING, FITTING INSTRUCTION	28.06.1999	Model 6000-8750	No	Page
(PT94- cabin)		6250Hi-8950Hi	89.2	3 (28)

FITTING:


Condenser (picture 1a,b).

- Remove both engine side plates. Lift up the openable front plastic covering. Remove protective shield (32839500) in front of the cooling radiator. Clean the radiator fins with compressed air.
- Fit the condenser above the oil cooler (picture 2)
- Fit the condenser upper end securing parts in position, picture 1a,b,c (numbers in brackets intend parts which are already fitted on the tractor).
- NOTE! The condenser is a very sensitive component and must be handled with care. Support the pipes of the condenser when tightening the hoses (tightening torque, see picture), so that the condenser is not bent.
- 6000 6600 tractors: Part 16 (nut M8) is intended to be an intermediate part Cut a piece of edge band 89 and fit it onto the net hole edge and other piece to the lower edge.
- 6250Hi-6850Hi tractors: Fit the condenser with parts 87H-99H.
- 6900 8400 tractors: Place the edge band 89 round the protective net hole.
- 8050-8750, 8050Hi-8950Hi tractors: Fit the condenser with parts 87S-99S.
- For easier cleaning, leave enough free length for hoses 4 and 120. Fit the angle unions first for eliminating possible winding faults (after fitting the compressor and drier).


Drier (picture 2).

- Fit the drier according to the figure.
- Connect pressure switch 33 +O-ring 71 to the hose 121 (6000-6600: to the drier 32).
- Cut an opening (like a hole on the plate) through the covering for the hoses.
- CONNECT THE HOSES TO THE DRIER JUST WHEN OTHER FITTINGS ARE DONE. (the drier becomes easily saturated by humidity in air).
- Fit the wiring loom 34. Connect wires no 33 and 93 to the pressure switch poles 1 and 2. Other end of the wire no 33 is connected to the compressor and other end of the wire 93 to the wire which has the same number in the engine wire loom. The wires are situated under the battery shelf on the RH side of the tractor.

AIR CONDITIONING, FITTING INSTRUCTION 28 08.1999 Model 6000 - 8750 6000 - 8750 6250Hi - 8950Hi 89.2 4(28)

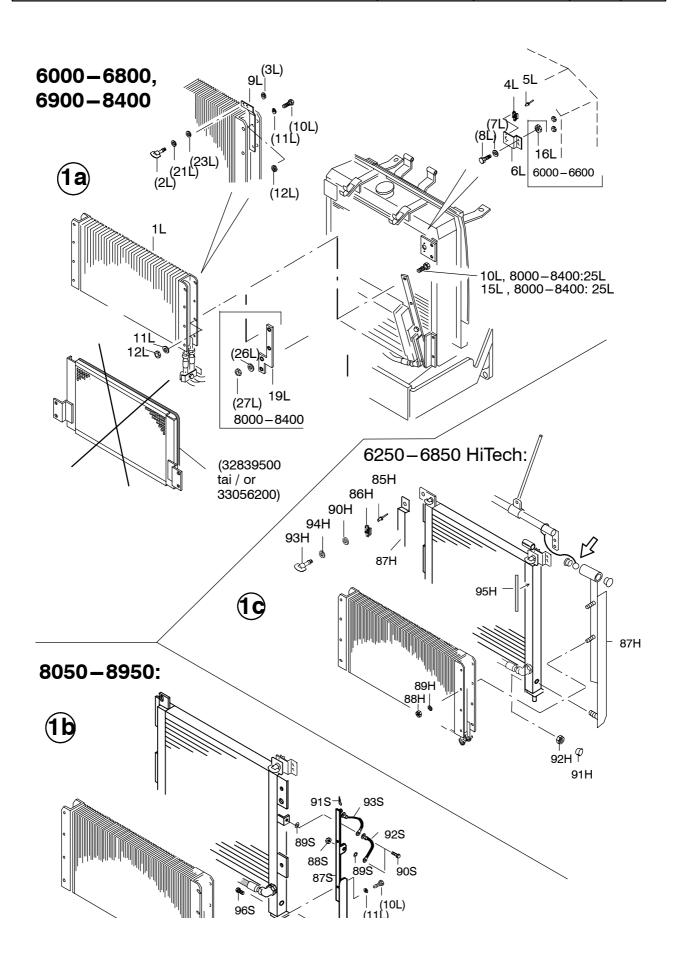

AIR CONDITIONING, FITTING INSTRUCTION 28.06.4999 Model 6000−8750 6000−8750 6250Hi−8950Hi 89.2 5(28)

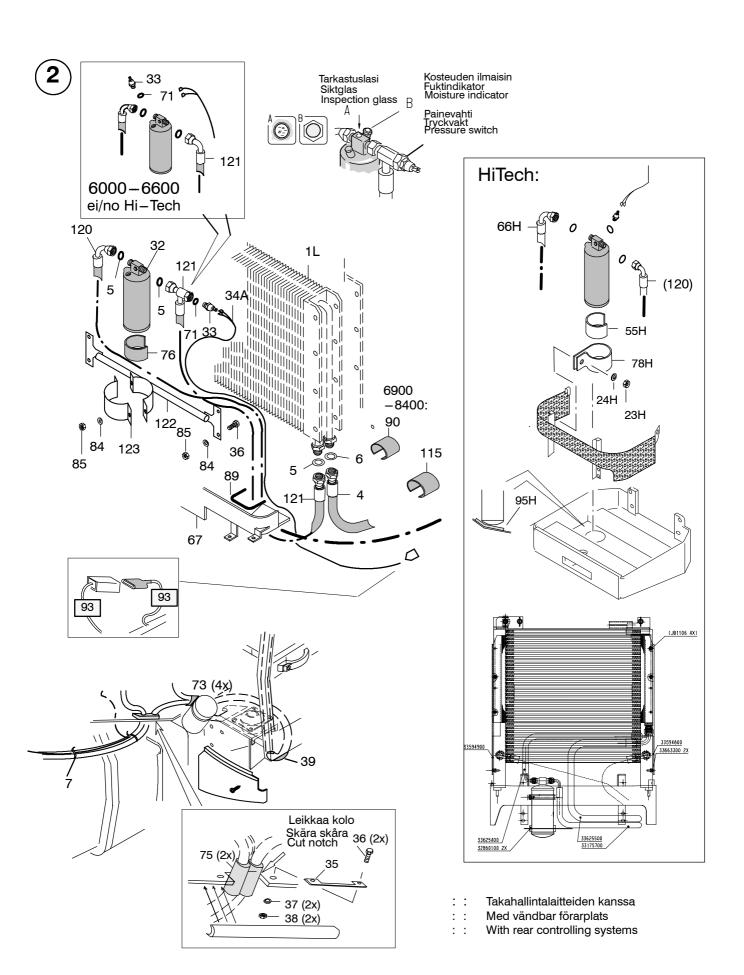

AIR CONDITIONING, FITTING INSTRUCTION	28.0 8.1 999	Model 6000-8750	No	Page
(PT94- cabin)		6250Hi-8950Hi		6 (28)

Compressor (picture 3).

- Carefully turn the radiator cap to the first stop so that possible overpressure releases from the engine cooling system before fitting the extra belt pulley and the compressor.
- Fit the compressor bracket opposite the screws of the intake manifold according to the figure.
 Change the screws into longer ones (HA8331).
 Unscrew from the injection pump the fuel injection pipe for the first cylinder for easier work.
 Models 6800, 6250H – 6850Hi: fit the bracket to the hindmost holes.
- Fasten the compressor onto the bracket.
- Fit hoses 4 and 40A with o-rings (tightening torque for the hoses: see picture.

Models 6000 - 6600: Extra belt pulley (picture 4)

- Fit an extra belt pulley on the existing pulley.
 Use an intermediate piece 58 and screws 59 (6 pcs).
- Fit the idler wheel on the engine RH side opposite the screws for the thermostat housing and the engine lifting eye. Replace thermostat screws into special screws 10 and 11 one screw at a time for avoiding leaks. Fit support 8 and the idler wheel. Fit the V-belt and tighten it to a suitable tension.

Models 6800 – 8750, 6250Hi – 6850 Hi, 8050Hi – 8950Hi: Compressor drive is taken from the coolant pump v – belt pulley. Up to engine number D1229: Remove the coolant pump (drain engine coolant). Unscrew the belt pulley securing nut and remove the belt pulley. Use, if needed, puller 9052 48900. Change the belt pulley into 3 – groove pulley (836855063). Remove the intermediate piece (836847538).


From engine number **D1230**: The 3–groove belt pulley is ready—mounted on the tractors.

Models 6000 - 6800, 6250Hi - 6850 Hi: If the tractor has an electric stop solenoid, an extra idler pulley 95 should be fitted on the compressor bracket.

Models 6000 - 6800, 6250Hi - 6850 Hi: If the tractor is equipped with compressed air system, the air compressor should be moved to the RH side of the engine (see appendix 1, on page 25).

AIR CONDITIONING, FITTING INSTRUCTION (PT94- cabin)


28.06.1999 | Model 6000-8750 6000-8750 6250Hi-8950Hi 89.2 7(28)

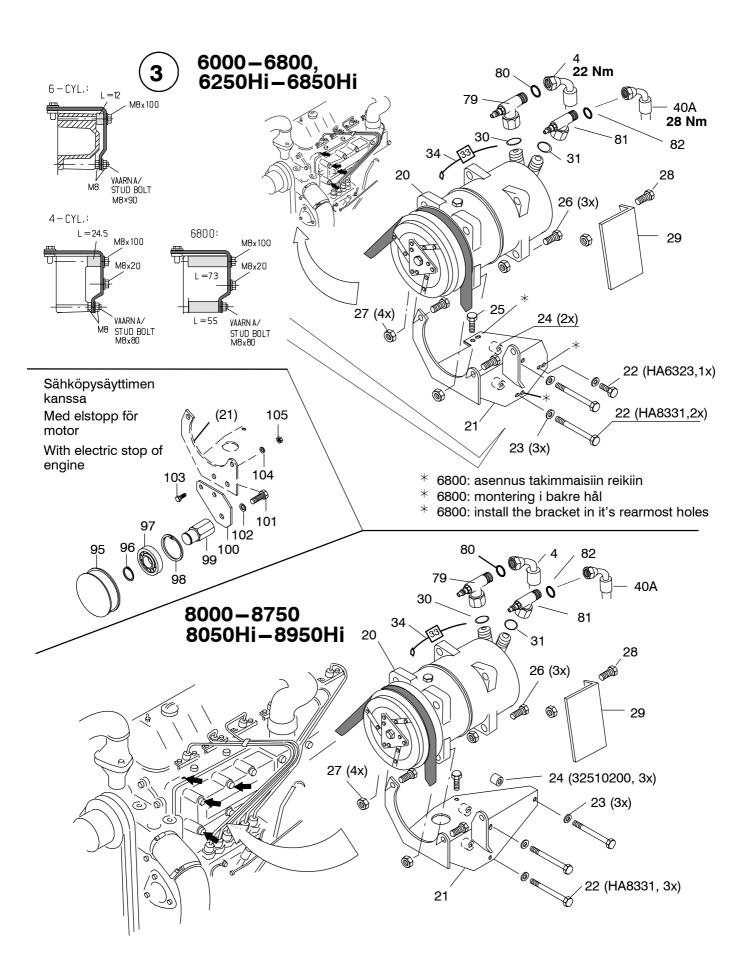


Model 6000-8750 6250Hi-8950Hi No **89.2**

8 (28)

Page

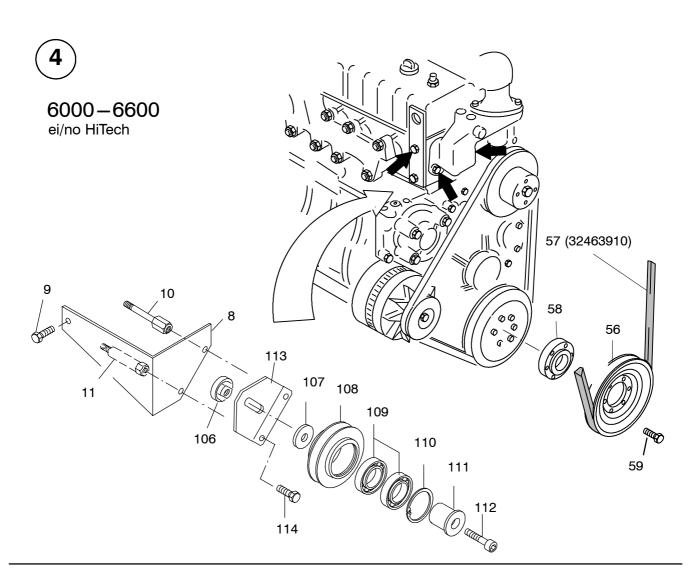

6800, 6900-8750,8050Hi-8950Hi 6250Hi-6850Hi

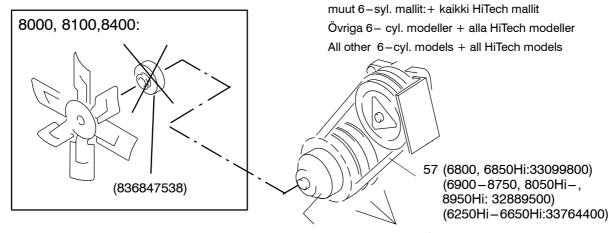

(836855063: 3 uraa /spår / grooves)

AIR CONDITIONING, FITTING INSTRUCTION (PT94— cabin)

28.96.1999 30.07.1999

Model 6000-8750 6250Hi-8950Hi No

Page

89.2 9(28)

Evaporator (fig.6, 7 and 8).

- Remove the cab filter grille on the roof. Remove the roof hatch and the outer roof plate (NOTE! rubber washers between the roof and the front gutter. Disconnect the front ends of the heater air hoses from the cabin
- Remove the cover on the heater radiator housing. Disconnect the lower hose to the heater unit, drain coolant. Drain coolant into a suitable vessel and plug the hose end.
- Lift up the heater radiator and turn it to one side.
 Detach the heater fan (do not damage the resistance) and the bottom housing
- Drill Ø 6 mm holes (in bottom 5 pcs) and Ø 6 mm holes (in side walls 4 pcs) through the bottom housing. Use the splash plate 61 as a pattern. Apply Hylosil sealing compound on the housing at points which are in contact with the splash plate (bottom + gables).
 Fasten the plate +counter piece 91 in position with nuts. Ensure that the splash plate tights fully against the housing.
- Drill also Ø 6 mm holes (4 pcs) through the bottom housing by using part 87 as a pattern. Apply Hylosil mass on part 87 on surfaces which are in contact with the housing shoulder and apply also mass on the housing at points which are in contact with part 87 gables. Fasten the part in position with bolts.
- Cut a hole for expansion valve pipe (see picture 8).
- Fasten the bottom housing in place.
- Remove possible sharp edges from the cab side pillars. Fit valves to the ends of draining hoses 64 and push the hoses into the pillars (picture). If necessary, remove one heater hose from the RH side pillar and push it back after the draining hoses are in place. The hoses can be made slippery with a suitable compound. Ensure tightness of the hose lead—in points with Hylosil mass. Shorten the hoses when necessary and fasten the other ends of the draining hoses into connectors 77 and 54.
 Older tractors: a Ø16 mm hole must be drilled to the bottom of the rear cab pillars (mud guard),
- Cut the housing lead in rubber plugs (picture) and push the connectors through the rubbers

see fig. 6a.

AIR CONDITIONING, FITTING INSTRUCTION 28 08.1999 Model 6000 – 8750 6250Hi – 8950Hi 89.2 10(28)

- Glue seal 66 onto the housing bottom at the evaporator rear edge (see picture).
 Glue seals 47 and 67 onto the gables of the evaporator.
- Fit the heater radiator and connect the hoses (renew the clips if necessary). Check that the hose lead – in point on the housing are fully tight.
- Pass covering 39 for the hoses to the evaporator. Pass the hoses above the cab attachment and push these hoses up inside the cab LH side front pillar. Bind the hoses together with hose clips 7.

Make sure, that the hoses for condensing water are not clamped.

- Connect hoses to the expansion valve (o-ring 42 and 41)
- To avoid water condensing, wrap round evaporator outlet pipe and round the expansion valve insulating mass 48 so that metal parts are entirely covered by the mass.

<u>Seal also hose lead – in points on the housing with the insulating mass.</u>

Leave a small piece of insulating mass left, which can be fitted later when reassembling the housing

 Remove adhesive tape of the temperature switch at the switch fitting point (on rear side) and fit the switch. Pass the capillar tube carefully towards the evaporator.

Push the capillar tube between the evaporator fins to the depth of 90 ± 10 mm according to the picture (the tube must not touch the evaporator pipes). Lock the tube by bending upper edge of the fins against the tube. Bend carefully the tube to the angle of 90° (do not damage the tube). Coil round the excess length of the tube and place it outside the housing

 Glue seal 46 on the evaporator. The seal is placed partly on the part 67 (see picture 8).
 Check that the evaporator is tight against the housing halves.

AIR CONDITIONING, FITTING INSTRUCTION	28.0 8. 1999	Model 6000-8750	No	Page
(PT94- cabin)	30.07.1999	6250Hi-8950Hi	89.2	11(28)

 Fasten lamp 53 (1 pcs) and the lamp bracket 32571100 with rubber seal 32570900 onto the support plate (free hole on the plate).


- Fit the wiring loom 52. Connector X15 (3 pins) should be connected to the corresponding connector in the roof wire loom. Connect wires no 77 (brown) equipped with branch connectors and a white earth wire to the exsisting panel illumination.
 - Connect wire loom **52** wire no 31 (blue) to the temperature switch S8 ("in"). Find wire no 93 (black) in the roof wire loom and connect it to the other pin ("out") of the temperature switch

Connect the wire loom wire no 77 (brown) and the white earth wire to the lamp **53**.


- Before fitting the housing cover, check that the evaporator upper side is flush with the heater radiator upper side.
- Reassemle the tractor.

AIR CONDITIONING, FITTING INSTRUCTION
(PT94- cabin)


28 06.1999 | Model 6000-8750 | 6000-8750 | 89.2 | 12(28)

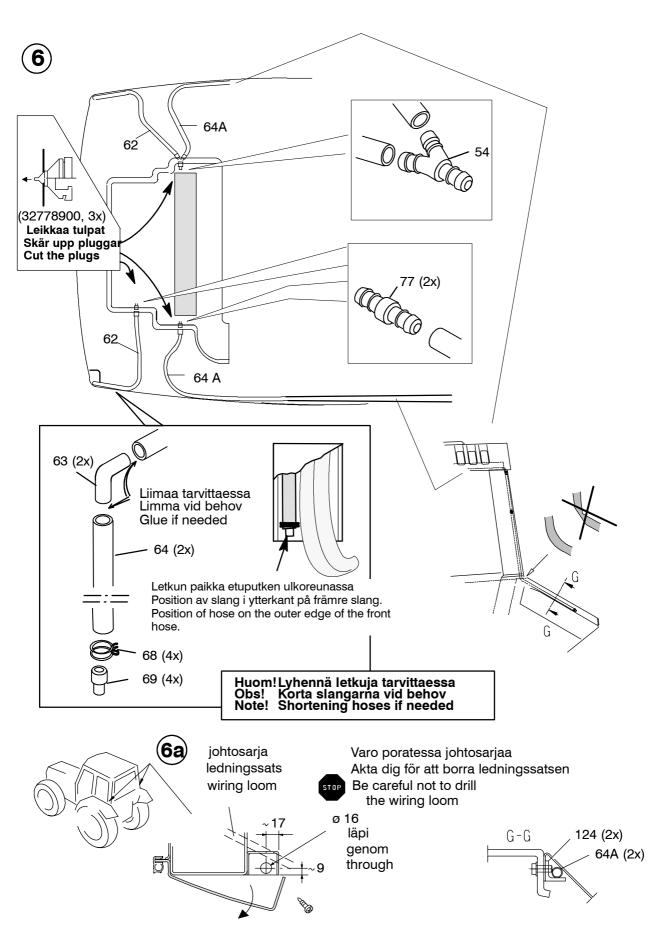

AIR CONDITIONING, FITTING INSTRUCTION 28 08.1999 Model 6000 – 8750 6250Hi – 8950Hi 89.2 13(28)

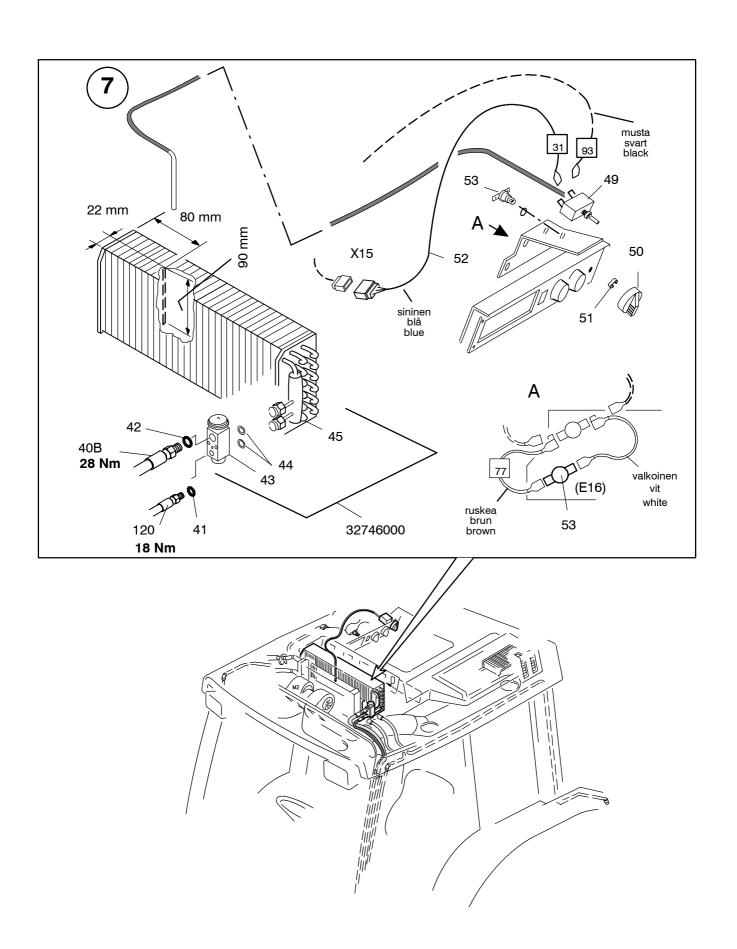

AIR CONDITIONING, FITTING INSTRUCTION	28.0 8. 1999	Model 6000-8750	No	Page
(PT94- cabin)	30.07.1999	6250Hi-8950Hi		14(28)

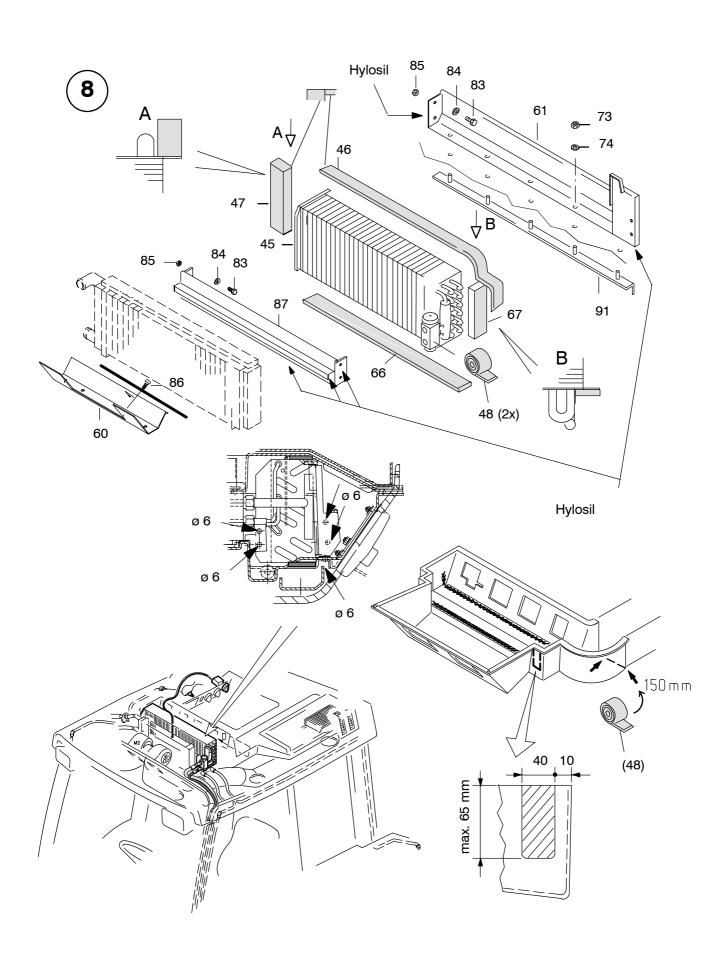

AIR CONDITIONING, FITTING INSTRUCTION (PT94- cabin)

28.06.1999 30.07.1999

Model 6000-8750 6250Hi-8950Hi No

Page

89.2 | 15(28)

Note! Drier hoses are connected immediately before filling.

FILLING UP WITH REFRIGERANT: OBSERVE ALL SAFETY PRECAUTIONS WHEN FILLING!

- Check that all unions are tightened. NOTE! After filling with refrigerant the compressor oil plug must never be unscrewed, as refrigerant will then spray out.
- Air and moisture can be removed from the system by vacuum pumping. This is carried out from the compressor service valves "SUC" and "DIS". Flush the system with refrigerant while vacuum pumping so that moisture and air are fully removed from the system. (Vacuum pump for 45 minutes, allowing a small amount of refrigerant to flow into the installation, and then continue pumping for 15 minutes).
- Filling is carried out in gaseous state through service valve SUC on the suction side with compressor running (or in liquid state through service valve DIS on the pressure side, when the engine must not be running).

There is about 1,4 kg refrigerant in the system


- Drier 32515500: When the system has functioned about 10 min refrigerant in the inspection glass must be almost transparent. Some bubbles can be seen when engine rotation speed is changed.
- When the filling hoses are removed from the compressor after filling, the hose union must be pressed against the service valve while turning the nut so that no refrigerant escapes.

CHECKING:

Carry out pressure measurements after filling.
 Normal pressure values at outdoor temperature of 20–25°C and at engine revs1500 r/min: (max cooling, fan speed II).

Low pressure reading: 50-300 kPa High pressure reading: 700-1400 kPa

Deviating pressures and fault analysis, see Service Manual.

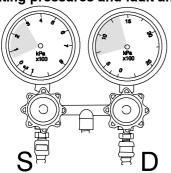


AIR CONDITIONING, FITTING INSTRUCTION	28.08.1999	Model 6000-8750	No	Page
(PT94- cabin)	30.07.1999	6250Hi-8950Hi	89.2	16(28)

Temperature:

- Temperature measurement is carried out in shadow, every ventilation nozzles open, doors and windows closed and after the air conditioner has been in function 5–10 minutes. Temperature in the nozzle on the roof console should be about +6...+10 °C (at engine revs 1500 r/min, with max cooling effect, with fan speed II and at outdoor temperature of +20-30°C).

(Check that the cab heater water valve closes the circulation of warm engine coolant).

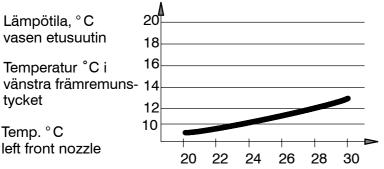


Lämpötilaero vas./oik. etusuutin max. 3°C

Temperaturskillnad mellan vänstra och högra ventilationsmunstycken är max 3° C.

Temp difference between left and right front nozzles is max 3°C.

Ulkolämpötila ° C Utetemperatur ° C Outdoor temp.° C

Fuse for fan

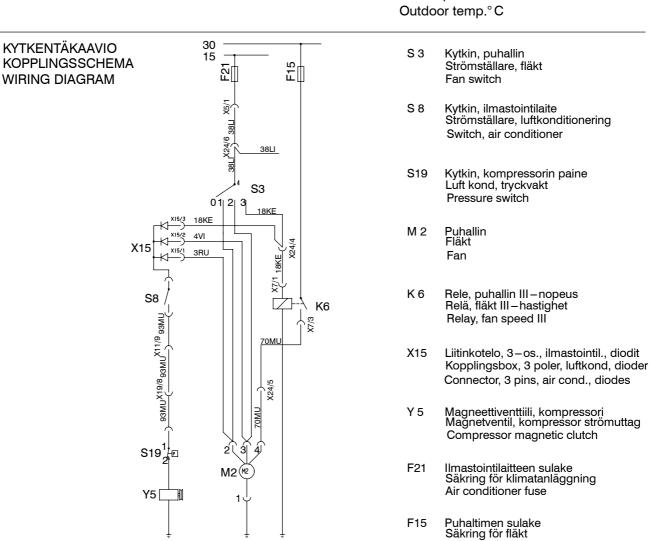

AIR CONDITIONING, FITTING INSTRUCTION	28.06.1999	Model	No	Page
Turt Gordon Guita, Til Till a liter 1100 1101	20700.1000	6000-8750		
(PT94- cabin)	30.07.1999	6250Hi-8950Hi	89.2	17 (28)

SERVICING AND USE:

* If it is required to reduce quickly temperature to the desired value the engine speed must be set to at least a 1000 RPM with cooling knob in max. position (if air humidity is high the control knob is turned less) and fan in position II. The cooling knob is then turned to the desired value and the fan speed adjusted. Note that a high fan speed does not always produce the coldest result as air passes through the evaporator so quickly that it is not sufficiently cooled down.

- * Apart from cab cooling, the installation can also be used from reducing the general air humidity in the cab (e.g. from windows) by setting on the heating valve for a short time. The moisture in the air is then condensed in the evaporator and the air heated to the desired temperature
- * On the drier there is an inspection glass. When the air conditioner has been in function for about 10 min, should refrigerant in the glass be almost transparent. Some bubbles cab be seen when engine revs are changed up and down. On this drier there is also a separate moisture indicator. Blue colour indicates that the drier is active. Pink or grey colour means that the drier is inactive and should be changed.
- * The most usual cause of faults in a cooling installation is moisture in the system or that gas has leaked out. If there is moisture in the refrigerant, ice plugs will be formed which block the expansion valve (these both faults can be seen in the drier inspection glasses).
- * To prevent gas leakage through drying out of the seals on the compressor shaft the air conditioner should be run for about five minutes at every lubrication service of the tractor, or at least once a month, even during winter.

NOTE! Check that the compressor actually starts (at low temperatures the thermostat cuts out).

*The condenser must be cleaned at regular intervals to remove dust, insects and other foreign matter. Twisted gills must be straightened out.

			NI-	D
AIR CONDITIONING. FITTING INSTRUCTION	28.0 8.1 999	Model	No	Page
,		6000-8750		
(PT94- cabin)	30.07.1999	6250Hi_8950Hi	89.2	18 (28)
, (0200111 0000111		. • (==)

FAULT ANALYSIS AND SYMPTOMS

a) Leaks in the system will lead to inadequate cooling and low and high gauge readings will be too low.


- b) If the system is under-charged, bubbles will be permanently visible in the dehydrator sight glass and both gauge readings will be low.
- c) If the evaporator is dirty or an expansion valve is blocked or frozen up, there will be a partial vacuum on the low pressure side and insufficient pressure on the high pressure side.
- d) An over-charged system, an expansion valve stuck open or a clogged condenser will cause excessive pressure on the low pressure side.
- e) A clogged condenser and an over-charged system will cause excessive pressure on the high pressure side.

OVERCHARGE

Note! The correct refrigerant filling is about **1,4 kg** on 6000–8400 tractors.

- In a correctly charged system, R12 discharged from the compressor in the form of gas looses its excess heat, resulting from compression in the first coil of the condenser and condenses to a liquid in the subsequent coils. Before flowing to the reservoir, this liquid is held in the last condenser coil. If the system is over—charged, the liquid level builds up in the condenser, leaving fewer coils available to condense the gas. Both temperature and pressure then build up, causing hoses to burst in some cases.

AIR CONDITIONING, FITTING INSTRUCTION	28.08.1999	Model	No	Page
(PT94- cabin)	30.07.1999	6000-8750 6250Hi-8950Hi	89.2	19(28)

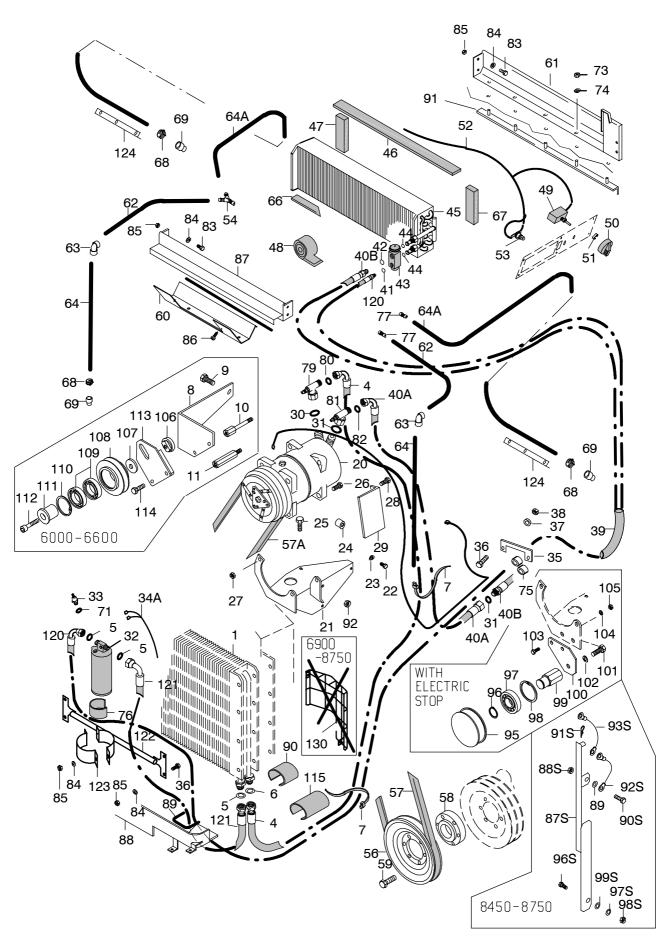

AIR CONDITIONING, FITTING INSTRUCTION	28.06.1999	Model 6000-8750	No	Page
(PT94- cabin)	30.07.1999			20 (28)

OSALUETTELO / STYCKLISTA / PARTS LIST

OSALUETTELO / STYCKLISTA / PARTS LIST 6000, 6100, 6200, 6300, 6400, 6600, 6800, 6900, 8000, 8100, 8200, 8400, 8050, 8150, 8450, 8550, 8750:

0.	1 00,	0030, 0130, 04	30, 0330, 0730.				1994-
	1	32453210	Ilmastointilaite Avattava keula	Luftkondit. Öppningsbar framkåpa	Air conditioning Openable front cover	Klimaanlage Öffenbar vorderteil	6000-6600
	1	32214310	Ilmastointilaite Avattava keula	Luftkondit. Öppningsbar framkåpa	Air conditioning Openable front cover	Klimaanlage Öffenbar vorderteil	6900-8400
	1	33099900	Ilmastointilaite Avattava keula	Luftkondit. Öppningsbar framkåpa	Air conditioning Openable front cover	Klimaanlage Öffenbar vorderteil	6800
1 4	1 1 1	33182400 33665200 32849100	Ilmastointilaite Ilmastointilaite .Lauhdutin .Letku	Luftkondit. Luftkondit. Condensor Slang	Air conditioning Air conditioning Condenser Hose	Klimaanlage Klimaanlage Kondensator Schlauch	8050 – 8750 HiTech, page 24 Page 23
5 6 7	3 1 13	30414910 30415010 SA9102	.O-rengas .O-rengas .Side	O-ring O-ring Band	O-ring O-ring Band	O-ring O-ring Binde	ø 7.66x1,78 ø 10,82x1,78
8 9 10 11	1 1 1 1	32509800 HA6324 32509200 32509300	.Tuki .Ruuvi .Ruuvi .Ruuvi	Stöd Skruv Skruv Skruv	Support Screw Screw Screw	Stütze Schraube Schraube Schraube	M08x25
20 21	1 1 1	32838600 32213920 32510020	.Kompressori .Jalusta .Jalusta	Kompressor Stativ Stativ	Compressor Stand Stand	Kompreßor Sockel Sockel	6000-6800 6900-8750
22	1	HA6323	.Ruuvi	Skruv	Screw	Schraube	6000-680 M08x20
	2	HA8331	.Ruuvi	Skruv	Screw	Schraube	6900 – 8750 M08x100
23 24	3 1	JD0408 32602700	.Aluslaatta .Holkki	Bricka Hylsa	Washer Sleeve	Scheibe Hülse	ø 8,4 6000-6800 L=24,5
	2	32510200	.Holkki	Hylsa	Sleeve	Hülse	6900-8750 L=12
25 26	2 2 1 3	33412000 33183400 HA6323 HA9236	.Holkki .Holkki .Ruuvi .Ruuvi	Hylsa Hylsa Skruv Skruv	Sleeve Sleeve Screw Screw	Hülse Hülse Schraube Schraube	6800 L=55 6800 L=73 M08x20 M10x35
27 28 29 30	4 2 1 1	JB8905 HA6333 30764900	.Mutteri .Ruuvi .Suojus	Mutter Skruv Skydd	Nut Screw Shield	Mutter Schraube Schutz	N M10 M10x25
31 32 33 34A	2 1 1	30415010 30415110 32814800 32844300 33175800	.O-rengas .O-rengas .Kuivaajasäiliö .Painevahti .Johdinsarja	O-ring O-ring Torkn.behållare Tryck vakt Ledningssats	O-ring O-ring Drying container Pressure detector Wiring set	O-ring O-ring Trocknenbehälter Druckindikator Verkabelung	
35 36 37	1 14 2	32603400 HA6313 JD0406	.Tuki .Ruuvi .Aluslaatta	Stöd Skruv Bricka	Support Screw Washer	Stütze Schraube Scheibe	M06x16 ø 6,4
38 39 40A	2 1	JB1106 32550600 33201200	.Mutteri .Suojus .Letku	Mutter Skydd Slang	Nut Shield Hose	Mutter Schutz Schlauch	M6 F16408-
40B 41 42		33201100 30414910 30415110 32746000	.Letku .O-rengas .O-rengas .Paisuntaventtiili	Slang O-ring O-ring Expansionsventil	Hose O-ring O-ring Expansion valve	Schlauch O-ring O-ring Expansionsventil	F16408 –
43 44	1 2	32745700 30415010	+ HöyrystinPaisuntaventtiiliO-rengas	Evaporator Expansionsventil O-ring	Evaporator Expansion valve O-ring	Verdampfer Expansionsventil O-ring	
45 46 47 48	1 1 2 2	32745600 32836300 32836500 30794000	Höyrystin .Tiiviste .Tiiviste .Eristysmassa	Evaporator Tätning Tätning Isolatorsmass	Evaporator Gasket Gasket Isolating compound	Verdampfer Dichtung Dichtung Isoliermaße	7x20x690 35x20x155 1850 mm
49 50	1 1	30415200 31752000	.Säätökytkin .Nuppi	Reglerbrytare Knopp	Control switch Knob	Regelschalter Knopf	
51 52 53	1 1 1	32291100 32835110 SH2651	.Lukitsin .Johdinsarja .Lamppu	Låsplatta Ledningssats Lampa	Lock plate Wiring set Bulb	Verriegelungsplat Verkabelung Lampe	te 2W
	1 1	32571100 32570900	.Lampunpidin .Kumitiiviste	Lampfattning Gummitätning	Bulb socket Rubber seal	Lampenfuß Gmmidichtung	

AIR CONDITIONING, FITTING INSTRUCTION

28.00.1999 30.07.1999

Model 6000-8750 6250Hi-8950Hi No

Page

89.2 21 (28)

54	1	32461100	.Y-liitin	Y-koppling	Y-union	Y-verbindung	
56	1	30555000	.Kiilahihnapyörä	Kilremskiva	V-belt pulley	Keilriemenrad	
	1	836655451	.Kiilahihnapyörä	Kilremskiva	V-belt pulley	Keilriemenrad	
57	1	32463910	.Kiilahihna	Kilrem	V-belt	Keilriemen	6000-6600
57A	1	32889500	.Kiilahihna	Kilrem	V-belt	Keilriemen	6900-8750
	1	33099800	.Kiilahihna	Kilrem	V-belt	Keilriemen	6800
	1	33279600	.Kiilahihna	Kilrem	V-belt	Keilriemen	6800 : : :
58	1	30555100	.Välikappale	Mellanstycke	Intermed. piece	Zwischenstück	6000-6800
59	6	HA6326	.Ruuvi	Skruv	Screw	Schraube	6000-6800
60	1	32840700	.Ohjauslevy	Styrplatta	Guide plate	Steuerplatte	
61	1	32800010	.Levy	Platta	Plate	Platte	
_	1	33761200	Tiiviste	Tätning	Gasket	Dichtung	62
2	335	54200	.Letku	Slang	Hose	Schlauch	
63	2	32688800	.Käyrä	Vinkelrör	Elbow pipe	Vinkelrohr	
64	2	33554300	.Letku	Slang	Hose	Schlauch	L=1600
64A	2	33554400	.Letku	Slang	Hose	Schlauch	L=2500
66	1	32836200	.Tiiviste	Tätning	Gasket	Dichtung	5x40x590
67	1	32836400	.Tiiviste	Tätning	Gasket	Dichtung	5x20x150
68	4	32697000	.Letkunpidin	Slangfäste	Hose holder	Schlauchhalter	
69	4	32696700	.Suutin	Munstycke	Nozzle	Düse	
71	1	32275210	.O-rengas	O-ring	O-ring	O-ring	
73	5	JB1105	.Mutteri	Mutter	Nut	Mutter	M5
74	5	JD0405	.Aluslaatta	Bricka	Washer	Scheibe	ø5,3
75	2	32732600	.Putkieriste	Rörisolering	Pipe insulation	Rohrisolator	
76	2	32569200	.Tiiviste	Tätning	Gasket	Dichtung	3x10x100
77	2	32602800	.Liitin	Nippel	Union	Verbindung	
79	1	32838800	.Liitin	Nippel	Union	Verbindung	D
80	1	30415010	.Tiiviste	Tätning	Gasket	Dichtung	
81	1	32839000	.Liitin	Nippel	Union	Verbindung	S
82	1	30415110	.Tiiviste	Tätning	Gasket	Dichtung	
83	8	HA9224	.Ruuvi	Skruv	Screw	Schraube	M06x12
84	28	JD0406	.Aluslaatta	Bricka	Washer	Scheibe	ø6,4
85	24	JB1106	.Mutteri	Mutter	Nut	Mutter	M6
86	2	HN9051	.Ruuvi	Skruv	Screw	Schraube	B 4,8x32
87	1	32934000	.Levy	Platta	Plate	Platte	
88	1	32883400	.Verkko	Nät	Net	Netz	6000-6800
	1	32844000	.Verkko	Nät	Net	Netz	6900-8400
	1	33127500	.Verkko	Nät	Net	Netz	8450-8750
89	1	32842700	.Reunasuojus	Kantskydd	Edge shield	Kantenschutz	
90	1	32807900	.Tiiviste	Tätning	Gasket	Dichtung	6900-8400
91	1	33135010	.Tuki	Stöd	Support	Stütze	
92	1	JB9927	.Mutteri	Mutter	Nut	Mutter	
	1	32889100	Välipyörä, koott	Mellanhjul, kmpl	Interm. wheel, assy	Zwischenrad	6000-6800:
95	1	32889210	Välipyörä	Mellanhjul	Intermediate wheel	Zwischenrad	
96	1	KG1020	Varmistinrengas	Låsring	Circlip	Sicherungring	
97	2	LA1290	Laakeri	Lager	Bearing	Lager	
98	1	KG3052	Varmistinrengas	Låsring	Circlip	Sicherungring	
99	1	32889620	Akseli	Axel	Shaft	Achse	
100	1	32884600	Levy	Platta	Plate	Platte	
101		HA6344	Ruuvi	Skruv	Screw	Schraube	M12x30
102		JD9105	Aluslaatta	Bricka	Washer	Scheibe	12
103		HA6325	Ruuvi	Skruv	Screw	Schraube	M8x30
104		JD0408	Aluslaatta	Bricka	Washer	Scheibe	
105		JB9927	Mutteri	Mutter	Nut	Mutter	V M8

AIR CONDITIONING, FITTING INSTRUCTION

28.00.1999 30.07.1999

Model 6000-8750 6250Hi-8950Hi


No

Page

89.2 | 22(28)

1	32510310	.Kiristin koott.	Klämma, kmpl	Clip, assy	Klammer, kompl	6000-6600
106 1	32969100	Vastakappale	Motstycke	Counterpiece	Gegenstück	
107 1	32969200	Välipala	Mellanstycke	Intermediate piece	Zwischenstück	
108 1	32509610	Kiilahihnapyörä	Kilremskiva	V-belt pulley	Keilriemenrad	
109 2	LA1800	Laakeri	Lager	Bearing	Lager	
110 1	KG3052	Varmistinrengas	Låsring	Circlip	Sicherungring	
111 1	32510410	Akseli	Axel	Shaft	Achse	M40::40
112 1 113 1	HC9769 32509510	Ruuvi	Skruv	Screw	Schraube Zwischenstück	M10x40
114 2	HA6325	Välipala Ruuvi	Mellanstycke Skruv	Intermediate piece Screw	Schraube	M08x30
115 1	30765700	Suojus	Skydd	Shield	Schutz	8000-8750
120 1	33175700	.Letku	Slang	Hose	Schlauch	L=5700
			J.S. 19			_ 0.00
121 1	33175600	.Letku	Slang	Hose	Schlauch	6000-6600
	33244410	.Letku	Slang	Hose	Schlauch	
122 1	33154900	.Teline	Konsol	Bracket	Gestell	6000-6800
1	33154800	.Teline	Konsol	Bracket	Gestell	6900-8400
'	33134000	. Telli le	KONSOI	Diacket	Gestell	0900-0400
123 1	33154600	.Kannatin	Hållare	Support	Halter	
- 1	32961000	Latta	Platt	Flat	Platt	:::
- 1	HA6324	Ruuvi	Skruv	Screw	Schraube	M08x25 : : :
- 1 - 1	JB1108 HA8330	Mutteri	Mutter Skruv	Nut Screw	Mutter Schraube	M8::: M08x80:::
- I - 1	JD9062	Ruuvi Aluslaatta	Bricka	Washer	Scheibe	B8:::
- 1	3D9002	Alusidalla	DIICKA	vvasilei	Scriebe	ъ
124 2	33497900	.Tuki	Hållare	Support	Halter	
(130 1	33027900)	Suojus	Skydd	Shield	Schutz	:::
(130 1	33027900)	Suojus	Skydd	Silleiu	SCHULZ	
1	33200800	Välipala	Mellanstycke	Intermediate piece	Zwischenstück	8200
		Tuuletin	Fläkt	Fan	Ventilator	
:	Sähköpysäytin	Elstopp	Elecric stop	Elektrische stop	Stop électrique	
:::	P.imakompr.	Med tryckluftkompr.	With air compressor	Mit Luftkompressor	Otop electrique	
	r.iiriakompi.	kanssa	Will all compresses	Will Edition process		
						0050 0550
070 1	00007400	Managatin	11211-4-	O	l lalka	8050 – 8750:
87S 1	33267400	.Kannatin .Kannatin	Hållare	Support	Halter	Left Bight
1 88S 4	33267500 JB1106	.Kannatin .Mutteri	Hållare Mutter	Support Nut	Halter Mutter	Right M6
89S 4	JD0406	.Nutteri .Aluslaatta	Bricka	Washer	Scheibe	6,4
90S 4	HA6313	.Ruuvi	Skruv	Screw	Schraube	M06x16
91S 2	33268200	.Sokka	Sprint	Pin	Splint	
92S 2	33268000	.Pidin	Klämma	Clamp	Klammer	
93S 2	33268100	.Pidin	Klämma	Clamp	Klammer	
96S 2	HA8327	.Ruuvi	Skruv	Screw	Schraube	M08x50
97S 2	JD0408	.Aluslaatta	Bricka	Washer	Scheibe	8,4
98S 2	JB9927	.Mutteri	Mutter	Nut	Mutter	V M8
99S 4	625510	.Aluslaatta	Bricka	Washer	Scheibe	

AIR CONDITIONING, FITTING INSTRUCTION	28.08.1999	Model 6000 8750
	30.07.1999	

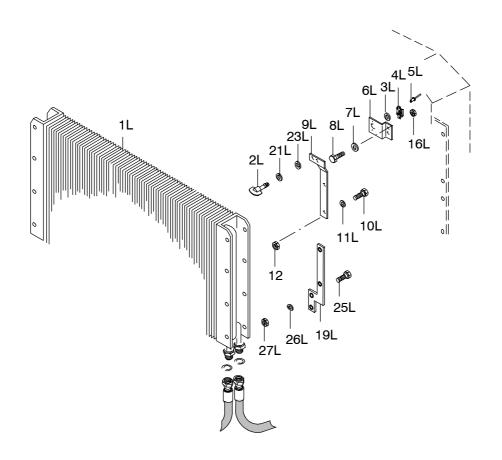

No

89.2


Page

23(28)

OSALUETTELO / STYCKLISTA / PARTS LIST:

							1994 –
1L	1	32814900	.Lauhdutin	Condensor	Condenser	Kondensator	6000-6800
	1	33289400	.Lauhdutin	Condensor	Condenser	Kondensator	6900-8400,
							8050-8750
2L	2	32665500	.Vääntötappi	Vridpinne	Torque pin	Drehstift	
3L	2	32665600	.Kiinnityslaatta	Fästplåt	Mounting plate	Befest.platte	
4L	2	32675200	.Kiinnitin	Fästdon	Fastener	Halter	ei/no 6800
5L	4	JF5002	.Niitti	Nit	Rivet	Niet	ei/no 6800
6L	2	32814700	.Kiinnitin	Fästdon	Fastener	Halter	ei/no 6800
7L	4	JD0406	.Aluslaatta	Bricka	Washer	Scheibe	ø6,4
8L	4	HA9224	.Ruuvi	Skruv	Screw	Schraube	M06x12
9L	1	32844400	.Kiinnitin	Fästdon	Fastener	Halter	ei/no 6800
	1	32844500	.Kiinnitin	Fästdon	Fastener	Halter	ei/no 6800
10L	8	HA6313	.Ruuvi	Skruv	Screw	Schraube	M06x16
11L	8	JD0406	.Aluslaatta	Bricka	Washer	Scheibe	
12L	8	JB1106	.Mutteri	Mutter	Nut	Mutter	M6
16L	4	JB1108	.Mutteri	Mutter	Nut	Mutter	M8, 6000-6600
19L	2	32844200	.Levy	Platta	Plate	Platte	6900-8400
21L	2	32673300	.Kiinnityslaatta	Fästplåt	Mounting plate	Befest.platte	
23L	2	JD0410	.Aluslaatta	Bricka	Washer	Scheibe	10,5
25L	2	HA6323	.Ruuvi	Skruv	Screw	Schraube	M8x20
26L	2	JD0408	.Aluslaatta	Bricka	Washer	Scheibe	ø8,4
27L	2	JB8904	Mutteri	Mutter	Nut	Mutter	N M8

AIR CONDITIONING, FITTING INSTRUCTION	28.00.1999	Model 6000-8750	No	Page
(PT94- cabin)	30.07.1999	6250Hi-8950Hi	89.2	24(28)

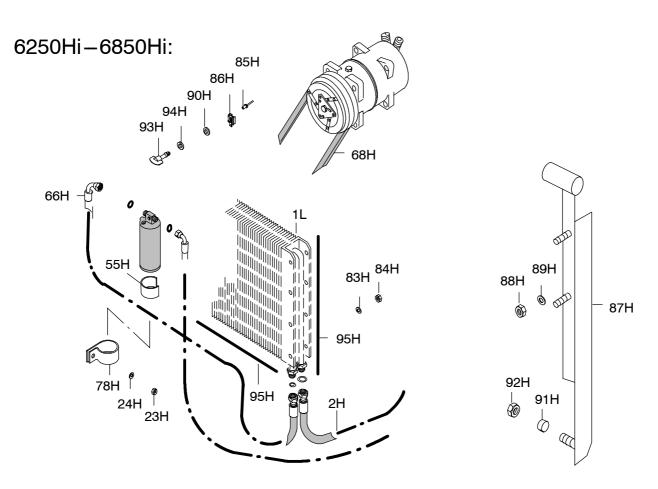

ERILAISET OSAT / OLIKA DERAL / DIFFERENT PARTS 6250Hi-6850Hi:

23H 1	JB1108	.Mutteri	Mutter	Nut	Mutter	
24H 1	JD0406	.Aluslaatta	Bricka	Washer	Scheibe	
55H 2	32860100	.Tiiviste	Tätning	Gasket	Dichtung	
66H 1	33625400	.Letku	Slang	Hose	Schlauch	
68H 1	33764400	.Kiilahihna	Kilrem	V-belt	Keilriemen	6250Hi-6650Hi
(1	33099800	.Kiilahihna	Kilrem	V-belt	Keilriemen	6850Hi)
78H 1	TC7150	.Side	Band	Band	Binde	,
85H 4	JF5002	.Niitti	Nit	Rivet	Niet	
86H 2	32675200	.Jousilevy	Fjäderplatta	Spring plate	Federplatte	
87H 1	33594800	.Kannatin	Hållare	Support	Halter	Left
1	33594900	.Kannatin	Hållare	Support	Halter	Right
90H 2	32665600	.Kiinnityslaatta	Fästplåt	Mounting plate	Befest.platte	
91H 2	33663300	.Holkki	Hylsa	Sleeve	Hülse	
92H 2	JB8904	.Mutteri	Mutter	Nut	Mutter	
93H 2	32665500	.Väätötappi	Vridpinne	Torque pin	Drehstift	
94H 2	32673300	.Kiinnityslaatta	Fästplåt	Mounting plate	Befestigugsplatte	
95H 3	32569200	Tiiviste	Tätning	Gasket	Dichtung	

AIR CONDITIONING, FITTING INSTRUCTION	28.00.1999	Model 6000-8750	No	Page
(PT94- cabin)	30.07.1999			25(28)

APPENDIX 1

If the tractor (3, 4-cyl.) is equipped with compressed air system, the air compressor should be moved to the RH side of the engine:


- In this case a vertical exhaust silencer and a new engine hood plate should be fitted.
 A cutting must be done on the wind tunnel (fan comes more forward). At the crankshaft end, there are three belt pulleys. The **two** outer pulleys power the compressed air and air conditioner compressor.
- Remove the engine hood plate and the vertical silencer. Remove the radiator cowl.
- Make holes in the cowl according to picture.
- Note! The compressor bracket of the air conditioning must be fitted in the rear holes.
 Fasten the compressor extra support 20.
- Change an extra belt pulley 35 in place of one groove pulley (without intermediate piece).
- Fit the compressor bracket and compressor according to picture at fixing bolts of the engine gear wheel casing. Fit the return pipe parts (13,14,27) into place
 - Change the alternator protective covering 38.
- Remove a plug screw on the cylinder block behind the alternator and connect into hole the compressor lubricating oil hose 25 one end (union 50).
 Fasten the other end to the compressor.
- Assembly the tightener (parts 39 48) into place.
 Fit the belt 37 and tighten it to a suitable tension NOTE! check:
 - belt pulley position in relation to the other pulleys (must be in the same line.)
 - belt tension
 - Tightness of hose unions
- Fit the vertical silencer 23p with its parts. Fit a new engine hood plate.

AIR CONDITIONING, FITTING INSTRUCTION	28,06,1999	Model	No	Page
,		6000-8750		
(PT94- cabin)	30.07.1999	6250Hi-8950Hi	89.2	26(28)

Liite1 Paineilmalaitteet: paineilmakompressorin siirto moottorin oikealle puolelle (3/4-syl.)

Bilaga 1 Trykluftanordning: Flyttning av tryckluftkompressorn till motorns högra sida (3/4-cyl.)

Appendix 1 Pneumatic appliances: Moving the air kompressor to the right side of the engine, (3/4-cyl.)

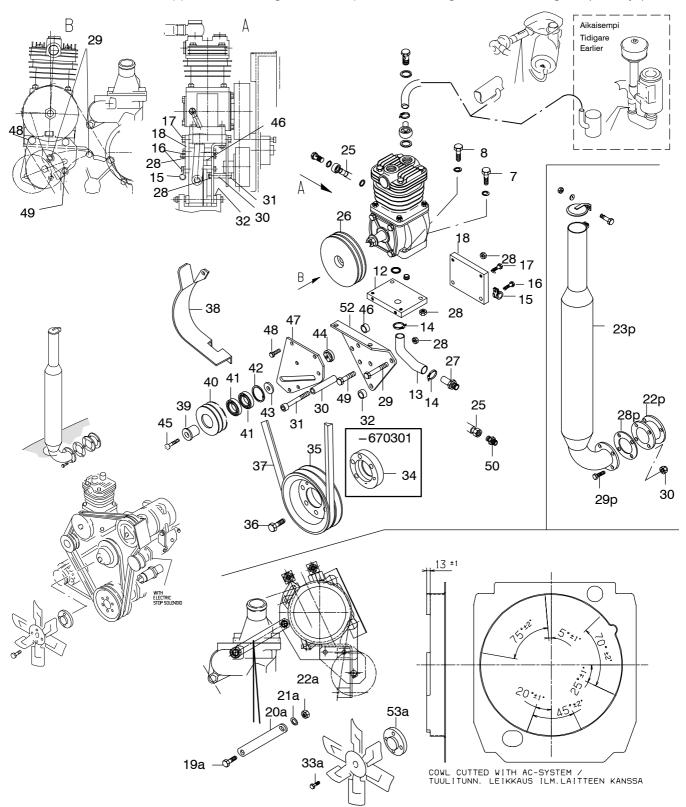

AIR CONDITIONING, FITTING INSTRUCTION	28.00.1999	Model 6000 - 8750	No	Page
(PT94- cabin)	30.07.1999	6250Hi-8950Hi	89.2	27(28)

LIITE 1 / BILAGA 1 / APPENDIX 1

5	1	836652398	.lmuputki	Sugrör	Intake pipe	Saugrohr	
7	2	HA9230	.Ruuvi	Skruv	Screw	Schraube	M8x35
8	2	HA8328	.Ruuvi	Skruv	Screw	Schraube	M8x60
10	1	614702532	.O-rengas	O-ring	O-ring	O-ring	
11	1	835331738	.Tulppa	Plugg	Plug	Stopfen	
12	1	836136875	.Laatta	Platta	Plate	Platte	
13	1	836136869	.Putki	Rör	Pipe	Rohr	
14	2	GP3918	.Letkunkiristin	Slangklämma	Hose clip	Schlauchbinder	
15	1	602060612	.Kiinnitin	Fästdon	Fastener	Halter	
16	2	HA6324	.Ruuvi	Skruv	Screw	Schraube	M8x25
17	2	HA6333	.Ruuvi	Skruv	Screw	Schraube	M10x25
18	1	836136865	.Laatta	Platta	Plate	Platte	WITUXZS
19a	-	HA6324	.Ruuvi	Skruv	Screw	Schraube	M8x25
198	2	ПА0324	.nuuvi	Skruv	Screw	Schraube	IVIOX25
20a	1	32961000	.Tuki	Stöd	Support	Stütze	
21a	2	JD9062	.Aluslaatta	Bricka	Washer	Scheibe	8
22a	2	JB1108	.Mutteri	Mutter	Nut	Mutter	M8
25	1	836847771	.Putki	Rör	Pipe	Rohr	
26	1	836652094	.Kiilahihnapyörä	Kilremskiva	V-belt pulley	Keilriemenrad	Air conditioning
27	1	836136868	.Putki	Rör	Pipe	Rohr	All conditioning
28	4	JB1108	.Mutteri	Mutter	Nut	Mutter	M8
29	2	HA8330	.Ruuvi	Skruv	Screw	Schraube	M8x80
30	1	836852171	.Holkki		Sleeve	Hülse	Ινιοχου
31	1	HC8331	.Ruuvi	Hylsa Skruv	Screw	Schraube	M8x60
32	1					Zwischenstück	MOXOO
32 33a		836019387 HA8327	.Välipala .Ruuvi	Mellanstycke Skruv	Intermedeate piece Screw	Schraube	140.50
SSA	4	HA0321	.nuuvi	Skiuv	Screw	Schraube	M8x50
34	1	30555100	.Välipala	Mellanstycke	Intermedeate piece	Zwischenstück	-670301
35	1	836655452	.Kiilahihnapyörä	Kilremskiva	V-belt pulley	Keilriemenrad	Air conditioning
36	6	HA8326	.Ruuvi	Skruv	Screw	Schraube	M8x40
37	2	32960800	.Kiilahihna	Kilrem	V-belt	Keilriemen	Air conditioning
38	1	836655231	.Suoja	Skydd	Cover	Schutz	
39	1	32510410	.Akseli	Axel	Shaft	Achse	
40	1	835328919	.Kiilahihnapyörä	Kilremskiva	V-belt pulley	Keilriemenrad	Air conditioning
41	2	LA1800	.Laakeri	Lager	Bearing	Lager	
42	1	KG3052	.Varmistinrengas	Låsring	Circlip	Sicherungring	
43	1	836655153	.Välipala	Mellanstycke	Intermedeate piece	Zwischenstück	
44	1	32969100	.Vastakappale	Motstycke	Counterpiece	Gegenstück	
45	1	HC9765	.Ruuvi	Skruv	Screw	Schraube	M10x60
46	1	836114846	.Välipala	Mellanstycke	Intermedeate piece	Zwischenstück	
47	1	836136873	.Levy	Platta	Plate	Platte	
48	2	HA9235	.Ruuvi	Skruv	Screw	Schraube	M10x20
49	1	HA9400	.Ruuvi	Skruv	Screw	Schraube	M8x45
50	1	641086006	.Liitin	Anslutning	Connection	Anschluß	
51	1	32944300	.Kompressori	Kompressor	Compressor	Kompreßor	
52	1	836136866	.Levy	Platta	Plate	Platte	
53a	1	836652033	.Välipala	Mellanstycke	Intermedeate piece	Zwischenstück	
			•	-	•		

AIR CONDITIONING, FITTING INSTRUCTION	28.00.1999	Model 8750	No	Page
(PT94- cabin)	30.07.1999	6250Hi-8950Hi	89.2	28(28)

LIITE 1 / BILAGA 1 / APPENDIX 1

			Vaihdettavat osat	Utbytbara delar	Changeable parts	Wechselbare Teile	6100
	-1	32059520	Äänenvaimennin	Ljuddämpare	Muffler	Schalldämpfer	
	+1	30294920	Äänenvaimennin	Ljuddämpare	Muffler	Schalldämpfer	
	-1	32107200	Konepeitto	Motorhuv	Engine hood	Motorhaube	
	+1	31810310	Konepeitto	Motorhuv	Engine hood	Motorhaube	
22p	+1	32766300	Väliputki	Mellanrör	Spaser pipe	Zwischenrohr	
		HA6325	.Ruuvi	Skruv	Screw	Schraube	M8x30
30p	+4	JB9927	.Mutteri	Mutter	Nut	Mutter	V M8
	-1	32879600	.Putki	Rör	Pipe	Rohr	
28p	+1	586480	.Tiiviste	Tätning	Gasket	Dichtung	
			Veibdettevet eest	l librathous dolou	Changachla nauta	Weekeelbere Teile	6000 6600
	4	32059420	Vaihdettavat osat Äänenvaimennin	Utbytbara delar	Changeable parts Muffler	Wechselbare Teile	6300,6600
	-1			Ljuddämpare		Schalldämpfer	
	+1	30294920	Äänenvaimennin	Ljuddämpare	Muffler	Schalldämpfer	
	+1 -1		Konepeitto	Motorhuv	Engine hood	Motorhaube	
200	-	31810410 32766200	Konepeitto Väliputki	Motorhuv Mellanrör	Engine hood Spaser pipe	Motorhaube	
22p			.Ruuvi	Skruv	Spaser pipe Screw	Zwischenrohr Schraube	M8x30
•		HA6325 JB9927	.nuuvi .Mutteri	Mutter	Nut	Mutter	V M8
Jop	-1	32879600	.Putki	Rör	Pipe	Rohr	V IVIO
285	-	586480	.Tiiviste	Tätning	Gasket		
28p	Τı	300400	. I liviste	raining	Gaskei	Dichtung	
			V-9-1-4	I lale allegane al el en	<u> </u>	—	0400
			Vaihdettavat osat	Utbytbara delar	Changeable parts	Wechselbare Teile	6400
	- 1	32437700	Äänenvaimennin	Ljuddämpare	Changeable parts Muffler	Wechselbare leile Schalldämpfer	6400
	-1 +1	32437700 30294920		•			6400
	-		Äänenvaimennin	Ljuddämpare	Muffler	Schalldämpfer	6400
	+1	30294920	Äänenvaimennin Äänenvaimennin	Ljuddämpare Ljuddämpare	Muffler Muffler	Schalldämpfer Schalldämpfer	6400
22p	+1 +1 -1	30294920 32766600	Äänenvaimennin Äänenvaimennin Konepeitto	Ljuddämpare Ljuddämpare Motorhuv	Muffler Muffler Engine hood	Schalldämpfer Schalldämpfer Motorhaube	6400
	+1 +1 -1 +1	30294920 32766600 31810410	Äänenvaimennin Äänenvaimennin Konepeitto Konepeitto	Ljuddämpare Ljuddämpare Motorhuv Motorhuv	Muffler Muffler Engine hood Engine hood	Schalldämpfer Schalldämpfer Motorhaube Motorhaube	M8x30
	+1 +1 -1 +1 +4	30294920 32766600 31810410 32961300	Äänenvaimennin Äänenvaimennin Konepeitto Konepeitto Väliputki	Ljuddämpare Ljuddämpare Motorhuv Motorhuv Mellanrör	Muffler Muffler Engine hood Engine hood Spaser pipe	Schalldämpfer Schalldämpfer Motorhaube Motorhaube Zwischenrohr	
29p	+1 +1 -1 +1 +4	30294920 32766600 31810410 32961300 HA6325 JB9927 32879600	Äänenvaimennin Äänenvaimennin Konepeitto Konepeitto Väliputki .Ruuvi	Ljuddämpare Ljuddämpare Motorhuv Motorhuv Mellanrör Skruv	Muffler Muffler Engine hood Engine hood Spaser pipe Screw	Schalldämpfer Schalldämpfer Motorhaube Motorhaube Zwischenrohr Schraube	M8x30
29p 30p	+1 +1 -1 +1 +4 +4	30294920 32766600 31810410 32961300 HA6325 JB9927 32879600	Äänenvaimennin Äänenvaimennin Konepeitto Konepeitto Väliputki .Ruuvi .Mutteri	Ljuddämpare Ljuddämpare Motorhuv Motorhuv Mellanrör Skruv Mutter	Muffler Muffler Engine hood Engine hood Spaser pipe Screw Nut	Schalldämpfer Schalldämpfer Motorhaube Motorhaube Zwischenrohr Schraube Mutter	M8x30
29p 30p	+1 +1 -1 +1 +4 +4	30294920 32766600 31810410 32961300 HA6325 JB9927 32879600	Äänenvaimennin Äänenvaimennin Konepeitto Konepeitto Väliputki .Ruuvi .Mutteri .Putki .Tiiviste	Ljuddämpare Ljuddämpare Motorhuv Motorhuv Mellanrör Skruv Mutter Rör Tätning	Muffler Muffler Engine hood Engine hood Spaser pipe Screw Nut Pipe Gasket	Schalldämpfer Schalldämpfer Motorhaube Motorhaube Zwischenrohr Schraube Mutter Rohr Dichtung	M8x30 V M8
29p 30p	+1 +1 -1 +1 +4 +4 -1	30294920 32766600 31810410 32961300 HA6325 JB9927 32879600 586480	Äänenvaimennin Äänenvaimennin Konepeitto Konepeitto Väliputki .Ruuvi .Mutteri .Putki .Tiiviste	Ljuddämpare Ljuddämpare Motorhuv Motorhuv Mellanrör Skruv Mutter Rör Tätning Utbytbara delar	Muffler Muffler Engine hood Engine hood Spaser pipe Screw Nut Pipe Gasket Changeable parts	Schalldämpfer Schalldämpfer Motorhaube Motorhaube Zwischenrohr Schraube Mutter Rohr Dichtung Wechselbare Teile	M8x30
29p 30p	+1 +1 -1 +1 +4 +4 -1 +1	30294920 32766600 31810410 32961300 HA6325 JB9927 32879600 586480	Äänenvaimennin Äänenvaimennin Konepeitto Konepeitto Väliputki .Ruuvi .Mutteri .Putki .Tiiviste Vaihdettavat osat Äänenvaimennin	Ljuddämpare Ljuddämpare Motorhuv Motorhuv Mellanrör Skruv Mutter Rör Tätning Utbytbara delar Ljuddämpare	Muffler Muffler Engine hood Engine hood Spaser pipe Screw Nut Pipe Gasket Changeable parts Muffler	Schalldämpfer Schalldämpfer Motorhaube Motorhaube Zwischenrohr Schraube Mutter Rohr Dichtung Wechselbare Teile Schalldämpfer	M8x30 V M8
29p 30p	+1 +1 -1 +1 +4 +4 -1 +1	30294920 32766600 31810410 32961300 HA6325 JB9927 32879600 586480 32059520 30294920	Äänenvaimennin Äänenvaimennin Konepeitto Konepeitto Väliputki .Ruuvi .Mutteri .Putki .Tiiviste Vaihdettavat osat Äänenvaimennin Äänenvaimennin	Ljuddämpare Ljuddämpare Motorhuv Motorhuv Mellanrör Skruv Mutter Rör Tätning Utbytbara delar Ljuddämpare Ljuddämpare	Muffler Muffler Engine hood Engine hood Spaser pipe Screw Nut Pipe Gasket Changeable parts Muffler Muffler	Schalldämpfer Schalldämpfer Motorhaube Motorhaube Zwischenrohr Schraube Mutter Rohr Dichtung Wechselbare Teile Schalldämpfer Schalldämpfer	M8x30 V M8
29p 30p	+1 +1 -1 +1 +4 +4 -1 +1	30294920 32766600 31810410 32961300 HA6325 JB9927 32879600 586480 32059520 30294920 32766600	Äänenvaimennin Äänenvaimennin Konepeitto Konepeitto Väliputki .Ruuvi .Mutteri .Putki .Tiiviste Vaihdettavat osat Äänenvaimennin Äänenvaimennin Konepeitto	Ljuddämpare Ljuddämpare Motorhuv Motorhuv Mellanrör Skruv Mutter Rör Tätning Utbytbara delar Ljuddämpare Ljuddämpare Motorhuv	Muffler Muffler Engine hood Engine hood Spaser pipe Screw Nut Pipe Gasket Changeable parts Muffler Muffler Engine hood	Schalldämpfer Schalldämpfer Motorhaube Motorhaube Zwischenrohr Schraube Mutter Rohr Dichtung Wechselbare Teile Schalldämpfer Schalldämpfer Motorhaube	M8x30 V M8
29p 30p	+1 +1 -1 +1 +4 +4 -1 +1 +1	30294920 32766600 31810410 32961300 HA6325 JB9927 32879600 586480 32059520 30294920 32766600 31810410	Äänenvaimennin Äänenvaimennin Konepeitto Konepeitto Väliputki .Ruuvi .Mutteri .Putki .Tiiviste Vaihdettavat osat Äänenvaimennin Äänenvaimennin Konepeitto Konepeitto	Ljuddämpare Ljuddämpare Motorhuv Motorhuv Mellanrör Skruv Mutter Rör Tätning Utbytbara delar Ljuddämpare Ljuddämpare Motorhuv Motorhuv	Muffler Muffler Engine hood Engine hood Spaser pipe Screw Nut Pipe Gasket Changeable parts Muffler Muffler Engine hood Engine hood Engine hood	Schalldämpfer Schalldämpfer Motorhaube Motorhaube Zwischenrohr Schraube Mutter Rohr Dichtung Wechselbare Teile Schalldämpfer Schalldämpfer Motorhaube Motorhaube	M8x30 V M8
29p 30p 28p	+1 +1 -1 +1 +4 +4 -1 +1 +1 -1 -1	30294920 32766600 31810410 32961300 HA6325 JB9927 32879600 586480 32059520 30294920 32766600 31810410 32868200	Äänenvaimennin Äänenvaimennin Konepeitto Konepeitto Väliputki .Ruuvi .Mutteri .Putki .Tiiviste Vaihdettavat osat Äänenvaimennin Äänenvaimennin Konepeitto Konepeitto Väliputki	Ljuddämpare Ljuddämpare Motorhuv Motorhuv Mellanrör Skruv Mutter Rör Tätning Utbytbara delar Ljuddämpare Ljuddämpare Ljuddämpare Motorhuv Motorhuv Mellanrör	Muffler Muffler Engine hood Engine hood Spaser pipe Screw Nut Pipe Gasket Changeable parts Muffler Muffler Engine hood Engine hood Spaser pipe	Schalldämpfer Schalldämpfer Motorhaube Motorhaube Zwischenrohr Schraube Mutter Rohr Dichtung Wechselbare Teile Schalldämpfer Schalldämpfer Motorhaube Motorhaube Zwischenrohr	M8x30 V M8
29p 30p	+1 +1 -1 +1 +4 +4 -1 +1 +1 -1 -1	30294920 32766600 31810410 32961300 HA6325 JB9927 32879600 586480 32059520 30294920 32766600 31810410 32868200 32965900	Äänenvaimennin Äänenvaimennin Konepeitto Konepeitto Väliputki .Ruuvi .Mutteri .Putki .Tiiviste Vaihdettavat osat Äänenvaimennin Äänenvaimennin Konepeitto Konepeitto Väliputki Väliputki	Ljuddämpare Ljuddämpare Motorhuv Motorhuv Mellanrör Skruv Mutter Rör Tätning Utbytbara delar Ljuddämpare Ljuddämpare Motorhuv Motorhuv Mellanrör Mellanrör	Muffler Muffler Engine hood Engine hood Spaser pipe Screw Nut Pipe Gasket Changeable parts Muffler Muffler Engine hood Engine hood Engine hood	Schalldämpfer Schalldämpfer Motorhaube Motorhaube Zwischenrohr Schraube Mutter Rohr Dichtung Wechselbare Teile Schalldämpfer Schalldämpfer Motorhaube Motorhaube Zwischenrohr Zwischenrohr	M8x30 V M8
29p 30p 28p 22p	+1 +1 +1 +1 +4 +4 -1 +1 +1 -1 +1 -1 +1	30294920 32766600 31810410 32961300 HA6325 JB9927 32879600 586480 32059520 30294920 32766600 31810410 32868200 32965900 32589800	Äänenvaimennin Äänenvaimennin Konepeitto Konepeitto Väliputki .Ruuvi .Mutteri .Putki .Tiiviste Vaihdettavat osat Äänenvaimennin Äänenvaimennin Konepeitto Konepeitto Väliputki	Ljuddämpare Ljuddämpare Motorhuv Motorhuv Mellanrör Skruv Mutter Rör Tätning Utbytbara delar Ljuddämpare Ljuddämpare Ljuddämpare Motorhuv Motorhuv Mellanrör	Muffler Muffler Engine hood Engine hood Spaser pipe Screw Nut Pipe Gasket Changeable parts Muffler Muffler Engine hood Engine hood Spaser pipe Spaser pipe	Schalldämpfer Schalldämpfer Motorhaube Motorhaube Zwischenrohr Schraube Mutter Rohr Dichtung Wechselbare Teile Schalldämpfer Schalldämpfer Motorhaube Motorhaube Zwischenrohr Zwischenrohr Dichtung	M8x30 V M8
29p 30p 28p 22p 29p	+1 +1 -1 +1 +4 +4 -1 +1 +1 -1 +1 +1 -1 +1 +1 +1 +1 +1 +1 +1 +1 +1 +1 +1 +1 +1	30294920 32766600 31810410 32961300 HA6325 JB9927 32879600 586480 32059520 30294920 32766600 31810410 32868200 32965900	Äänenvaimennin Äänenvaimennin Konepeitto Konepeitto Väliputki .Ruuvi .Mutteri .Putki .Tiiviste Vaihdettavat osat Äänenvaimennin Äänenvaimennin Konepeitto Konepeitto Väliputki Väliputki Tiiviste	Ljuddämpare Ljuddämpare Motorhuv Motorhuv Mellanrör Skruv Mutter Rör Tätning Utbytbara delar Ljuddämpare Ljuddämpare Motorhuv Motorhuv Mellanrör Mellanrör Tätning	Muffler Muffler Engine hood Engine hood Spaser pipe Screw Nut Pipe Gasket Changeable parts Muffler Muffler Engine hood Engine hood Spaser pipe Spaser pipe Gasket	Schalldämpfer Schalldämpfer Motorhaube Motorhaube Zwischenrohr Schraube Mutter Rohr Dichtung Wechselbare Teile Schalldämpfer Schalldämpfer Motorhaube Motorhaube Zwischenrohr Zwischenrohr	M8x30 V M8 6000
29p 30p 28p 22p	+1 +1 -1 +1 +4 +4 -1 +1 +1 -1 +1 +1 -1 +1 +1 +1 +1 +1 +1 +1 +1 +1 +1 +1 +1 +1	30294920 32766600 31810410 32961300 HA6325 JB9927 32879600 586480 32059520 30294920 32766600 31810410 32868200 32965900 32589800 HA6325 JB9927	Äänenvaimennin Äänenvaimennin Konepeitto Konepeitto Väliputki .Ruuvi .Mutteri .Putki .Tiiviste Vaihdettavat osat Äänenvaimennin Äänenvaimennin Konepeitto Konepeitto Väliputki Väliputki Tiiviste .Ruuvi .Mutteri	Ljuddämpare Ljuddämpare Motorhuv Motorhuv Mellanrör Skruv Mutter Rör Tätning Utbytbara delar Ljuddämpare Ljuddämpare Motorhuv Motorhuv Mellanrör Mellanrör Tätning Skruv Mutter	Muffler Muffler Engine hood Engine hood Spaser pipe Screw Nut Pipe Gasket Changeable parts Muffler Muffler Engine hood Engine hood Spaser pipe Spaser pipe Spaser pipe Gasket Screw Nut	Schalldämpfer Schalldämpfer Motorhaube Motorhaube Zwischenrohr Schraube Mutter Rohr Dichtung Wechselbare Teile Schalldämpfer Schalldämpfer Motorhaube Motorhaube Zwischenrohr Zwischenrohr Dichtung Schraube Mutter	M8x30 V M8 6000 TURBO M8x30
29p 30p 28p 22p 29p	+1 +1 -1 +1 +4 +4 -1 +1 +1 -1 +1 +1 +1 +1 +1 +1 +1 +1 +1 +1 +1 +1 +1	30294920 32766600 31810410 32961300 HA6325 JB9927 32879600 586480 32059520 30294920 32766600 31810410 32868200 32965900 32589800 HA6325	Äänenvaimennin Äänenvaimennin Konepeitto Konepeitto Väliputki .Ruuvi .Mutteri .Putki .Tiiviste Vaihdettavat osat Äänenvaimennin Äänenvaimennin Konepeitto Konepeitto Väliputki Väliputki Tiiviste .Ruuvi	Ljuddämpare Ljuddämpare Motorhuv Motorhuv Mellanrör Skruv Mutter Rör Tätning Utbytbara delar Ljuddämpare Ljuddämpare Motorhuv Motorhuv Mellanrör Mellanrör Tätning Skruv	Muffler Muffler Engine hood Engine hood Spaser pipe Screw Nut Pipe Gasket Changeable parts Muffler Muffler Engine hood Engine hood Spaser pipe Spaser pipe Spaser pipe Gasket Screw	Schalldämpfer Schalldämpfer Motorhaube Motorhaube Zwischenrohr Schraube Mutter Rohr Dichtung Wechselbare Teile Schalldämpfer Schalldämpfer Motorhaube Motorhaube Zwischenrohr Zwischenrohr Dichtung Schraube	M8x30 V M8 6000 TURBO M8x30

S

91. Hydraulics	



		Model	Code	Page
90. Hydraulic system		6000-8750	910	.
	8. 11. 1990	0000-0750	910	

Contents

General (Op. no. 910)
Technical data3Special tools4Hydraulic diagram6Hydraulic system, description9Hydraulic power lift13Three-point linkage and towing hook17Valves for auxiliary hydraulics18Oil flow regulating valve22Return oil connection for auxiliary hydraulics24
Repair instructions
Pump and pipe system (Op. no. 911)A. Measuring pressure in low pressure circuit1B. Measuring clutch pressures and lubricating pressure2C. Measuring pressure in high pressure circuit2D. Removing hydraulic pump3E. Fitting hydraulic pump3
Hydraulic power lift (Op. no. 912) 1. Hydraulic lift control valve: A. Checking shock valve opening pressure B. Removing control valve 1. C. Fitting control valve 1. D. Reconditioning control valve 2
2. Lifting cylinders: A. Changing lifting cylinder seals 3
Three – point linkage and towing hook 5 Adjusting pick – up hitch lifting links 5 Checking locking of pick – up hitch 5

		Model	Code	Page
90. Hydraulic system	8. 11. 1990	6000-8750	910	2

Technical data

The hydraulic system has low and high pressure circuits. Oil is supplied by a twin gear pump.

Both circuits have a common suction strainer. In addition, the high pressure circuit has a pressure filter and also the low pressure circuit (F13130-). On HiTech tractors there are two pressure filters in the low pressure circuit, one of which is a return filter.

Low pressure circuit (rearmost pump)		
- pump max.capacity at min. pressure and at max. engine revs. (l/min)	 pump capacity at max. engine revs. I/min pump capacity in HiTech tractors (transmission 650) and in 6200 – 6550Hi tractors (transmission 550) from ser. no. K36112 (6200 – 6400, K41106 –) at max. engine revs. I/min 8350Hi: 1800r/min, I/min max. pressure (pressure – limiting valve opening pressure) Supplies oil for the following functions: quick – shift gear engagement HiTech shuttle engagement 4WD engagement PTO engagement diff. lock engagement transmission lubrication oil for brake valve for trailer (optional) oil to oil cooler 	30 25
- pump max.capacity at min. pressure and at max. engine revs. (l/min)		
Supplies oil for the following functions: - steering system (priority valve) - hydraulic power lift - auxiliary hydraulics Pressures at test points (1500 r/min, 40–65°C) Low pressure circuit, -660070/660071- 2,1-2,3 MPa/1,8-1,9 MPa High pressure circuit/free circulation pressure 19,0-19,8 MPa/ca. 1,5 MPa Hydraulic power lift shock valve opening pressure 20-21 MPa Hydraulic power lift shock valve opening pressure min. 0,03 MPa/min. 0,12 MPa Oils: Common oil for transmission and hydraulic system. Oil quality and quantity, see page 130/4. - min. mark, available for auxiliary hydraulics 20 l - max. mark, available for auxiliary hydraulics 30 l - extra max. mark, available for auxiliary hydraulics 40 l Hydraulic power lift Electro-hydraulic power lift (Autocontrol) Hydraulic lift control valve - type Bosch - shock valve opening pressure Bosch - shock valve opening pressure 20 MPa (200 bar) Two external lifting cylinders: - Ø 80 mm (6000 –6400, 8900, 8000). Note! Manufacturing of power lift 40 KN (Ø 80 mm cyl.) is finished in autumn 2000 Ø 90 mm (6600, 6800, 8100, 6250Hi –6550Hi) - Ø 100 mm (8200, 8400, 8050 –8750, 6650Hi –8950Hi)	- pump max.capacity at min. pressure and at max. engine revs. (I/min) - max. pressure Hydraulic system capability at max. revs, measured at quick – action couplings: - max. effect (kW)	19 MPa (190 bar) 19 (-658899), 20 (658900-)
Low pressure circuit, −660070/660071− 2,1−2,3 MPa/1,8−1,9 MPa High pressure circuit/free circulation pressure 19,0−19,8 MPa/ca. 1,5 MPa Hydraulic power lift shock valve opening pressure 20−21 MPa Lubricating oil pressure, mechanical Shuttle/HiTech Shuttle min. 0,03 MPa/min. 0,12 MPa Coils: Common oil for transmission and hydraulic system. Oil quality and quantity, see page 130/4. − min. mark, available for auxiliary hydraulics 20 l − max. mark, available for auxiliary hydraulics 30 l − extra max. mark, available for auxiliary hydraulics 40 l Hydraulic power lift Electro—hydraulic power lift (Autocontrol) Hydraulic lift control valve type 50 mm (6000 −6400, 8900, 8000). Note! Manufacturing of power lift 40 KN (Ø 80 mm cyl.) is finished in autumn 2000. − Ø 90 mm (6600, 6800, 8100, 6250Hi −6550Hi) − Ø 100 mm (8200, 8400, 8500, 8750, 6650Hi −8950Hi)	Supplies oil for the following functions: - steering system (priority valve) - hydraulic power lift	23 MFa (230 Dai)
Common oil for transmission and hydraulic system. Oil quality and quantity, see page 130/4. — min. mark, available for auxiliary hydraulics	Low pressure circuit, -660070/660071 - High pressure circuit/free circulation pressure Hydraulic power lift shock valve opening pressure	19,0-19,8 MPa/ca. 1,5 MPa 20-21 MPa
Electro – hydraulic power lift (Autocontrol) Hydraulic lift control valve - type	Common oil for transmission and hydraulic system. Oil quality and quantity, see page 130/4. – min. mark, available for auxiliary hydraulics	30 I
	Electro-hydraulic power lift (Autocontrol) Hydraulic lift control valve - type - shock valve opening pressure Two external lifting cylinders: - Ø 80 mm (6000-6400, 8900, 8000). Note! Manufacturing of power lift 40 KN (Ø 80 mm cyl.) is finished in autumn 2000. - Ø 90 mm (6600, 6800, 8100, 6250Hi-6550Hi)	
		max. 18,0 MPa (180 bar)

Valves for auxiliary hydraulics

Two 1/2-action valves, separate levers:

- First valve has a mechanical position locking function.
- Second valve has a floating position.
- As an extra equipment can be fitted two extra valve
- As an option oil flow control valve can be fitted (controls the first valve oil flow)
- At the rear of the tractor there are quick action couplings for auxiliary hydraulics. Different kind of towing devices are available.
 Front power lift is also available, see pages 910/26 and 27.

Three-point linkage, category 2;

- telescopic lower links (6100-6400, 8000)
- linkage has quick-attaching type links (6600-8100).
- lower links with ball type ends, category 3 (8400)

Hydraulically controlled pick-up hitch. Agricultural drawbar (optional)

90. Hydraulic system 8. 12-1990 | Model | Code | Page | 6000-8750 | 910 | 4


Special tools


Α

Locally prepared tool


ET 893 530 Sleeve for fitting lifting arm shaft seals (Hydraulic lift 505 – 905)

ETV 893 540	Sleeve for removing/fitting lifting arm shaft bushes (Hydraulic lift 505-905)
ETV 893 580	Conic sleeve for fitting lifting cylinder piston seal, 6000 – 6400 and 8000 (Lifting cylinder ø 80)
ETV 893 590	Sleeve for crimping lifting cylinder piston seal, 6000 – 6400 and 8000 (Lifting cylinder ø 80)
ETV 893 600	Drift for fitting lifting cylinder piston seal, 6000 – 6400 and 8000 (Lifting cylinder ø 80)
ETV 894 240	Conic sleeve for fitting lifting cylinder piston seal, 8150-8750 (Lifting cylinder ø 100)
ETV 894 250	Sleeve for crimping lifting cylinder piston seal, 8150 – 8750 (Lifting cylinder ø 100)
ETV 894 260	Drift for fitting lifting cylinder piston seal, 8150-8750 (Lifting cylinder ø 100)

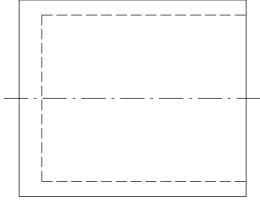

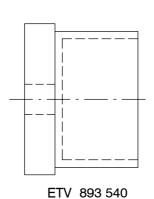


ET 893 530

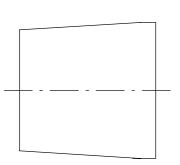


ETV 893 580 (Ø 80) ETV 894 280 (Ø 90) ETV 894 240 (Ø 100)

ETV 893 590 (Ø 80) ETV 894 290 (Ø 90) ETV 894 250 (Ø 100)

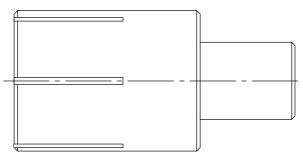


ETV 893 600 (Ø 80) ETV 894 300 (Ø 90) ETV 894 260 (Ø 100)

Pressure measuring equipment

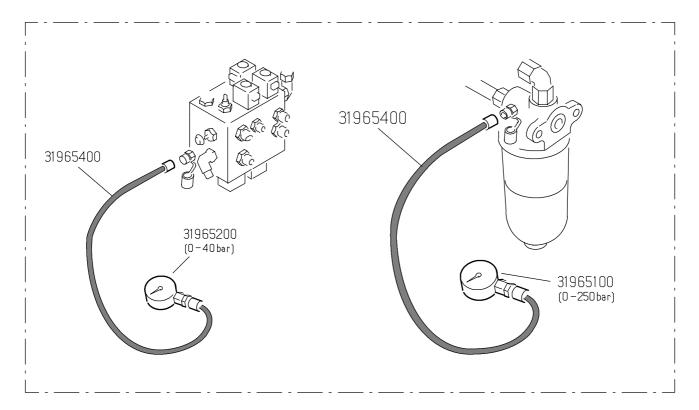

- 1. Equipment for measuring pressure in low pressure circuit (2,1-2,3 MPa (-660070) or 1,8-1,9 MPa (660071-). On HiTech tractors the pressure test point is placed on the outer face of the block, see picture on page 440/24.
- 2. Equipment for measuring pressure in high pressure circuit (19,0-19,8 MPa). Pressure measuring kit 31965000 includes the above shown equipment, which can also be ordered separately.


Measuring opening pressure of hydraulic lift shock valve

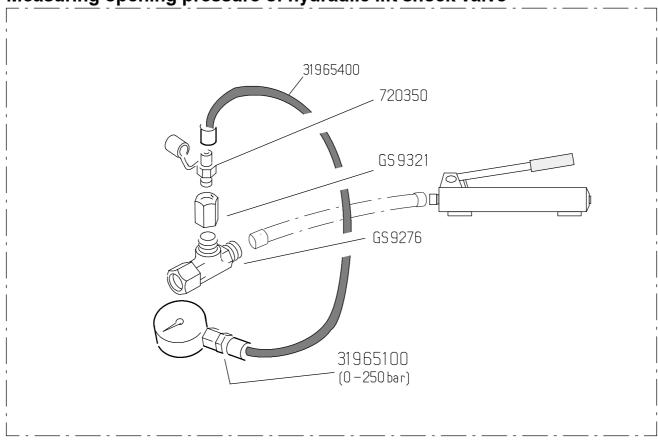

1. Measuring opening pressure of the hydraulic lift shock valve **(opening pressure 20 MPa).**Note! T – connector GS9276 has thread 3/4 – 16 for connecting a hand pump. The kit 31965000 does not include the hand pump.

90. Hydraulic system 15. 5. 1992 Model Code Page 6000-8750 910 6

Hydraulic diagram, -660070

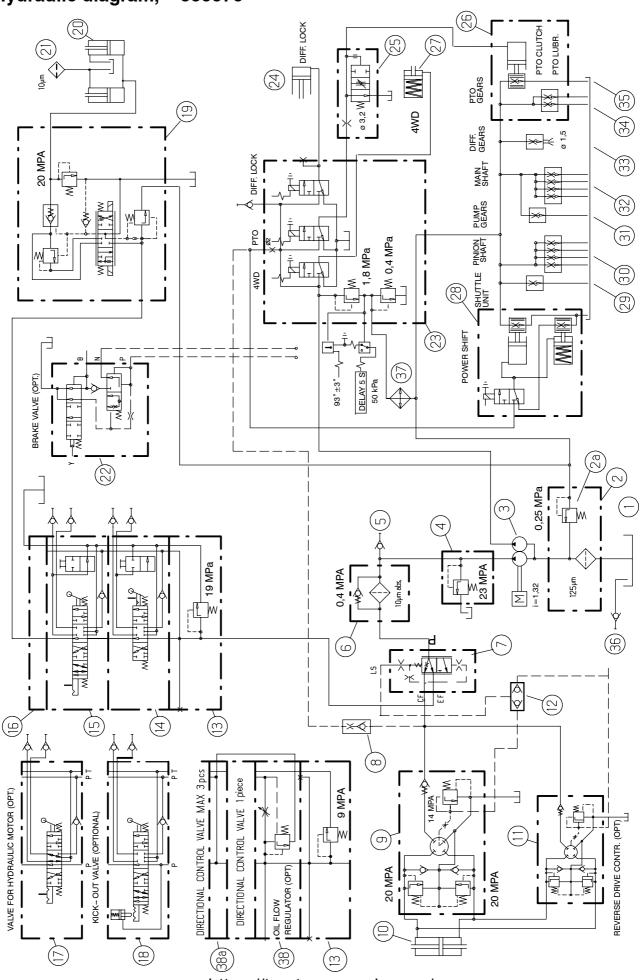



Model Code Page 15 6: 1992 90. Hydraulic system 910 7 6000-8750 15. 5. 1993

Hydraulic diagram, -660070

(see figure 1 on previous page)

- 1. Oil reservoir
- 2. Suction strainer (125 μm)
- 2a. Pressure-limiting valve 0,2 MPa (lubricating pressure)
- 3. Twin gear pump $(23,5+6,4 \text{ cm}^3/\text{r}, i=1,32)$
- 4. Safety valve 23 MPa. (placed in the high pressure pump).
- Pressure test point (Valmet HPR)
- 6. Pressure filter (degree of separation: β 10=75).
- by-pass valve 0,35 MPa.
- 7. Priority valve
- 8. Non-return valve
- 9. Steering valve (125 cm³/r).
- steering system pressure-limiting valve 14 MPa
- 10. Steering cylinder
- 11. Steering valve, reverse drive (optional)
- 12. Shuttle valve, reverse drive
- 13. End plate (oil inlet)
- pressure-limiting valve 19 MPa (high pressure circuit)
- 14. Valve for auxiliary hydraulics, 2/1 action (out-hold-in)
- 15. Valve for auxiliary hydraulics, 2/1- action (float-outhold-in), float position can be locked)
- 16. End plate (tank side)
- 17. Valve for auxiliary hydraulics (optional), 2- action (outfloat-in), out and in positions can be locked)
- 18. Valve for auxiliary hydraulics (optional), 2-action, kickout function (float-out-hold-in), float, out and in positions can be locked)
- 19. Hydraulic lift control valve (Bosch)
- lifting cylinder shock valve 20 MPa
- 20. Lifting cylinder
- 21. Breather filter for lifting cylinders and transmission hous-
- ing (degree of separation: β 10=75).
- 22. Brake valve for trailer (optional)
- 23. Servo valve block
- safety valve for oil cooler 0,4 MPa
- pressure-limiting valve for low pressure circuit 1,8 MPa
- 24. Differential lock
- 25. Cushioning valve for PTO engagement
- 26. PTO
- 27. 4WD clutch
- 28. Quick-shift gear
- 29. Reverse shuttle lubrication
- 30. Lubrication for bevel pinion shaft
- 31. Lubrication for pump drive mechanism
- 32. Lubrication of gearbox input shaft
- 33. Lubrication of differential gears
- 34. Lubrication of PTO unit shafts
- 35. Lubrication of PTO mechanism
- 36. Return oil connection for auxiliary hydraulics
- 37. Oil cooler
- 38). Oil flow regulator valve (Rexroth), (optional)
- 38a). Intermediate flange for oil flow regulator valve

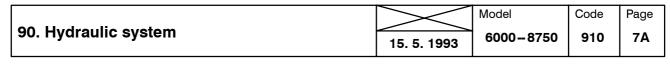

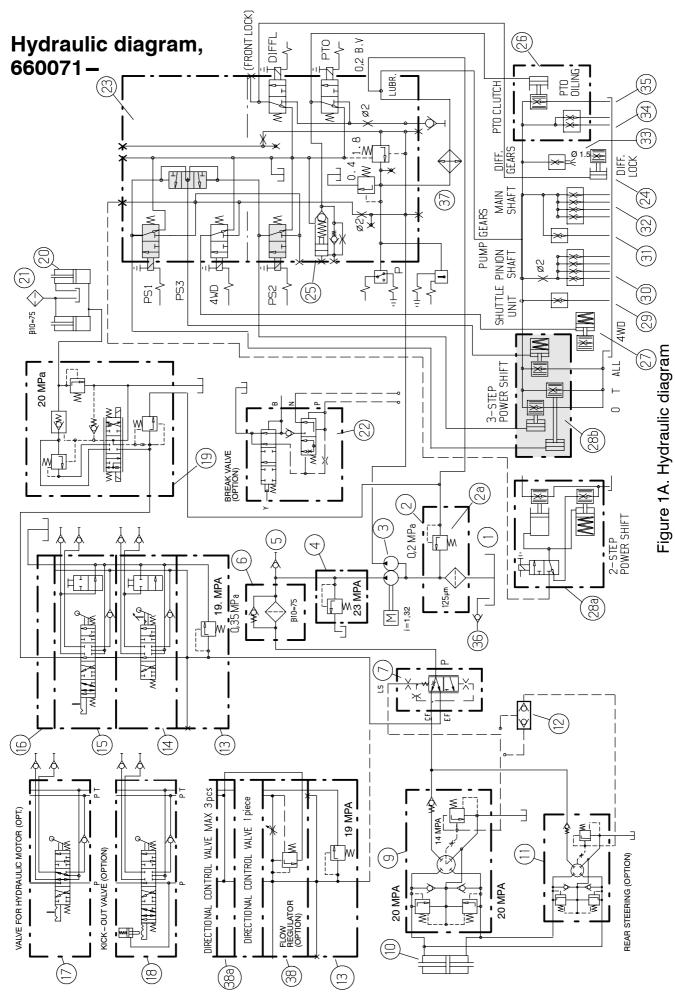

https://tractormanualz.com/

		Model	Code	Page
90. Hydraulic system	15. 5. 1993	6000-8750	910	7B

Hydraulic diagram, 660071 –


See picture 1A on previous page.

- 1. Oil reservoir
- 2. Suction strainer (125 µm)
- 2a. Pressure-limiting valve 0,2 MPa (lubricating pressure)
- 3. Twin gear pump $(25+8 \text{ cm}^3/\text{r}, i=1,32)$
- 4. Safety valve 23 MPa. (placed in the high pressure pump).
- 5. Pressure test point (Valmet HPR)
- 6. Pressure filter (degree of separation: β 10=75).
- by-pass valve 0,35 MPa.
- 7. Priority valve
- 8. **N.B.** Hose between valve block and priority valve and non return valve removed.
- 9. Steering valve (125 cm³/r).
- steering system pressure-limiting valve 14 MPa
- shock valve 20 MPa
- 10. Steering cylinder
- 11. Steering valve, reverse drive (optional)
- 12. Shuttle valve, reverse drive
- 13. End plate (oil inlet)
- pressure-limiting valve 19 MPa (high pressure circuit)
- 14. Valve for auxiliary hydraulics, 2/1 action (out-hold-in)
- 15. Valve for auxiliary hydraulics, 2/1 action (float out hold in), float position can be locked)
- 16. End plate (tank side)
- 17. Valve for auxiliary hydraulics (optional), 2- action (out-float-in), out and in positions can be locked)
- 18. Valve for auxiliary hydraulics (optional), 2-action, kick-out function (float-out-hold-in), float, out and in positions can be locked)
- 19. Hydraulic lift control valve (Bosch)
- lifting cylinder shock valve 20 MPa
- 20. Lifting cylinder
- 21. Breather filter for lifting cylinders and transmission housing (degree of separation: β 10=75).
- 22. Brake valve for trailer (optional)
- 23. Servo valve block
- safety valve for oil cooler 0,4 MPa
- pressure-limiting valve for low pressure circuit 1,8 MPa
- 24. Differential lock
- 25. Cushioning valve for PTO engagement
- 26. PTO
- 27. 4WD clutch
- 28. A: 2-step quick-shift gear
 - B: 3-step quick-shift gear
- 29. Reverse shuttle lubrication
- 30. Lubrication for bevel pinion shaft
- 31. Lubrication for pump drive mechanism
- 32. Lubrication of gearbox input shaft
- 33. Lubrication of differential gears
- 34. Lubrication of PTO unit shafts
- 35. Lubrication of PTO mechanism
- 36. Return oil connection for auxiliary hydraulics
- 37. Oil cooler
- 38). Oil flow regulator valve (Rexroth), (optional)
- 38a). Intermediate flange for oil flow regulator valve

Malli

Sivu 7C

Hydraulic diagram, HiTech tractors

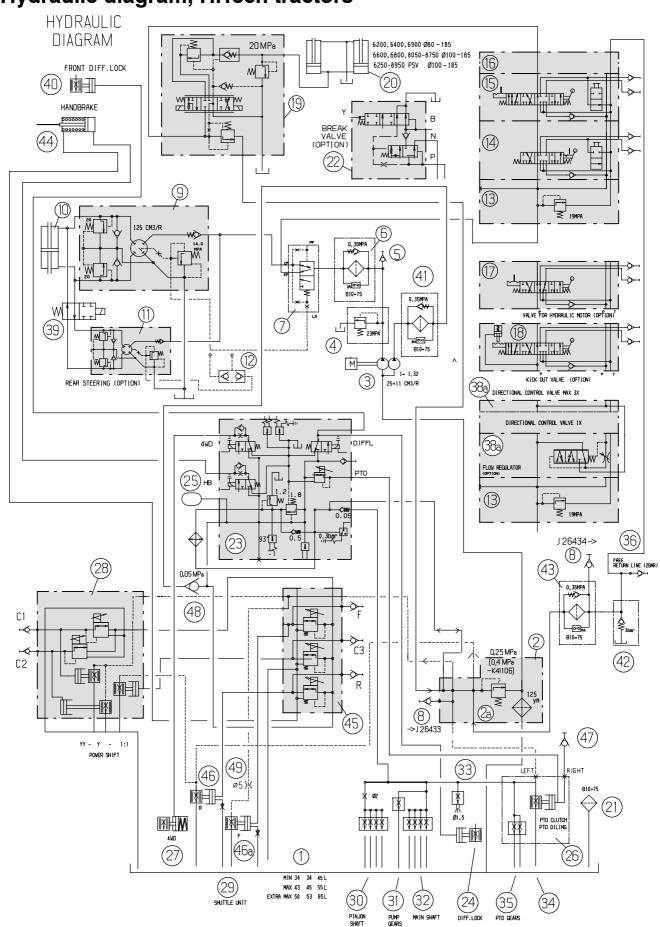

90. Working hydraulics

17: 1998 1.11.2000

Model 6000-8750 Code 910

Page

7D


Hydraulic diagram, HiTech tractors

- Oil reservoir
- Suction strainer (125 µm)
- 2a. Pressure-limiting valve 0,25 MPa (K41107-) 0,4 MPa (-K41106)
- Twin gear pump (25+11 cm 3 /r, i=1,32) 3. 8350Hi: 32+11 cm³/r.
- Safety valve, 23 MPa, beside the pump
- Pressure-test point (Valmet HPR)
- 6 Pressure filter (filtration grade: β 10=75).
- 7. Priority valve
- Pressure test point (lubrication pressure)
- Steering valve (OSPC 125LS, 125 cm³/r).
- 10. Steering ram
- Steering valve, TwinTrac
- 12. Non-return valve, TwinTrac
- 13. End flange (pump side)
 - pressure limiting valve 19 MPa
- 14. Valve block, 2/1 action (out-hold-in)
- Valve block, 2/1 action (float-out-hold-in, float pos. locked)
- 16. End flange (tank side)
- 17. Valve block, option,
 - 2- action, actuator (out-
 - float-in, out-in pos. locked)
- 18. Valve block, option,
 - 2- action, kick-out
 - (float-out-hold-in, float-out-in pos. locked)
- 19. Control valve (BOSCH)
 - lifting ram safety valve 20 MPa
- 20. Lifting rams
- 21. Lifting ram+ transmission breather (filtration grade: β 10=75).
- 22. Brake valve (option)
- 23. Servo valve block
 - pressure-limiting valve 1,8 MPa
 - safety valve 1,2 MPa
- 24. Differential lock
- 25. Pressure accumulator
- 26. PTO
- 27. 4WD multi-disc clutch
- 28. DPS
- 29. Shuttle lubrication
- 30. Bevel pinion shaft lubrication
- 31. Lubr. of pump drive gears
- 32. Input shaft lubrication
- 33. Differential lubrication
- 34. Lubrication of PTO shafts
- 35. Lubrication of PTO
- 36. Return oil connection, auxiliary hydraulics
- 37. Oil cooler
- by-pass valve 0,35 MPa
- switch, blocked filter
- 38. Oil flow control valve (Rexroth), (option)
- 38a. Intermediate flange (see above)
- 39. Control valve (TwnTrac)
- 40. Diff. lock, front axle
- steering, press.-limiting valve 14 MPa

- 41. Low pressure circuit filter
- 42. Valve 0,3 Mpa (3 bar)
- 43. Return oil filter
- 44. Hand brake ram
- 45. Valve block (F, R, C3).
- 46. R-clutch of shuttle
- 46a. F-clutch of shuttle
- 47. Pressure-test point, PTO 48. Non-return valve 0,05 MPa (0,5 bar) (47/00-)
- 49. Lubricating oil flow into the F-clutch has been reduced with a restriction, diam. 5 mm.

90. Hydraulic system

8. 11. 1990 | Model | Code | Page |
15. 5. 1993 | 6000 - 8750 | 910 | 8

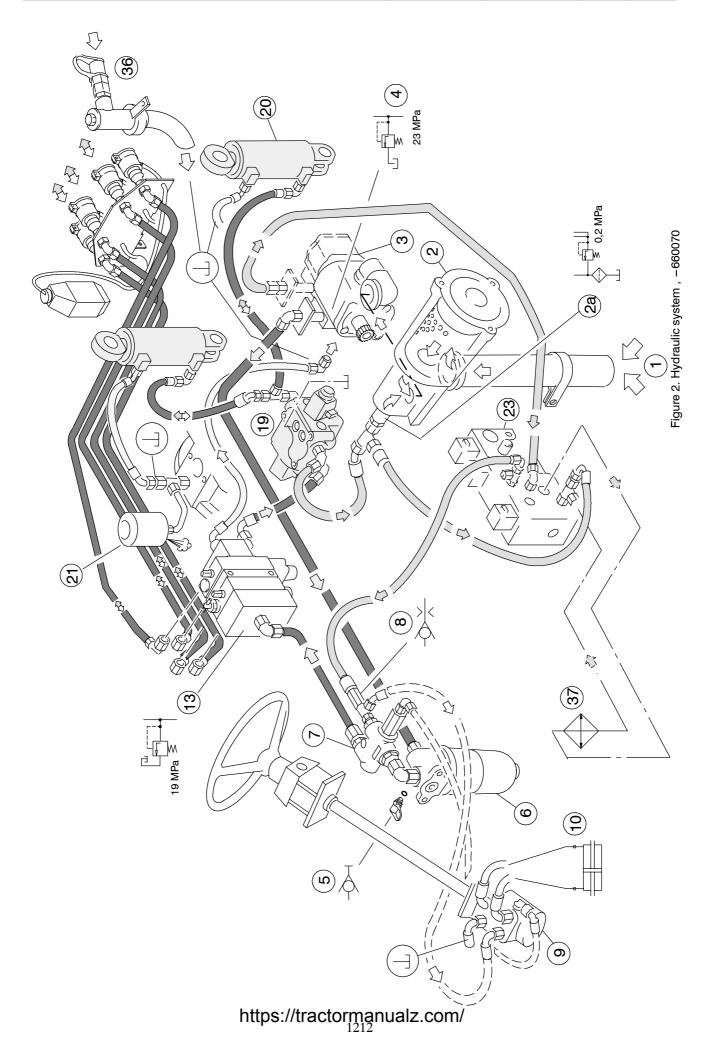

90. Hydraulc system

15. 6. 1992 15. 5. 1993

Model **6000-8750** Code

Page

910

9

Hydraulic system, -660070

(see figure 2 on previous page)

- 1. Oil reservoir
- 2. Suction strainer (125 µm)

2a. Pressure-limiting valve 0,2 MPa (lubricating pressure)

- 3. Twin gear pump
- 4. Safety valve 23 MPa (high pressure pump).
- 5. Pressure test point (Valmet HPR)
- 6. Pressure filter (degree of separation: β 10=75).
- by-pass valve 0,35 MPa.
- 7. Priority valve
- 8. Non-return valve
- 9. Steering valve (125 cm³/r).
- steering system pressure-limiting valve 14 MPa
- 10. Steering cylinder
- 13. End plate (oil inlet)
- pressure-limiting valve 19 MPa (high pressure circuit)
- 19. Control valve for hydraulic lift (Bosch)
- shock valve 20 MPa
- 20. Lifting cylinders
- 21. Breather filter for lifting cylinders and transmission housing (degree of separation: β 10=75).
- 23. Servo valve block (safety valve 0,4 MPa + pressure limiting valve 1,8 MPa)
- 36. Return oil connection for auxiliary hydraulics
- 37. Oil cooler

Low pressure circuit

(Numbers in text below refer to figure 2).

Low pressure pump supplies oil for:

- quick-shift gear engagement
- 4WD engagement
- PTO engagement
- diff. lock engagement
- transmission lubrication
- trailer brake valve (optional)
- oil cooler

The low pressure circuit delivery pipe conducts oil from the low pressure pump (3) (rearmost) to the servo valve block (23) on the gearbox LH side. On the servo valve block there are fitted solenoid valves for 4WD, PTO and diff. lock. The quick—shift gear solenoid valve is fitted on the quick—shift gear housing. Clutch pressure to the quick—shift gear is conducted from the servo valve block via an external pipe.

On the servo valve block there is a pressure—limiting valve (1,8 MPa) which limits clutch pressures. A pressure test point for the low pressure circuit is fitted on the servo valve block.

On the servo valve block there are outlet and inlet connections for the oil cooler. The servo valve block has a safety valve (0,45 MPa) which protects the oil cooler.

Return oil from the oil cooler is conducted to the transmission lubricating system. Also free—circulation oil from the hydraulic lift control valve flows to the lubricating system. A pressure—limiting valve (2a, 0,2 MPa) in the suction strainer housing rear end limits the lubricating pressure to 0,2 MPa.

From the servo valve block has been drawn a hose to the priority valve (7). This pressure from the low pressure circuit to the priority valve reduces the high pressure pump free – circulation pressure

Note! An optional brake valve for trailer brakes also uses oil from the low pressure circuit.

Note! See also transmission, servo and lubricating system in section **42** on pages **420/17–420/22**.

High pressure circuit

(Numbers in text below refer to figure 2).

High pressure pump supplies oil for:

- steering system (priority)
- hydraulic power lift
- auxiliary hydraulics

In the high pressure pump there is fitted a safety valve (23 MPa), which protects the pump in cold weather when the hydraulic oil is thick.

High pressure pump (3) (foremost) delivery pipe conducts oil from the pump to the pressure filter (6), and then to the priority valve (7).

Note! Priority valve and steering system, see section 61.

From the priority valve oil flows to the auxiliary hydraulic valve set end plate (inlet side). The high pressure circuit pressure—limiting valve (19 MPa) is fitted on the underside of the end plate.

Then oil flows through the auxiliary hydraulic valves to the hydraulic lift control valve (19) and then to the lifting cylinders. The control valve free—circulating oil flows to the lubricating system for transmission and oil pressure over 0,2 MPa flows direct to the hydraulic pump suction side.

The hydraulic lift control valve (19) has an in – built shock valve (20 MPa), which protects the system against pressure shocks from the lifting cylinders.

On the pressure filter bracket there is a pressure test point (5) for measuring working hydraulic pressure and also the steering system pressure (see steering system in section **61**).

Pump

The pump drive shaft front end is engaged to the engine flywheel by means of the drive flange. The drive shaft goes through the gearbox input shaft to the rear end where it is fitted to the pump drive mechanism.


The twin gear pump is placed in the gearbox housing and is attached to the rear side of the wall between the gearbox and differential housings.

The twin pump capacity per revolution and the drive mechanism gear ratio:

- -23.5+6.4 cm³/r, i = 1.32 (-658899).
- $-25+8 \text{ cm}^3/\text{r}, i=1,32 (658900-)$

Page

9A

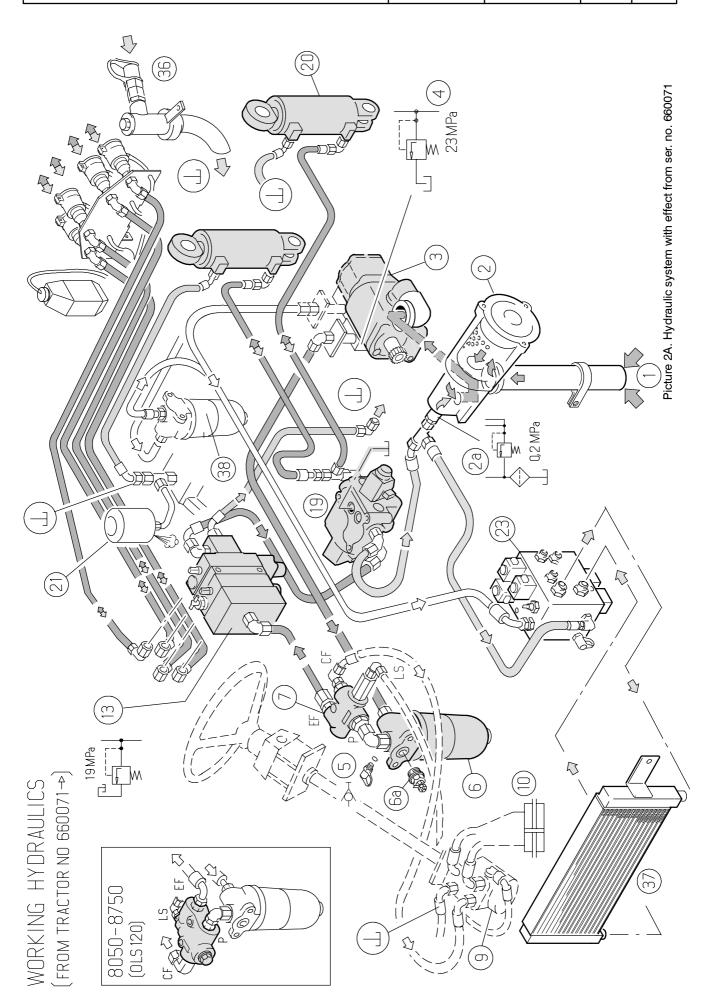

	15. 5. 19 96	Model	Code	Page
90. Hydraulic system	1. 11. 1998	6000-8750	910	9B

Hydraulic system, 660071 –

The new system is shown in picture 2A on previous page.

The servo valve block has been changed with effect from tractor ser. no. **660071**. At the same time the hose between the valve block and the priority valve has been removed (and also the non-return valve, see ref. **8** in picture on page **910/8**).


- 1. Oil tank
- 2. Suction strainer (125 µm)
- 2a. Pressure-limiting valve 0,2 MPa
- 3. Double pump 23,5+6,4 cm³/r (-658899) or 25+8 cm³/r (658900-). i=1,32)
- 4. Pressure-limiting valve 23 MPa.
- 5. Pressure-test point (Valmet HPR)
- 6. Pressure filter (degree of separation: β 10=75).
- by-pass valve 0,35 MPa.
- 6a. Warning light sensor, blocked pressure filter (option)

7. Priority valve

Note! On 8050 – 8750 tractors the priotity valve is the larger, OLS 120. On other models OLS 80.

- 8. -
- 9. Steering valve (125 cm³/r).
- pressure-limiting valve 14 MPa
- 10. Steering cylinder
- 13. End plate (oil inlet side)
- pressure-limiting valve 19 MPa
- 19. Hydraulic lift control valve (Bosch)
- shock valve 20 MPa
- 20. Lifting cylinder
- 21. Lifting cylinder+transmission housing breather filter (degree of separation: β 10=75).
- 23. Servo valve block (safety valve 0,4 MPa + pressure limiting valve 1,8 MPa)
- 36. Return oil connectio for auxiliary hydraulics.
- 37. Oil cooler
- 38. **Note!** From ser. no. F13130 incl. the tractors have a pressure filter also in the low pressure circuit. The filter maintenance intervals are the same as for the pressure filter in working hydraulics


The function of the hydraulic system is the same as earlier, see page 910/9.

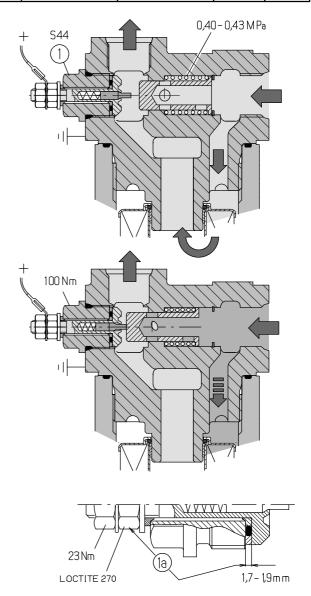

Picture 2B. Warning light sensor, blocked pressure filter (option).

Note! The function of the sensor can be tested by pushing the sensor pin with power of 13 kp, at which time a bulb connected to the sensor should light.

Note! On HiTech models there are three pressure filters (one in working hydraulics and two in low pressure side) and all have the indicator lamp switch. By disconnecting the switch wires can be tested, which one of the filters is blocked.

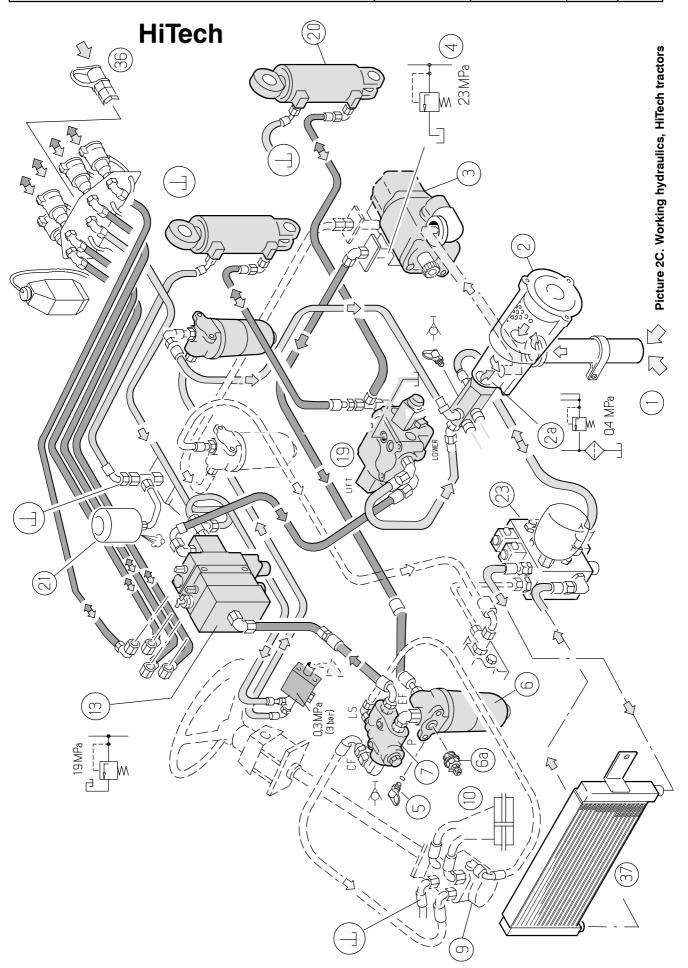

		Model	Code	Page
90. Working hydraulics	1. 11. 1998	6250-8950	910	9D

Working hydraulics on HiTech tractors

See picture 2C.

- 1. Oil tank
- 2. Suction strainer (125 μ m)
- 2a. Pressure-limiting valve 0,2 MPa
- 3. Twin gear pump, $25+11 \text{ cm}^3/\text{r}$
- 4. Safety valve 23 MPa.
- 5. Pressure-test point (Valmet HPR)
- 6. Pressure filter (filtration grade: β 25=75).
- by-pass valve, 0,40 MPa.
- 6a. Indicator lamp switch, blocked filter
- 7. Priority valve
- 8. -
- 9. Steering valve (125 cm³/r).
- safety valve 14 MPa
- 10. Steering ram
- 13. End flange (inlet side)
- pressure-limiting valve 19 MPa
- 19. Control valve (Bosch)
- shock valve 20 MPa
- 20. Lifting rams
- 21. Liftin rams+transmission breather (filtration grade: β 10=75).
- 23. Servo valve block (safety valve 0,4 MPa + pressure limiting valve 1,8 MPa)
- 36. Return oil connection, auxiliary hydraulics
- 37. Oil cooler

The function of the working hydraulics is the same as shown on page **910/9**.

Note! The different servo valve blocks on the LH side of the gearbox, see under code **420** pages **420/17–20C**. Various valve blocks and low pressure hydraulics are described under code **440**. In addition, HiTech tractors' pressure calibrations are shown under code **370** (Autocontrol V).

910

Page 10


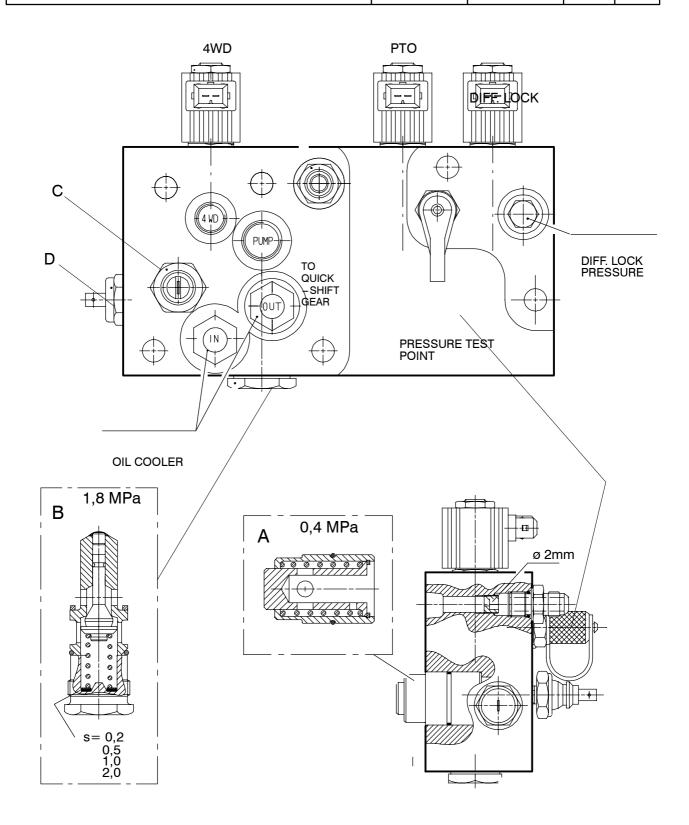



Figure 3. Servo valve block (low pressure circuit) (the valve block is fitted on the LH side of the gearbox)

- A. Oil cooler safety valve
- B. Pressure limiting valve, low pressure circuit (opening pressure can be adjusted with shims) **Note!** Opening pressure stamped on end of valve
- C. Lubricating oil pressure sensor (warning light comes on if pressure drops below 20 kPa.
- D. Hydraulic oil temperature sensor (warning light comes on at temperature of +93±3°C)

Important! With effect from tractor ser. no. 660071 the tractors have different type of valve block, see pages 420/17–20C. See also under code 440.

Hydraulic pump and suction pipes, -658899

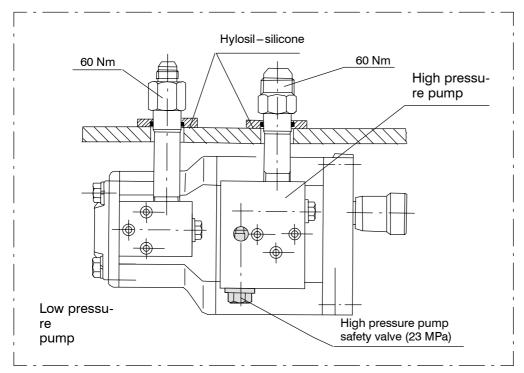

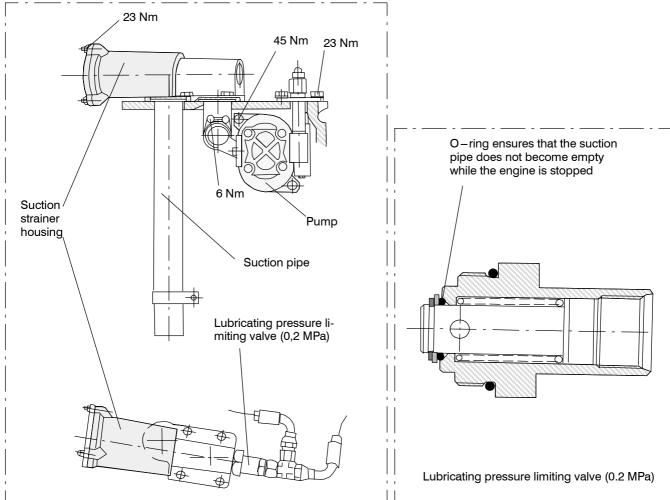


Picture 4. Twin gear pump, suction pipes and suction strainer housing, -658899

Suction strainer housing is fitted upon the gearbox and pump is placed in the gearbox housing Wash the suction strainer every 800 running hours.

	15. 5. 19 93	Model	Code	Page
90. Hydraulic system	1. 1. 1995	6000-8750	910	11A

Hydraulic pump and suction pipes, 658900-

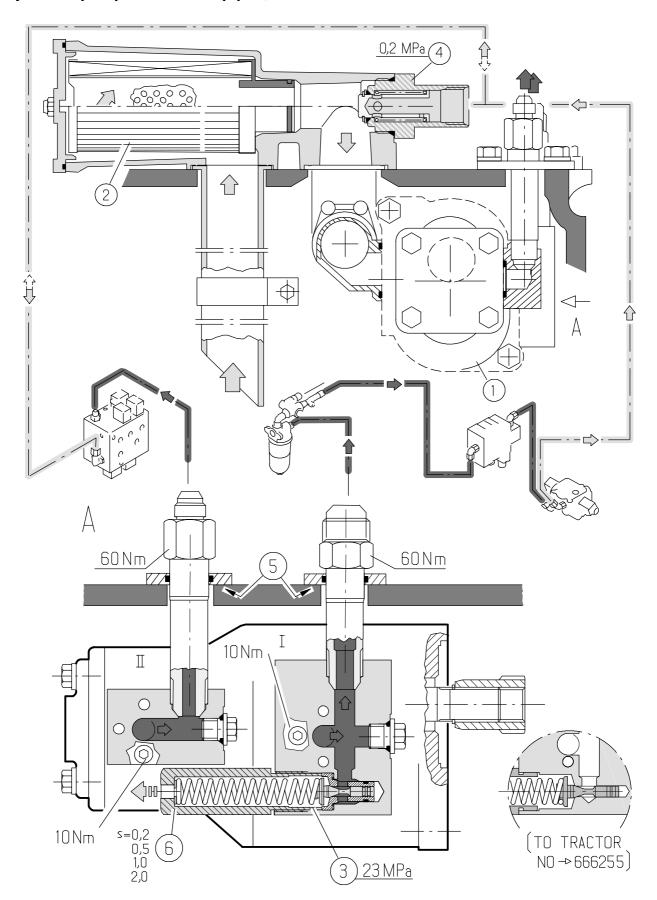

Picture 4A. Hydraulic pump and suction pipes (658900-)

	15. 5. 19 96	Model	Code	Page
90. Hydraulic system	1. 8. 2000	6000-8950	910	11B

Hydraulic pump and suction pipes, 658900-

See picture 4A on previous page.

With effect from tractor ser. no. **658900** the tractors have a new hydraulic pump. The construction of the pump and the suction pipes is similar compared with the earlier system (see picture **4** on page **910/11**). Pump technical values have been changed a little, see Technical Data on page **910/3**.

Note! Because the new pump has different outer dimensions, the gearbox housing has also been changed at the same time. The new pump cannot be fitted into the earlier gearbox housing.

- 1. Twin gear pump
- 2. Suction strainer housing on the gearbox. The suction straines should be cleaned according to the maintenance program (see Operator' Manual).
- 3. Safety valve for high pressure pump. Opening pressure is 23 MPa
- 4. Pressure limiting valve for lubricating oil. Opening pressure is $0.2~\mathrm{MPa}$.
- 5. Sealing plates at pressure pipe lead in points. Apply Hylosil silicone to the lower face of the plates.

The pump is removed and fitted in the same way as earlier according to instruction on page **911/4**.

Important! From ser. no. **H18329** incl. the pump pressure pipe lead—in plates and their seals have been changed in transmissions 650, 300 and 390.

From ser. no. **H19317** incl. (in transmission 650) there is a Bosch—make pump in the hydraulic system.

The new Bosch pump is replaceable with the earlier pump, when the pump connection parts are changed (suction connection is not necessary to change). A new part is fitted between the pump and the suction connection, and the pressure connection has been changed. The safety valve body has been changed, the other parts as earlier. In connection with possible repair work new lead – in plates and seals must be fitted.

Note! On HiTech tractors, the low pressure pump output is greater than in earlier tractors, which have a mechanical shuttle $(25+11 \text{ cm}^3/r)$.

Note! From autumn 2000 there is the same hydraulic pump as in HiTech models $(25+11 \text{ cm}^3/\text{r})$ in transmission 550. Transmission 550 is in 6200-6550Hi tractors from ser. no. K36112 incl. (6200-6400 from K41106-).

Low rev tractor 8350Hi has pump 32+11 cm³/r.

Model 6000-8750 Code

910

Page 12

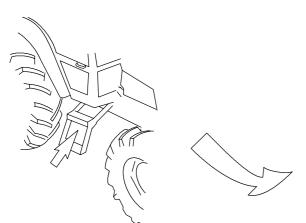



Figure 5. Pressure filter

- 1. By -pass valve (opening pressure 0,35 MPa)
- 2. Support ring (outermost)
- 3. Filter insert

All oil to the working hydraulics flow through the pressure filter. Change pressure filter according to the maintenance program.

- working temperature –40...+100°C
- degree of separation β 10=75
- max. working pressure 25 MPapressure loss 0,13-0,17 MPa

Note! From ser. no. F13130 incl. the tractors have a pressure filter also in the low pressure circuit (see pages 910/9A and B). The working hydraulic pressure filter can be equipped with a sensor for the warning light, which indicates blocking of the filter (see pages 910/9A and 9B). From ser. no. F16407 incl. the pressure filter has been modified. A spring under the filter insert has been removed and the upper end tightening has been improved. This new filter is not exchangeable with the earlier

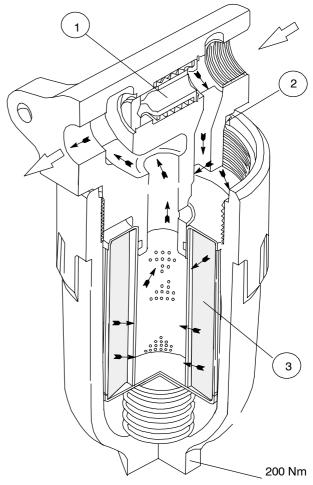


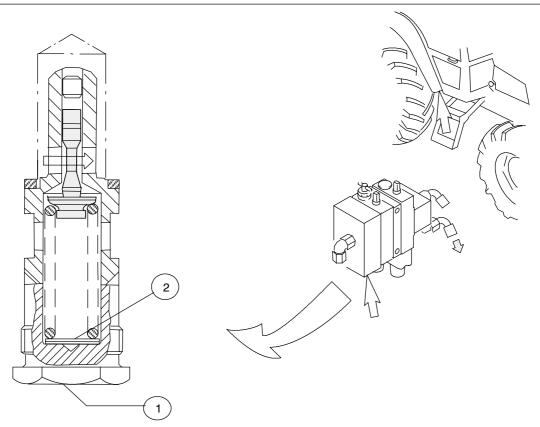


Figure 6. Pressure – limiting valve, working hydraulics, 18 MPa (8000: 19 MPa)

- 1. Opening pressure stamped on end of valve
- 2. Opening pressure can be adjusted with shims (S=0,2, 0,5, 1,0 and 2,0 mm)

Hydraulic power lift

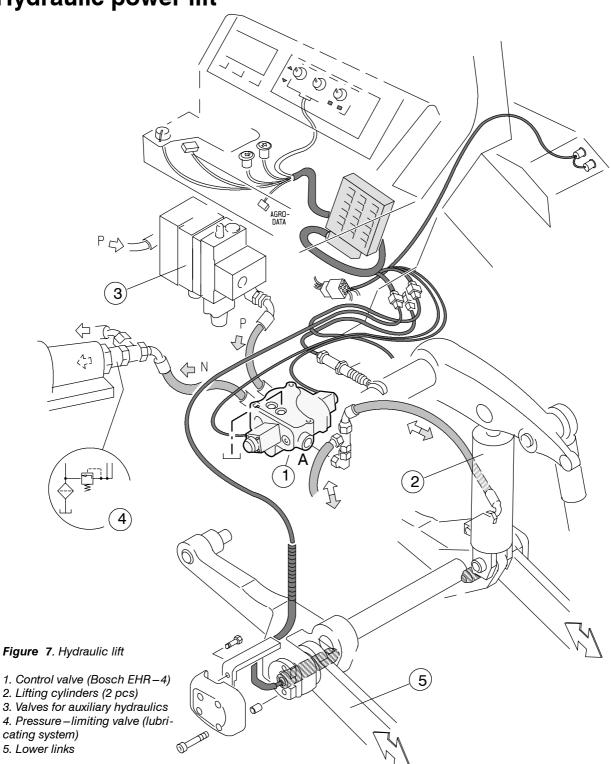

The hydraulic lift control valve (1) is fitted on the RH side of the gearbox. Oil flows to the control valve from the high pressure pump via the priority valve and via the valves for the auxiliary hydraulics (3) (hose P).

Electrically controlled valve (1) directs oil to the lifting cylinders (port A) in the lifting position. In the lowering position, the oil returns to the oil reservoir (gearbox housing). In the neutral position, the valve holds pressure in the lifting cylinders and the valve is in the free—circulation position (hose N).

The free – circulating oil (below 0,2 MPa) flows to the transmission lubricating system.

The control valve (1) has an in-built shock valve (20 MPa) which protect the working hydraulics against pressure shocks from the lifting cylinders.

Working hydraulic pressure is limited by a pressure—limiting valve (19 MPa) which is placed on the underside of the end plate (inlet side) of the auxiliary hydraulic valve block (3).

Electrical system of the hydraulic power lift is described in section **32** (Electro-hydraulic power lift).

	8, 17, 1990	Model	Code	page
90. Hydraulic system	1. 8. 1998	6000-8750	910	14

Hydraulic lift control valve Bosch EHR-4

The valve is the same as on Valmet 05-tractors. The valve is fitted on the RH side of the gearbox. The valve regulates oil flow regardless of loading in the three-point linkage.

There are push buttons on the ends of the both solenoid valves. Thus it is possible to move the control valve main spool manually if, for instance, there is a malfunction of the control valve or if it is suspected that the hydraulic system is not functioning properly.

Note! Solenoid valves must not be connected direct to the tractor battery terminals (e.g. for testing purposes) for long periods (max 10 seconds) since the solenoids cannot withstand strong current and will be damaged

Solenoids can be changed separately. In addition, the shock valve and lowering valve can be cleaned and checked and valve springs can be changed.

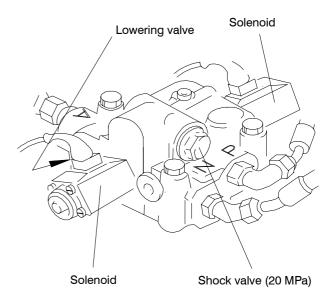


Figure 8. Hydraulic lift control valve

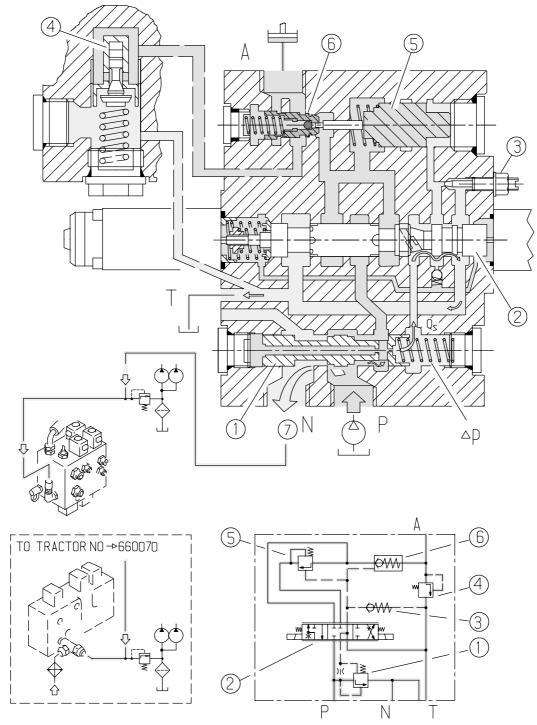


Figure 9. Control valve in neutral position

Function (neutral position)

When the tractor is started oil flows from the pump (port "P") to the left end of the spool (1) through a drilling in the middle. The spool is then pushed to the right against a spring and opens the unloading circuit between ports P and N (pump—tank)

Through the drilling in the spool (1) oil flows through the drilling at the right end of the slide. The constant oil (Qs) flows via the main spool (2) to the tank ("port T").

The main spool (2) is held in the middle position by the action of the centring springs (left end of spool in fig 9) The pressure (+spring) keeps the lowering valve (6) closed.

- 1) 3-way oil flow regulating slide
- 2) Main spool
- 3) Pilot pressure limiting valve for lowering valve
- 4) Shock valve
- 5) Lowering valve pilot piston.
- 6) Lowering valve
- 7) Free circulation oil to the transmission lubricating system



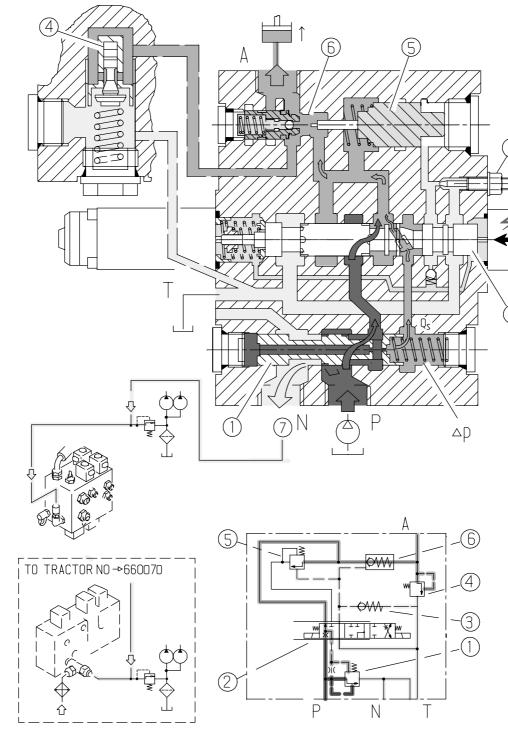


Figure 10. Control valve in the lifting position

Function (lifting position):

In the lifting position the RH solenoid is energized. The magnet presses the main spool (2) to the left against the centring spring. Then it opens the passage from the spool (1) to the lifting cylinders by an amount proportional to the strength of the current supplied to the RH solenoid.

The right end of the slide (1) is under lifting cylinder pressure. Pump pressure becomes equal in value to lifting cylinder pressure + pilot pressure (=spring). The pressure difference through the restriction of the main spool (2) is always equal to pilot pressure so the oil flow depends only on the position of the main spool (2) (and oil viscosity).

The lifting solenoid is controlled so that in the beginning and in the end of the lifting movement, the solenoid current is cut a period of some milliseconds, so that the movement becomes smooth. The actual lifting movement is carried out with full current (otherwise as in the lowering position).

- 1) 3-way oil flow regulating slide.
- 2) Main spool.
- 3) Pilot pressure limiting valve.
- 4) Shock valve.
- 5) Lowering valve pilot piston.
- 6) Lowering valve.
- 7) Free circulation oil to the transmission lubricating system.

6000-8750

Code 910 Page

15**B**

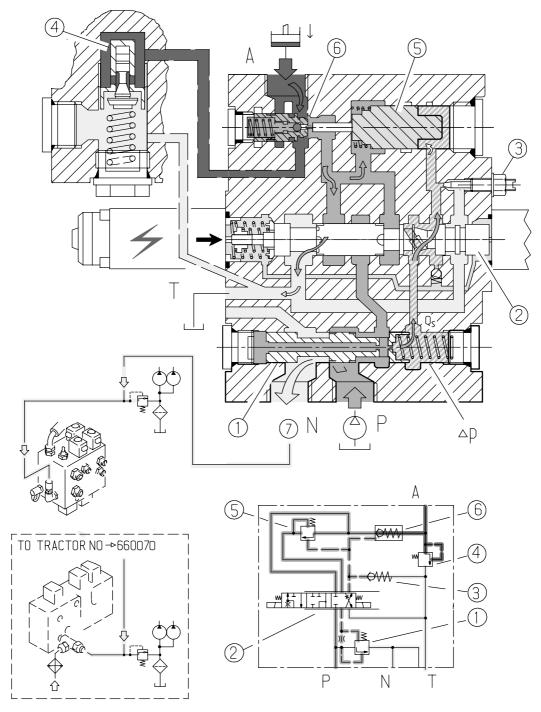


Figure 11. Control valve in the lowering position

Function (lowering position):

In the lowering position the LH side solenoid is energized. The magnet presses the main spool (2) to the right against the inner spring. The spool opens the passage between the lowering valve (6) and tank (T).

At the same time the spool (2) also allows oil (Qs) to flow behind the pilot piston (5). The piston moves to the left and opens the lowering valve pilot ball. The pressure behind the lowering valve decreases (compared with the pressure in the working line) and the lowering valve opens and allows oil to flow from the lifting cylinders to the tank.

The return oil flow pressure also acts on the front of the piston (5). If this pressure reaches a sufficient level (greater than the force of spring+pressure Qs), the holding valve stops the flow.

Therefore the return flow does not depend on the pressure caused by the load on the three point linkage. The rate (lowering speed) of the return flow is proportional to the current supplied to the solenoid for lowering. The pilot pressure limiting valve (3) sets a pressure difference which acts over the main spool (2) when the load is being lowered.

The free circulation circuit from the pump (P) to the tank (N) functions as in the neutral position.

- 1) 3-way oil flow regulating slide
- 2) Main spool
- 3) Pilot pressure limiting valve
- 4) Shock valve
- 5) Lowering valve pilot piston
- 6) Lowering valve

7) Free circulation oil to the transmission lubricating system.

https://tractormanualz.com/

	1-11.1998	Model	Code	Page
90. Hydraulic system	1. 8. 2000	6000-8950	910	16

Lifting cylinders

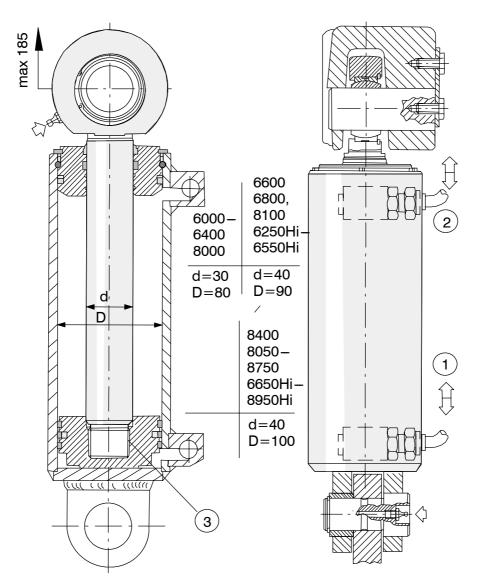


Figure 12. Lifting cylinders

- 1. Working pressure (max 17,5 MPa)
- 2. Ventilation
- 3. Tightening torque 150 Nm. Locking fluid Loctite 270.

Note! The cylinder can be loaded in both direction. Nipples should be greased weekly/every 50 running hours.

Lifting cylinders on HiTech-tractors: 6250-6550: d=40 mm, D=90 mm. 6650-8950: d=40 mm, D=100 mm.

Note! Manufacturing of power lift 40 KN (\emptyset 80 mm cyl.) is finished in autumn 2000. After this the tractors in question have lifting cylinder with diameter of 90 mm.

Three-point linkage and towing hook



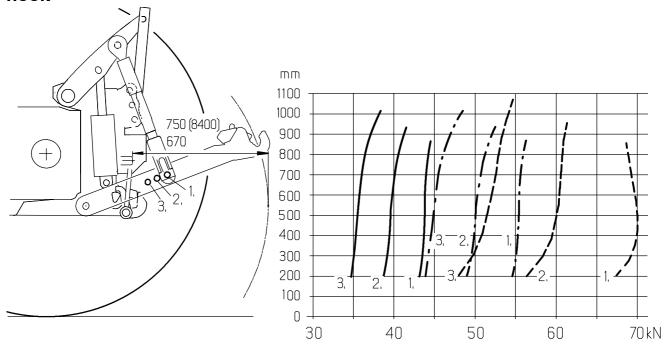


Figure 13. Lifting force and lifting range Note! Hydraulic lifting link gear is available as an optional equipment

4. Universal grease

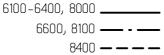

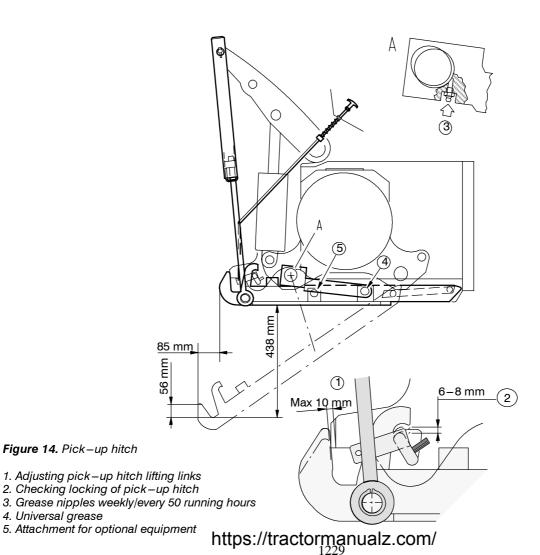

Valves for auxiliary hydraulics

Valmet 6100 – 8100 tractors have as standard two valves for auxiliary hydraulics, which are controlled separately with two levers. The valves are fitted on the RH side of the tractor so that the control levers go straight into the cab.

Both of these valves are adjustable for either single – acting or double – acting function. One of these valves can be locked mechanically in different positions and the other valve has a "floating position".

Standard quick—action couplings or Push—Pull type couplings are available. A leakage oil reservoir is standard.

As an extra equipment can be fitted;

- a) two extra valves+brake valve for trailer or
- b) one extra valve equipped with an oil flow control valve+brake valve for trailer.

For later tractors two extra valves+brake valve for trailer+oil flow control valve can be fitted.

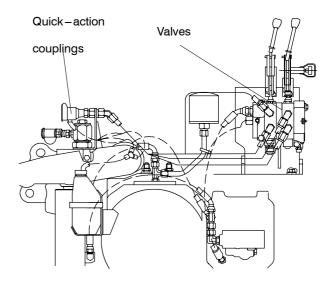


Figure 15. Valves for auxiliary hydraulics

When repairing or changing the valves, they are accessible through the hole in the cab RH side mudguard.

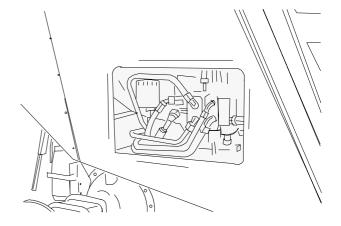


Figure 16. Access hole

- 1. Adjustment between single/double-action
- 2. Adjustment between single/double-action
- 3. Position locking

Intermediate plate A and the pump side end plate B have been attached to the valve bracket (3 pcs bolts). Tightening torque for the bolts is **45 Nm.**

Bolts C (4 pcs) through the valve block set must be tightened evenly and crosswise to **23 Nm**. Otherwise the valve spools can get trapped. When fitting extra valves, bolts C should be changed for longer ones.

Note! When fitting valve blocks, ensure that the o-rings between the blocks are correctly positioned in their grooves.

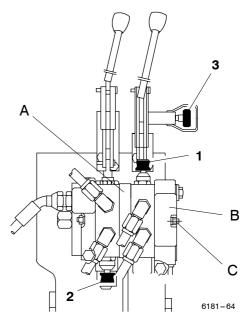


Figure 17. Control levers for standard valves

90. Hydraulic system 8. 11. 1990 6000-8750 910 19			Model	Code	Page
	90. Hydraulic system	8. 11. 1990	6000-8750	910	19

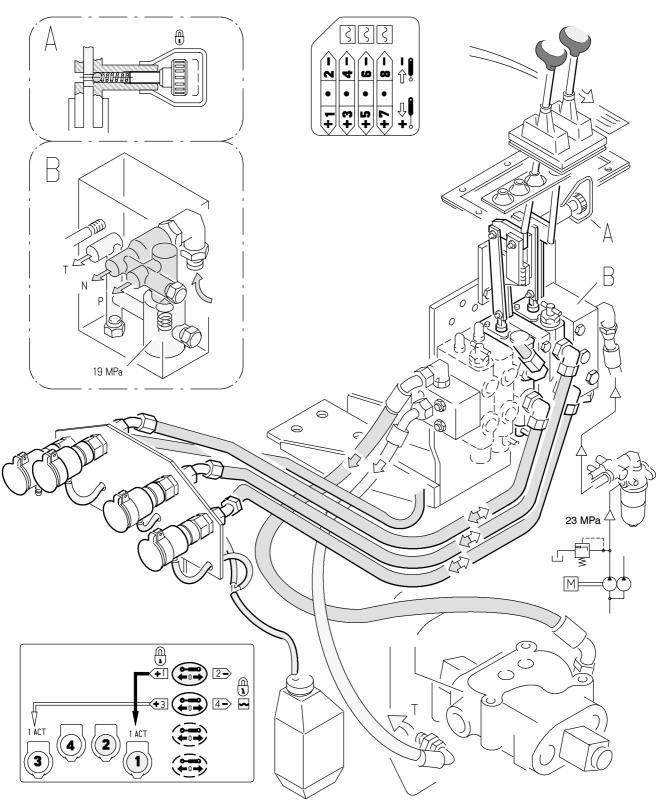


Figure 18. Valves for auxiliary hydraulics A Position locking for the first valve B. On the end plate underside there is fitted a pressure—limiting valve for working hydraulics (19 MPa)

Model **6000 – 8750**

Code

910

Page **20**

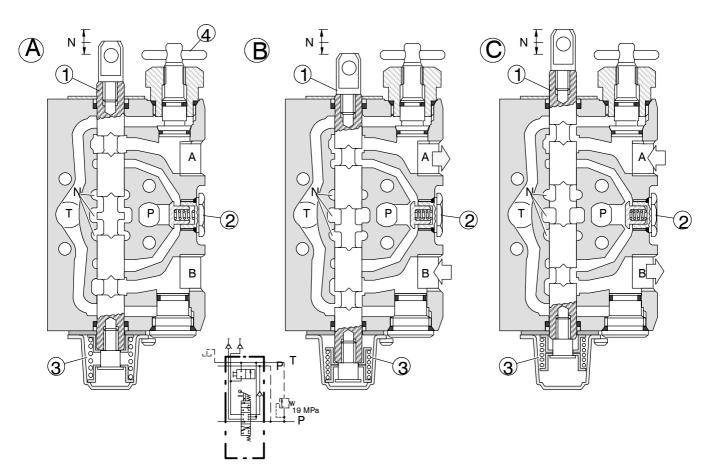


Figure 19. Foremost standard valve

- the foremost standard valve (order no 32536400): 1/2 - action, 3 positions (out - hold - in), spring - return. Out - position can be locked mechanically.

Function:

A: Neutral position. Oil flows from the priority valve through the flow-through channels ${\bf N}$ to the control valve of the hydraulic lift.

The channels to the auxiliary hydraulics (**A**, **B**) and the non-return valve **2** are closed.

B: Pressure position: When the slide 1 has been moved downwards, the middle part of the slide closes the channels \mathbf{N} , and its upper part opens the line to the port \mathbf{A} . Pressure in the channel \mathbf{N} and in channel \mathbf{P} increases (these channels unite in the front end flange).

The non – return valve 2 opens and oil flows to the auxiliary hydraulics via port A.

At the same time the slide opens the return line from port ${\bf B}$ to tank channel ${\bf T}$.

C: Pressure position: Slide **1** has been moved upwards. Flow—through channels **N** are closed and oil flows via port **B** to the auxiliary hydraulics. Return oil flows from port **A** to tank channel **T.**

The change-over valve **4** is used to give a double-acting valve a single-action function. When single-acting, the equipment hose must be connected to the lower connector **B**.

- 1) Slide
- 2) Non-return valve
- 3) Centring springs
- 4) Change-over valve

6000-8750

910

0

Page **21**

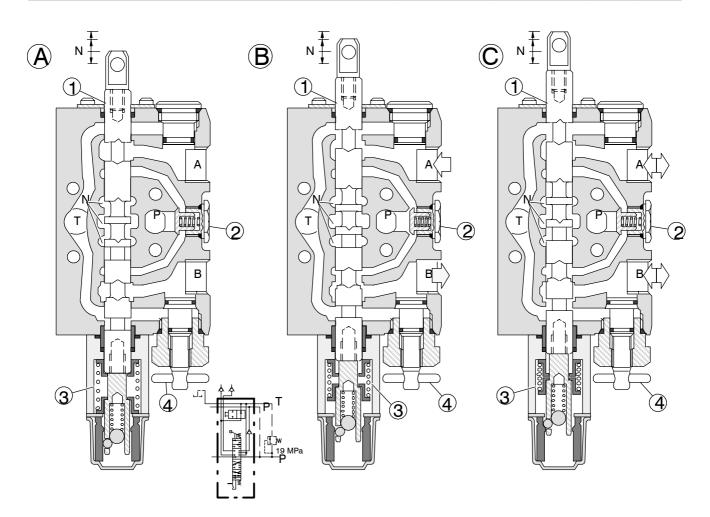


Figure 20. Rearmost standard valve

The rearmost standard valve (order no. 32536500): 1/2
 action, 4 positions (out-hold-in-float), spring-return.
 Floating position can be locked.

Function:

A: Neutral position. Oil flows from the priority valve (and valve no 1) through the flow—through channels $\bf N$ to the control valve of the hydraulic lift. The channels to the auxiliary hydraulics ($\bf A$, $\bf B$) and the non—return valve $\bf 2$ are closed.

B: Pressure position: When the slide 1 has been moved upwards, the middle part of the slide closes the channels N, and its lower part opens the line to the port N. Pressure in the channel N and in channel N increases (these channels unite in the front end flange).

The non – return valve 2 opens and oil flows to the auxiliary hydraulics via port **B**. At the same time the slide opens the return line from port **A** to tank channel **T**.

When the slide has been moved downwards, the port $\, {\bf A} \,$ is pressurised and return oil flows via port $\, {\bf B} \,$.


 $\begin{tabular}{ll} {\bf C:} Floating position: The slide 1 has been moved further upwards. The detent balls lock the sleeve. The sleeve opens the middle channels $\bf N$ and oil flows to the hydraulic lift. \end{tabular}$

The lines from the pressure channel **P** to ports **A** and **B** are closed. Both ports **A**, **B** are connected to tank channel (and to each other).

- The change-over valve 4 is used to give a double-acting valve a single-action function. When single-acting, the equipment hose must be connected to the upper connector A.
- 1) Slide
- 2) Non-return valve
- 3) Centring springs
- 4) Change-over valve

Page **22**

Oil flow control valve

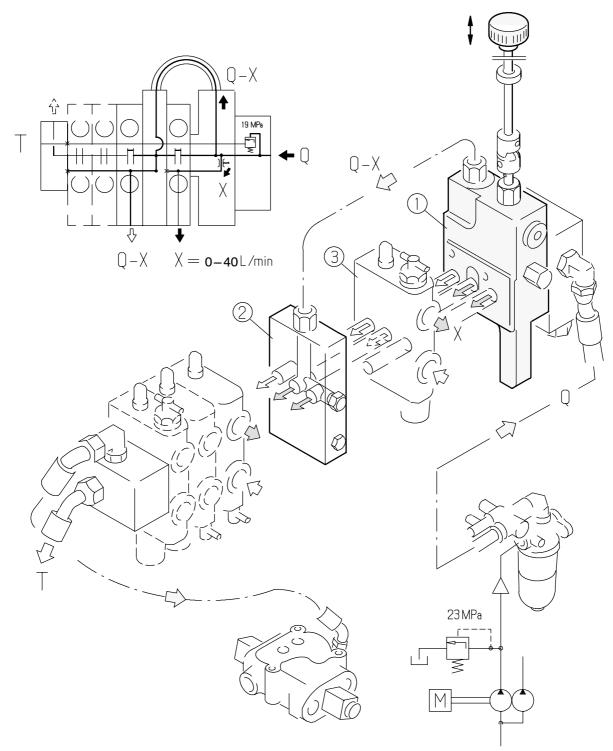

The oil flow control valve makes it possible to use simultaneously two hydraulic cylinders, or simultaneous use of power lift and one auxiliary cylinder.

With the oil flow control valve the oil flow can be adjusted so that it suits the implement, when maximal flow is not needed for e.g. speed control of hydraulic motors (together with a special valve of the motor).

The oil flow control valve is situated between the pump end plate and the valve block. The oil flow is adjusted with a knob on the side panel in the cab.

Note! Two seal kits are available for repairing the oil flow control valve no. 32599900: kit no. 32449400 (complete) and kit no. 33643500 (internal seals).

Functions:

The valve directs the required priority flow (that can be steplessly adjusted from 0 to 40 litres per minute) to the spool valve that is mounted between the oil flow control valve and the intermediate plate.

The rest of the flow is directed through an external pipe to the next, downstream spool valves.


X = pressure channel for the regulated oil flow

Q - X = the surplus flow to other spool valves

- 1) Oil flow control valve
- 2) Intermediate plate
- 3) The spool valve supplied by the regulated flow (the valve type is a matter of choice)

https://tractormanualz.com/

		Model	Code	Page
90. Hydraulic system	8. 11. 1990	6000-8750	910	23

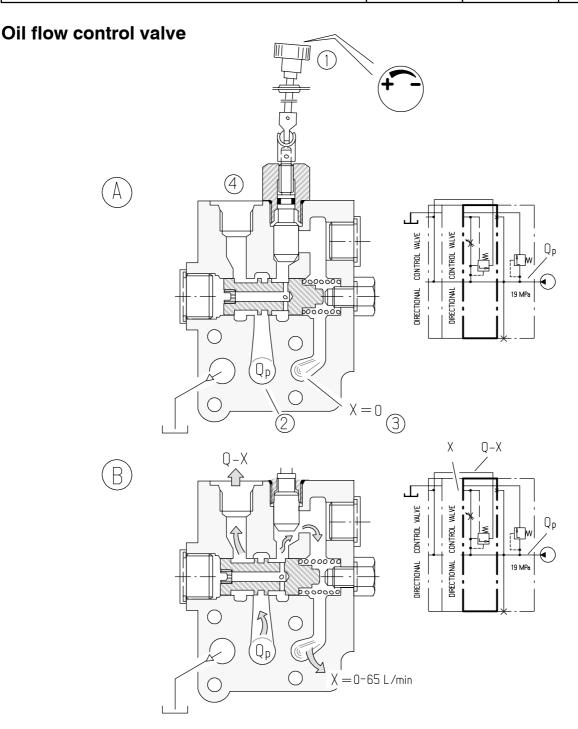

A) The oil flow is not adjusted.

The first spool valve can not be used when the throttle is closed. The pump flow goes through the channel Qp to the spool valves after the intermediate plate, and further through the power lift control valve into the tank.

Direction of the pressure to one spool valve or to the power lift.

B) The oil flow is adjusted (and the manual control valve is in the active position).

The pump flow is divided in proportion to the throttle between 0 and 65 litres per minute among the channels Q-X and X and can simultaneously be used for controlling the spool valve X (between the pump end plate and the intermediate plate) and one of the next spool valves, or the spool valve X and the power lift.

When the throttle spindle 1 is opened, the flow X grows and the flow Q-X decreases.

If the pressure in channel X varies, the same pressure change is transmitted through the throttle and the balance piston bore also to the opposite head of the piston, and this means in practice that the spindle keeps its position and the flow does not change.


The throttle in the piston bore prevents vibration.

– When the oil flow is adjusted, the pressure of the flow X is the pump pressure minus the spring load. The pressure of the flow Q – P varies from free flow pressure to maximum pressure, depending on the use of the other manual control valves / of the power lift.

- 1) Adjusting knob
- 2) Pressure channel that goes through the valve blocks
- 3) Adjusted flow to the X spool valve
- 4) Surplus flow to other spool valves

	8.11.1990	Model	Code	Page
90. Hydraulic system	1. 10. 1999	6000-8750	910	24

Return oil connection for auxiliary hydraulics

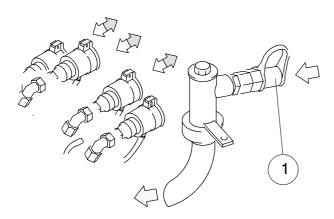

Valmet 6100 – 8100 tractors have as standard a return oil connection (1), which can be used when low return pressure is needed.

Counter pressures:


1/2 inch connection, flow 50 l/min, 10° C max. 4,0 bar 1/2 insc connection, flow 50 l/min, 50° C ... max. 1,0 bar 1 inch connection, flow 50 l/min, 10° C ... max. 0,6 bar 1 inch connection, flow 50 l/min, 50° C ... max. 0,5 bar

Push-pull quick couplings

There is a breather hole under the rubber seal ring in the Push-Pull quick couplings, which hole should point downwards. From January 2000 oil gathering protectors will be fitted in the quick couplings and the oil gathering hose nipple must also point downwards. The parts must not moved in relation to each others during fitting.

If the breather hole does not point downwards, little oil can leak inside the coupling or water can condens, which make it difficult to connect the couplings.

Kick-out valve

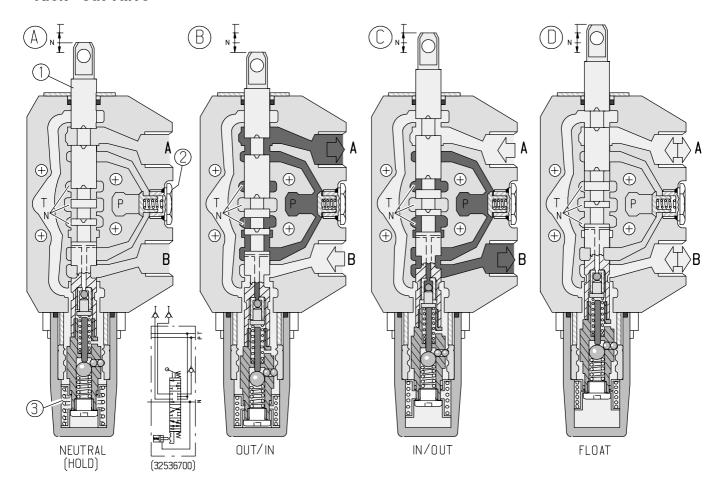

Extra equipment (32536700): 2-action, 4 positions (float-out-hold-in) kick out. Float, out and in-positions can be locked.

Function:

A: Neutral position: Oil flows from the priority valve (via valve blocks) through passages **N** and further to the power lift control valve. Passages to auxiliary hydraulics (**A**, **B**) and the non-return valve **2** are closed.

B: Pressure position: When the spool 1 is moved downwards, the spool middle part closes the passages **N** and the spool upper part opens an oil way to port **A**. Pressure in passage **N** increases as in passage **P** (passages joint together in the front end plate).

Non-return valve 2 opens and oil flows via port A to the auxiliary hydraulics.

At the same time the spool has opened a return passage from port **B** to tank passage **T**. Locking balls lock the spool.

C: When the spool is moved upwards, port B is pressurised and oil returns via port $\,\textbf{A}.\,$

Pressure return (kick-out) to the neutral position happens when oil pressure pushes ball+needle at the spool lower end and releases the locking balls (at a pressure of 14–16 MPa).


The spring space is open and allows oil to be returned to passage **T**. Rest of pressure in the oil space (if greater than 0,2 MPa) can cause returning of the spool to the neutral position.

D: Floating position: Spool **1** has been moved further upwards. The locking balls lock the spool in position. The middle passages **N** open and oil flows through them to the power lift control valve. Connection between pressure passage **P** to ports **A** and **B** is closed.

Both ports A and B are connected with tank passage T.

- When the valve is used as a single—acting valve, an implement hose should be connected to the upper coupling $\bf A$. The return oil flow can be created by moving the spool to the floating position (upwards).
- 1) Spool
- 2) Non-return valve
- 3) Centring springs

Front power lift

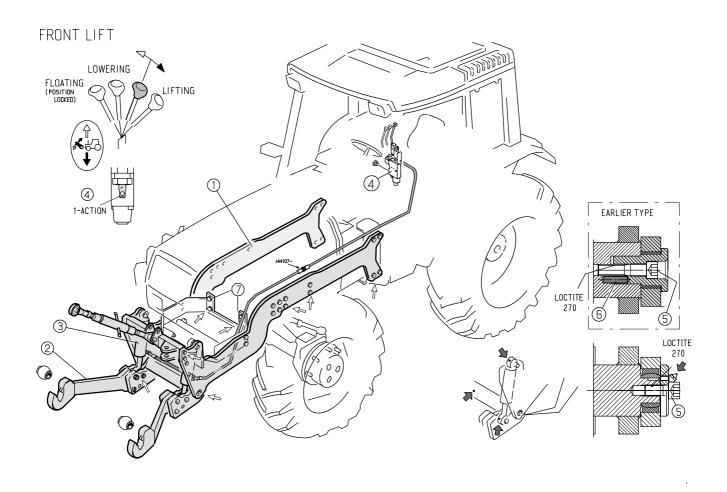

Picture 21. Front power lift, 30 kN (6200 – 8150), 35 kN (8350 – 8950).

- 1. Frame
- 2. Lower links can be turned and removed
- 3. Lifting cylinder, 2 pcs, Ø 80 mm (6200–8150), Ø 90 mm (8350–8950).
- 4. Control valve
- 5. M14 (8.8), 140 Nm M16 (8.8), 220 Nm M16 (12.9), 360 Nm
- 6. Tension pin prevents the shaft from rotating in relation to the lower links
- 7. Tightening torque of upper bolts is 400 Nm..

Note! The control valve (out-hold-in-float, floating position can be locked) is fitted to the third valve in the valve set. Ordering number of the control valve is 32532700 (with lever), or 32536500 (only valve block).

It is possible to order the front lift together with the front PTO. The standard front piece of the tractor is not needed, when the front lift is mounted. All moveable parts of the front lift have bearings.

Maintenance


- a) Grease the lifting cylinder joint pins and the lift main shaft nipples at intervals of 250 running hours, depending on use.
- **b)** Retighten all front lift bolts after the first 100 running hours.

M14x25 m 8.8	140 Nm
M16x30 m 8.8	220 Nm
M16x50 m 12.9	360 Nm
M18x60 m 8.8	320 Nm
M20x60 m 8.8	430 Nm
M20x50 m 12.9	750 Nm
M20x60 m 10.9	600 Nm
M20x60 m 12.9	750 Nm
M20x70 m 12.9	750 Nm


https://tractormanualz.com/

90. Hydraulic system	1.8:1998	Model	Code	Page
	1. 9. 2002	6000-8950	910	27

Lifting rams of front lift

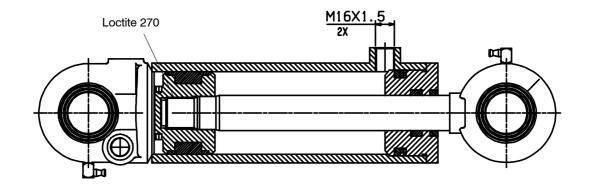

Picture 22. Lifting ram on 6300-8150 (ø 80 mm).

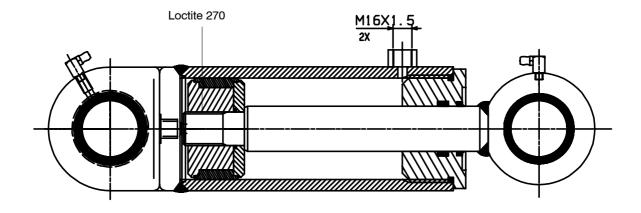

Picture 23. Lifting ram on 8350-8950 (ø 90 mm).



	1.7.1995	Model	Code	Page
90. Hydraulic system	1. 11. 1998	6000-8750	911	1

Repair instructions

1. Low pressure circuit (Op. no. 911)


A. Measuring pressure

- 1. Start the engine and run it at 1500 revs/min.
- 2. Warm up the transmission/hydraulic oil to 40-65°C.


Note! The oil warms up faster if the steering wheel is held against the stop.

3. Disengage as many servo functions as possible (clutches unpressurised in order to eliminate a pressure drop caused by leakages in clutch piston seals).

Note! When the 4WD is engaged, the clutch is unpressurised. On 2-step speedshift should the TORTOISE range be engaged (Trac-Trol) or HARE range engaged (Overdrive). On HiTech models the shuttle must be in the neutral position. Two DPS clutches are always pressurised, when the engine is running.

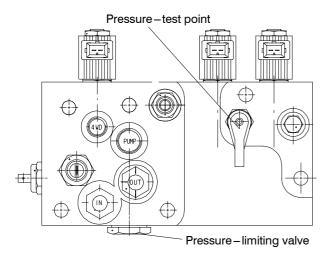


4a. Earlier valve block (-660070): Connect a pressure gauge to the test point on the servo valve block (on the LH side of the gearbox). Read the pressure. It should be between 2,1-2,3 MPa. Pressure measuring equipment, see page 910/5.

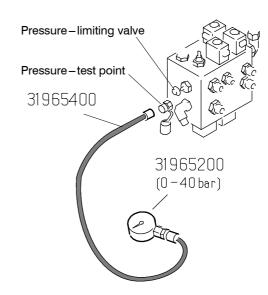

- 4b. Later valve block (660071–): Connect a pressure gauge to the test point on the servo valve block and read the pressure value. It should be **1,8–1,9 MPa**.
- 4c. On tractors which have been equipped with HiTech Shuttle, the low pressure circuit test point is placed on the outer face of the valve block, see page 440/24. The pressure value is 1,8–1,9 MPa.

Note! These pressures are maintained by the low pressure limiting valve and seals at various solenoid valves (and clutch piston seals in pressurised clutches).

Pressure-limiting valves (1,8 MPa)

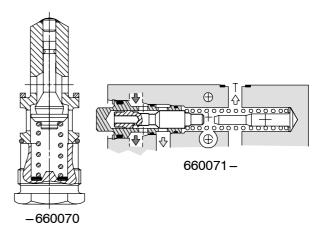

- 5. If the pressure gauge reading deviates much from the correct value, the fault can lie in the pressure limiting valve or the low pressure pump is worn out. Also excessive leakage can cause pressure loss.
- 6. Then activate each service in turn. The pressure should momentarily drop but quickly re-stabilise. A constant pressure drop of about 0,1-0,2 MPa indicates excessive leakage and therefore pressure loss in that service.

Note! Pressure measuring equipment, see page 910/5. It is available a pressure—test kit which order no is 31965000. It includes all equipment needed for pressure measurement on Valmet tractors. The parts can also be ordered separately.


Model 6000 -- 8950 Code 911

Page

2

B. Diff. lock clutch pressure

Note! Engine revs 1500 r/min. Oil temperature 40-65 °C.

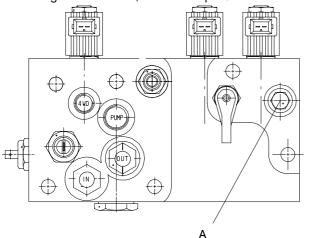


1. The diff. lock clutch pressure can be measured separately by connecting a pressure gauge to the hole A on the servo valve block. The hole has thread M14X1,5 and connector 30068700 fits into the hole.

Important! The picture above shows the earlier valve block (-660070). The plug is situated on the rear face of the later valve block, see pages 420/17A and 17B point 16. Valve block on HiTech Shuttle tractors, see page 420/20C point A.

C. Lubricating pressure and PTO clutch pressure

Note! Engine revs 1500 r/min. Oil temperature 40-65 °C.

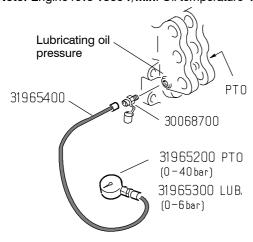


- 1a. The lubricating oil pressure can be measured by connecting a pressure gauge to the hole on the LH side of the PTO housing. The lubricating oil pressure minimum value is 0,03 MPa. On HiTech tractors the min. value is 0,12 MPa measured at test point (HPR) in the rear part of the suction strainer housing on the gearbox, see page 440/25.
- 1b. The PTO clutch pressure is measured by connecting a pressure gauge to the hole on the RH side of the PTO housing. The pressure should be 0,05-0,1 MPa lower than pressure measured at the pressure – test point on the servo valve block. Note! In HiTech 2.0 tractors there is a Valmet HPR pressure test point in the hole.
- 2. Both holes have thread M14X1,5 and connector 30068700 can be screwed into them.


D. DPS clutch pressures

NOTE! Concerning HiTech tractors, see code 370 (Autocontrol V). Position of test - points on these tractors, see picture on page 440/25.


Note! The pressures are measured at engine revs of 1500 **rpm** and with an oil temperature of **40–65** °C.

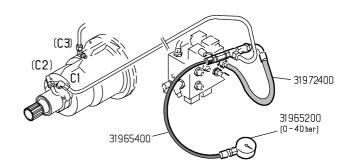

C1=DPS foremost clutch

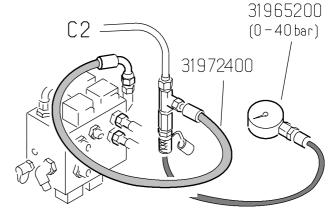

C2= DPS middle clutch

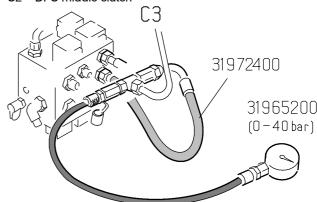

C3=Clutch in planetary gear (rearmost)

All three pressures should be between 1.8-1.9 MPa. Pressure measuring equipment in pictures above are included in pressure-test kit 31965000.

NOTE! On tractors which have a lock valve (see page 420/20B), the piping deviates from the pictures above. The lock valve is fitted in transmissions 460 and 650, but the lock valve is not fitted on HiTech tractors.

90. Hydraulic system

1, 8, 1998 1, 11, 1998

Model **6000 – 8750**

Code **911**

Page 3

IMPORTANT! On the HiTech tractors, there are fitted Valmet HPR test points to measure the DPS clutch pressures (see picture on page **440/25**). Under code **370** (AC V) there are shown calibrations of the DPS clutches.

NOTE! Under code **370** there are also shown calibrations and resettings of HiTech Shuttle clutches F- and R. Concerning pressure test points, see page **440/25**.

Mechanical shuttle

POWE	RS	HIF	-T	
STEP	C1	C2	C3	
I	Х	Х	ı	i = 1, 0
H	Х	1	Х	i = 0.811
HII	-	X	X	i = 0.651
ı	Ā	_	X	i = 1,233
П	х	Х	_	i = 1, 0
111	-	Х	Х	i = 0.803

- **x** = ENGAGED
- -= DISENGAGED
- = PRESSURISED OIL


HiTech shuttle

POWERSHIFT						
S	TEP	C1	С2	СЗ		
	I	+	+	_	i = 1, 0	
] [+	_	+	i = 0,811	
I	ΙI	_	+	+	i=0,651	
					· ·	

- + = SOLENOID ENGAGED
- = SOLENOID DISENGAGED
- = PRESSURISED OIL

2. High pressure circuit

A. Measuring free circulation pressure

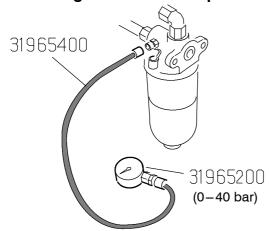

The free circulation pressure can be measured by connecting a pressure gauge to the pressure—test point at the pressure filter bracket. When measuring this pressure, the steering wheel must not be turned. The auxiliary hydraulic valve levers should be in the neutral positions. In addition, the power lift position control potentiometer must not be in the lowest position.


Pressure values at engine revs of 1500 r/min:

- $\sim 1,5 \text{ MPa } (+50^{\circ}...+65^{\circ}\text{C})$
- $\sim 1.7 \text{ MPa } (+30^{\circ}...+32^{\circ}\text{C})$
- $\sim 2.0 \text{ MPa} (+20^{\circ}...+25^{\circ}\text{C})$


Note! Possible extra hydraulic equipment raise the free circulation pressure value. For instance, on tractor that has three valve blocks and a front loader, the pressure value is about 2,1 **MPa** $(+50...+65^{\circ}$ C).

Note! Pressure measuring equipment above are included in the test kit 31965000.

B. Working pressure

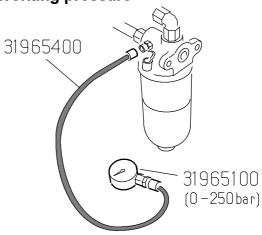

- 1. Connect a pressure gauge (pressure measuring equipment, se page **910/5**) to the pressure—test point at the pressure filter
- 2. Adjust engine revs to **1500 r/min**. Warm the hydraulic oil to 50-65 °C.
- 3. Move an auxiliary hydraulic valve lever to the pressure position and read off the gauge reading which should be 19,0–19,8 MPa.

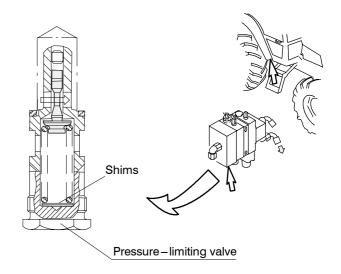

Note! The pressure is maintained by the pressure limiting valve on the underside of the front plate of the auxiliary hydraulic valve set.

4. If the pressure reading deviates much from the correct value, change pressure limiting valve spring or adjust it with shims. Shims thickness of 0,2 mm raises the pressure value about 0,4 MPa.

Note! Possible deviation can also be caused by a dirty or faulty safety valve (23 MPa) in the hydraulic pump or the pump can be rundown.

91. Hydraulic system


⊅1.√1998 1.9.2002

Model 6000-8750 Code 911 Page


4

D. Removing hydraulic pump


1. Drain the oil from the transmission.

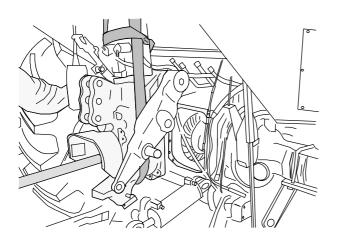

2. Remove the PTO housing (see Op. 462 1A).

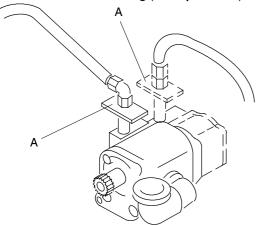


3. Remove the RH side brake cylinder. Disconnect the connectors from the pressure pipes. Slacken the sealing pieces (A) and unscrew the pressure pipes from the pump.

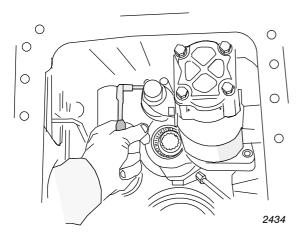

4. Slacken the pump suction pipe clip.

Note! The differential can be in place because it does not prevent removal of the pump.

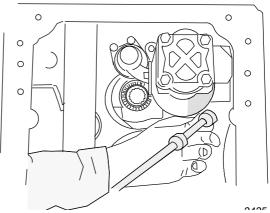

5. Unscrew the pump fixing bolts and remove the pump from the gearbox housing.

E. Fitting hydraulic pump

- 1. Fit the pipe clip (screw upwards) onto the suction pipe. Fit the pump coupling sleeve into the pump drive mechanism (if removed).
- 2. Fit a new pump. Turn the pump clockwise and tighten the fixing bolts to 40-50 Nm.

Check, that the pump goes fully home by hand and the main axle of the pump is not pressed axially. There should not be gap between flange of the pump and frame of the gearbox.

- 3. Push the pressure pipes through the sealing pieces and screw the pipes into the pump thread to a torque of 60 Nm.
- 4. Apply sealing compound Hylosil RTV Grade 102 Black between the gearbox and sealing pieces. Apply Loctite 542 to the sealing piece screws and tighten them.
- 5. Connect the pressure hoses to the pressure pipes. Fit the brake cylinder.
- 6. Tighten the suction pipe clip to a torque of 2 Nm.
- 7. Fit the PTO unit (see Op. 462 1G).
- 8. Fill the transmission with oil and test drive the tractor. Make sure that the new pump is functioning by measuring hydraulic pressures.

Note! For the pump is available a seal kit no. 32664100. The high pressure pump safety valve (and separate parts) are available as a spare part. During warranty period the pump is changed as a complete unit.


Important! From ser. no. H19317 incl. (in transmission 650) there is a Bosch-make pump in the hydraulic system. From ser. no. H18329 incl. the pump pressure pipe lead - in plates and their seals have been changed in transmissions 650, 300 and 390.

The new Bosch pump is replaceable with the earlier pump, when the pump connection parts are changed (suction connection is not necessary to change). A new part is fitted between the pump and the suction connection, and the pressure connection has been changed. The safety valve body has been changed, the other parts as earlier. In connection with possible repair work new lead - in plates and seals must be fitted.

Note! On HiTech tractors, the low pressure pump output is greater than in earlier tractors, which have a mechanical shuttle (25+11 cm³/r).

		Model	Code	Page
91. Hydraulic system	1. 1. 1995	6000-8750	911	5

2. Pump and pipes, fault tracing

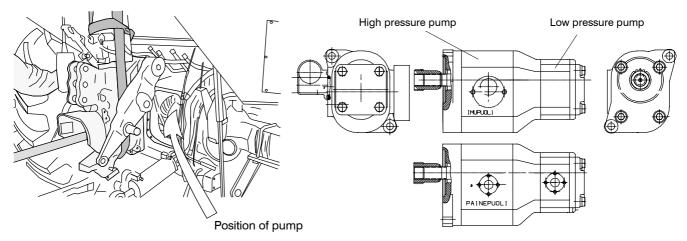

Technical data of pump, see page 910/3 Removing and fitting pump, see page 911/3 Pump and pipes, see pages 910/11-11A

A. General

The condition of the pump can be checked e.g. by measuring pump output at different counter pressures. A worn pump has a lowered output and it cannot maintain enough high pressure. In this case the hydraulic circuit does not function as it should.

The lowered output causes the hydraulic cylinder movements to be slower than normal.

The lowered pressure means that the hydraulic cylinder cannot raise heavy loads. E.g. the lifting cylinder cannot raise the load even thought its weight is below the max permissible load.

A possible reason can also be a faulty pressure—limiting valve or shock valve. In addition, oil leaks in various components and seals can also cause corresponding malfunctions.

The pump can be tested e.g. by measuring the pump output with a flow meter. Use of a separate loading valve makes it possible to measure the output at different pressures. The pump output must not vary much at different counter pressures. The working hydraulic pump output can be measured from the quick—action couplings. The low pressure pump output can be measured by connecting the flow meter on the pressure hose between the pump and the servo valve block.

It is difficult to determine a certain reject limit to the pump. In a light agricultural use even a worn pump can function satistactorily. Just when a tractor has extra hydraulic equipment (front loader, timber loader etc.), a worn pump cannot maintain the hydraulic circuit and it should be changed.

B. Fault tracing by inspecting oil:

- 1. Air in oil If there is too much air in oil, the result is that oil foams in the tank. In this case, check all seals and connectors in the suction side. Also the suction strainer cover seal can be faulty. Check the condition of the pump drive shaft oil seal. Change oil if necessary.
- 2. Water in oil Water in oil causes the oil to be milky. The system must be emptied and filled with new oil. In addition, prevent water from entering into the hydraulic system. Water causes corrosion to the various parts in the hydraulic circuit.
- 3. Impurities in oil Impurities can be verified by taking a sample of oil and by pouring it through a filter paper. The suction strainer and the pressure filter should be serviced according to the maintenance schedule. Impurities can enter into the system from the auxiliary hydraulic cylinders. The hydraulic oil and the pressure filter must be changed according to the instructions.
- **4. Impaired properties of oil** Mineral oil loses some lubricating properties in prolonged use. This can appear in change of colour, change of smell or change of viscosity. For these reasons, it is necessary to change the oil according to the maintenance program. Also oil level should be checked regularly.

91. Hydraulic system

1. 1. 1995 15. 5. 1995

Model **6000 -- 8750**

Code **911**

Page **6**

C. Fault tracing without removing pump

If the hydraulic system functions when the oil is cold, but in the operating temperature different functions are slow or powerless, this indicates that the oil pump is worn—out.

The high pressure pump can be tested by connecting a pressure gauge to the circuit and by pulling one auxiliary hydraulic valve lever to the pressure position. Now if the pressure gauge reading follows clearly the engine revs alteration, this indicates that the pump is worn.

The faulty pump can be noisy which indicates a damage in the pump. Note that a blocked suction strainer causes a shrieking sound to the pump.

A worn pump "whips" oil and due to the fluid friction the whole hydraulic system overheats. This can be verified by feeling the temperatures of the pipes and the oil reservoir. In this case, for instance, the pump pressure pipe can be essentially warmer that other pipes and the oil reservoir.

D. Internal inspection of pump

Note! Never dismantle the pump if the warranty is valid, but in this case change a new spare pump.

- 1. Detach the damaged pump from the tractor. Make sure that the pump and a fitting table are clean before dismantling the pump.
- 3. Mark all removed parts in relation to each other for easier assembling.
- 4. Fit always new seals. A seal kit no. 32664100 is available for the pump.

Note! When the hydraulic system is in a perfect condition, the pump housing surfaces are smooth and shiny as well as the bearing surfaces. Text below presents how faults in the hydraulic system affect the oil pump.

- **1.** Impurities in oil Impurities cause clear dragging grooves on the pump housing and bearing surfaces in the direction of rotation. The most evident damage caused by impurities are deep grooves on the gearwheel side surfaces. Impurities wear the pump fast resulting lowered output value.
- 2. Cavitation damages Mineral oils contain 10 percent of air. In the pump suction side if suction is too high, air bubbles are formed, which fasten onto the pump housing. When pressure in the pressure side rises rapidly, the bubbles "explode" causing deep pits on the pump housing. In certain cases the cavitation generates sound, which can be heard from the pump.

Possible reasons:

- 1. Suction pipe or suction strainer blocked.
- 2. Wrong oil viscosity.
- 3. Air enters into system.

- **3. Air in oil** If air enters into the system via the suction side or via the pump drive shaft seal, this causes the same damages as cavitation. If there is too much air in oil, the oil in the reservoir foams.
- **4. Pump drive shaft loading** If the pump drive shaft has a strong radial loading caused by the pump drive mechanism, this causes damages to the shaft seal and air and oil leaks by the seal and after a prolonged use, the drive shaft bearings are worn unevenly. For the same reason, the pump gears cut the pump housing on one side resulting internal leakages in the pump.

Observe the following when assembling the pump

Assemble the low pressure pump and tighten the end cover bolts to a correct torque. Assemble the high pressure pump and tighten the end cover bolts only to finger tight. Blow compressed air (\sim 5 bar) through the pressure side hole (suction side hole open) at which time the shafts and gear wheels are centered and at the same time tighten the end cover bolts to a correct torque of **61–68 Nm**.

Note! Without this centering the pump will probably damage after a very short operating time.

E. Maintenance

- 1. Check the hydraulic oil weekly/at every 50 running hours. Oil quality: 10W/30, 5W/30 or 5W/20, API GL-4 (STOU) according to the outdoor temperature.
- 2. The pressure filter is changed the first time at 100 hours warranty service. The second change is done at 250 running hours and the third change at 500 running hours. After that the filter is changed at every 500 running hours.
- 3. Hydraulic oil should be changed at intervals of 1000 running hours or yearly which one is reached first. The suction strained should be cleaned always when the oil is changed. The suction strainer should be changed more often when necessary.

Note! If You use continually the auxiliary hydraulics, the hydraulic oil and the pressure filter should be changed more often.

4. The high pressure and the low pressure can be measured according to instructions. Also different clutch pressures can be checked. The pressure limiting valve and the shock valve can be opened and cleaned. These valves can also be adjusted by changing shims.

Important! If the hydraulic power lift or the Delta Powershift have malfunctions, the pressure filter insert should be changed immediately.




		Model	Code	Page
90. Hydraulic system	8. 11. 1990	6000-8750	912	1

Hydraulic power lift


1. Control valve

A. Checking shock valve opening pressure

1. Lower the lower links to the lowest position.

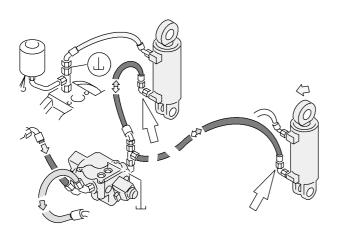

- 2. Connect a pressure gauge and a hand pump to one pressure hose of the lifting cylinder (see arrows) (measuring equipment, see page 910/5).
- 3. Raise the lower links to the upper position, stop the engine and switch off current.
- 4. Pump with the hand pump pressure into the control valve and read the opening pressure, which should be 20-21 MPa.

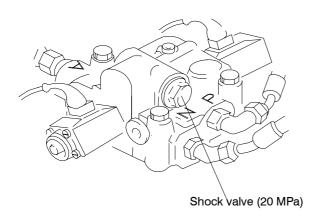


Note! The shock valve is accessible without removing the control valve.

Note! If you want to lower the lower links without starting the engine (e.g. during repair work), unscrew the shock valve after which the lower links can be pressed to the lower position.

B. Removing control valve

Note! The control valve is fitted on the RH side of the gearbox housing.

1. Remove the RH side rear wheel. Disconnect the solenoid valve leads from the control valve.

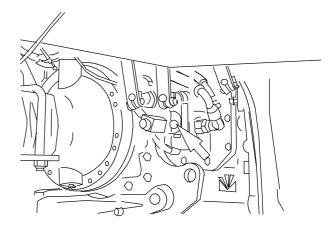

2. Disconnect all oil hoses from the control valve. Unscrew the control valve fixing bolts (3 pcs) and remove the valve.


Note! There is an oil hole between the control valve and the selector cover. This hole has been sealed with an o-ring, which must be fitted back when the control valve is fitted.

C. Fitting control valve

- 1. Make sure that the o-ring is in place between the control valve and the selector cover.
- 2. Fit the control valve and tighten the fixing bolts evenly to 23-27 Nm.
- 3. Connect the solenoid valve leads and all oil hoses.
- 4. Test-drive the tractor and check the function of the hydraulic power lift.

90. Hydraulic system 15 5: 1996 | Model | Code | Page | 6000-8950 | 912 | 2

D. Reconditioning control valve

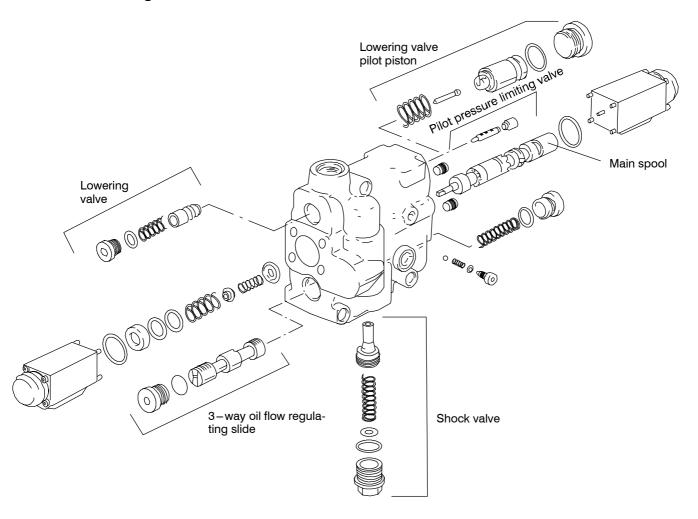

Lowering valve

If the hydraulic power lift makes many lifting corrections (reactions) per minute when a weight is attached to the three – point linkage, a possible fault can be faulty lowering valve (or its pilot piston).

In this case, the lowering valve can be disassembled and cleaned as well as the pilot piston. Leaking lowering valve must be changed. In addition, the valve spring must be checked and changed. **Note!** If the lift does not hold the load, possible fault can also be leaky lifting cylinder piston seal.

Shock valve (20 MPa)

If the lift does not hold the load, the possible fault can also be leaking shock valve. When the control valve is in neutral position, the load rests on the shock valve.

In this case, open and clean the shock valve and, if necessary, change the valve spring or adjust it with shims.

3-way oil flow regulating valve

This valve can be opened and cleaned. The valve slide must move easily in its bore.

Pilot pressure limiting valve

Note! The new pilot valve has neither a ball nor a spring but only a tapered valve pin and a locking nut.

The valve must not be screwed fully home, it must be opened 1/2-1 turn.

Adjusting pilot pressure:

Connect a pressure gauge to the pressure filter test point. Activate the power lift and adjust the engine revs to 1500 rpm. Turn the position potentiometer to lowering. Now the free circulation pressure must rise 5 bar, e.g.: not activated 20 bar and activated 25 bar.

The tighter the valve is, the greater is the lowering speed (if the valve is tightened too great, the free flow pressure rises too much in the lowering movement). If the valve is too loose, the lower links do not lower at all (lowering valve does not open).

Solenoids

Solenoid valves are available as a spare part. When fitting a new solenoid, fit the same shims onto the end of the main spool spring. **Do not tighten the solenoid screws too hard.**

Tightening torques

Shock valve plug4	16 Nm
Lowering valve plug 3	30 Nm
Pilot piston plug 1	103 Nn


Note! When reconditioning the control valve, always fit new sealing rings. When opening the valve plugs, use good tight Allen keys because the plugs can be very tight. When slackening the plugs, knock at the Allen keys with a hammer.

		Model	Code	Page
90. Hydraulic system	8. 11. 1990	6000-8750	912	3


2. Lifting cylinders

A. Changing lifting cylinder seals

- 1. Disconnect the lift cylinder pressure lines and remove the cylinder.
- 2. Take out the circlip and backing ring of the cover.

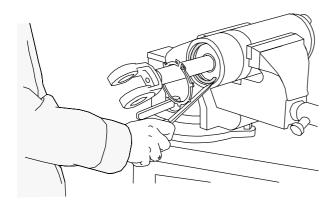


3. Knock the cover into the cylinder until the o-ring and circlip of the cover inside the cylinder can be removed.

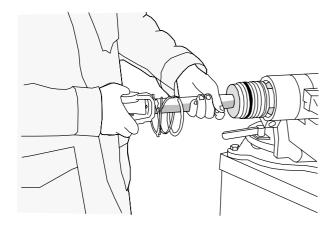

- 4. Pull the cover and piston out of the cylinder with a sharp movement.
- 5. Remove the sealing ring of the piston (cut off with a knife), the o-ring and guide ring. Remove the piston from the piston rod.

Note! Removal of the piston is facilitated by heating it up so that the locking fluid on the threads melts.

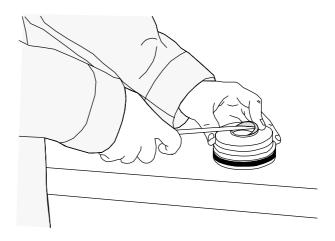


6. Remove the cover from the piston rod and the seals from the cover.



- 7. Squeeze the new seal as shown in the figure and press it into its groove (sealing lip downwards). Fit the piston rod oil stripper.
- 8. Change the o-ring and backing ring of the cover.
- 9. Place the circlip and backing ring on the piston rod. Grease the inside seals of the cover and push the cover on the piston rod
- 10. Fit the piston on the piston rod. Use locking fluid Loctite 270 on the threads. The piston nut tightening torque is **150 Nm**

90. Hydraulic system

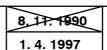


Model **6000 – 8750**

Code


912

4

Page

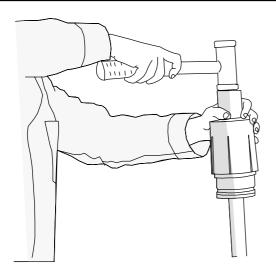


11.Fit the o-ring on the middle groove of the piston and the outside sealing ring. Use ETV 893580 (Ø 80), ETV 894 280 (Ø 90), ETV 894 240 (Ø 100) and ETV 893600 (Ø 80), ETV 894 300 (Ø 90), ETV 894 260 (Ø 100). Apply grease on the sliding surfaces of the tool.

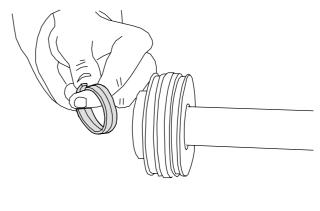

13. Roll the two guide rings together as shown in the figure and fit them on the piston.




12. Squeeze the seal into the groove with ETV 893590 (\emptyset 80), ETV 894 290 (\emptyset 90), ETV 894 250 (\emptyset 100).

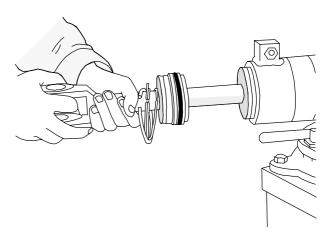

14. Lubricate the sealing surfaces of the piston and cover and push the unit into the cylinder with a sharp movement. Fit the circlip inside the cylinder. Pull out the cover against the circlip and fit the o-ring, backing ring and outer circlip.

15. Fit the lift cylinder. Connect the oil hoses and tighten to $\,$ 45 Nm.

Three-point linkage and towing hook

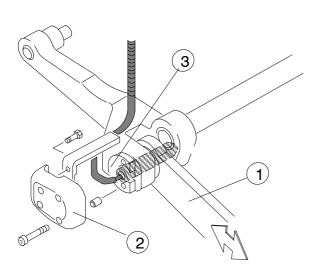

Lower links

If the lower link (1) must be changed, first remove the draft sensor cover (2) and the draft sensor locking piece (3). Now the lower link can be removed after the draft sensor is pulled out.

Pick-up hitch

When removing the pick—up hitch the lower links must be detached first. After that drive out the locking pins of the pick—up hitch shaft and remove the pick—up hitch shaft.

Note! Remove the check link bracket from one rear axle housing. Remove, if necessary one rear wheel, if the pick – up hitch shaft cannot be pulled out from its place.

The pick—up hitch loosens when the locking pins at the front end of the hitch is removed. Now the hitch releases from its cast iron guide ways under the gearbox housing.

Lifting arm shaft


If the lifting arm shaft has to be changed, the PTO housing must be detached from the tractor. Then remove the PTO unit front cover and the PTO clutch shaft.

Remove the position sensor cam from the lifting arm shaft through the opening in the upper part of the PTO housing.

Remove the lifting arms and pull out the lifting arm shaft from its location on the PTO housing.

Note! Do not damage the position sensor when removing the PTO housing. Remove the position sensor always before detaching the PTO housing from the tractor (see section 46).

Adjusting pick-up hitch lifting links

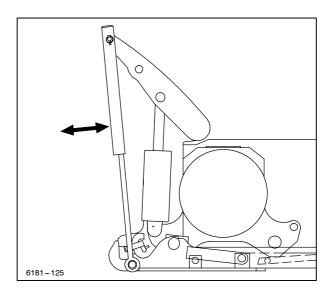


The lifting links should always have a certain amount of clearance when the hydraulic lift is in its upper position. However, they must be adjusted in such a way that the pick—up hitch is securely locked by the pawl, even when the towing hook is loaded.

Before adjusting, raise the hydraulic lift to its upper position using the position control knob (towing hook unloaded). Check the adjustment by moving the lifting links manually. Adjustment is correct when the link moves loosely and when the lift is lowered the towing hook is locked positively by the pawl. Make sure that the spring returns the pawl fully home.

Adjust the length of the links if necessary by removing the cotter at the upper end of the links and turning until the correct length is obtained. Check that both lifting links are the same length after adjustment. The lifting links may be tightened when lifting with push buttons.

Correctly adjusted lifting links ensure that the hydraulic lift can be raised to its uppermost position. The pick—up hitch is locked when the lift is lowered to the point where the hitch rests on the pawl, thereby preventing unnecessary loading on the hydraulic pump and overheating of the oil.

Checking locking of pick-up hitch

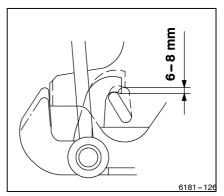

Make sure that the spring returns the pawl fully home. When the pawl is turned upwards the pick – up hitch should move up by **6–8 mm**.

OIL FLOW CONTROL VALVE	26.10.1992	Model	Code	Page
FITTING INSTRUCTION	29.04.1993	6000-8400	99	1 (4)

Oil flow control valve 32530310.

- Depending on the tractor serial number, it must be observed modifications on the valve bracket and on the pump side end plate.

- ORDER NUMBER:

mounting kit 32530310 (incl. valve and mounting parts)

Fixing screws:

32691400 4pcs (2 valves) 32607400 4pcs (3 valves) **32691500** 4pcs (4 valves)

Extra parts needed up to ser no -> 657670 :

Pump side end plate ... 32556410 . 1 Plug **GR0286** .. 3 Nut (M10) JB1110 . . . 1


WORKING INSTRUCTION:

- Remove the RH side rear wheel. Remove the access hole cover on the RH side rear mudguard.
- Remove the valve block studs and the end plates. Disconnect the pressure hose from the pump side end. Unscrew the intermediate plate bolts and remove the intermediate plate.
- Detach the angle union (GS 9449) and the upper plug (GR 0286) and change over their places.
- Drill a ø12 hole mm through the lever console according to the figure. Drill or cut a hole ø 4 mm through the lever rubber bellows (estimate the place of the hole).
- Assemble the valve block and the oil flow control valve using new studs. Fit the pressure pipes. Fit the valve block attaching screws (HA 8340 2 st) according to the figure. Fit the control rod of the oil flow control valve. Fit the other detached parts.

EXTRA WORK NEEDED UP TO SERIAL NUMBER -> **657670**:

- Fit new plugs onto the new pump side end plate and the angle union and the pressure control valve. Fit the pressure pipe and hose.
- Make from steel sheet a plate (see picture) and weld it onto the valve block bracket. Drill a M10 hole according to the measurements in the picture. Do correction painting.

OIL FLOW CONTROL VALVE	26.10.1992	Model	Code	Page
FITTING INSTRUCTION	29.04.1993	6000-8400	99	2(4)

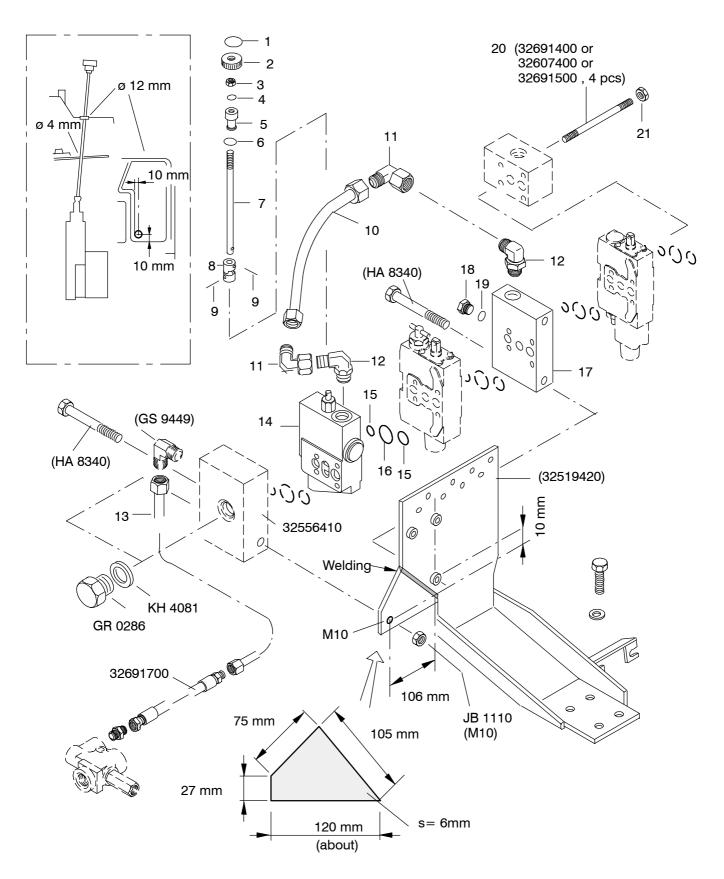


OIL FLOW CONTROL VALVE	26.70.1992	Model	Code	Page
FITTING INSTRUCTION	29.04.1993	6000-8400	99	3(4)

Pos		Tilaus nro Beställ.nr Order no	Osan nimi	Benämning	Description	Huomautuksia Anmärkningar Notes
	1	32530310	Virransäätöventtiili, asennussarja	Flödesregleringsv. monteringssats	Flow control valve fitting set	
1	1	32621700	.Tarra	Dekal	Sticker	
2	1	32619800	.Nuppi	Knopp	Knob	
3	1	JB1106	.Mutteri	Mutter	Nut	
4	1	KH4002	.O-rengas	O-ring	O-ring	
5	1	32619700	.Holkki	Bussning	Gushing	
6	1	30145500	.Läpivientirengas	Genomföringsring	Inlet ring	
7	1	32619900	.Tanko	Stång	Rod	
8	1	32250700	.Nivel	Led	Joint	
9	2	JE8027	.Sokka	Pinne	Pin	
10	1	32691200	.Putki	Rör	Pipe	
11	2	GS9319	.Liitin	Anslutning	Connection	
13	1	32691100	.Putki	Rör	Pipe	
14	1	32599900	.Virransäätöventtiili	Flödesreglerventil	Flow control valve	
15	2	KH7070	O-rengas	O-ring	O-ring	
16	1	KH7006	O-rengas	O-ring	O-ring	
12	2	GS9400	Liitin	Anslutning	Connection	
	2	KH9032	O-rengas	O-ring	O-ring	
17	1	32691300	.Välilaatta	Melladlock	Block	
18	1	GR0284	.Tulppa	Plugg	Plug	
19	1	KH4946	.O-rengas	O-ring	O-ring	
20	4	32691400	Ruuvi	Skruv	Screw	2 valve
	4	32607400	Ruuvi	Skruv	Screw	3 valve
	4	32691500	Ruuvi	Skruv	Screw	4 valve
21	4	JB8904	Mutteri	Mutter	Nut	
	1	32449400	Tiivistesarja	Packningssats	Gasket set	
			venttiilille 32599900	ventil 32599900	valve 32599900	

OIL FLOW CONTROL VALVE	26.10.1992	Model	Code	Page
FITTING INSTRUCTION	29.04.1993	6000-8400	99	4 (4)

Oil flow control valve

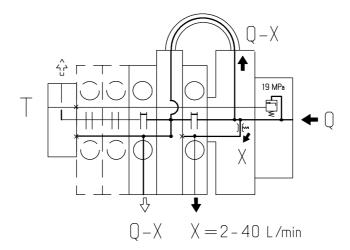

 The oil flow control valve makes it possible to use simultaneously two hydraulic cylinders, or simultaneous use of power lift and one auxiliary cylinder.

With the oil flow control valve the oil flow can be adjusted so that it suits the implement, when maximal flow is not needed for e.g. speed control of hydraulic motors (together with a special valve of the motor).

The oil flow control valve is situated between the pump end plate and the valve block. The oil flow is adjusted with a knob on the side panel in the cab.

The regulated oil flow is independent of the pressure

Functions:

- The valve directs the required priority flow (that can be steplessly adjusted from 2 to 40 litres per minute) to the spool valve that is mounted between the oil flow control valve and the intermediate plate.
- The rest of the flow is directed through an external pipe to the next, downstream spool valves.

X = pressure channel for the regulated oil flow Q - X = the surplus flow to other spool valves

EXTRA FILTER, FITTING INSTRUCTION

03.04.1996 23.10.1996

Model Code Page 6000-8400 99 1(2)

Extra filter, 6000–8400 **31983810** (Extra filter 6000–6400, 8000 31983800) (Extra filter 6600, 8100–8400 31983900)

This filter increases filtering capacity of the hydraulic system. Additionally it ensures a correct function of the solenoid valves in the low pressure circuit

FITTING:

Assemble the filter and fasten parts 45, 46, 47,
 43 onto the filter (tightening torques, see picture).


Fasten with aid of sleeves **39** and bolts **42** the filter onto the bracket **38**.

 Models 6000-6400, 8000: Make a notch onto the bracket for the PTO wire/leak oil reservoir, if not made earlier.

Fasten the filter under bolts (2 pcs) of the RH side rear axle housing, see picture (tightening torque (8.8): 80 Nm, (10.9):125 Nm).

- Clean connectors before opening them.
 Open the pump side end of hose B (valve block-pump) and fasten the hose to the upper connector on the filter.
- Fit hose 48 between pressure filter-pump.

	1 1 1	31983810 31983800 31983900	Lisäsuodatin Lisäsuodatin Lisäsuodatin	Extra filter Extra filter Extra filter	Extra filter Extra filter Extra filter	Extra Filter Extra Filter Extra Filter	6000-8400 ei var. / not stored ei var. / not stored
38	1	33159700 33159600	.Kannatin .Kannatin	Hållare Hållare	Support Support	Halter Halter	6000-6400, 8000 6600, 8100-8400
39	2	33161300 33161200	.Holkki, L= 38 mm .Holkki, L= 25 mm	Hylsa Hylsa	Sleeve Sleeve	Hülse Hülse	6000-6400, 8000 6600, 8100-8400
40 41 42	1 1 2 2	GR0282 KH4923 HC8340 HC8339	.Tulppa .O-rengas .Ruuvi .Ruuvi	Plugg O-ring Skruv Skruv	Plug O-ring Screw Screw	Stopfen O-ring Schraube Schraube	6000 – 6400, 8000 6600, 8100 – 8400
43 45 46 47 48	1 1 1 1 1	GS9270 KH4006 33159800 GS9265 33186600	.Liitin .O-rengas .Liitin .Liitin .Letku	Nippel O-ring Nippel Nippel Slang	Union O-ring Union Union Hose	Verbindung O-ring Verbindung Verbindung Schlauch	
38A 39A 40A 41A 42A 43A 45A 47A 49	1 1 1 1 1	33179400 32578010 KG3024 30168500 32783100 KH4006 GR0288 KH4916 31539610 31539420	.PainesuodatinRunkoPidätinrengasJousiVenttiiliO-rengasTulppaO-rengasSuodinKotelo	Tryckfilter Ram Låsring Fjäder Ventil O-ring Plugg O-ring Filter Hus	Pressure filter Frame Circlip Spring Valve O-ring Plug O-ring Filter Housing	Druckfilter Rahmen Sicherungsrir Feder Ventil O-ring Stopfen O-ring Filter Gehäuse	ng

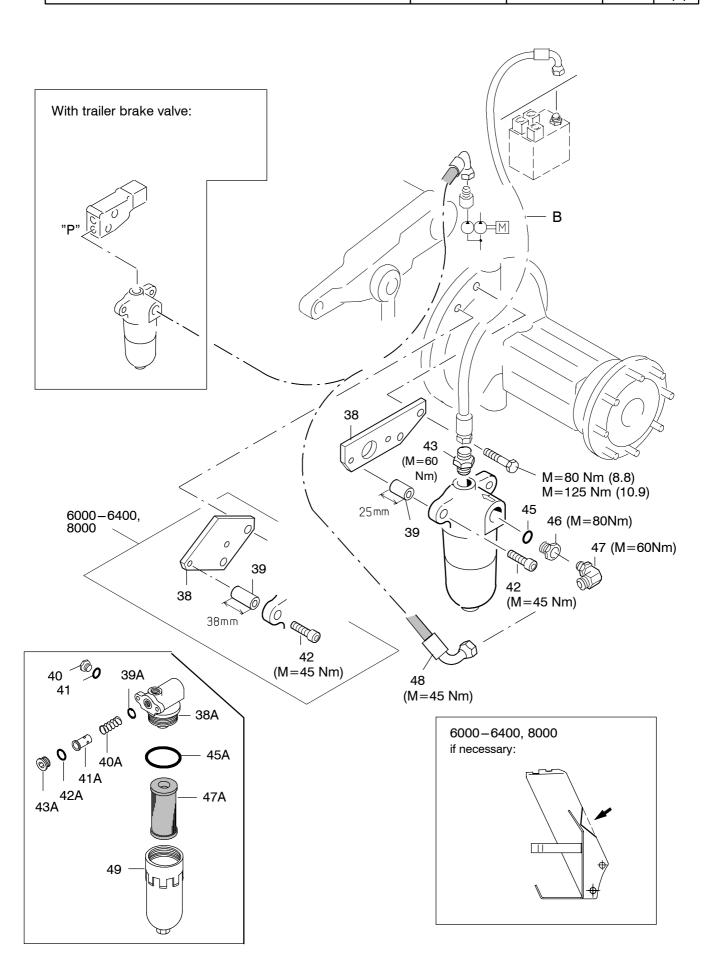

LIFTING CYLINDER PROTECTIVE COVERING,	10.06.1996	Model	Code	Page
FITTING INSTRUCTION	21.01.1997	6000-8750	99	1(1)

Lifting cyl. covering (6000-6400,8000) .. 33287400 Lifting cyl. covering (6600-8750) 33275600

Protective covering is intended to protect the piston rod and its seals in very difficult conditions (e.g. mud fields etc).


FITTING:

- Lower the lower links to the lowest position.
 Release the cylinder upper end from the lifting arm. Disconnect the breather hose.
- Place the covering round the piston rod so that the grease nipple fits at the hole at the end of the covering.

Hold the lid of the protective covering (so that the glue joint between the lid and the lower part not rend) and rotate **carefully** the covering round the piston rod end.

NOTE! Do not use any sliding compound (otherwise the covering does not stay later in its place).

 Fasten the covering with a clip. Refit the breather hose
 Tighten, if needed, the upper end of the protective covering with silicone.

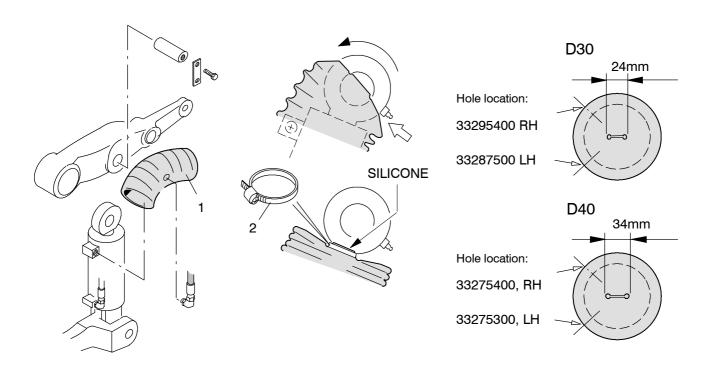

	1	33287400 33275600	Syl. suojat Syl. suojat	Skydd kmpl. Skydd kmpl.	Protective covering Protective covering	Schutze kompl. Schutze kompl.	D30, 6000 – 6400,8000 D40, 6600 – 8750
1	1 1 1	33287500 33295400 33275300	.Suoja .Suoja .Suoja	Skydd Skydd Skydd	Shield Cover Shield	Schutz Schutz Schutz	LH, 6000-6400,8000 RH, 6000-6400,8000 LH, 6600-8750
2	1 2	33275400 SA9104	.Suoja .Letkunkiristin	Skydd Slangklämma	Cover Hose clip	Schutz Schlauchbinder	RH, 6600–8750

EXTRA OIL RESERVOIR, fitting instruction		Model	Code	Page
	22.08.1996	6600-8750 (not 8000)	99	1(2)

Extra oil reservoir 33141900


The oil reservoir volume is 19 litres, 15 l of which can be used e.g. for the auxiliary hydraulics.

The reservoir is fitted under the LH side final drive. The ground clearance does not become smaller. The steering system return oil pipe is connected to the reservoir. Thus the cooling effect increases. Also the oil in the reservoir is kept warmer in the cold seasons. The gearbox oil draining is done through the reservoir draining plug 2.

FITTING:

- Support the tractor and remove the LH side rear wheel. Unscrew the gearbox oil draining plug and drain the oil.
- Disconnect the steering return oil connector Y on the gearbox and connect it to the reservoir 1. In place of the connector are fitted parts 14 and 15.
 Fasten connecting pipe parts 3, 8 to the gearbox and parts 4, 3, 2,9 to the reservoir.
- Fit the extra reservoir 1 (it is fastened with two brake housing-to-final drive bolts, see picture B).
 Do not yet tighten the bolts!
- Fit the steering system return oil pipe. Assemble the connecting pipe parts 5 7 and tighten them.
 After that is tightened the reservoir attaching bolts (tightening torque = 80 Nm).
- Disconnect the lifting cylinder breather pipe end on the brake housing. Attach the parts 12 13 to the hose 10. Fix connector 12 in place of the detached hose. Fit hose 11. Connect the breather pipe end to the connector 13.
 Note! Do not tighten the connectors too hard (sealing surfaces can damage)
- If the tractor has the trailer brake cylinder, the hoses are connected as shown in picture C.
- Fit the wheel. Fill the gearbox housing with oil. Add
 19 litres oil (volume of the extra reservoir. NOTE!
 the extra reservoir makes the filling slower.

	1	33141900	Öljysäiliö	Oljebehållare	Oil tank	Ölbehälter
1	1	33080400	.Säiliö	Behållare	Container	Behälter
2	1	GR0225	.Tulppa	Plugg	Plug	Stopfen
3	2	KH3610	.Tiiviste	Tätning	Gasket	Dichtung
4	1	GS9382	.Liitin	Nippel	Union	Verbindung
5	1	33142200	.Putki	Rör	Pipe	Rohr
6	1	33185900	.Liitin	Nippel	Union	Verbindung
7	1	GS9332	.Liitin	Nippel	Union	Verbindung
8	1	33080500	.Liitin	Nippel	Union	Verbindung
9	2	GS9270	.Liitin	Nippel	Union	Verbindung
10	1	33142000	.Letku	Slang	Hose	Schlauch
11	1	33142100	.Letku	Slang	Hose	Schlauch
12	1	GS9268	.Liitin	Nippel	Union	Verbindung
13	1	GS9276	.Liitin	Nippel	Union	Verbindung
14	1	GR0284	.Tulppa	Plugg	Plug	Stopfen
15	2	KH4946	.Tiiviste	Tätning	Gasket	Dichtung

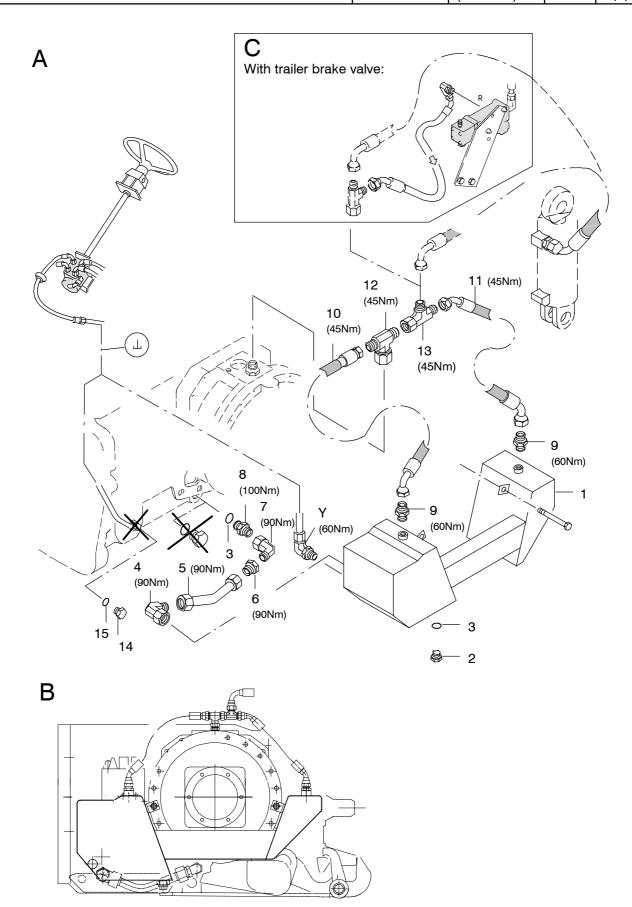

RETURN OIL FILTER, fitting instruction

22,06.1999 06.08.1999

Model 6000-8000 6600-8750 No

Page

99.5 1(2)

Fitting serie (6000-6400,6900,8000) ... 33774000 Fitting serie (6600,6800,8050-8750) 33766700

 The return oil filter filters return oil from the auxiliary hydraulics.

In connection with oil change is recommended that new oil is poured in through the return oil filter for the auxiliary hydraulics.

FITTING:

- From ser. no. F16407 incl:
 Remove the low pressure circuit filter and its support plate.
- All tractors: Fasten a new support plate 62 under the bolt of the final drives, see picture (tightening torque (8.8): 80 Nm, (10.9):125 Nm).
 Move the leak oil support to the left side of the tractor (picture B), and shape it if needed. Check that the oil reservoir don't touch the power lift linkage.

NOTE! Replace on models 6000–6400, 6900, 8000 (smaller final drives) the support fixing bolts with 10 mm longer ones (ref. 4).


 Refit the low pressure filter +sleeves 61 and a new return oil filter 15 (compl.) on the support plate.
 If the tractor has not the low pressure filter, fit the return oil filter to the foremost holes of the support.

The lower edge of the cab (picture A) may touch the filter cover (NB! the flexibility of the cab). Grind the lower edge when needed, paint the grounded points.

- Connect the outlet and inlet unions of the return oil filter
- Fasten the extension pipe 1 of the return oil connection.
- Drill a 23 mm hole through the support plate for the quick coupling (see picture). Fasten quick coupling 21A on the support.
- Connect the pressure hoses and fit they so that they do not touch the cab or lifting lever.
- Check the function of the fitting.

NOTE! Do not use any more the old return oil connection, since then the return oil does not circulate via the filter.

99.5

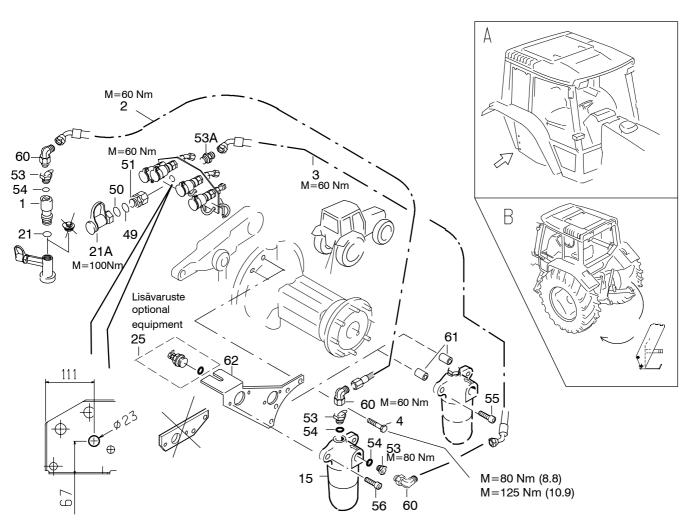

	1	33774000	Paluuöljysuodatin.	Returoljefilter.	Return oil filter	Rücklaufölfilter	6000-6400, 6900, 8000
	1	33766700	Paluuöljysuodatin.	Returoljefilter.	Return oil filter	Rücklaufölfilter	6600,6800, 8050-8750
1 2 3 4	1 1 1 4	33767000 33767100 33766900 HA8348	.Jatko-osa .Letku .Letku .Ruuvi	Förlängn.stycke Slang Slang Skruv	Extension part Hose Hose Screw	Verlängerungsstück Schlauch Schlauch Schraube	L=970 L=1010 M12x70, 6000-6400, 6900, 8000
15 21 21A (25	1 1 1 1	33179400 20639610 KH4111 30322100 33093900	.Painesuodatin täyd. Suodin .O – rengas .Pikaliitin Indikaattori	Tryckfilter kmpl .Filter O-ring Snabbkoppling Indikator	Pressure filter assy .Filter O – ring Quick coupler Indicator	Druckfilter kmpl .Filter O-Ring Schnellkupplung Indikator	24.2x3 / Lisävaruste/ Optional)
49 50 51 53 53A 54	3	KH7302 KH5074 GS9327 33159800 GS9451 KH4006	.O – rengas .Tukirengas .Liitin .Liitin .Liitin .O – rengas	O-ring Stödring Nippel Nippel Nippel O-ring	O-ring Support ring Union Union Union O-ring	O-Ring Stützring Verbindung Verbindung Verbindung O-Ring	22,2x3
55 56 60 61 62	2 3 2 1	HC8339 HC9337 GS9400 33161200 34039900	.Ruuvi .Ruuvi .Liitin .Holkki .Kannatin	Skruv Skruv Nippel Hylsa Hållare	Screw Screw Union Sleeve Support	Schraube Schraube Verbindung Hülse Halter	M10x50 M10x30 90_ 6000-6400,
	1	33529300	.Kannatin	Hållare	Support	Halter	6900, 8000 6600,6800, 8050-8750

PRESSURE FILTER INDICATION LIGHT, fitting instr.

\nearrow	Model	No	Page
24.02.1999	6000-8750	99.6	1(2)


The indication light indicates the blocked filter.

FITTING:

- Clean the filter rear part. Remove the plug and fit the indicator 1 and o-ring 2 into the pressure filter
- Connect the indicators to the wire loom 3 according to the picture (white wires to the earth connection). Pass the wire loom under the cab and bind it with plastic binders. Check that the wires do not remain under moveable parts.
- Connect the wire with a cable shoe under the earth screw on the cab front wall (on the engine side beside the brake pedal master cylinders).
 The black wire is connected to pin 19 in connector on the cab front wall (37 pins).
- Remove the combination instrument frame and the instrument. Fit a lamp at the warning light symbol. Reassemble the parts. Check the function by earthing the black wire.
- If all filters do not have the indicator, the free ends of the wires must be isolated and fasten on the wire loom.

Model No Page 24.02.1999 99.6 6000-8750 2(2)



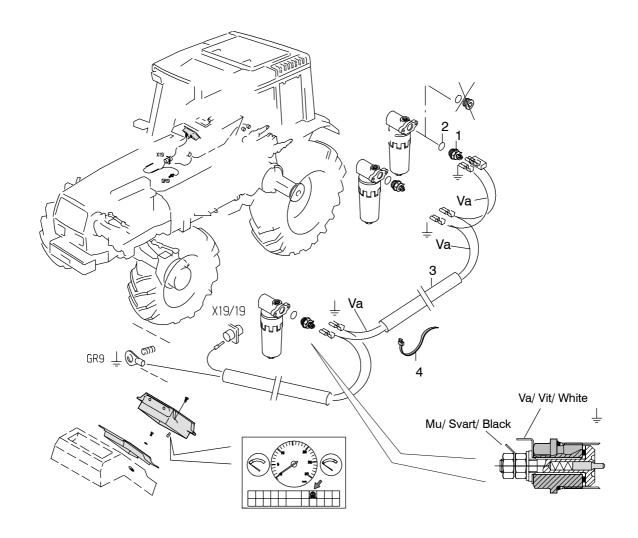

1 2 3 4	1 1 1 5	33093900 KH4006 33766800 SA1900	Indikaattori O-rengas Johdinsarja Johdinside	Indikator O-ring Ledningssats Buntband	Indicator O-ring Wiring set Wiring band	Indikator O-Ring Verkabelung Leitungsklemme	
	1	SH2667	.Lamppu	Lampa	Bulb	Lampe	12V/1,2W

100. Special tools

101. Special tools
(ETV)

102. Locally prepared tools (ET)



_		Model	Code	Page
100. Special tools	8. 11. 1990	6000-8750	100	1

Contents

1. Special tools (Op. no. 101)	
21. Engine	
22. Fuel system	
23. Cooling system	
32. Electro-hydraulic power lift	
41. Clutch	 2
42. Gearbox	
44. Quick-shift gear, reverse shuttle and 4WD clutch	
45. Final drives	
46. Power take – off	 7
61. Steering system	
64. Powered front axle	 8
70. Frame and wheels	 9
Od. Unidentific married life	10
91. Hydraulic power lift	 10
2. Locally prepared tools (Op. no. 102)	
2. Locally prepared tools (Op. no. 102) 21. Engine	
2. Locally prepared tools (Op. no. 102) 21. Engine	
2. Locally prepared tools (Op. no. 102) 21. Engine	 1 2
2. Locally prepared tools (Op. no. 102) 21. Engine 41. Clutch 42. Gearbox 44. Quick—shift gear	 1 2 3
2. Locally prepared tools (Op. no. 102) 21. Engine 41. Clutch 42. Gearbox 44. Quick—shift gear 45. Final drives	 1 2 3 3
2. Locally prepared tools (Op. no. 102) 21. Engine 41. Clutch 42. Gearbox 44. Quick—shift gear 45. Final drives 46. Power take—off	 1 2 3 3 4
2. Locally prepared tools (Op. no. 102) 21. Engine 41. Clutch 42. Gearbox 44. Quick—shift gear 45. Final drives 46. Power take—off 61. Steering system, pressure measuring equipments	 1 2 3 4 5
2. Locally prepared tools (Op. no. 102) 21. Engine 41. Clutch 42. Gearbox 44. Quick—shift gear 45. Final drives 46. Power take—off 61. Steering system, pressure measuring equipments 64. Powered front axle	 1 2 3 4 5 7
2. Locally prepared tools (Op. no. 102) 21. Engine 41. Clutch 42. Gearbox 44. Quick—shift gear 45. Final drives 46. Power take—off 61. Steering system, pressure measuring equipments 64. Powered front axle 70. Frame and wheels	 1 2 3 4 5 7 8
2. Locally prepared tools (Op. no. 102) 21. Engine 41. Clutch 42. Gearbox 44. Quick—shift gear 45. Final drives 46. Power take—off 61. Steering system, pressure measuring equipments 64. Powered front axle 70. Frame and wheels 80. Cab and shields	. 123345789
2. Locally prepared tools (Op. no. 102) 21. Engine 41. Clutch 42. Gearbox 44. Quick—shift gear 45. Final drives 46. Power take—off 61. Steering system, pressure measuring equipments 64. Powered front axle 70. Frame and wheels 80. Cab and shields 91. Hydraulic power lift	 . 1 2 3 3 4 5 7 8 9 10
2. Locally prepared tools (Op. no. 102) 21. Engine 41. Clutch 42. Gearbox 44. Quick—shift gear 45. Final drives 46. Power take—off 61. Steering system, pressure measuring equipments 64. Powered front axle 70. Frame and wheels 80. Cab and shields	 . 1 2 3 3 4 5 7 8 9 10 10

Special tools (ETV)

(can be ordered from the factory)

Class A includes tools needed for service, minor repairs and changing of external seals.

Class B includes tools needed for more extensive jobs.

Locally prepared tools (ET)

(ET tools are not supplied by Valmet).

Simple special tools which can be prepared locally. Drawings for these tools can be found under code 102


Special tools are grouped according to the tractor component concerned. The primary use of a tool is shown in brackets after the description.




		Model	Code	Page
101. Special tools	1. 10. 1999	6000-8950	101	0

21. Engine

Order no 1 9051 73100 2 9101 65600 *) 3 9052 46400 4 9052 46300 5 9030 15200	Description Puller for cylinder liner Milling cutter for cylinder liner seat Centring tool for flywheel housing Drift for fitting rear crankshaft seal Drift for fitting front crankshaft seal
6 9052 46620 7 9052 46650 8 9025 87400 9 9101 66300 *) 10 9025 79200	Drift for 40 mm cap plug Drift for 16 mm cap plug Drift for fitting camshaft cup plug Press tool for cylinder liner Holder for dial gauge
11 9101 66100 *) 12 9101 71100 *) 13 9101 65502 *) 14 9101 65503 *) 15. 9101 75800 *)	T-handle for valve seat milling cutter Milling cutter for facing exhaust valve seat Milling cutter for exhaust valve seat Inner milling cutter for exhaust valve seat Milling cutter for facing inlet valve seat
16 9101 65505 *) 17 9101 65506 *) 18 9101 66200 *) 19 9052 47200 20 9101 66000 *) 21 9052 46660 22 9101 65800 *) 23 9101 65900 *) 24 9024 55800 25 9101 65700 *)	Milling cutter for inlet valve seat Inner milling cutter for inlet valve seat Lever for compressing valve spring Counter nut for lever above Milling tool for injector seat Drift for 36 mm cup plug Drift for removing valve guide Drift for fitting valve guide Spanner for crankshaft nut, 634—engines Spanner for crankshaft nut
26 9052 48800 27 9020 01100 28 9025 98900 29 9025 98800 30 9025 98700 31 8366 62022 *) New tools for 20 –	Puller for crankshaft gears Conical sleeve for fitting pistons Drift for fitting dust cover, crankshaft front seal Drift for fitting tension pin in timing gear casing Drift for fitting tension pins in timing gear casing and flywheel housing Electronical device for checking injection timing on E – engines series engines. Other tools are the same as for engines on 505 – 905 tractors.

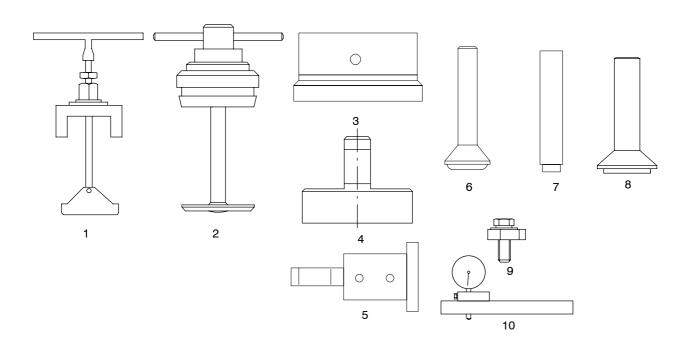



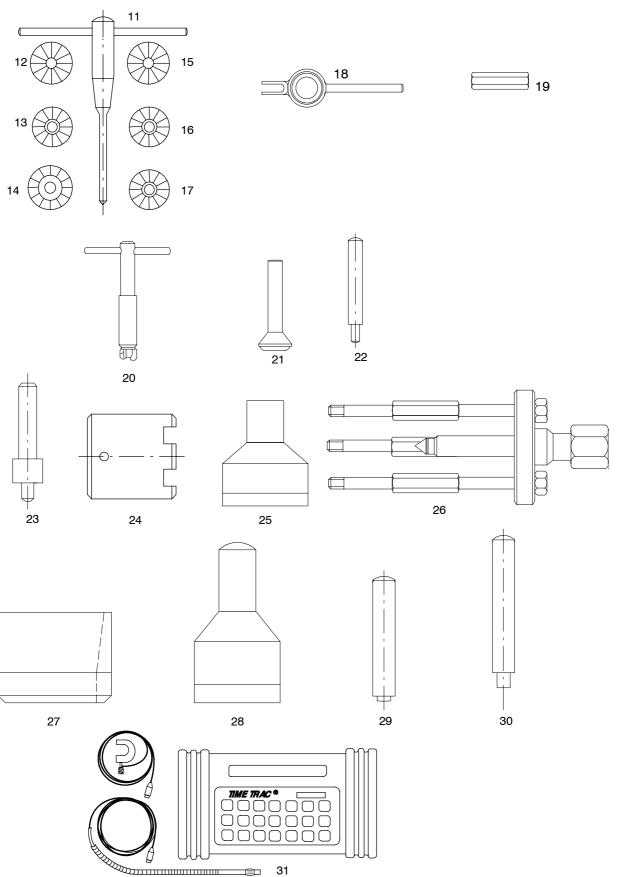

		Model	Code	Page
101. Special tools	1. 10. 1999	999 6000-8950	101	0.2

22. Fuel system

8366 62022

9052 47800 *) Pressure gauge for checking delivery valve 9052 48900 *) Puller for injection pump drive gear 9025 99100 *) Locator for timing mark on the flywheel Control pipe for injection timing 9052 47600 *) 9052 99000 *) Sleeve for limiting control rod travel 9051 71300 *) Extractor for injectors

Electronic device for checking injection timing (E-engines), which incl. parts 1-3 below:

1. 836662121 Magnetic detector

2. 836662122 Cable

3. 836662123 Fastening device

Parts 4-10 below are available, but not needed for Valtra-engines (not illustrated):

4. 836662120 Timing light


5. 836859466 TimeTrac in-line sensor

6. 836662124 Clamp - on Transducer, 4,5 mm

7. 836662125 -"-, 5,0 mm 8. 836662126 -"-, 6,0 mm

9. 836662127 -"- ,8,0 mm 10. 836662128 -"- ,1/4 inches

*) Same tool as for fuel system on 505-905 tractors.

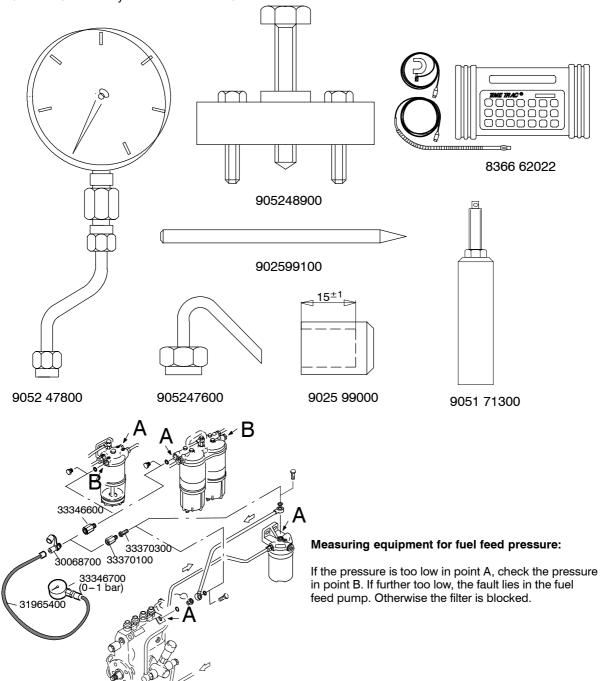


ded Onesial table	1.10.1999	Model	Code	Page
101. Special tools	1. 9. 2002	6000-8950	101	0.3

23. Engine cooling system

Ordering no	Description
9101 93200 *)	Puller for coolant pump impeller, 620 - engines
9022 03500 *)	Puller for coolant pump impeller, 320 – and 420 – engines (earlier no 8360 85499)
9051 40200 *)	Drift for fitting coolant pump seal (seal no 8353 31202)
9051 79300 *)	Drift for fitting coolant pump seal (seal no 8353 39425)
9051 64900 *)	Drift for fitting coolant pump shaft, 320 – and 420 – engines
9052 48900*)	Puller for fan hub (see Fuel system)


^{*)} Same tool as for engines on 505-905 tractors.

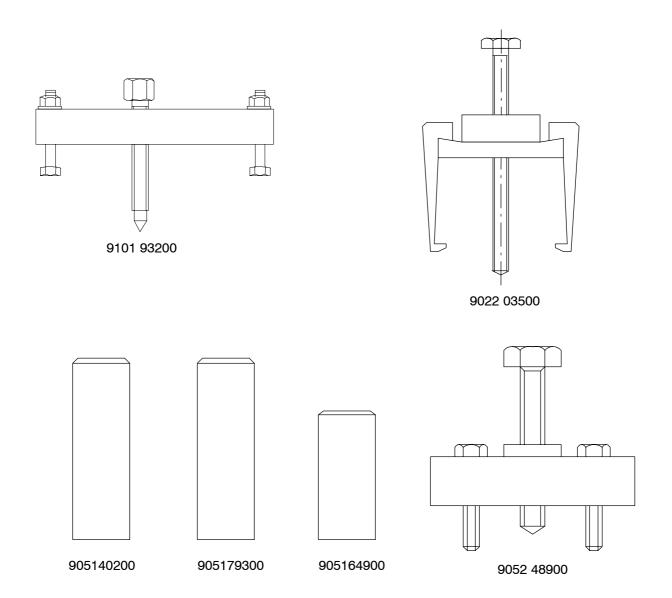

	1.10.1999	Model	Code	Page
101. Special tools	1. 9. 2002 6000-8950	101	1	

31. Σ – Power


ETV 894 310 Test cable to make fault tracing in Σ -Power system from ser. no. **G22507** incl.

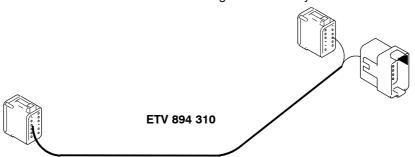

32. Hydraulic power lift (AC, ACD, ACB)

Α

ETV 894 100 Cable for measuring internal voltages of position and draft sensors (AC, ACB and ACD)
ETV 894 220 Cable to check control valve solenoid valves (Y1E, Y2E) (see pages 320/14 (AC) and 321/9 (ACB/ACD)).

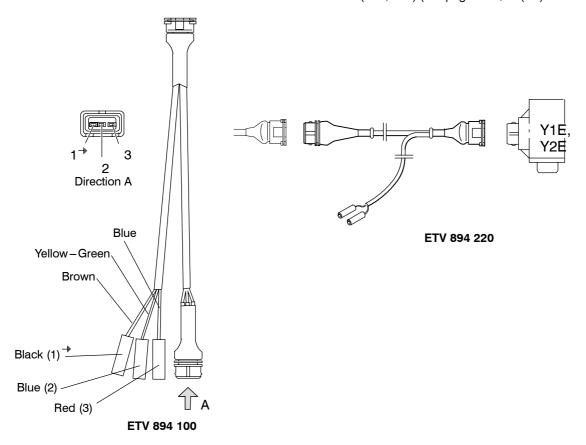

37. Autocontrol 5/5.2 (HiTech)

(see picture on page 370/24C (AC 5) or 371/26 (AC 5.2))

Oraering no.	Description
337 00 600	Programming cable L=1,5 m. To be used when programming AC 5/5.2 control unit, which is fitted on tractor.
337 00 610	Programming cable $L=8$ m. To be used when programming AC 5/5.2 control unit, which is fitted on tractor.
340 42 500	Programming device for AC 5/5.2 and control units. To be used when programming removed control units. Supply voltage 230 V 50/60 Hz, Euro-socket. In some markets must be used a separate adapter.
340 42 260	Computer disk (3½, Win. 95/98) to program AC 5 control unit (incl. program versions 53,65 and parameter files).
344 04 620	Computer disk (3½, Win. 95/98) to program AC 5.2 control unit (incl. program version 86 and parameter files).
ETV 894100	Cable for checking internal voltages of clutch and gas pedal position sensors. (AC5)
ETV 894510	Cable for checking internal voltages of clutch and gas pedal position sensors. (AC5.2)

101 Special tools	1.17:1998	Model	Code	Page
101. Special tools	1. 10. 1999	6000-8750	101	2

41. Clutch

Α

Part no Description

ETV 891900 Sleeve for fitting clutch release bearing (not HiTech tractors)
ETV 892380 Sleeve for removing clutch release bearing (not HiTech tractors)

ETV 893790 Centring tool for clutch disc (not HiTech tractors)


Locally prepared tools

ET 893470 Support roller for splitting tractor (Frame and Wheels 505 – 905)

ET 893480 Support plate (2 pcs) (Frame and Wheels 505–905)

HiShift

ETV 894 320 Fitting tool for HiShift hydraulic block piston seal KH 3714 (not illustrated)

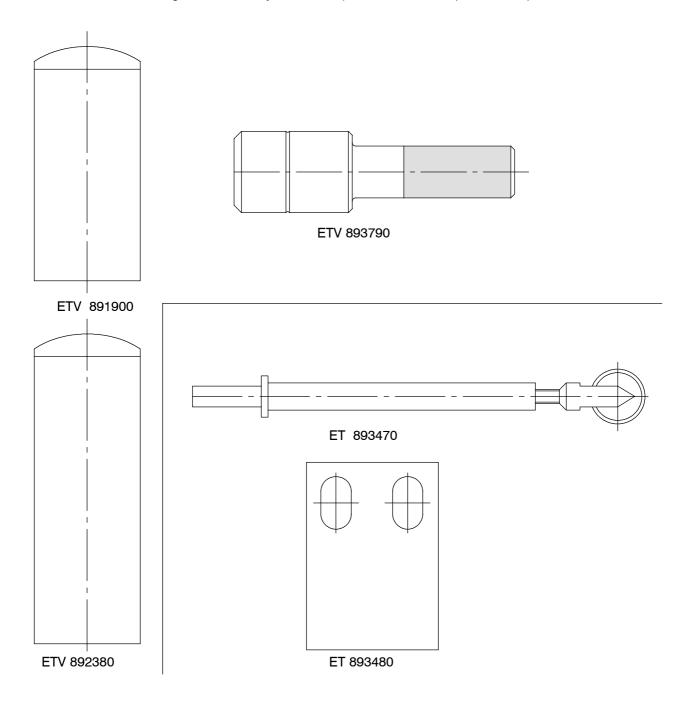


	1.1.1995	Model	Code	Page
101. Special tools	1. 4. 1997	6000-8750	101	3

42. Gearbox


В


Order no	Description
ETV 890 220	Universal handle
ETV 891 870	Plate for fitting thrust bearing for differential side gear (Gearbox 505-905)
ETV 892 230	Socket spanner for bevel pinion shaft ring nut (Gearbox 305-555)
ETV 894 190	Socket spanner for 4WD clutch drum nut
ETV 892 370	Sleeve for fitting input shaft front end bearing (Front axle 505 – 905)
	Sleeve for fitting bevel pinion shaft front end bearing
ETV 892 380	Sleeve for fitting input shaft rear end bearing (Gearbox 505-905)
ETV 893 300	Puller for differential bearings (Gearbox 505-905)
ETV 893 340	Plate for fitting bearing race, rear pinion shaft bearing (Gearbox 505-905)
ETV 893 400	Plate for fitting differential bearings (Gearbox 505-905)
ETV 894 080	Drift for fitting selector fork rail for LL-range
ETV 894 050	Drift for fitting locking pins for selector forks
ETV 894 120	Counter hold for puller ETV 893 300

Locally prepared tools ET 894 060 Pres Press plate for adjusting selector forks

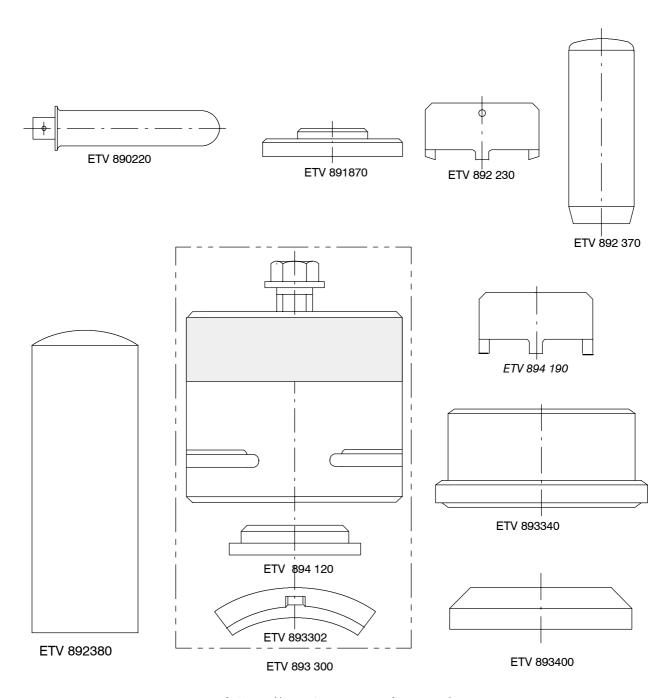

	8, 17, 1990	Model	Code	Page
101. Special tools	1. 4. 1997	6000-8750	101	4

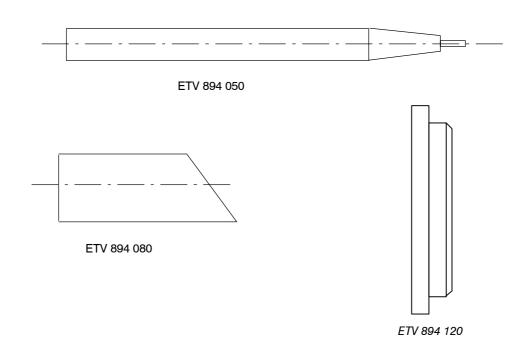

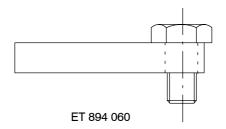

404 One sighted	8.11.1990	Model	Code	Page
101. Special tools	15. 5. 1993	6000-8750	101	5

44.1 Quick-shift gear

Α

Part no. Description

ETV 891 840 Sleeve for fitting seal on input shaft (Gearbox 505–905)

ETV 892 180 Drift for fitting needle bearing/sealing ring on input shaft (Gearbox 505-905)

ET 893 480 Support plate for front frame, 2 pcs (Frame and Wheels 505 – 905)


В

ETV 890 220 General handle

ETV 893 303 Plate for removing bearings for planet carrier (Quick—shift gear 505—905)

ET 893 420 Sleeve for fitting bearings on planet carrier (Final drives 505 – 905)

Sleeve for fitting bearings at front end of cylinder

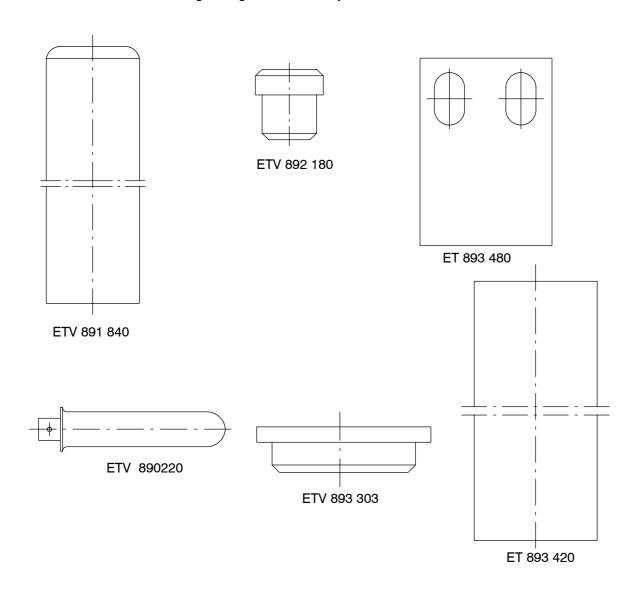

404 0	15. 5. 19 96	Model	Code	Page
101. Special tools	1. 10. 1999	6000-8750	101	6

44.2 Mechanical reverse shuttle

Α

ETV 892 180 Drift for fitting needle bearing/sealing ring inside the reverse shuttle input shaft in transmission 300 and 460.

These parts only on tractors without the quick-shift gear or the DPS.

ETV 894 200 Drift for fitting needle bearing/sealing ring inside the reverse shuttle input shaft in transmission 650

(8450-8750). These parts only on tractors without the DPS gear.





ETV 892 180

ETV 894 200

44.3 4WD clutch/4WD output shaft

Α

ETV 893 260 ¹) Socket spanner for 4WD output shaft nut (Gearbox 505 – 905)


ETV 894 170 ²) Socket spanner for 4WD output shaft nut (new tool)


ETV 891 900 1) Sleeve for fitting 4WD output shaft sealing ring/bearing (Gearbox 505 – 905)


В

ETV 890 830 ¹) Sleeve for fitting 4WD clutch piston onto the output shaft (PTO 505 – 905)

²⁾ Tractors with 3 – step quick – shift gear Delta Powershift. The nut is the same as the nut at the front end of the bevel pinon shaft on 505 – 905 tractors. For this nut spanner ETV 893 440 is used. Spanner ETV 894 170 can be replaced by welding a sleeve onto the tool ETV 893 440.

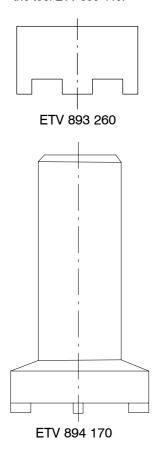

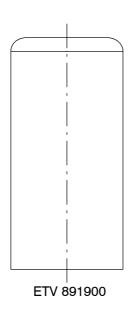

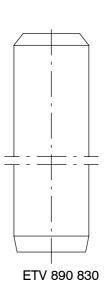


¹⁾ Tractors without quick-shift gear or with 2-step quick-shift gear

101 Chariel tools	15. 5. 19 96	Model	Code	Page
101. Special tools	1. 11. 1998	6000-8750	101	6A


44.4 3-step quick-shift gear Delta Powershift

Part no	Description
A	
ETV 892 180	Drift for fitting oil seal and needle bearing inside input shaft front end (see 2-step quick-shift gear)
ETV 893720	Plate for fitting quick – shift gear front oil seal (front axle ZF on 305 – 665)
ETV 894 200	Drift for fitting oil seal and needle bearing inside the DPS input shaft front end in transmission 650.
ET 893 480	Support plate for front end frame, 2 pcs (see 2-step quick-shift gear)
В	
ETV 893700	Sleeve for fitting oil seal inside the middle sun gear (PTO 205-665)
ETV 894030	Sleeve for fitting planetary carrier ball bearing (Hydraulic power lift 205-665)

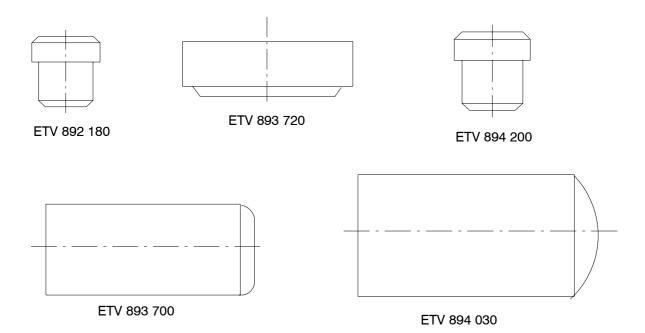

44.5. HiTech Shuttle

ETV 894 350 Compressing tool for F-clutch large coil spring

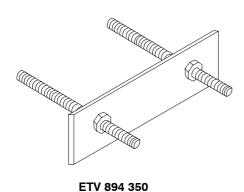

	$\overline{}$	Model	Code	Page
101. Special tools	15. 5. 1993	6000-8750	101	6B


404 On a sight a sig	1.8.2690	Model	Code	Page
101. Special tools	1. 9. 2002	60008950	101	7

45. Final drives

Part. no.	Description
ETV 890 220	Universal handle
ETV 892 260	6600 and 8100; Plate for fitting outer drive shaft inner bearing race
ETV 893 690	6600 and 8100; Plate for fitting outer drive shaft inner oil seal (Final drives 305 – 555)
ETV 893 310	6100 – 6400 and 8000; Plate for fitting outer drive shaft inner oil seal (Final drives 505 – 905
ETV 893 320	6100-6400 and 8000; Plate for fitting outer drive shaft bearing race (Final drives 505-905)
ETV 894 470	6200 – 8950: Tool to fit the cassette seal (rear axle housing with greater oil volume)
ETV 894 480	6200 – 8950: Guide sleeve to assemble the final gears (rear axle housing with greater oil volume)
ETV 894 490	6200 – 8950: Guide pipe to assemble the final gears (rear axle housing with greater oil volume)
ETV 894 550	8350 – 8950Hi: Fitting tool for cassette seal in final drives 700.
ETV 894 560	8350 – 8950Hi: Guide pipe to assembling the final drives 700.

Locally prepared tools


ET 893 410 Support for removing outer drive shaft bearing race (Final drives 505 – 905)

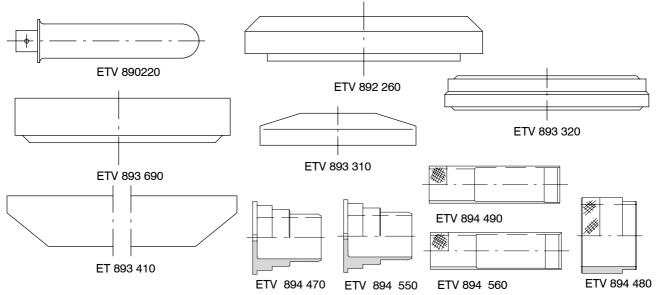

46. Power take-off

Λ.	
Δ	

^	
ETV 890 220	Universal handle
ETV 891 870	Plate for fitting PTO shaft seal (Gearbox 505–905)
ETV 894 080	Drift for fitting selector fork rail locking ball (Gearbox 6100-8100)
ETV 894 420	Ring for fitting PTO shaft new cassette seal (to be used with below listed sleeves)
ETV 894 430	Sleeve (ø 35) for fitting PTO shaft new cassette seal (to be used with above mentioned ring)
ETV 894 440	Sleeve (ø 44,6) for fitting PTO shaft new cassette seal (to be used with above mentioned ring)
В	
ET 894 000	Tool for unscrewing locking flange (earlier version) at front end of PTO shaft (Steering system 505-905)
ET 894 090	Sleeve for fitting PTO clutch circlip

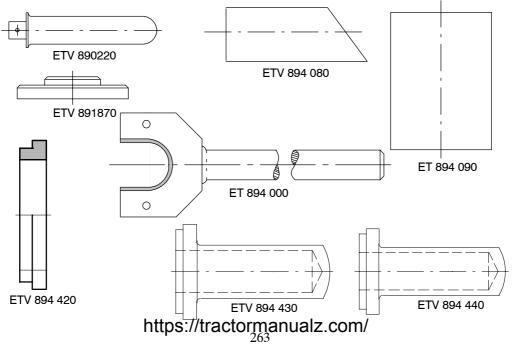


101. Special tools	1.1.1995	Model	Code	Page
101. Special tools	1. 4. 1997	6000-8750	101	8

61. Steering system

В

ETV 893 100 Fitting tool for steering valve seal (Steering valve 505–905)
ET 894 000 Tool for rotating steering cylinder head (Front axle Sige 505–905)
Note! Steering system pressure measuring equipment, see pages 101/11–13.

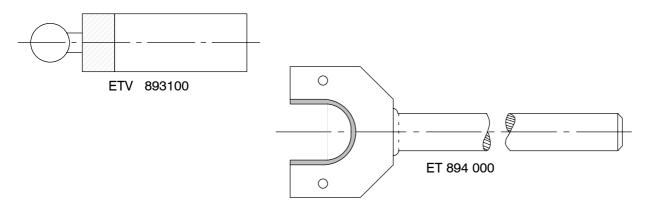

64. Powered front axle (Dana)

Α

ETV 893 600 Sleeve for fitting pinion shaft oil seals (powered front axle 505 – 905)

В


ETV 892 290 Sleeve for fitting drive shaft outer oil seal (powered front axle 505–905) ETV 893 730 Plate for fitting drive shaft inner oil seal (powered front axle 505–905))

ETV 894 020 Plate for fitting hub oil seal (powered front axle 505–905)

ETV 894 150 Plate for fitting cassette type oil seal (1701/94–)

ET 894 010 Drift for fitting/removing drive shaft bushing (powered front axle 505 – 905)

Extractor for removing king pins, see page 640/3)

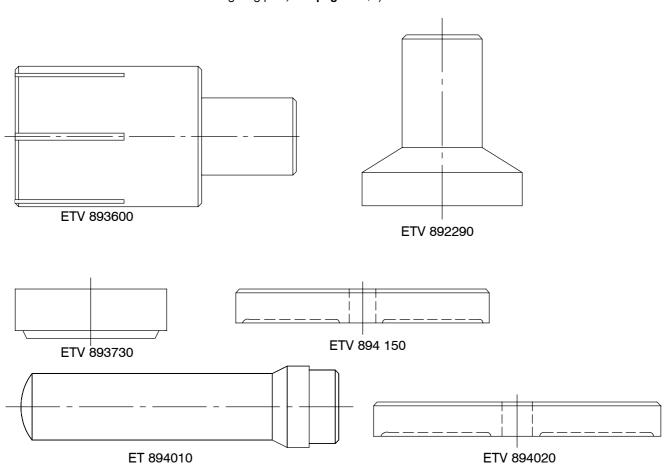

		Model	Code	Page
101. Special tools	1. 10. 1999	6000-8950	101	8A

67. Powered front axle Carraro 20.29 (industrial front axle)

Ordering no. Description

ETV 893 490 Socket spanner for bevel pinion shaft nut (also Carraro 505 – 905)

ETV 894 460 Plate to fit hub cassette seal (new)


ETV 893 450 Tool to adjust bevel pinion shaft position, which incl.:


ETV 893 451, Measuring rod (1 pcs) (also Carraro 505 – 905)

ETV 893 452, Screw M10x100 (1 pcs) (also Carraro 505 – 905)

ETV 893 453, Compression plate (2 pcs) (also Carraro 505 – 905)

ETV 893 454, Nut M10 (1 pcs) (also Carraro 505 – 905)

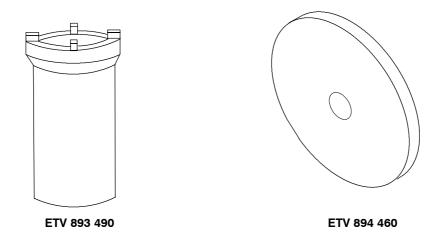

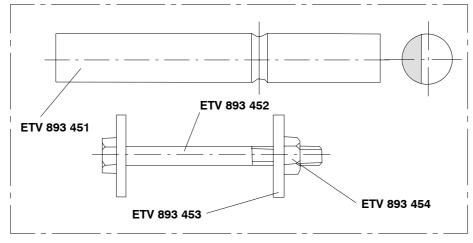

ETV 893 450

		Model	Code	Page
101. Special tools	8. 11. 1990	6000-8750	101	9

70. Main frame and wheels


Α

Order no Description


ET 893480 Support plate for front frame, 2 pcs (Frame and wheels 505 – 905)

В

ET 893470 Support roller for splitting tractor (Frame and wheels 505 – 905)

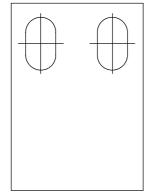

ET 893480

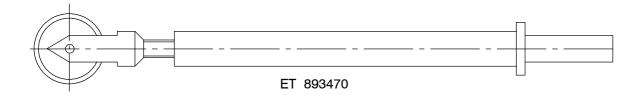

404 One sighted in	8.11.1990	Model	Code	Page
101. Special tools	1. 4. 1997	6000-8750	101	10

91. Hydraulic power lift


Locally	prepared	tool
---------	----------	------


ET 893 530 Sleeve for fitting lifting arm shaft seals (Hydraulic lift 505-905)

В

ETV 893 540 Sleeve for removing/fitting lifting arm shaft bushes (Hydraulic lift 505-905) ETV 893 580 Conic sleeve for fitting lifting cylinder piston seal, 6000 - 6400 and 8000 (Lifting cylinder ø 80) ETV 893 590 Sleeve for crimping lifting cylinder piston seal, 6000 - 6400 and 8000 (Lifting cylinder ø 80) Drift for fitting lifting cylinder piston seal, 6000 – 6400 and 8000 (Lifting cylinder ø 80) ETV 893 600 ETV 894 240 Conic sleeve for fitting lifting cylinder piston seal, 8150-8750 (Lifting cylinder ø 100) Sleeve for crimping lifting cylinder piston seal, 8150 – 8750 (Lifting cylinder ø 100) ETV 894 250


ETV 894 260 Drift for fitting lifting cylinder piston seal, 8150-8750 (Lifting cylinder ø 100)

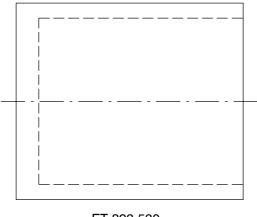

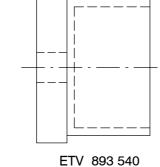


ET 893 530



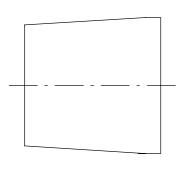

ETV 893 580 (ø 80) ETV 894 280 (Ø 90) ETV 894 240 (ø 100)

ETV 893590 (ø 80) ETV 894 290 (Ø 90) ETV 894 250 (ø 100)

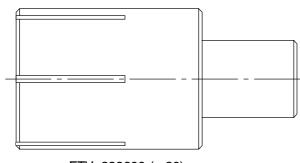


ETV 893600 (ø 80) ETV 894 300 (Ø 90) ETV 894 260 (ø 100)


		Model	Code	Page
101. Special tools	1. 1. 1995	6000-8750	101	11

92. Pressure measuring equipment

Note! Measuring equipment shown on pages 101/11-13 are included in the pressure measuring kit 31965000 which can be ordered from Tractor Works. These equipment can also be ordered separately.

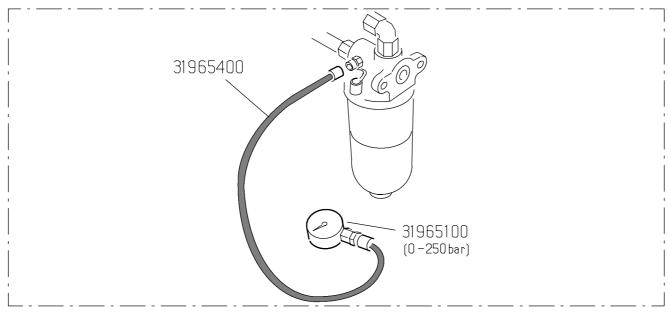

Measuring steering system working pressure (pressure at test point 14,0-15,5 MPa).

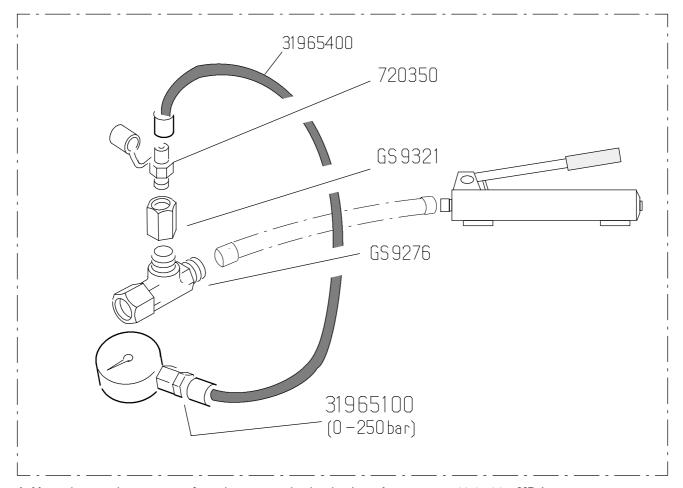


A. Measuring opening pressure of steering system shock valve (opening pressure 19,0-21,5 MPa).


B. Measuring opening pressure of power lift shock valve (opening pressure 20–21 MPa).

Note! Connector GS9276 has thread 3/4–16 for connecting the hand pump. The hand pump is not included in the pressure measuring kit 31965000.

	1, 11-1998	Model	Code	Page
101. Special tools	1. 10. 1999	6000-8950	101	12

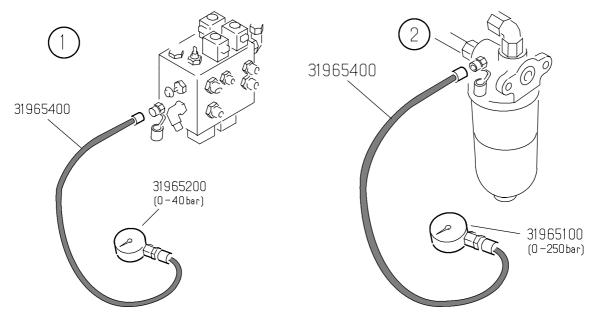


- 1. Pressure in low pressure circuit (pressure at test point **2,1-2,3 MPa** (-660070) or **1,8-1,9 MPa** (660071-, also on HiTech models)). On tractors with HiTech Shuttle the test point is fitted in the different place, see picture on page **440/24**.
- 2. Pressure in high pressure circuit (pressure at test point 19,0-19,8 MPa)

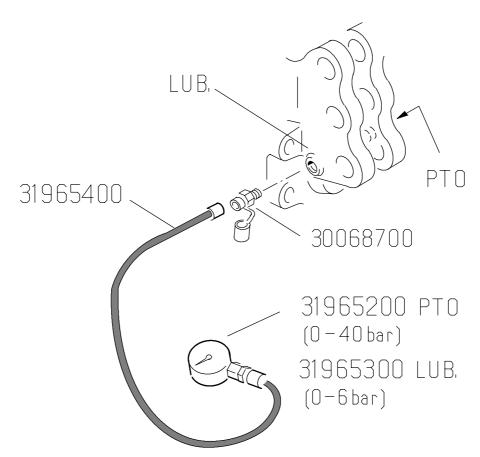

- 1. Measuring PTO clutch pressure (pressure at test point **0,05–0,1 MPa** lower that pressure at pressure test point on the servo valve block).
- 2. Measuring lubricating oil pressure (LUB) (min. pressure is **0,03 MPa**). On the HiTech tractors there is a separate HPR test point in the rear part of the suction strainer housing on the gearbox (–J26433) or on the rearmost pressure filter bracket (J26434–), see picture on page **440/25** (lubricating pressure value on HiTech tractors min. **0,12 MPa**).

Note! Measuring pressure in diff. lock clutch, see page 911/2.

	1, 8, 1998	Model	Code	Page
101. Special tools	1. 11. 1998	6000-8950	101	13

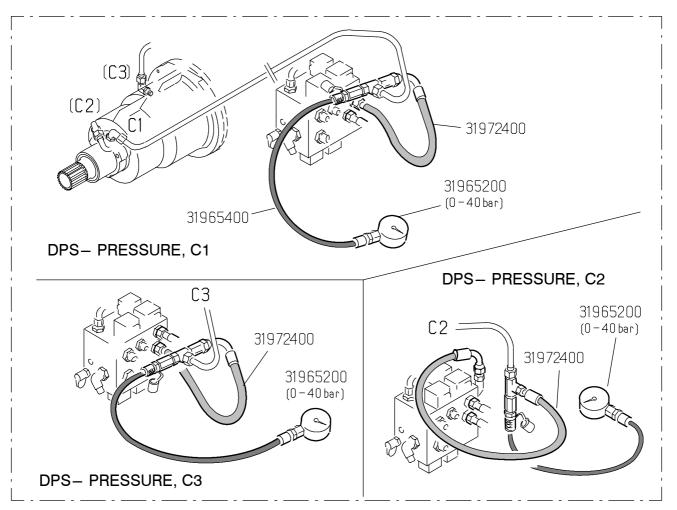

Measuring Delta Powershift clutch pressures on tractors which have the mechanical shuttle unit. Pressure in each clutch should be **1,8–1,9 MPa**.

C1=foremost clutch.

C2=middle clutch

C3=planetary gear clutch (rearmost clutch).

Note! If the tractor has HiTech Shuttle, all three DPS clutches have their own HPR test point and a pressure gauge can be connected direct to the test points with measuring hose 31965400. Concerning the pressure test points, see page **440/25**.

Note! On tractors which have the lock valve (see page **420/20B**), the oil piping deviates from the pictures above. The lock valve is fitted in transmissions **460** and **650**, but the lock valve is not fitted in the HiTech tractors.



	8, 11, 1990	Model	Code	Page
102. Locally prepared tools	1. 4. 1997	6000-8750	102	1


400 1	8.17-1990	Model	Code	Page	l
102. Locally prepared tools	1. 4. 1997	6000-8750	102	2	

42. Gearbox

В

ET 894 060

Press plate for adjusting selector forks

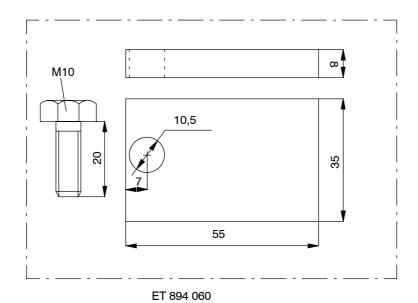


	8. 17: 1990	Model	Code	Page
102. Locally prepared tools	1. 4. 1997	6000-8750	102	3

44. Quick-shift gear

В

ET 893 420

Sleeve for fitting bearings on planet carrier (Final drives 505-905) Sleeve for fitting bearings on front end of cylinder

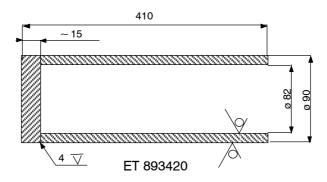


45. Final drives

В

ET 893 410

Support plate for removing bearing race, outer drive shaft (Final drives 505 – 905)

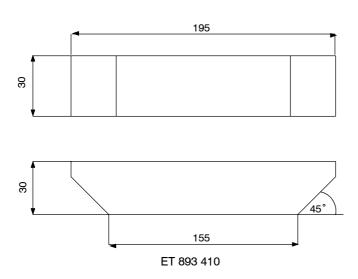


102. Locally prepared tools	8, 17, 1990	Model	Code	Page
	1. 4. 1997	6000-8750	102	4

46. Power take off

В

ET 894 000 ET 894 090 Tool for loosening the locking flange at the front end of the PTO shaft (see Steering system 6100-8100) Sleeve for fitting PTO clutch circlip (new)

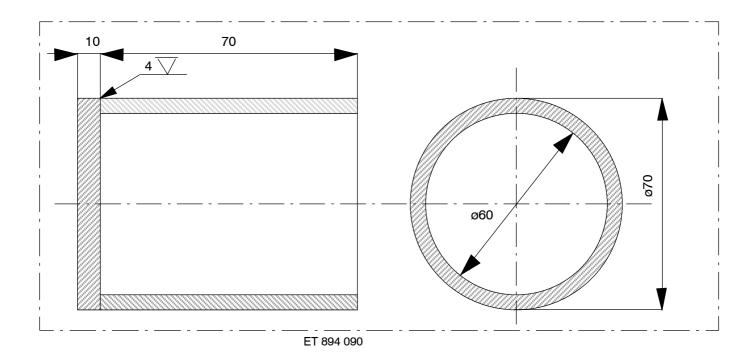


102. Locally prepared tools	8.17-1990	Model	Code	Page
	1. 1. 1995	6000-8750	102	5

61. Steering system

ET 894000

Tool for rotating steering cylinder head (Steering cylinder 505 – 905)

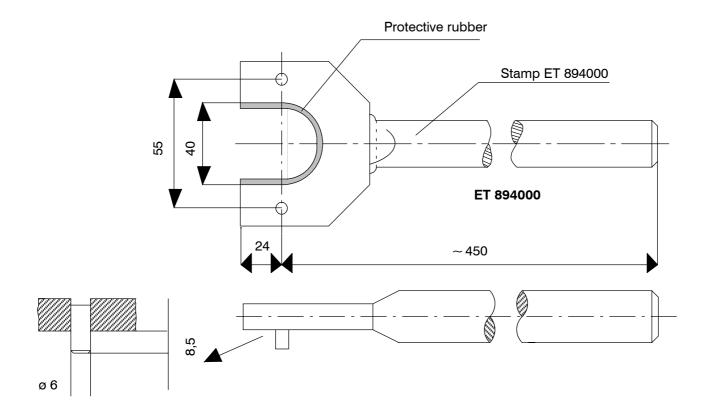

102. Locally prepared tools	8, 17, 1990	Model	Code	Page
	1. 1. 1995	6000-8750	102	6


102. Locally prepared tools	1, 1, 1995	Model	Code	Page
	1. 4. 1997	6000-8750	102	7

64. Powered front axle (Sige)

В

Part no Description

ET 894 010 Drift for fitting/removing drive shaft bushing (powered front axle 505 – 905)

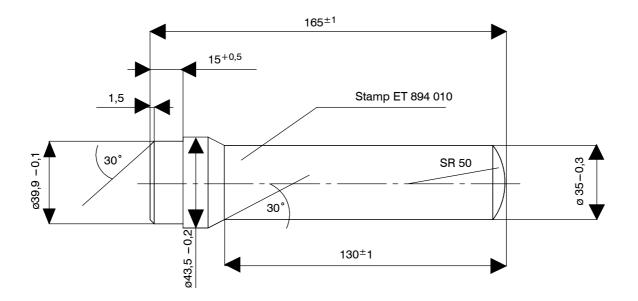

		Model	Code	Page
102. Locally prepared tools	8. 11. 1990	6000-8750	102	8

70. Frame and wheels

Α


ET 893480


Support plate for front frame (Frame and wheels 505-905)

В

ET 893470

Support roller for front frame (Frame and wheels 505-905)

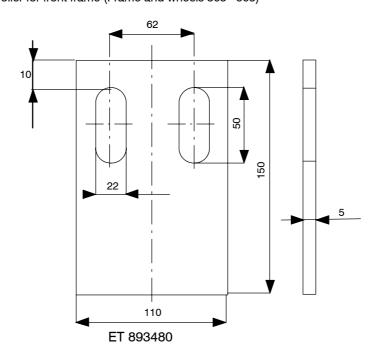


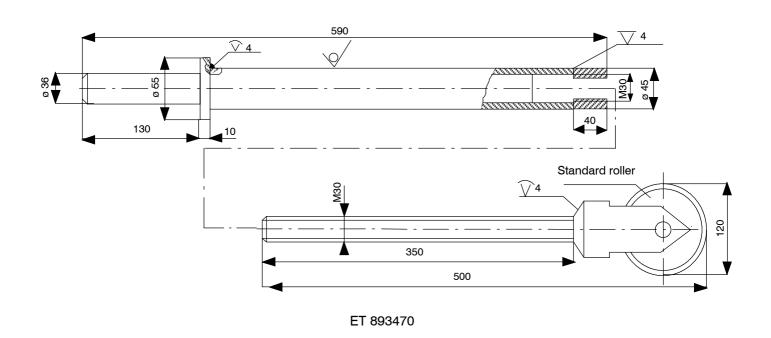



		Model	Code	Page
102. Locally prepared tools	8. 11. 1990	6000-8750	102	9


80. Cab and shields

ET 894 110 Lifting tool for cab

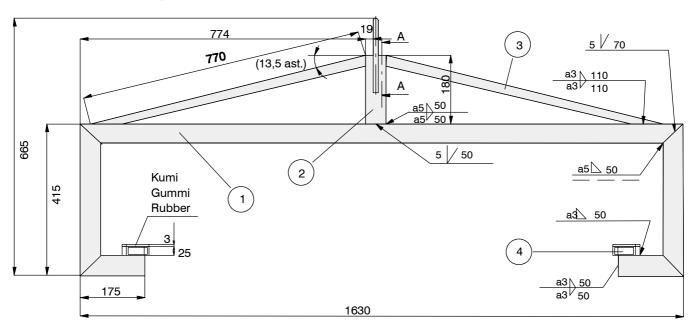

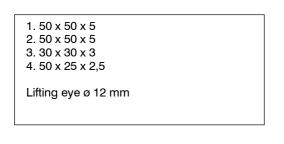

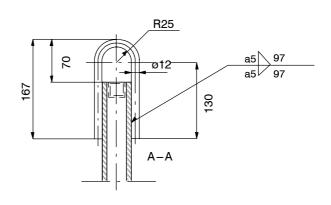

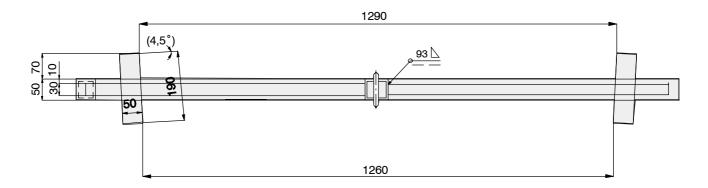


102. Locally prepared tools	8, 17, 1990	Model	Code	Page
	1. 1. 1995	6000-8750	102	10

91. Hydraulic power lift

Α

ET 893 530 Sleeve for fitting lifting arm shaft seal (Hydraulic lift 505–905)

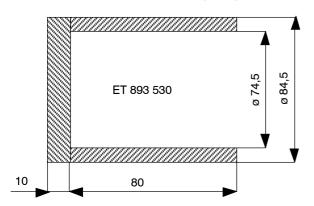

102. Locally prepared tools	8.17.1990	Model	Code	Page
	1. 1. 1995	6000-8750	102	11